


# Assembly Instructions

Always take care to accurately measure the correct distance from the ceiling to the top of the window, to find the suitable height for your poles. Ensure that you position the pole centrally above the window.

## Step 1:

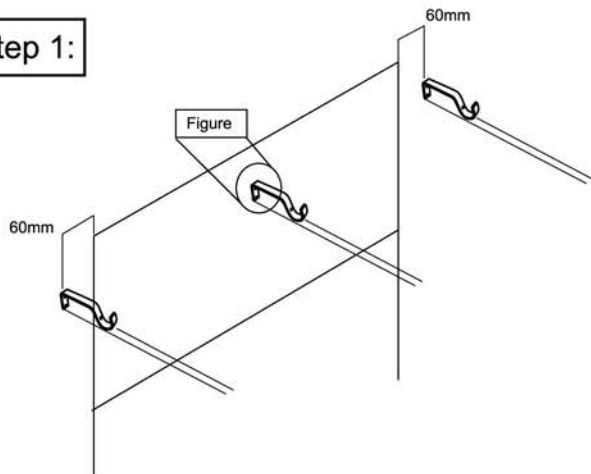


Using the 3 brackets (item C) as templates mark the position for drilling above the window. Ensure the bracket ends are positioned approximately 60mm outside the window opening and that the middle bracket is placed centrally between the two end brackets.

Before drilling beware of hidden cables and pipe work. Drill marked positions with a 5mm drill bit then insert the wall plug (item G). Fit the brackets with the screws provided (item F) through the vertical slots. These slots will allow a small amount of vertical adjustment.

Slide the 16mm dia pole into the 19mm dia pole (item B) at the end of the pole that has the plastic cap. Ensure that the plastic wrapping is removed before assembling. Slide on the curtain rings (item D) at the required intervals. Attach finials (item A) securely to both ends of the pole.

## Step 2:

Figure 1

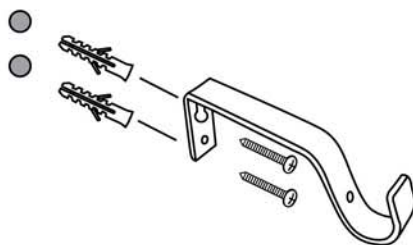


To avoid scratching the poles ensure that the fixing screws (item E) are removed from the brackets. Extend the pole as required and position pole in the brackets. Ensure that the rings are divided equally either side of the central bracket and that one ring is kept between the finial and bracket at either end of the pole.


Adjust pole to the required length ensuring that there is a 70mm gap between the finial and the bracket. Fix pole securely to the brackets using the fixing screws provided (item E).

**You are now ready to hang your curtains.**


## Step 3:

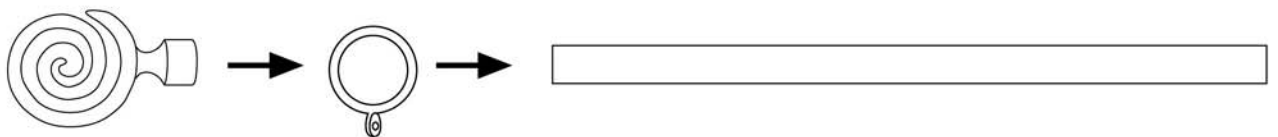

## Step 4:

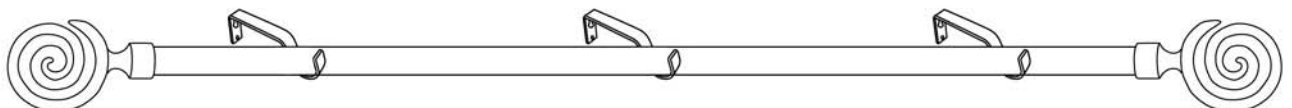

## Step 5:

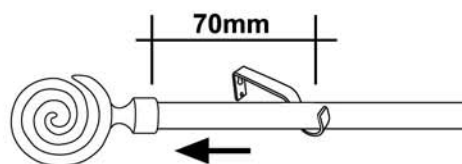

A.	B.	C.	D.	E.	F.	G.
16mm x 1 19mm x 1	16mm, 110cm x 1 19mm, 110cm x 1	3x	20x	3x	6x	6x

## CARE AND SAFETY

whilst every precaution is taken to eliminate sharp edges, this product needs handling with care during the assembly process. This product has been treated with a protective coating, do not use metal polish or abrasive cleaners. To clean, use a slightly damp cloth to remove any excessive dust/grime.

