

Malibu - 5+2 Drawer Chest

Assembly Instructions - Please keep for future reference


558/8228

539/6173

544/1341

541/5566

542/1907

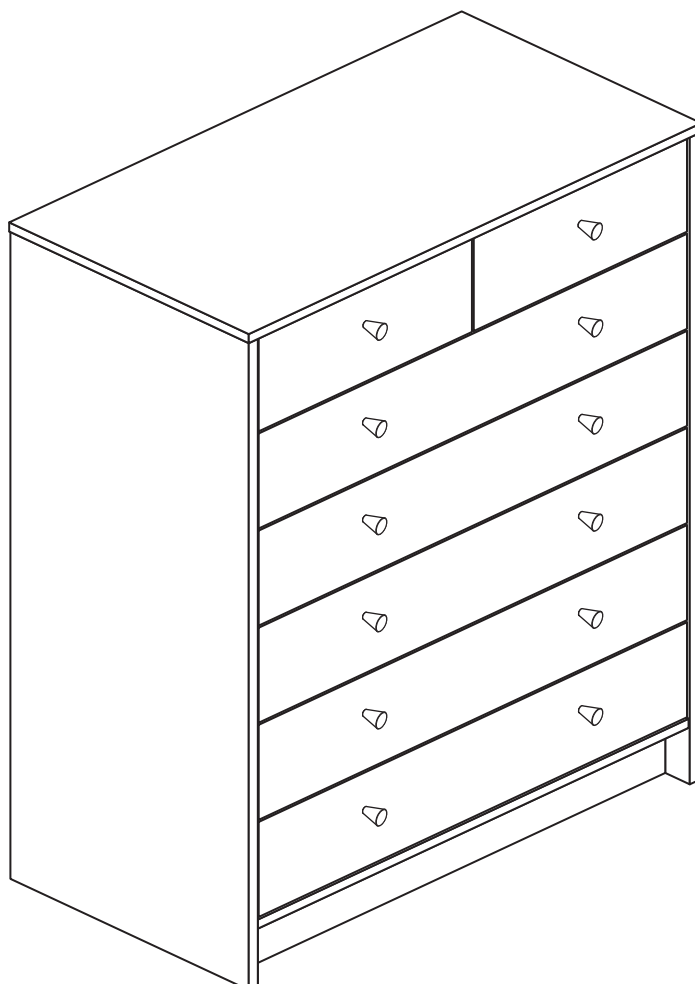

WARNING!

In order to prevent overturning, this product must be used with the wall attachment device provided

Dimensions

Width - 74.8cm

Depth - 39cm

Height - 108.6cm

More help is available throughout this booklet by scanning in the QR codes or typing in the links



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 38kgs. Please lift with care.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
-  We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- **Safety note:** To prevent possible overbalancing this unit **must be secured** to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

When applicable, remove any protective film from the panels before they are used

Tools required



Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection
(when using a hammer or drill)



Electric drill
(do not use for fitting screws)

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.


For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below


When applicable, remove any protective film before use

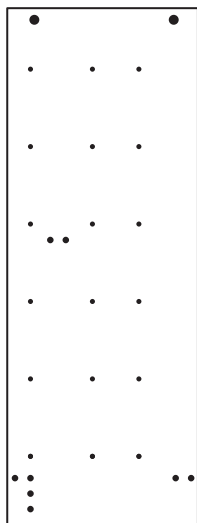


1 Left Side (DF6786)
(107.1 x 39.4cm)

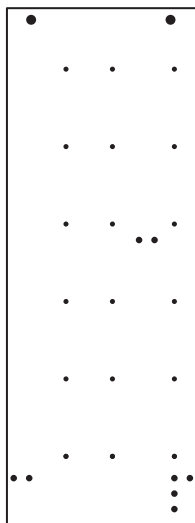

2 Right Side (DF6787)
(107.1 x 39.4cm)

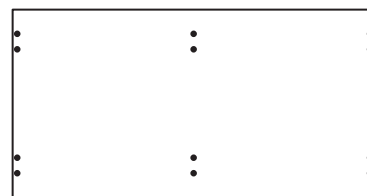

3 Top (DF6780)
(74.8 x 39.6cm)



4 Divider (DF6781)
(16 x 37.3cm)




5 Plinth (DF5856)
(71.4 x 9.2cm)




6 Cross Rail (DF5858)
(71.4 x 6cm)



7 Back Rail (DF5857)
(71.4 x 6cm) x 2



8 Small Left Drawer Front (DF6782)
(35.25 x 15.7cm)



9 Small Right Drawer Front (DF6783)
(35.25 x 15.7cm)



10 Large Drawer Front (DF5996)
(70.8 x 15.7cm) x 5




11 Left Drawer Side (WB350-130LH)
(35 x 13cm) x 7




12 Right Drawer Side (WB350-130RH)
(35 x 13cm) x 7



13 Small Drawer Back (W300-130)
(30 x 13cm) x 2




14 Large Drawer Back (W665-130)
(66.5 x 13cm) x 5



16 Large Drawer Base (T676-347)
(67.6 x 34.7cm) x 5



15 Small Drawer Base (T311-347)
(31.1 x 34.7cm) x 2

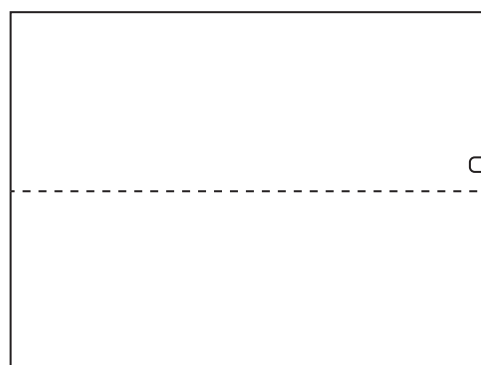

17 Back (DF6788)
(98.9 x 74cm)



Components - Fittings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020



Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.




Drawer Fittings Bag marked 'drw kit'

A  Quickfit dowel (F545) x 14	B  Large locking cam nut (F607) x 14	C  Knock-in Peg (F171GY) x 28	
D  19mm Screw (F461) x 12	E  15mm Screw (F284) x 10	F  13mm Screw (F63) x 28	G  Wedgefix (F639) x 4

Main Fittings Bag

A  Quickfit dowel (F545) x 12	B  Large locking cam nut (F607) x 12	F  13mm Screw (F63) x 14	
H  Wooden dowel (F22) x 16	I  9mm Screw (F73) x 42	J  Plastic Nail (F91) x 5	K  Nail (F51) x 24

Individual Fittings Bags

L  336mm long Drawer Brace (F420) x 5	M  Handle (F418) x 12
Na  350mm long CL Runner (F422) x 7 Nb  CR Runner (F424) x 7 Nc  DL Runner (F425) x 7 Nd  DR Runner (F426) x 7	O  Overbalance protector kit (F474) x 1

Assembly Instructions

Step 1

Prepare 5 pairs of drawer sides

a: Insert a large locking cam nut **B** into the left drawer sides **11** and the right drawer sides **12**.

Note: The arrow on the locking cam nut **must** point towards the hole in the end of the panel.

b: Push 1 of the quickfit dowels **A** as far as it will go into the 5 left drawer sides **11** and the 5 right drawer sides **12**.







Note: Only the plastic thread of the quickfit dowel sticks out from the panel.

Use the Drawer Fittings Bag marked 'drw kit' for Steps 1 - 14



Standard Drawer Box Assembly

<https://www.youtube.com/watch?v=HclfJdkm-Lg>

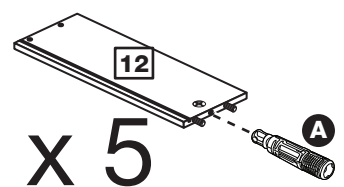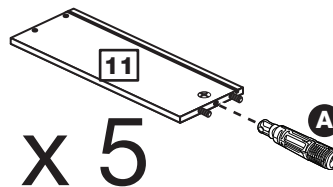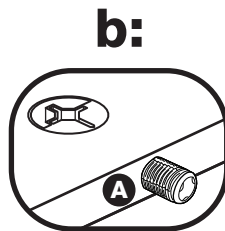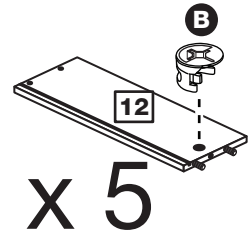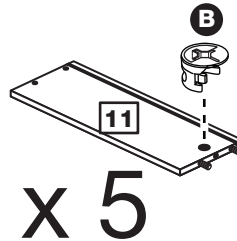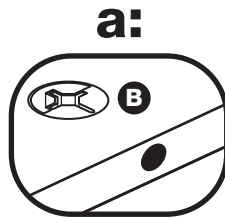



Step 2

Fit the drawer sides to the 5 large drawer fronts

Push the left drawer sides **11** and right drawer sides **12** down onto the back of the 5 large drawer fronts **10**.

Turn the large locking cam nuts **B** clockwise to the "2 o'clock" position as far as they will go to secure the panels.

Important: Make sure there is no gap between the fitted panels.

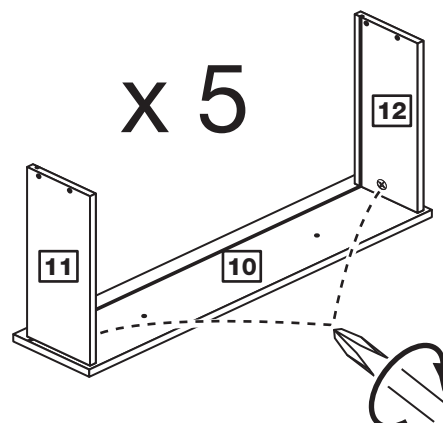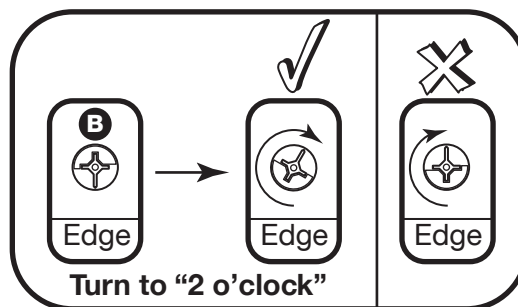

Assembly Instructions

Step 3


Fit the large drawer bases

Slide a large drawer base **16** down the grooves in the drawer sides **11** and **12** and down into the groove in the large drawer front **10**.



Standard Drawer Box Assembly

<https://www.youtube.com/watch?v=HclfJdkm-Lg>

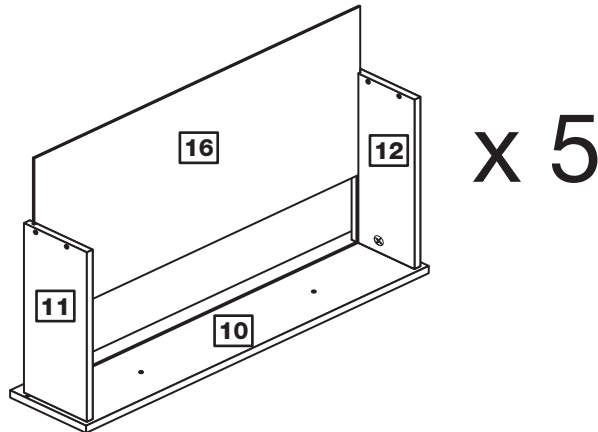


Step 4

Fit the large drawer backs

Fit a large drawer back **14** between the drawer sides **11** and **12**.

Make sure that the large drawer base **16** fits into the groove in the large drawer back **14**.


Hold the large drawer back **14** in position and tap the knock-in pegs **C** through the holes in the drawer sides **11** and **12**.

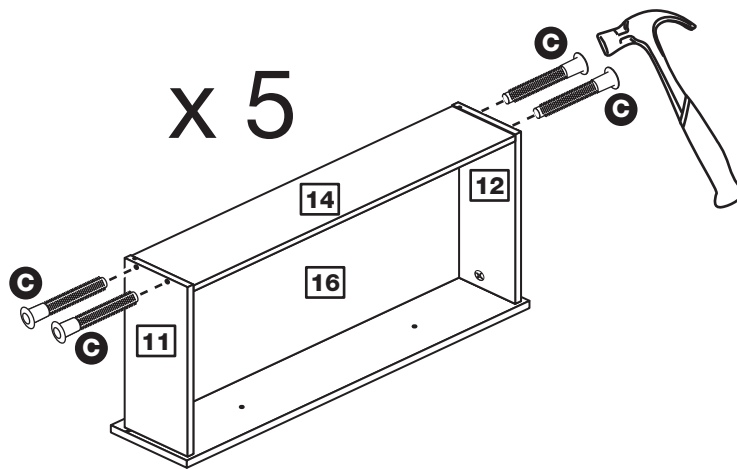

Step 5

Fit the handles

Attach 2 handles **M** to each large drawer front **10** using screws **D**.

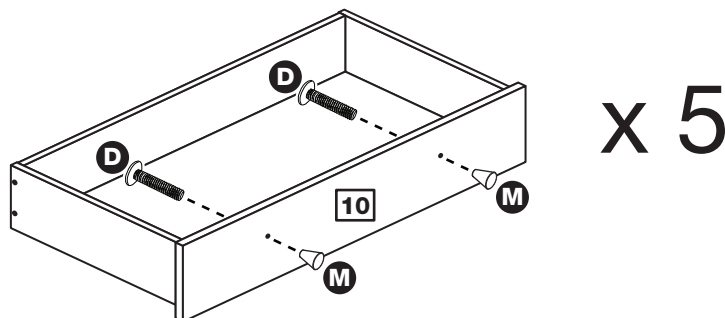


Step 6

Fit the drawer braces

Turn the 4 drawer assemblies over and hook a drawer brace **L** onto the bottom edge of the drawer back **14**.

Fix it to the drawer front **10** and drawer back **14** using 2 screws **E**.

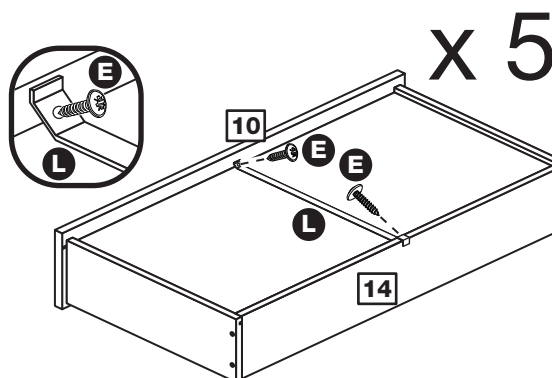

Important: Make sure that the drawer assembly is square before fitting the drawer brace.

Assembly Instructions

Step 7


Prepare 2 pairs of drawer sides

a: Insert a large locking cam nut **B** into the left drawer sides **11** and the right drawer sides **12**.

Note: The arrow on the locking cam nut **must** point towards the hole in the end of the panel.

b: Push 1 of the quickfit dowels **A** as far as it will go into the left drawer side **11** and the right drawer side **12**.

Note: Only the plastic thread of the quickfit dowel sticks out from the panel.

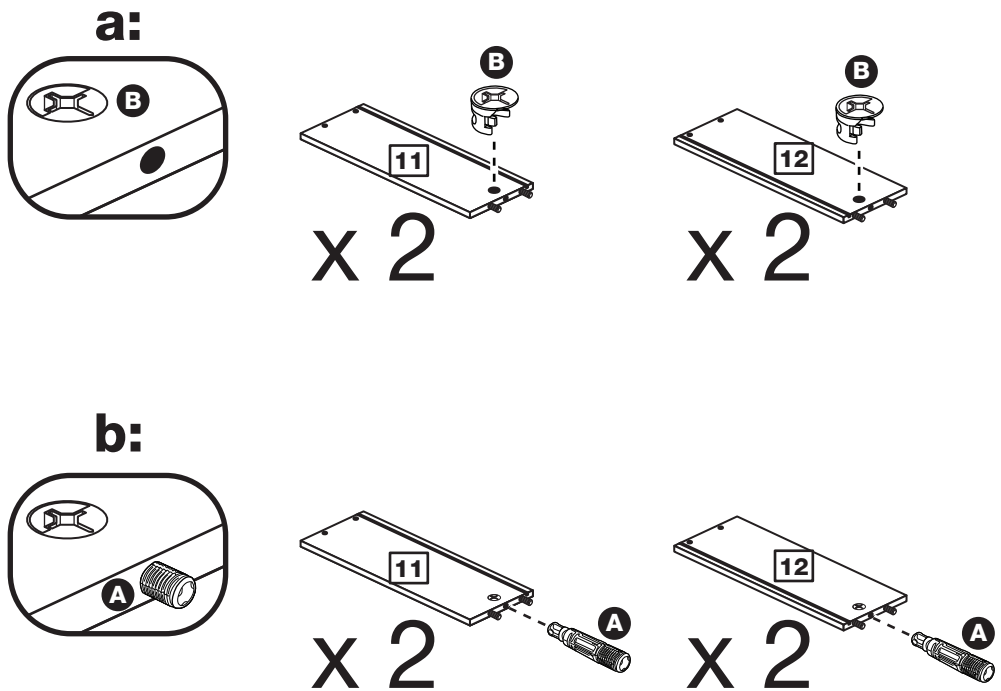


Step 8

Fit the drawer sides to the small drawer fronts

Push the left drawer side **11** and right drawer side **12** down onto the back of the small drawer fronts **8** and **9**.

Turn the large locking cam nuts **B** clockwise to the "2 o'clock" position **as far as they will go** to secure the panels.

Important: Make sure there is no gap between the fitted panels.

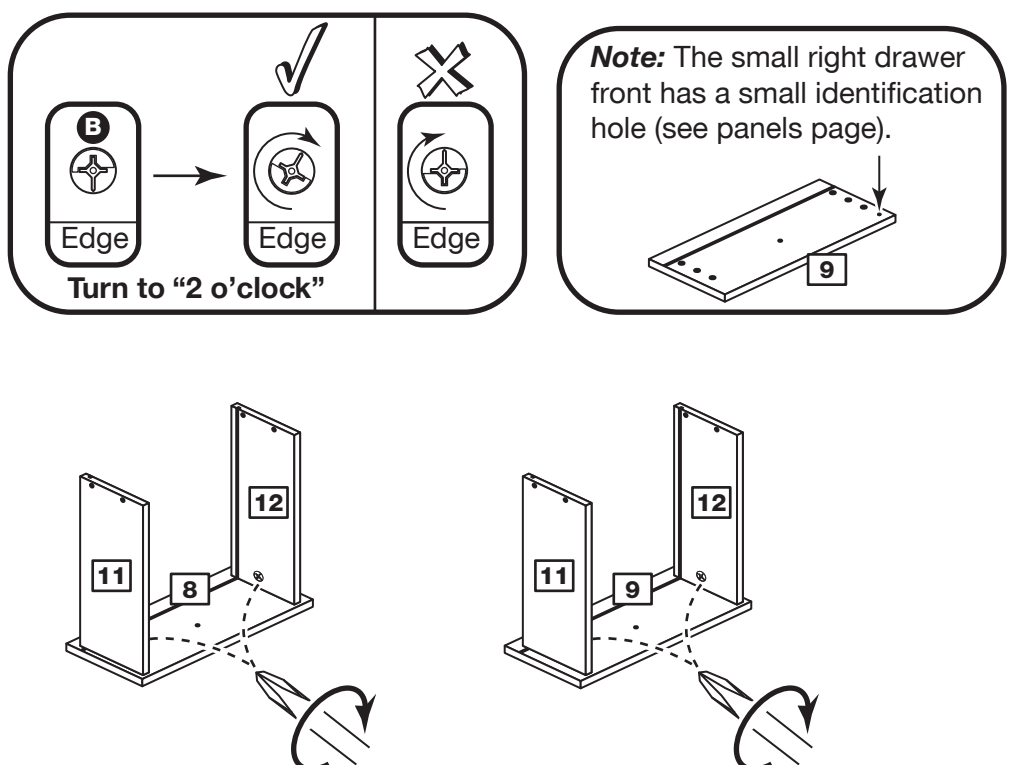


Assembly Instructions

Step 9

Fit the small drawer bases

Slide a small drawer base **15** down the grooves in the drawer sides **11** and **12** and down into the groove in the small drawer front **8** and **9**.

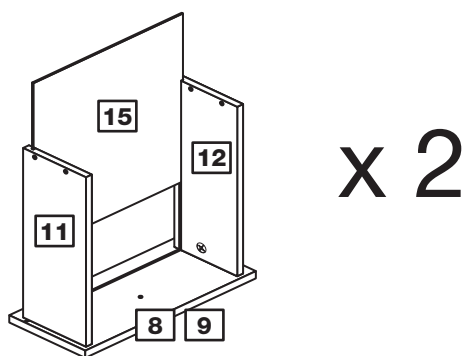


Step 10

Fit the small drawer backs

Fit a small drawer back **13** between the drawer sides **11** and **12**.

Make sure that the small drawer base **15** fits into the groove in the small drawer back **13**.


Hold the small drawer back **13** in position and tap the knock-in pegs **C** through the holes in the drawer sides **11** and **12**.

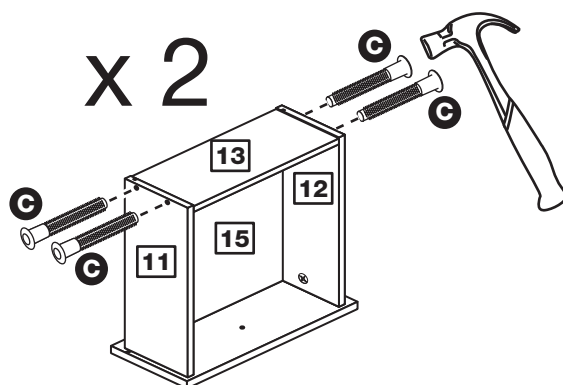

Step 11

Fit the handles


Attach a handle **M** to each small drawer front **8** and **9** using screws **D**.

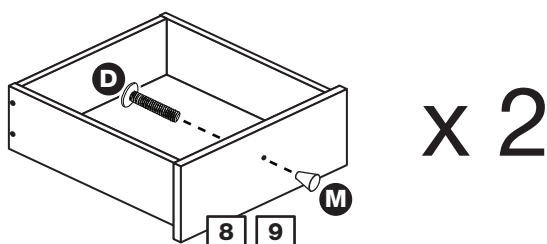


Step 12

Fit the wedgfixes

Turn the drawer assemblies over and slide 2 wedgfixes **G** into the front and back grooves, as shown, and tighten up the screws.

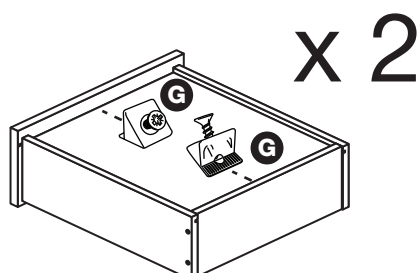

Important: Make sure that the drawer assembly is square before fitting the wedgfixes.

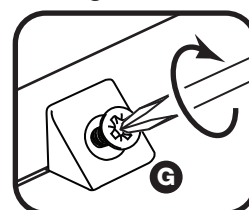

Assembly Instructions

Step 13

Fit runners to the 5 large drawers

Fit the DL runner **(Nc)** to the bottom edge of the left drawer side **(11)**, as shown, making sure that it is pushed up against the back of the drawer front. Use a bradawl to mark the fixing positions, then secure with 2 screws **(F)**.


Fit the DR runner **(Nd)** to the bottom edge of the right drawer side **(12)** using the same method.



Fixing Bottom Mounted Runners

<https://www.youtube.com/watch?v=Z6lGMMy19h7Q>

Runners must be pushed up against the drawer front

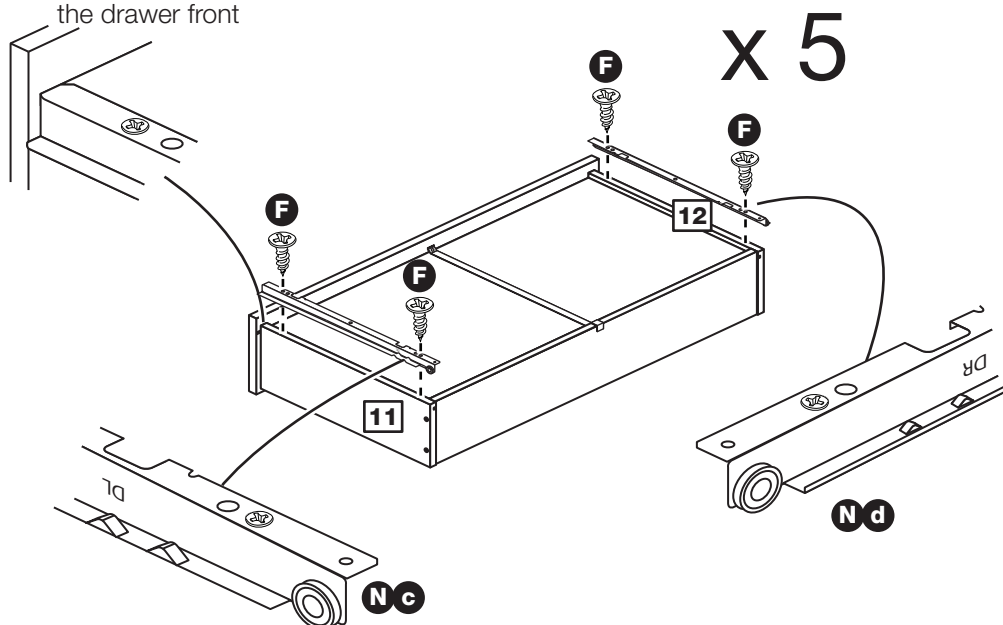


Step 14

Fit runners to the 2 small drawers

Fit the DL runner **(Nc)** to the bottom edge of the left drawer side **(11)**, as shown, making sure that it is pushed up against the back of the drawer front. Use a bradawl to mark the fixing positions, then secure with 2 screws **(F)**.

Fit the DR runner **(Nd)** to the bottom edge of the right drawer side **(12)** using the same method.

Runners must be pushed up against the drawer front

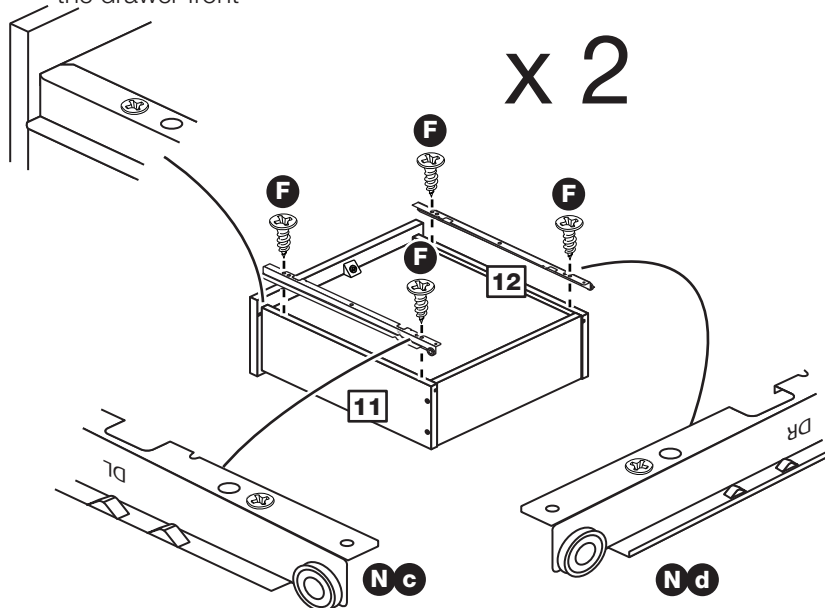

Assembly Instructions

Step 15

Prepare the left side

a: Fit 6 CL runners **Na** to the left side **1**.

The 1st screw **I** uses the 1st hole in from the front of the runner.

The 2nd and 3rd screws **I** use the holes that line up with the other panel holes.

b: Fit a screw **F** into the hole at the top of the runner **Na**.

c: Insert 2 large locking cam nuts **B** into the left side **1**.

Push 2 of the quickfit dowels **A** as far as they will go into the left side **1**.

Tap 2 wooden dowels **H** into the left side **1**.




Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Use the Main Fittings Bag for Steps 15 - end



Fixing Bottom Mounted Runners

<https://www.youtube.com/watch?v=Z6lGMy19h7Q>

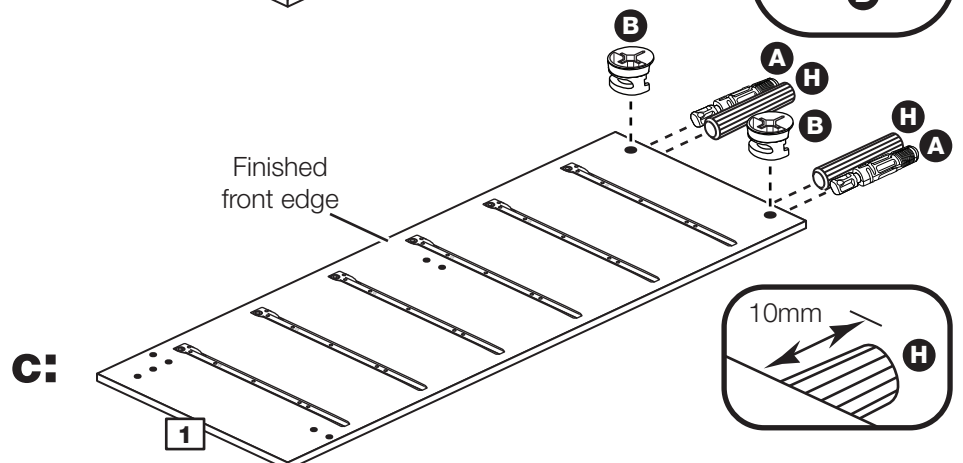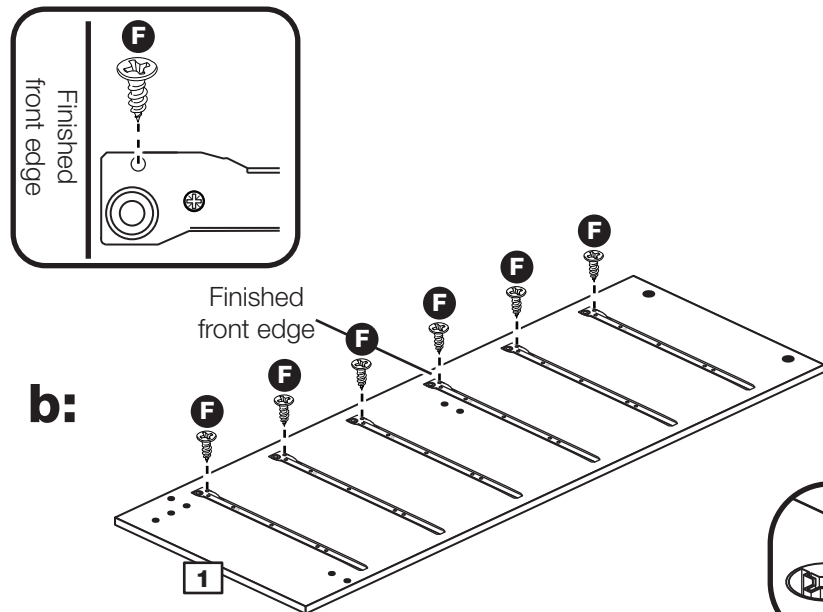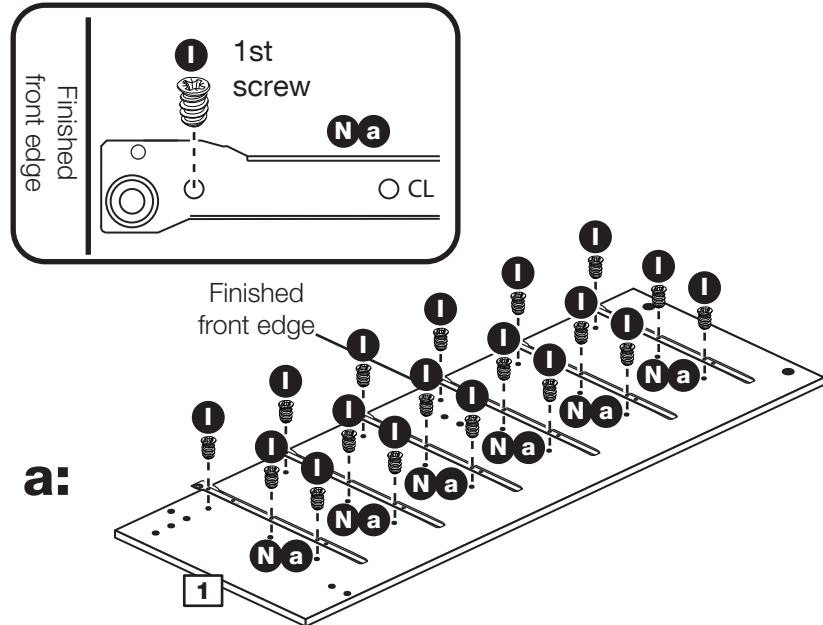

Assembly Instructions

Step 16

Prepare the right side

a: Fit 6 CR runners **Nb** to the right side **2**.

The 1st screw **I** uses the 1st hole in from the front of the runner.






The 2nd and 3rd screws **I** use the holes that line up with the other panel holes.

b: Fit a screw **F** into the hole at the top of the runner **Nb**.

c: Insert 2 large locking cam nuts **B** into the right side **2**.

Push 2 of the quickfit dowels **A** as far as they will go into the right side **2**.

Tap 2 wooden dowels **H** into the right side **2**.

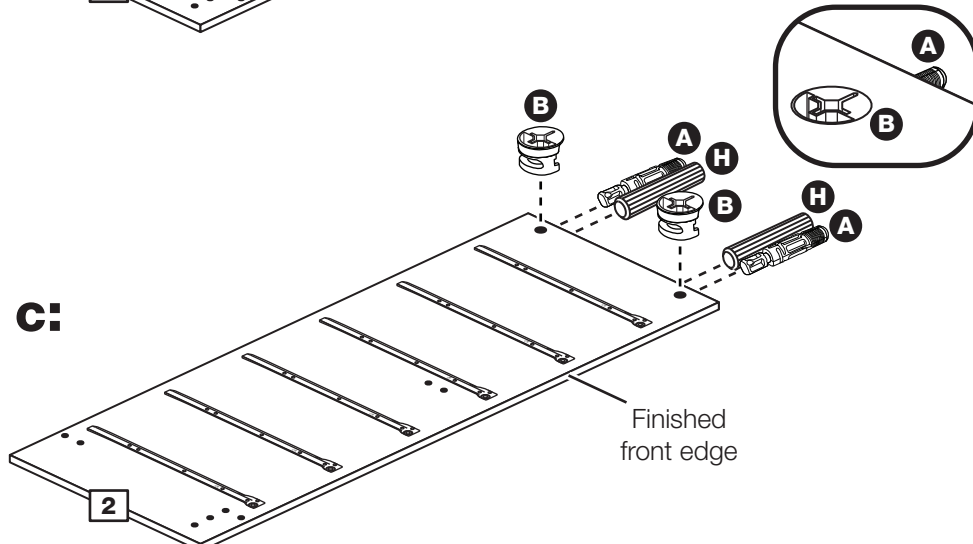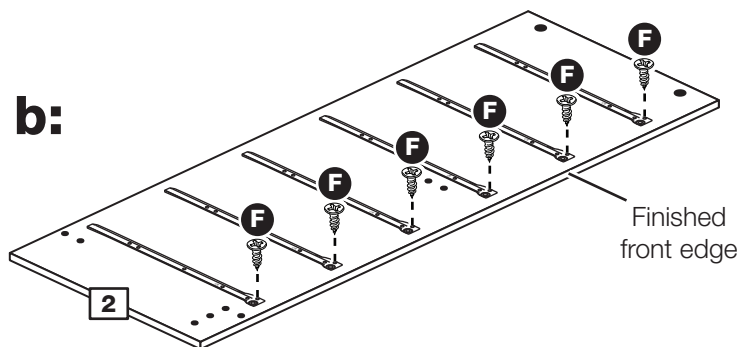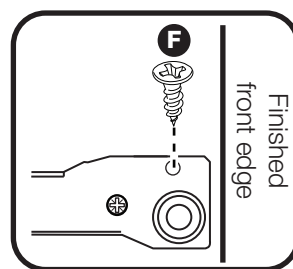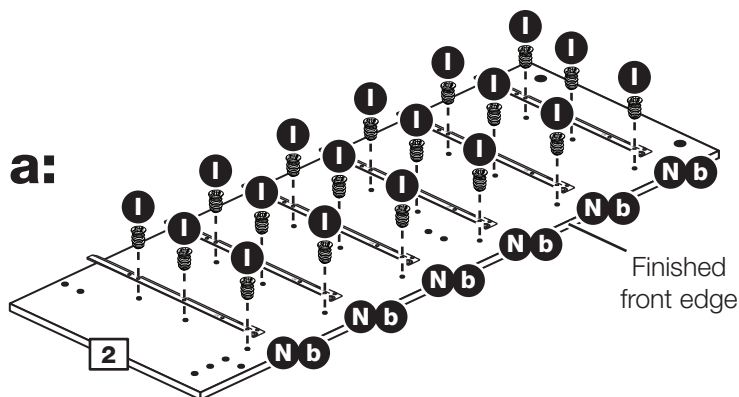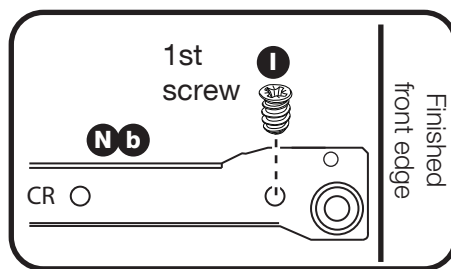


Assembly Instructions

Step 17

Prepare the cross rail


Tap 4 wooden dowels **H** into the cross rail **6**.

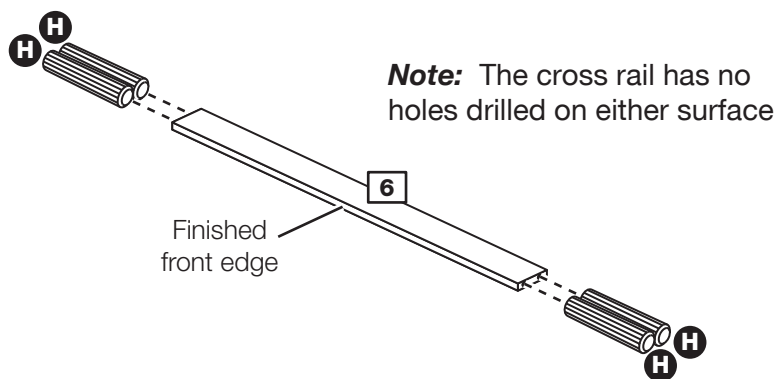

Step 18

Fit the cross rail onto the left side

Push the cross rail **6** down onto the left side **1**.

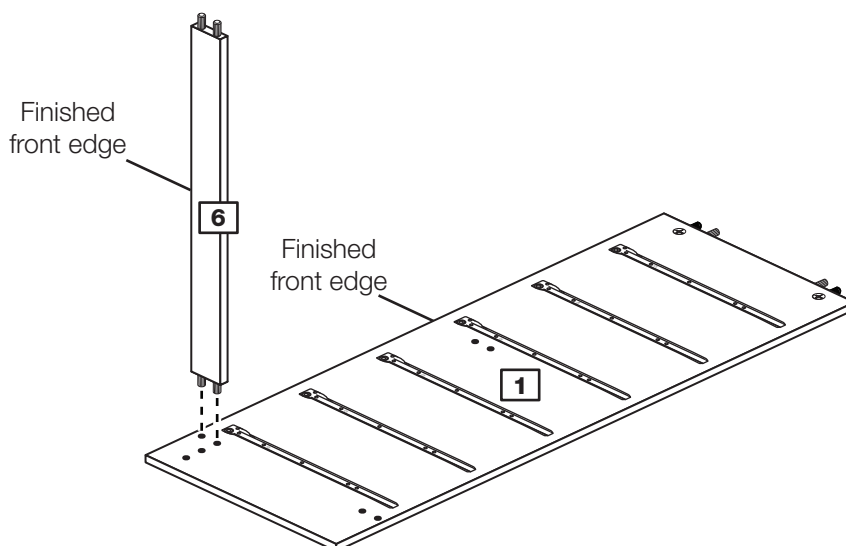


Step 19

Prepare the plinth

Insert 2 large locking cam nuts **B** into the plinth **5**.

Push 2 of the quickfit dowels **A** as far as they will go into the plinth **5**.

Tap 2 wooden dowels **H** into the plinth **5**.

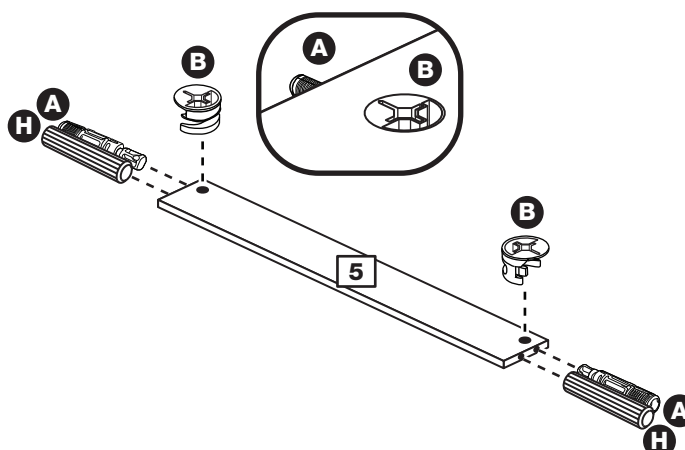

Assembly Instructions

Step 20

Fit the plinth

Push the plinth **5** down onto the left side **1**.



Turn the large locking cam nut **B** clockwise to the "2 o'clock" position **as far as it will go** to secure the panels.

Important: Make sure there is no gap between the fitted panels.



Carcase Assembly

<https://www.youtube.com/watch?v=9C7tg5xnbE>

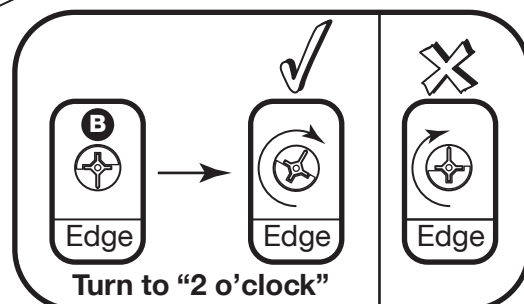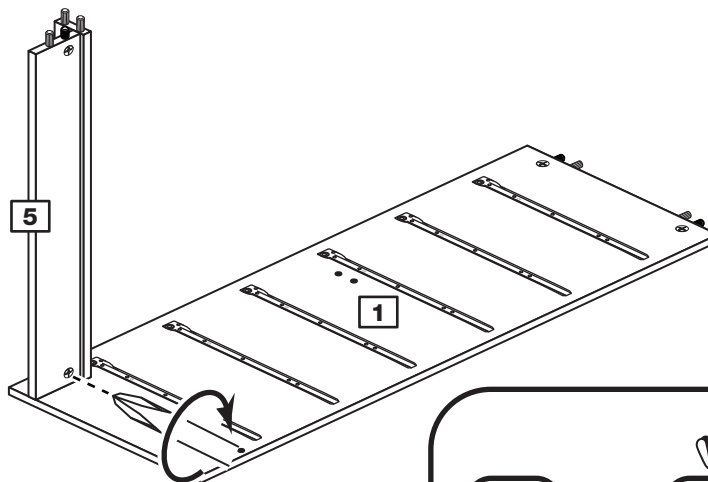



Step 21

Prepare the 2 back rails

Insert 2 large locking cam nuts **B** into each of the back rails **7**.

Push 2 of the quickfit dowels **A** as far as they will go into each of the back rails **7**.

Tap 2 wooden dowels **H** into each of the back rails **7**.

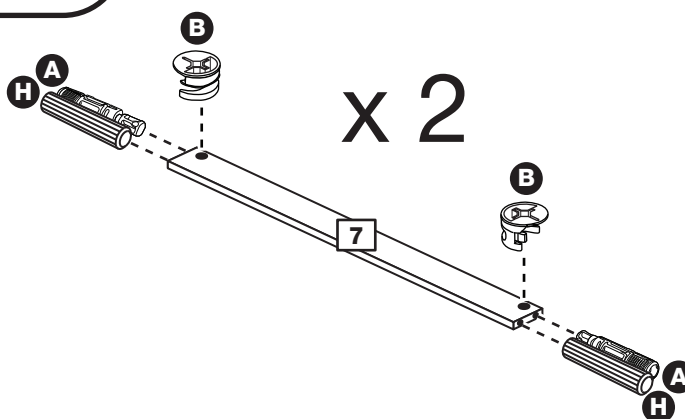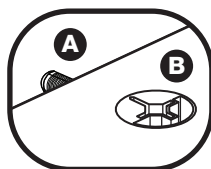


Step 22

Fit 1 of the back rails

Push a back rail **7** down onto the left side **1**.

Turn the large locking cam nut **B** clockwise to the "2 o'clock" position **as far as it will go** to secure the panels.

Important: Make sure there is no gap between the fitted panels.

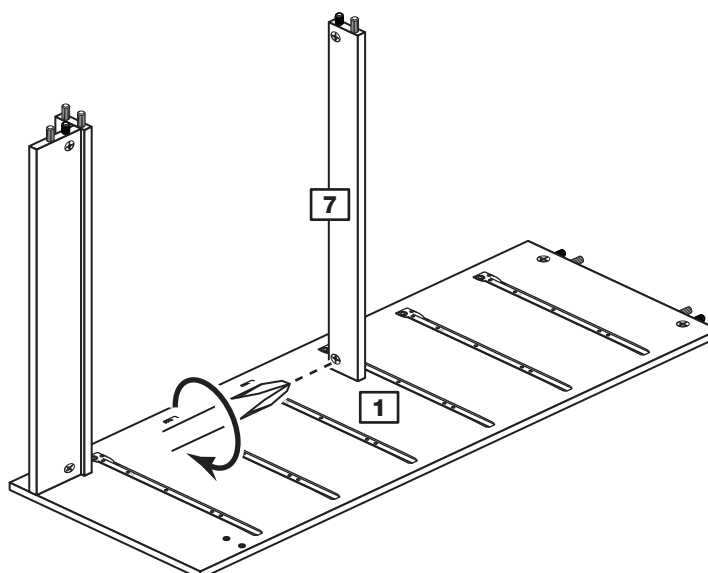

Assembly Instructions


Step 23

Fit the other back rail

Push the back rail **7** down onto the left side **1**.

Turn the large locking cam nut **B** clockwise to the “2 o’clock” position **as far as it will go** to secure the panels.

Important: Make sure there is no gap between the fitted panels.

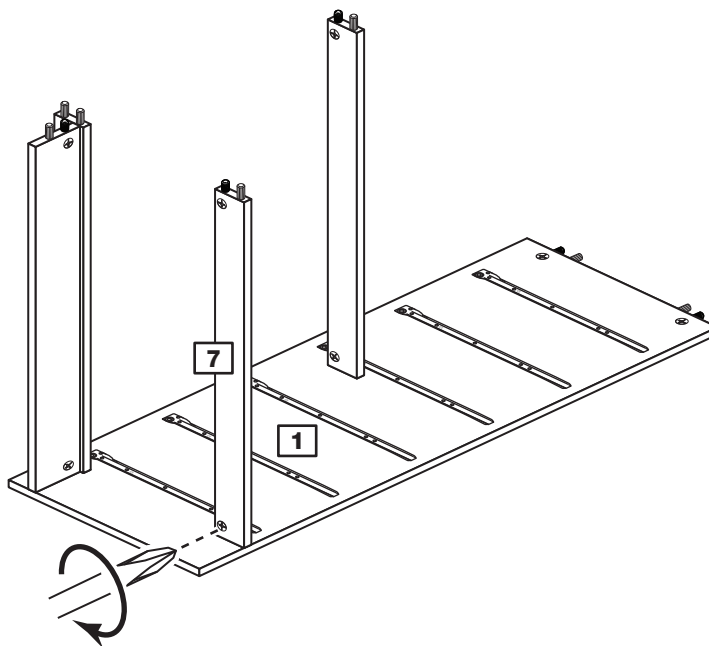

Step 24


Fit the right side

Push the right side **2** down onto the assembly.

Turn the 3 large locking cam nuts **B** clockwise to the “2 o’clock” position **as far as they will go** to secure the panels.

Important: Make sure there is no gap between the fitted panels.

Carefully stand the unit up for the next step.

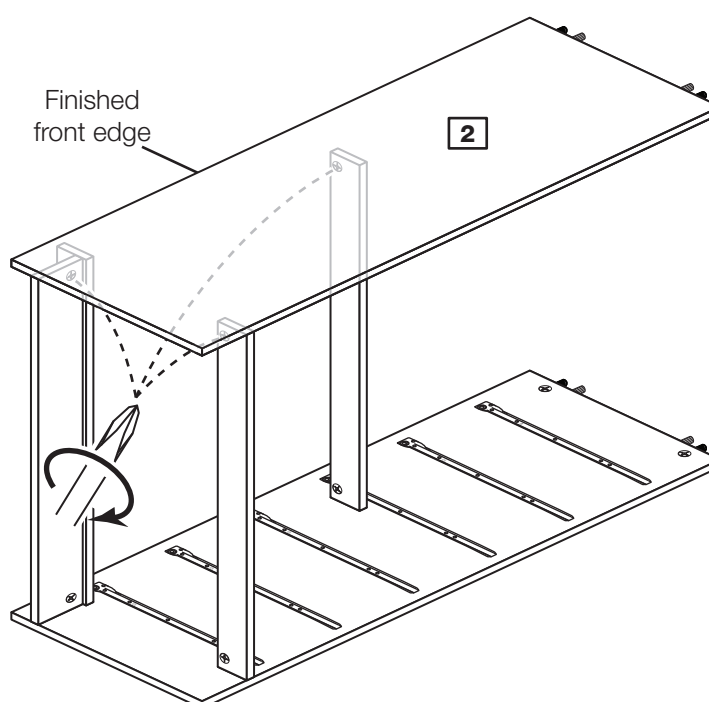

Warning: The unit is heavy. Lift with care.

Assembly Instructions

Step 25

Prepare the divider

a: Fit a runner **N a** to the divider **4**.

The 1st screw **I** uses the 1st hole in from the front of the runner.

The 2nd and 3rd screws **I** use the holes that line up with the other panel holes.

b: Fit a screw **F** into the 2nd hole in at the top of the runner **N a**.

c: Insert 2 large locking cam nuts **B** into the divider **4**.

Push 2 of the quickfit dowels **A** as far as they will go into the divider **4**.

Tap 2 wooden dowels **H** into the divider **4**.






Turn the divider over

d: Fit a runner **N b** to the divider **4**.





The 1st screw **I** uses the 1st hole in from the front of the runner.

The 2nd and 3rd screws **I** use the holes that line up with the other panel holes.

e: Fit a screw **F** into the 2nd hole in at the top of the runner **N b**.

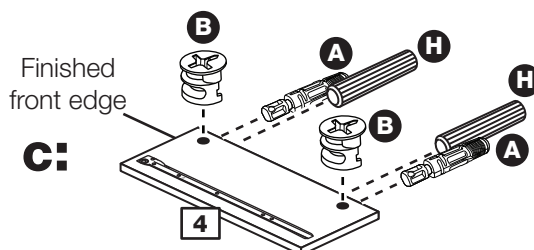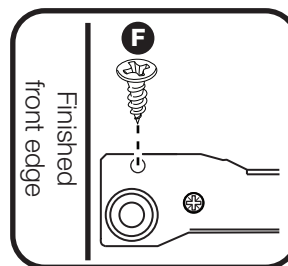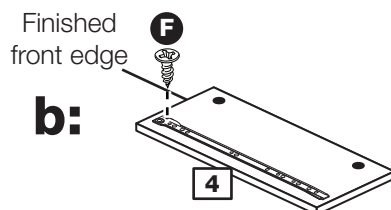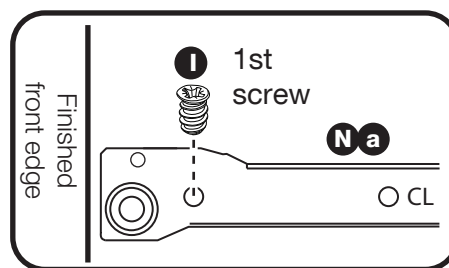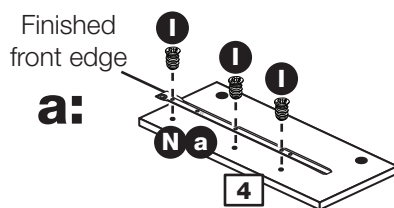

Turn the divider over

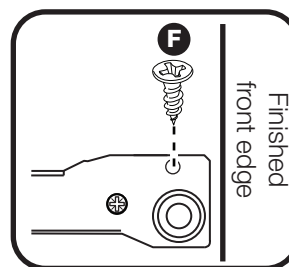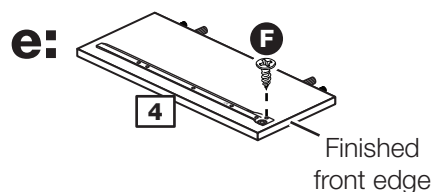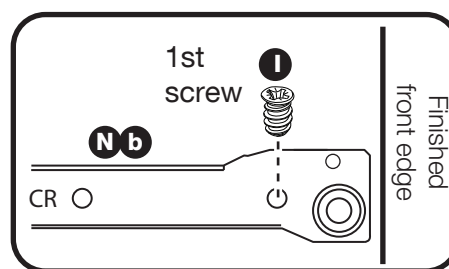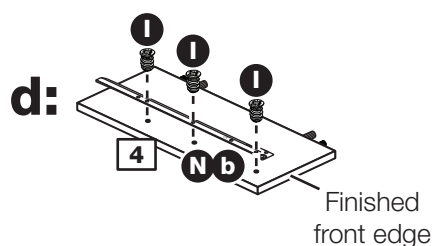

Assembly Instructions


Step 26

Fit the divider to the top

Push the divider **4** down onto the top **3**.

Turn the 2 large locking cam nuts **B** clockwise to the “2 o’clock” position **as far as they will go** to secure the panels.

Important: Make sure there is no gap between the fitted panels.

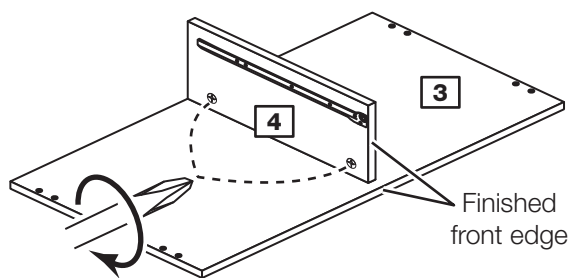

Step 27


Fit the top

Push the top **3** down onto the assembly.

Turn the 4 large locking cam nuts **B** clockwise to the “2 o’clock” position **as far as they will go** to secure the panels.

Important: Make sure there is no gap between the fitted panels.

Carefully lay the unit down onto its front edges for the next step.

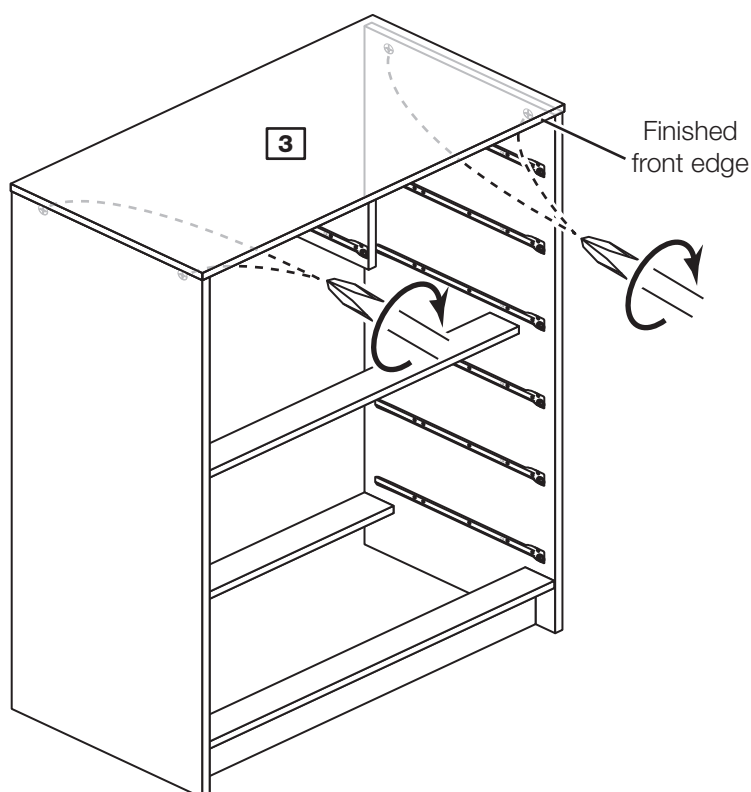

Warning: The unit is heavy. Lift with care.

Assembly Instructions

Step 28

Fit the back

a: Square up the unit by making sure that measurement **x to x** equals **y to y**.

b: Place the back **17** onto the unit.

Nail **K** around the outside edges of the back **17**.


Note: Nails should be spaced out evenly.



Squaring up a Chest and fitting the Back Panel

www.youtube.com/watch?v=Feal6541z7o

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

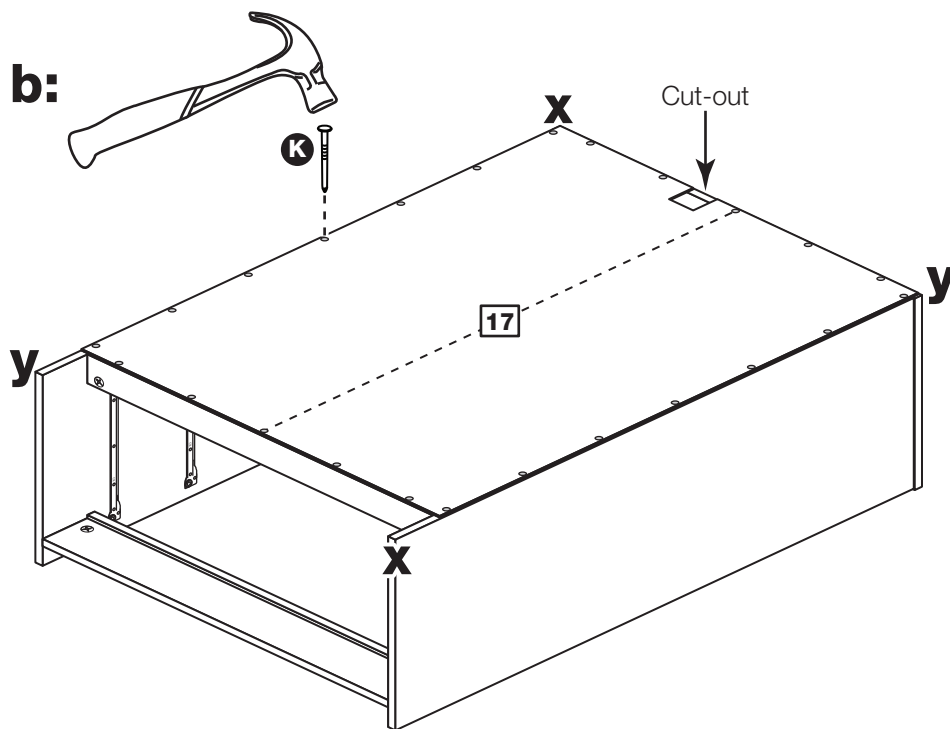

Step 29


Fit the 5 plastic nails

Tap 2 plastic nails **J** into the bottom edge of each of the sides **1** and **2** and 1 plastic nail into plinth **5**.

Carefully stand the unit up for the next step.



Warning: The unit is heavy. Lift with care.

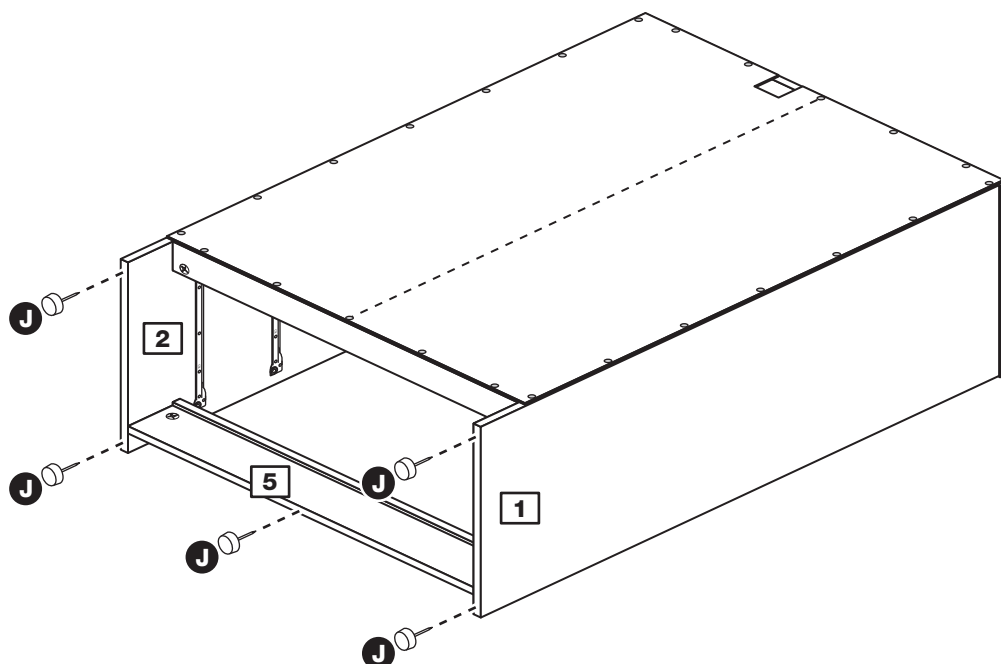

Assembly Instructions

Step 30

Fit the overbalance protector kit

a: Before fitting the overbalance protector kit, use a spirit level to check the top of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level.

To prevent possible overbalancing this unit **must be secured** to a suitable wall by fitting of the overbalance protector kit  to the unit, or an alternative fixing method of your choice.



Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.


WARNING!

In order to prevent overturning this product must be used with the wall attachment device provided

a:

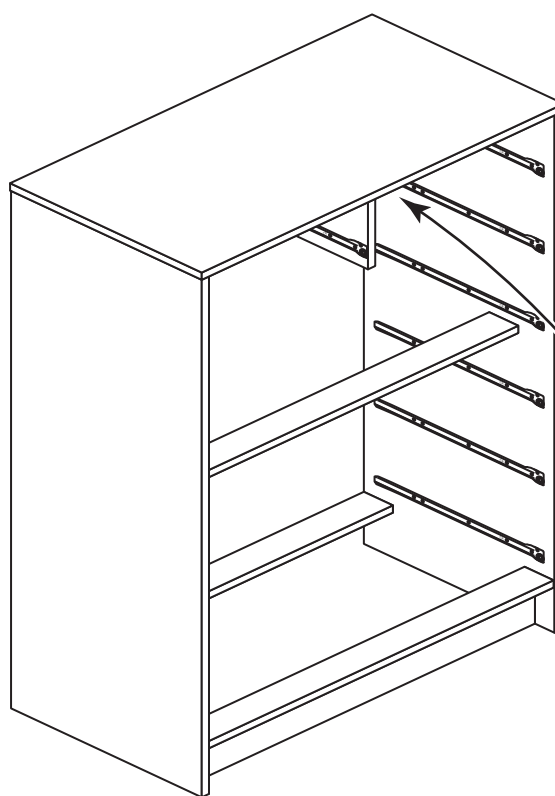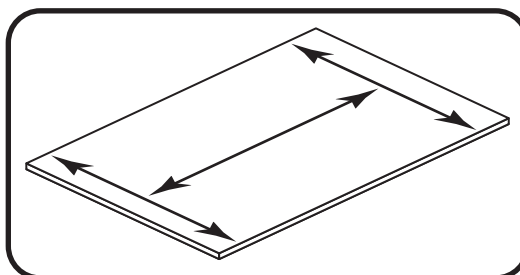

b:

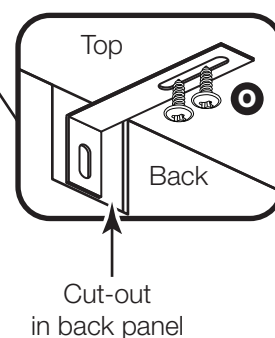

Assembly Instructions

Step 31

Fit the drawers



Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

Assembly is complete



Fixing Bottom Mounted Runners

<https://www.youtube.com/watch?v=Z6lGMy19h7Q>

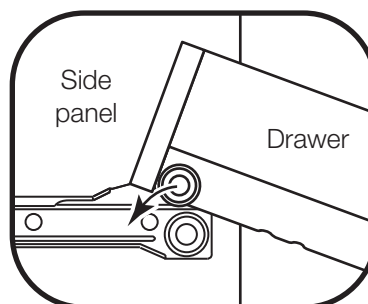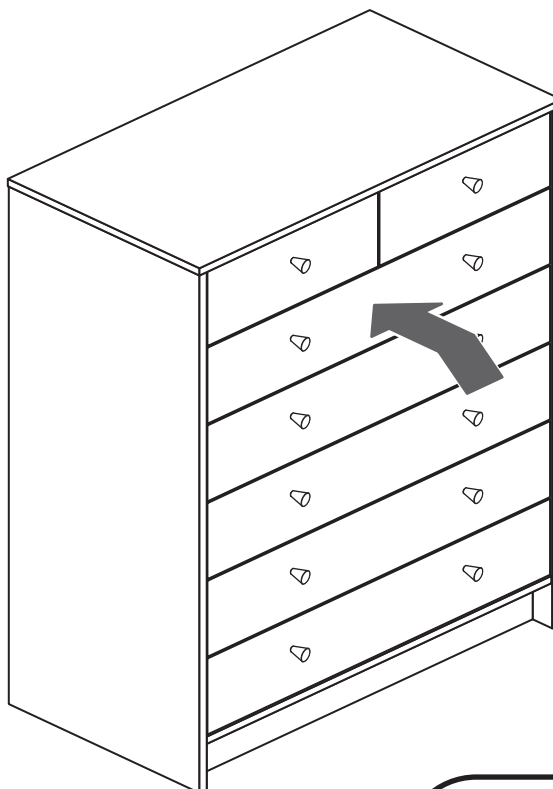

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

