GABE BLACK 3FT

Assembly Instructions – Please keep for future reference | **631/8765**

THE COLLECTION BY ARGOS



Dimensions(3')

Width - 201cm
Depth - 97,5cm
Height - 120,5cm

Important – Please read these instructions fully before starting assembly

If you need have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800

Issue 1 - 11/2016

Insert Additional Pages If Required.

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.
- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Dispose of all packaging carefully and responsibly.
- Place the product on flat and steady surface during use.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Keep these instructions for further use.
- To ensure an easier assembly we strongly advise that al fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

Components - Panels

If you have damaged or missing components,call the Customer Helpline: Argos = 0345 6400800

Please check you have all the panels listed below

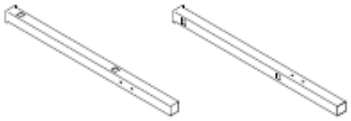

1 Headboard Post Left (120.7 x 8cm)

2 Headboard Post Right (120.7 x 8cm)



3 Footboard Post Left (74.3 x 8cm)



4 Footboard Post Right (74.3 x 8cm)




5 Side Rail Part 1 x 2 (99.6 x 5cm)




6 Side Rail Part 2 x 2 (99.6 x 5cm)



7 Brace 01 (93.6 x 2.5cm)

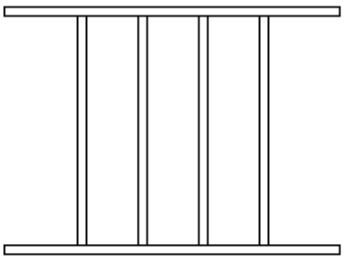

10 Headboard Guard Rail (97.7 x 72cm)

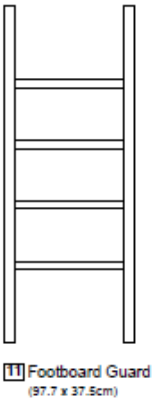

11 Footboard Guard Rail (97.7 x 37.5cm)

12 Slats x 16 (91.4 x 1.6cm)



13 Center Legs x 2 (32 x 6.5cm)



14 Plastic Plug x 32


3

Insert Additional Pages If Required.

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

A  40mm Bolt x 12	B  25mm Bolt x 8	C  17mm Bolt x 8
D  Metal washer x 8	E  Plastic washer x 8	F  Spring washer x 8
H  Allen Key x 1		

Tools required

Ruler/tape measure

Ruler - User this ruler to help correctly identity the screws




4

Insert Additional Pages If Required.

Assembly Instructions


Step 1

Secure the headboard post left [1] and headboard post right [2] to the headboard guard rail [10] using bolts Ⓐ.

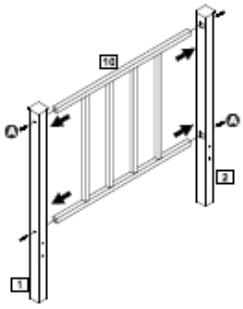

Step 2

Secure the footboard post left [3] and footboard post right [4] to the footboard guard rail [11] using bolts Ⓐ.

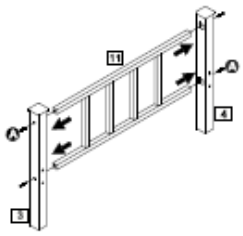


5

Insert Additional Pages If Required.

Assembly Instructions


Step 3

Secure the side rail part 2 [6] to the side rail part 1 [5] using bolts G.

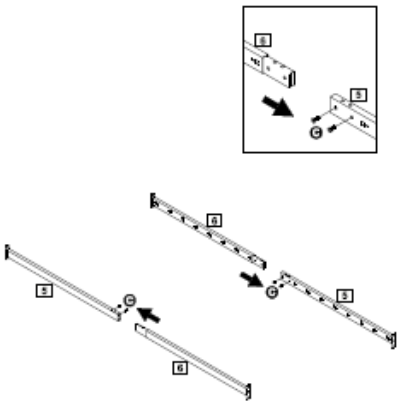

Step 4

Secure the brace 01 [7] to the side rail part 1 [5] using bolts A.

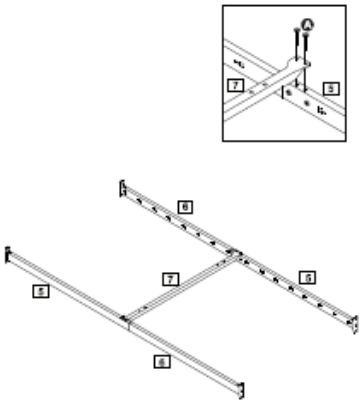


6

Insert Additional Pages If Required.

Assembly Instructions


Step 5

Secure the center legs [13] to the brace 01 [7] using bolts G.

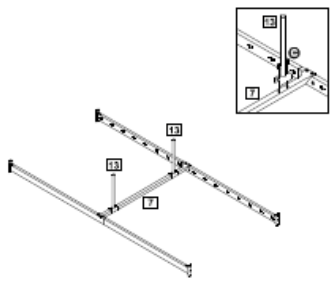

Step 6

Secure the side rail 02 [6] and side rail 01 [5] to the headboard post left [1], headboard post right [2], footboard post left [3] and footboard right [4] using bolts C, F, D, G.

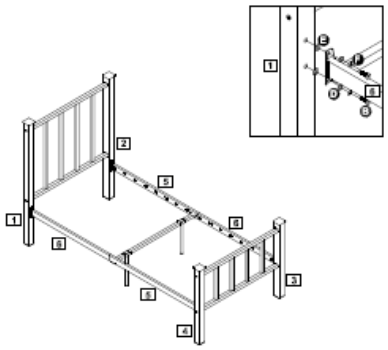

7

HOMEBASE Argos

Vendor Name:	0
Product Name:	0
Code:	0
Date:	00/01/1900

Instruction Manual


Assembly Instructions


Step 7

a: Secure the slats [12] to the side rail part 2 [6] and side rail part 1 [5].

b: Secure the plastic plug [14] to the side rail part 02 [6] and side rail part 01 [5].

Assembly is complete.

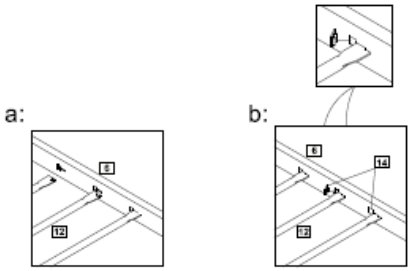

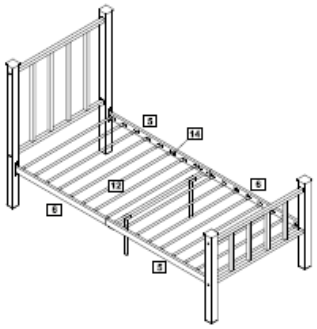

8