
1 DRAWER BEDSIDE CHEST

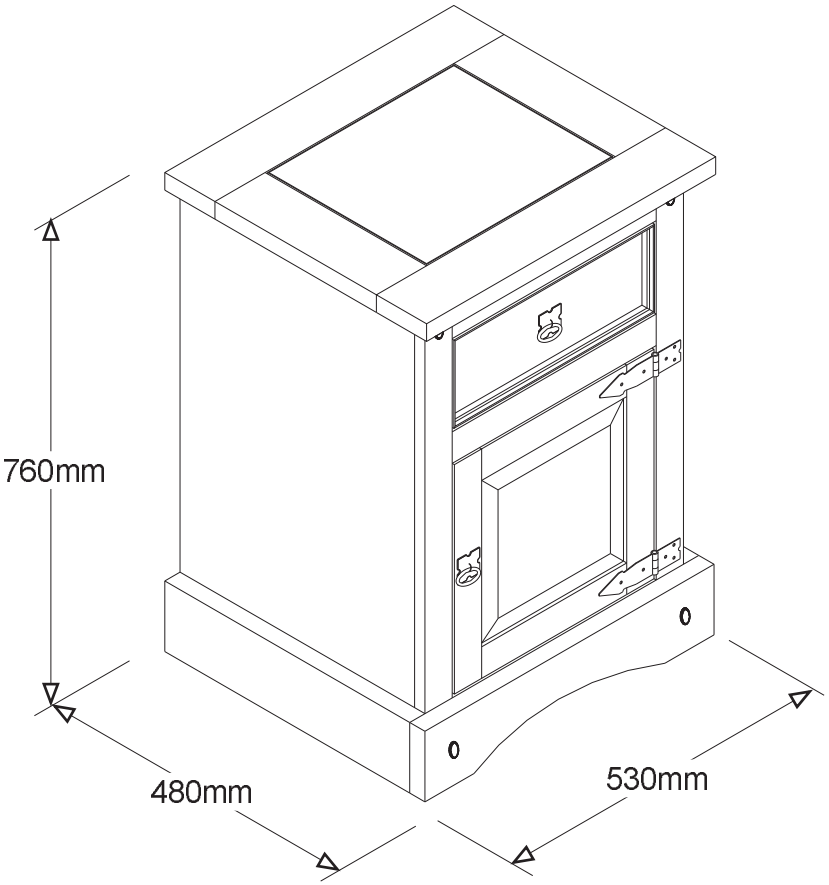



Before you start here in some helpful advise

Assembly time: 30 minutes

Please spend a short time reading through this leaflet and follow the step-by-step assembly instructions provided.

Customer Advisory Information


- This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.
- The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture. On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.
- This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly
- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age
- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product

Assembly Advice









Before commencing assembly, we recommend that you familiarise yourself with the component parts and the instructions. We suggest that you lay out the components and check these against the parts list supplied.

- Please retain packaging materials until assembly is complete; then dispose of packaging materials carefully
- We recommend that you assemble the product on a soft/carpeted surface to prevent any damage to panels during assembly
- Ensure that all fixings are tight and check these periodically for tightness


- **Note: small parts pose a potential safety hazard; ensure that these are securely attached and kept out of reach of children**

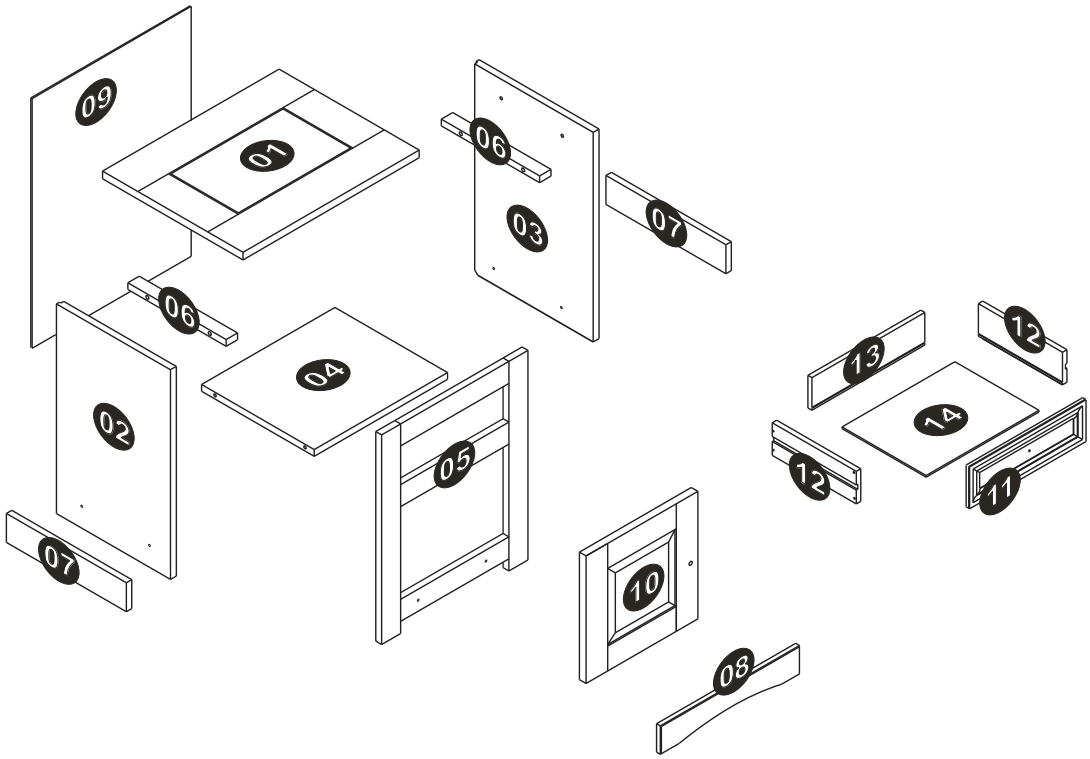


COMPONENT PARTS

A  X 18 8x30 mm	B  X 14 3.5x30 mm	C  X 14 4.0x35 mm
D  X 2 3/16x19 mm	E  X 4	F  X 15 3.5x14 mm
G  X 2	H  X 1	J  X 1
K  X 4 4.0x40 mm	L  X 16	M  X 2
N  X 1		


TOOLS NEEDED

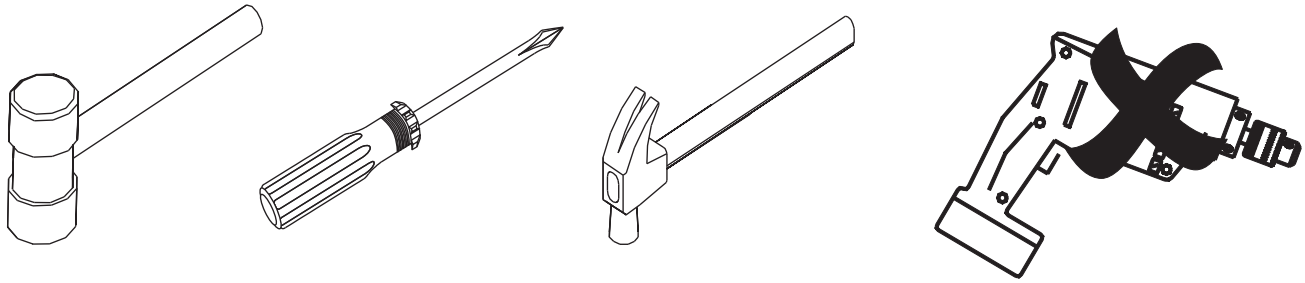




STEP 1


A	8x30 mm	X 8
C	4.0x35 mm	X 10

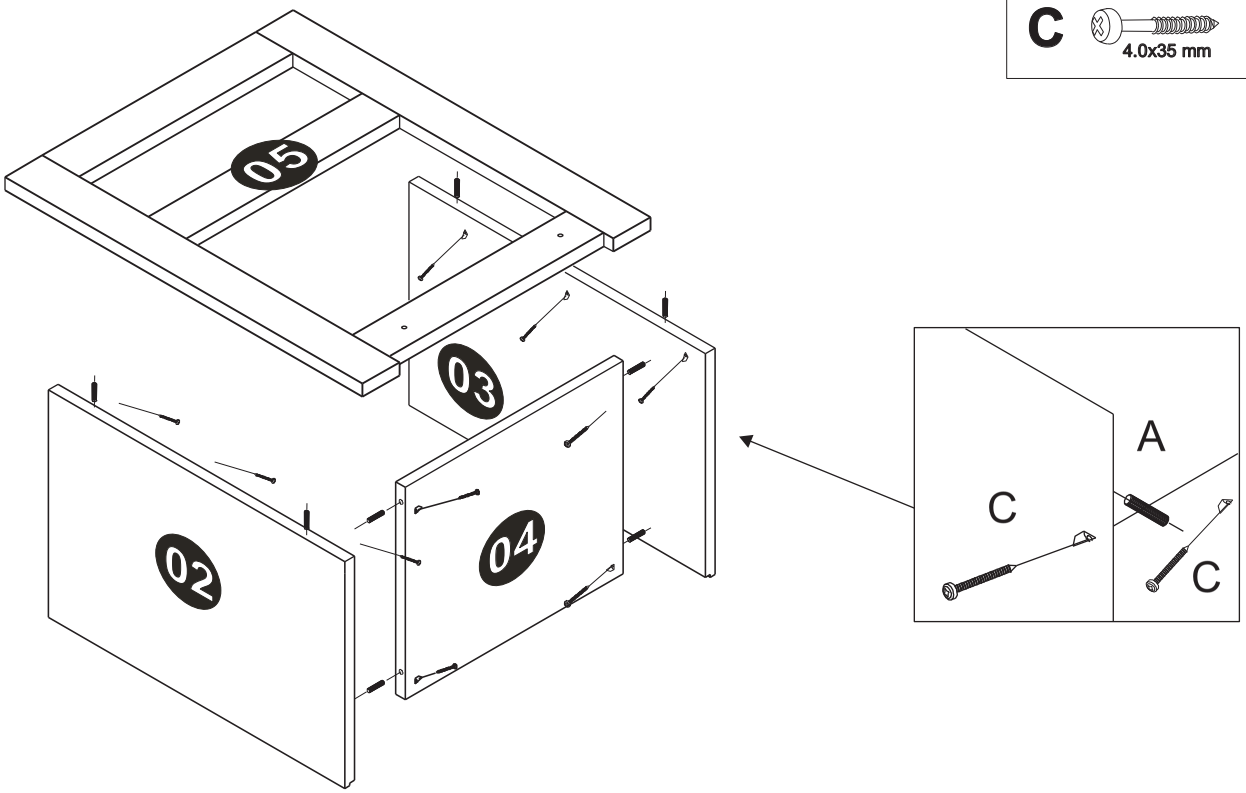

STEP 2


A	8x30 mm	X 4
C	4.0x35 mm	X 4

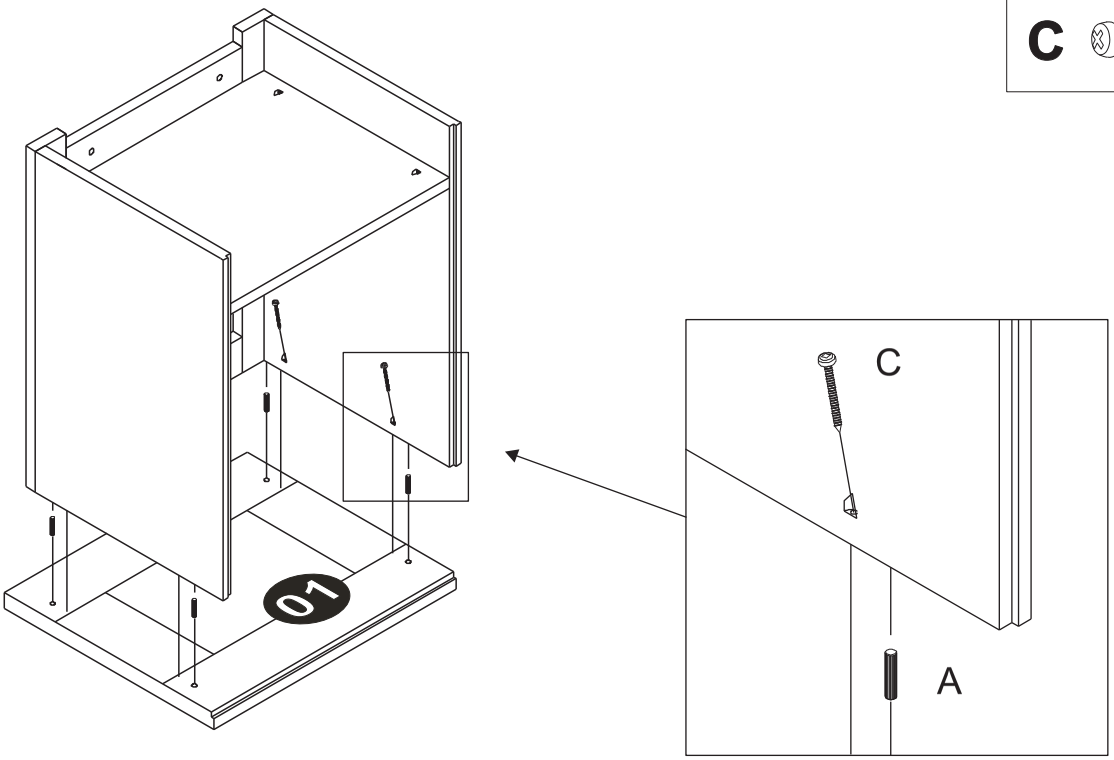




STEP 3


A	8x30 mm	X 4
K	4.0x40 mm	X 4

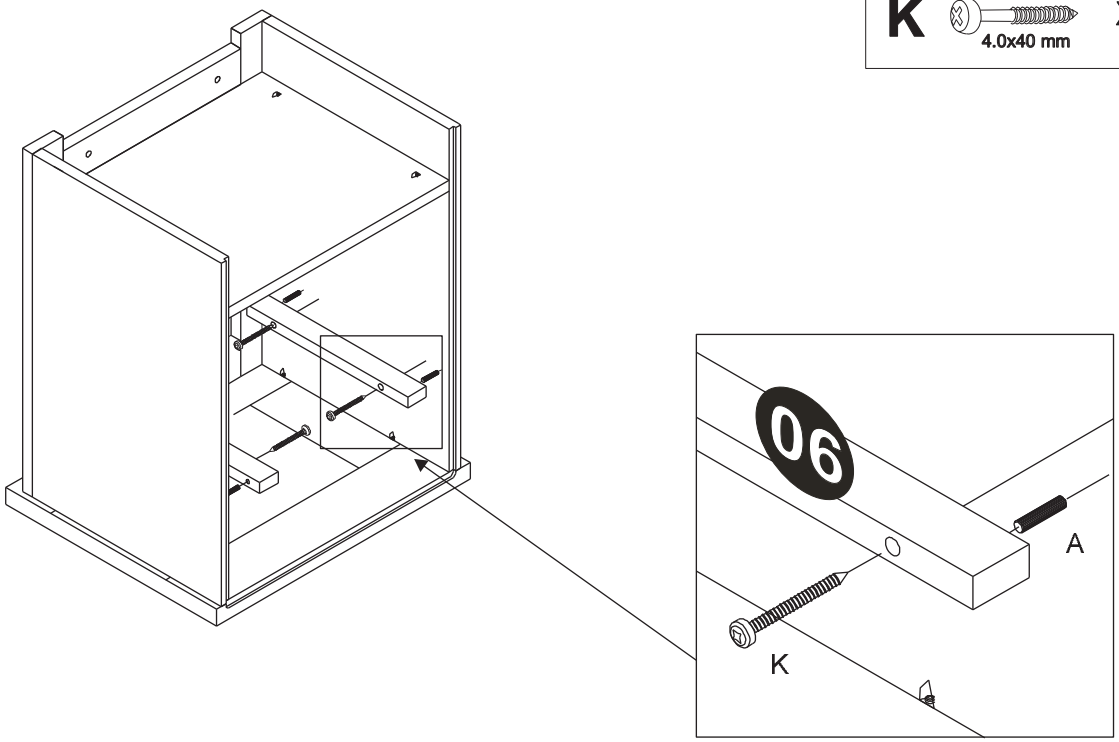

STEP 4


B	3.5x30 mm	X 6


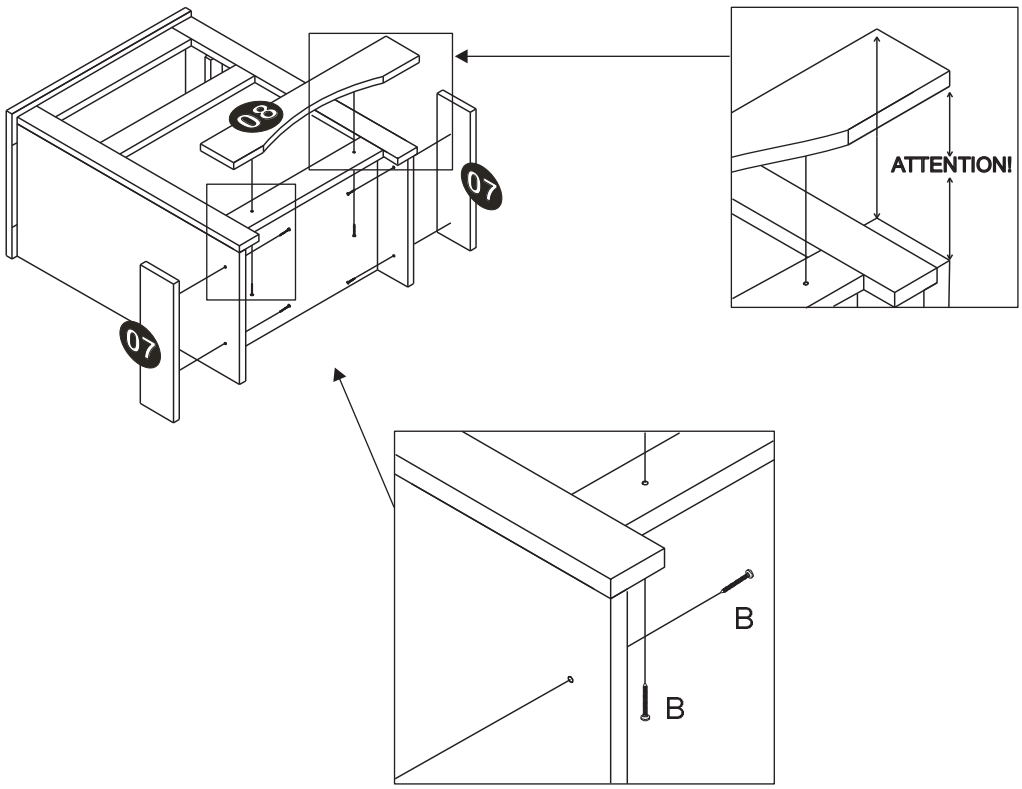





STEP 5

Note!
To ensure good drawer alignment fit drawer front 11 in level with sides 12 as shown!

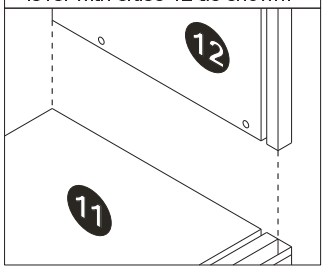


D		X 1
	3/16x19 mm	
B		X 8
	3.5x30 mm	


STEP 1

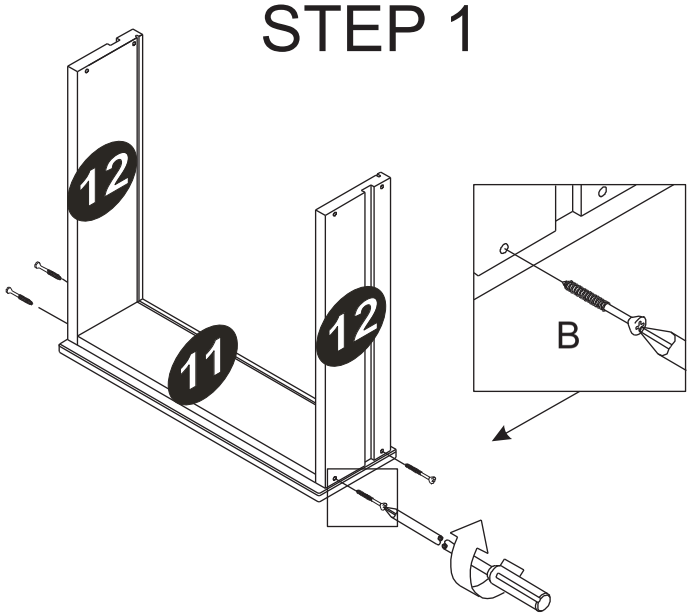


STEP 2

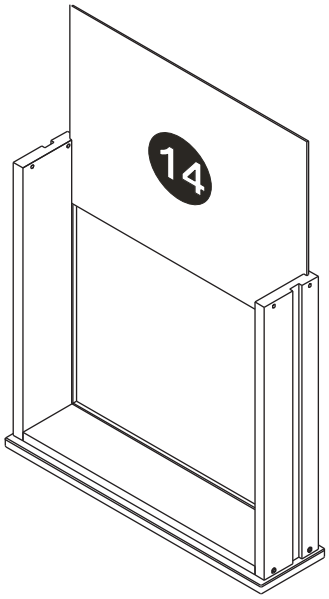


STEP 3


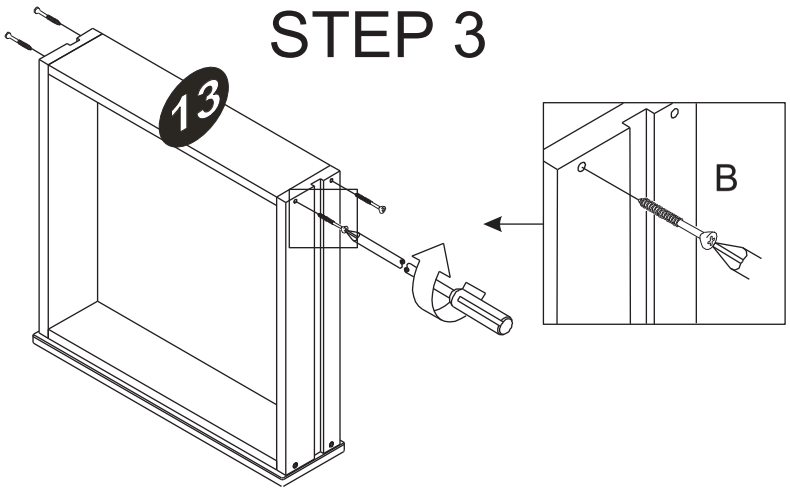



STEP 4

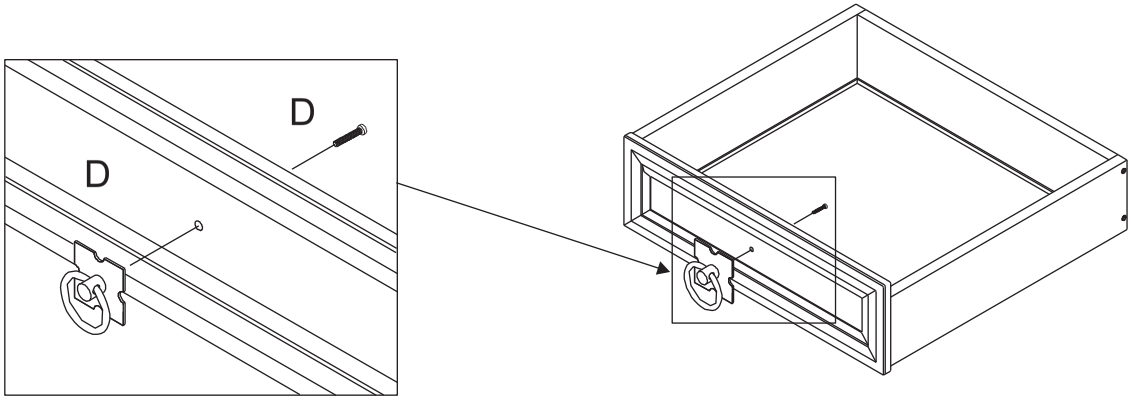





STEP 6


D		X 1
	3/16x19 mm	
F		X 10
	3.5x14 mm	
G		X 2

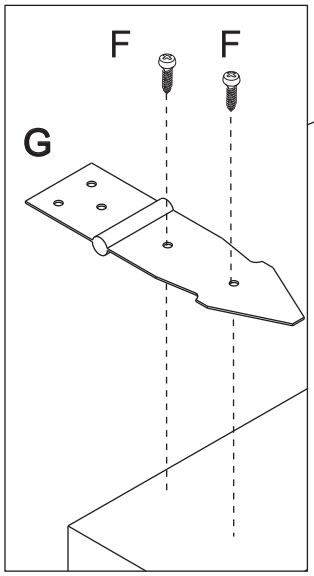


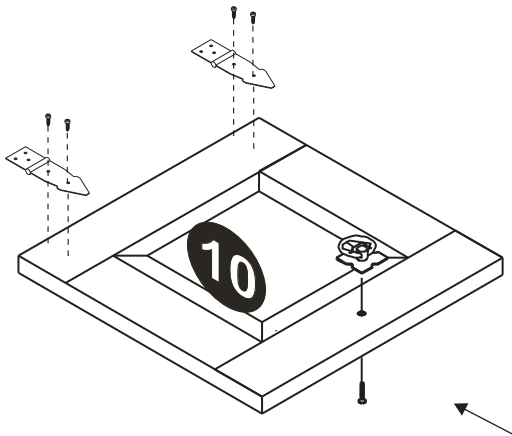

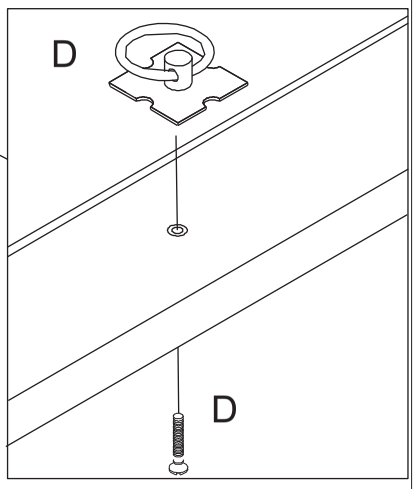


CAN BE FITTED LEFT HAND
OR RIGHT HAND

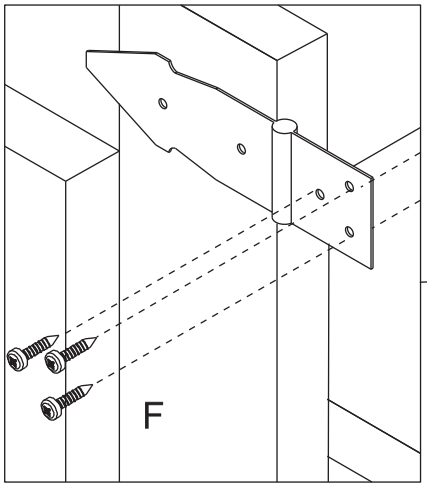


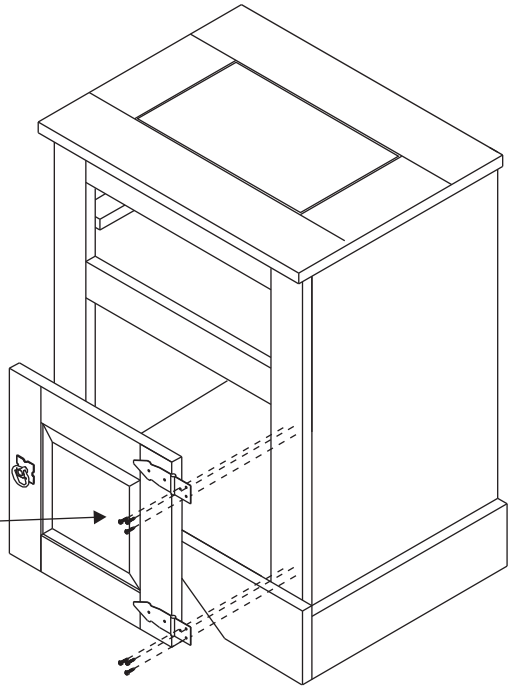


STEP 7


A	8x30 mm X 2	F	3.5x14 mm X 4
H	X 1	J	X 1

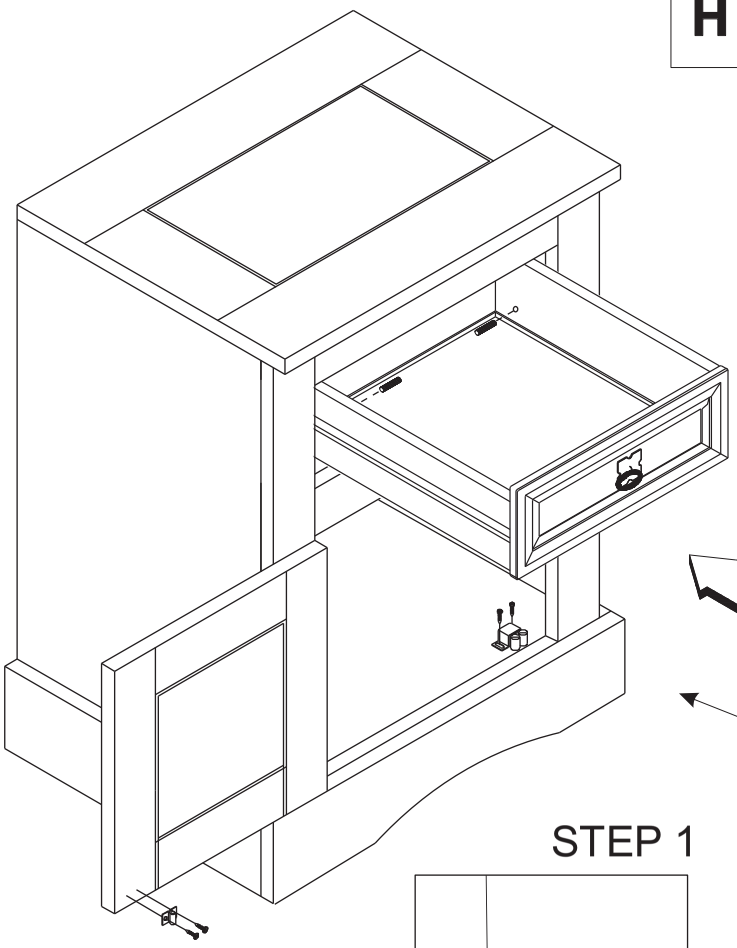

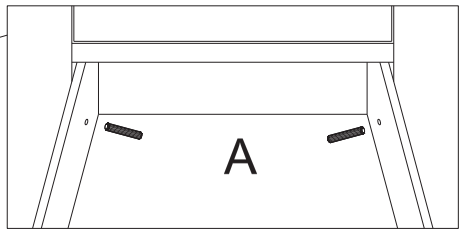


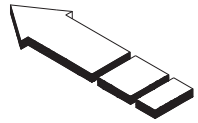

STEP 2

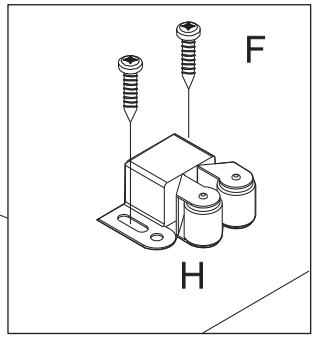



STEP 1

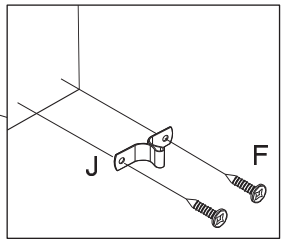



STEP 8

L		X 16

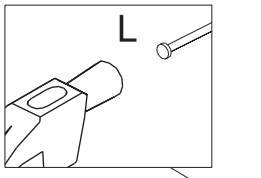


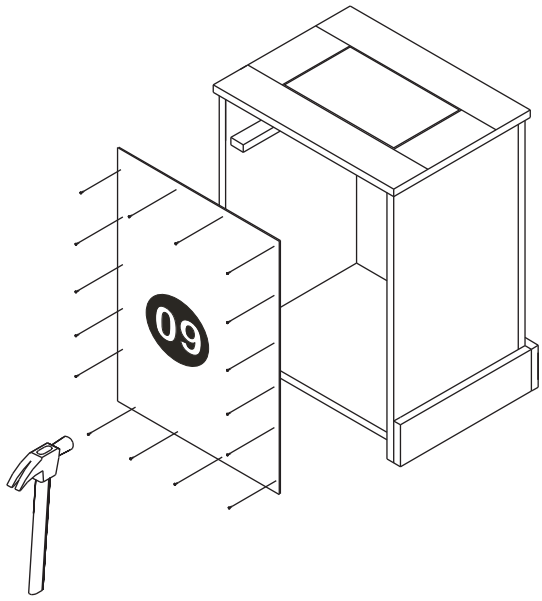


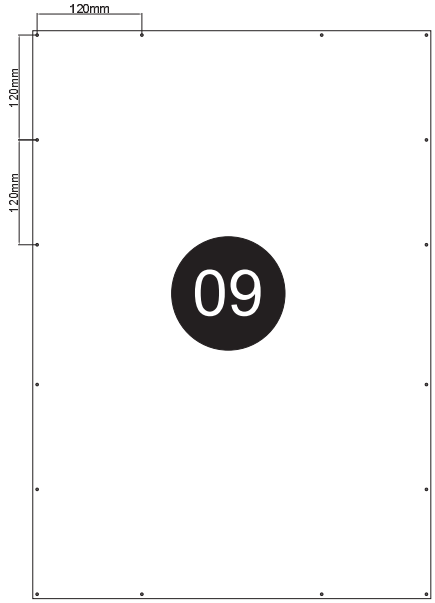




STEP 9

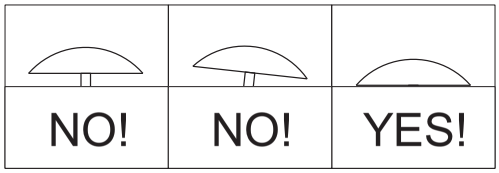



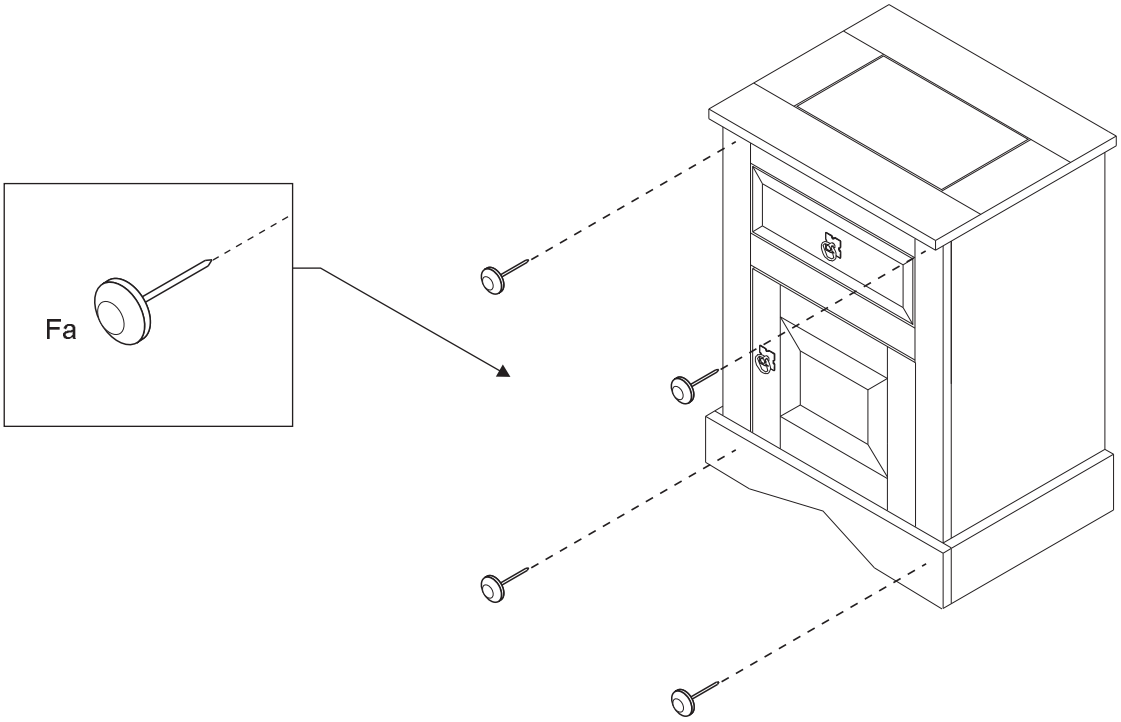

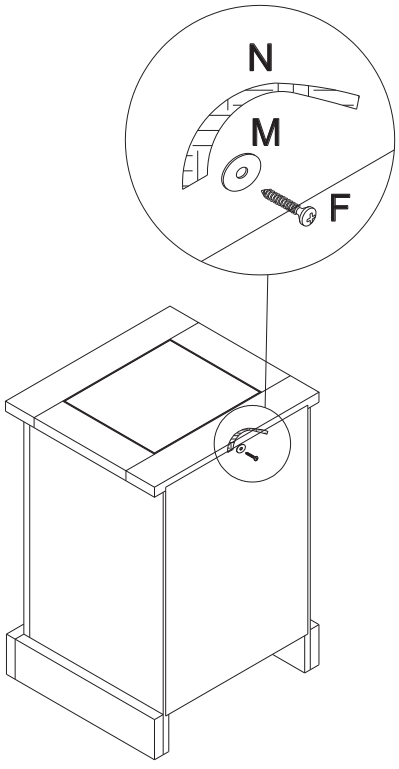


DIAGRAM 1


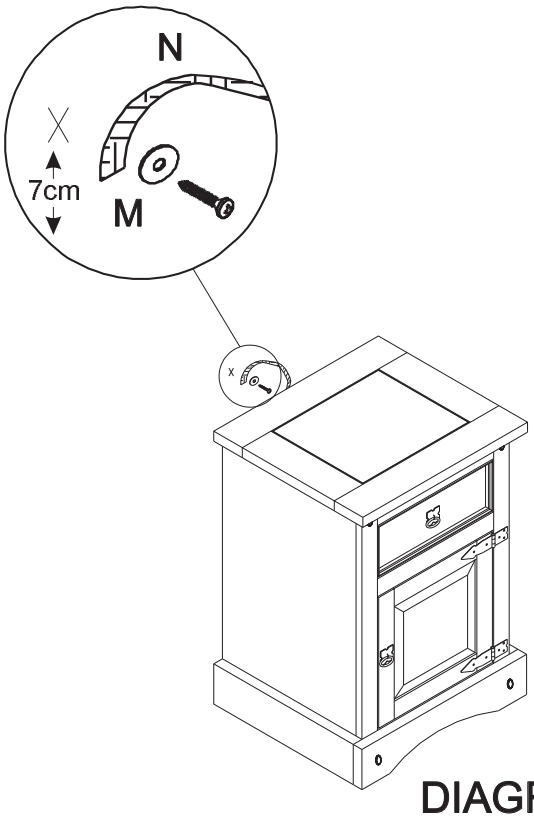


DIAGRAM 2

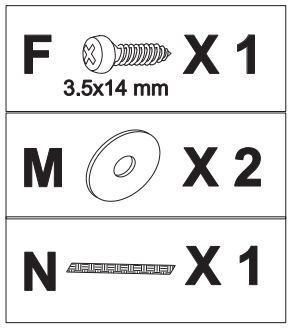


Once you have decided on your prefered location we recommend that you follow below instructions to secure product to wall.

1. Measure to the centre of product and draw a line on wall as shown in diagram. Remove product

2. Measure 7 cm down from line and secure strap to wall by using an appropriate wall fittings. (NOT SUPPLIED)

3. Referring to diagram 2, fold the strap over the edge and secure using fittings supplied.




Puerto Rico - 1 Drawer Bedside Chest

Assembly Instructions - Please keep for future reference

641/7697

643/1831

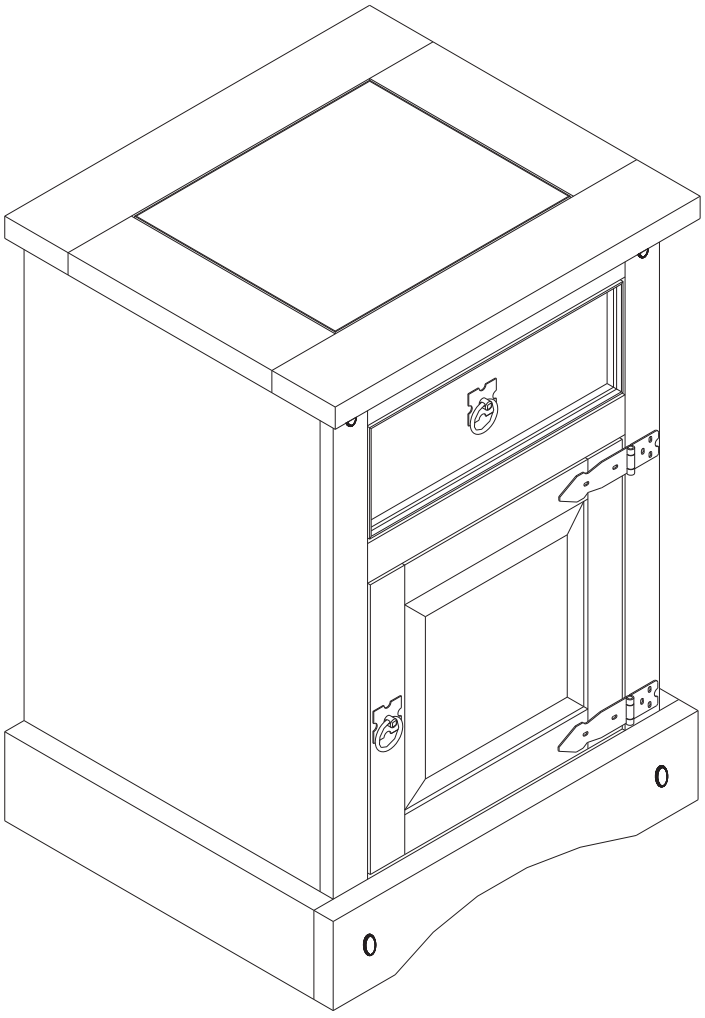

Dimensions

Width - 53cm
Depth - 48cm
Height - 76cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 19/07/10

Safety and Care Advice

Important Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fttings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

- The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

- On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

- This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.



- We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

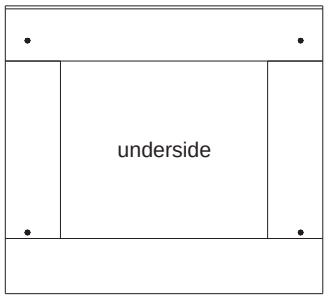


1 Top panel (53 x 48cm)

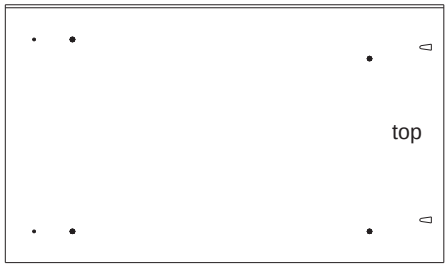


2 Right side panel (73.2 x 43cm)

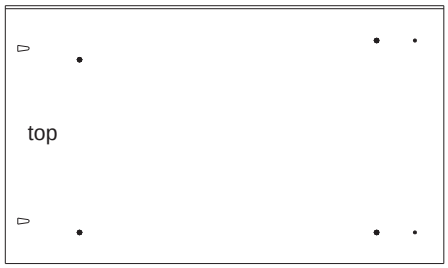


3 Left side panel (73.2 x 43cm)

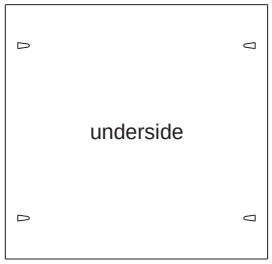

4 Base panel (43.8 x 42.4cm)

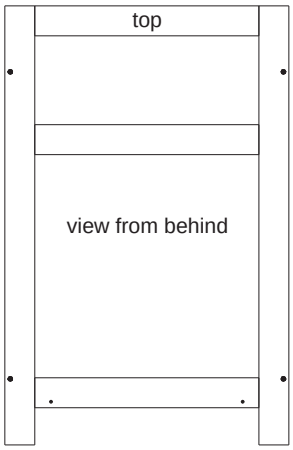

5 Front panel
(73.2 x 47.4cm)

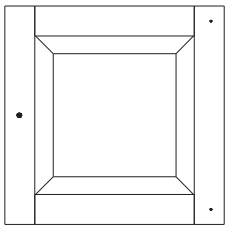


6 Door
(36.4 x 36.6cm)




7 Front plinth
(53 x 11.2cm)



8 Side plinth x 2
(45 x 11.2cm)



9 Drawer front
(36.8 x 14cm)




10 Drawer side x 2
(36 x 14cm)




11 Drawer back
(34.4 x 14cm)



12 Drawer runner x 2
(37.6 x 4cm)



13 Back panel
(65 x 45.6cm)



14 Drawer bottom
(34.7 x 35.5cm)










15 Blocks x 4
(10 x 2cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

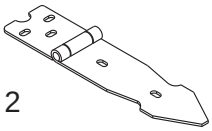
A  Wooden dowel x 18	**B**  14mm Screw x 15	**C**  30mm Screw x 14
D  35mm Screw x 24	**E**  40mm Screw x 4	**F**  19mm Bolt x 2
G  Door / Drawer handle x 2	**H**  Door hinge x 2	**J**  Metal stud x 4
K  Clip x 1	**L**  Plug x 1	**M**  Nail x 16
N  Washer x 2	**O**  Wall strap x 1	


Tools required


Phillips screwdriver (medium & large)

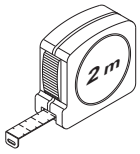


Ruler/tape measure


Small hammer


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Fixing blocks to the right side panel.
(Two people required for an easier assembly)

a: Place blocks 15 in the positions shown.

Attention:
The blocks must be aligned to the side edge.


b: Attach blocks 15 into right side panel using screws D.

Repeat above procedures for the left side panel 3 and blocks 15.

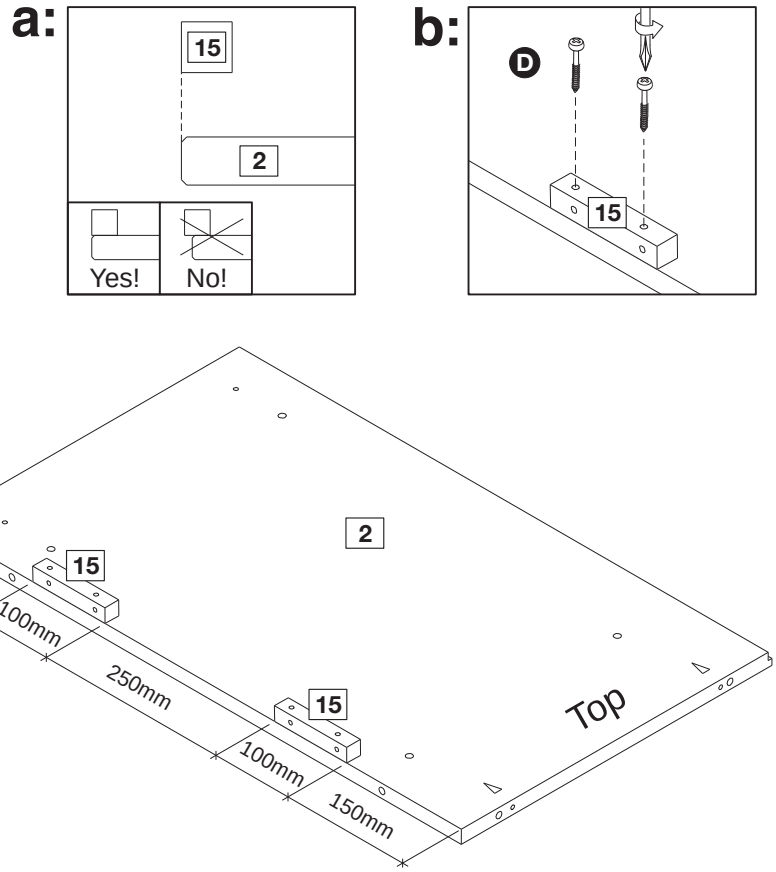

Step 2

Insert dowels A into the indicated parts.

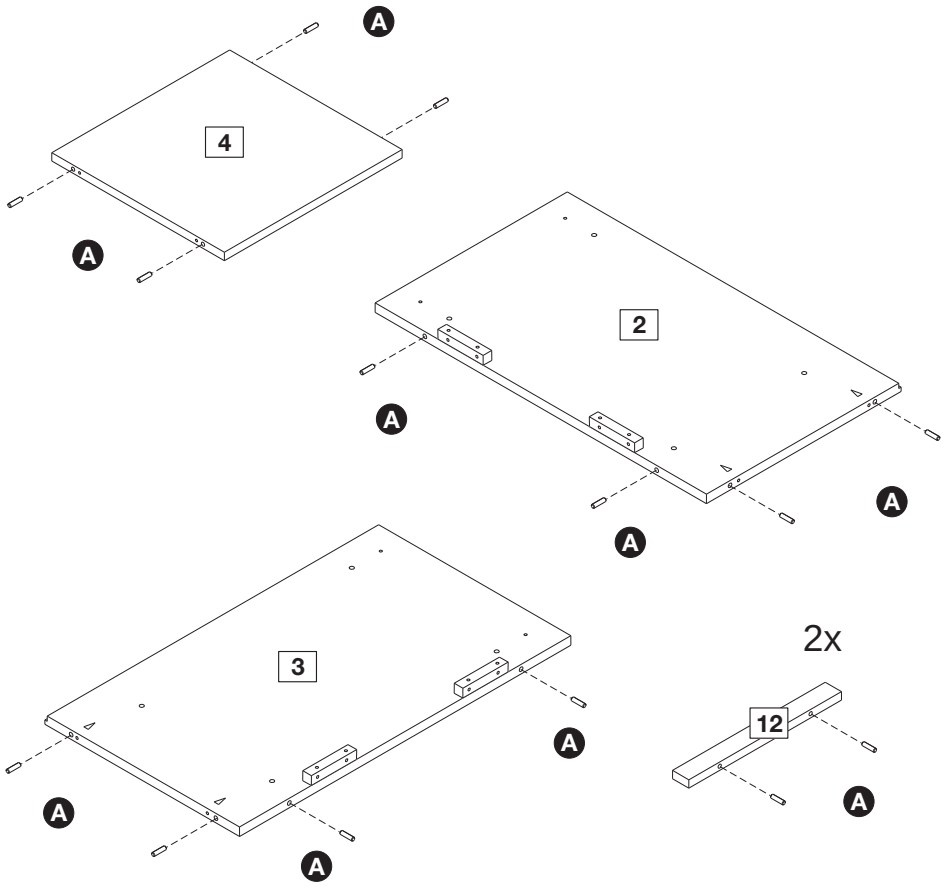


Assembly Instructions

Step **3**

Assembling the cabinet.

Fit base panel 4 to the side panels 2 and 3 then fix using screws D.

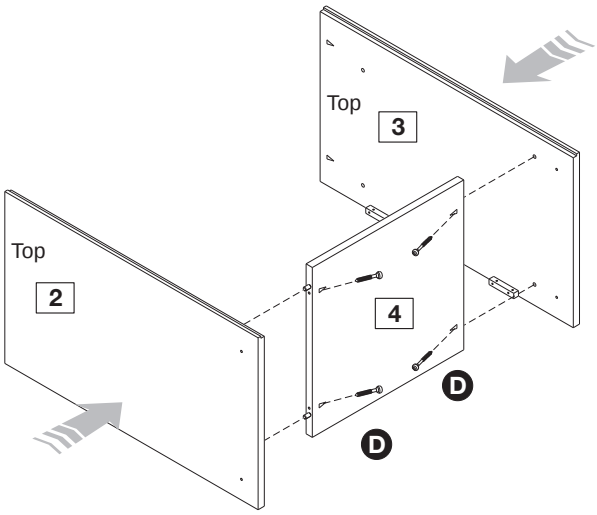


Step **4**

Fixing panels.

Two people required for an easier assembly.

Fit side panels 2 and 3 on the front panel 5.

Attach side panels 2 and 3 on the front panel 5 using screws D.

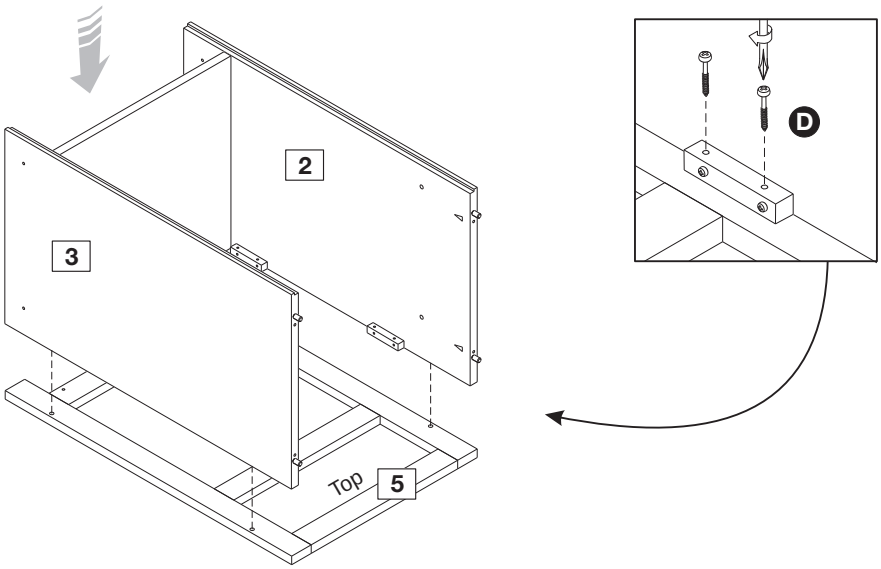


Step **5**

Fixing top.

Two people required for an easier assembly.

Attach cabinet to the top panel 1 using screws D.

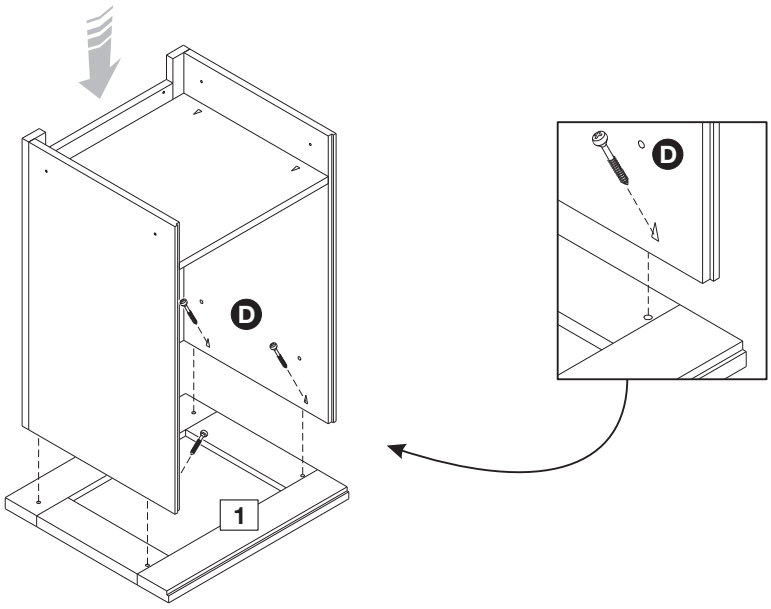



Assembly Instructions

Step 6

Fixing drawer runners.

Fix side drawer runners 12 to the side panels using screws E as shown.

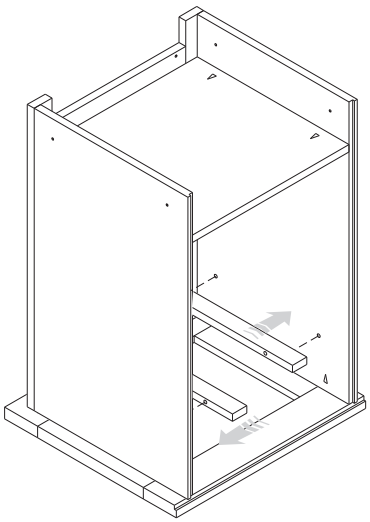

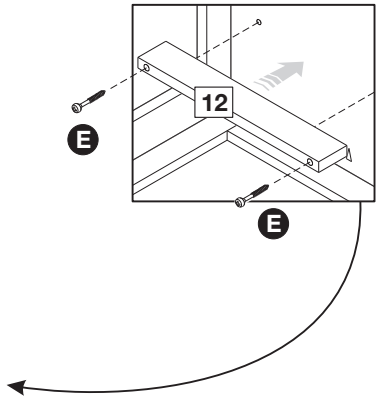


Step 7

a: Fix side plinths 8 to the side panels using screws C.

Note: Make sure side plinths are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 7 to the bottom front panel 5 using screws C.


Note: Make sure front plinth 7 is aligned to the bottom edge of the side panels and in line to the side plinths.

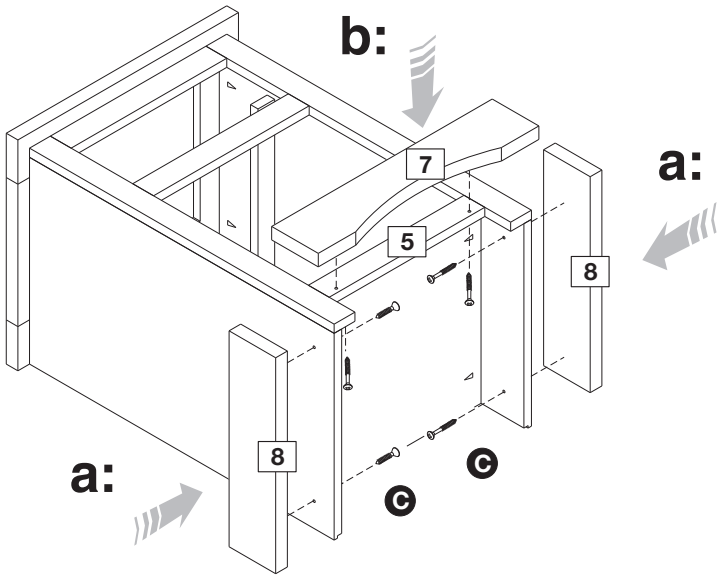



Step 8

Important: With help, carefully stand the product upright.

Fix metal studs J into the pre drilled holes in the top panel 1 and front plinth 7.

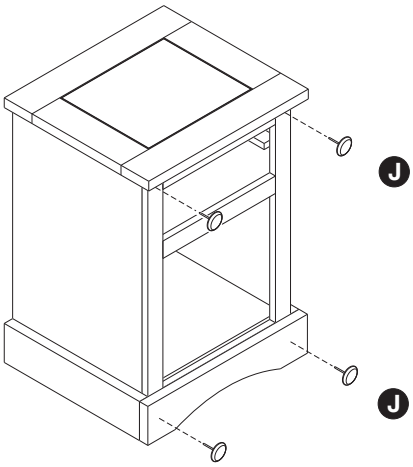

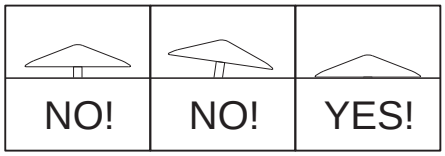

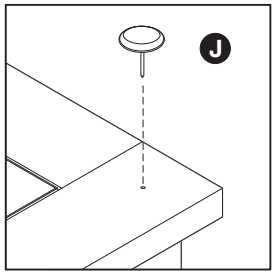

Assembly Instructions

Step 9


Drawer assembly.


a: Attach drawer sides 10 to the drawer front 9 using screws C.


b: Slide drawer bottom into slots on drawer sides and position drawer back 11 in place.


c: Holding the drawer back 11, press the drawer sides and fix them using screws C.

d: Using screw F attach the drawer handle G to the drawer front.

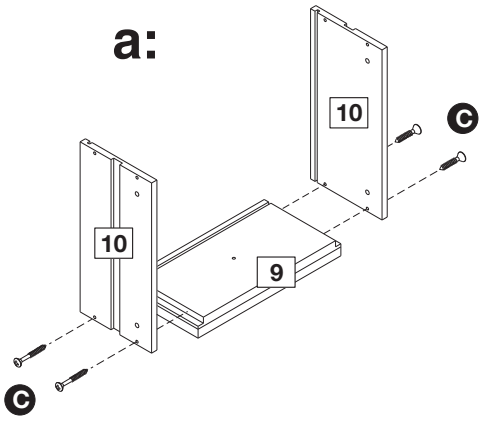

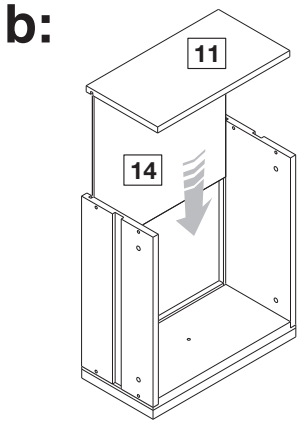

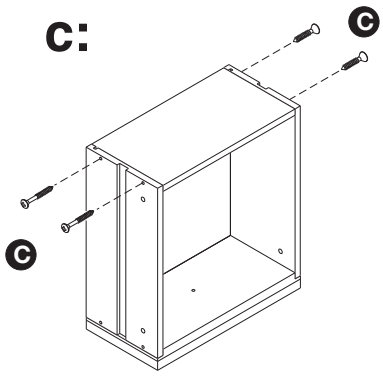

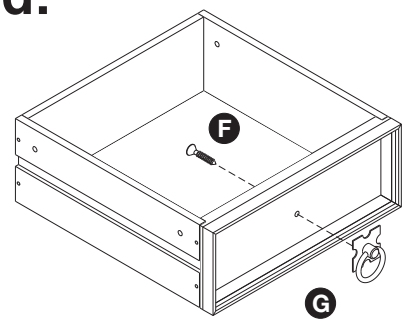


Step 10

Fitting hinges to door.

Attach hinges H to the pre drilled holes in the door using screws B.

Attach handle G to the door using screw F.

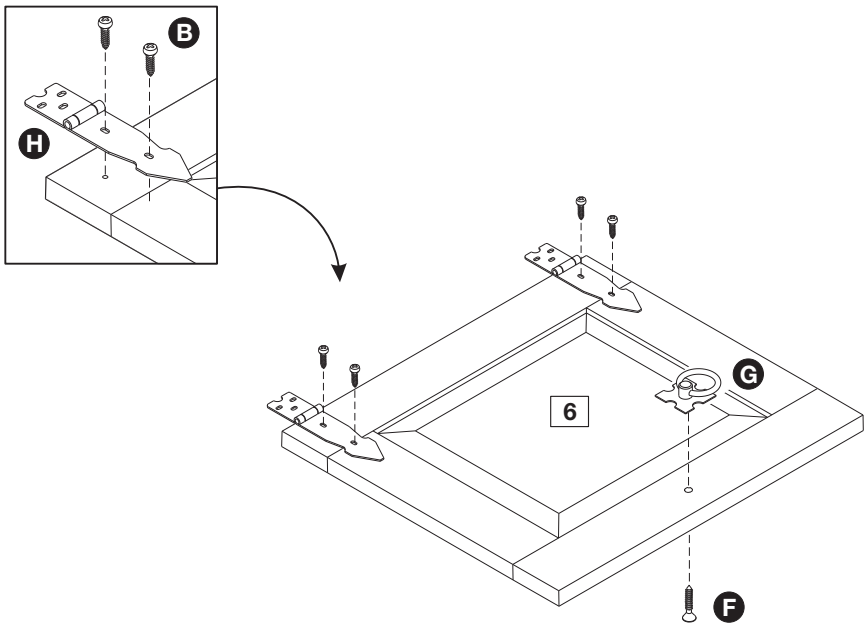

Assembly Instructions


Step **11**

Hanging door.

Attention:
Door can be fitted left hand or right hand.

Fix the hinges using screws **B** as shown.

Note:
To ensure the alignment of the door is correct, centralise the door in the opening before attaching to the cabinet.

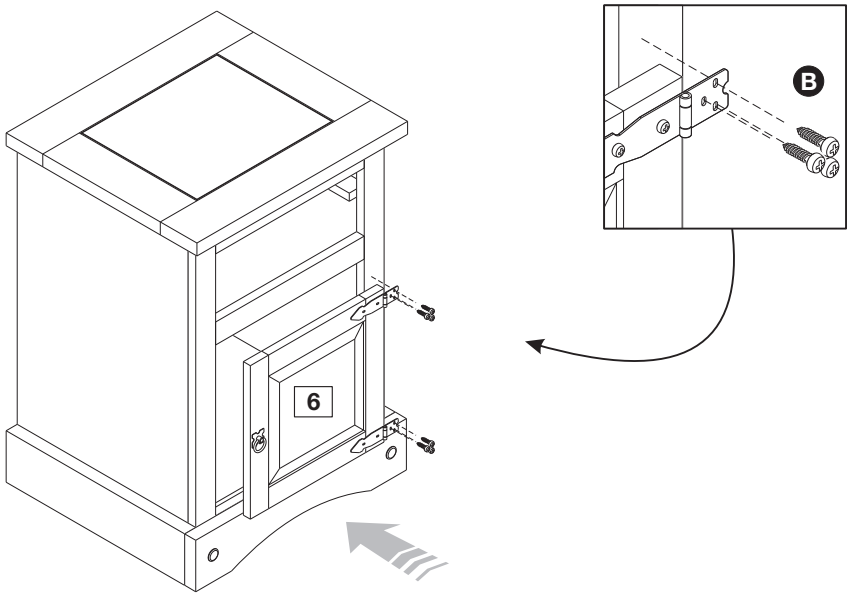

Step **12**


Fitting door lock.


a: Screw clip **K** in place using screws **B**. Ensure that the 2 small wheels are flush with the edge of the base.

b: Insert plug **L** into clip **K**, ensuring they are leveled.

c: Push the door against the plug **L** . This will make 4 small marks on the door.


d: The door can then be opened and plug **L** can be screwed into place using the 4 marks made as a guide. This will ensure that the 2 parts of the door clip are lined up correctly.

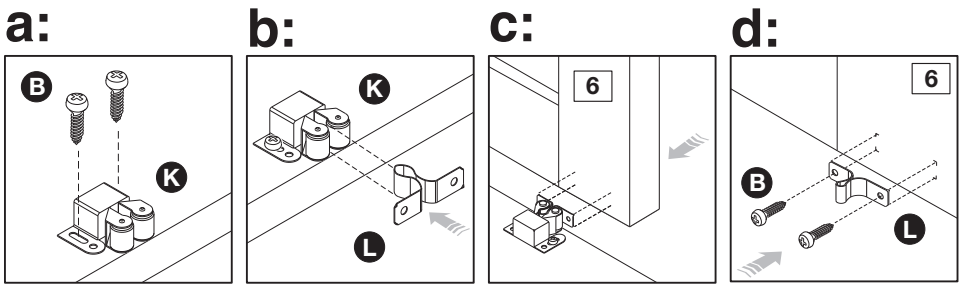

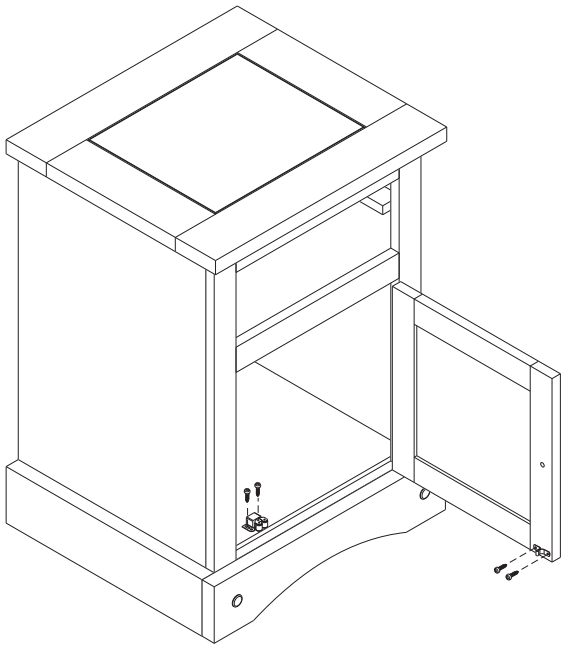

Step **13**

Insert drawer into unit. With the back of the drawer past the front frame, use a hammer to tap dowels Ⓐ in flush to drawer sides. This is a safety catch to stop drawer falling out.

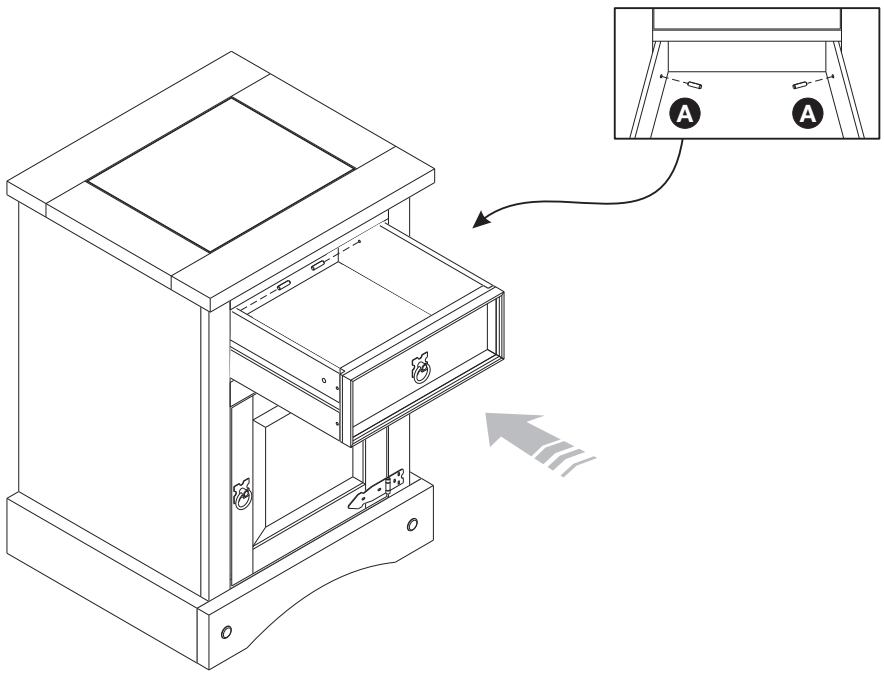



Step **14**

Fixing back panel.

Important: Cabinet **MUST** be up right and 'square' when back panel is attached.

Attach the back panel 13 using nails Ⓜ.

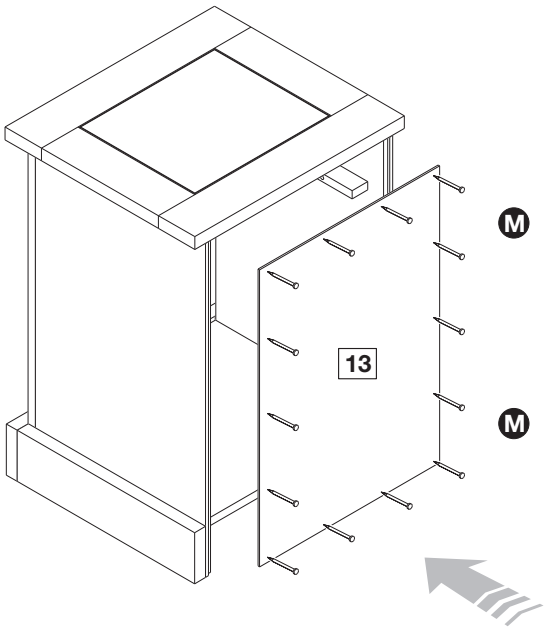

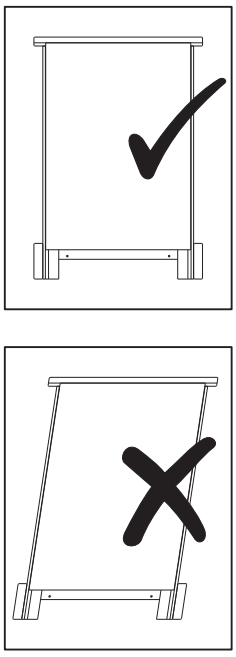

Step **15**

Fixing to wall.

It is recommended that the furniture is fixed to a wall. Fix wall strap **O** to top of furniture using washer **N** and screw **B**. With help, move furniture into position.

Lift with care.


Mark fixing hole on wall and remove furniture. Drill hole and insert wall plug (not supplied).


Warning: Before drilling check wall for hidden pipes and cables.

Reposition furniture and fix wall strap using washer **N** and suitable screw.

Assembly is complete.

Note: Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

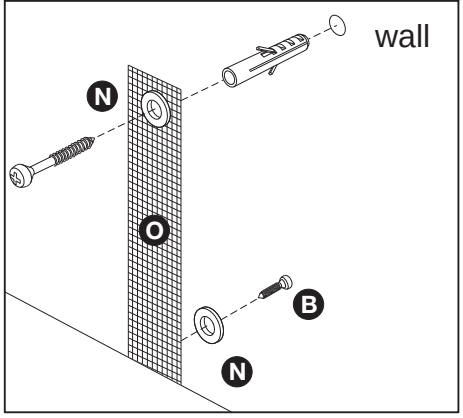

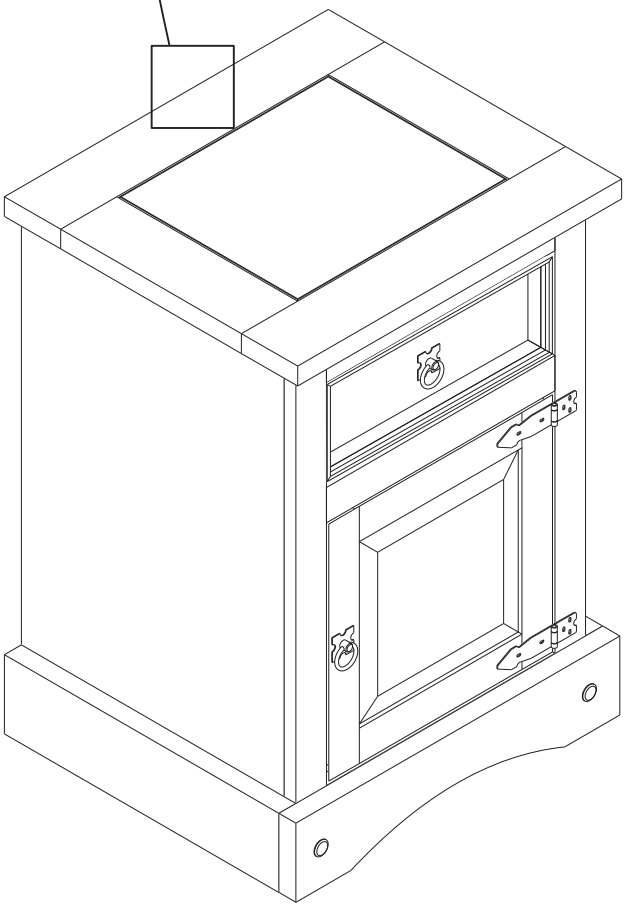


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

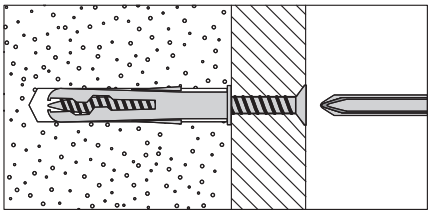


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

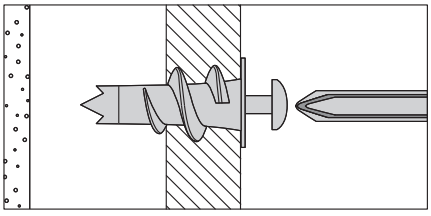


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

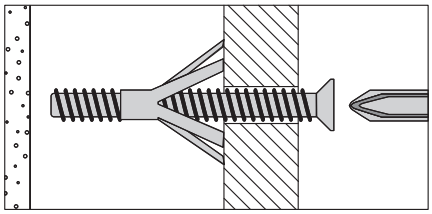


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

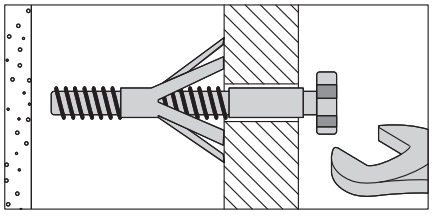


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

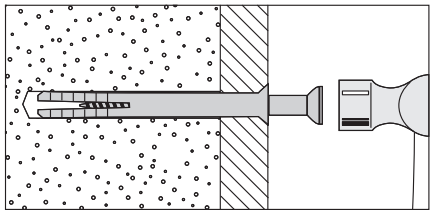

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

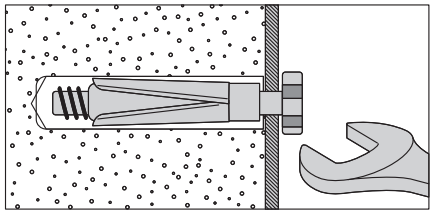

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.