
Scandinavia


5+5 drw. chest

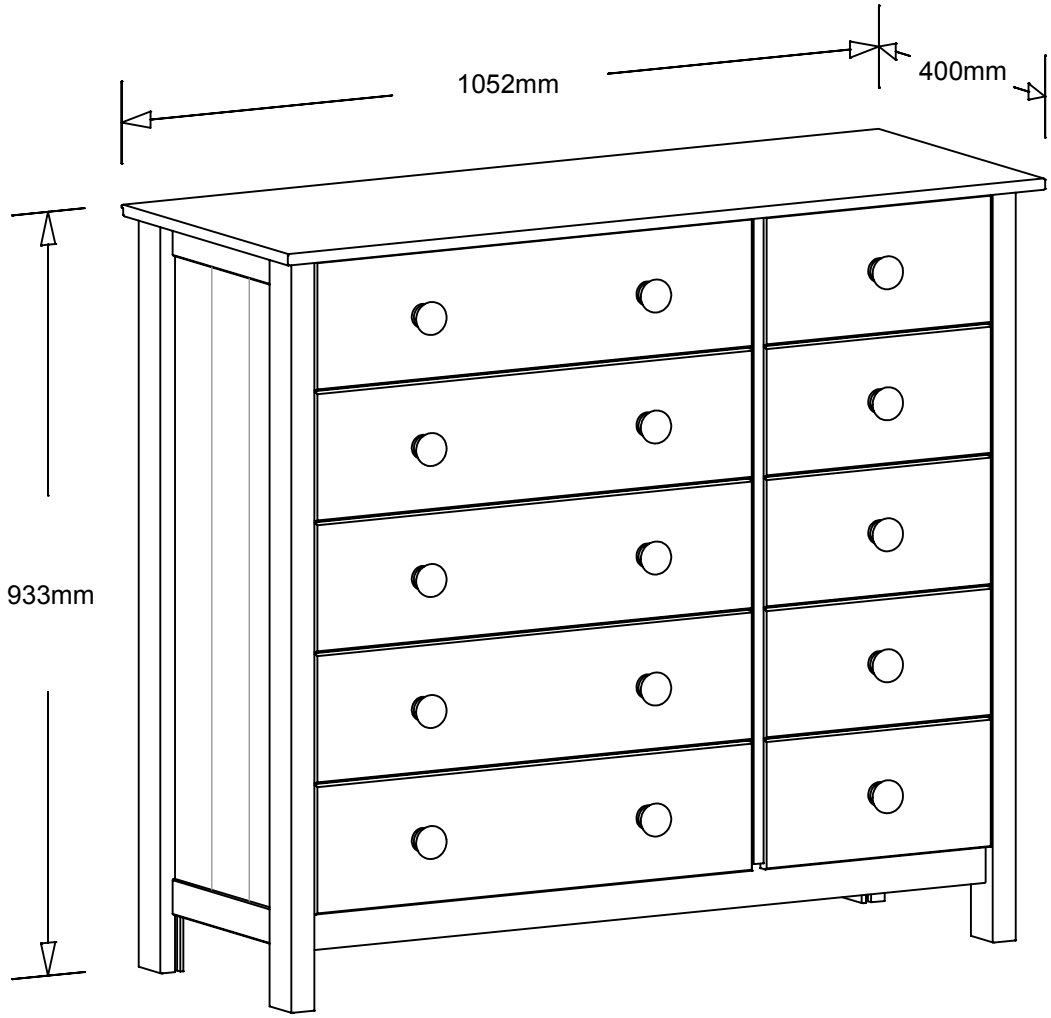

Please sort out all parts before you begin to assemble the item.
This to make sure you always use the correct part.

Fittings contained in the box.


A **12 pcs.** Cam - ø15 x 12mm

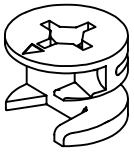

B **40 pcs.** Cam - ø12 x 10,5mm



C **52 pcs.** Bolt - ø6,5 x 24/11mm




D **60 pcs.** Screw - ø4 x 13mm




E **55 pcs.** Screw - ø3,5 x 35mm




F **6 pcs.** Dowel - ø6 x 30mm




G **30 pcs.** Nail - 1,2 x 20mm



H **10 pcs.** Plastic runner - 340mm

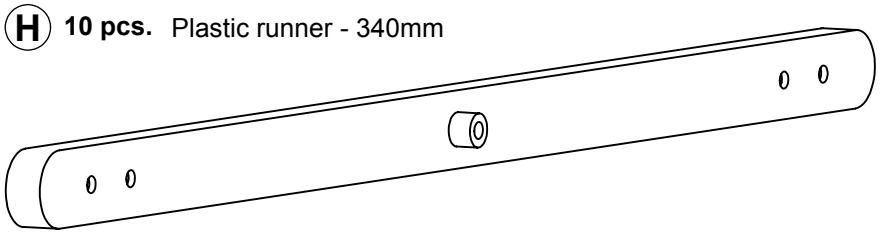


J **15 pcs.**

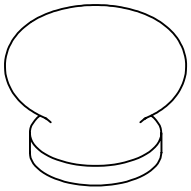


Knob
ø40 x 30mm


K **10 pcs.** Plastic Runner - 340mm

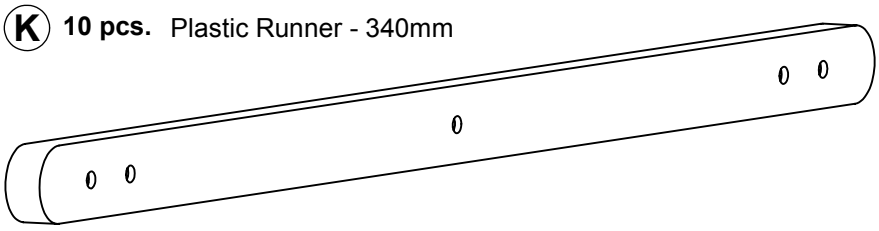

L **1 pcs.** Joining strip - 940mm

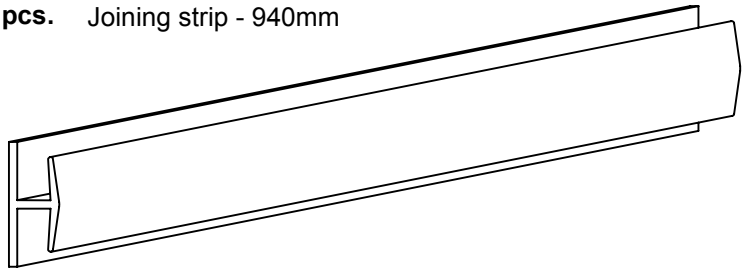


M **1 pcs.** Nail guide

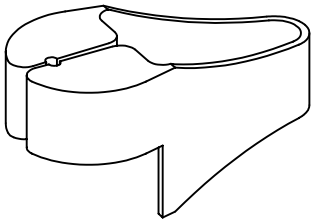



Fittings A, B, C, D, E, F and G are shown in their actual dimensions.

Hazard Warning !
Keep small components out of the reach of children.


Tools needed.

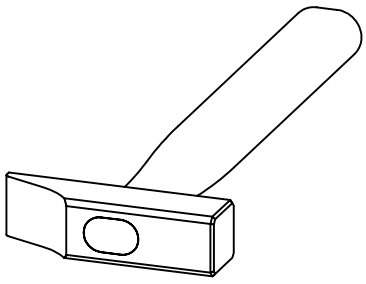

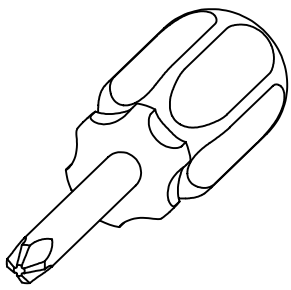


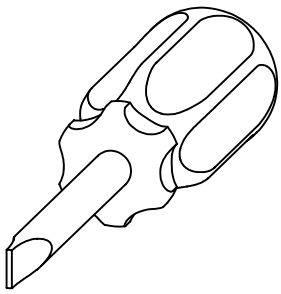


Wooden parts contained in the box.

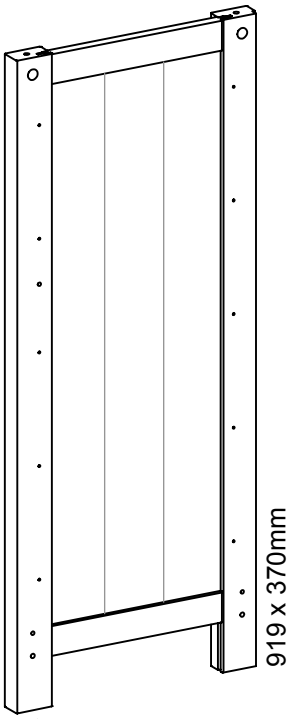

1 Side, left
1 pcs.

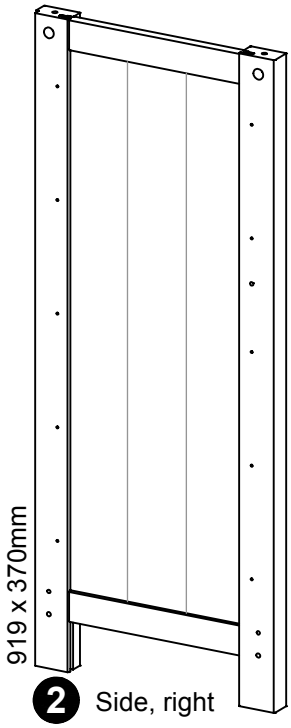


2 Side, right
1 pcs.

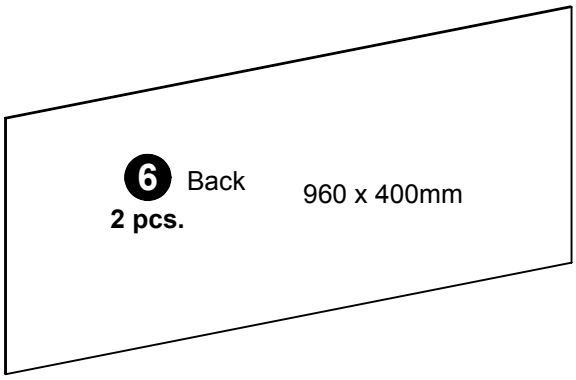


6 Back
2 pcs.
960 x 400mm


7 Drawer front, large
5 pcs.

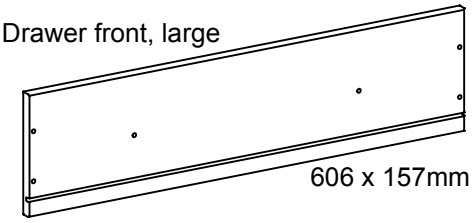


8 Drawer front, small
5 pcs.

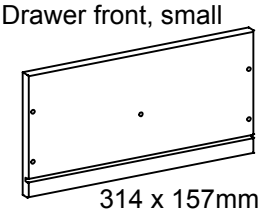


3 Top
1 pcs.

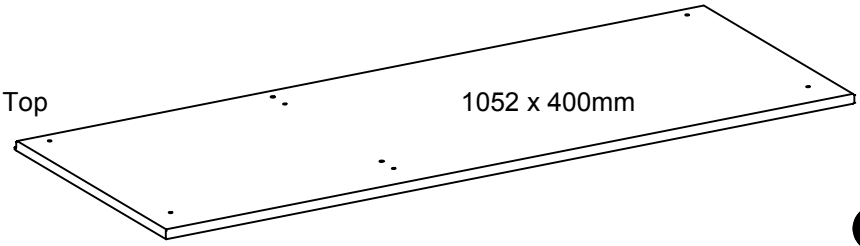


9 Drawer back, large
5 pcs.

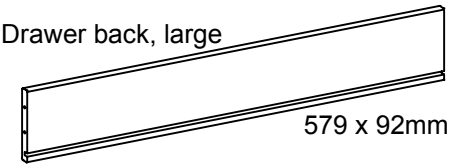


4 Plinth.
2 pcs.

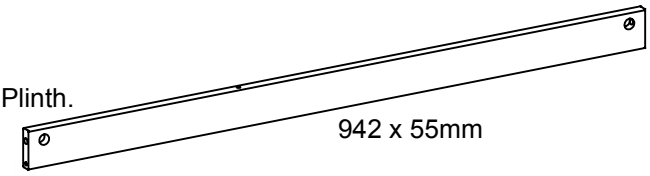


10 Drawer back, small
5 pcs.

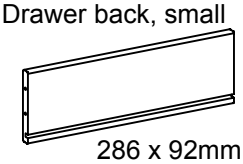


5 Divider
1 pcs.

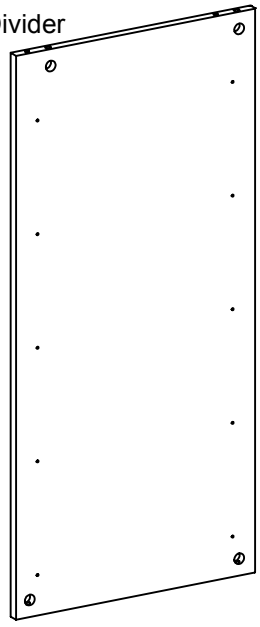


11 Drawer side, left
10 pcs.

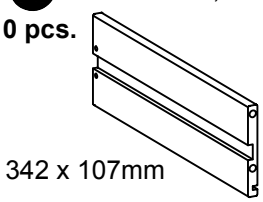


12 Drawer side, right
10 pcs.

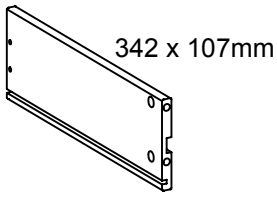

13 Drawer bottom, large
5 pcs.

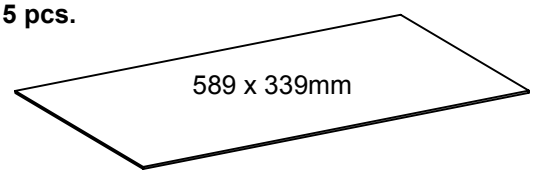


14 Drawer bottom, small
5 pcs.

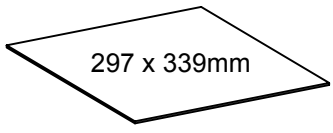

A Guide to

Wall Mounting & Fixings

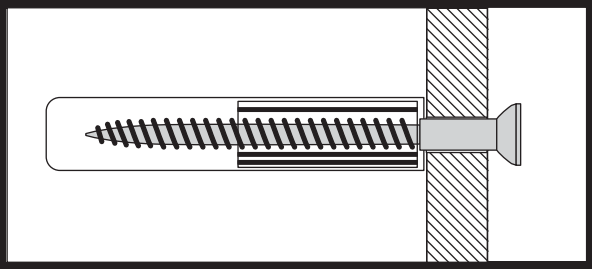

IMPORTANT:

When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

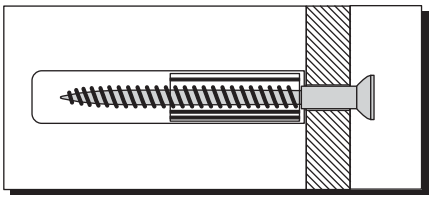


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

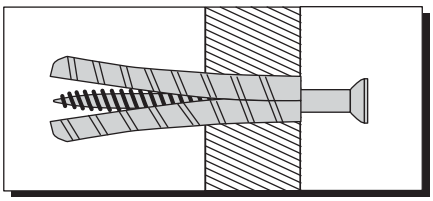


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

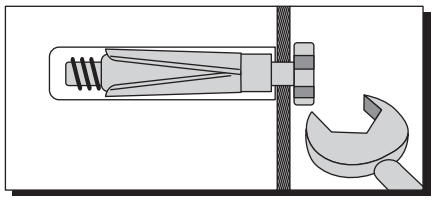


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

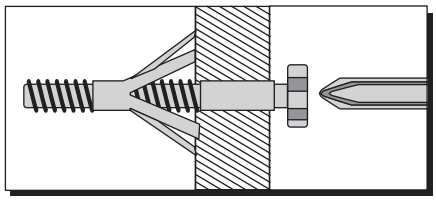


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

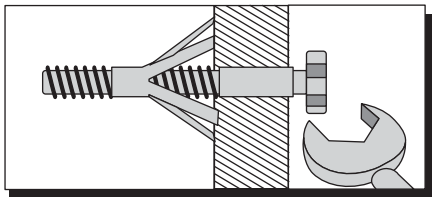

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

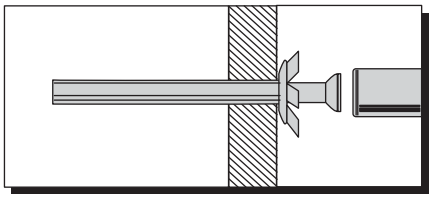

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE


⚠ **SAFETY**

Always check the fitting and location to ensure your safety in and around the home.

⚠ **FITTING**

From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Key diagram.

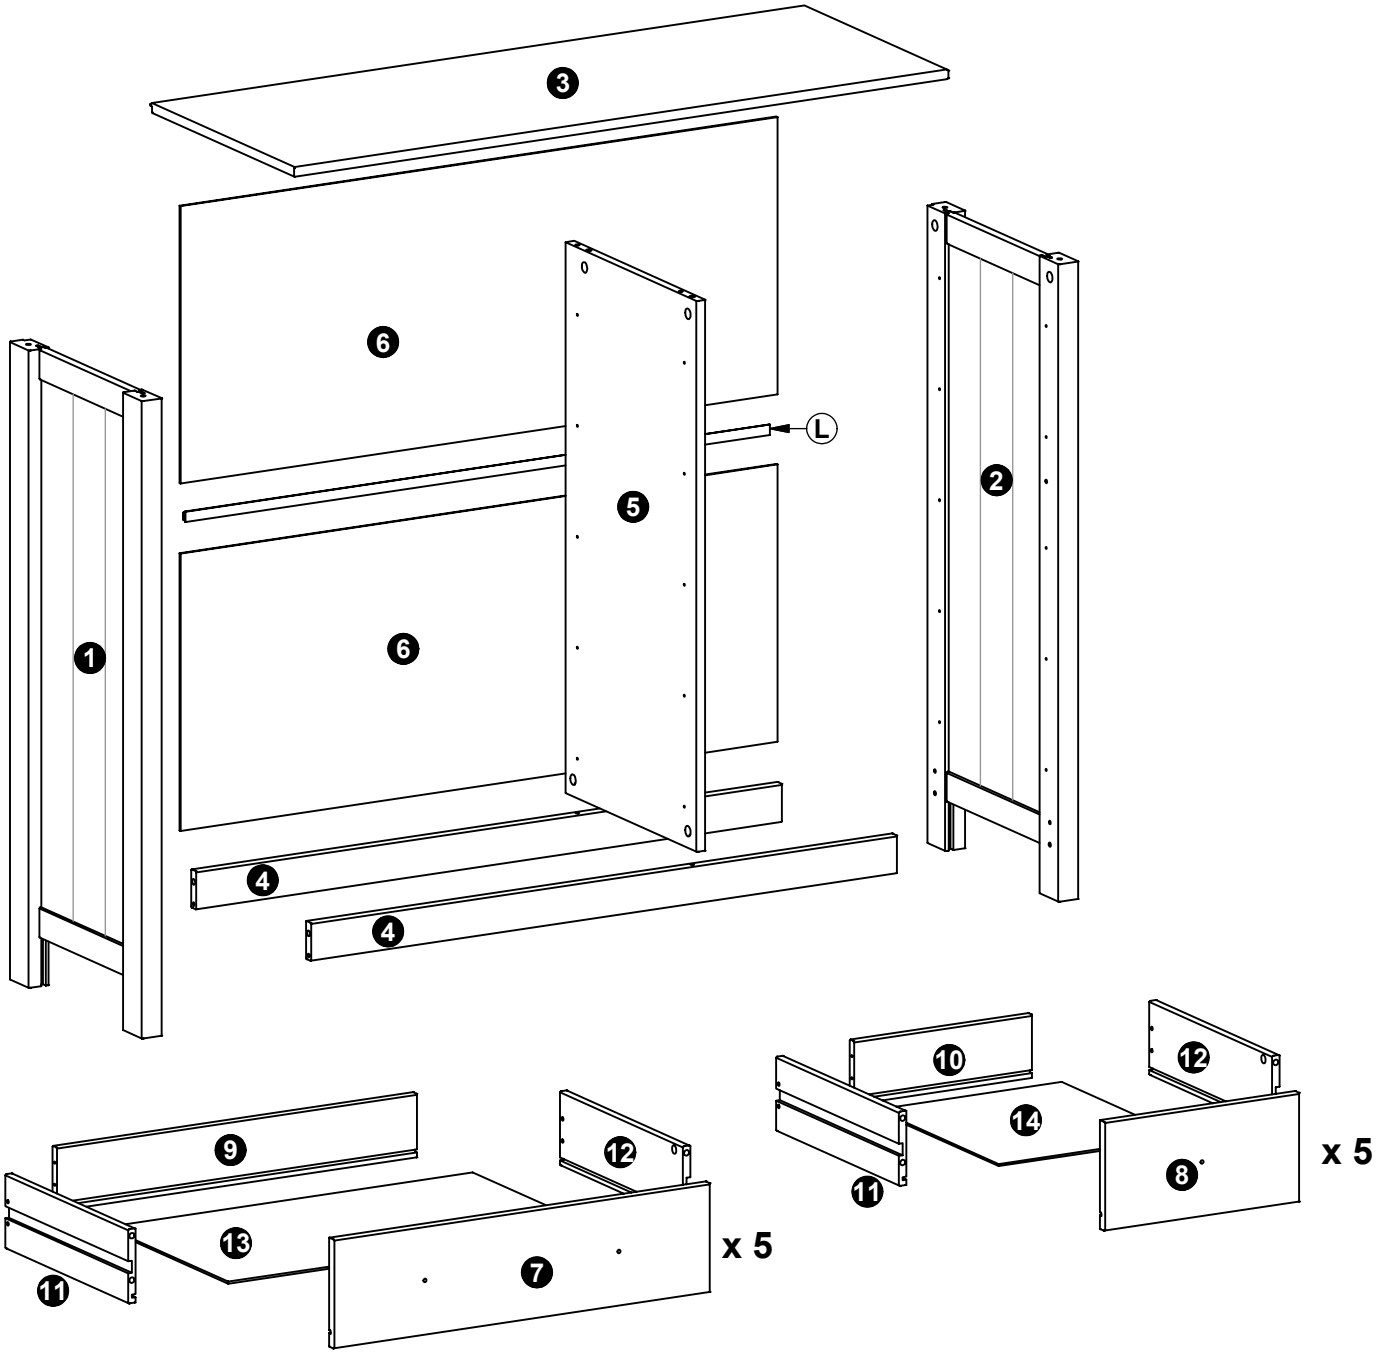


Function of cam & bolt.

Step 1:
Fix the bolt to the wooden panel.

Step 2:
Push the wooden panel with the attached bolt onto the other wooden panel.


Step 3:
Place the cam into the hole, arrow pointing towards the bolt.

Step 4:
Tighten: Turn the cam to the right.

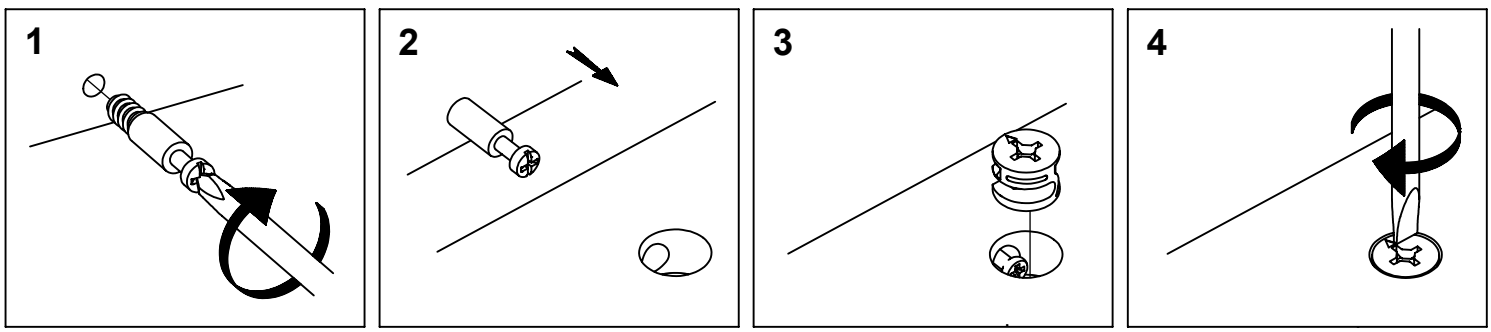


1. Inserting the dowels to the plinths.

Knock the dowels "F" into the holes indicated on both the plinths "4".

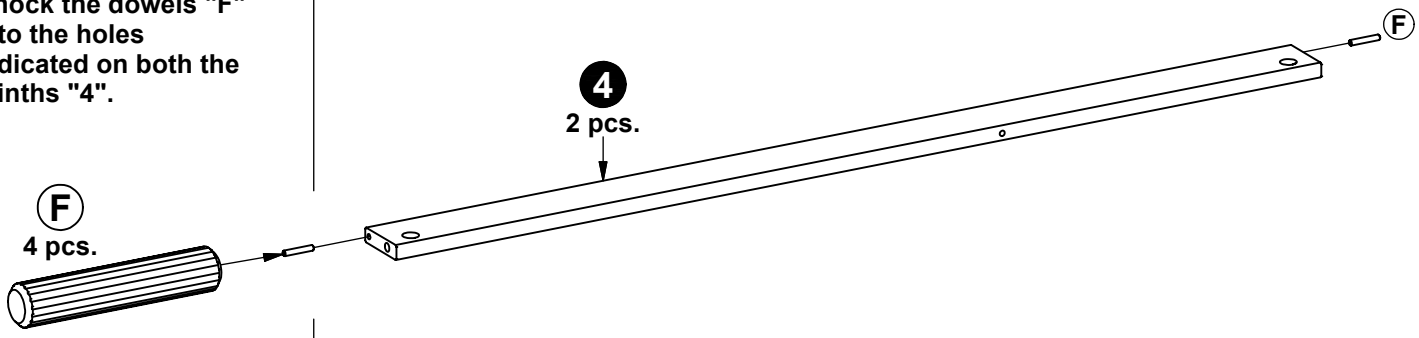


2. Mounting the bolts to the plinths.

Screw the bolts "C" into the hole indicated on both the plinths "4".

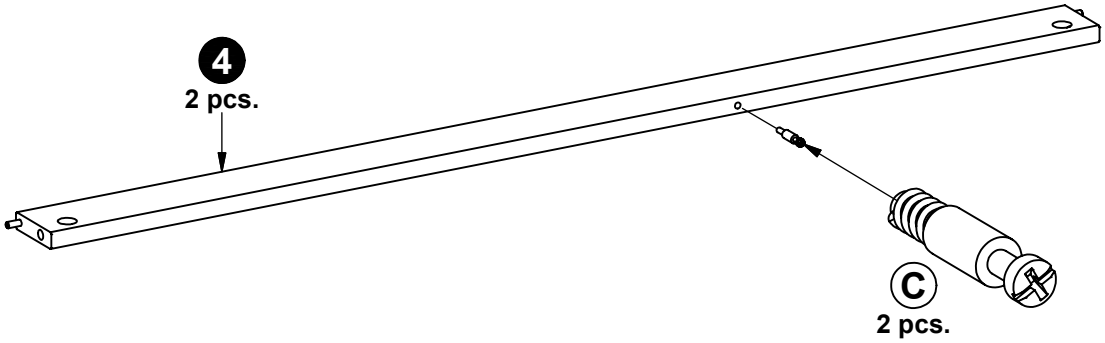

3. Mounting the bolts to the sides.

Screw the bolts "C" into the holes indicated on the sides "1" & "2".

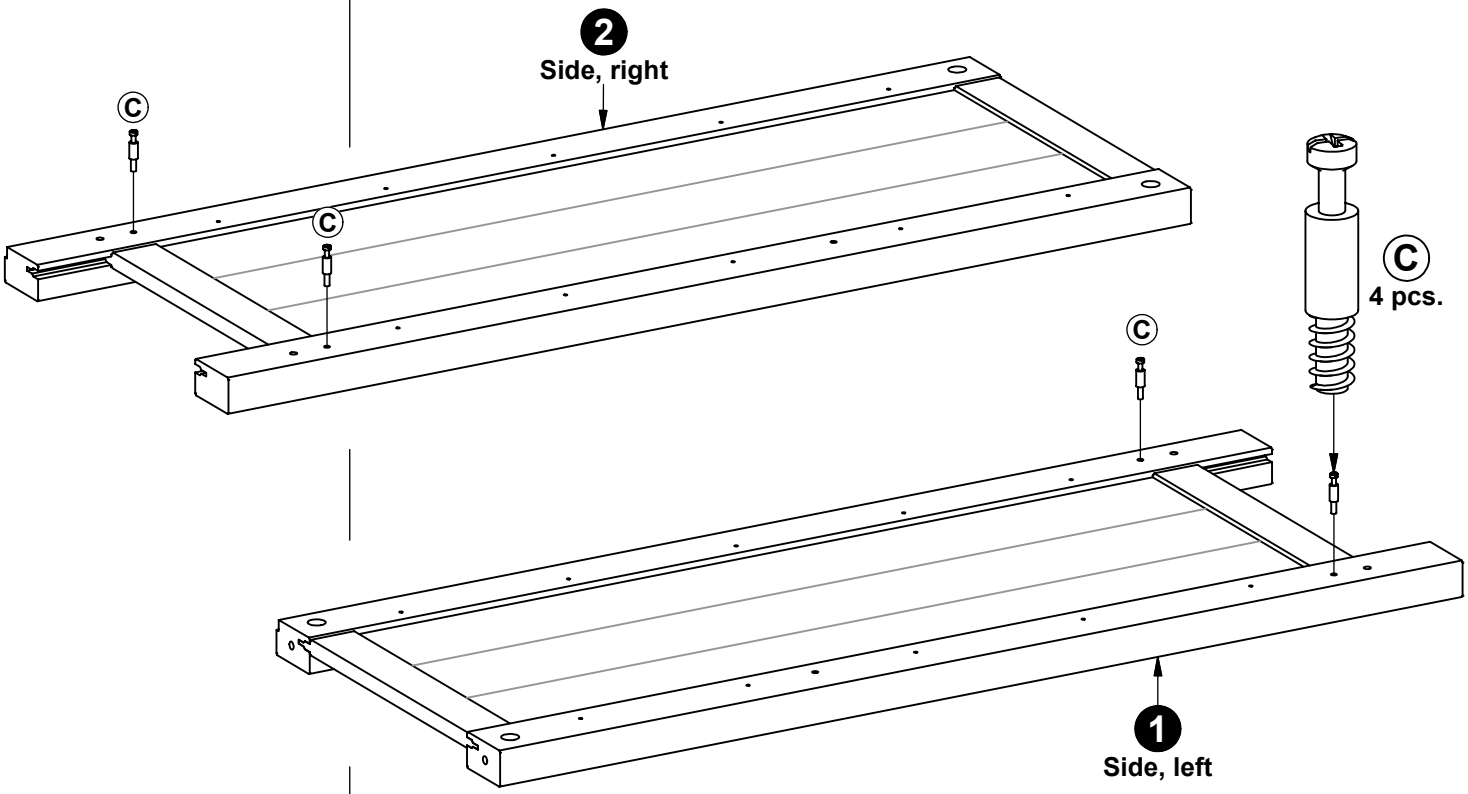


4. Mounting the plastic runners to the sides.

Fix the plastic runners "H" to the sides "1" and "2", using screws "D".

The dowel should be pointing towards the sides.

Start fixing the ends of the plastic runners to the sides as shown in fig. 4.1

Finally fix the plastic runners using the central holes.

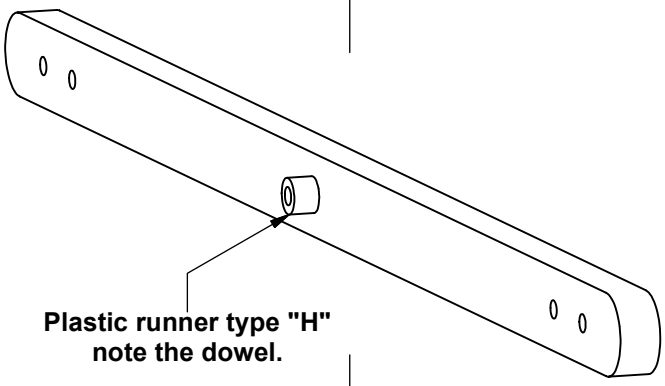


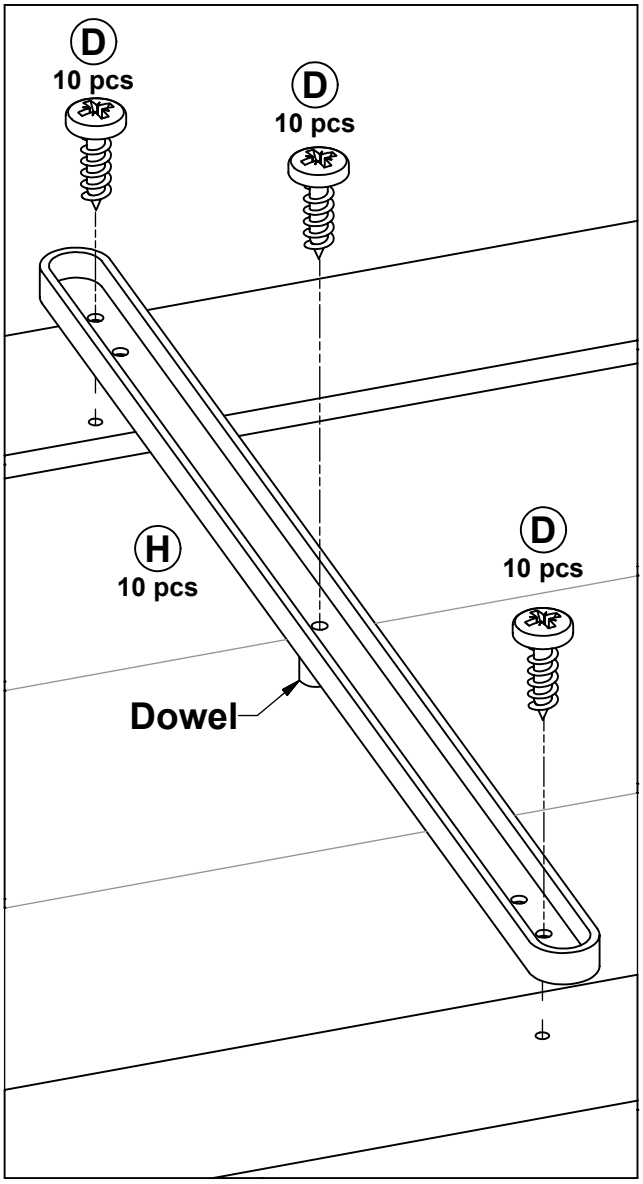


Fig. 4.1

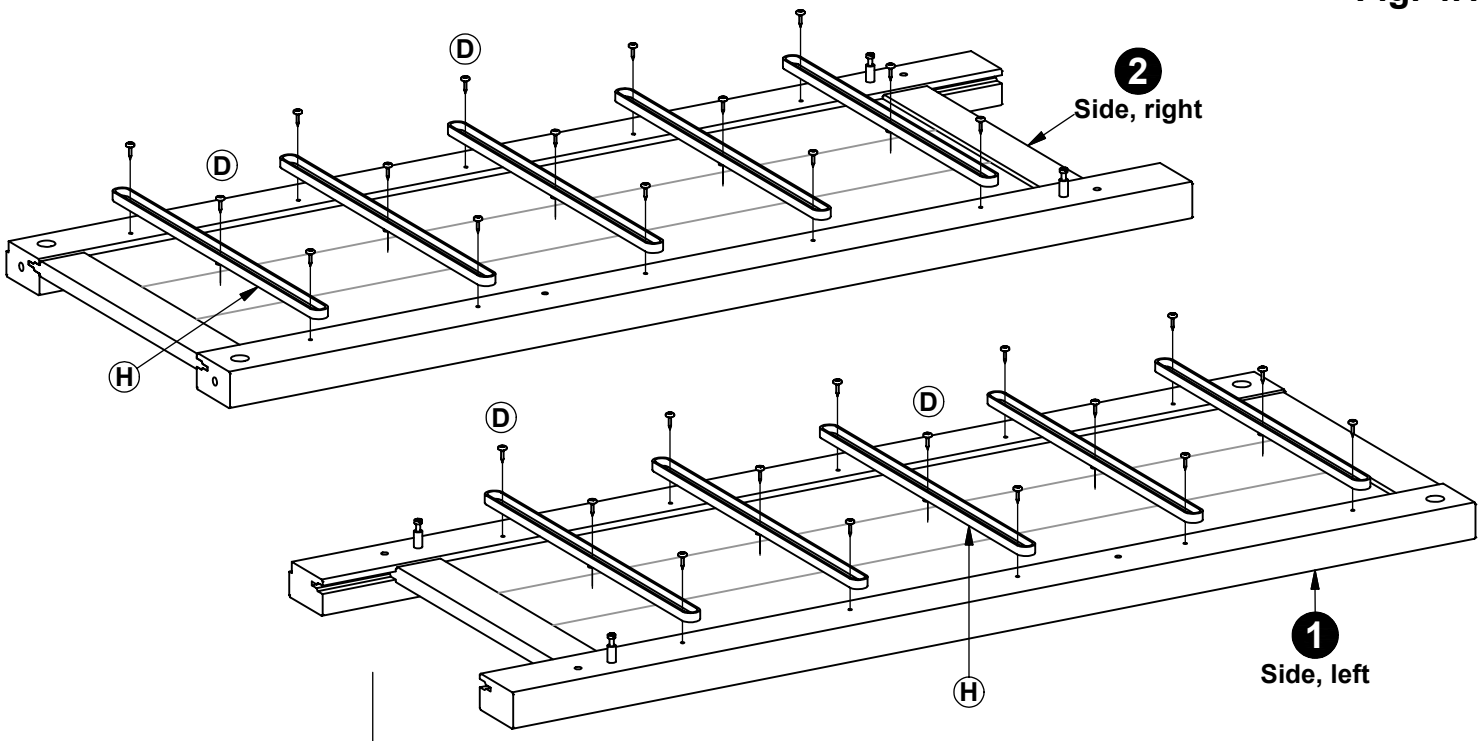

5. Adding the plinths to the right hand side.

Press the plinths "4" onto the side "2".

See page 4 "Function of the cam & bolt".

Place the cams "A" into the holes indicated, arrows pointing towards the side / bolt.

Tighten:
Turn the cam to the right. Fig. 5.2


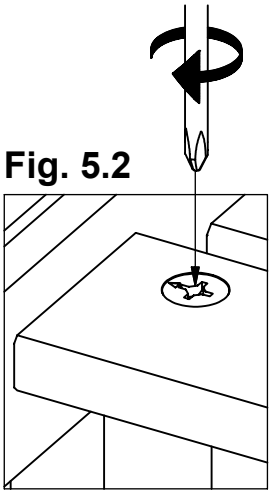


Fig. 5.2


Fig. 5.1

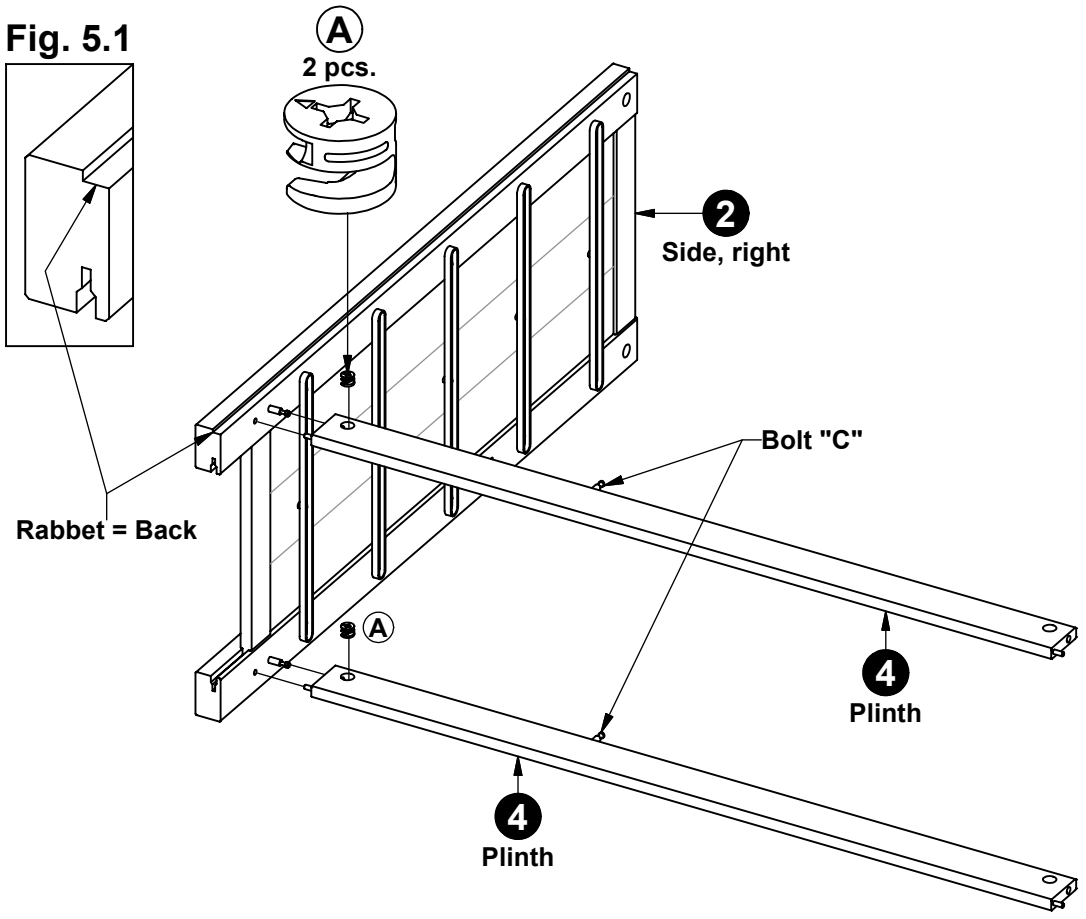

6. Assembling the left hand side to the plinths.

Press the side "1" onto the two plinths "4".

See page 4 "Function of the cam & bolt".

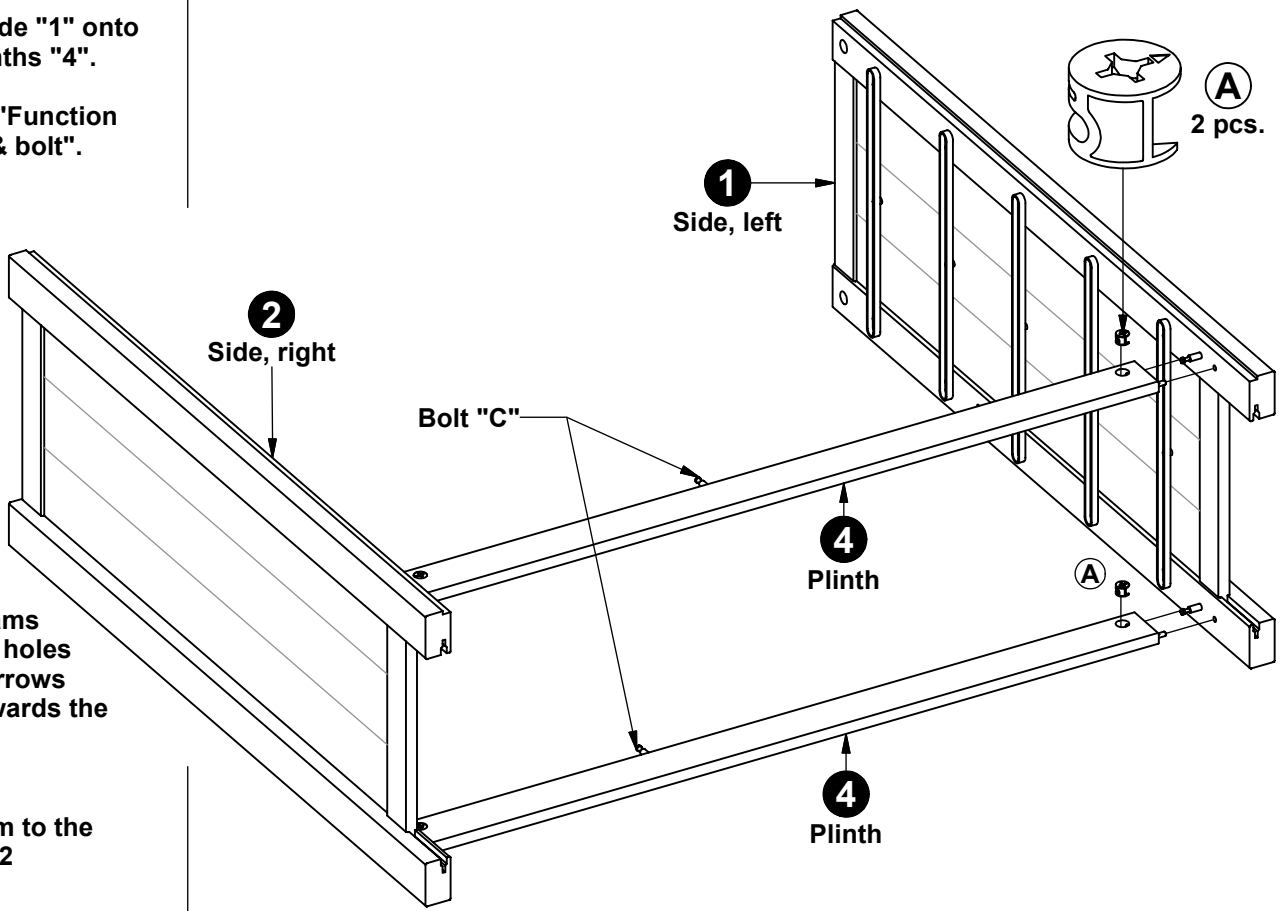


Place the cams "A" into the holes indicated, arrows pointing towards the side / bolt.

Tighten:
Turn the cam to the right. Fig. 5.2

7. Inserting the dowels to the divider.

Knock the dowels "F" into the holes indicated on the divider "5".

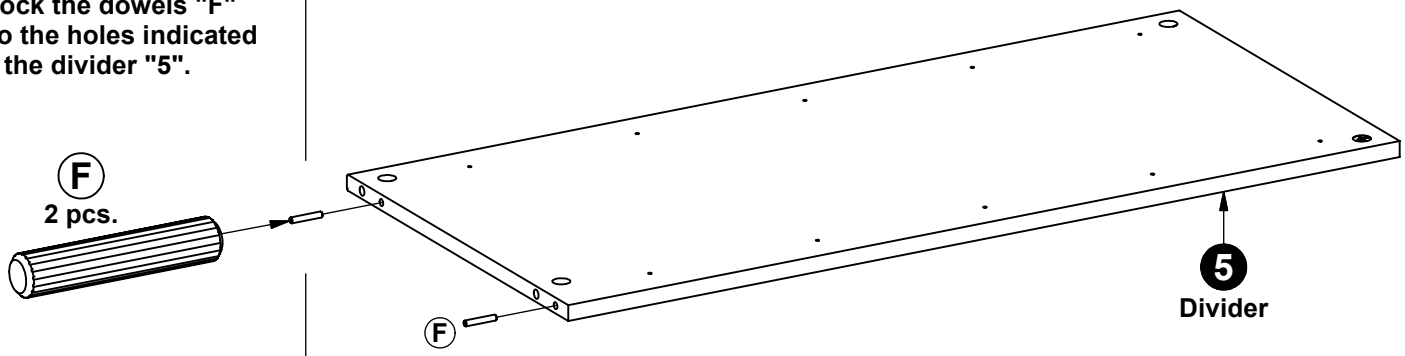


8. Mounting the plastic runners to the divider - part 1.

Fix the plastic runners "K" to the left hand side of the divider "5", using screws "D".

First use the two holes in the plastic runners nearest to the ends.

The holes mentioned above should both fit the holes in the divider.

See fig. 8.1

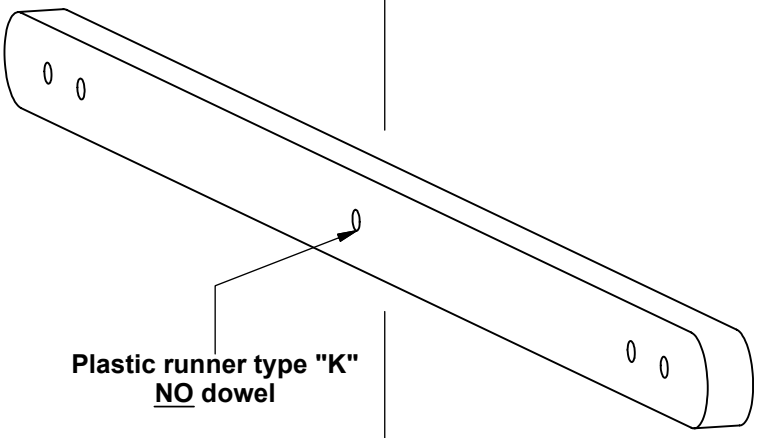


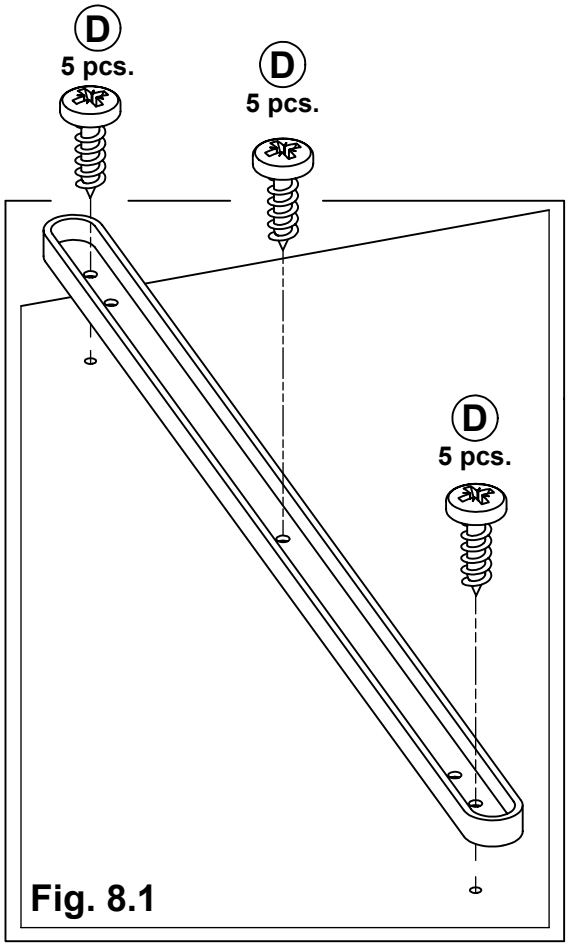


Fig. 8.1

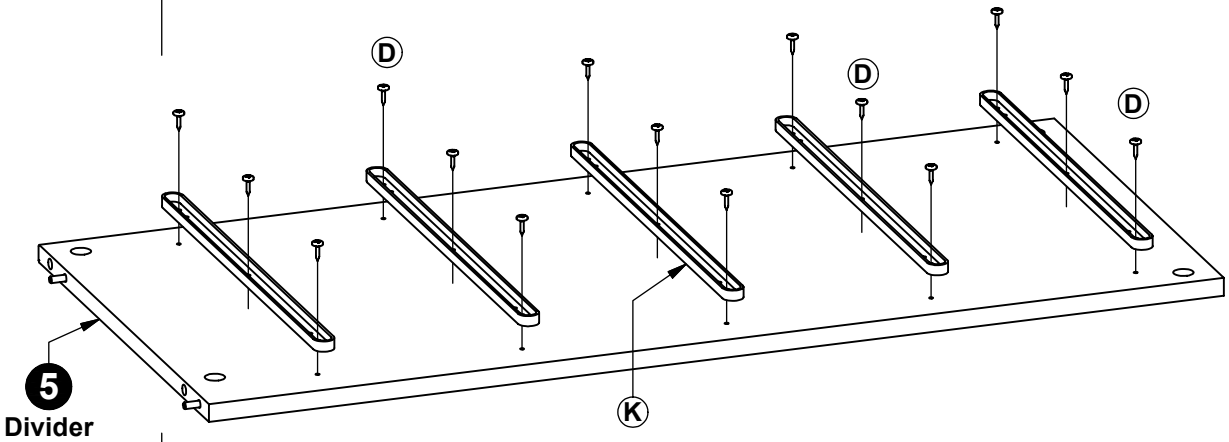

9. Mounting the plastic runners to the divider - part 2.


Turn around the divider.


Fix the plastic runners "K" to the right hand side.

First use the two holes in the plastic runners placed second from the ends.

The holes mentioned above should both fit the holes in the divider.


See fig. 9.1

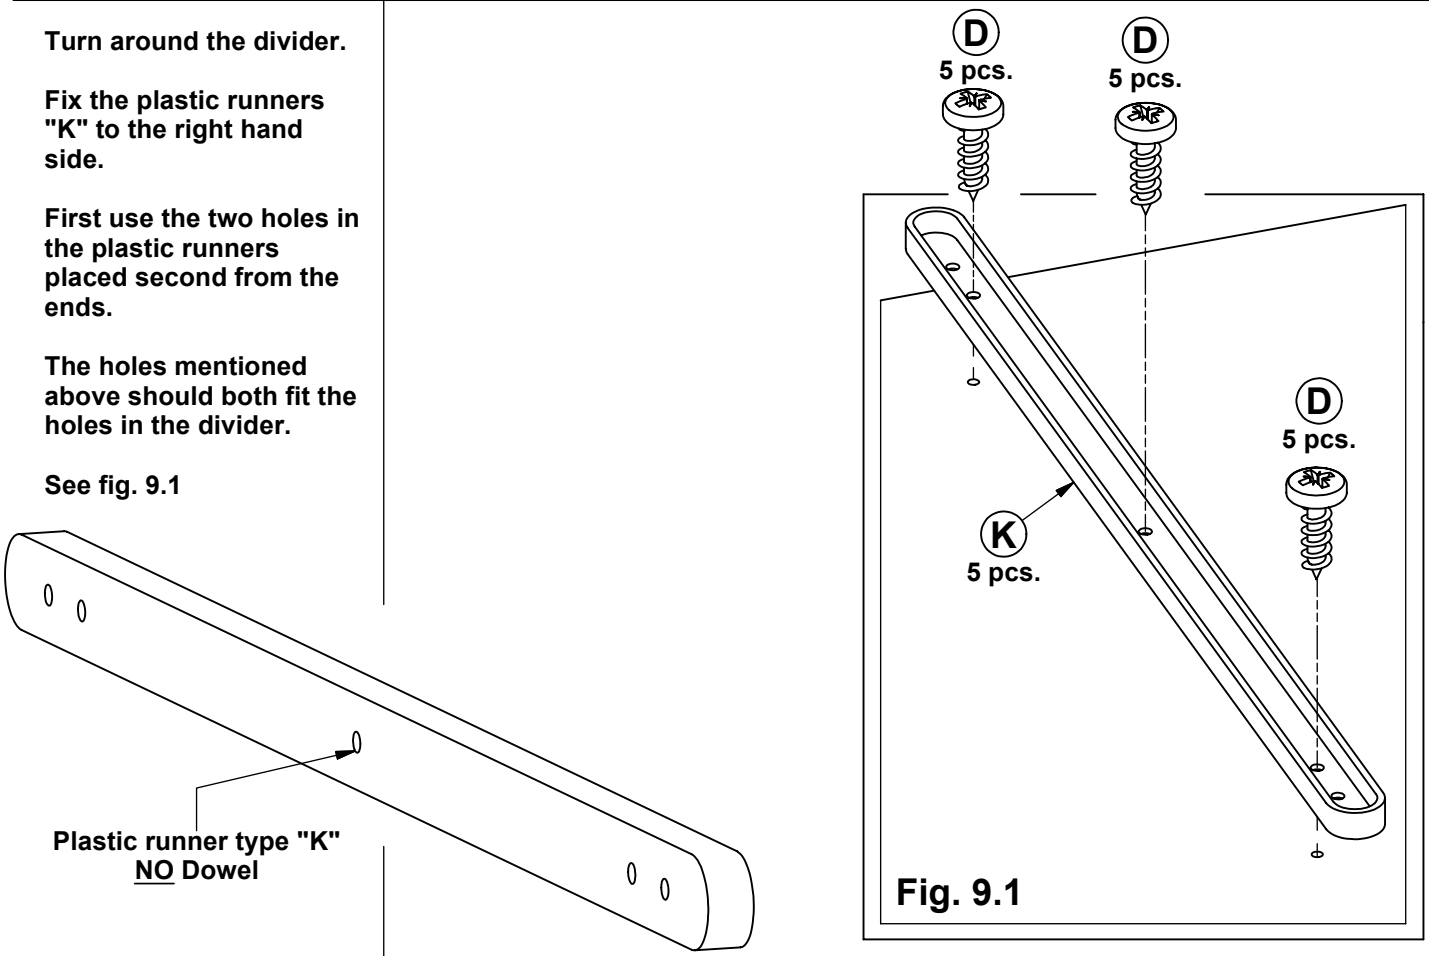

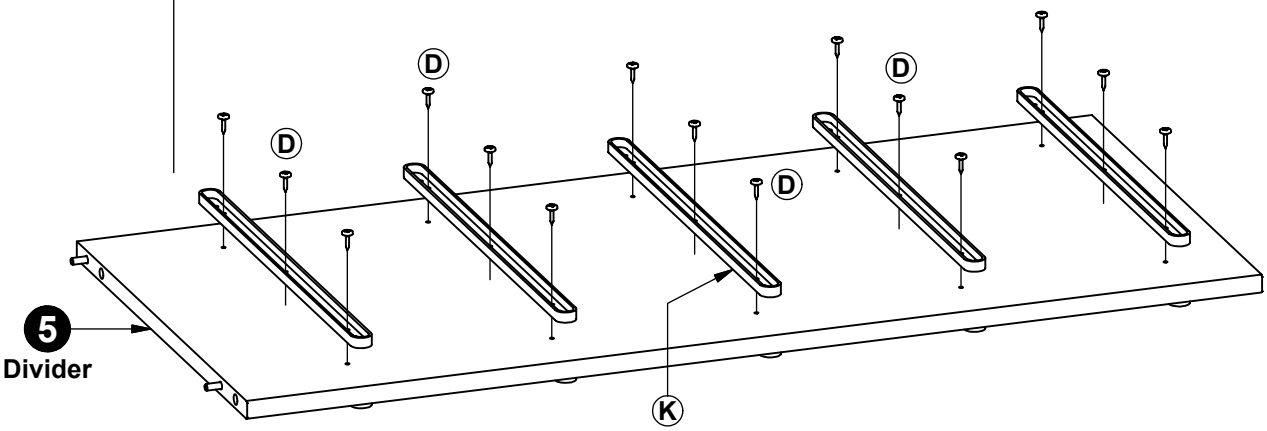

10. Mounting the bolts to the top.

Screw the bolts "C" into the holes indicated on the top "3".

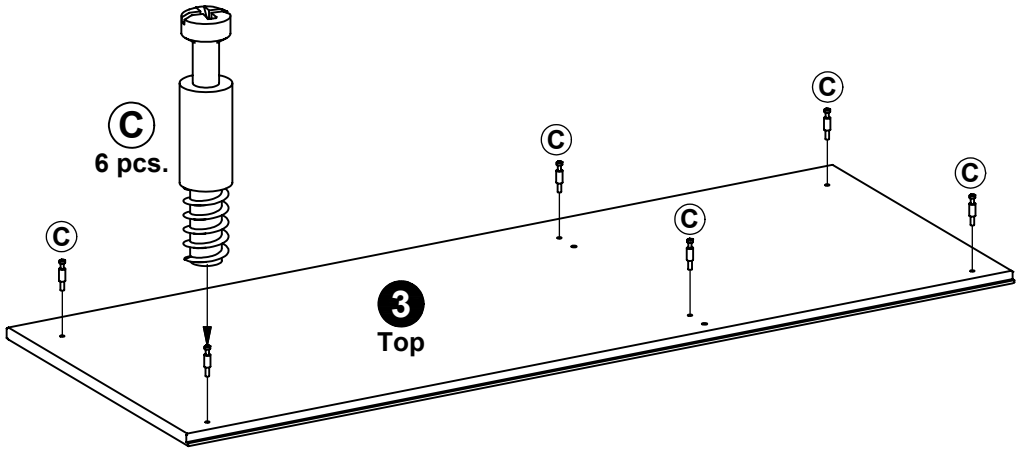

11. Assembling the top to the divider.


Press the divider "5" onto the top "3".

See page 4 "Function of the cam & bolt".

Place the cams "A" into the holes indicated, arrows pointing towards the top / bolts.

Tighten:
Turn the cams to the right. Fig. 11.1

Fig. 11.1

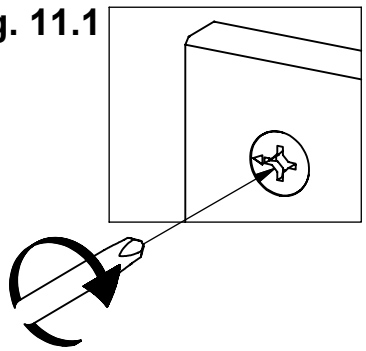


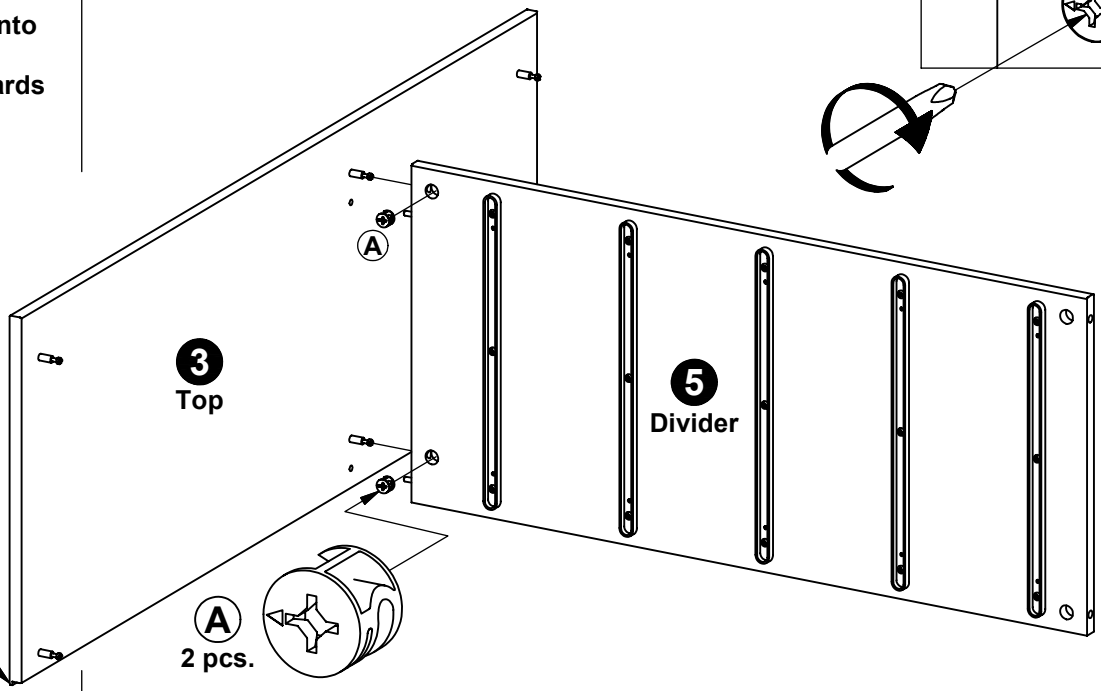



Fig. 11.2

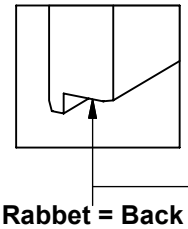

12. Assembling the top and the divider to the sides.

Lower the top "3" and the divider "4" onto the sides "1" & "2" and the plinths "4".

See page 4 "Function of the cam & bolt".

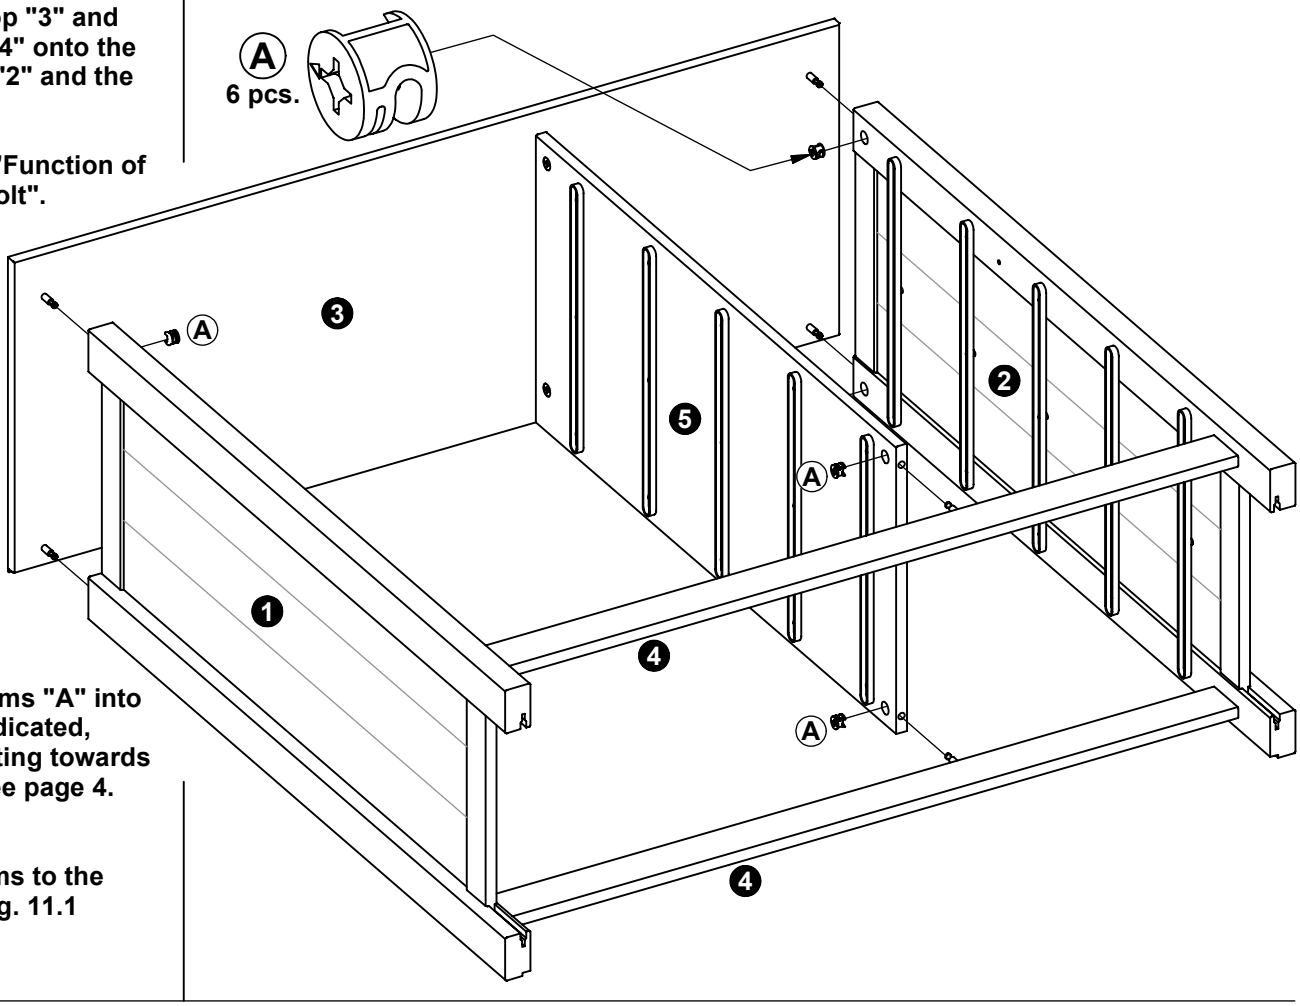

Place the cams "A" into the holes indicated, arrows pointing towards the bolts. See page 4.

Tighten:
Turn the cams to the right. See Fig. 11.1

13. Nailing the back to the top.

Place the back into the rabbet of the top "3" and the side "2". See fig. 13.1

Ensure that there is NO GAP between the right hand side "3" and the back "6" , NOR between the top and the back.

Fasten the back with nails "G" along the top. Use the nail guide "M" as shown. Fig. 13.2

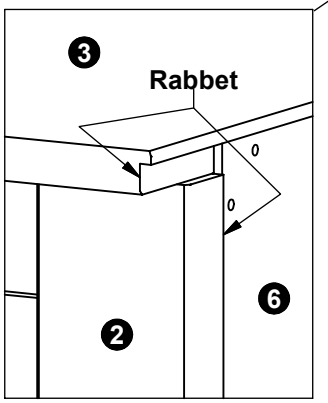
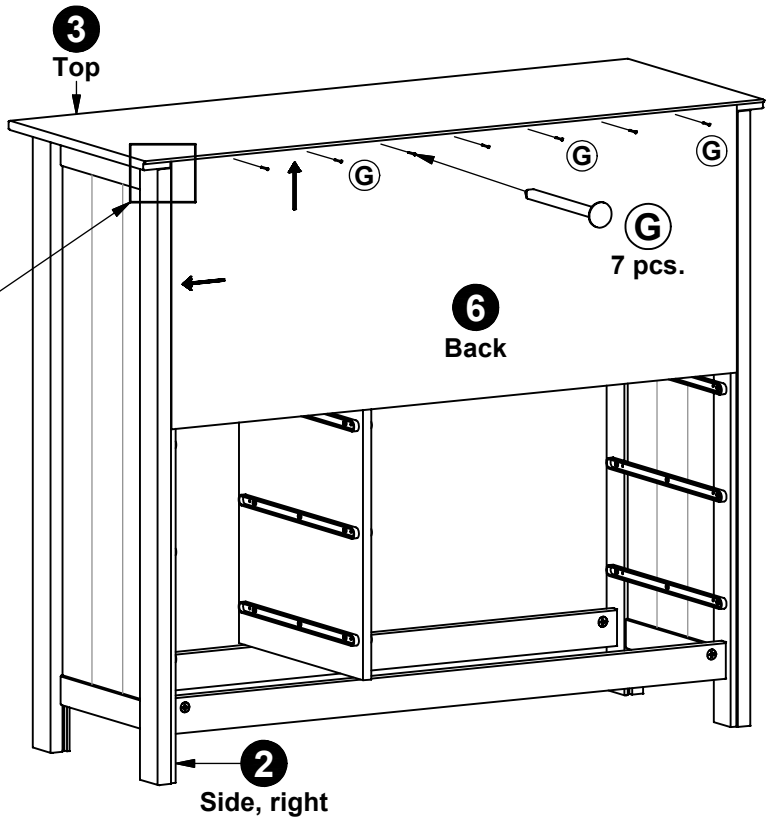


Fig. 13.1



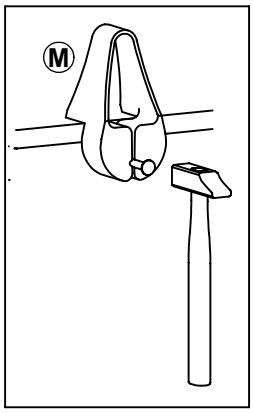


Fig. 13.2

14. Nailing the back to the sides.

The angle between the top and the side must be 90 degrees. Fig. 14.1

To accomplish this, ensure that there is NO GAP between the right hand side "2" and the back "6".

Fasten the back with nails "G" along the sides. Use the nail guide as shown. Fig. 14.2

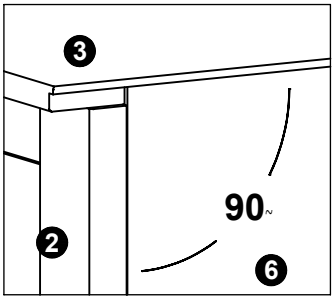


Fig. 14.1


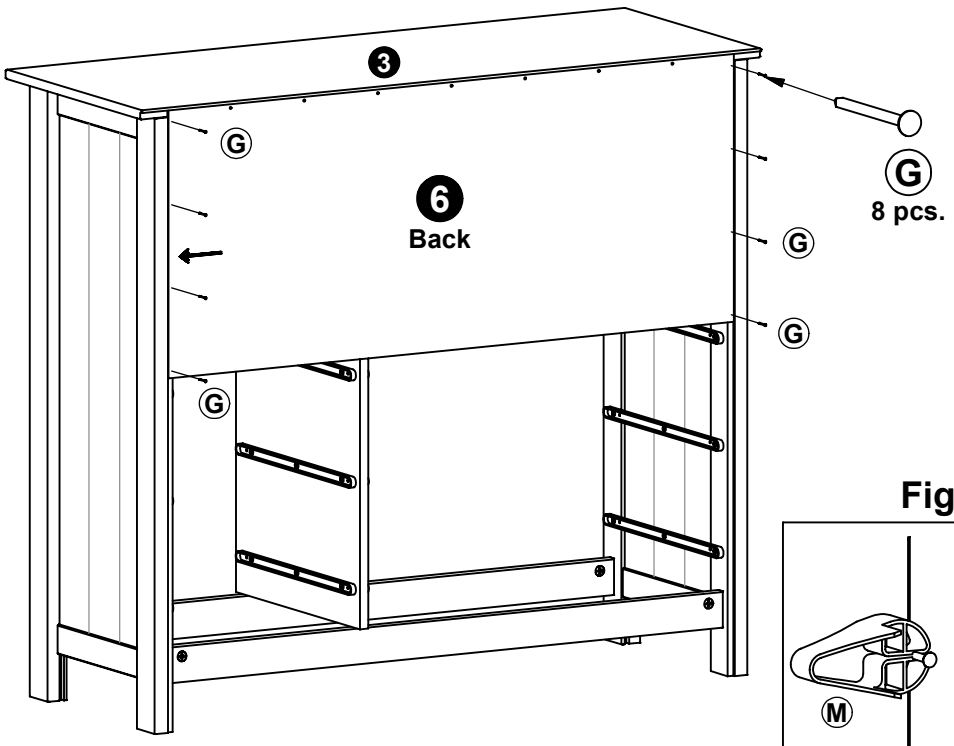


Fig. 14.2

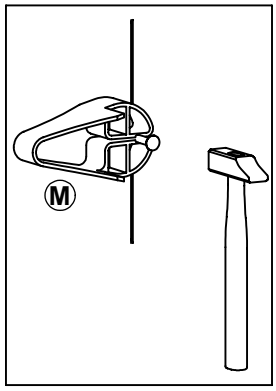

15. Adding the lower back and the joining strip.

Place the joining strip "L" in between the upper and lower backs "6".

See fig. 15.1

Fasten the back with nails "G" along the sides. Use the nail guide "M" .

See page 11, fig. 14.2


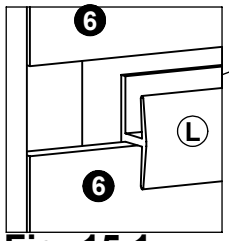


Fig. 15.1

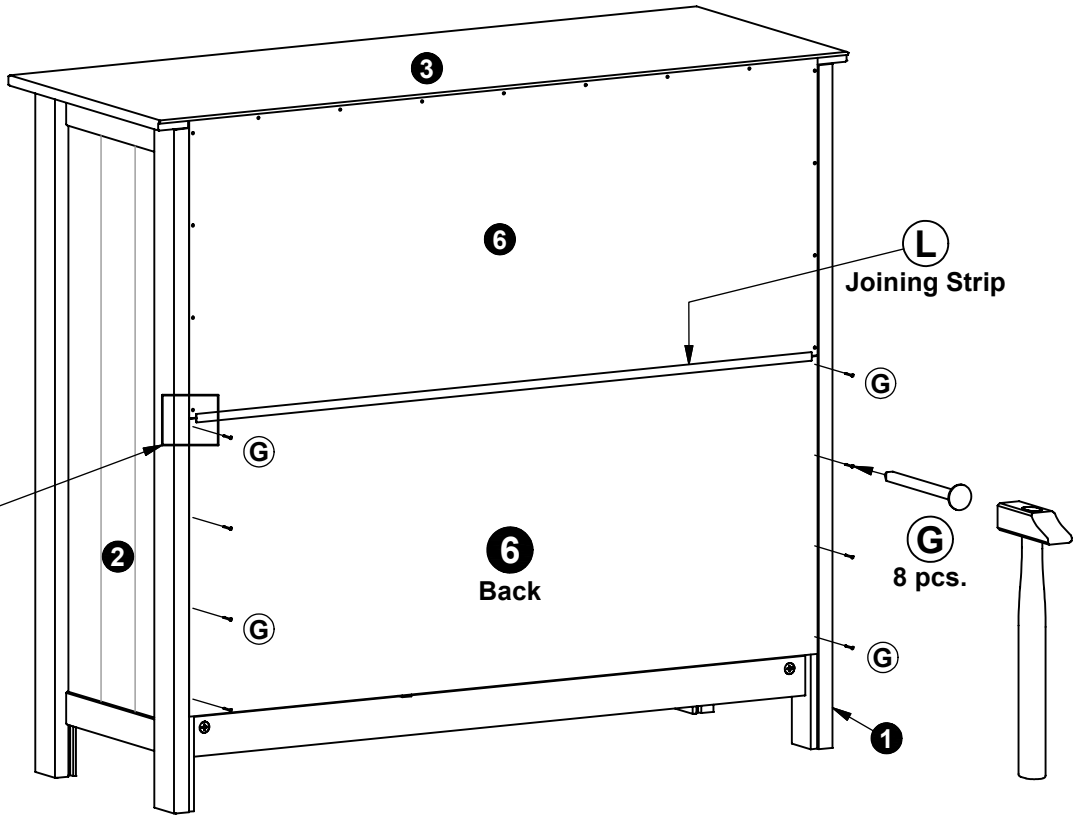

16. Mounting the drawer sides to the drawer back.

Fix the drawer sides "11" and "12" to the drawer back "9" using screws "E".

The grooves of the drawer sides and back should be turned exactly as shown. See fig. 16.1.


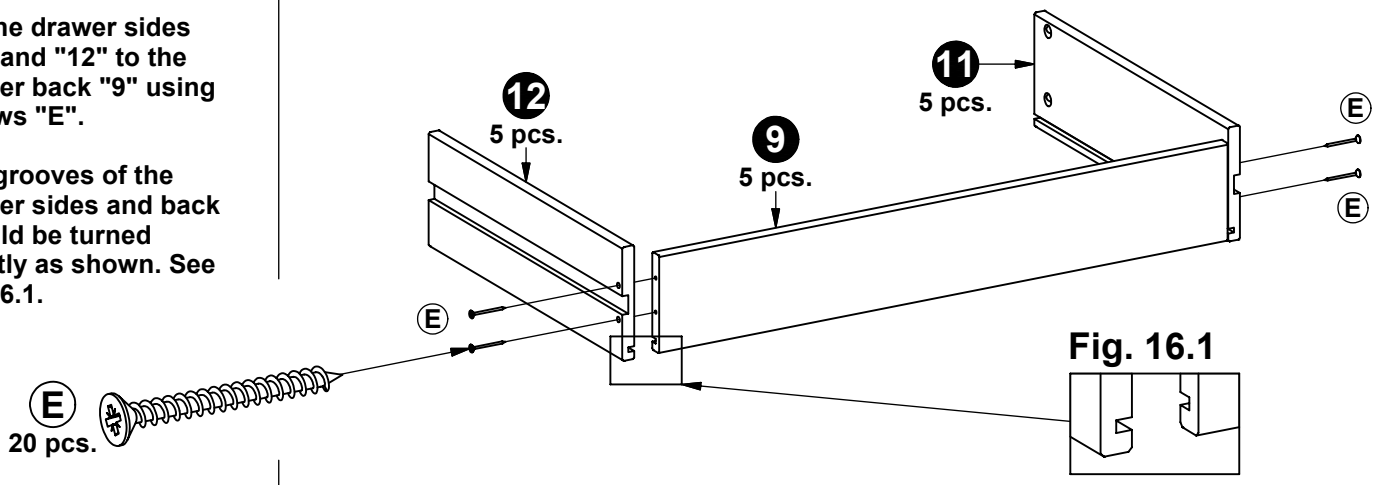


Fig. 16.1


17. Sliding the drawer bottom into the drawer frame.

Slide the drawer bottom "13" into the grooves of the drawer frame.

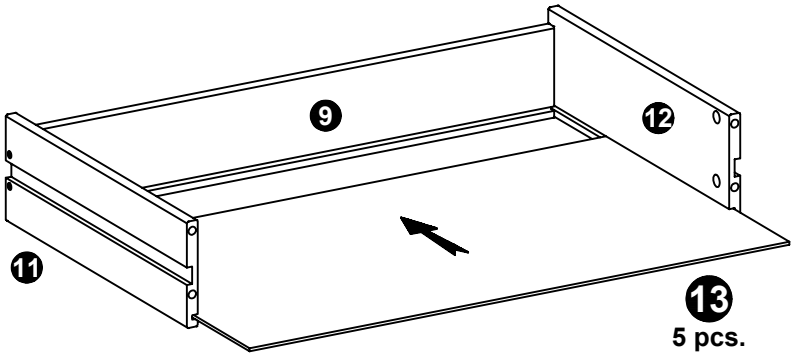

18. Mounting the bolts to the drawer front.

Screw the bolts "C" into the holes indicated on the drawer front "7".

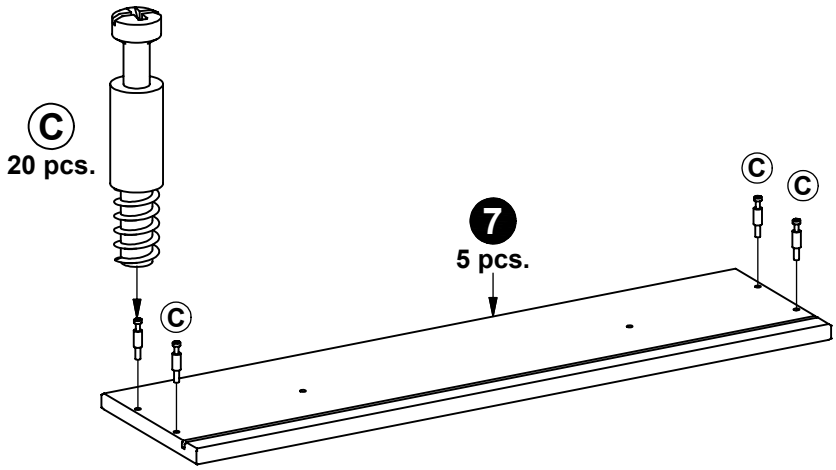

19. Adding the drawer front to the drawer frame.


Press the drawer front "7" onto the drawer sides "11" and "12".


Place the cams "B" into the holes indicated, arrows pointing towards the drawer front / bolts.

Tighten:
Turn the cam to the right. See fig. 19.1

"Function of the cams" see page 4.


Fig. 19.1

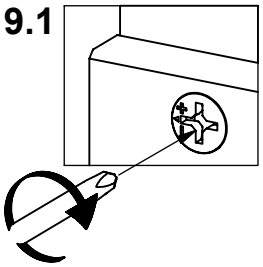

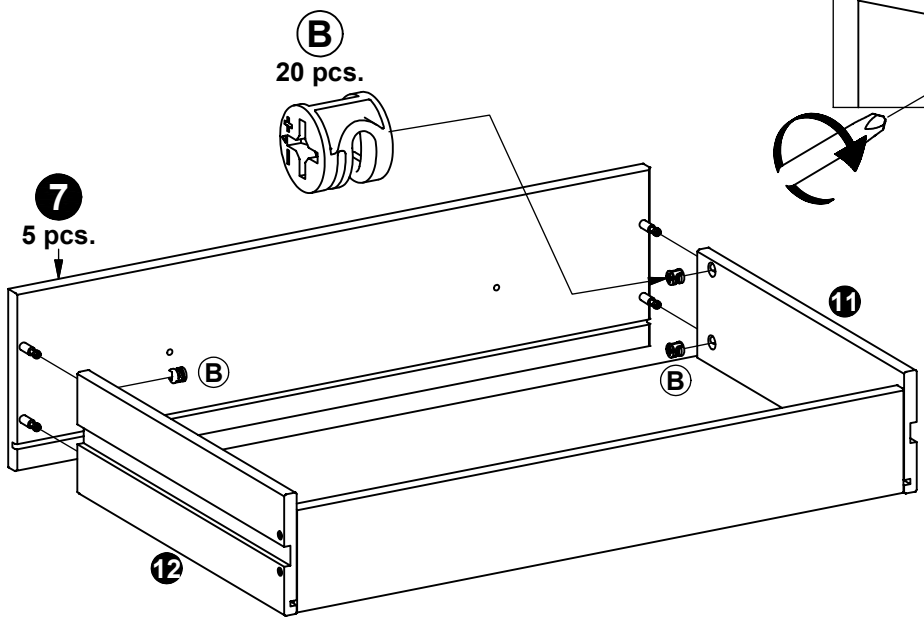

20. Mounting the knobs to the drawer front.

Fix the knobs "J" to the drawer front using screws "E".

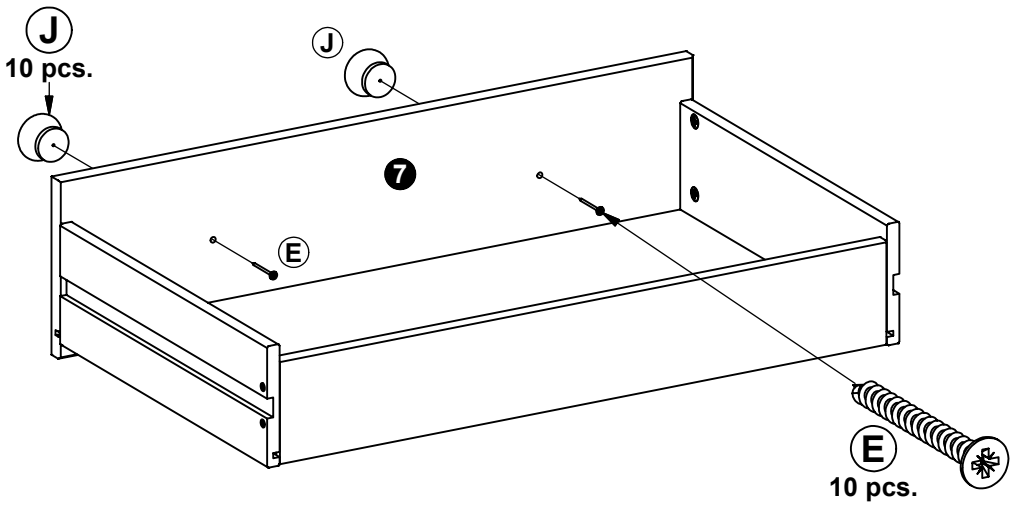

21. Mounting the drawer sides to the drawer back.

Fix the drawer sides "11" and "12" to the drawer back "10" using screws "E".

The grooves of the drawer sides and back should be turned exactly as shown. See fig. 21.1.


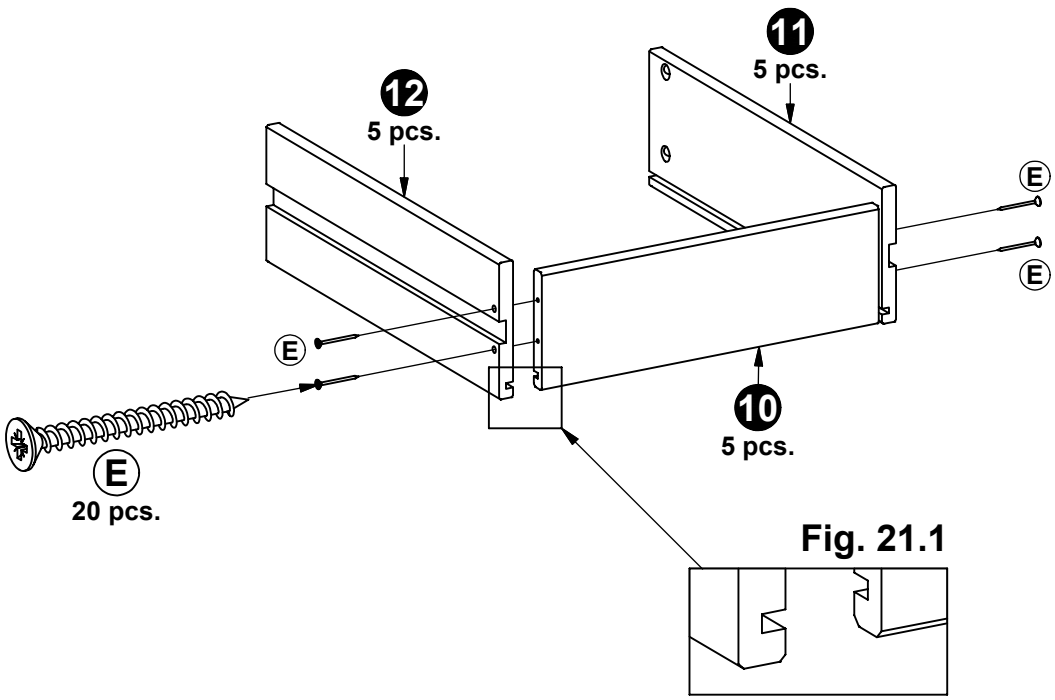


Fig. 21.1


22. Sliding the drawer bottom into the drawer frame.

Slide the drawer bottom "14" into the grooves of the the drawer frame.

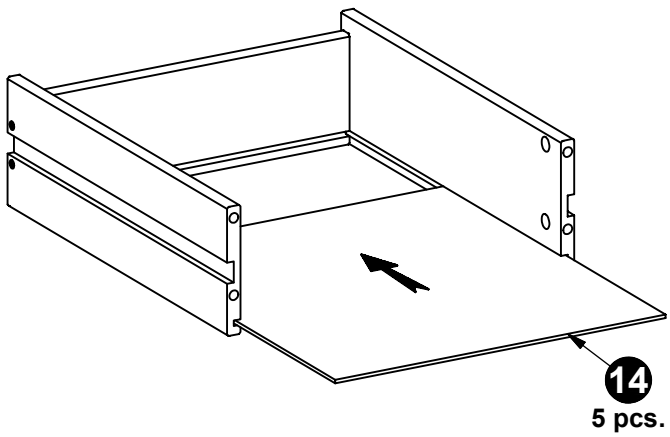

23. Mounting the bolts to the drawer front.

Screw the bolts "C" into the holes indicated on the drawer front "8".

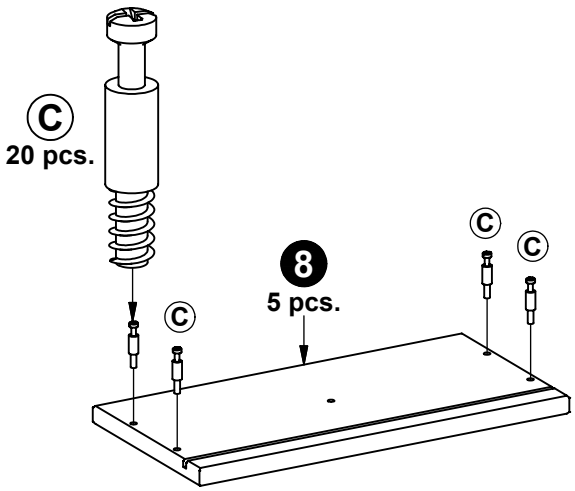


24. Adding the drawer front to the drawer frame.

Press the drawer front "8" onto the drawer sides "11" and "12".

Place the cams "B" into the holes indicated, arrows pointing towards the bolts.


<u>Tighten:</u>
Turn the cam to the right.

"Function of cam & bolt" see page 4.

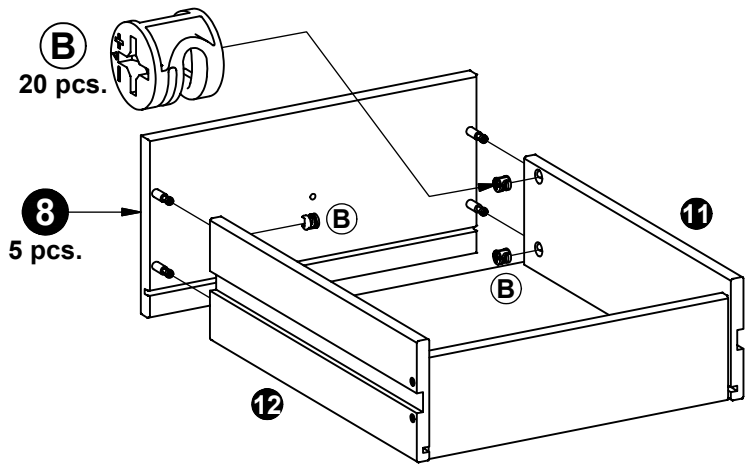


25. Mounting the knobs to the drawer front.

Fix the knobs "J" to the drawer front using screws "E".

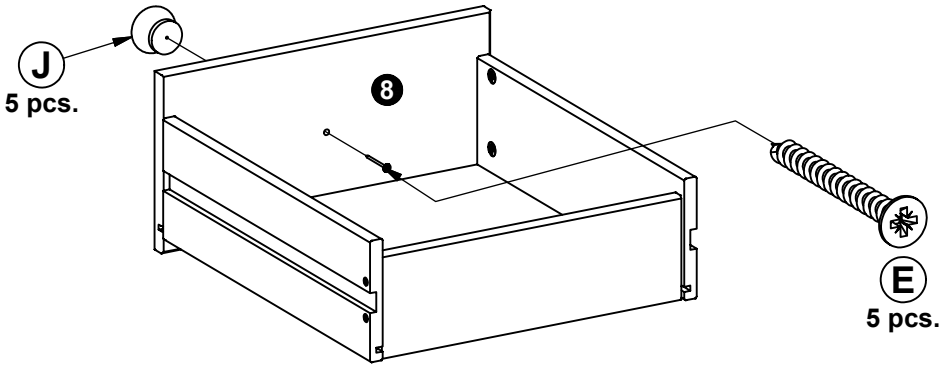

26. Adding the drawers to the carcass.

Slide the drawers onto the plastic runners.

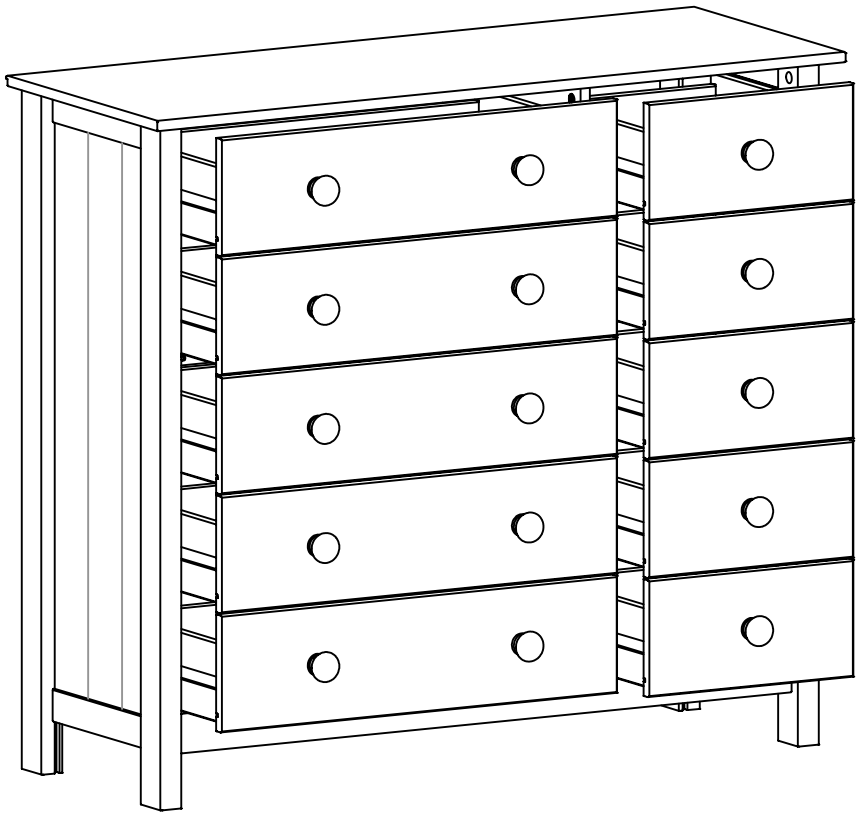

Dear Customer.

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.


Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.












Scandinavia

5+5 DRW. CHEST

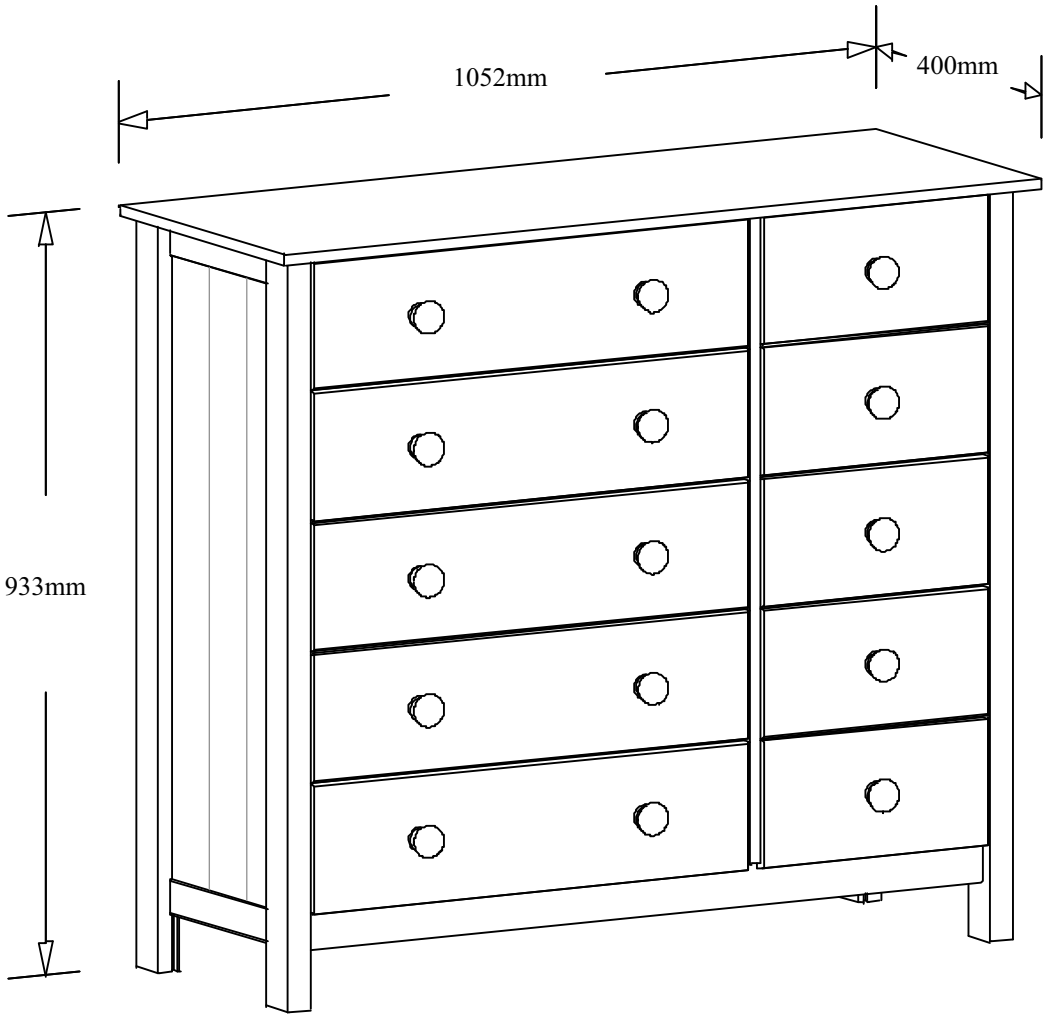

Please sort out all parts before you begin to assemble the item.
This to make sure you always use the correct part.




Fittings contained in the box.

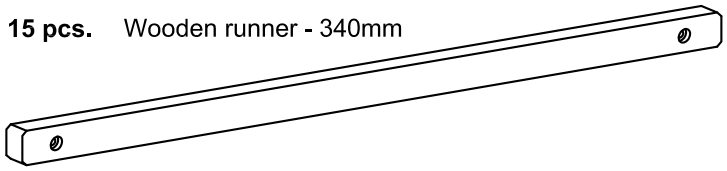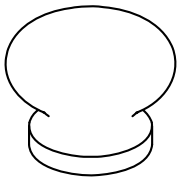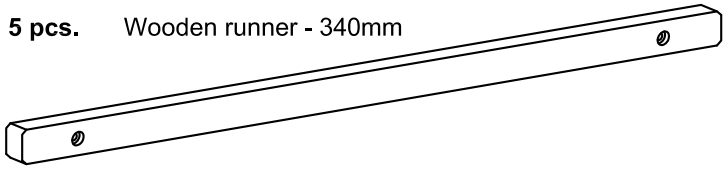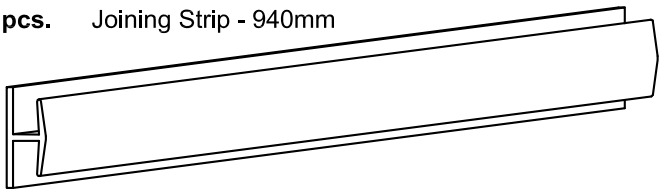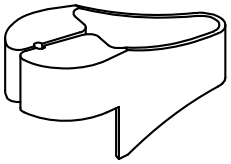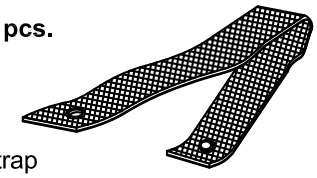A **12 pcs.** Cam - ø15 x 12mm 	**B** **40 pcs.** Cam - ø12 x 10,5mm 	**C** **52 pcs.** Bolt - ø6,5 x 24/11mm 
D **20 pcs.** Screw - ø4 x 20mm 	**E** **55 pcs.** Screw - ø3,5 x 35mm 	**F** **6 pcs.** Dowel - ø6 x 30mm 
G **30 pcs.** Nail - 1,2 x 20mm 	**H** **15 pcs.** Wooden runner - 340mm 	
J **15 pcs.** Knob ø40 x 30mm 	**K** **5 pcs.** Wooden runner - 340mm 	
L **1 pcs.** Joining Strip - 940mm 	**M** **1 pcs.** Nail guide 	
N **20 pcs.** Screw - ø4 x 13mm 	**O** **1 pcs.** Screw - ø4 x 20mm 	**P** **1 pcs.** Screw - ø3,5 x 12mm 
Q **1 pcs.** Wall strap 	**R** **1 pcs.** Wall plug 	**S** **2 pcs.** Washer 


Fittings A, B, C, D, E, F, G, J, N, O & P are shown in their actual dimensions.

Hazard Warning !
Keep small components out of the reach of children.


Tools needed.

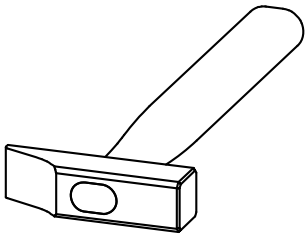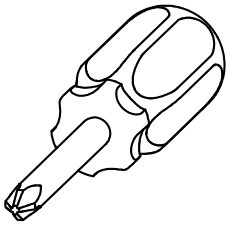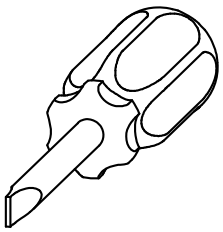
Wooden parts contained in the box.

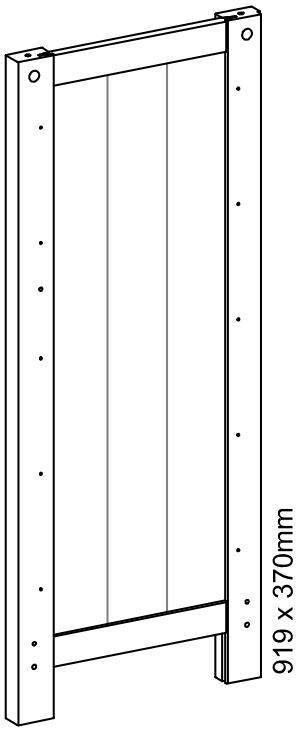

1 Side, left
1 pcs.

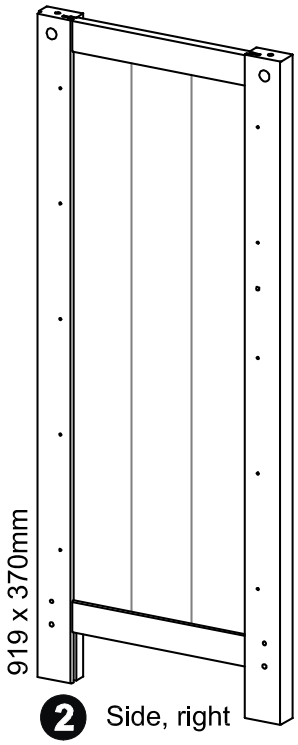


2 Side, right
1 pcs.

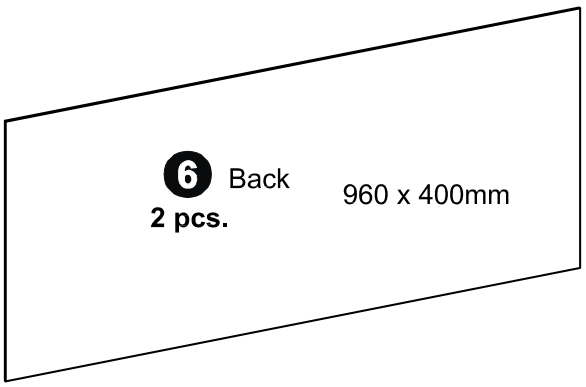


6 Back
2 pcs.
960 x 400mm


7 Drawer front, large
5 pcs.

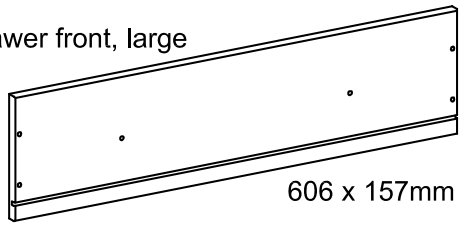


8 Drawer front, small
5 pcs.

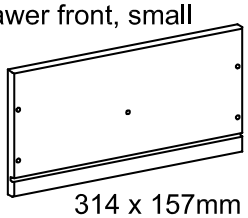


3 Top
1 pcs.

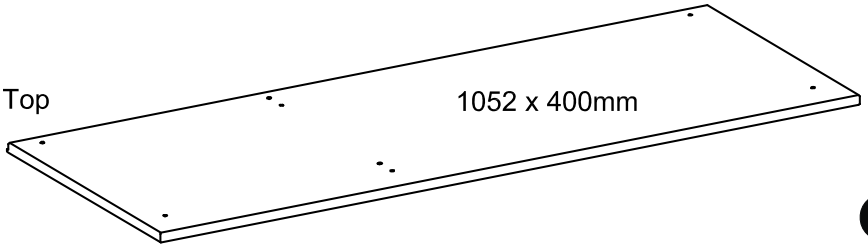


9 Drawer back, large
5 pcs.

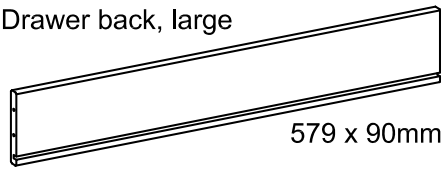


4 Plinth
2 pcs.

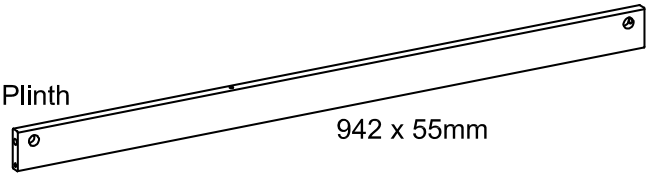


10 Drawer back, small
5 pcs.

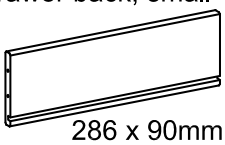


5 Divider
1 pcs.

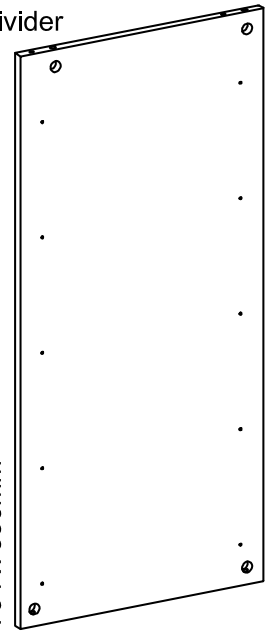


11 Drawer side, left
10 pcs.

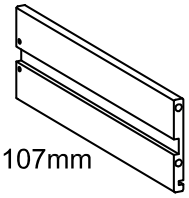


12 Drawer side, right
10 pcs.

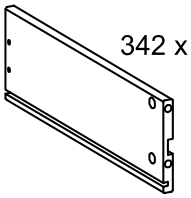

13 Drawer bottom, large
5 pcs.

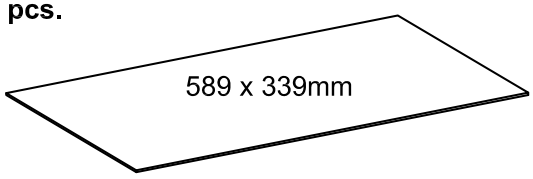

14 Drawer bottom, small
5 pcs.

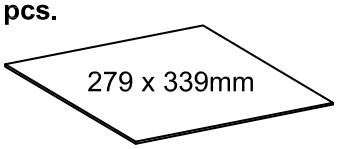

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: ⚠ Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 “General Purpose” wall plug

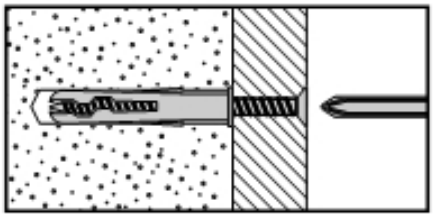


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 “Plasterboard” wall plug

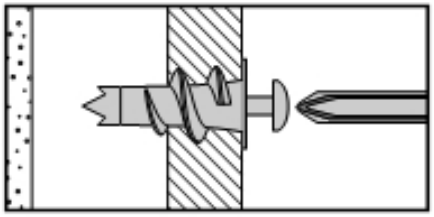


For use when attaching light loads on to plasterboard partitions.

No.3 “Cavity Fixing” wall plug

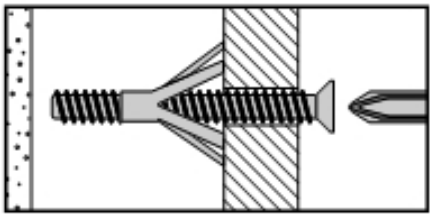


For use with plasterboard partitions or hollow wooden doors.

No.4 “Cavity Fixing-Heavy Duty” wall plug

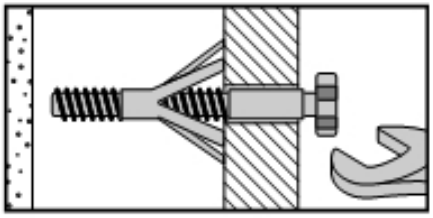


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 “Hammer Fixing” wall plug

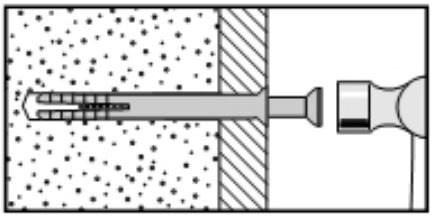

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 “Shield Anchor” wall plug Heavy loads

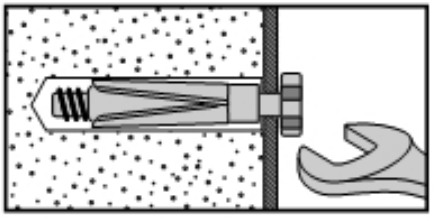


For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.


Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Key diagram.

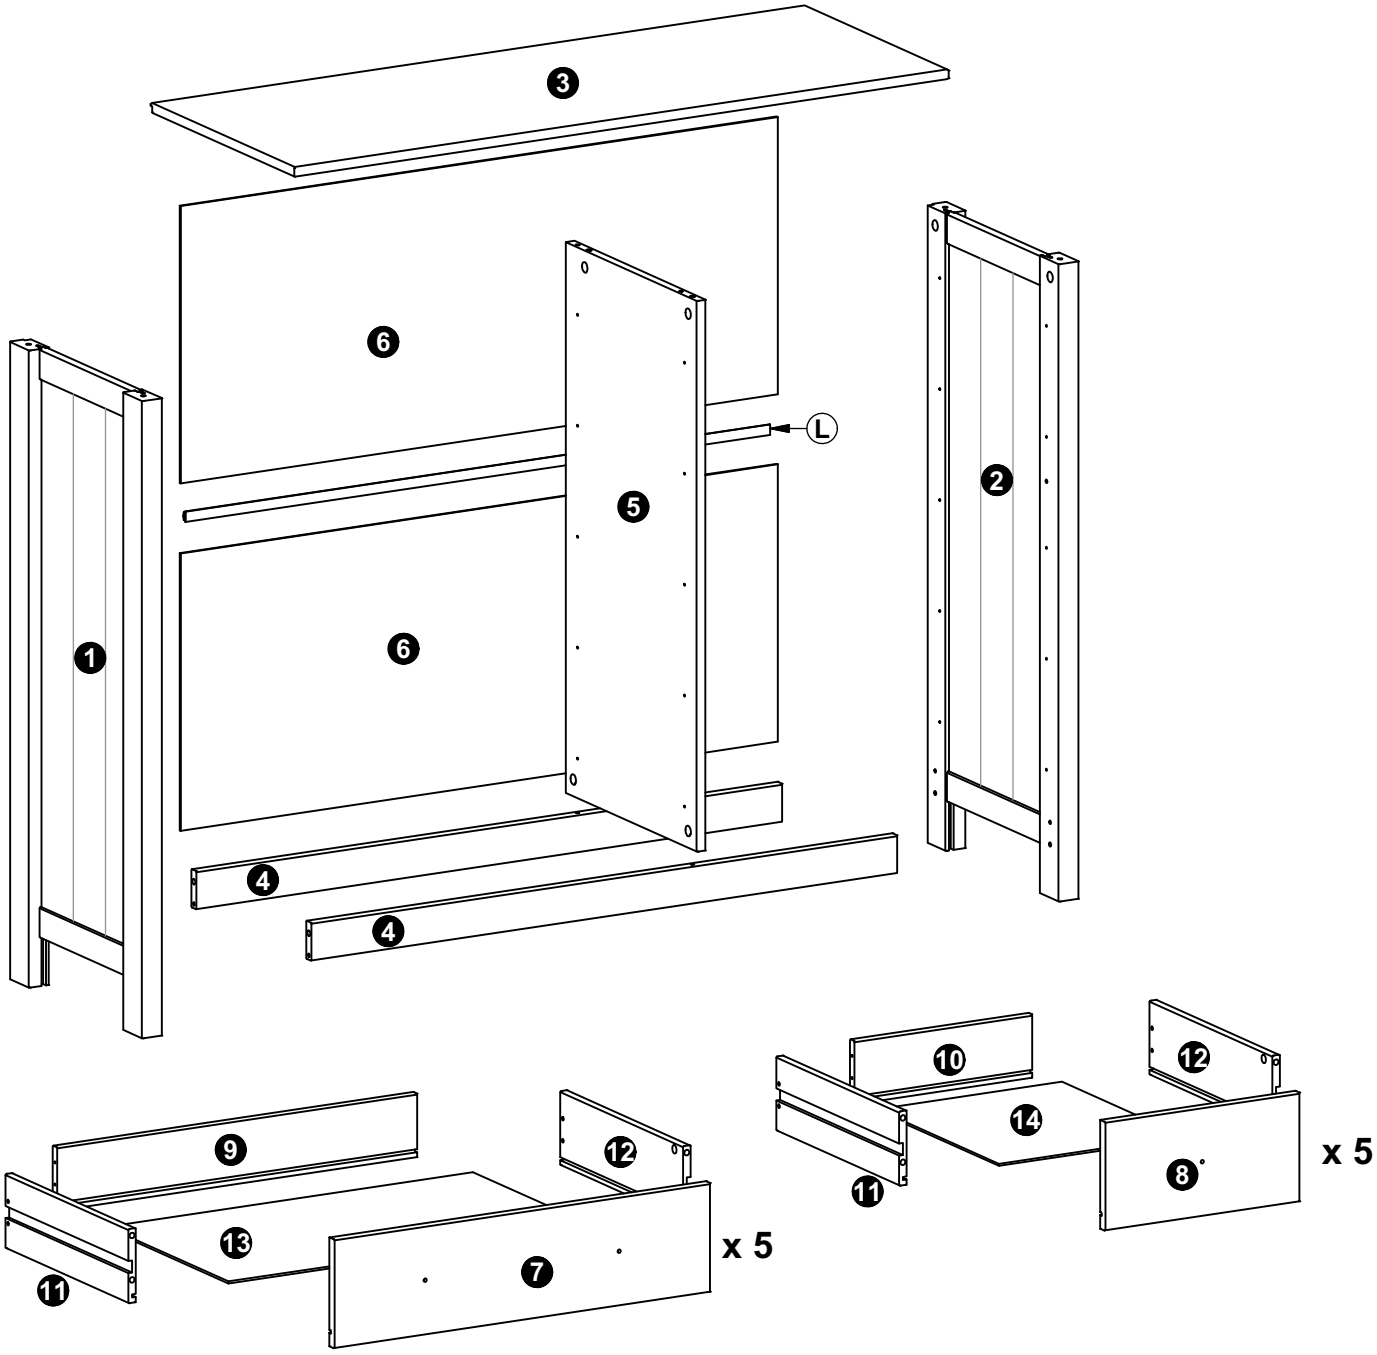


Function of cam & bolt.


Step 1:
Fix the bolt to the wooden panel.

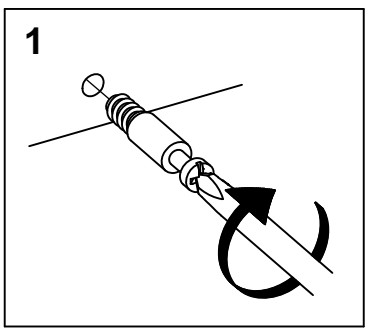


Step 2:
Push the wooden panel with the attached bolt onto the other wooden panel.

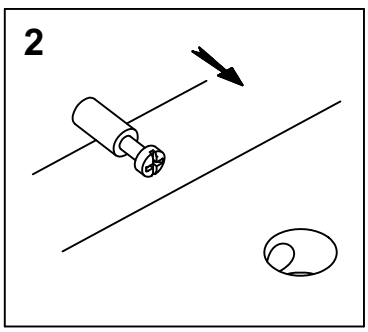

Step 3:
Place the cam into the hole, arrow pointing towards the bolt.

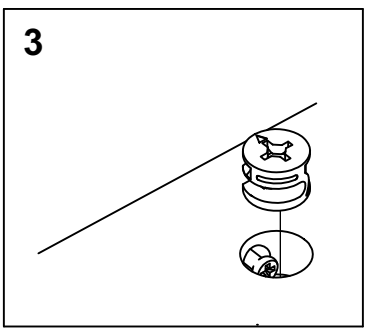


Step 4:
Tighten: Turn the cam to the right.

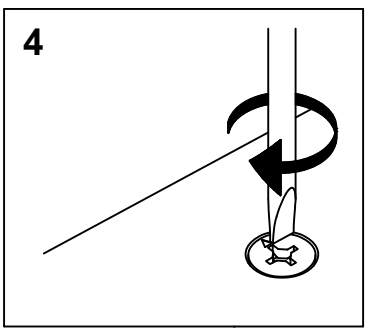


1. Inserting the dowels to the plinths.

Knock the dowels "F" into the holes indicated on both the plinths "4".

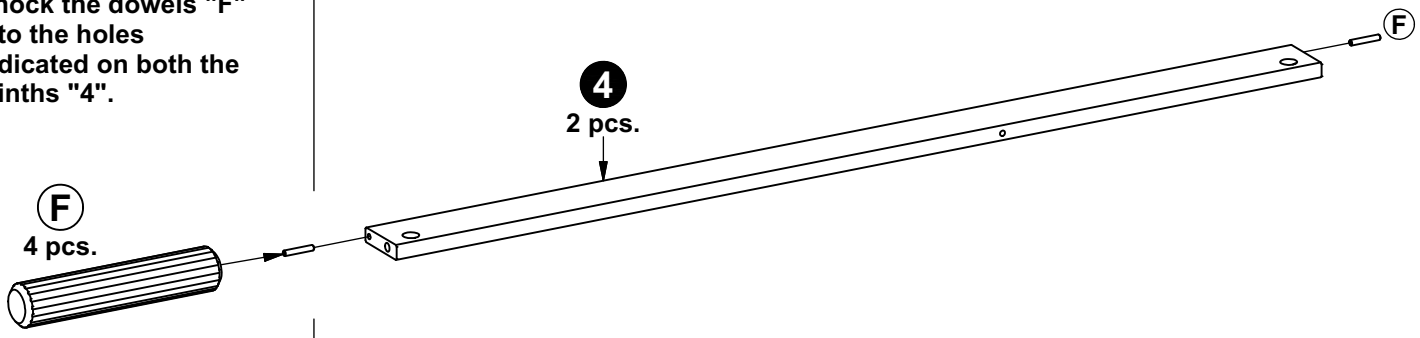


2. Mounting the bolts to the plinths.

Screw the bolts "C" into the hole indicated on both the plinths "4".

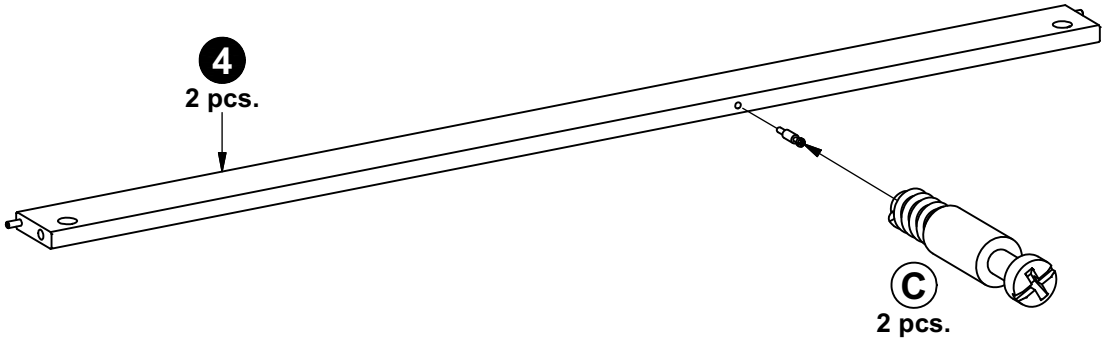

3. Mounting the bolts to the sides.


Screw the bolts "C" into the holes indicated on the sides "1" & "2".

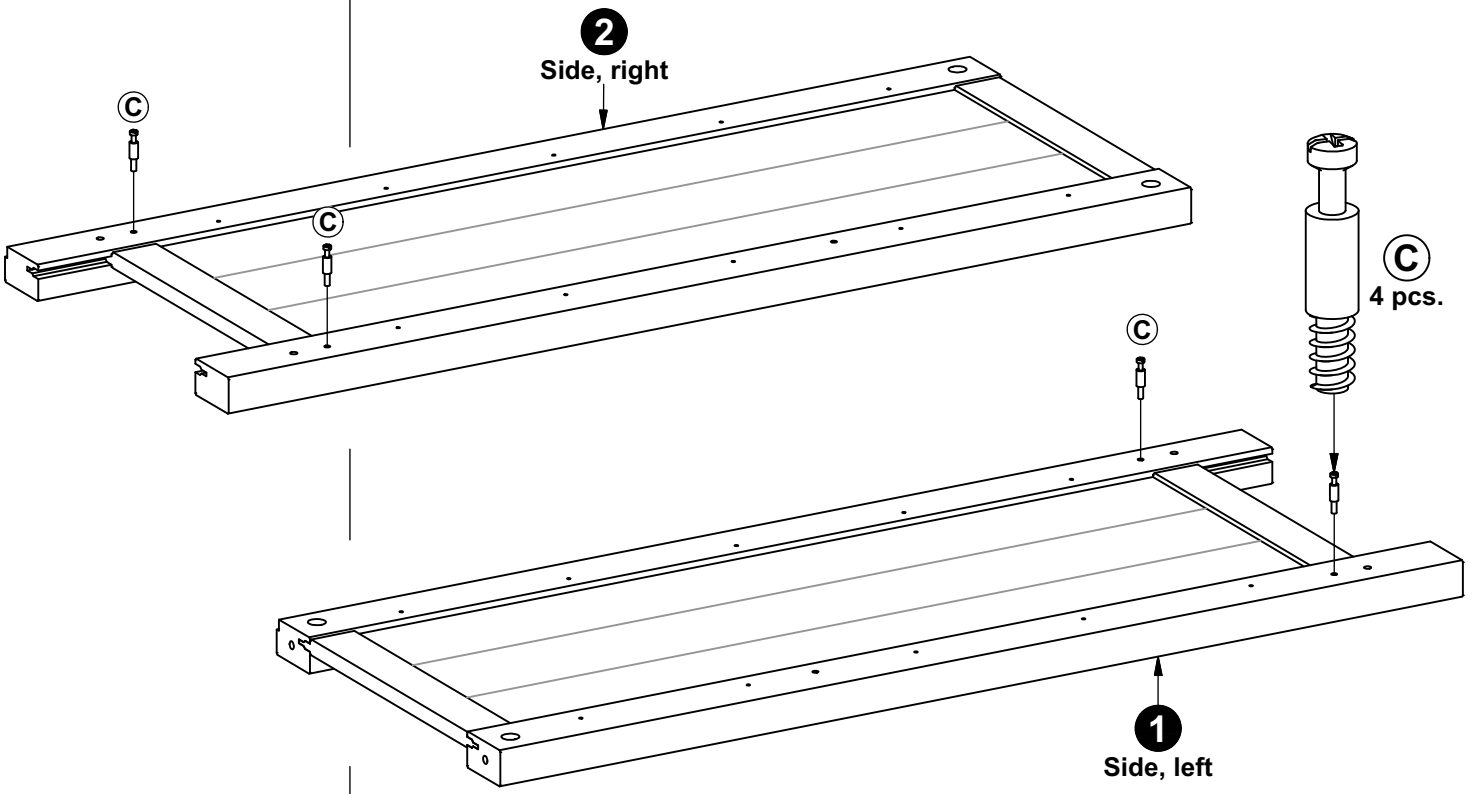

4. Mounting the wooden runners to the sides.

Fix the wood runners "H" to the sides "1" and "2", using screws "D" through the holes indicated.

See fig 4.1

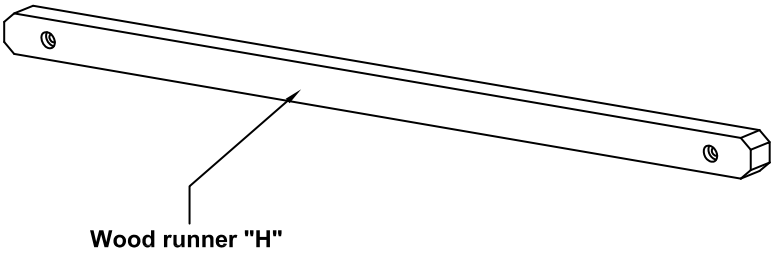


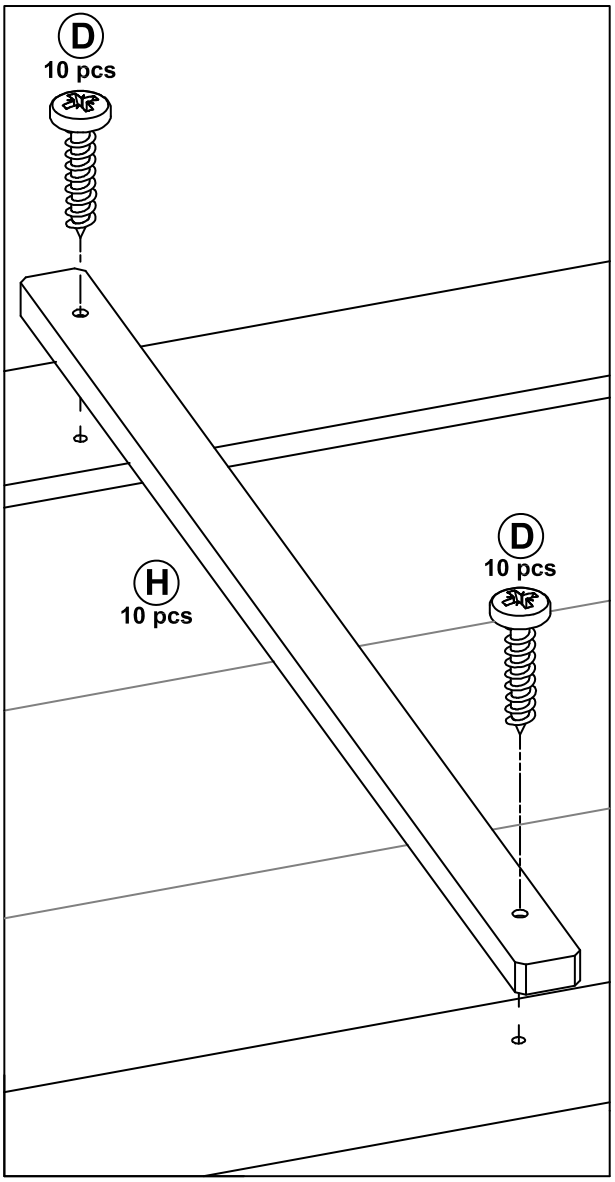


Fig. 4.1

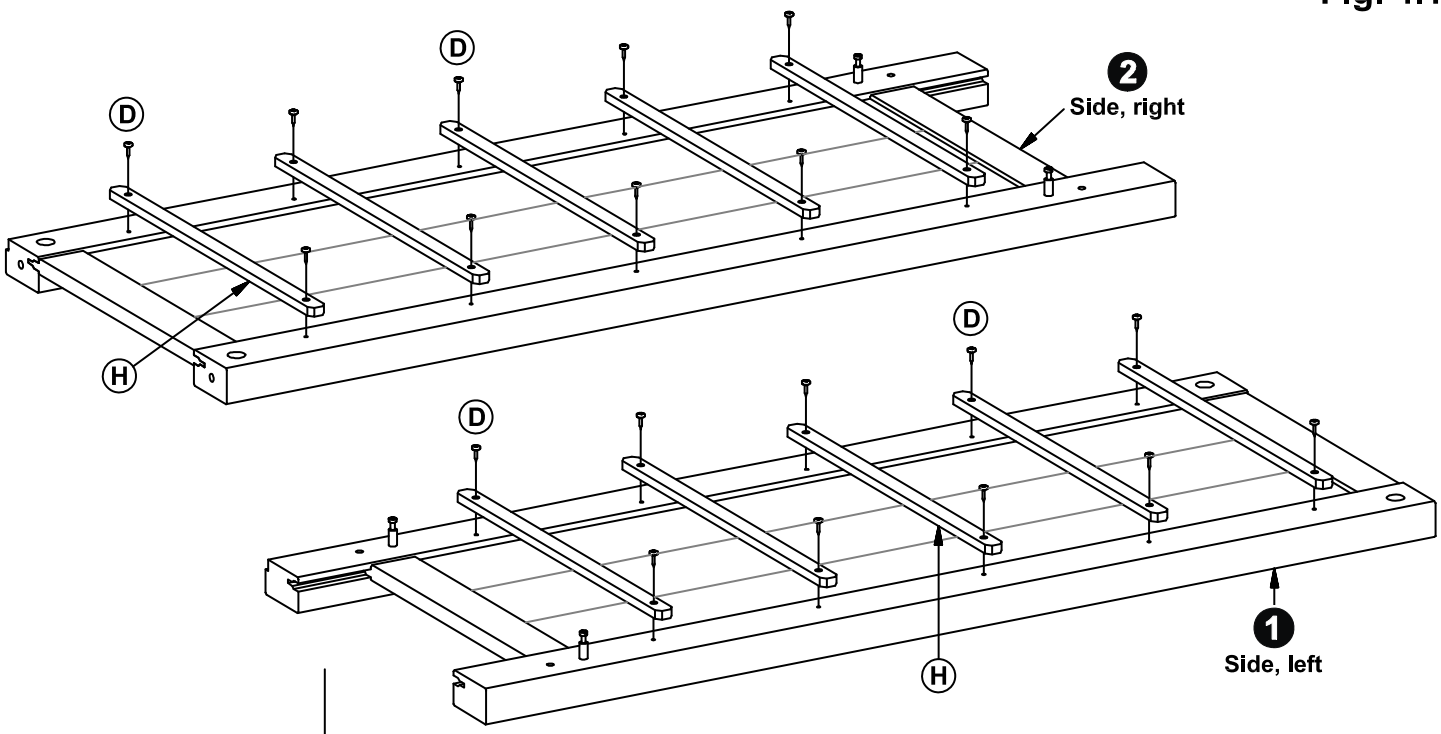

5. Adding the plinths to the right hand side.

Press the plinths "4" onto the side "2".

See page 5 "Function of cam and bolt".

Place the cams "A" into the holes indicated, arrows pointing towards the side / bolt.

<u>Tighten:</u>
Turn the cam to the right. Fig. 5.2

Fig. 5.2


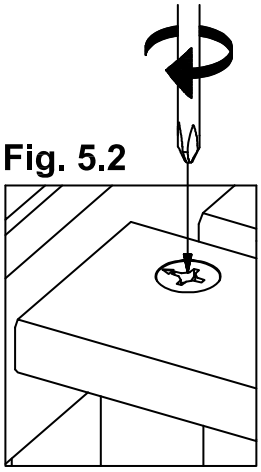



Fig. 5.1

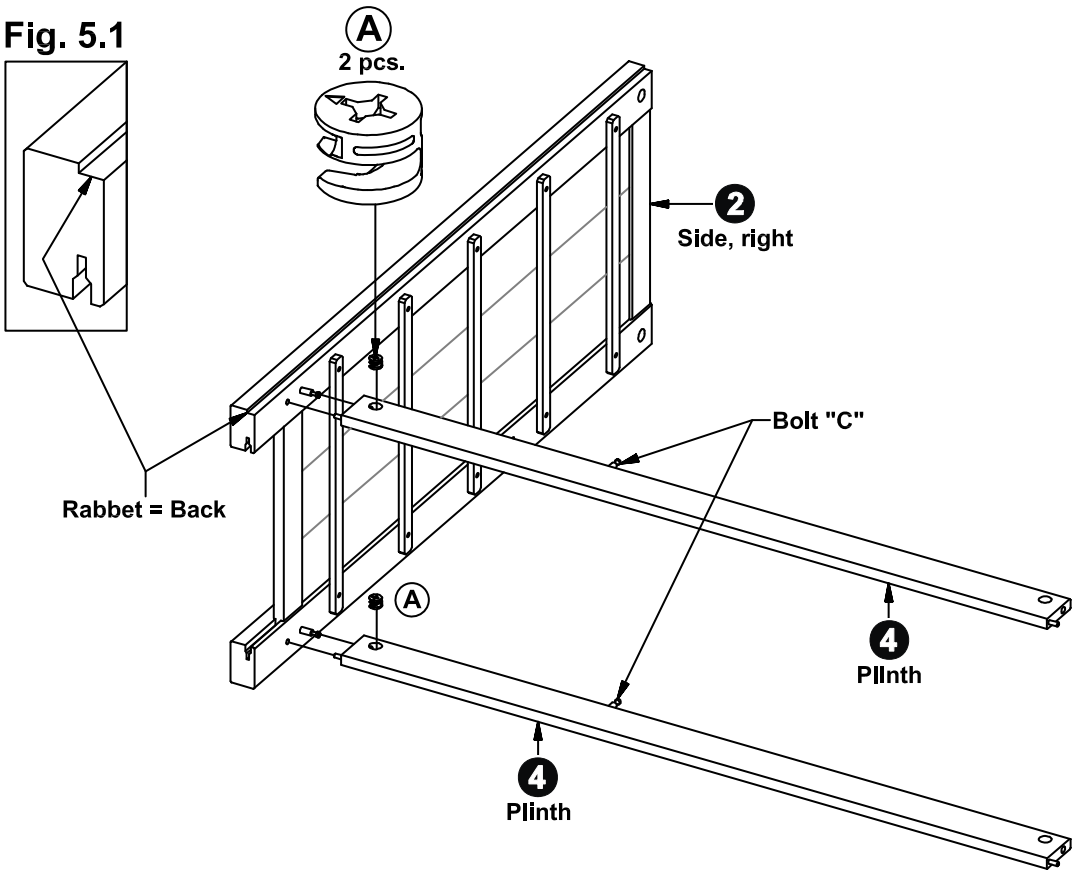

6. Assembling the left hand side to the plinths.

Press the side "1" onto the two plinths "4".

See page 5 "Function of cam and bolt".

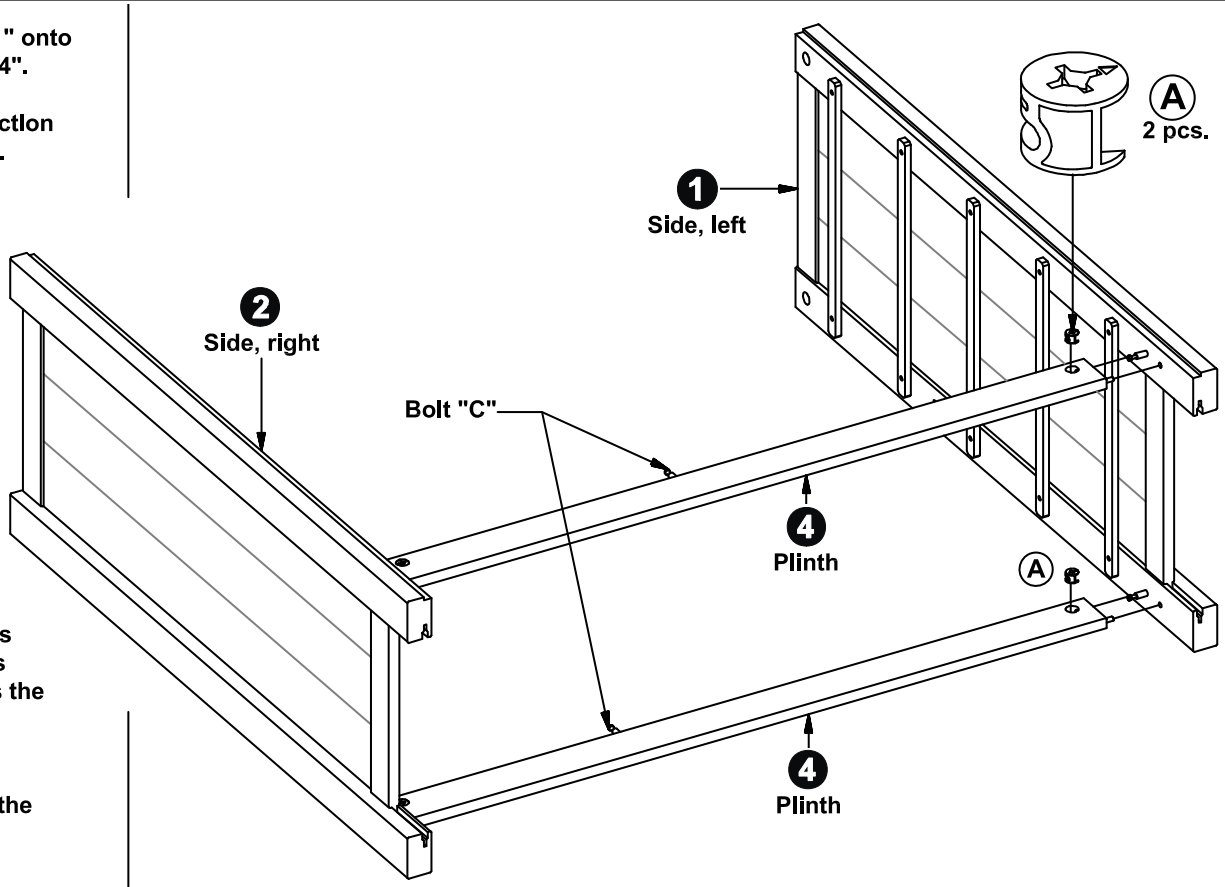


Place the cams "A" into the holes indicated, arrows pointing towards the side / bolt.

<u>Tighten:</u>
Turn the cam to the right. Fig. 5.2

7. Inserting the dowels to the divider.


Knock the dowels "F" into the holes indicated on the divider "5".

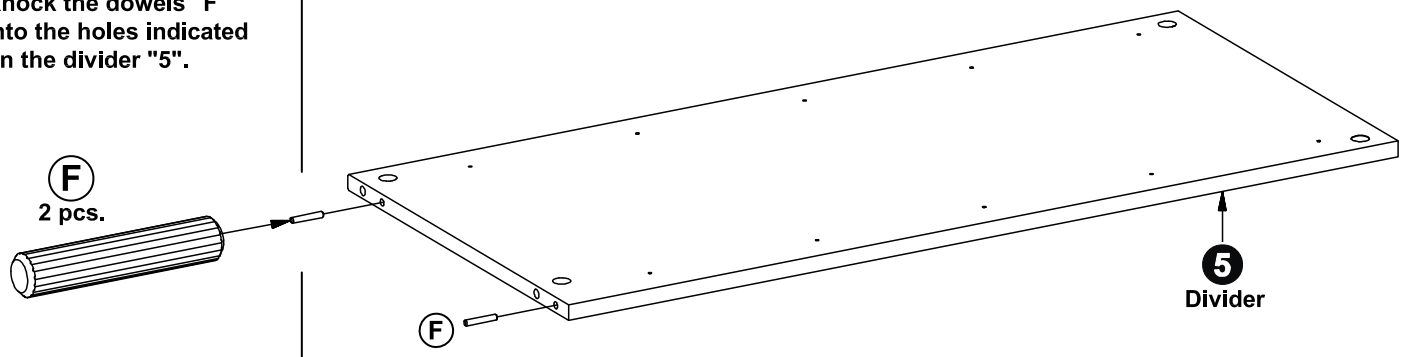



8. Mounting the wooden runners to the divider - part 1.

Fix the wood runners "H" to the left hand side of the divider "5" using screws "N" through the holes indicated.

See fig 8.1

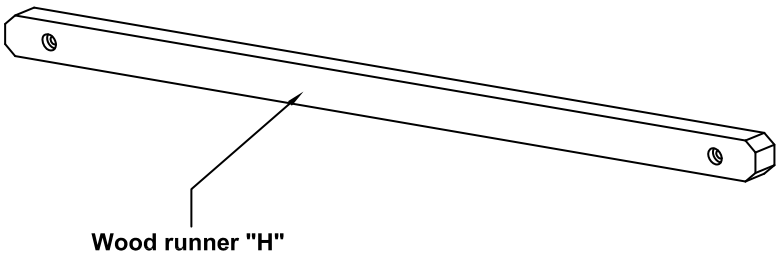

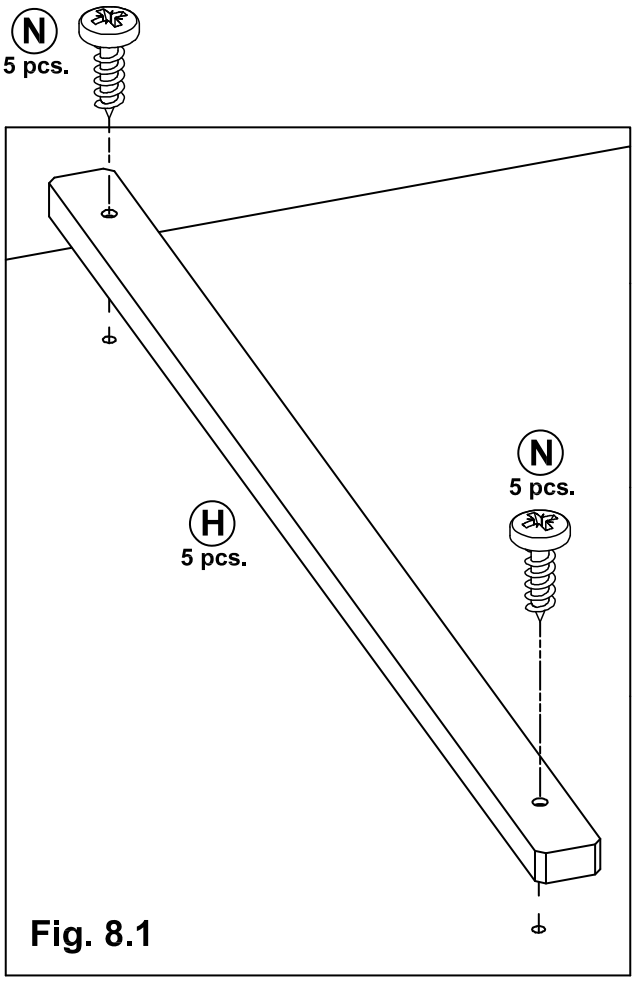

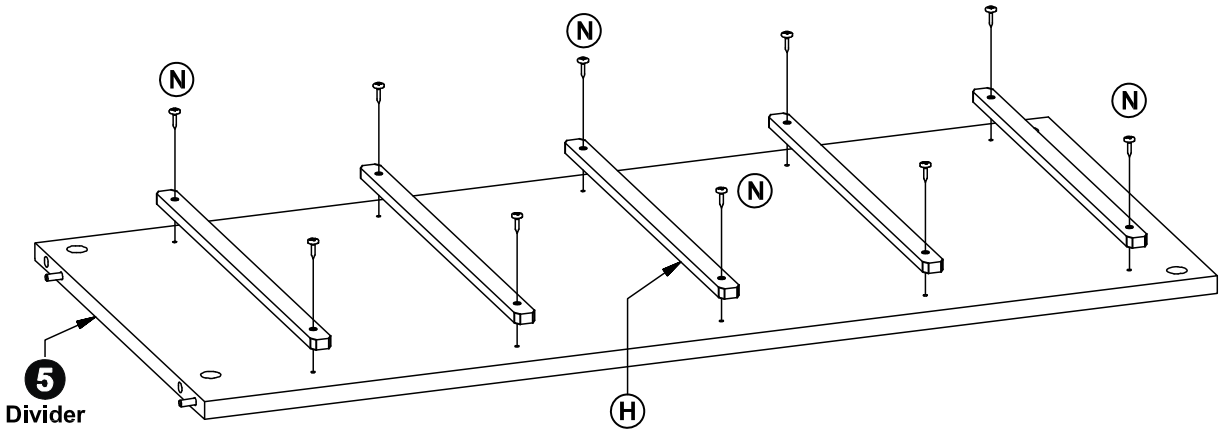

9. Mounting the wooden runners to the divider - part 2.

Turn around the divider.

Fix the wood runners "K" to the right hand side of the divider "5" using screws "N" through the holes indicated.

See fig 9.1


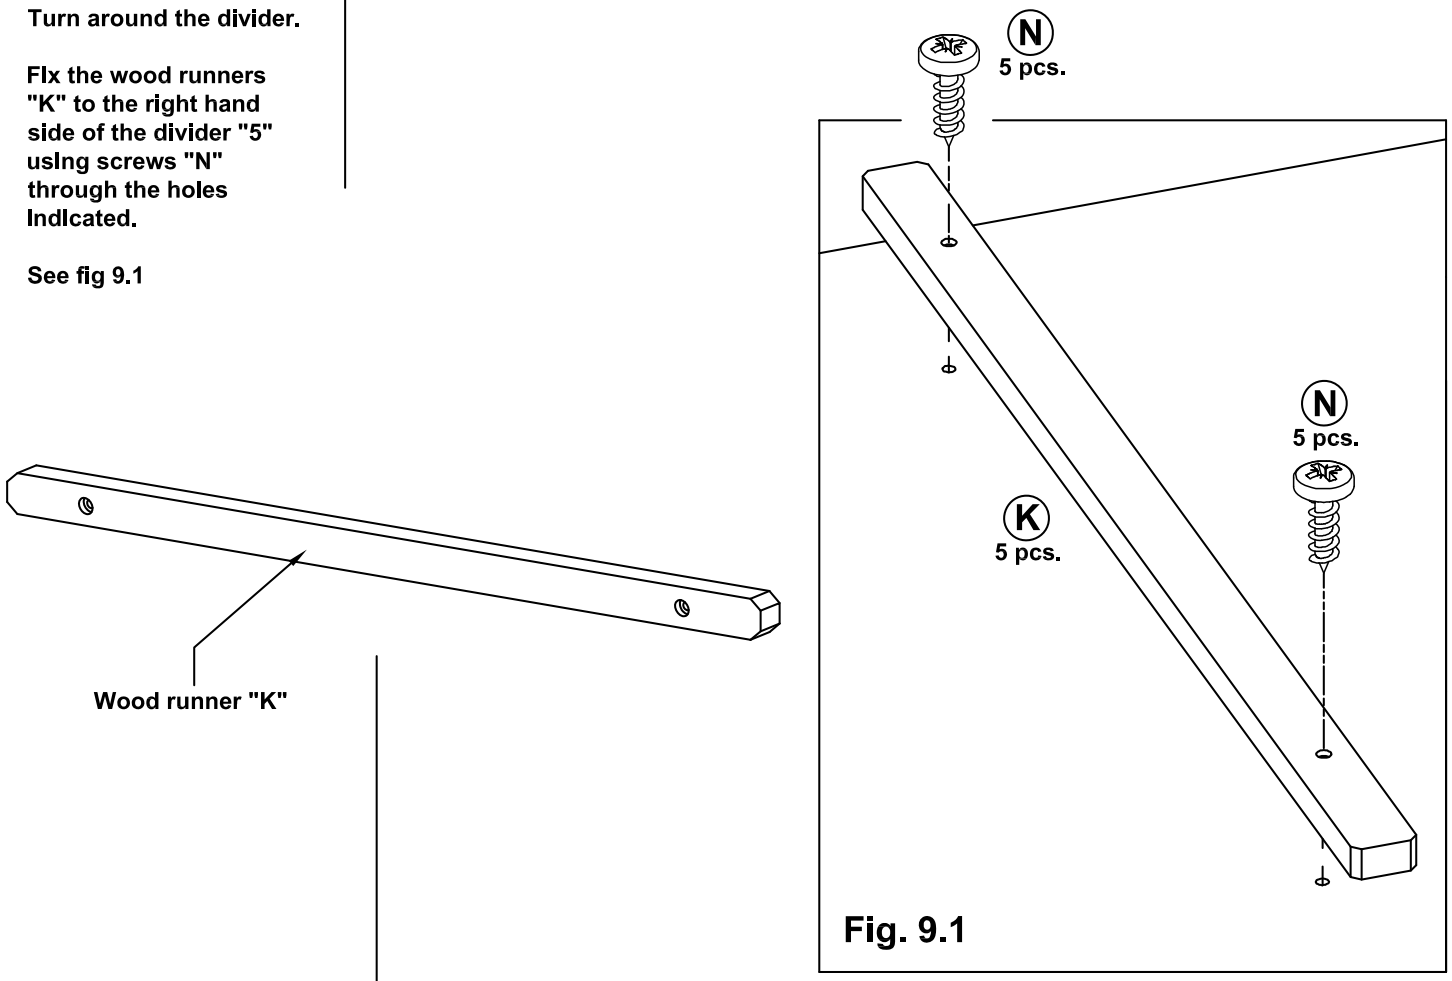



Fig. 9.1

Wood runner "K"

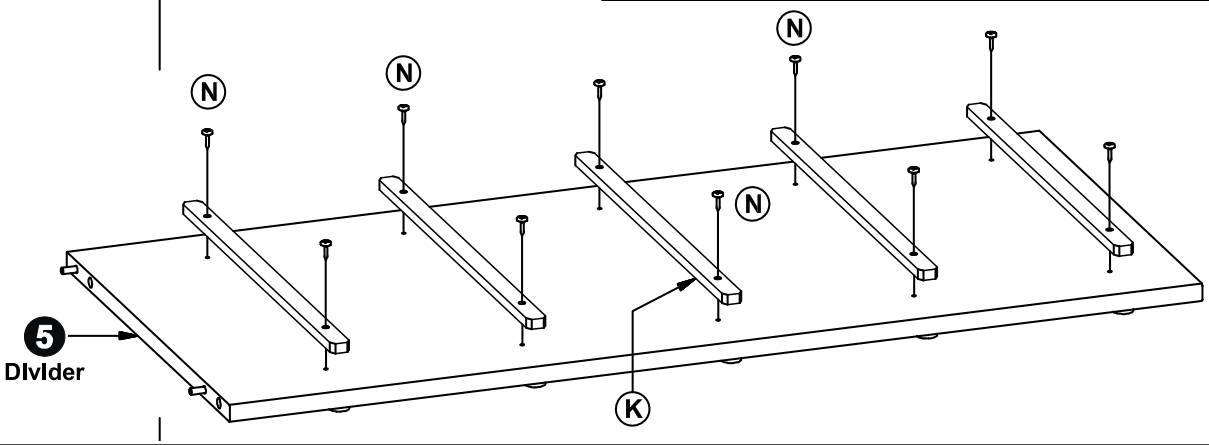

10. Mounting the bolts to the top.

Screw the bolts "C" into the holes indicated on the top "3".

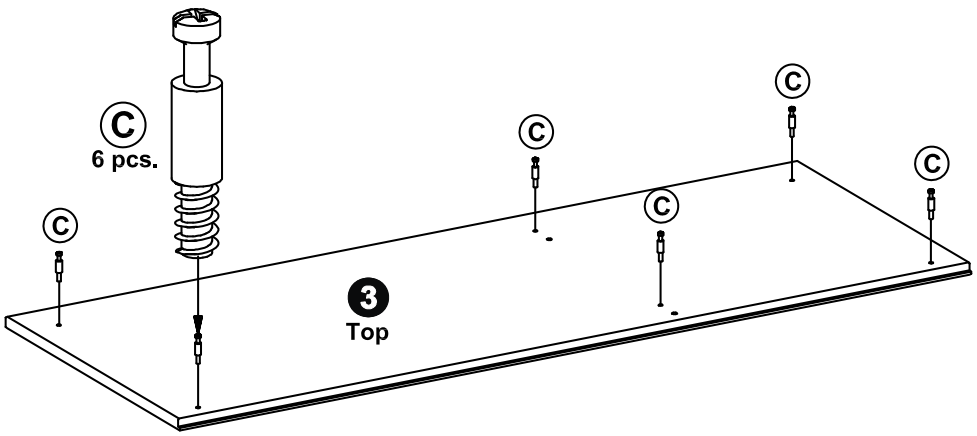

11. Assembling the top to the divider.


Press the divider "5" onto the top "3".

See page 5 "Function of cam and bolt".

Place the cam "A" into the holes indicated, arrows pointing towards the top / bolts.

Tighten:
Turn the cam to the right.
Fig. 11.1

Fig. 11.1

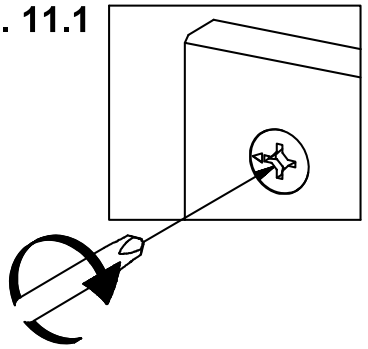


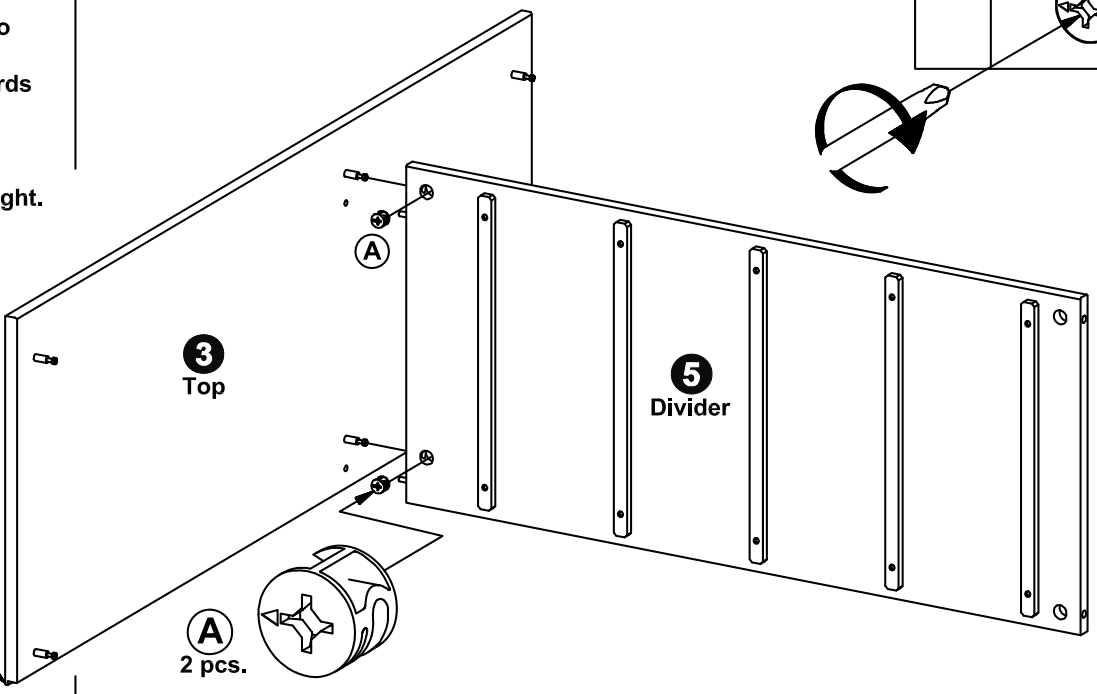


Fig. 11.2

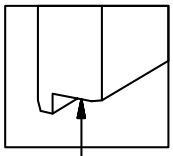


Rabbet = Back

12. Assembling the top and the divider to the sides.

Lower the top "3" and the divider "4" onto the sides "1" & "2" and the plinths "4".

See page 5 "Function of cam and bolt".

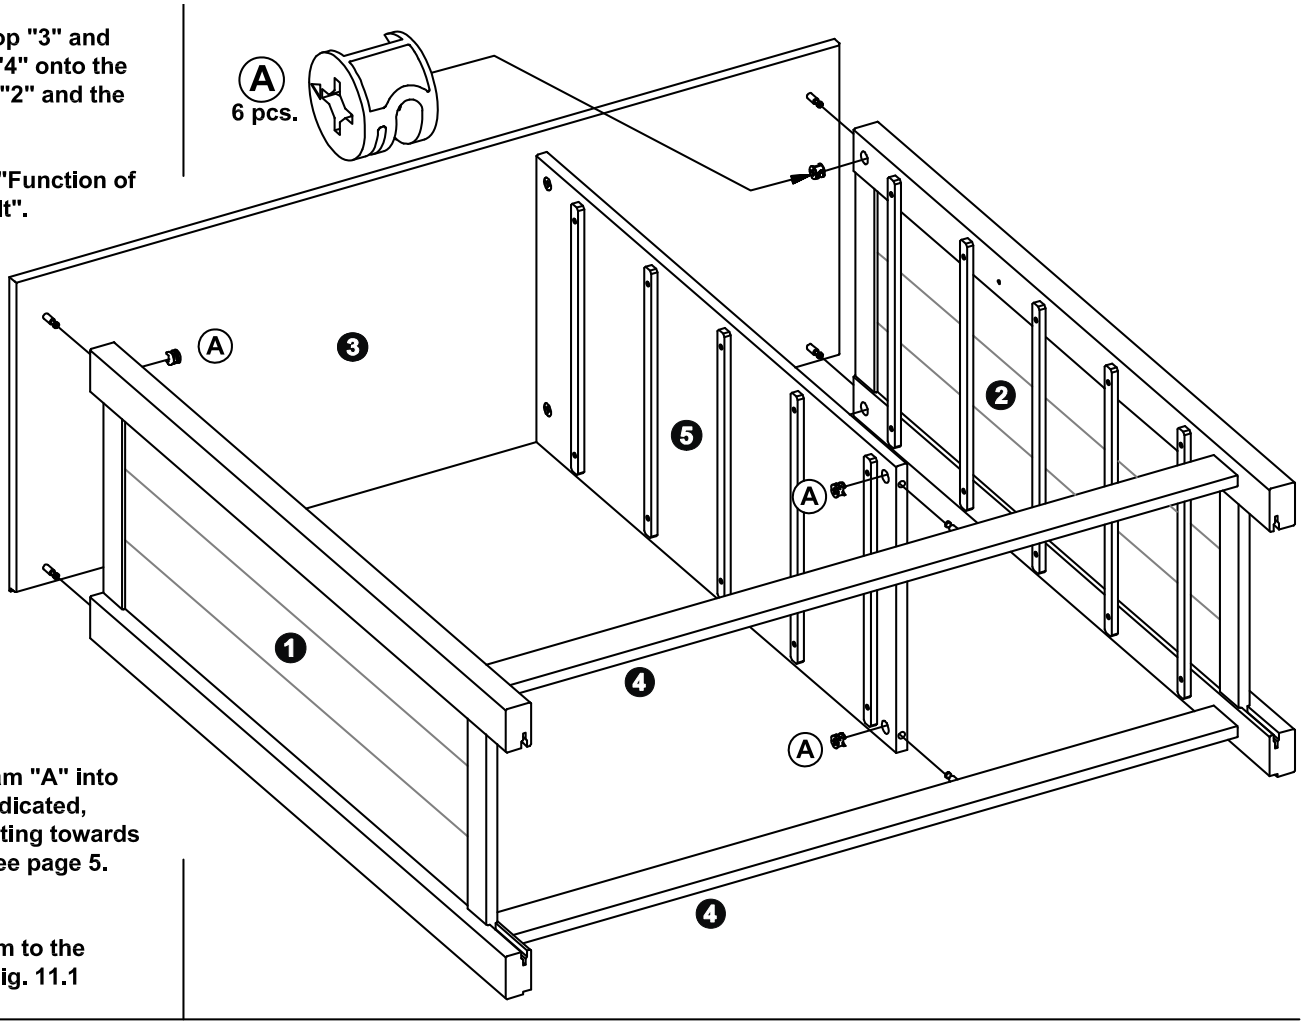

Place the cam "A" into the holes indicated, arrows pointing towards the bolts. See page 5.

Tighten:
Turn the cam to the right. See Fig. 11.1

13. Nailing the back to the top.

Place the back into the rabbet of the top "3" and the side "2".
See fig. 13.1

Ensure that there is NO GAP between the right hand side "3" and the back "6", NOR between the top and the back.

Fasten the back with nails "G" along the top. Use the nail guide "M" as shown. Fig. 13.2

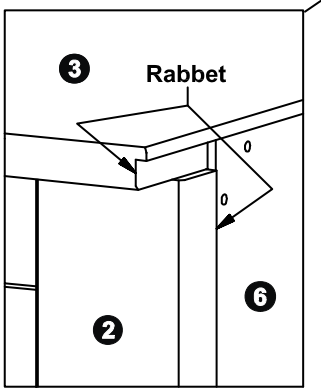
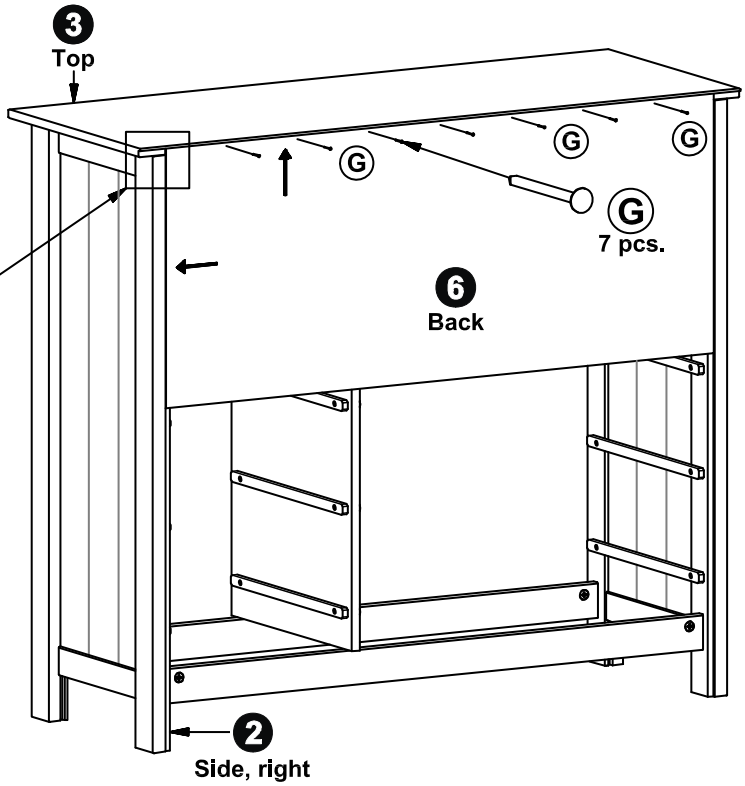


Fig. 13.1



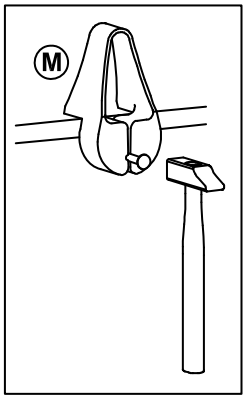


Fig. 13.2

14. Nailing the back to the sides.

The angle between the top and the side must be 90 degrees.
Fig. 14.1

To accomplish this, ensure that there is NO GAP between the right hand side "2" and the back "6".

Fasten the back with nails "G" along the Sides. Use the nail guide as shown.
Fig. 14.2

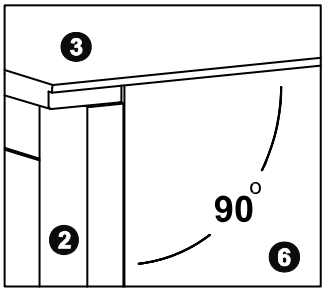


Fig. 14.1


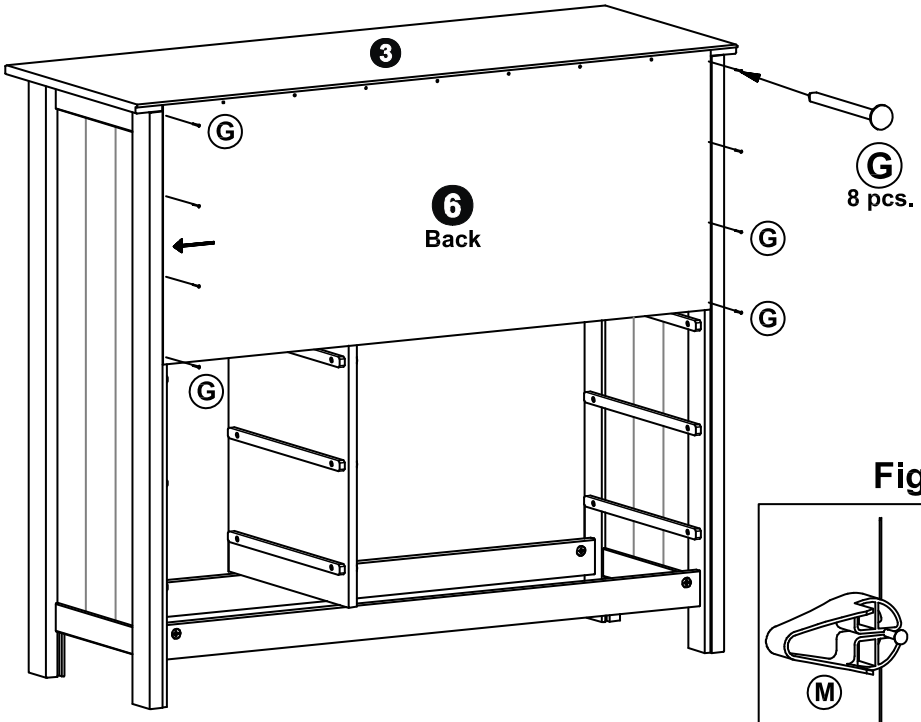


Fig. 14.2

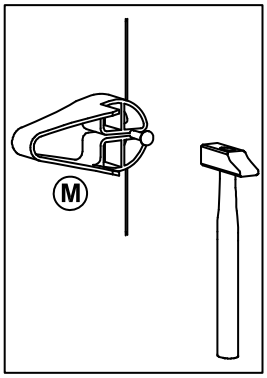

15. Adding the lower back and the joining strip.

Place the joining strip "L" in between the upper and lower backs "6".

See fig. 15.1

Fasten the back with nails "G" along the sides. Use the nail guide "M" .

See page 11, fig. 14.2


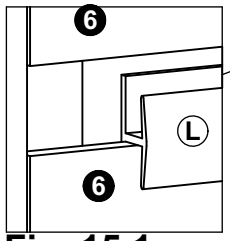


Fig. 15.1

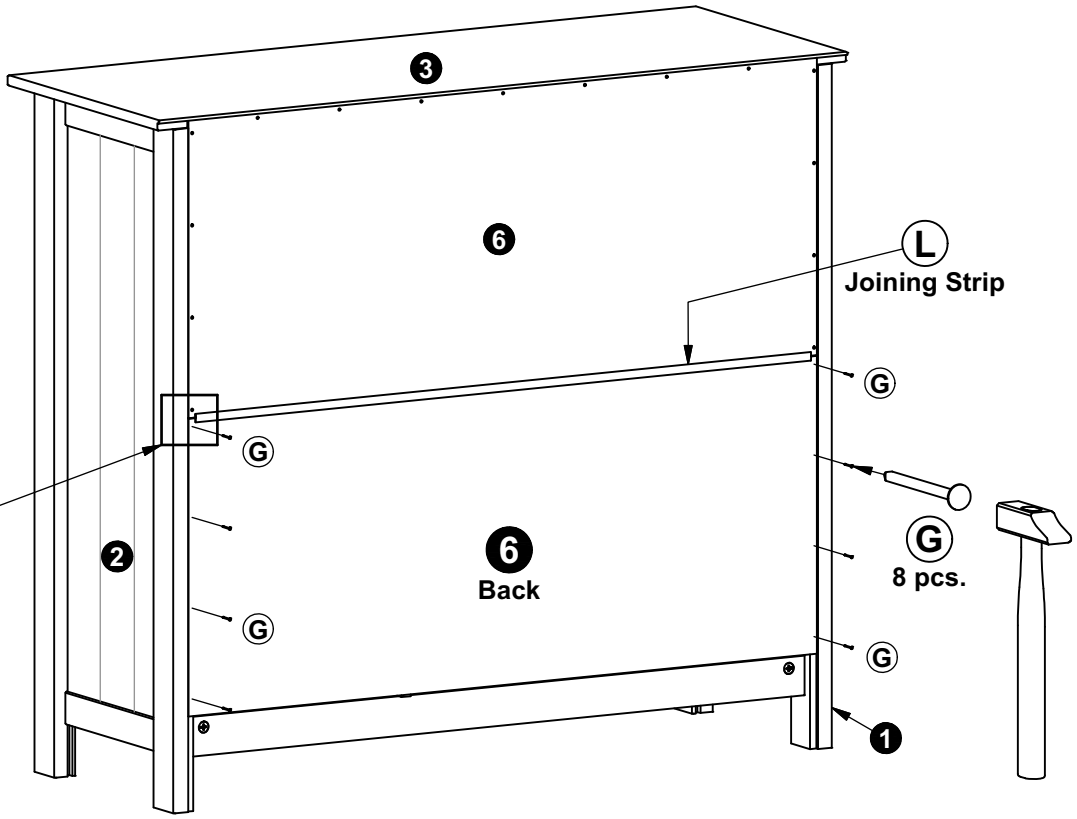

16. Mounting the drawer sides to the drawer back.

Fix the drawer sides "11" and "12" to the drawer back "9" using screws "E".

The grooves of the drawer sides and back should be turned exactly as shown. See fig. 16.1.


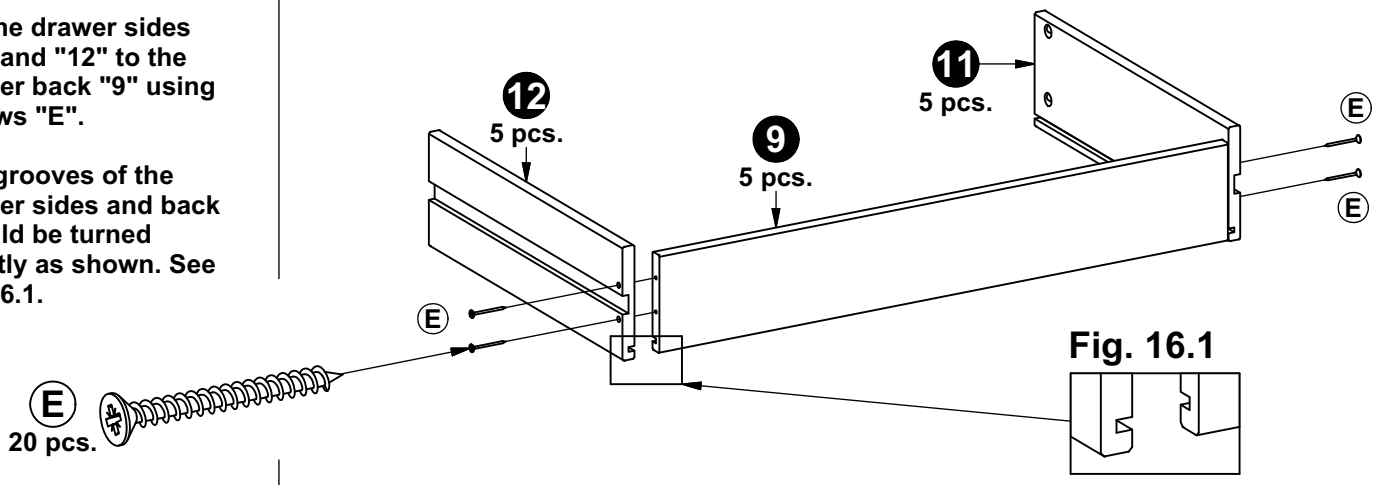


Fig. 16.1


17. Sliding the drawer bottom into the drawer frame.

Slide the drawer bottom "13" into the grooves of the drawer frame.

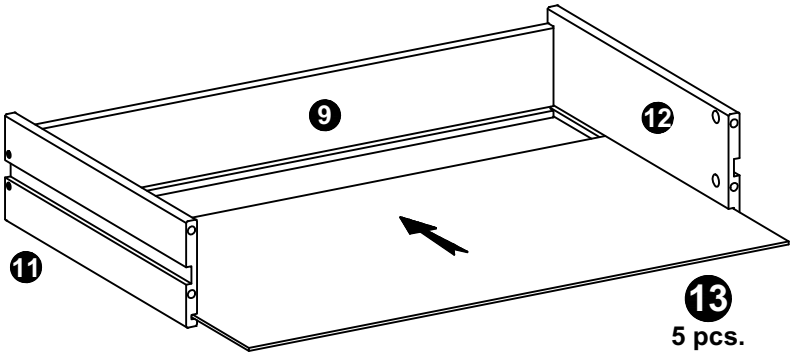

18. Mounting the bolts to the drawer front.

Screw the bolts "C" into the holes indicated on the drawer front "7".

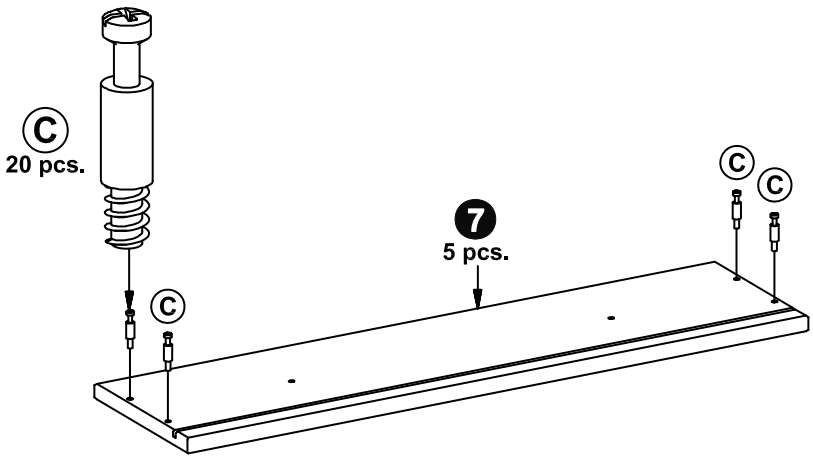

19. Adding the drawer front to the drawer frame.


Press the drawer front "7" onto the drawer sides "11" and "12".

Place the cams "B" into the holes indicated, arrows pointing towards the drawer front / bolts.

<u>Tighten:</u>
Turn the cam to the right. See fig. 19.1


"Function of cam and bolt" see page 5.

Fig. 19.1

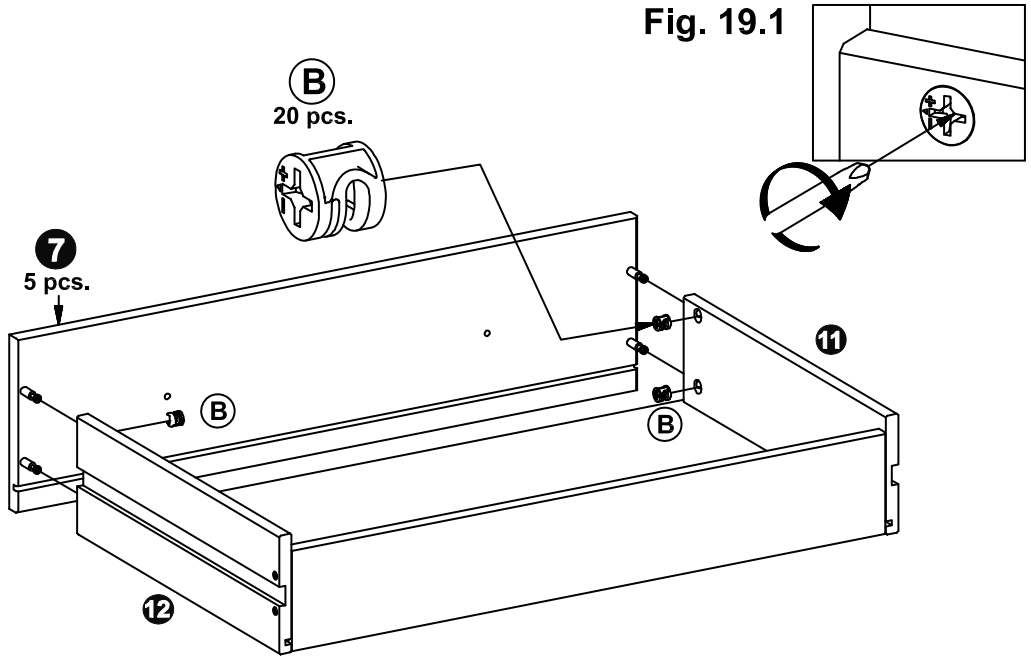

20. Mounting the knobs to the drawer front.

Fix the knob "J" to the drawer front using screws "E".

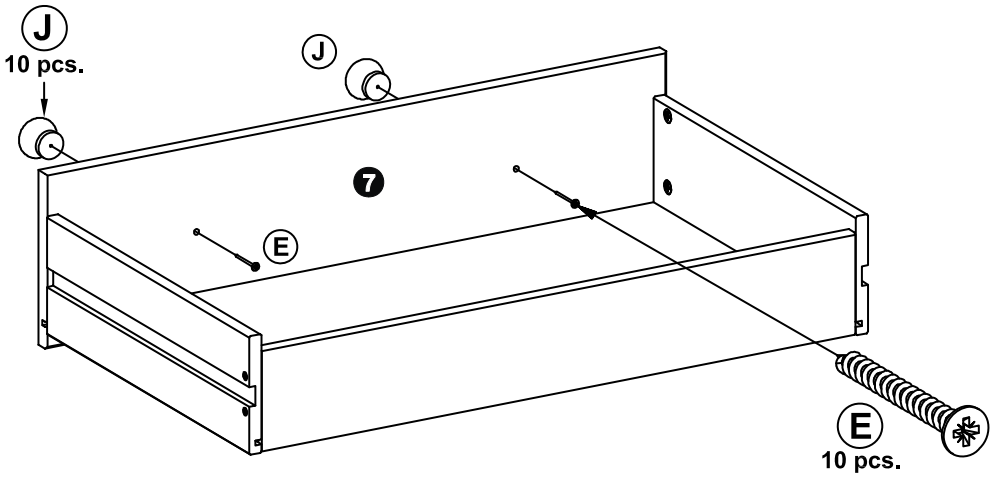

21. Mounting the drawer sides to the drawer back.

Fix the drawer sides "11" and "12" to the drawer back "10" using screws "E".

The grooves of the drawer sides and back should be turned exactly as shown. See fig. 21.1.


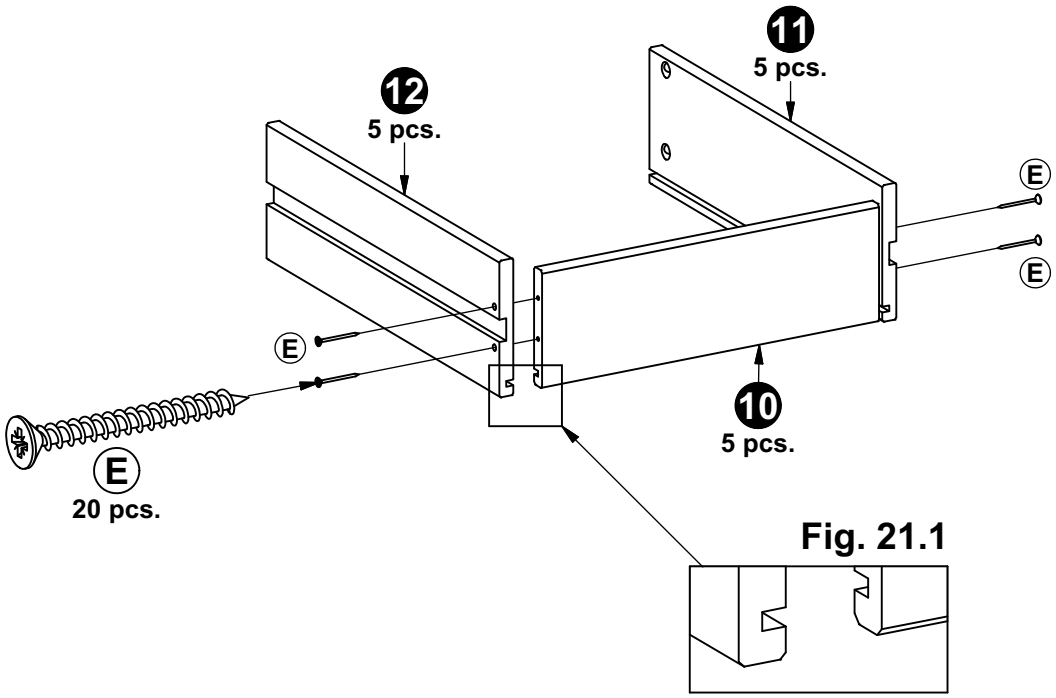


Fig. 21.1


22. Sliding the drawer bottom into the drawer frame.

Slide the drawer bottom "14" into the grooves of the the drawer frame.

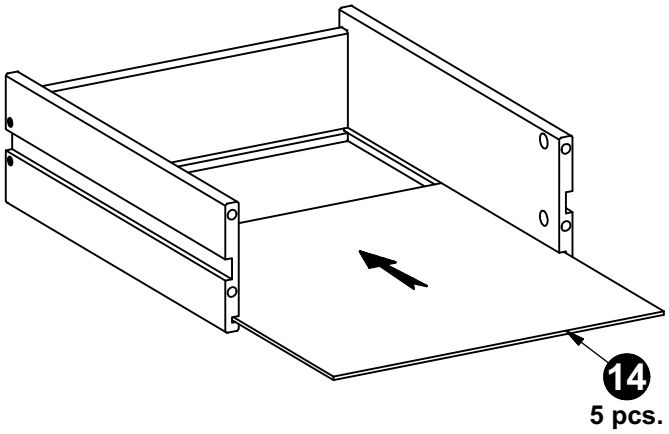

23. Mounting the bolts to the drawer front.

Screw the bolts "C" into the holes indicated on the drawer front "8".

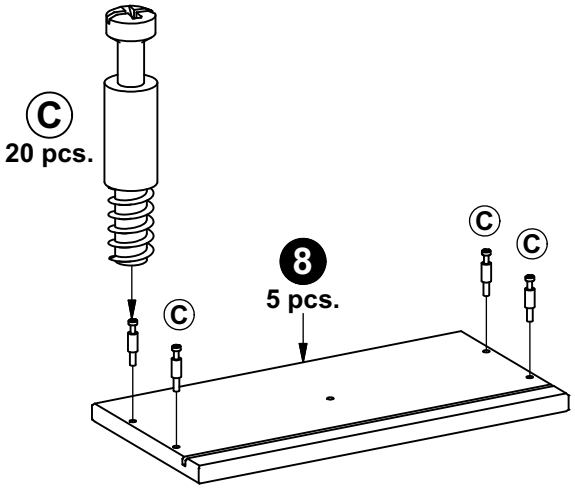


24. Adding the drawer front to the drawer frame.

Press the drawer front "8" onto the drawer sides "11" and "12".

Place the cams "B" into the holes indicated, arrows pointing towards the bolts.


Tighten:
Turn the cam to the right.

"Function of cam & bolt" see page 5.

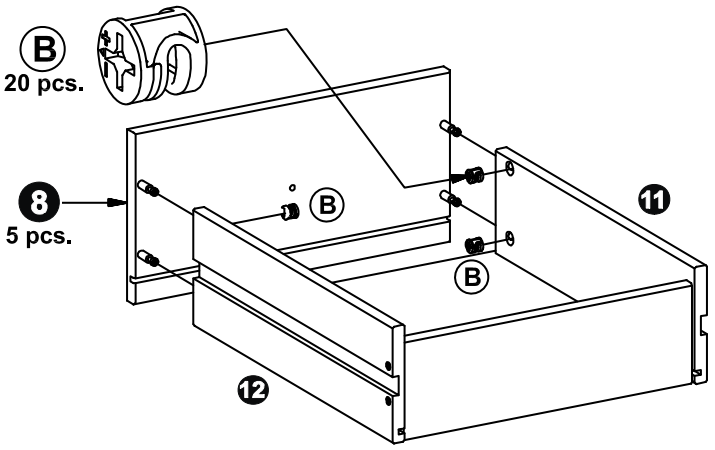


25. Mounting the knobs to the drawer front.

FIx the knob "J" to the drawer front using screws "E".

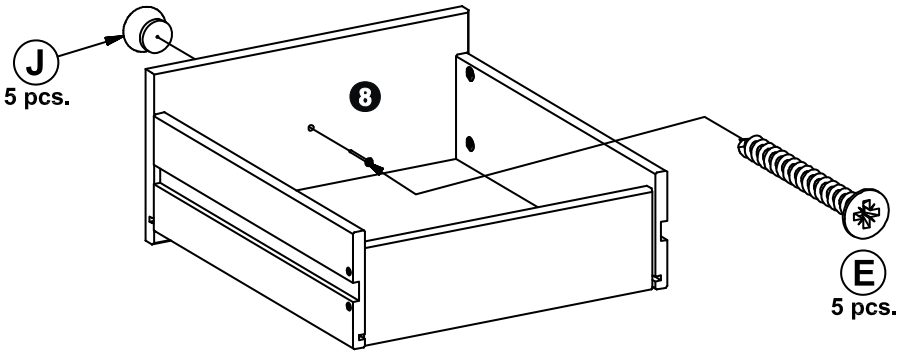

26. Adding the drawers to the carcass.

Slide the drawers onto the wooden runners.

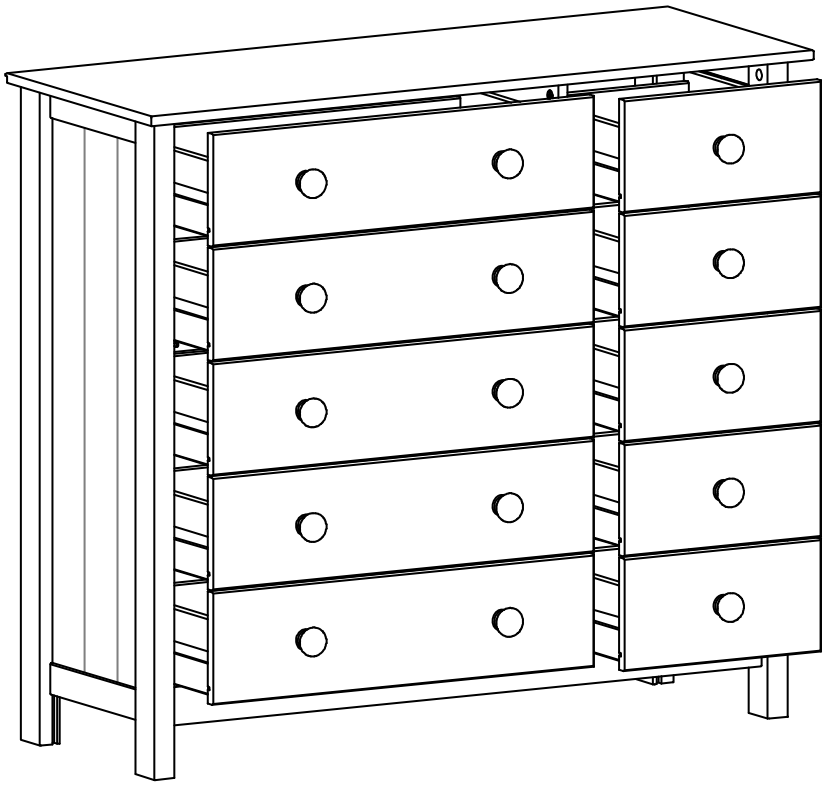

27. Mounting the wall strap.

Fixing to wall

It is recommended that the drawer chest is fixed to a wall.

Fix wall strap **Q** to top of drawer chest using screw **P**.

Will help, move drawer chest into position.

Warning:
The drawer chest is heavy.
Lift with care.

Mark fixing hole on wall and remove drawer chest.

Drill 7mm hole and insert wall plug **R**.


Warning:
Before drilling, check wall for hidden pipes and cables.


Resposition drawer chest and fix wall strap using screw **O** .

Assembly is complete.

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

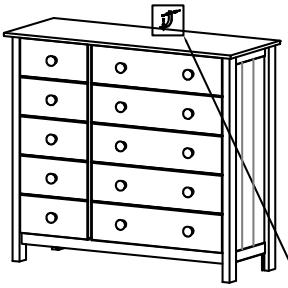

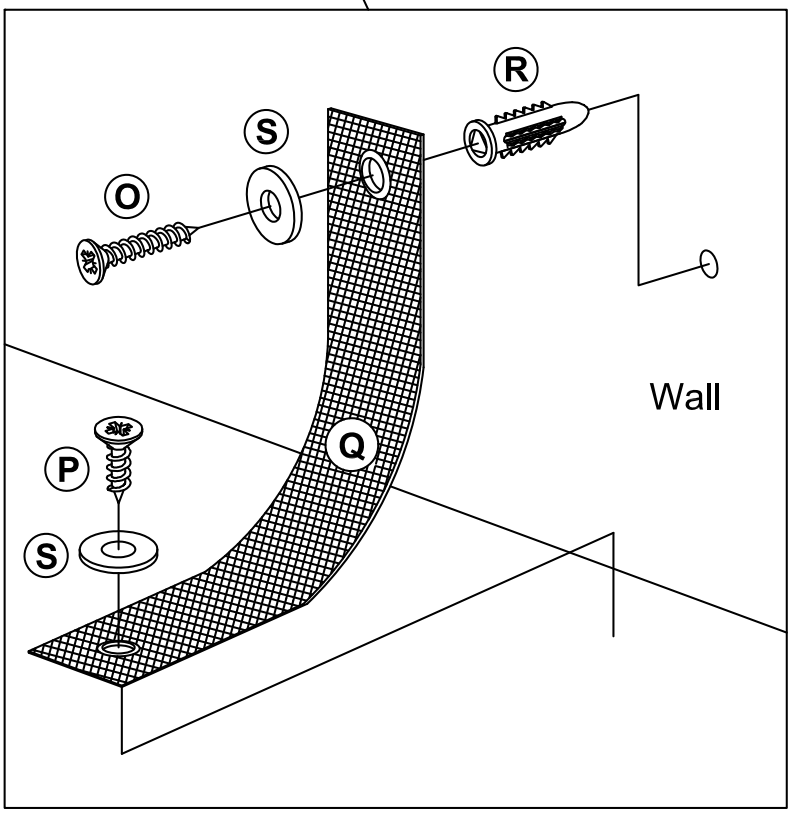

Dear Customer.

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.


Please keep these instructions in a safe place for future use.

Scandinavia - 5+5 Drw Chest

Assembly Instructions - Please keep for future reference

642/3753

615/6941

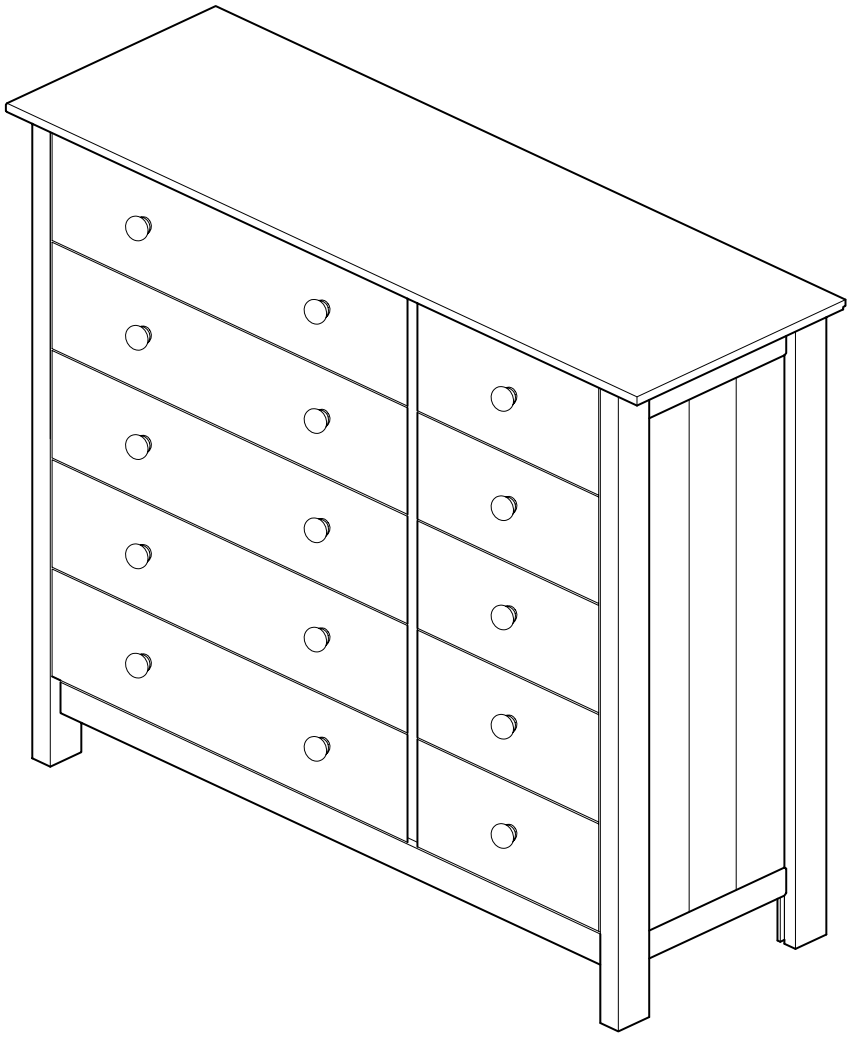

Dimensions

Width - 105.2cm
Depth - 40cm
Height - 93.3cm

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 01/04/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

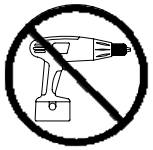

- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

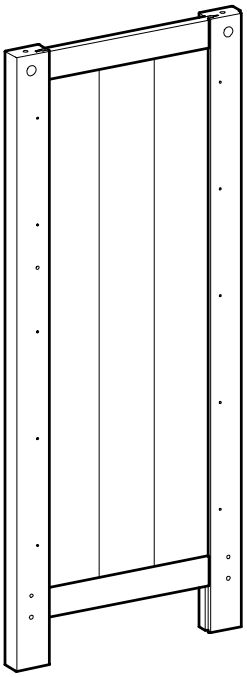


1 Left side
(91.9 x 37cm)

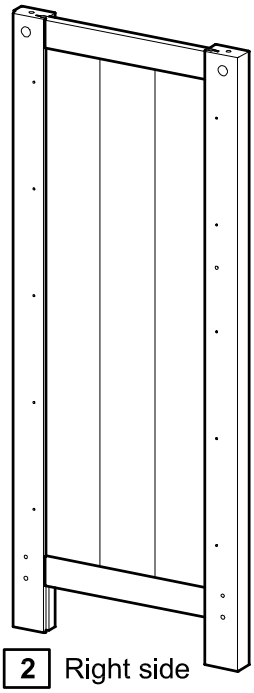


2 Right side
(91.9 x 37cm)

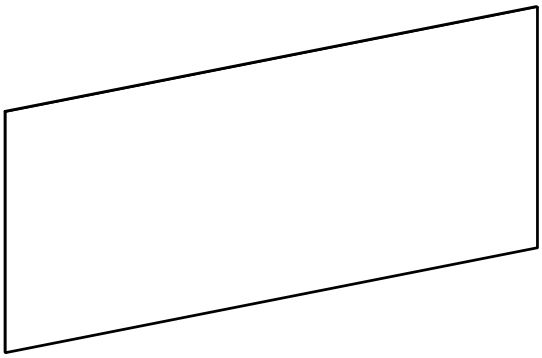


6 Back x 2 (96 x 40cm)

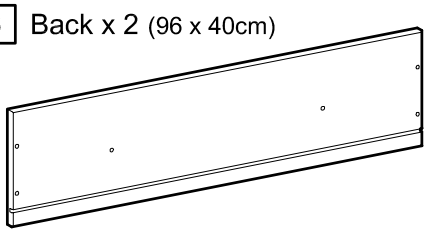


7 Large drawer front x 5 (60.6 x 15.7cm)

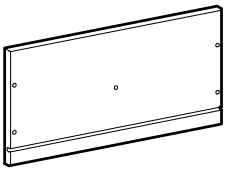


8 Small drawer front x 5 (31.4 x 15.7cm)

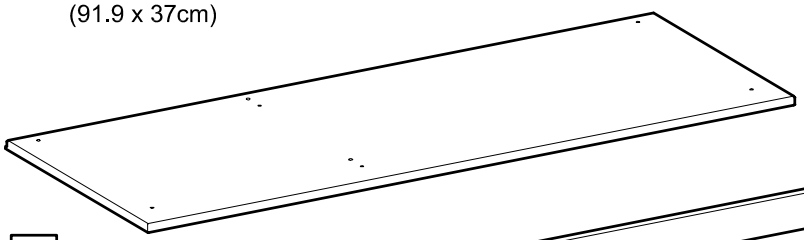


3 Top (105.2 x 40cm)

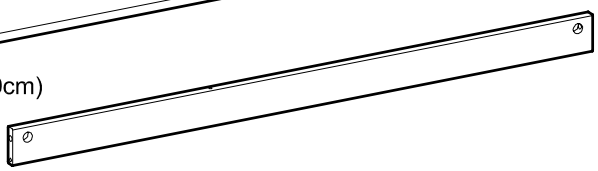


4 Plinth x 2 (94.2 x 5.5cm)

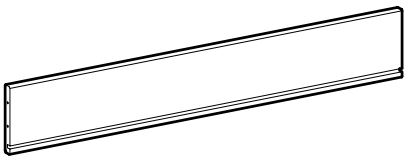


9 Large drawer back x 5 (57.9 x 9cm)

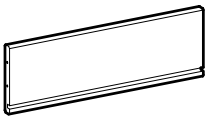


10 Small drawer back x 5 (28.6 x 9cm)

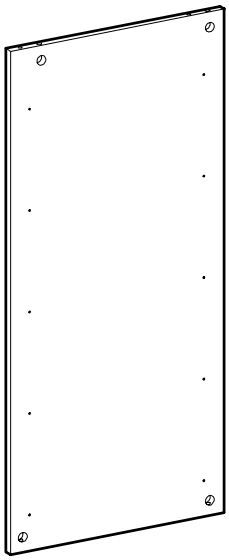


5 Divider
(79.4 x 36.6cm)

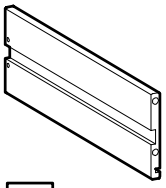


11 Left drawer side x 10
(34.2 x 10.7cm)

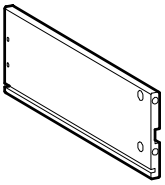

12 Right drawer side x 10
(34.2 x 10.7cm)

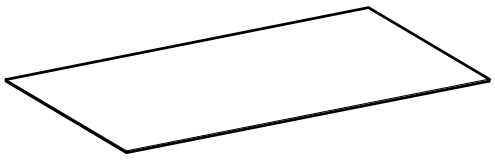

13 Large drawer bottom x 5
(58.9 x 33.9cm)

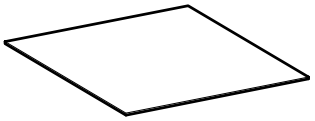



14 Small drawer bottom x 5
(29.7 x 33.9cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

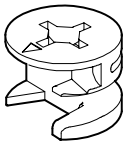
A  Large cam x 12


B  Small cam x 40


C  Locking pin x 52

D  16mm Nail x 30


E  35mm Screw x 55


F  30mm Dowel x 6

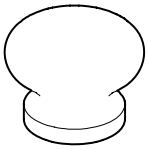G  Knob x 15

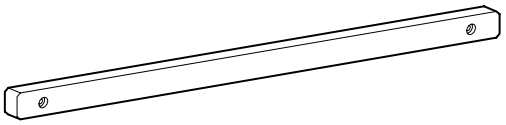
H  340mm Wooden runner x 15


I  20mm Screw x 20

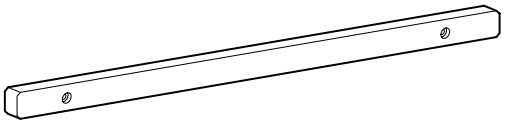
J  340mm Wooden runner x 5


K  13mm Screw x 20


L  20mm Screw x 1

M  12mm Screw x 1

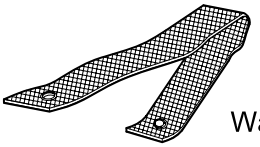
N  Wall strap x 1


O  Wall plug x 1

P  Washer x 2

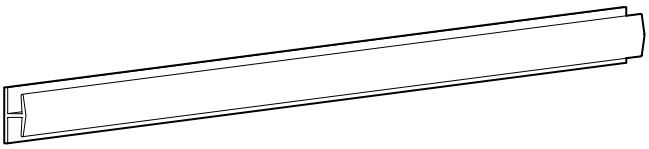
Q  940mm Joining strip x 1


Tools required


 Philips screwdriver (medium & large)


 Flatblade screwdriver (medium)

 Suitable drill bit (for use with wall plug)

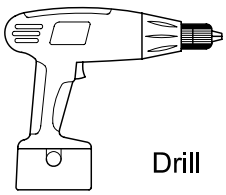
 Drill

 Small hammer


 Ruler/tape measure

 Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Components - Key Diagram

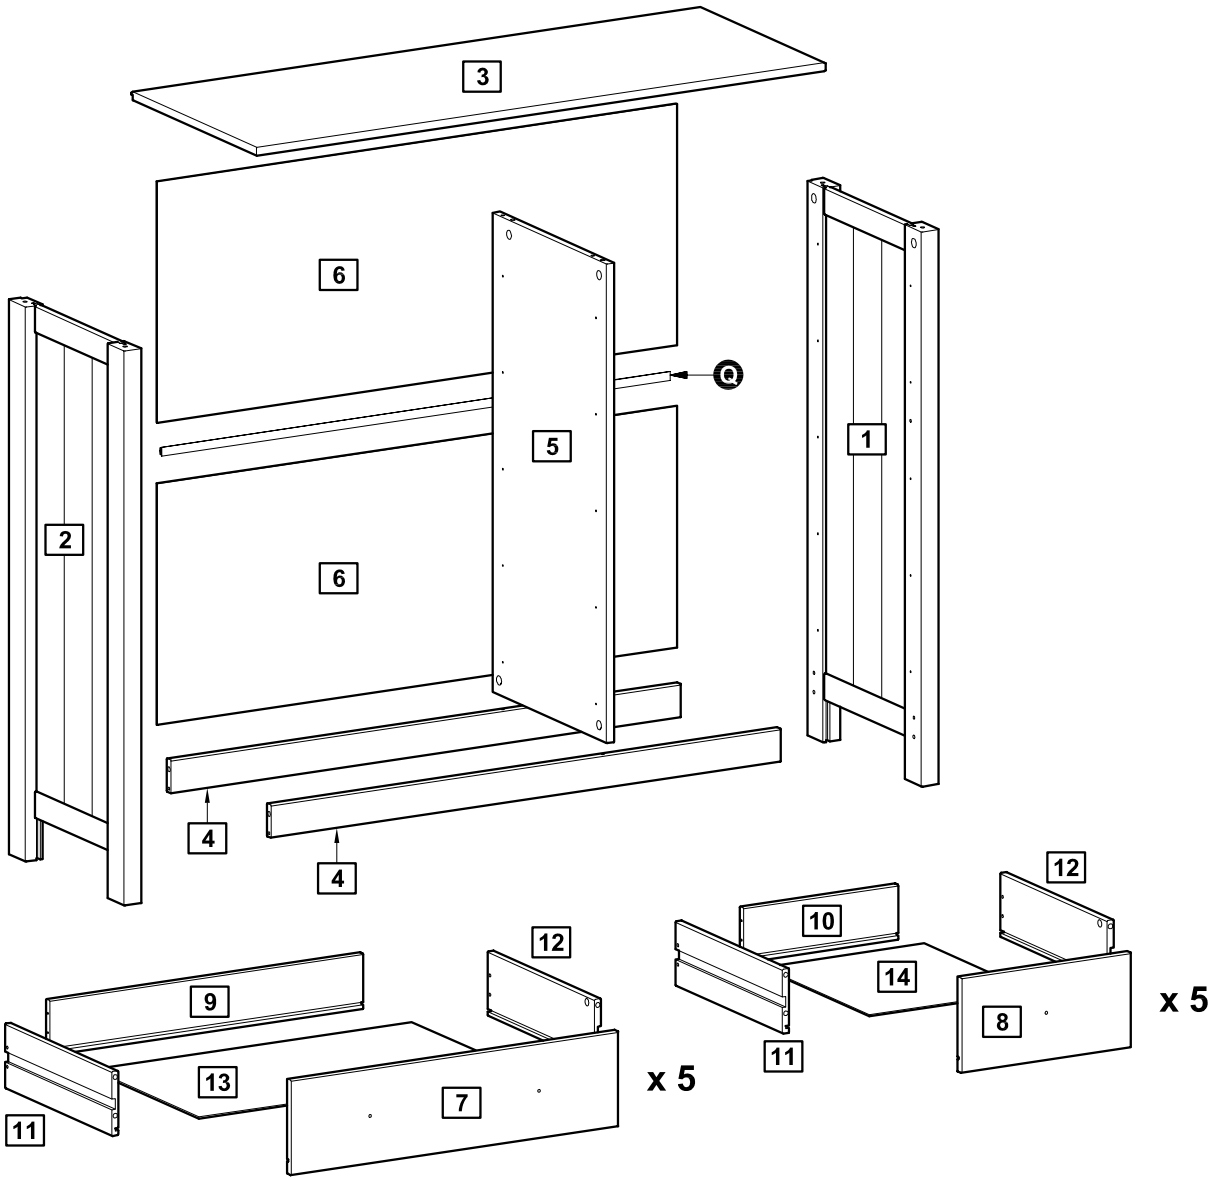


Function of Cam and Locking Pin

Step 1:
Fix the locking pin to the wooden panel.

Step 2:
Push the wooden panel with the attached locking pin onto the other wooden panel.

Step 3:
Place the cam into the hole, arrow pointing towards the locking pin.

Step 4:
Tighten: Turn the cam to the right.

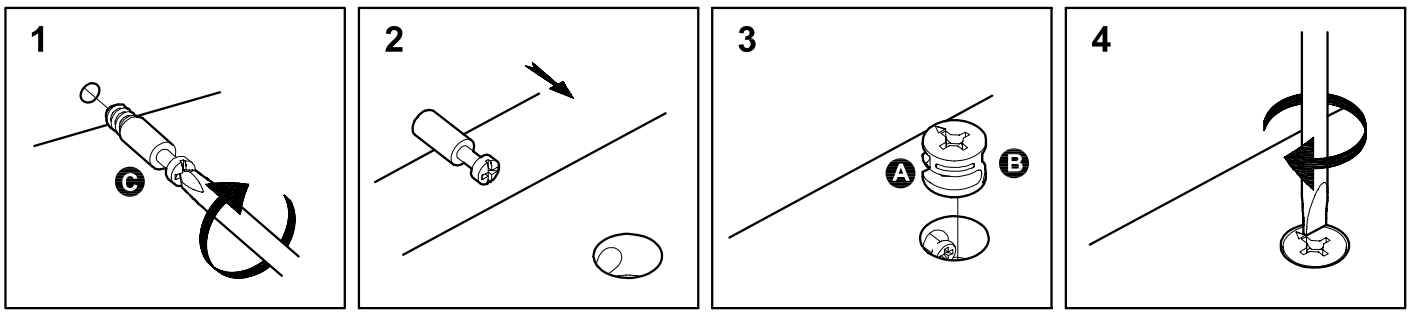


Assembly Instructions

Step 1

Inserting the dowels to the plinths.

Insert the dowels Ⓕ into the holes indicated on the plinths [4].

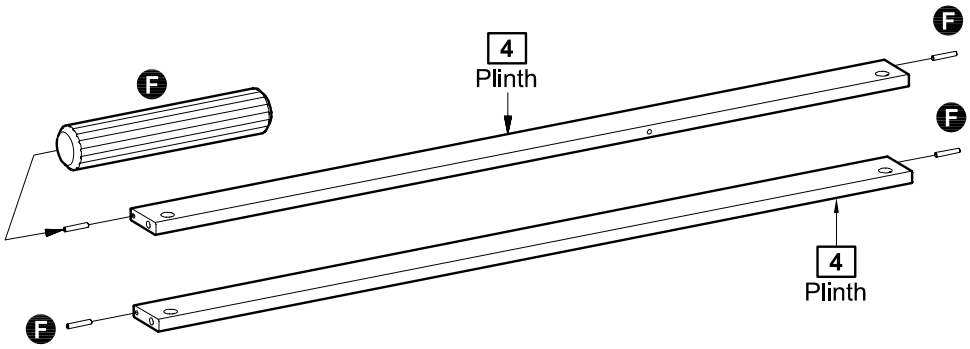


Step 2

Mounting the locking pins to the plinths.

Screw the locking pins Ⓒ into the holes indicated on the plinths [4].

Note: Insert locking pins Ⓒ as far as shown. **Do not over tighten.**

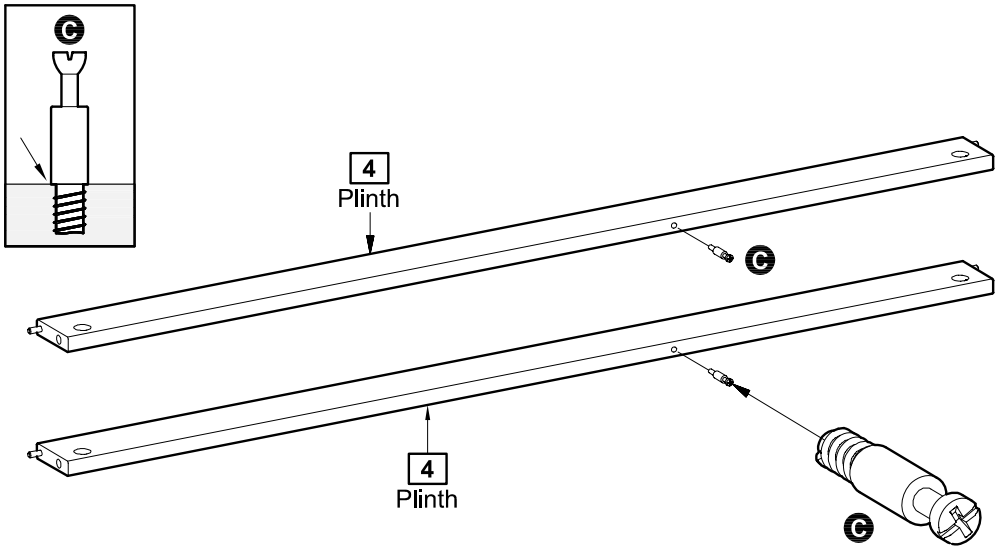


Step 3

Mounting the locking pins to the sides.

Screw the locking pins Ⓒ into the holes indicated on the sides [1] and [2].


Note: Insert locking pins Ⓒ as far as shown. **Do not over tighten.**

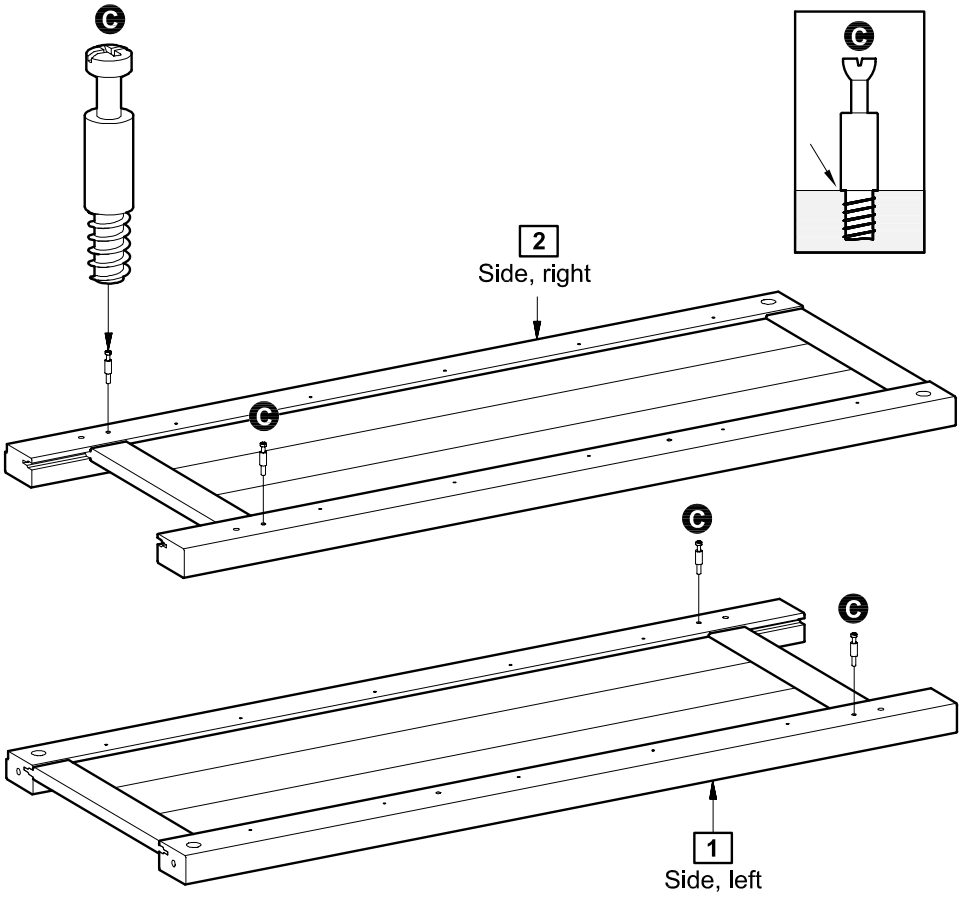



Step 4


Attaching the wooden runners to the sides.

Fix the wood runners H to the sides 1 and 2, using screws I through the holes indicated.

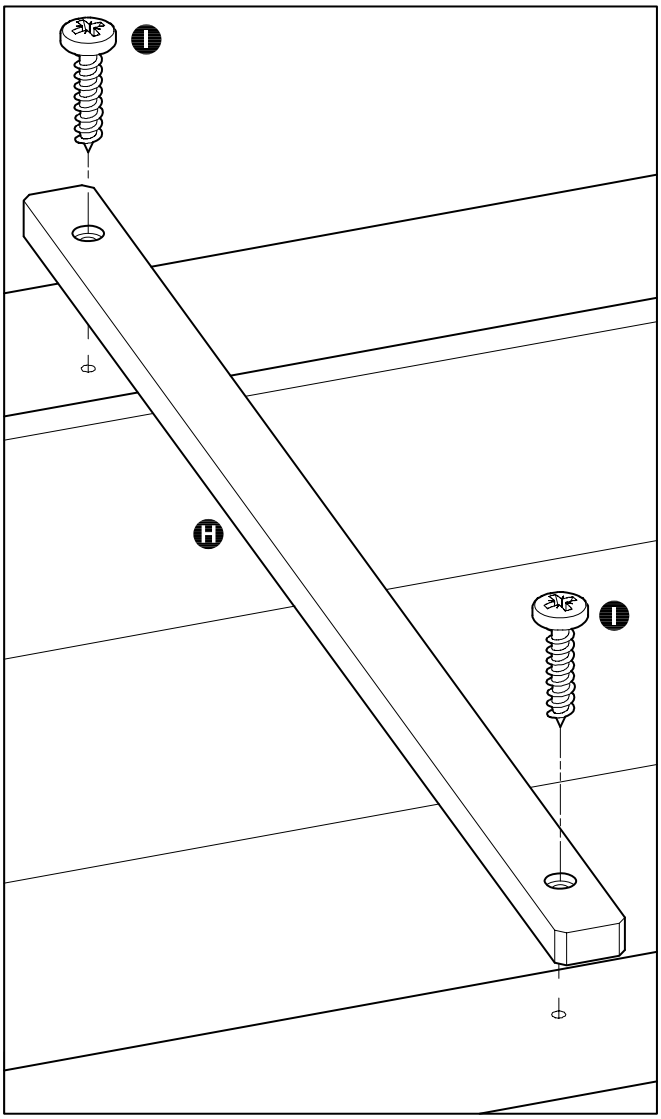

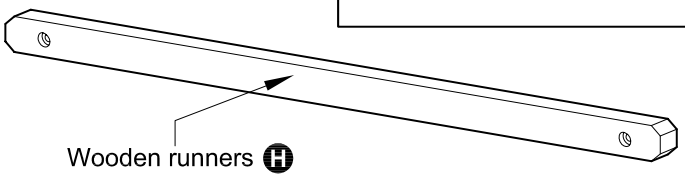

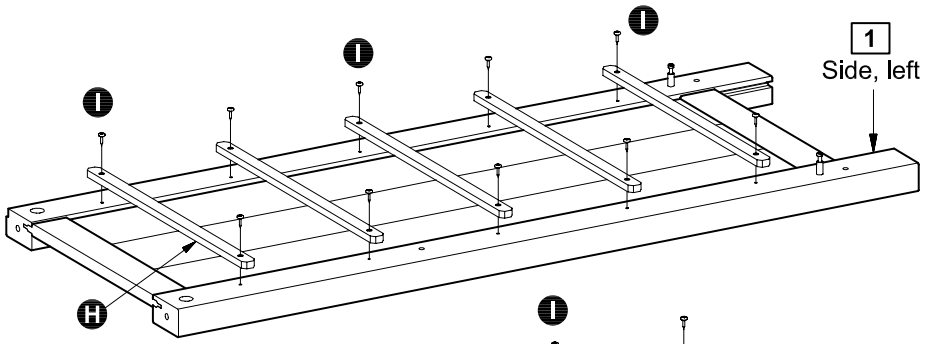

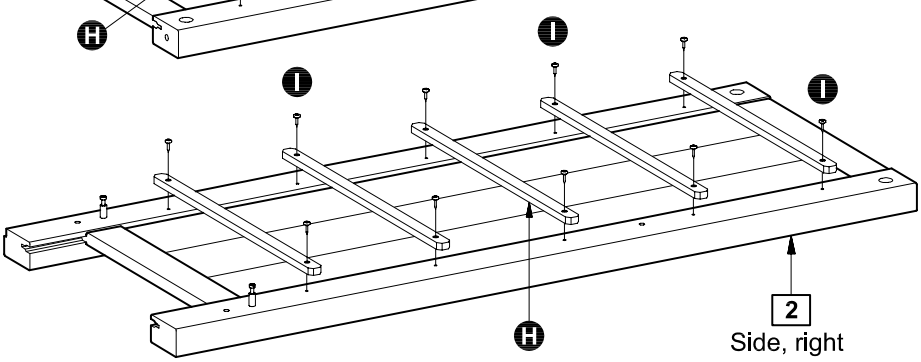

Step 5


Adding the plinths to the right hand side.

Fit the plinths [4] onto the side [2].

See page 4 "Function of cam and locking pin".

Place the large cams Ⓐ into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

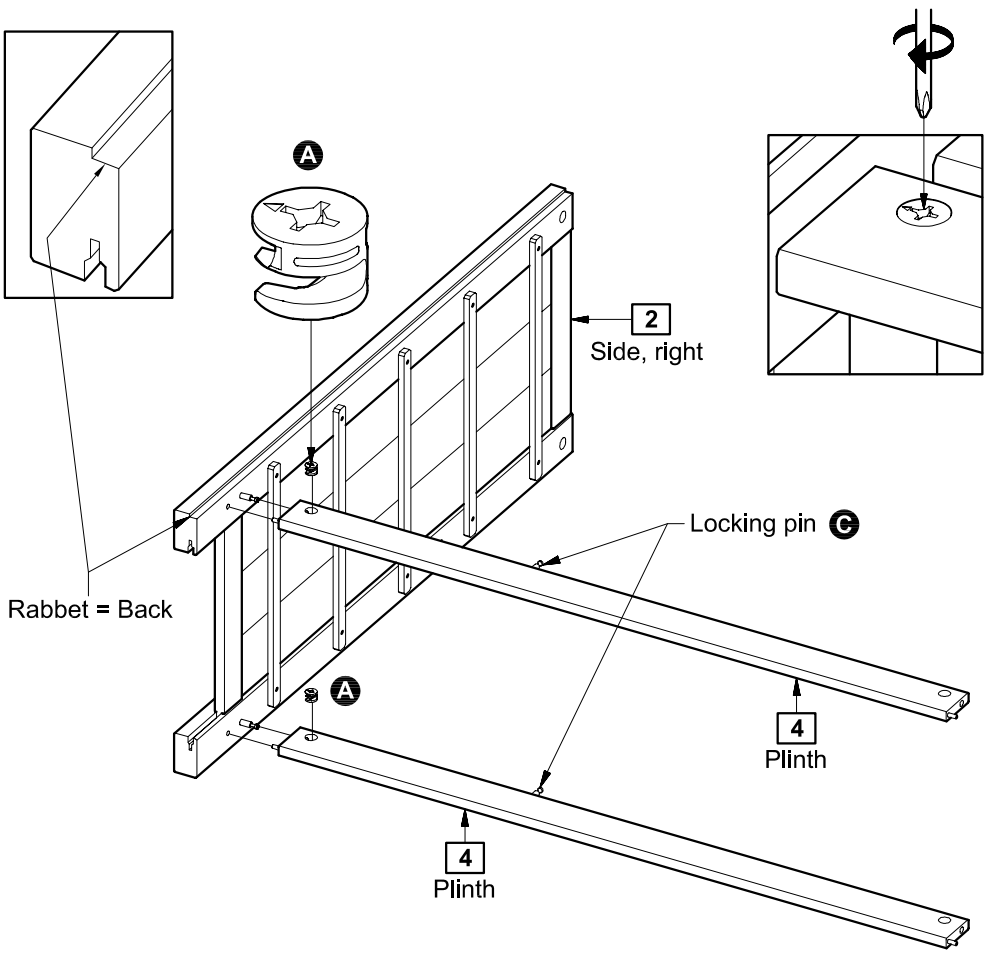

Step 6


Assembling the left hand side to the plinths.

Fit the side [1] onto the plinths [4] .

See page 4 "Function of cam and locking pin".

Place the large cams Ⓐ into the holes indicated, arrows pointing towards the side / locking pins.


To tighten cams: Turn to the right using a screwdriver.

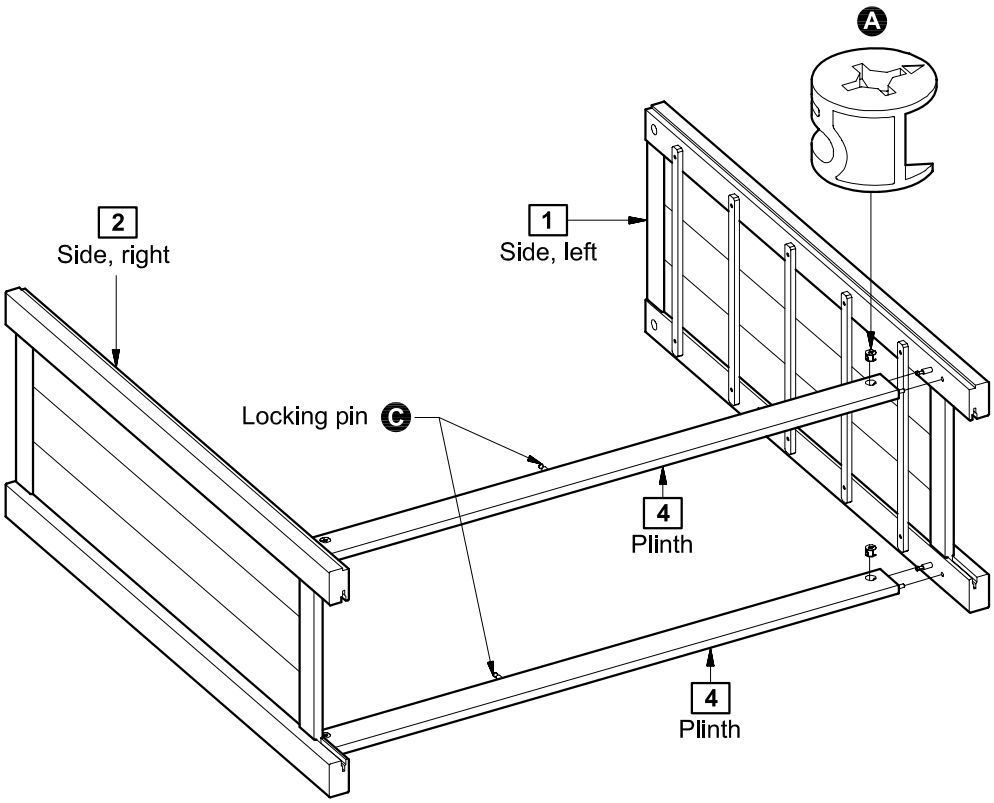

Step 7

Inserting the dowels to the divider.


Insert the dowels (F) into the holes indicated on the divider [5].

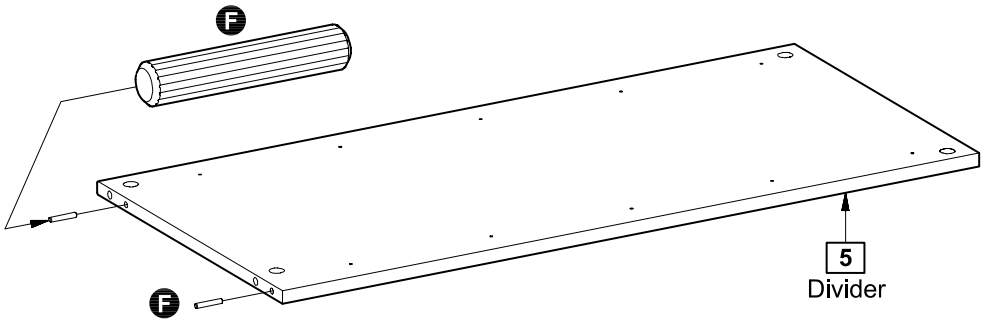



Step 8

Attaching the wooden runners to the divider - part 1.

Fix the wood runners (H) to the left hand side of the divider [5], using screws (K) through the holes indicated.

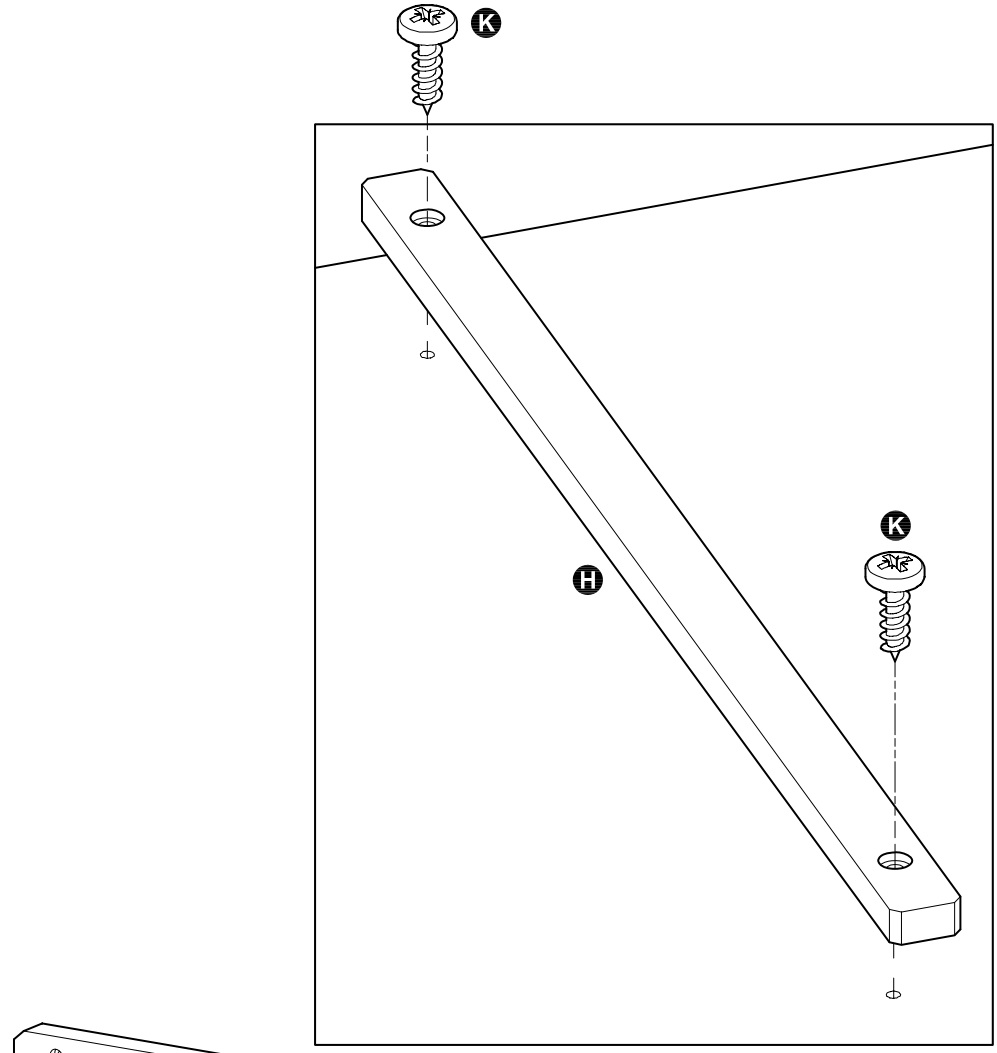

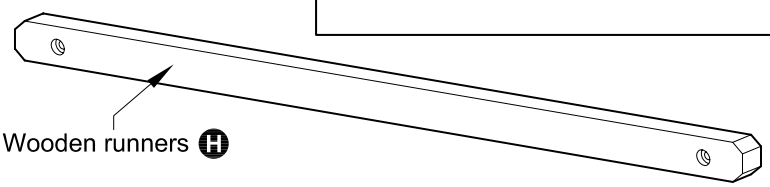

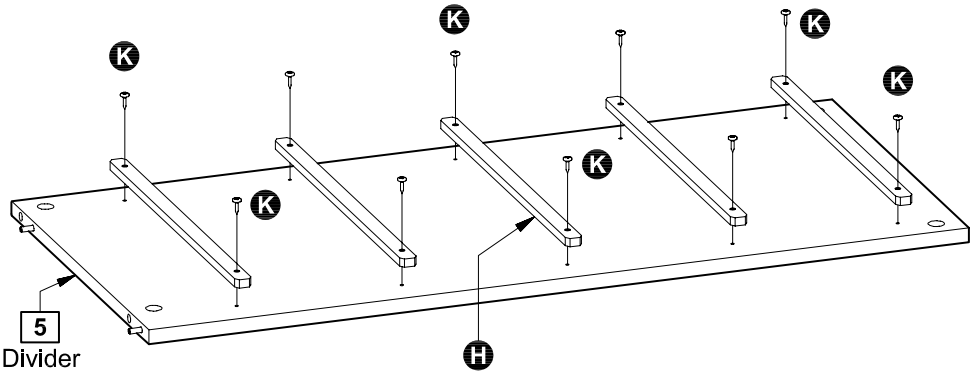


Step 9

Attaching the wooden runners to the divider - part 2.

Turn around the divider.

Fix the wood runners J to the right hand side of the divider 5, using screws K through the holes indicated.

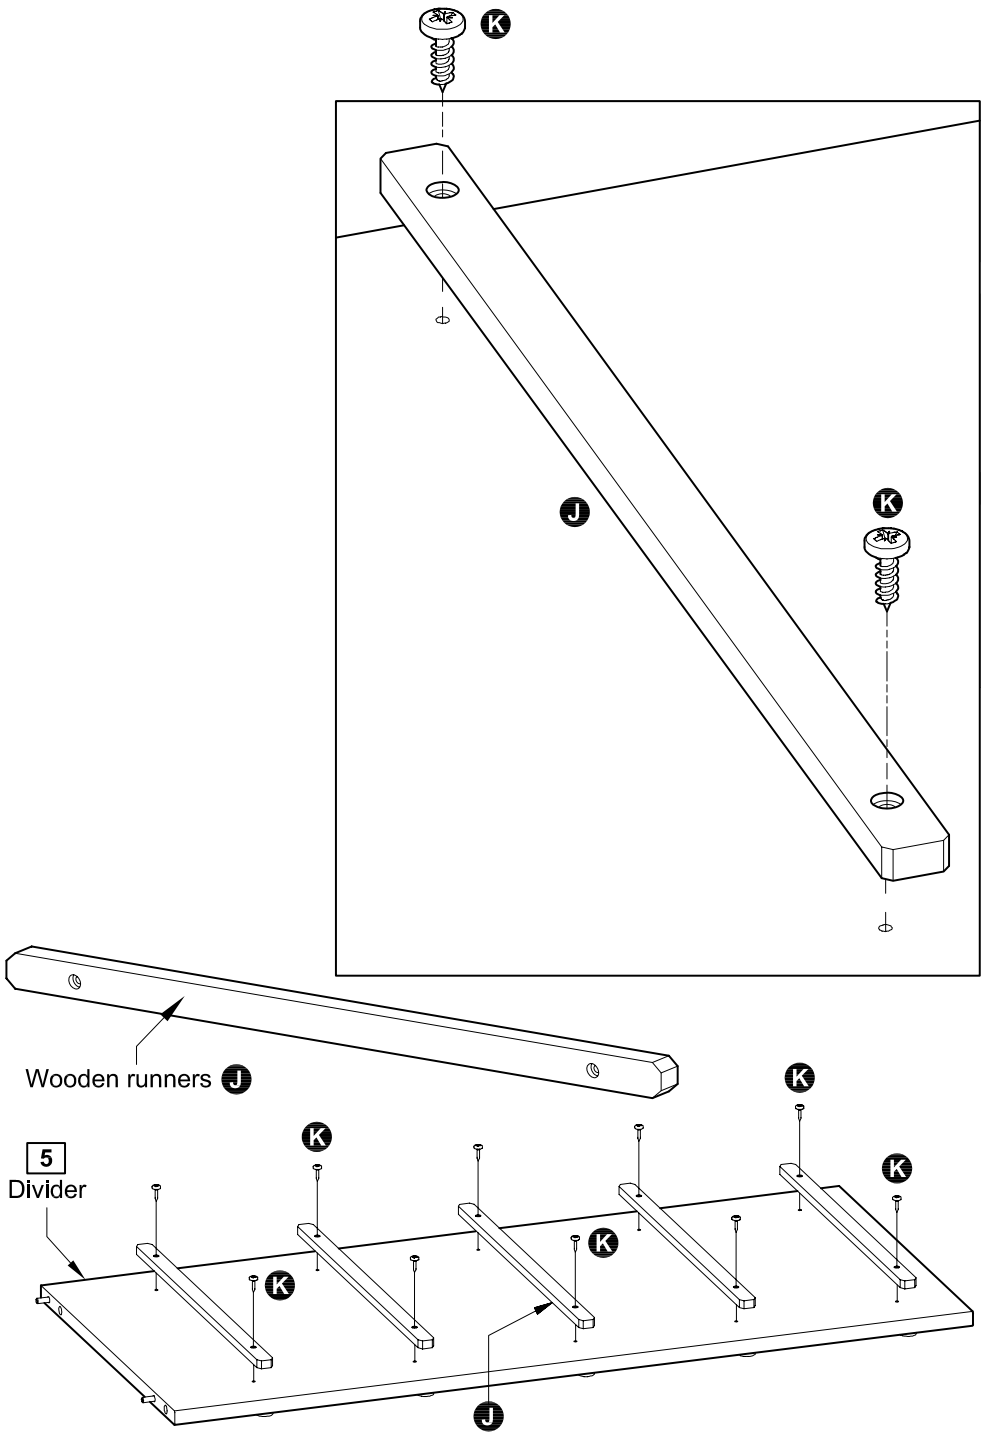


Step 10

Mounting the locking pins to the top.

Screw the locking pins C into the holes indicated on the top 3.

Note: Insert locking pins C as far as shown. **Do not over tighten.**

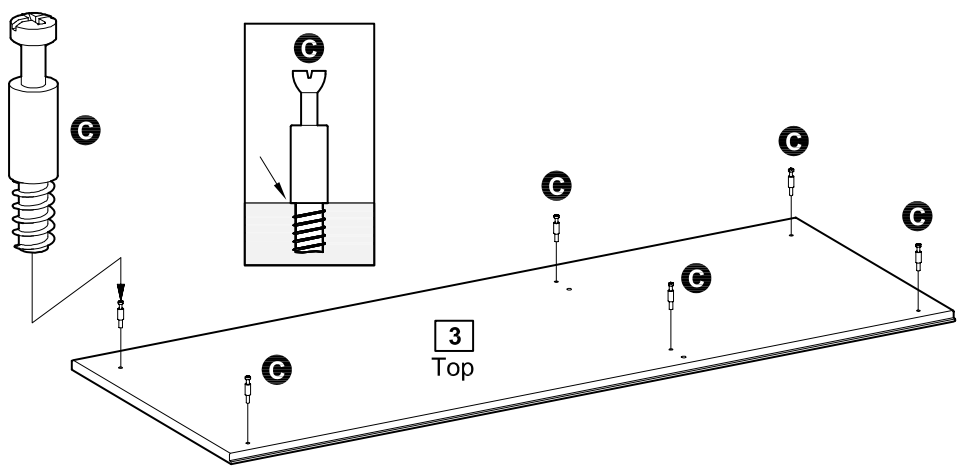

Step 11


Assembling the top to the divider.

Fit the divider [5] onto the top [3].

See page 4 "Function of cam and locking pin".

Place the large cams Ⓐ into the holes indicated, arrows pointing towards the top / locking pins.

To tighten cams: Turn to the right using a screwdriver.

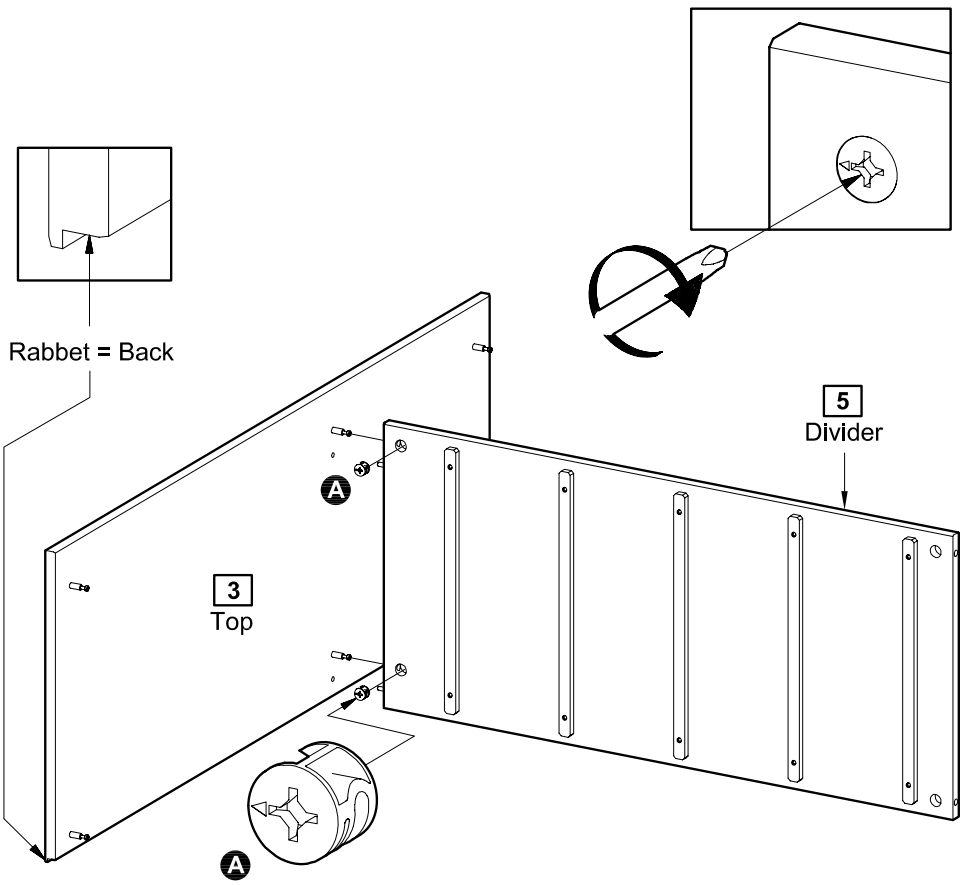

Step 12


Assembling the top and the divider to the sides.

Attach the top [3] and the divider [5] onto the sides [1] and [2] and the plinths [4].

See page 4 "Function of cam and locking pin".

Place the large cams Ⓐ into the holes indicated, arrows pointing towards the top and the divider / locking pins.

To tighten cams: Turn to the right using a screwdriver.

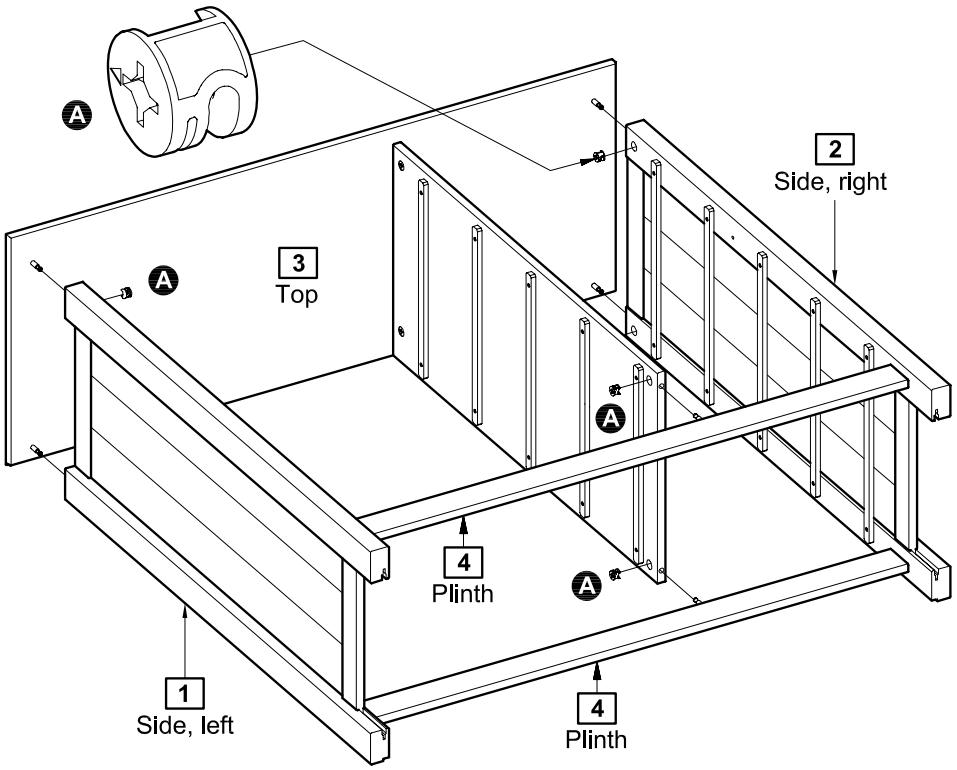

Step 13

Nailing the back to the top and sides.

Place the back 6 into the rabbet of the top 3 and the side 2.


Ensure that there is no gap between the right hand side 2 and the back 6 , nor between the top and the back.


Fasten the back with nails D along the top.


The angle between the top and the side must be 90 degrees.

To accomplish this, ensure that there is no gap between the right hand side 2 and the back 6.

Fasten the back with nails D along the sides.

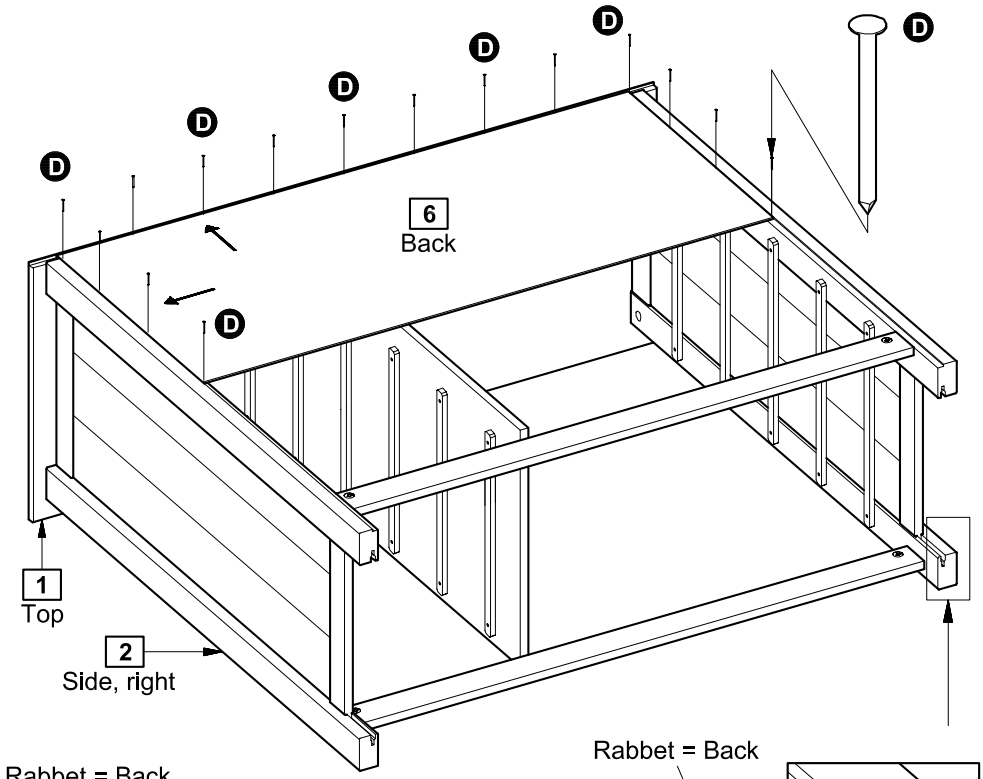

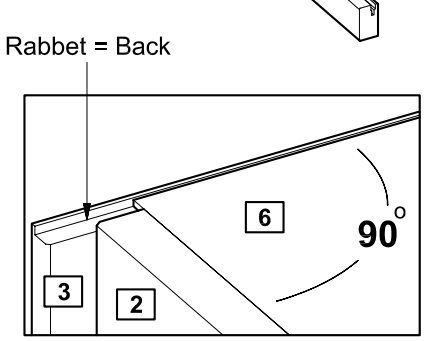

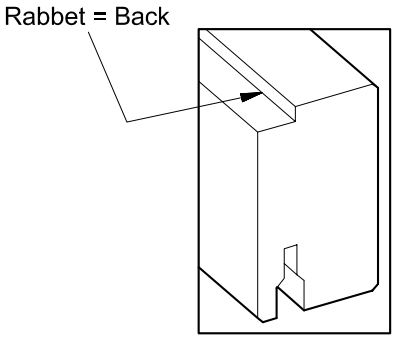


Step 14

Adding the lower back and the joining strip.

Place the joining strip Q in between the upper and lower backs 6.

Fasten the back with nails D along the sides.

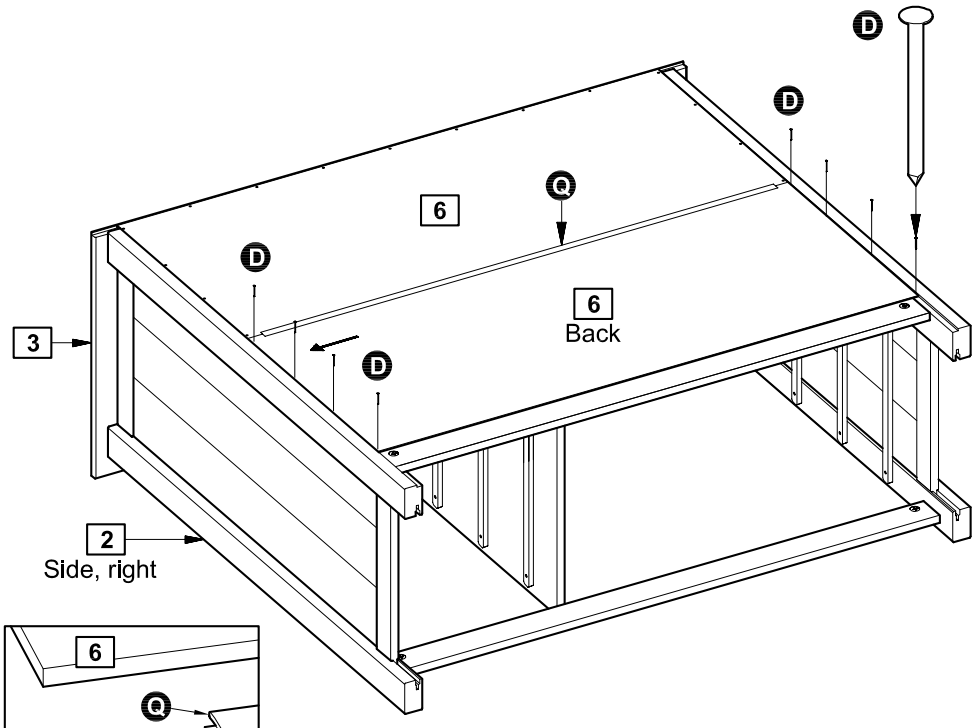

Step 15

Large drawer assembly.

a: Fix the drawer sides 11 and 12 to the large drawer back 9 using screws E .

b: Slide the large drawer bottom 13 into the grooves of the drawer frame.

c: Screw the locking pins C into the holes indicated on the large drawer front 7.


Note: Insert locking pins C as far as shown. **Do not over tighten.**

d: Press the large drawer front 7 onto the drawer sides 11 and 12 . Place the small cams B into the holes indicated, arrows pointing towards the drawer front / locking pins.
To tighten cams: Turn to the right using a screwdriver.
"Function of cam and locking pin" see page 4.


e: Fix the knobs G to the large drawer front 7 using screws E.

Repeat with remaining drawers.


a:

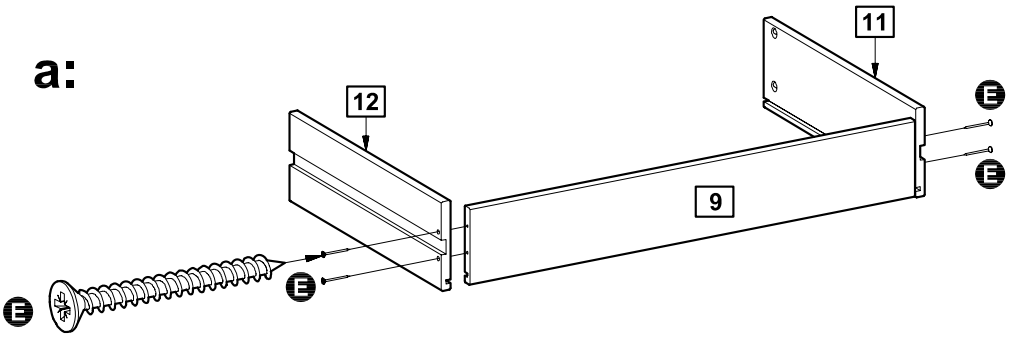


b:

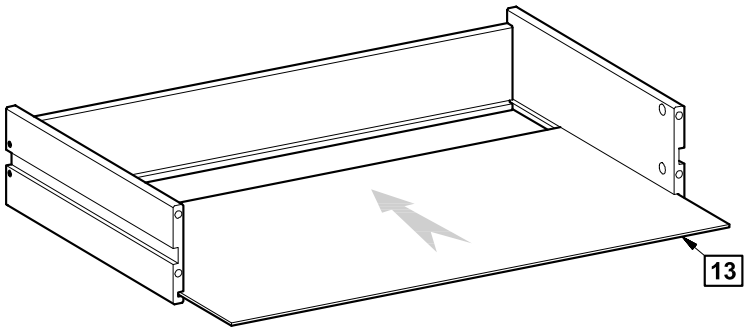


c:

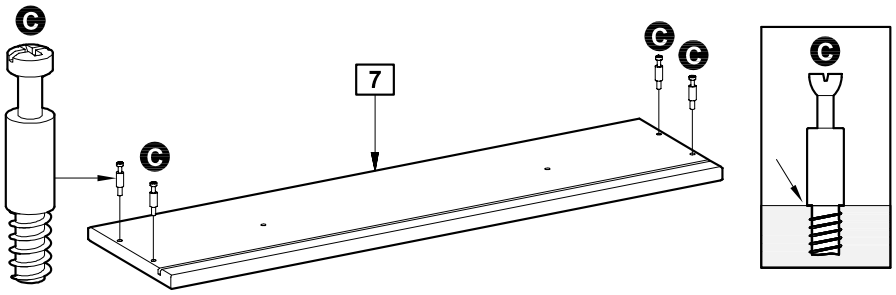

d:

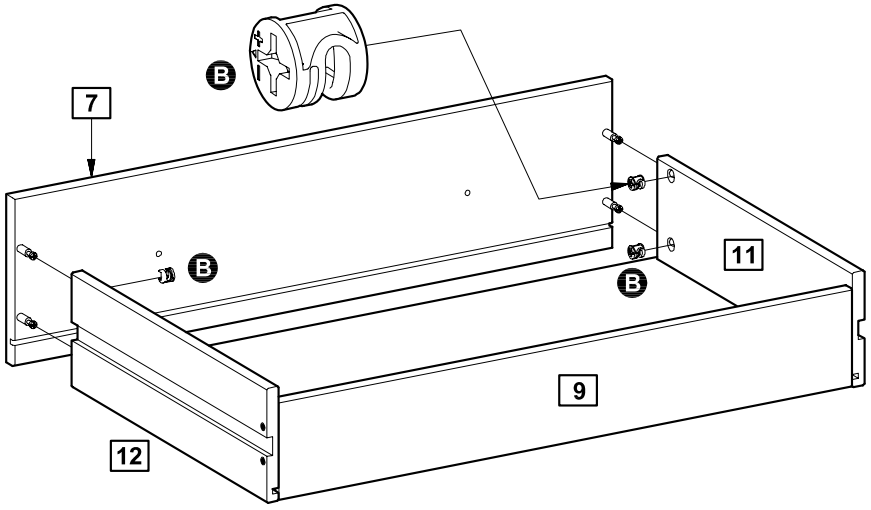

e:

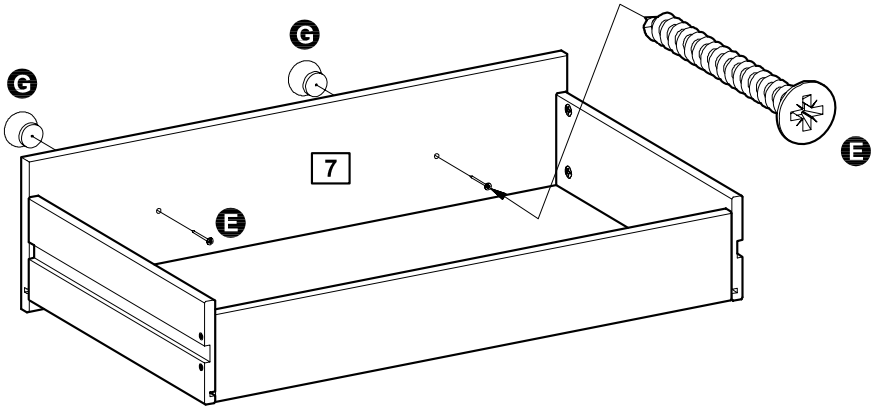

Step 16

Small drawer assembly.

a: Fix the drawer sides [11] and [12] to the small drawer back [10] using screws Ⓔ .

b: Slide the small drawer bottom [14] into the grooves of the drawer frame.

c: Screw the locking pins Ⓒ into the holes indicated on the small drawer front [8].


Note: Insert locking pins Ⓒ as far as shown. **Do not over tighten.**

d: Press the small drawer front [8] onto the drawer sides [11] and [12] . Place the small cams Ⓑ into the holes indicated, arrows pointing towards the drawer front / locking pins.
To tighten cams: Turn to the right using a screwdriver.
"Function of cam and locking pin" see page 4.


e: Fix the knob Ⓖ to the small drawer front [8] using screw Ⓔ.

Repeat with remaining drawers.


a:

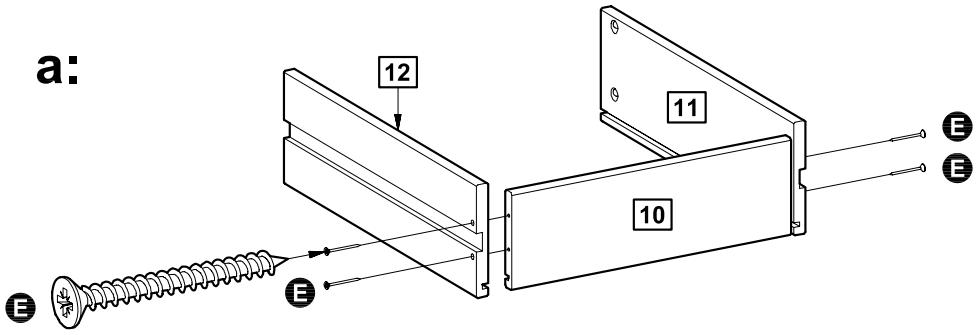


b:

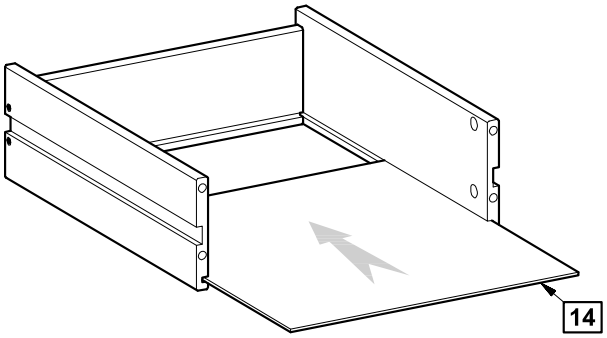


c:

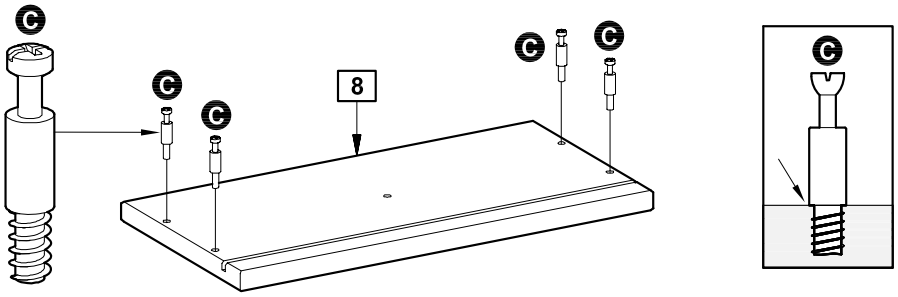

d:

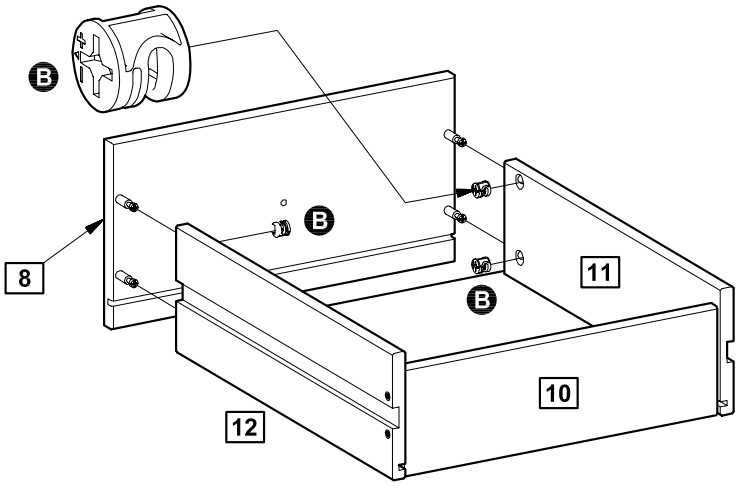


e:

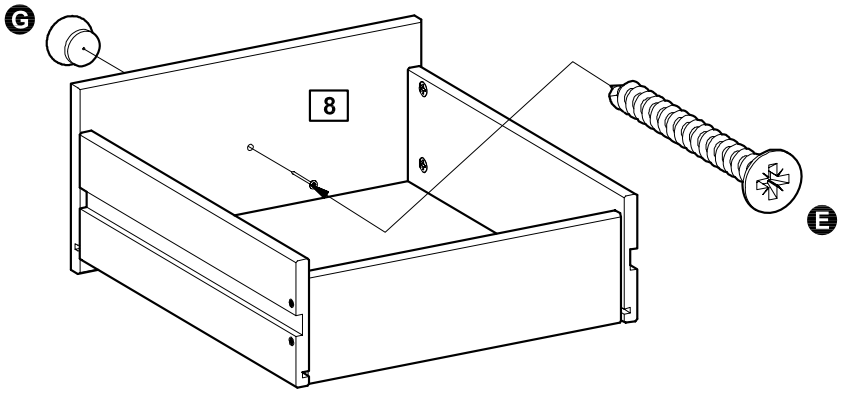

Step 17

Adding the drawers to the carcass.

Slide the drawers onto the wooden runners.

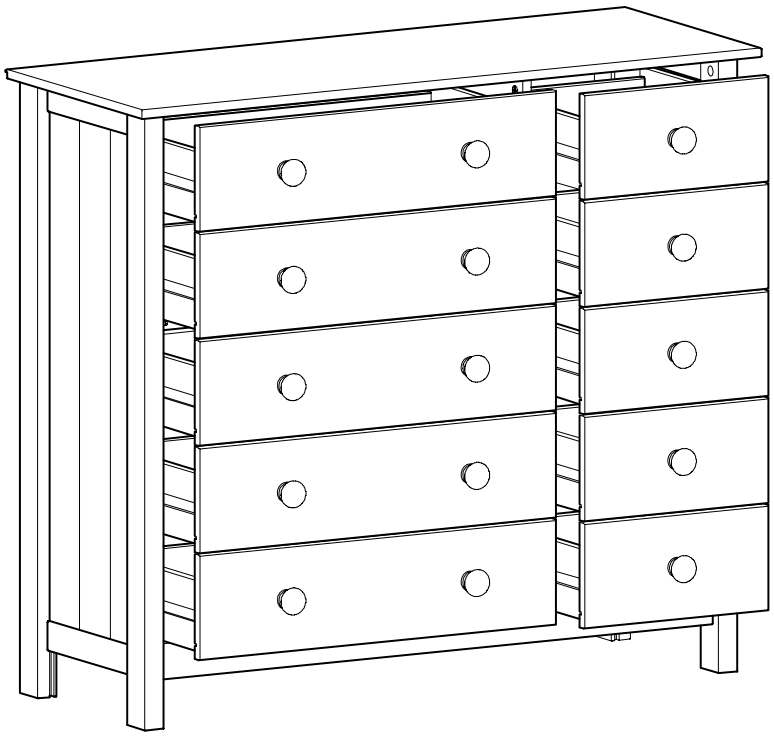

Step 18

Fixing to wall.

It is recommended that the drawer chest is fixed to a wall.

Fix wall strap (N) to top of drawer chest using screw (M).

With help, move drawer chest into position.

Warning:
The drawer chest is heavy.
Lift with care.


Mark fixing hole on wall and remove drawer chest.

Drill 7mm hole and insert wall plug (O).

Warning:
Before drilling, check wall for hidden pipes and cables.


Reposition drawer chest and fix wall strap using screw (L) .

Assembly is complete.

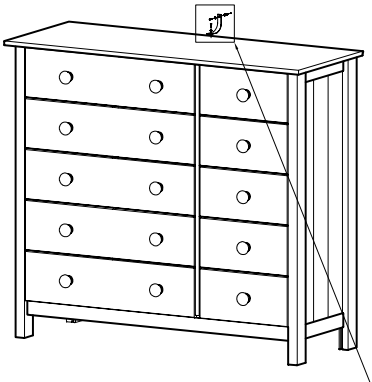

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

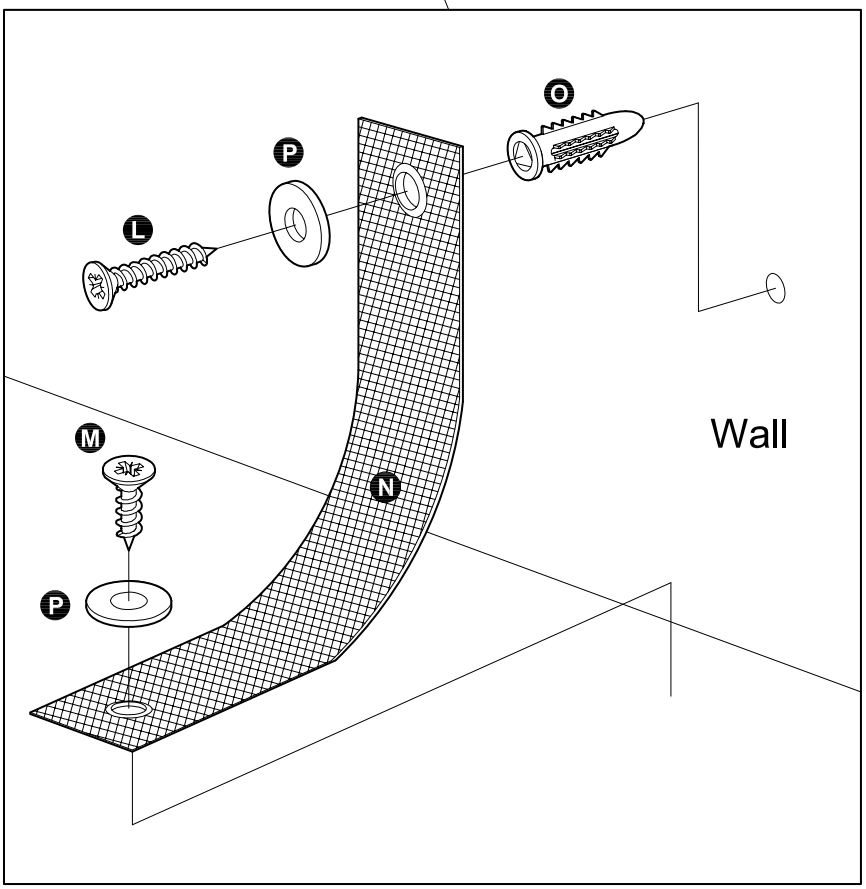

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: **General rule**: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

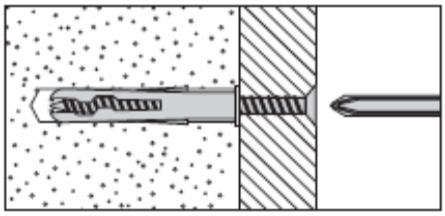


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

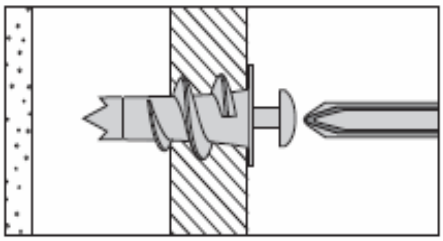


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

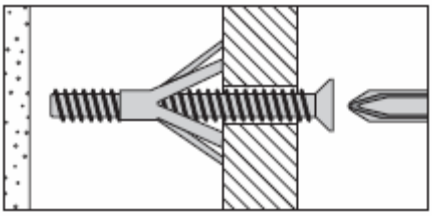


For use with plasterboard partitions or hollow wooden doors.

No.4 "**Cavity Fixing-Heavy Duty" wall plug**

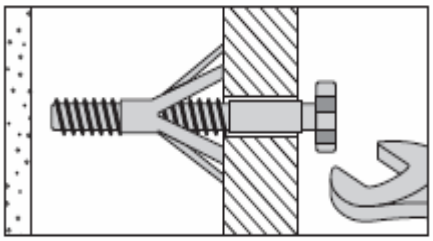


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

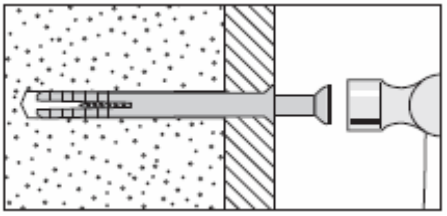

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

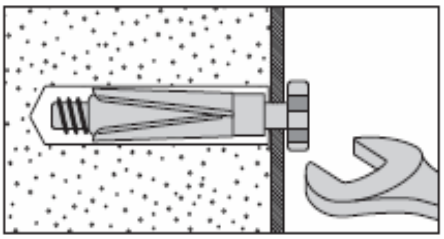

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Dear Customer

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.