













Scandinavia

4 door robe w/ 2+4 drws.

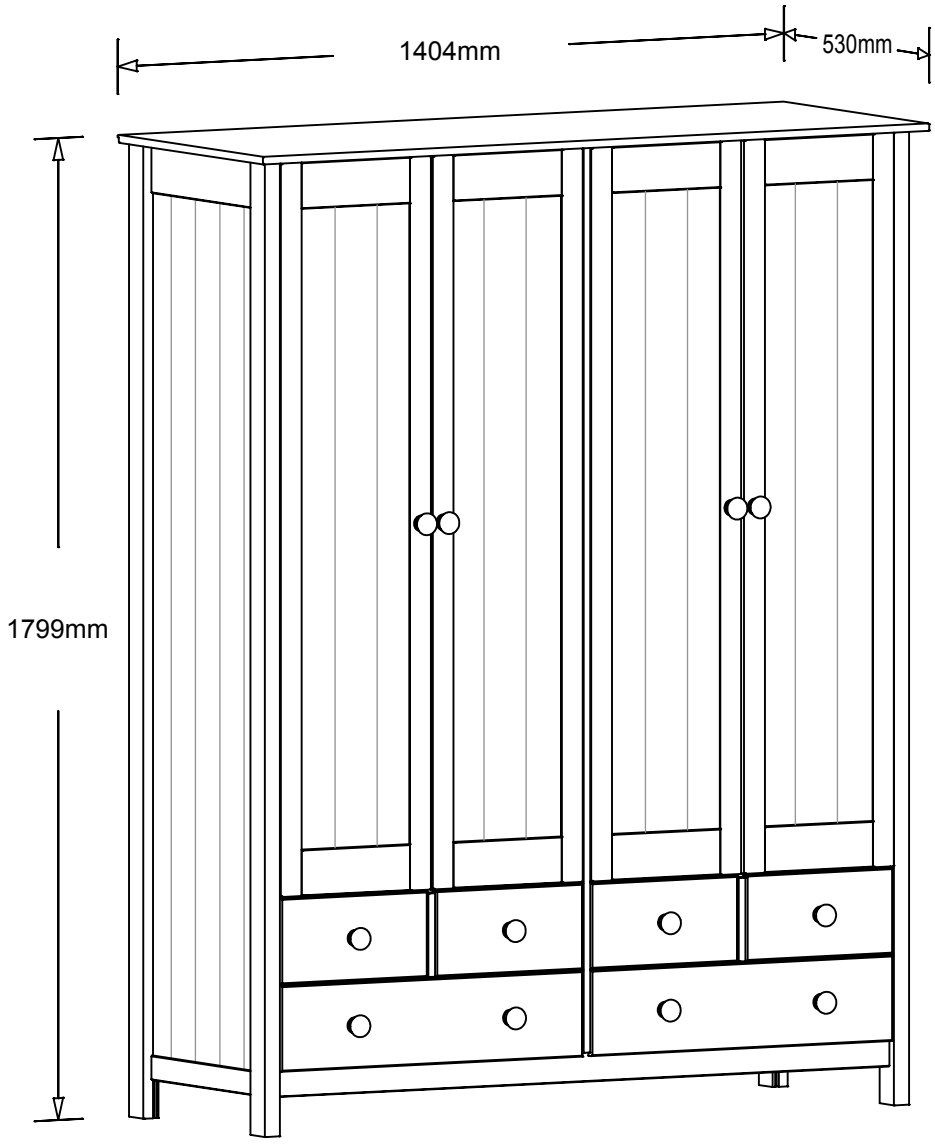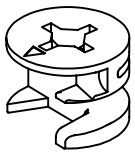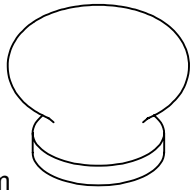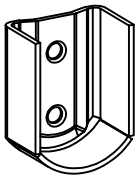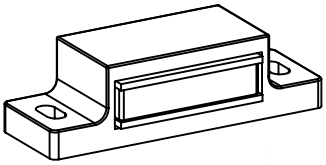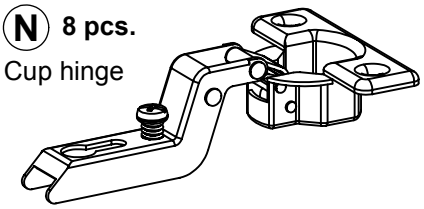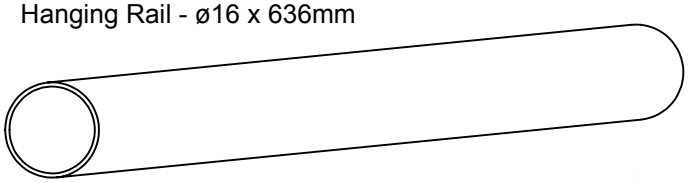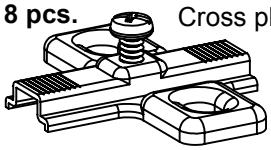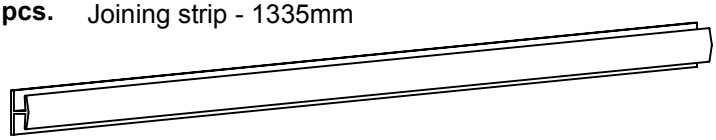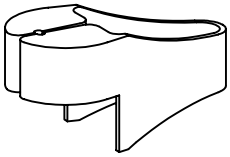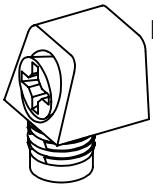


Please sort out all parts before you begin to assemble the item.
This to make sure you always use the correct part.

Fittings contained in the Box.


A **22 pcs.** Cam  ø15 x 12mm	**B** **24 pcs.** Cam  ø12 x 10,5mm	**C** **42 pcs.** Bolt - ø6,5 x 24/11mm 
D **50 pcs.** Nail - 1,2 x 20mm 	**E** **2 pcs.** Bolt - ø6mm 	
G **40 pcs.** Screw - ø3,5 x 12mm 	**H** **8 pcs.** Screw - ø3,5 x 25mm 	**J** **36 pcs.** Screw - ø3,5 x 35mm 
K **12 pcs.**  Knob ø40 x 30mm	**L** **4 pcs.** Hanging rail cup 	**M** **4 pcs.** Magnet 
N **8 pcs.** Cup hinge 	**P** **2 pcs.** Hanging Rail - ø16 x 636mm 	
Q **8 pcs.** Cross plate 	**R** **2 pcs.** Joining strip - 1335mm 	
S **1 pcs.** Nail guide 	**T** **2 pcs.** Mini block 	**Hazard Warning ! Keep small components out of the reach of children.**

Fittings A, B, C, D, E, G, H and J are shown in their actual dimensions.


Tools Needed.

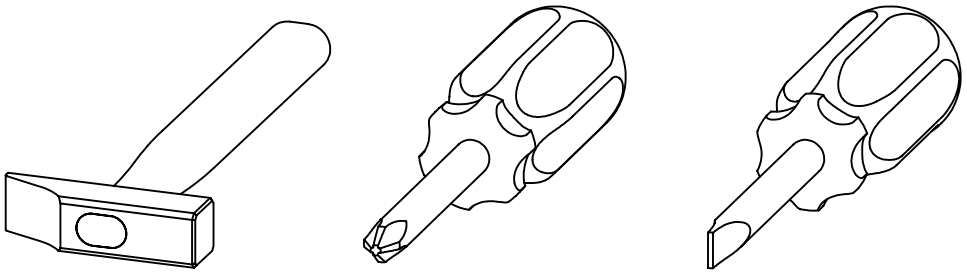

Wooden parts contained in the box.

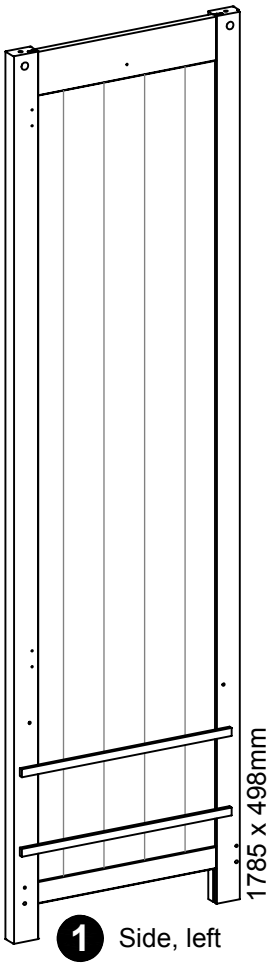


1 Side, left
1 pcs.

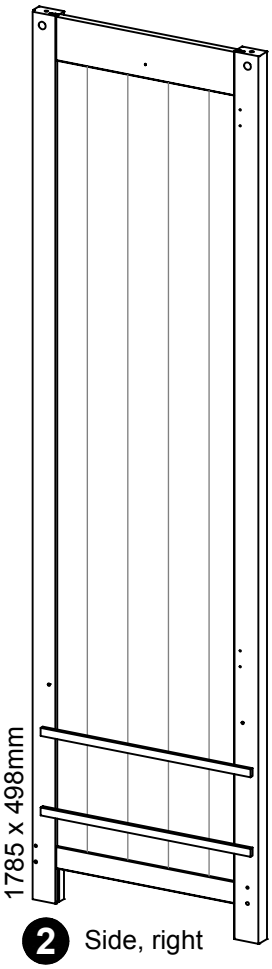


2 Side, right
1 pcs.


3 Divider, large
1 pcs.

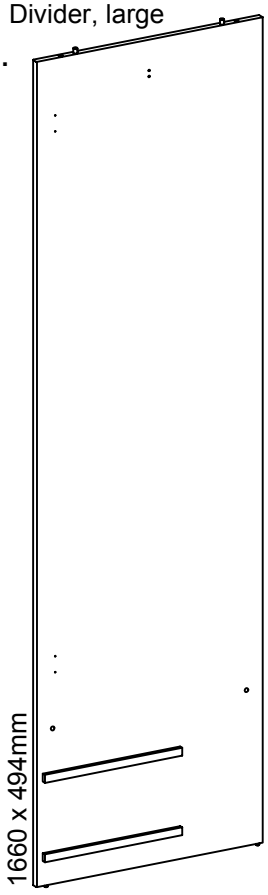


4 Door, right
2 pcs.

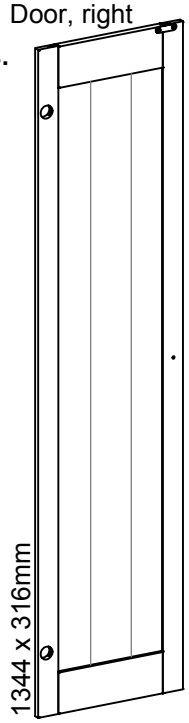


5 Door, left
2 pcs.

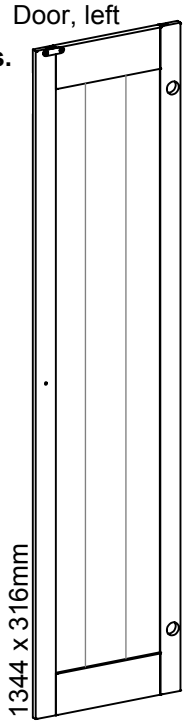


6 Top
1 pcs.

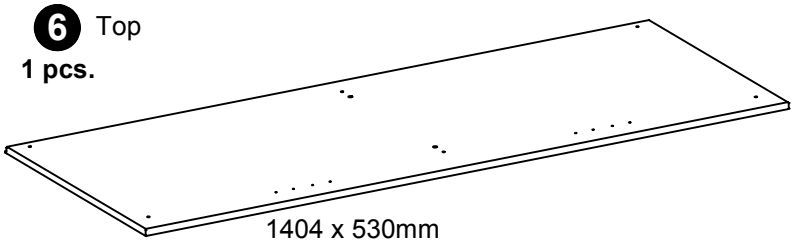


7 Plinth
2 pcs.

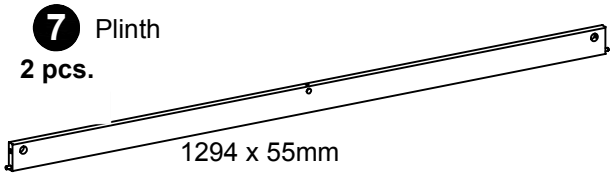


8 Bottom
2 pcs.

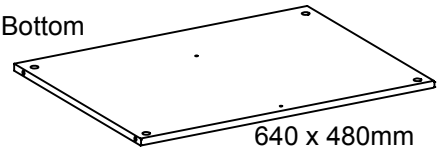


9 Divider, small
2 pcs.

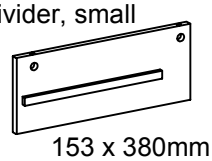


10 Drawerfront, large
2 pcs.

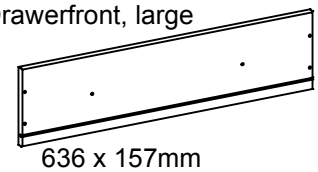


11 Drawerfront, small
4 pcs.




12 Back
4 pcs.

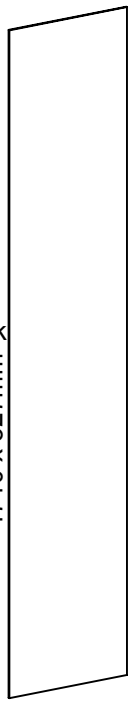


13 Drawerside, right
6 pcs.

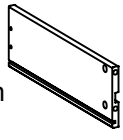


14 Drawer side, left
6 pcs.

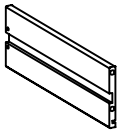


15 Drawerback, small
4 pcs.




16 Drawer back, large
2 pcs.

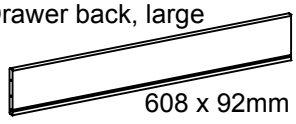

17 Drawerbottom, small
4 pcs.




18 Drawerbottom, large
2 pcs.

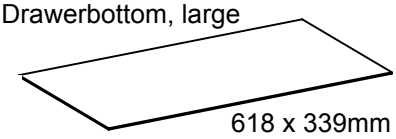

A Guide to

Wall Mounting & Fixings

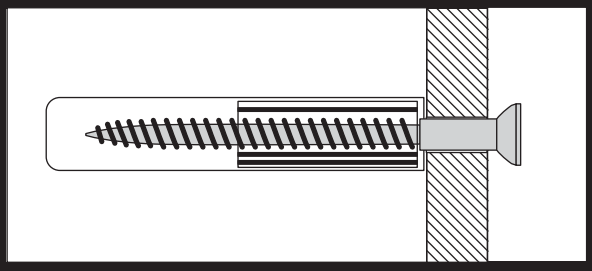

IMPORTANT:
When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

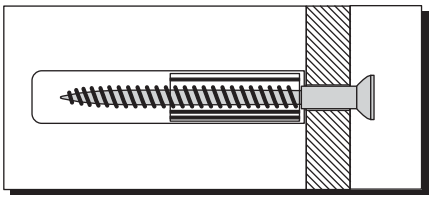


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

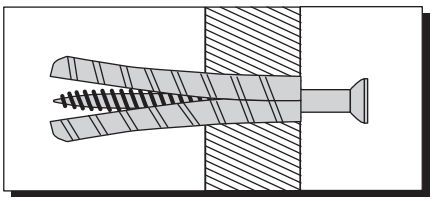


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

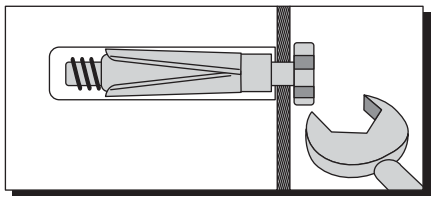


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

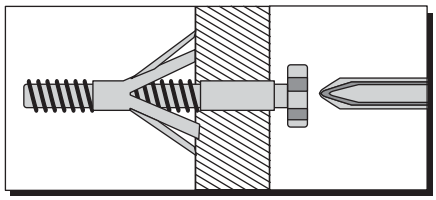


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

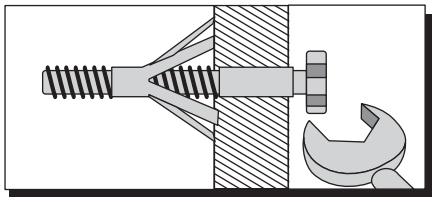

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

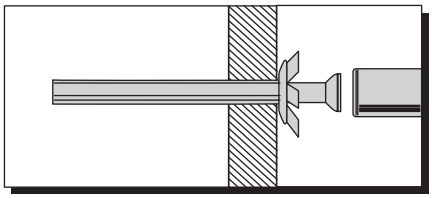


For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **SAFETY**
Always check the fitting and location to ensure your safety in and around the home.

⚠ **FITTING**
From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Key diagram.

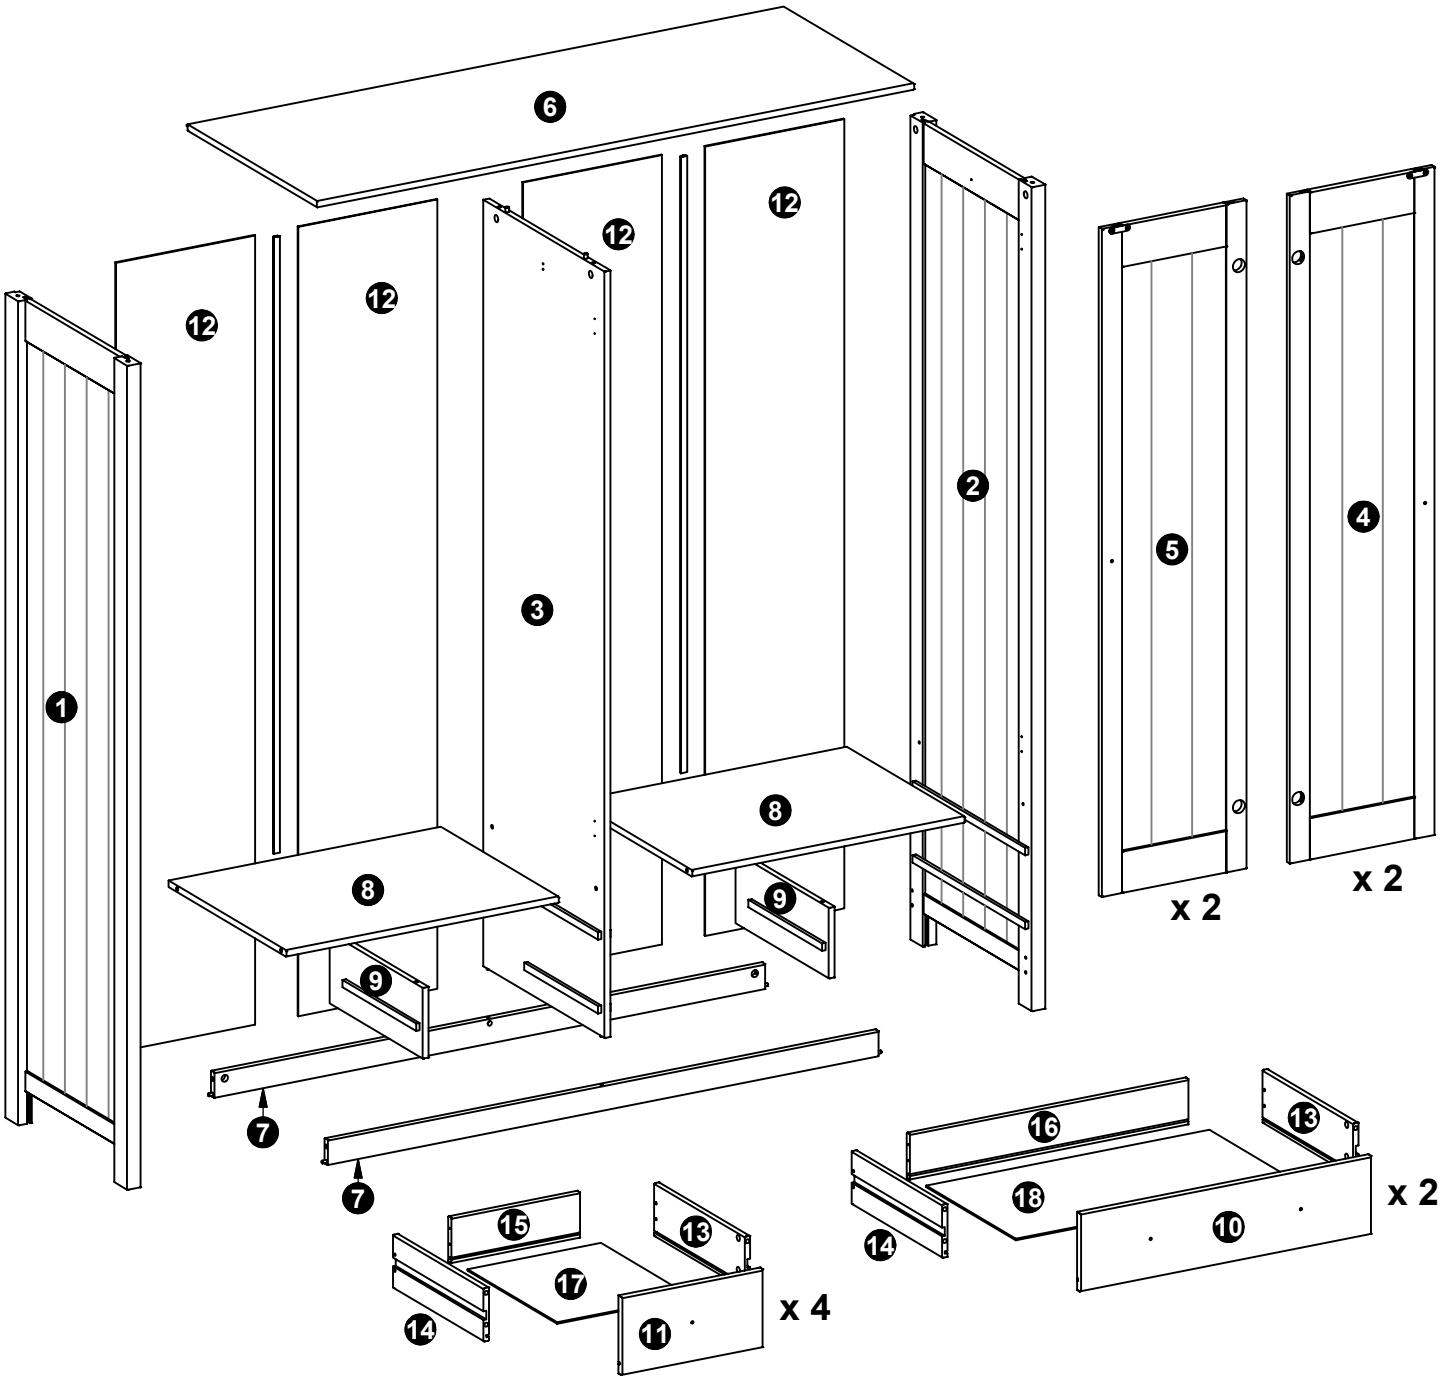


Function of cam & bolt.

Step 1:
Fix the bolt to the wooden panel.

Step 2:
Push the wooden panel with the attached bolt onto the other wooden panel.


Step 3:
Place the cam into the hole, arrow pointing towards the bolt.

Step 4:
Tighten: Turn the cam to the right.

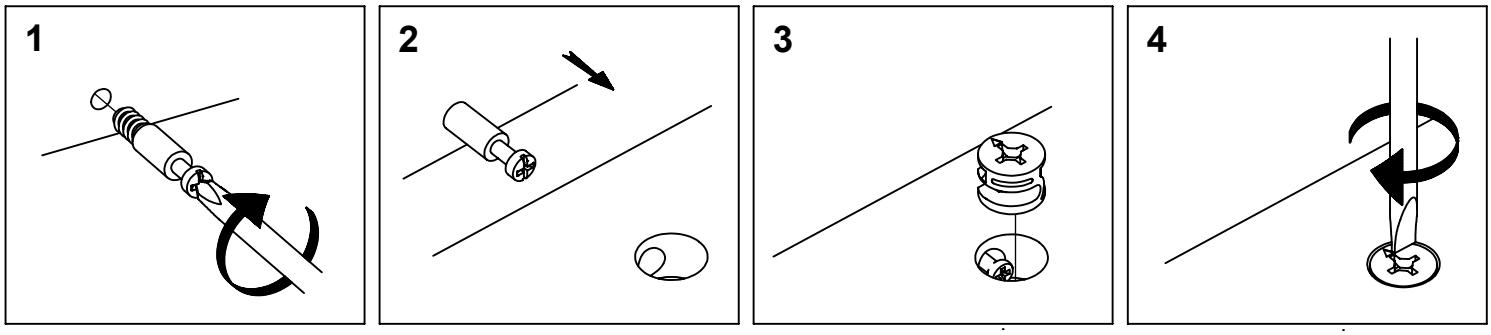

1. Mounting the cross plates to the sides.

Fix the cross plates "Q" to the sides "1" and "2" using screws "H" into the holes indicated.

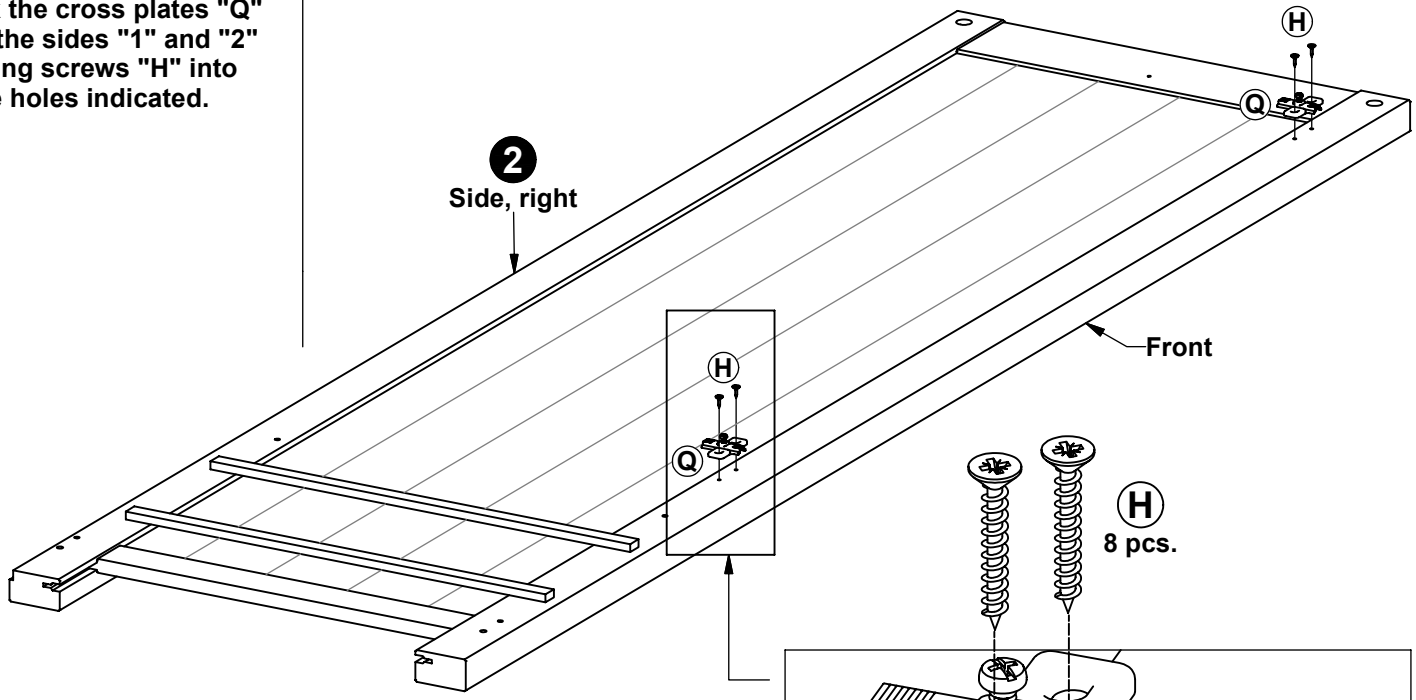

It is important that the cross plates is placed exactly as shown.

The short end of the cross plates must point towards the front edge of the sides.

See fig. 1.1


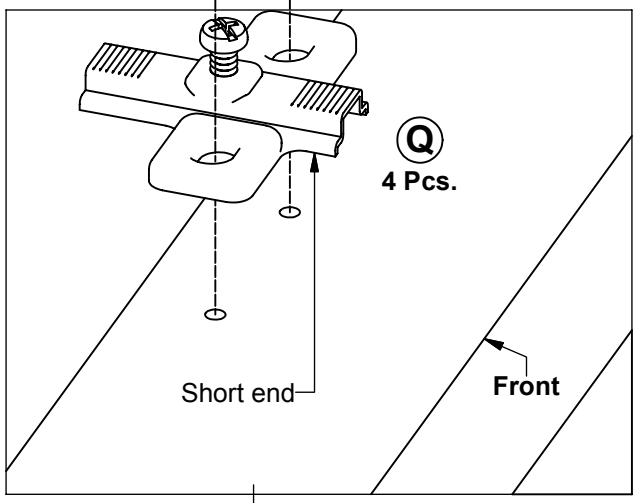


Fig. 1.1

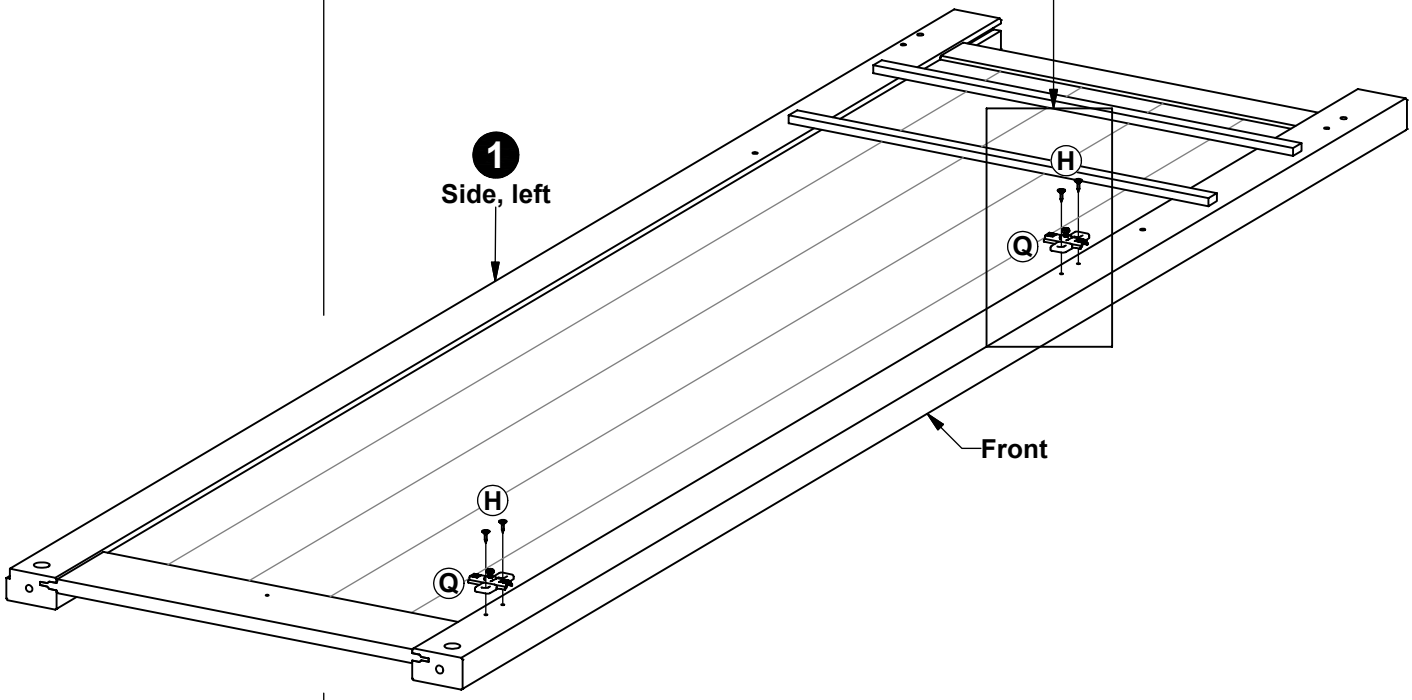

2. Mounting the hanging rail cups to the sides.

Fix the hanging rail cups "L" onto the sides "1" and "2" using screws "G" into the pre-drilled holes.

See fig. 2.1


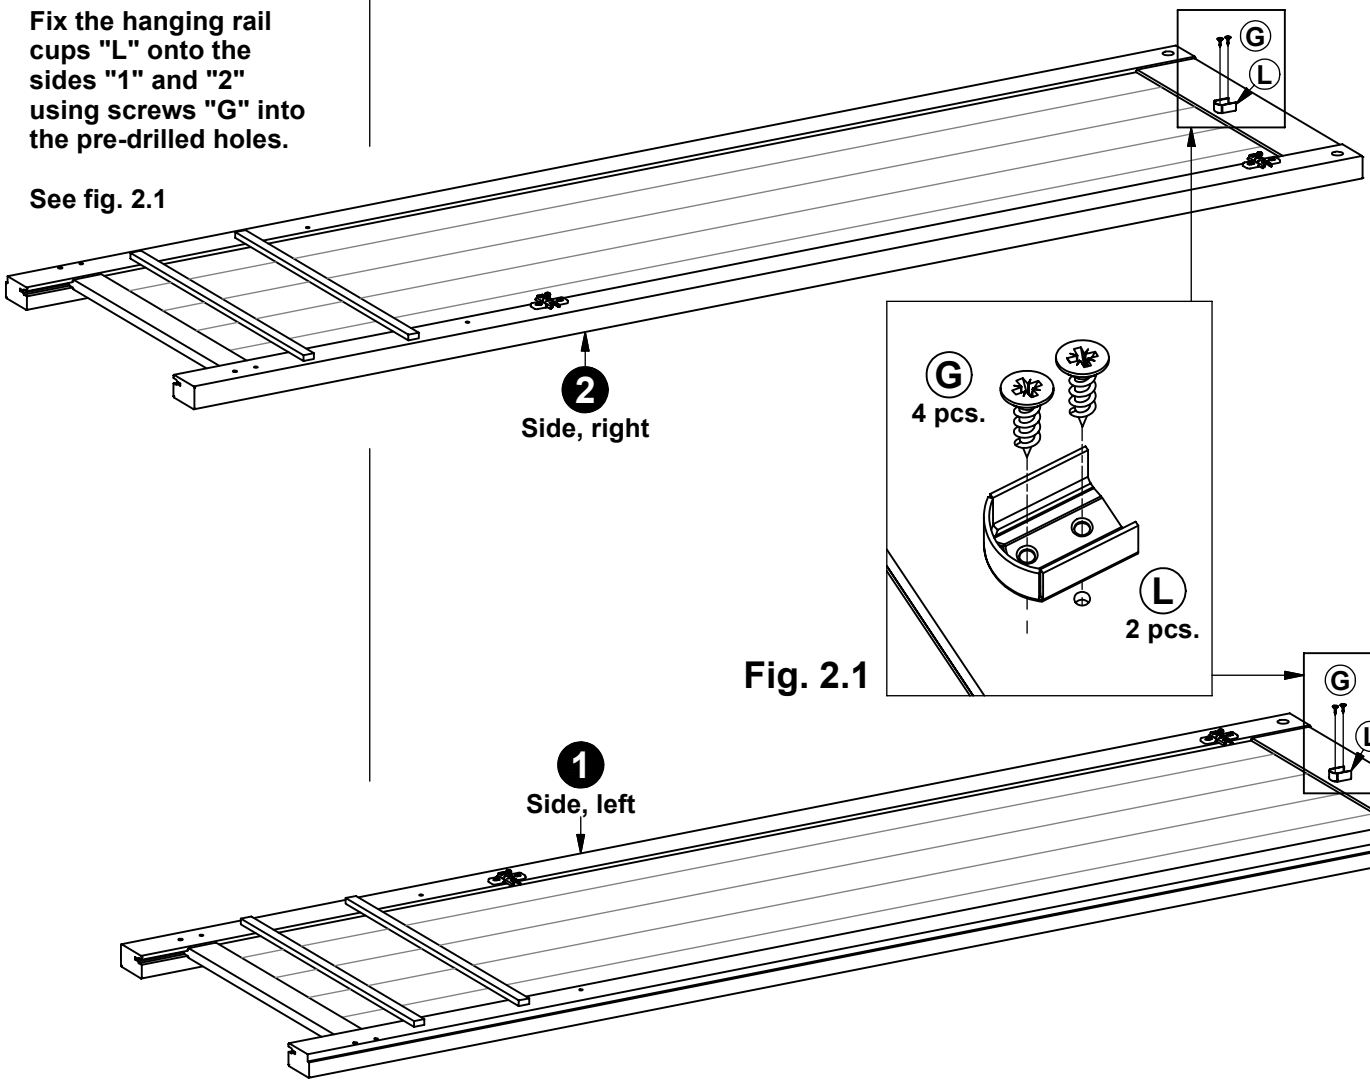


Fig. 2.1

3. Mounting the bolts to the sides.

Screw the bolts "C" into the holes indicated on the sides "1" and "2".

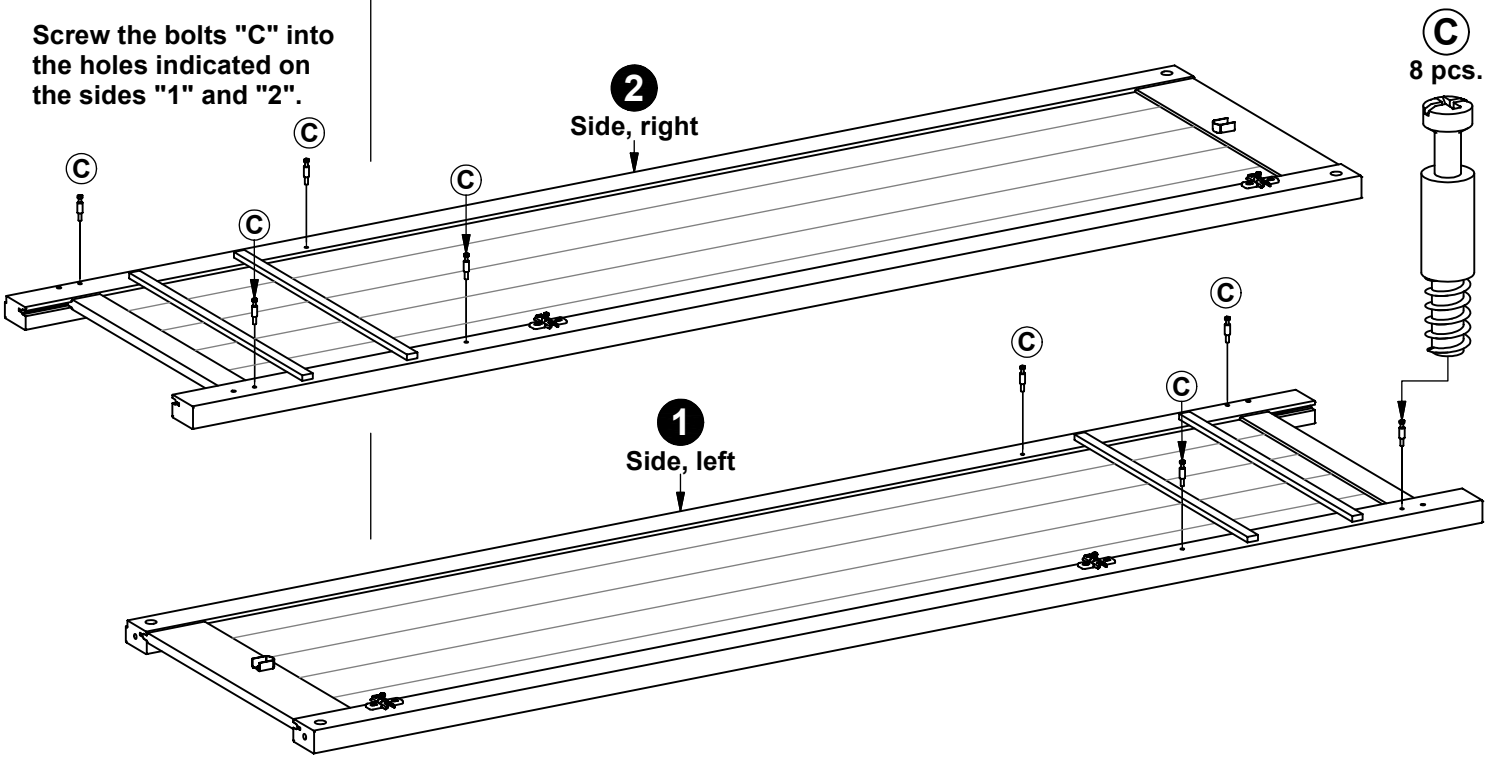

4a. Mounting the cross plates to the large divider.

Fix the cross plates "Q" to the left hand side of the large divider "3" using screws "G" into the holes indicated.

It is important that the cross plates is placed exactly as shown.

The short end of the cross plates must point towards the front edge of the sides.

See fig. 4a.1

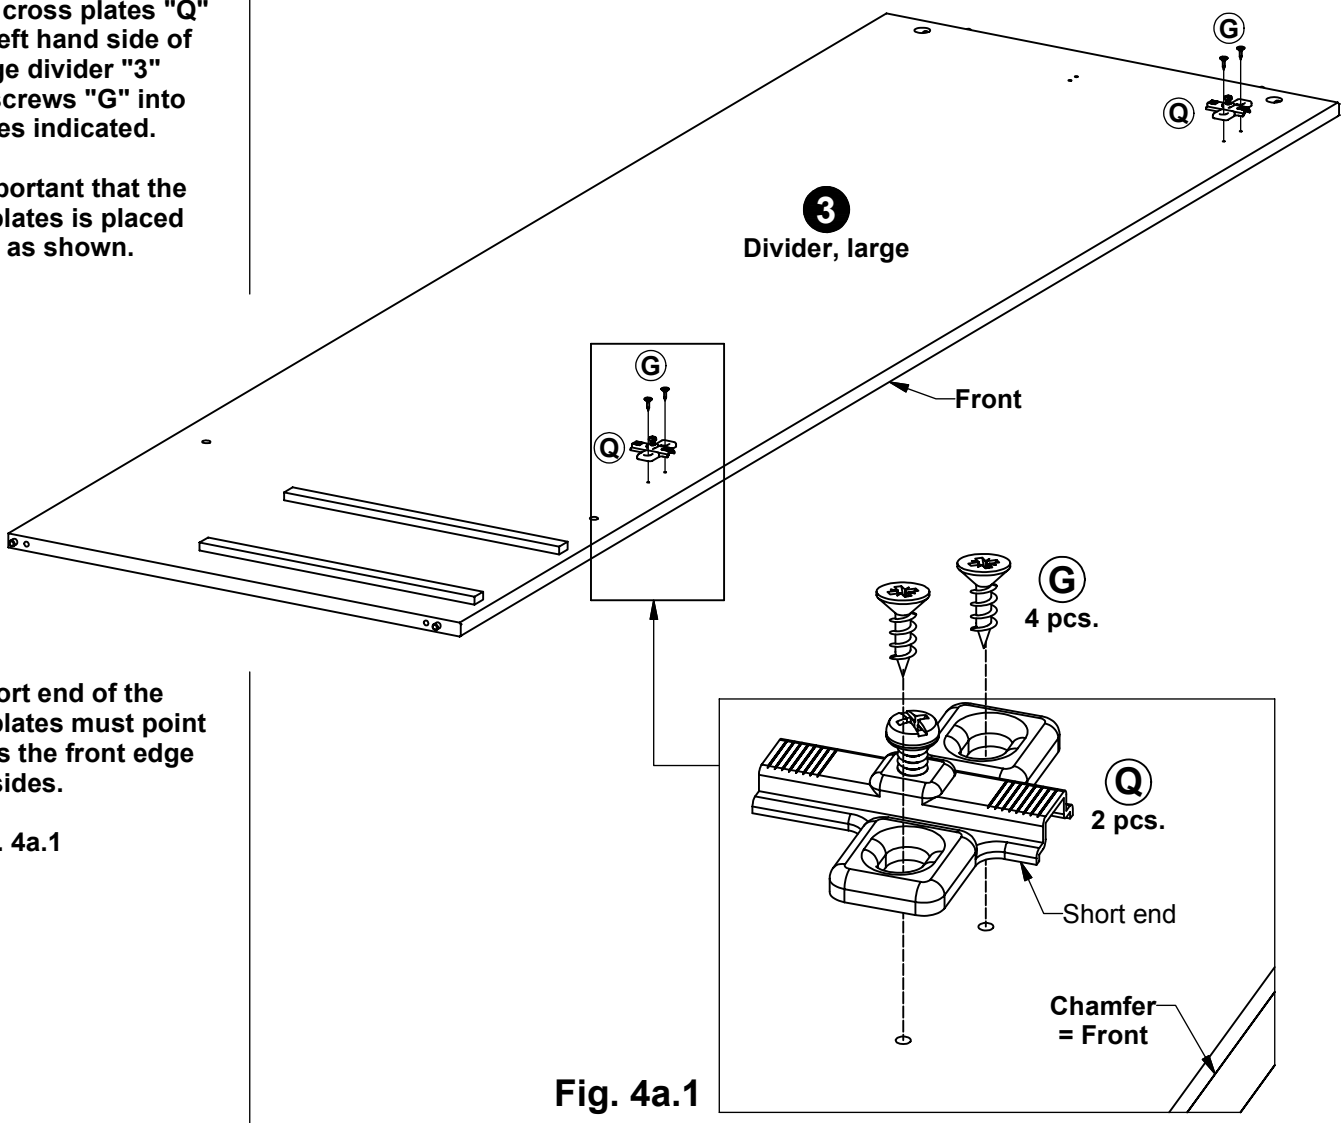


Fig. 4a.1


4b. Mounting the cross plates to the large divider.

Fix the cross plates "Q" to the right hand side of the large divider "3" using screws "G" into the holes indicated.

It is important that the cross plates is placed exactly as shown.

The short end of the cross plates must point towards the front edge of the sides.

See fig. 4a.1

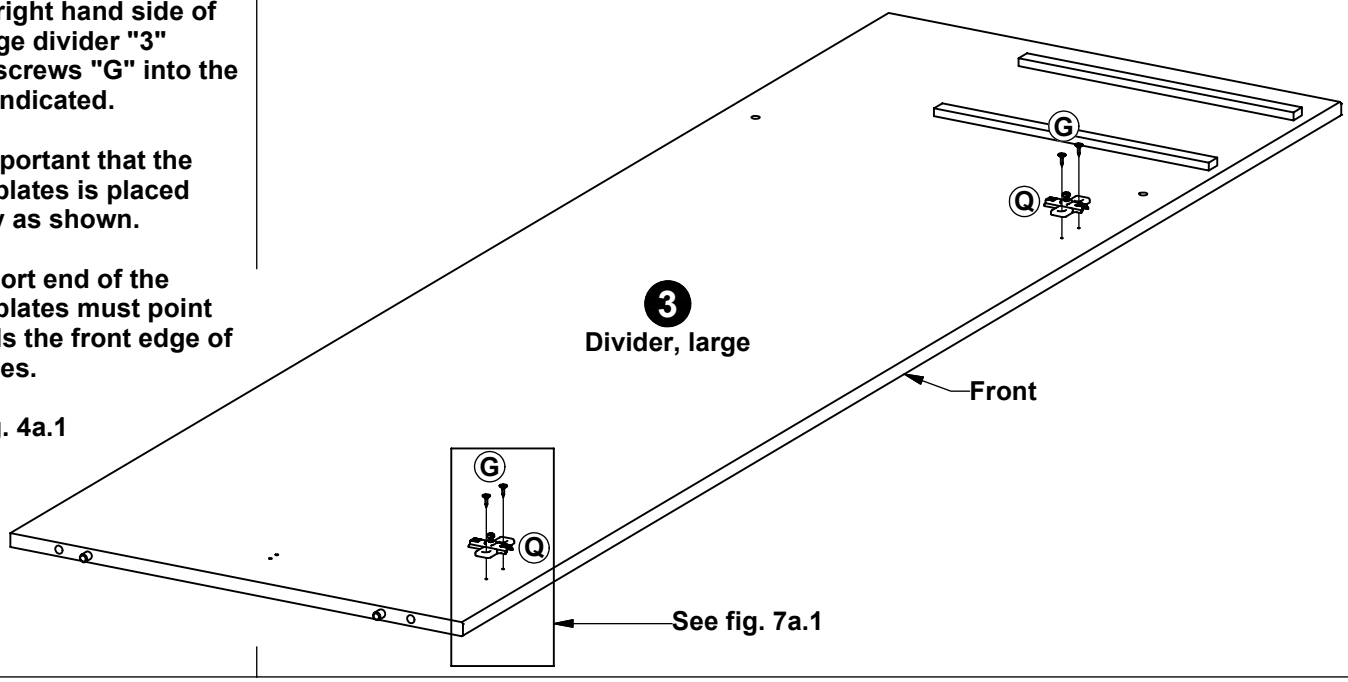



5a. Mounting the hanging rail cup to the large divider.

Fix the hanging rail cup "L" to the left hand side of the large divider"3" using screws "G" into the pre-drilled holes.

See fig. 5a.1

Fig. 5a.1

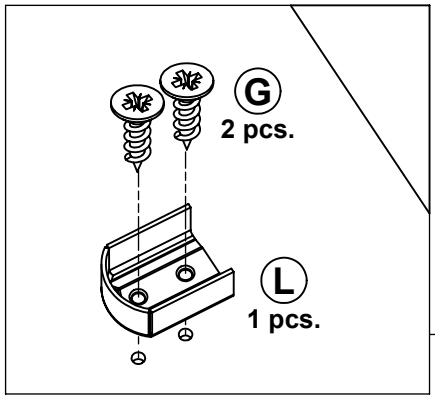


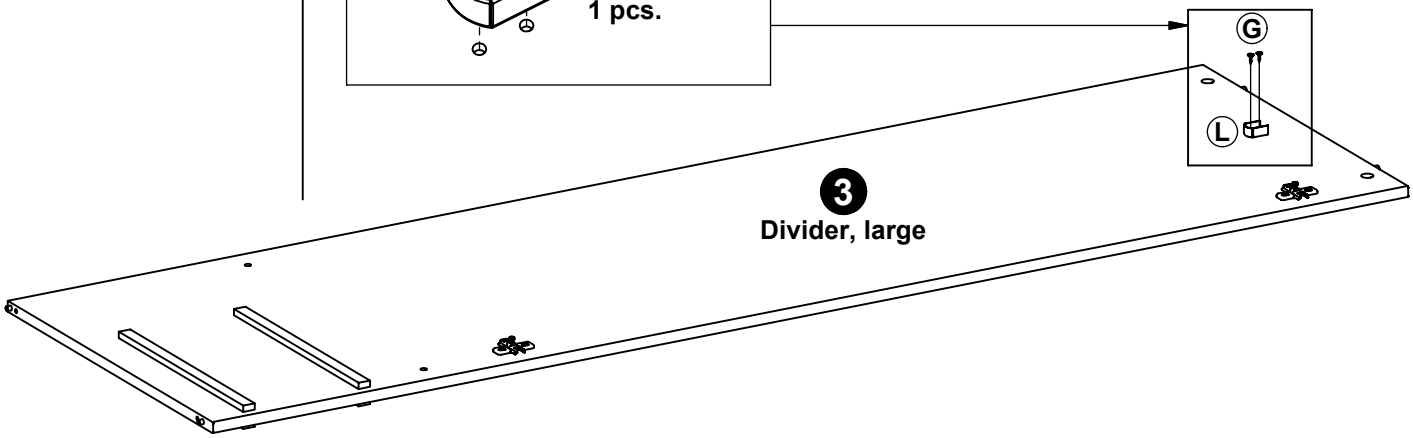

5b. Mounting the hanging rail cup to the large divider.


Fix the hanging rail cup "L" to the right hand side of the large divider"3" using screws "G" into the pre-drilled holes.

See fig. 5a.1

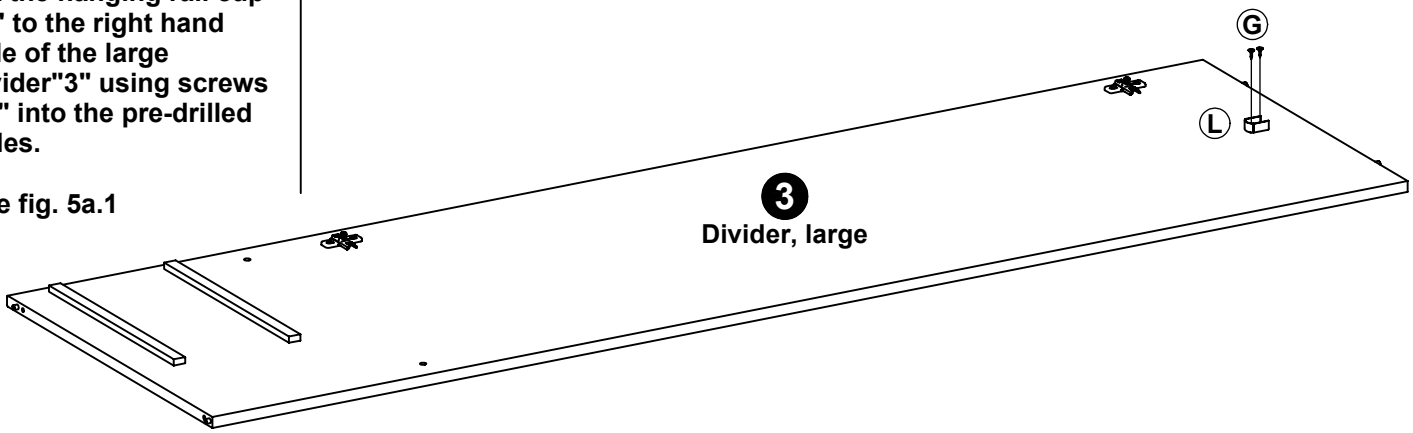


6. Mounting the bolts to the top.

Screw the bolts "C" into the holes indicated on the top "6".

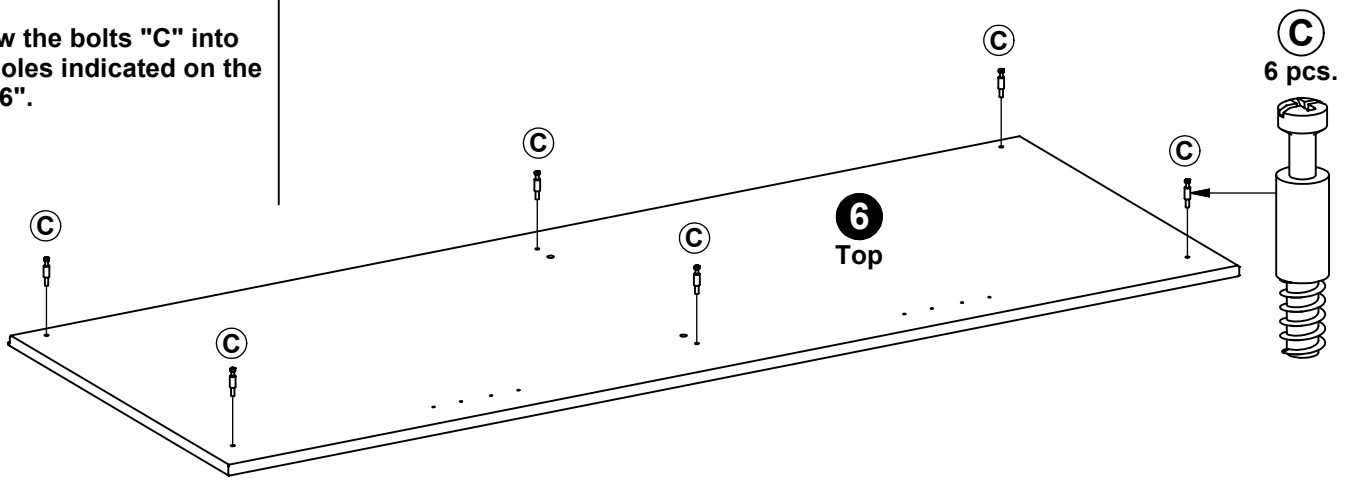

7. Mounting the magnets to the top.

Fix the magnets "M" to the top "6" using screws "G" into the pre-drilled holes.

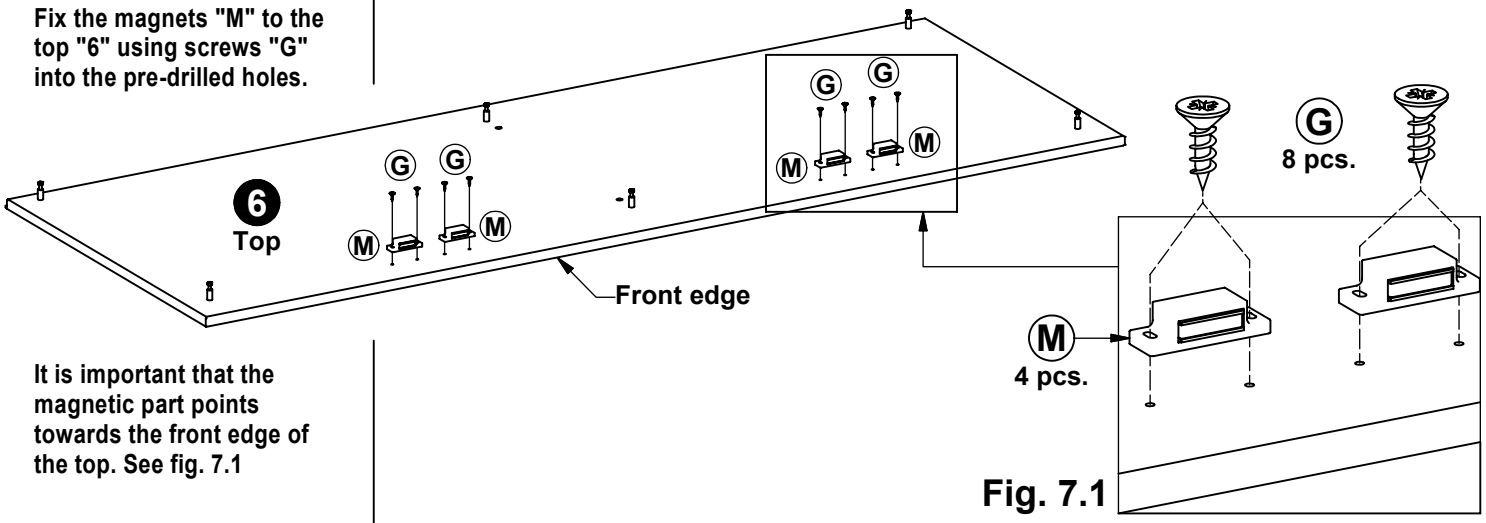


It is important that the magnetic part points towards the front edge of the top. See fig. 7.1

Fig. 7.1

8. Mounting the bolts to the bottoms.

Screw the bolts "C" into the holes indicated on the bottom "8".

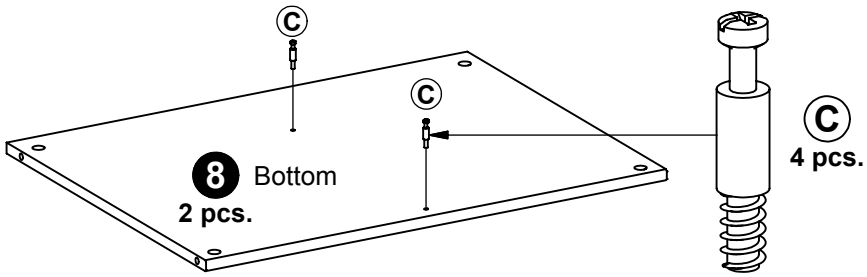

9. Assembling the small dividers to the bottoms.

Press the small divider "9" onto the bottom "8".

See page 4 - "Function of cam & bolt".

Place the cams "A" into the holes indicated, arrows pointing towards the bottom/bolt.

Tighten:
Turn the cam "A" to the right.


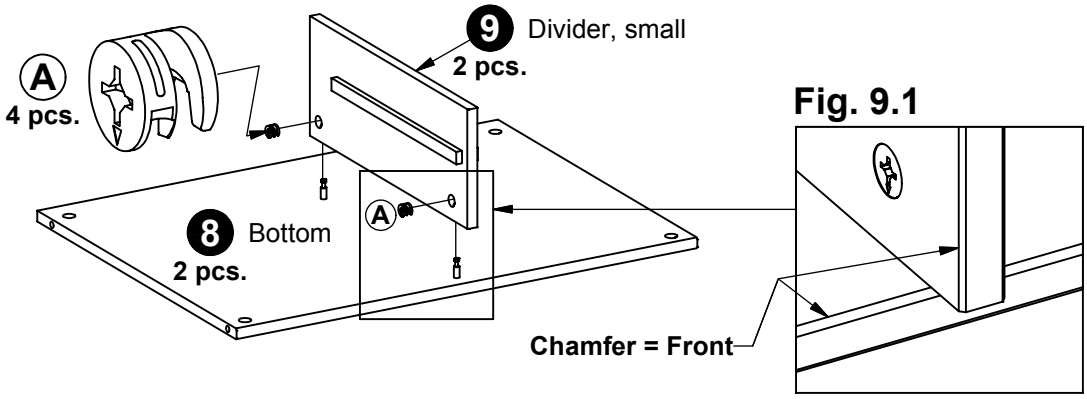


Fig. 9.1

10. Adding the mini blocks to the plinths.

Knock the mini blocks "T" into the holes indicated on the plinths "7".

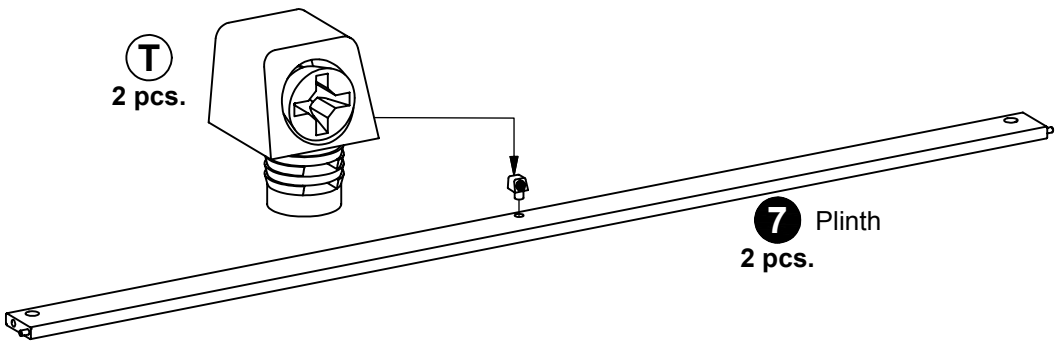

11A. Assembling the bottoms to the large divider.

Push the bolts "E" through the holes indicated on the large divider "3".


It is important that the bolts is turned exactly as shown.

Press the bottom "8" onto the left hand side of the large divider "3".

See page 4 - "Function of cam & bolt"

Place the cams "A" into the holes indicated, arrows pointing towards the divider/bolt.

Tighten:
Turn the cam to the right.

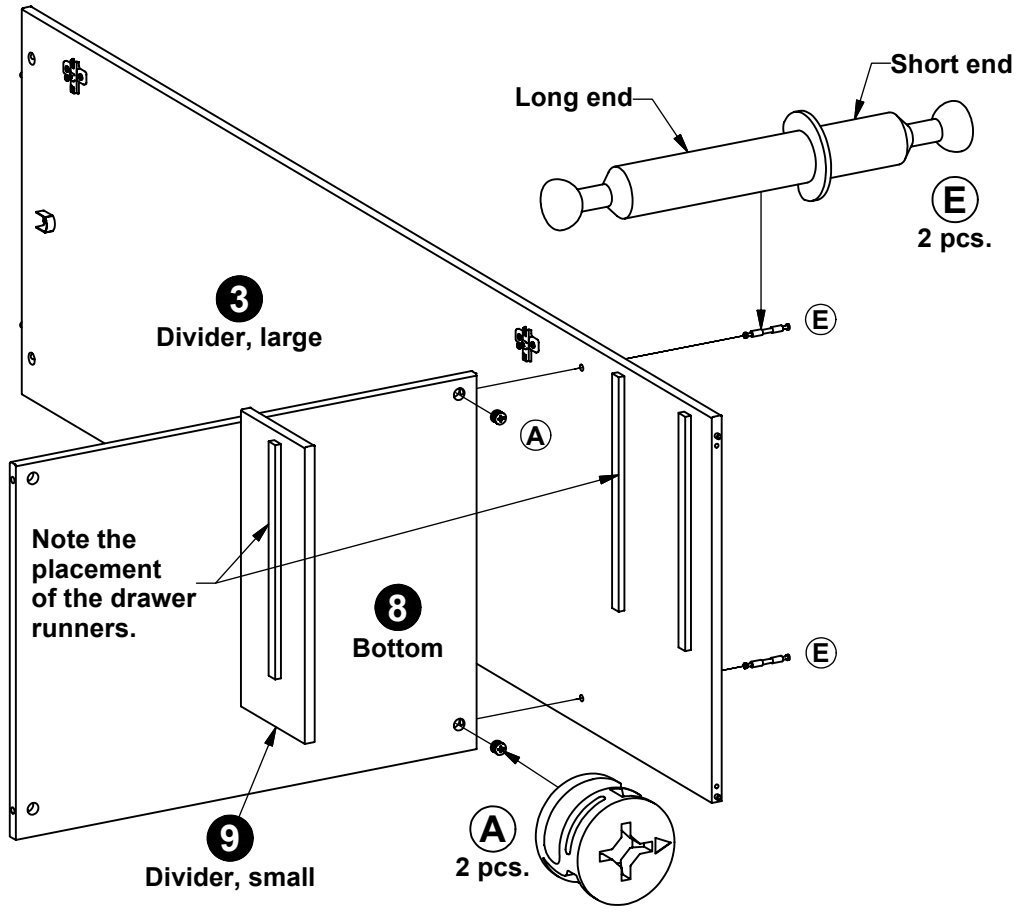


11B. Assembling the bottoms to the large divider.

Press the bottom "8" onto the large divider "3".

See page 4 - "Function of cam & bolt".

Place the cams "A" into the holes indicated, arrows pointing towards the divider/bolt.

Tighten:
Turn the cam "A" to the right

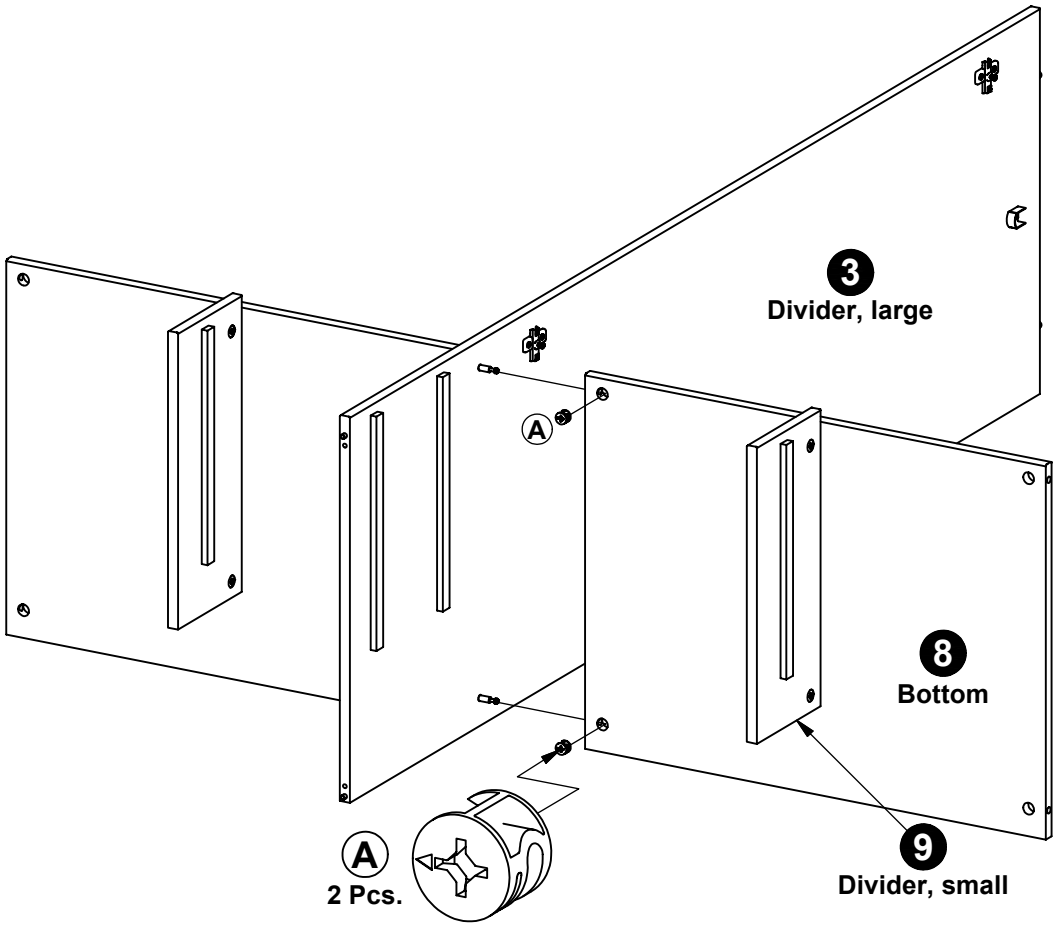


12. Assembling the right hand side to the bottom.

Press the side "2" onto the bottom "8".

See page 4 - "Function of cam & bolt".

Place the cams "A" into the holes indicated, arrows pointing towards the side/bolt.

Tighten:
Turn the cam "A" to the right.

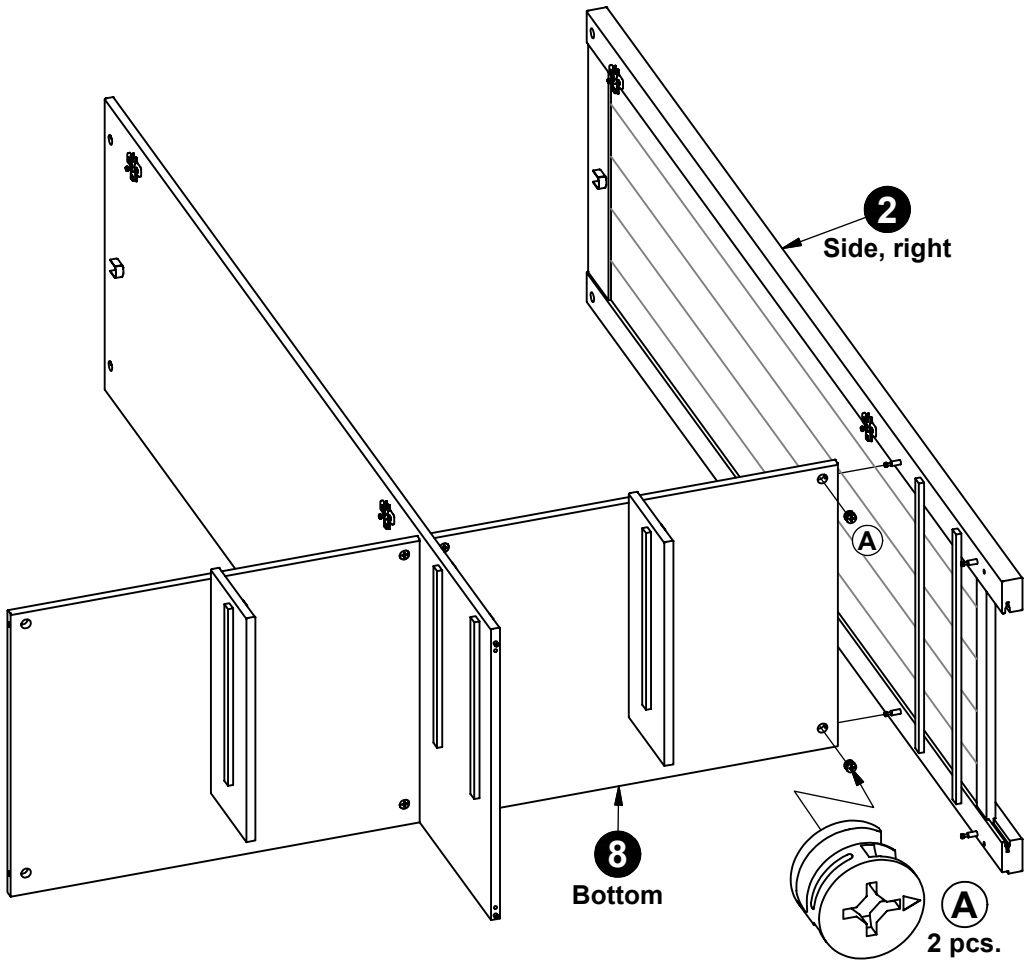

13. Adding the plinths to the side and the large divider.

Press the plinths "7" onto the side "2".

The dowels at the end of the large divider "3" should fit into the holes on the plinths.

See page 4 - "Function of cam and bolt".

Place the cams "A" into the holes indicated, arrows pointing towards the side/bolt.

Tighten:
Turn the cam "A" to the right.

Fix the miniblocks "T" onto the divider. See fig. 13.1


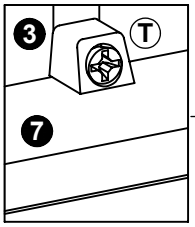


Fig. 13.1

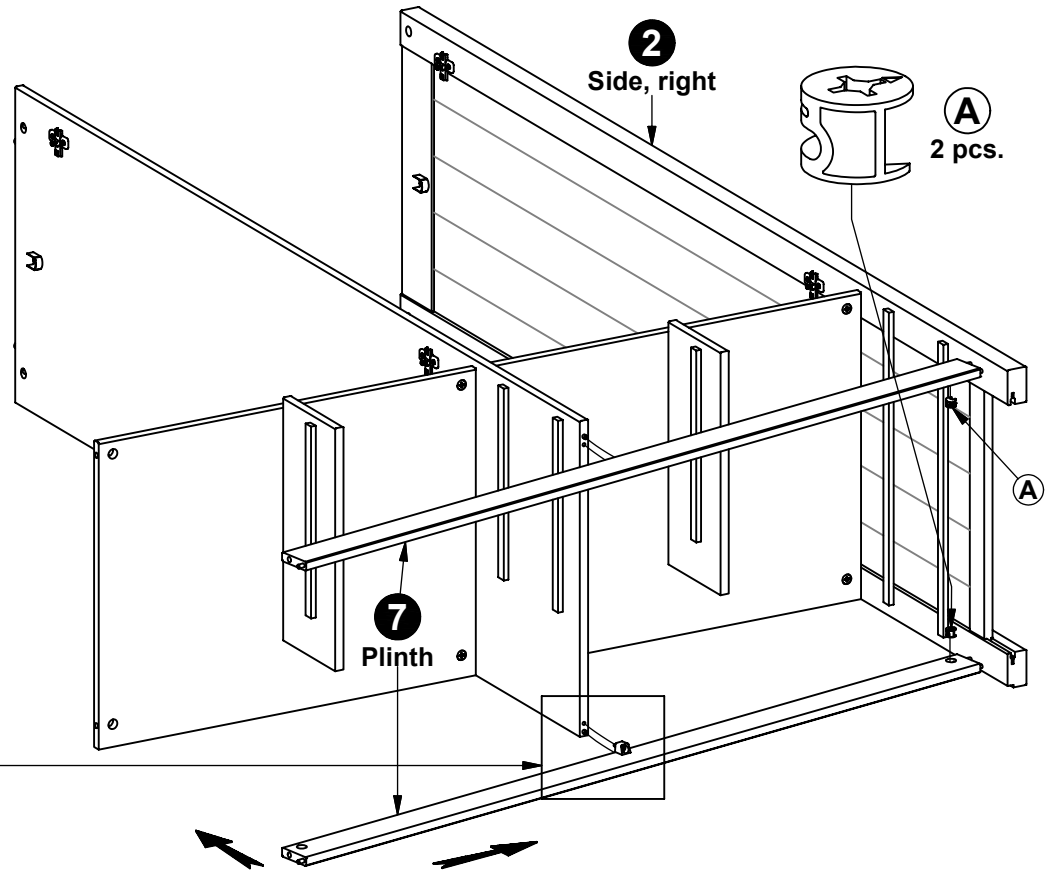


14. Assembling the left hand side to the carcass.

Press the side "1" onto the bottom "8" and the plinths "7".

See page 4 - "Function of cam & bolt".

Place the cams "A" into the holes indicated, arrows pointing towards the side/bolt.

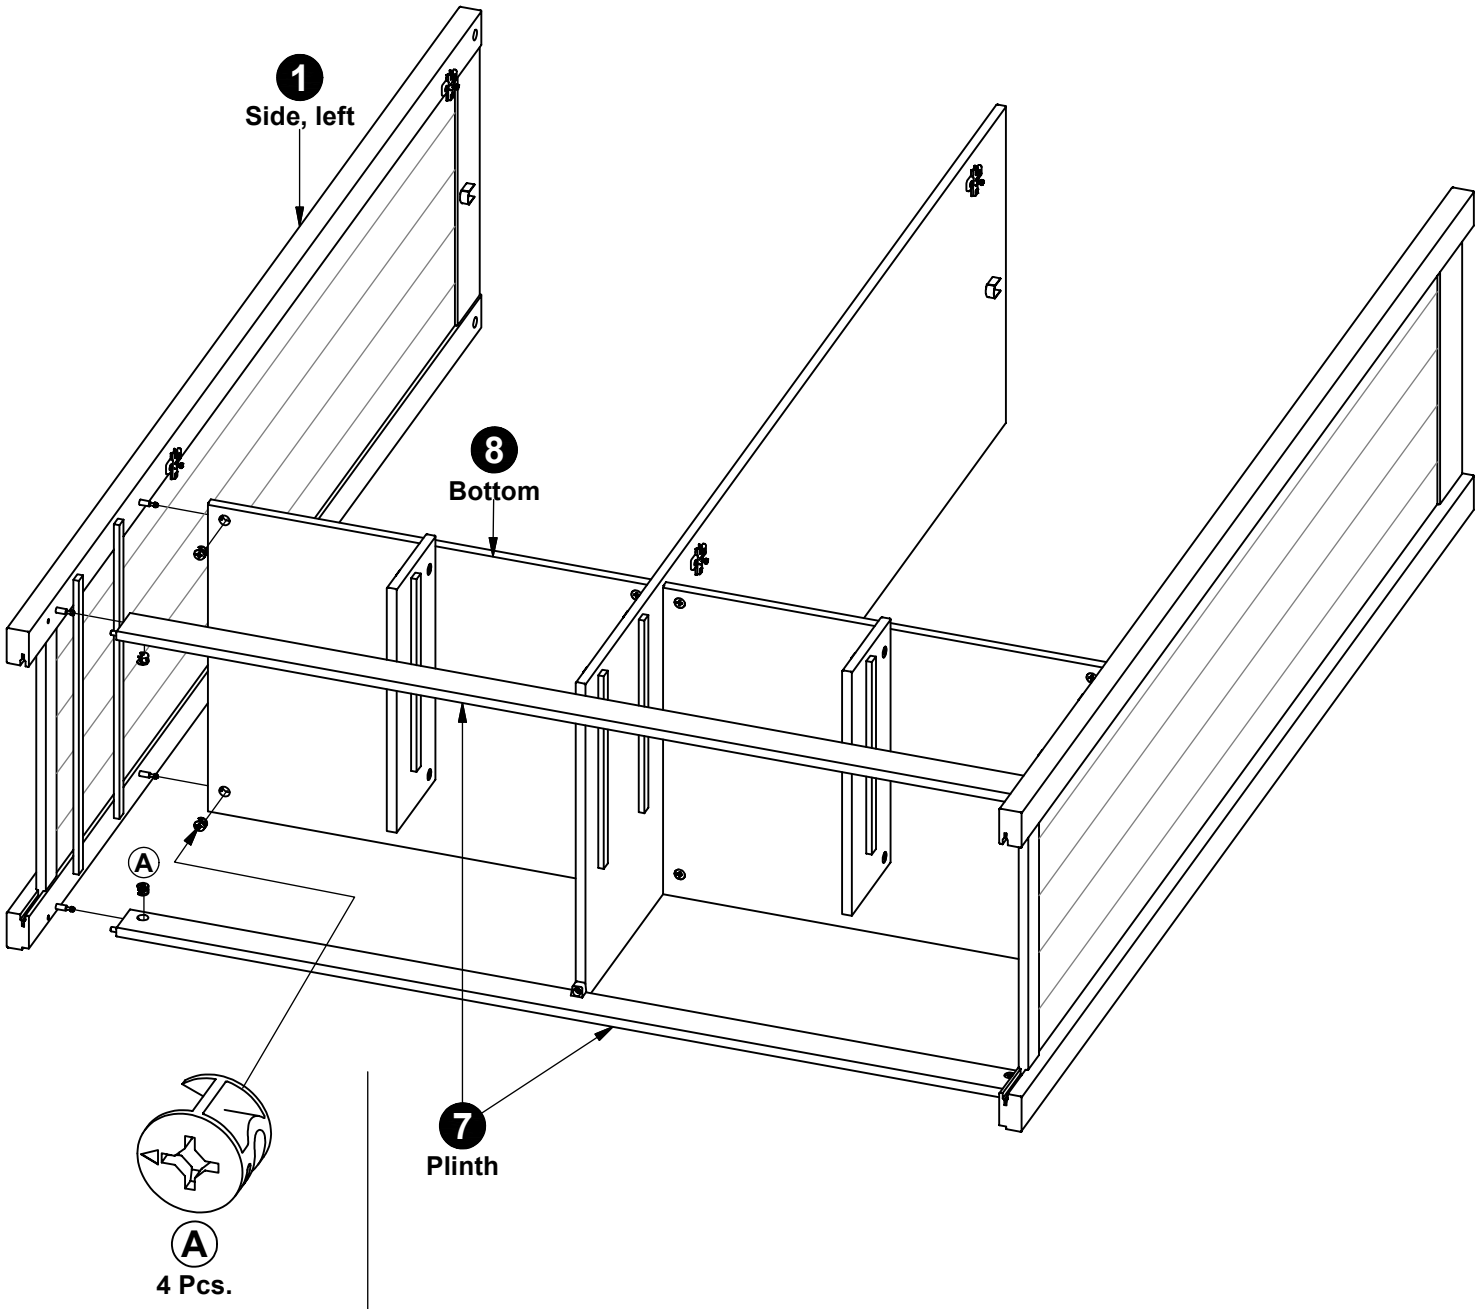

<u>Tighten:</u>
Turn the cam "A" to the right.

15. Assembling the top to the carcass.

Lower the top "6" onto the divider "3" and the sides "1" and "2".

See page 4 - "Function of cam and bolt".

Place the cams "A" into the holes indicated, arrows pointing towards the top/bolt.

Tighten:
Turn the cam "A" to the right.

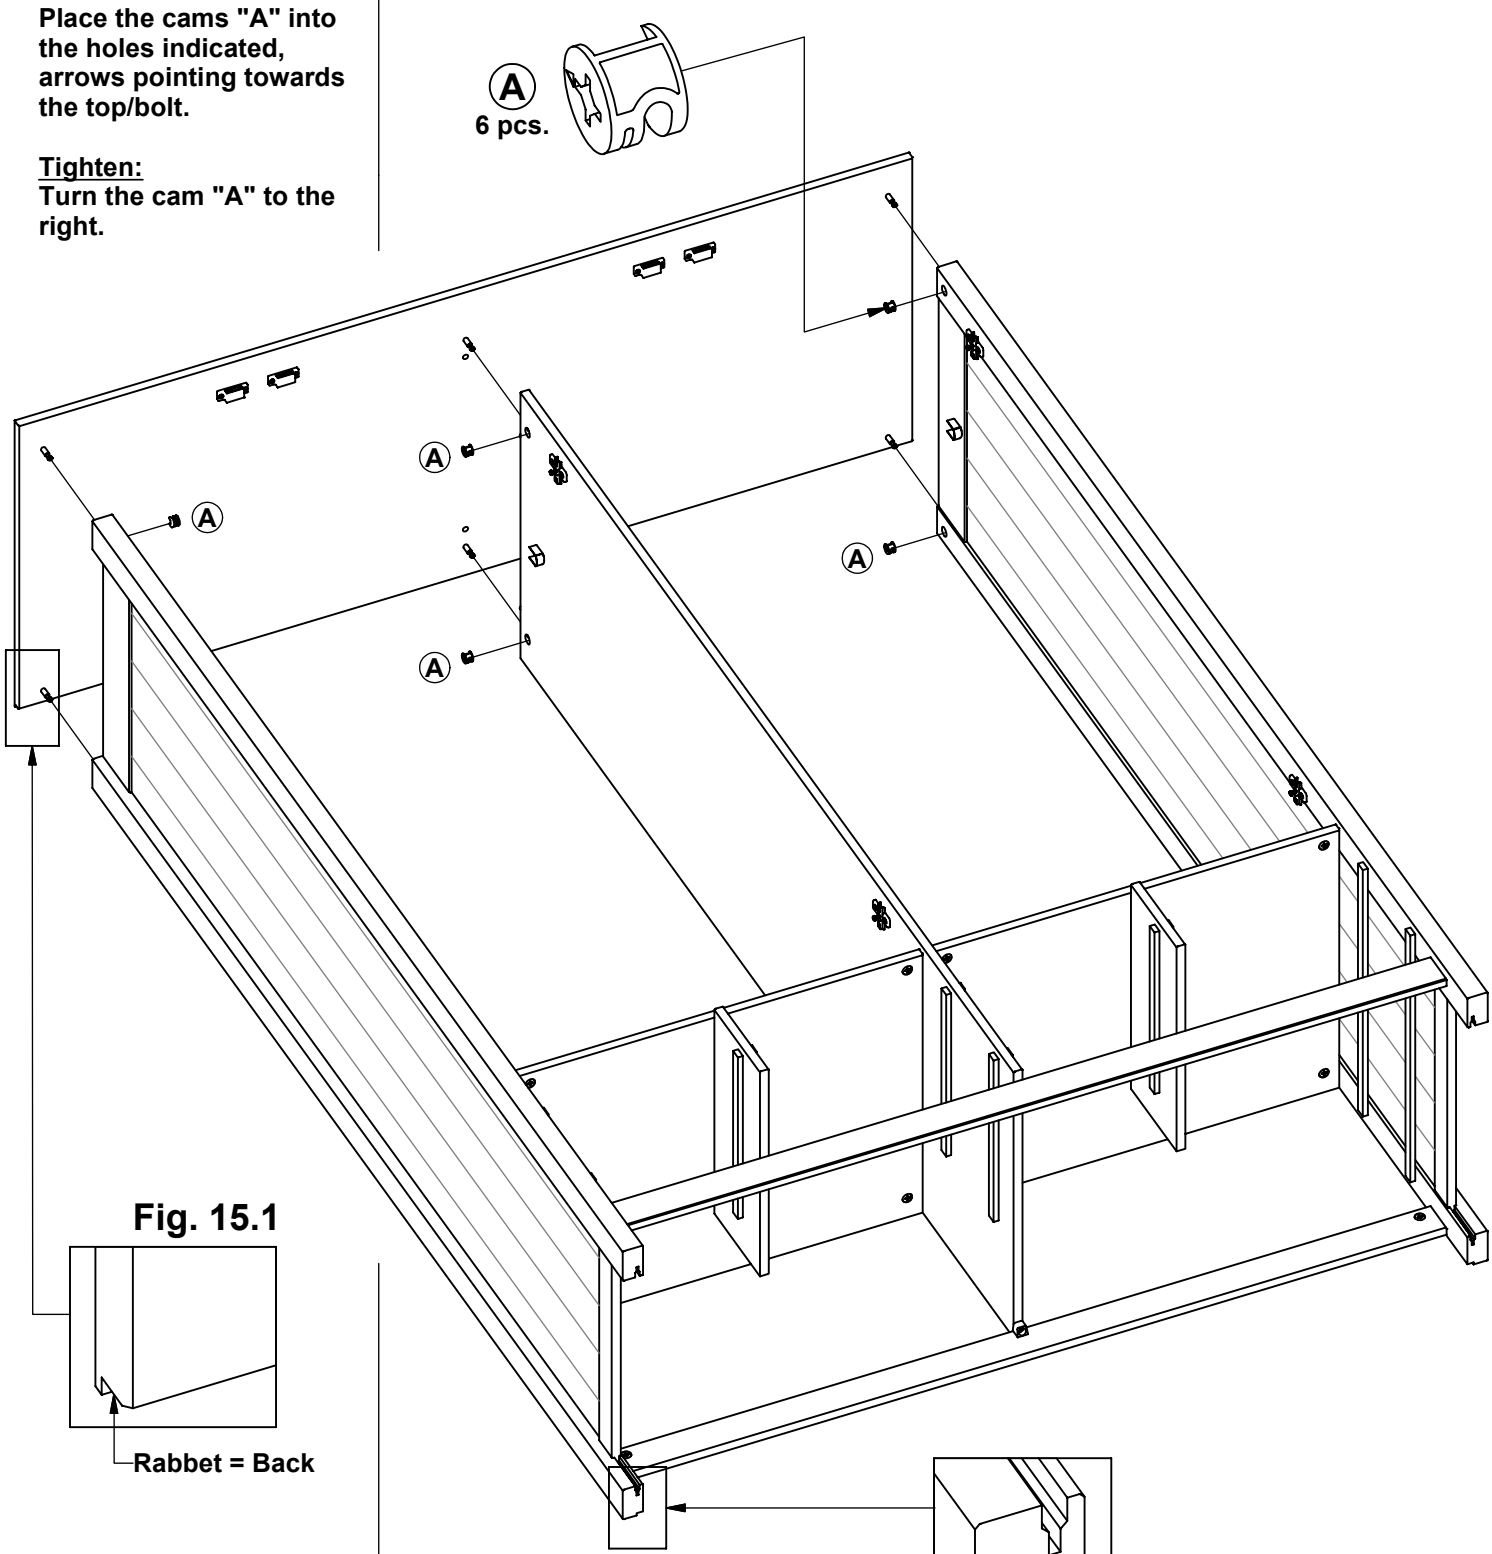


Fig. 15.1

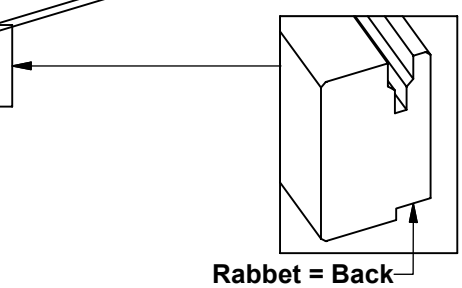


Fig. 15.2

16. Adding the back to the carcass.

Place the back "12" into the rabbet of the top "6" and the side "2".

Ensure there is NO GAP between the side and the back, NOR between the top and the back.

Fasten the back with nails "D" along the top. Use the nail guide "S" - see fig. 16.3

The angle between the top and the side must be 90 degrees. Fig. 16.1

To accomplish this, ensure there is NO GAP between the side and the back.

Fasten the back along the side and the bottom. Use the nail guide as shown in fig. 16.3



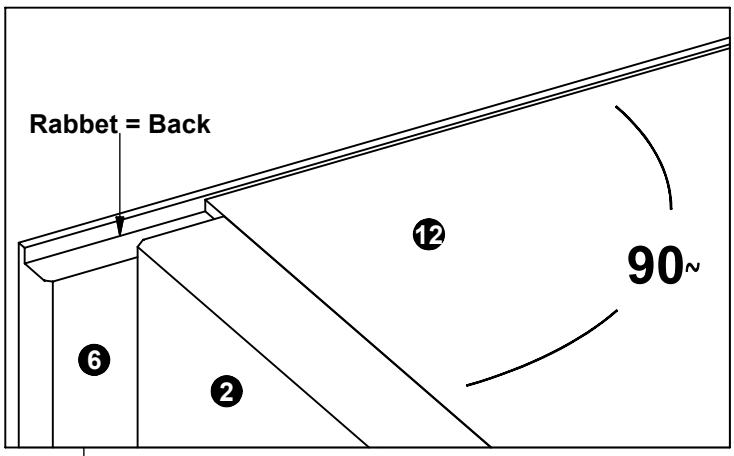


Fig. 16.1

Fig. 16.2

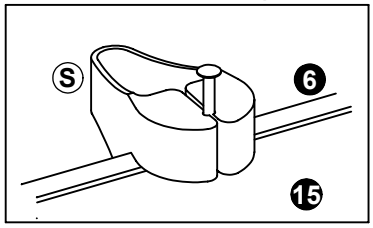

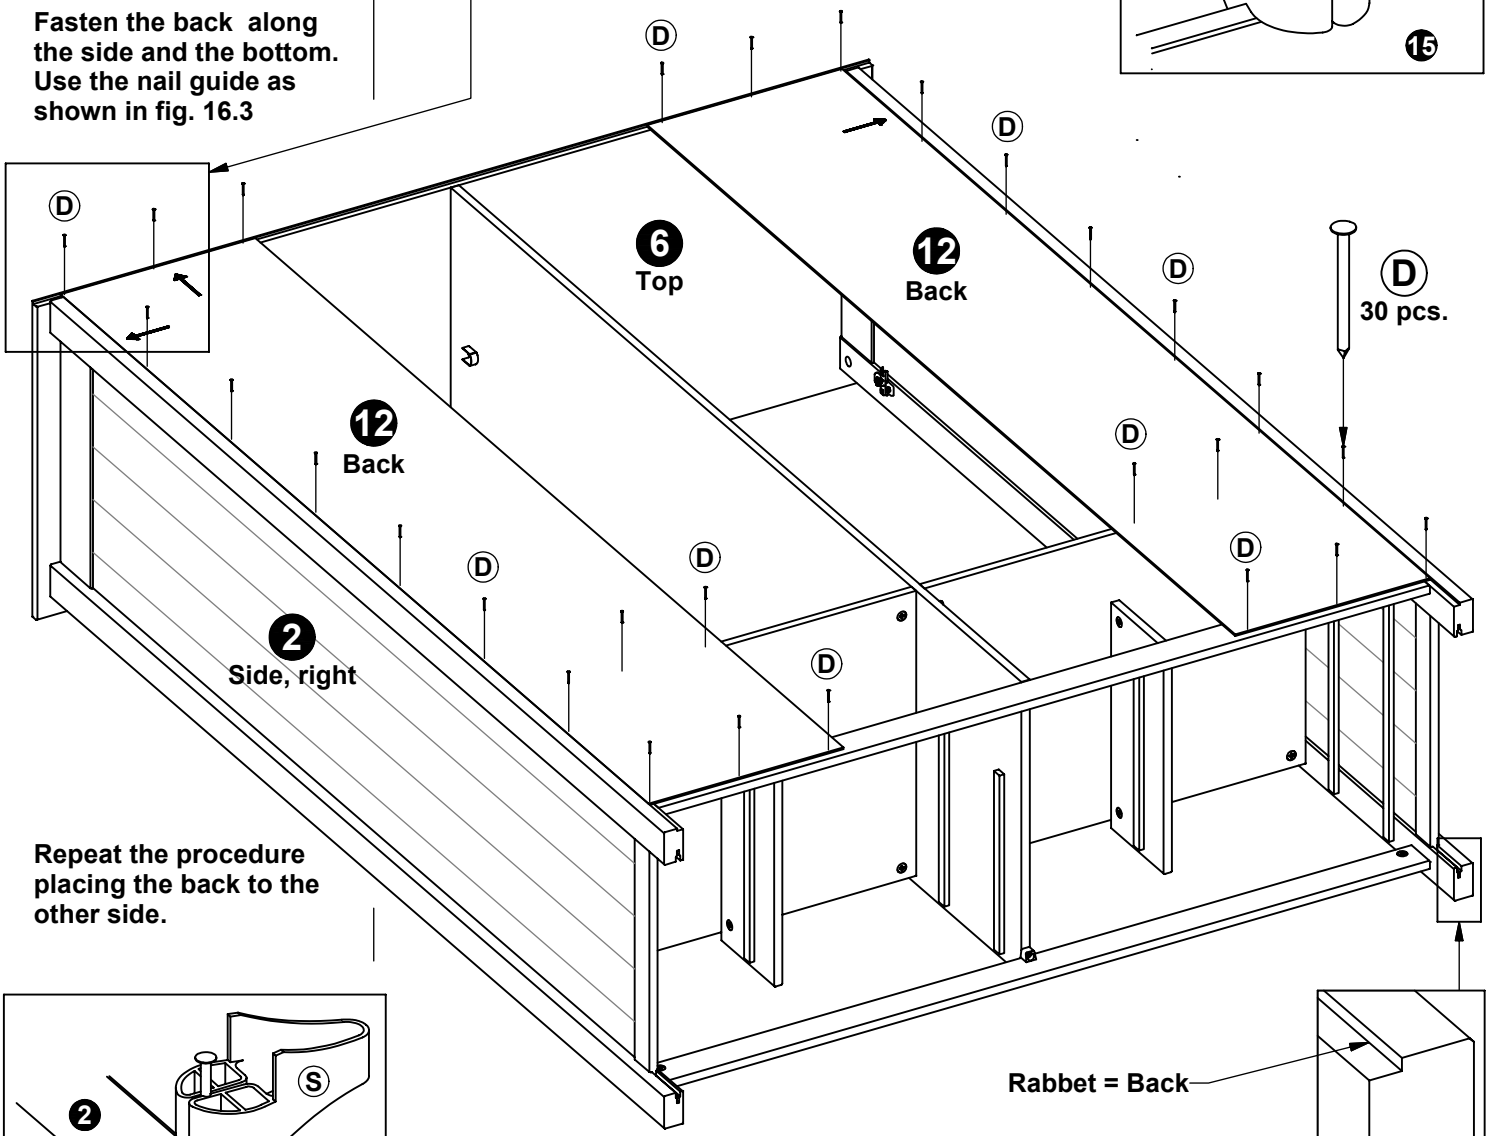

Repeat the procedure placing the back to the other side.

Fig. 16.3

Fig. 16.4

17. Adding the back and the joining strip to the carcass.

Place the joining strip "R" onto the back.


See Fig. 17.1

Place the back into the rabbet of the top "6".

Fasten the back along the top. Use the nail guide - see page 14, fig. 16.2


Fasten the back along the side and the bottom.

Use the nail guide - see page 14, fig. 16.3

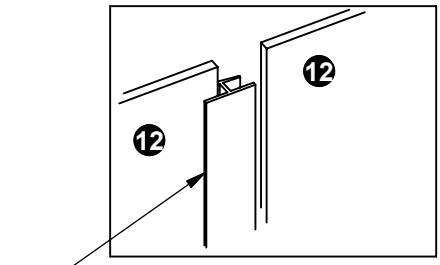

R Joining strip
2 pcs.

Fig. 17.1

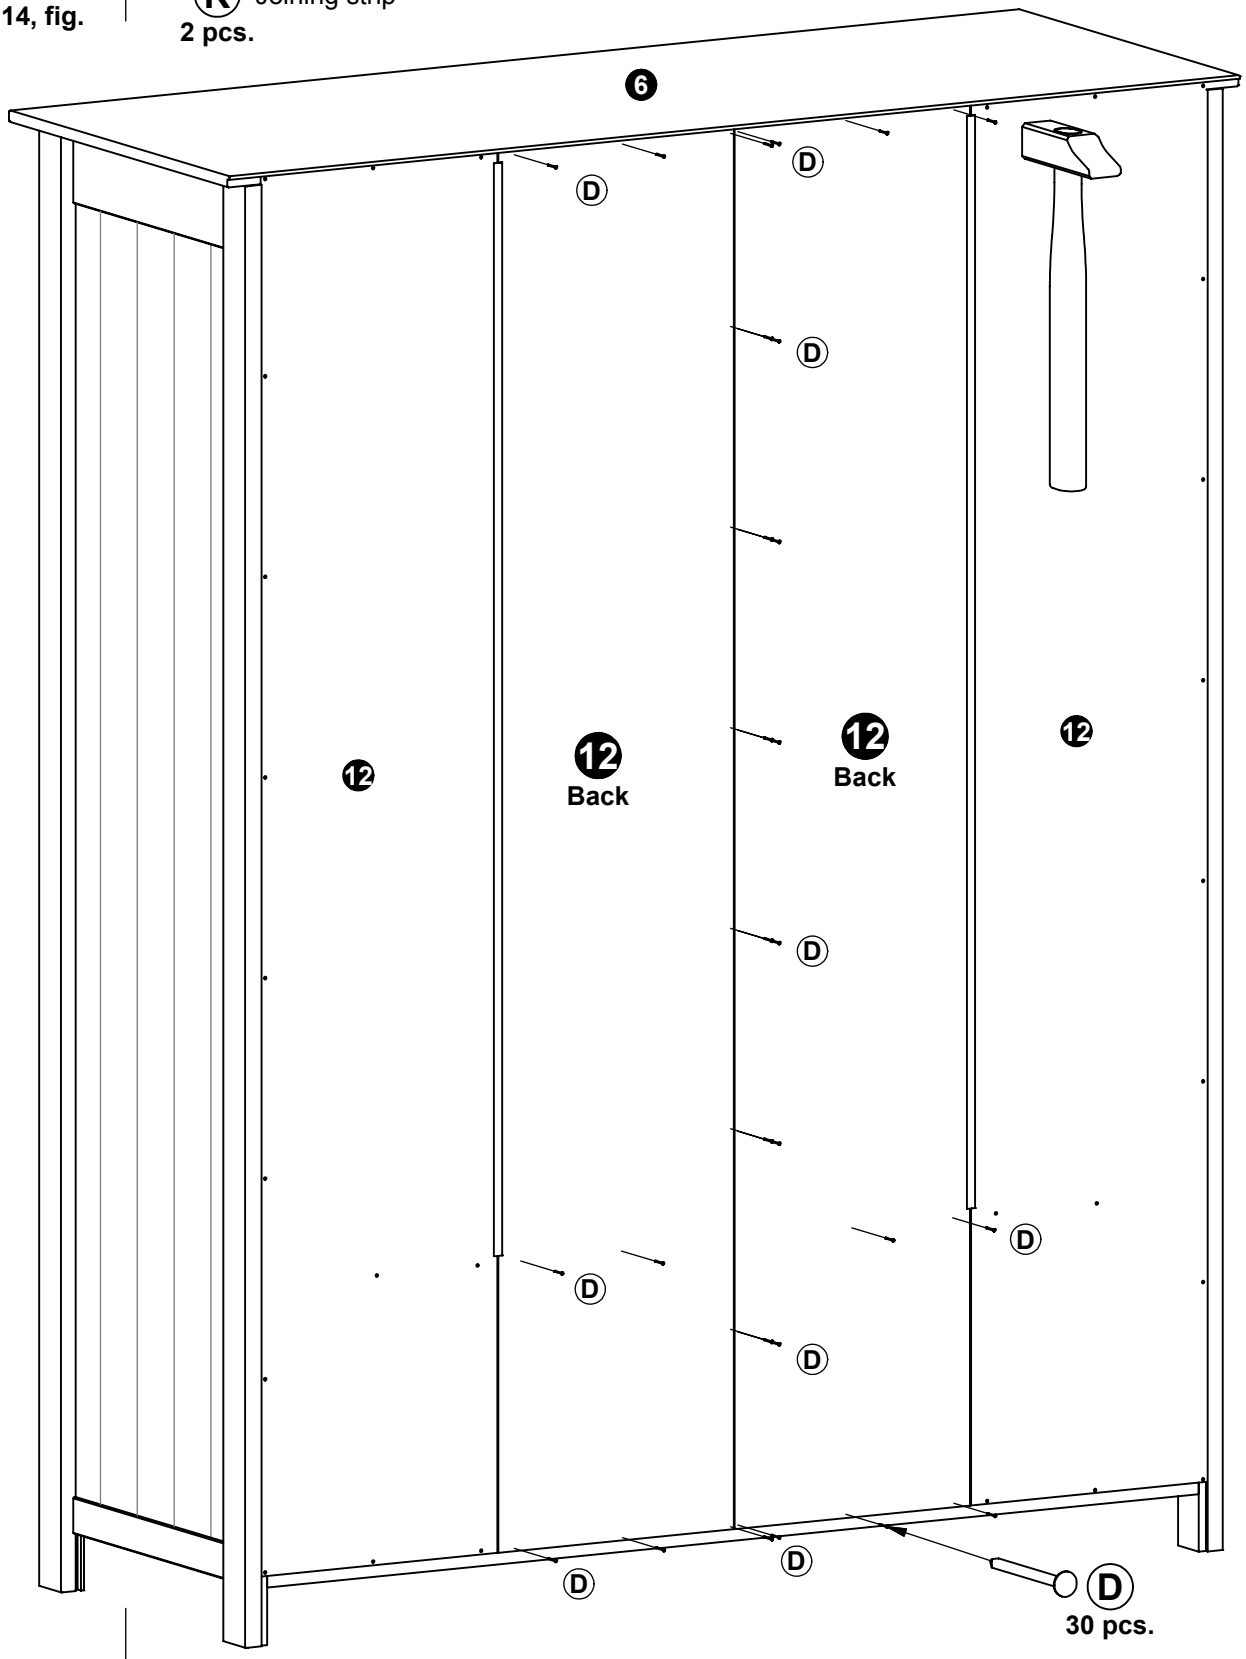

18. Mounting the drawer sides to the small drawer back.

Fix the drawer sides "13" and "14" to the small drawer back "15" using screws "J".

The grooves of the drawer sides and back should be turned exactly as shown.

See fig. 18.1


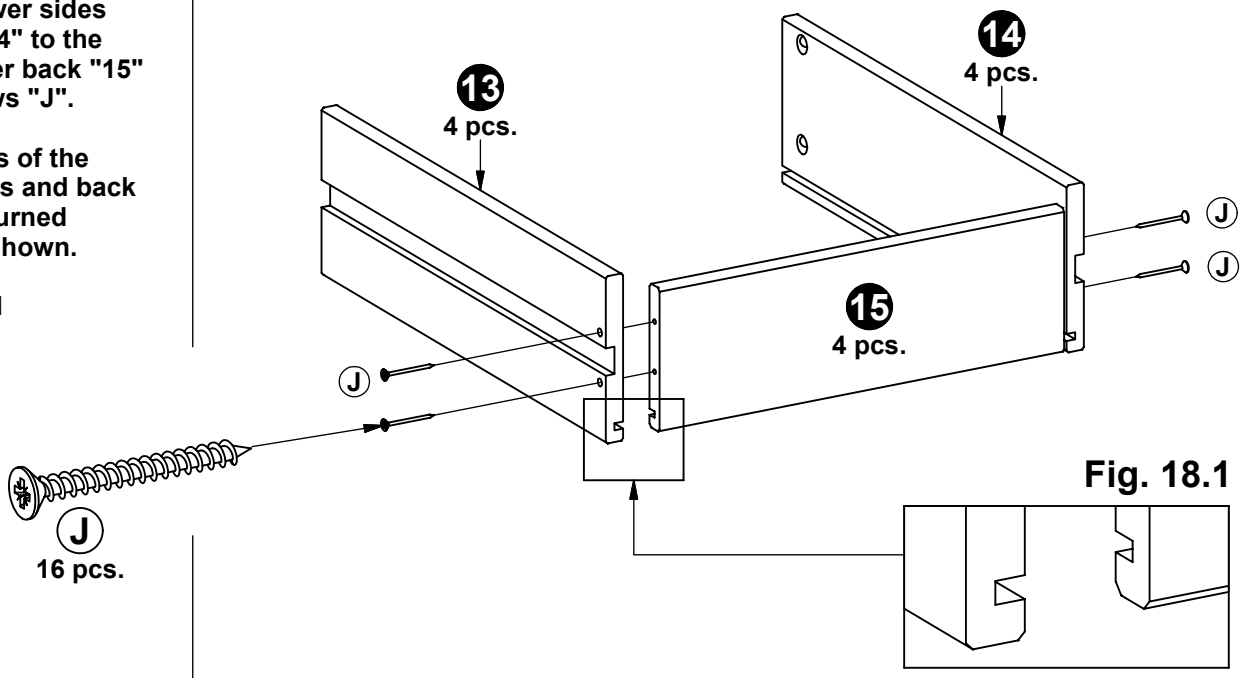


Fig. 18.1


19. Sliding the drawer bottom into the drawer frame.

Slide the small drawer bottom "17" into the grooves of the the drawer frame.

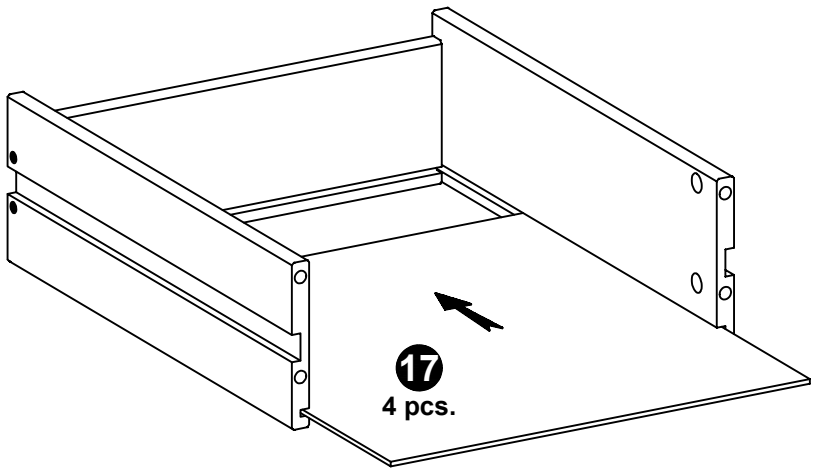

20. Mounting the bolts to the small drawer front.

Screw the bolts "C" into the holes indicated on the small drawer front "11".

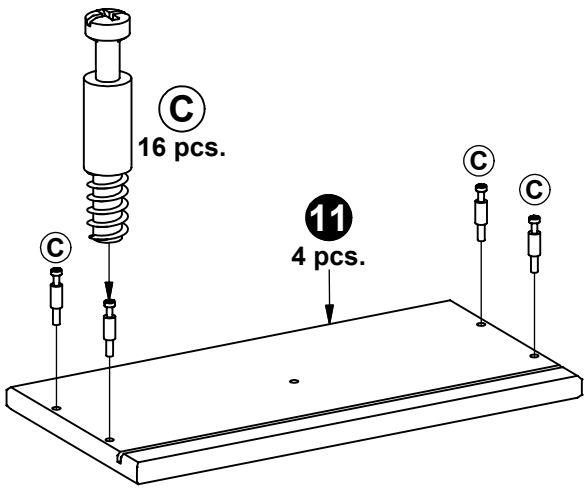


21. Adding the small drawer front to the drawer frame.

Press the drawer front "11" onto the drawer sides "13" and "14".

See page 4 "Function of cam and bolt".


Place the cams "B" into the holes indicated, arrows pointing towards the drawer front / bolts.

Tighten:
Turn the cam to the right.

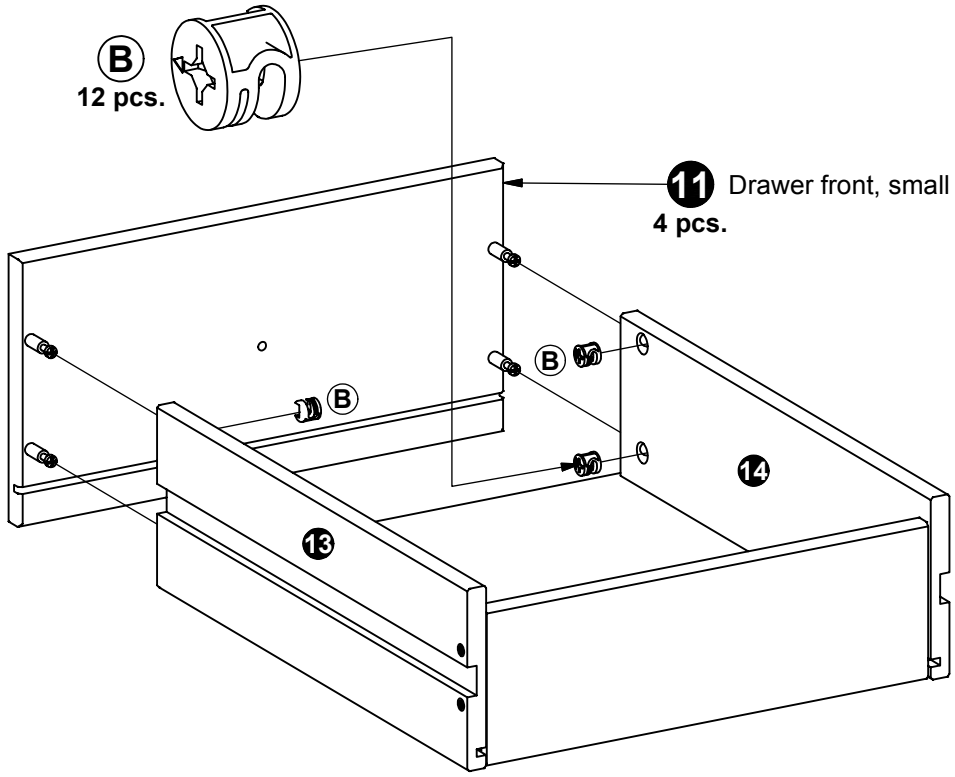

22. Mounting the knobs to the small drawer front.

Fix the knobs "K" to the drawer front using screws "J".

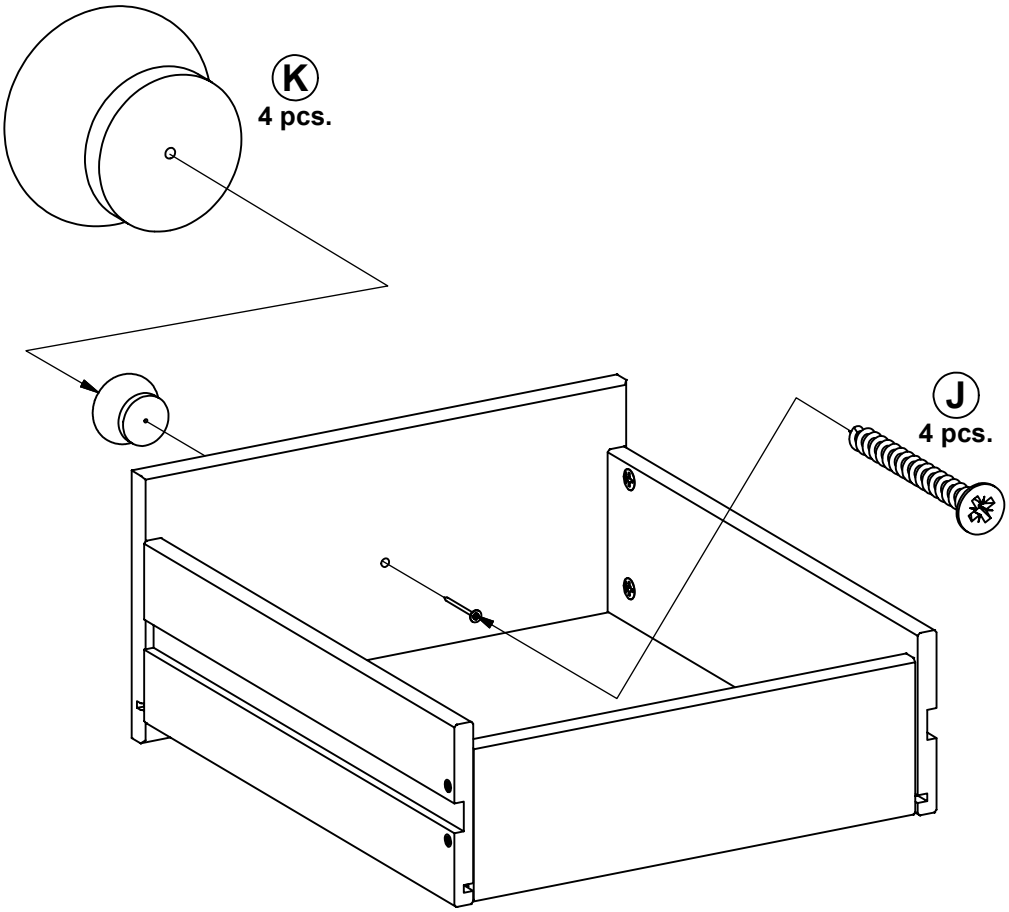

23. Mounting the drawer sides to the large drawer back.

Fix the drawer sides "13" and "14" to the large drawer back "16" using screws "J".

The grooves of the drawer sides and back should be turned exactly as shown.

See fig. 23.1.


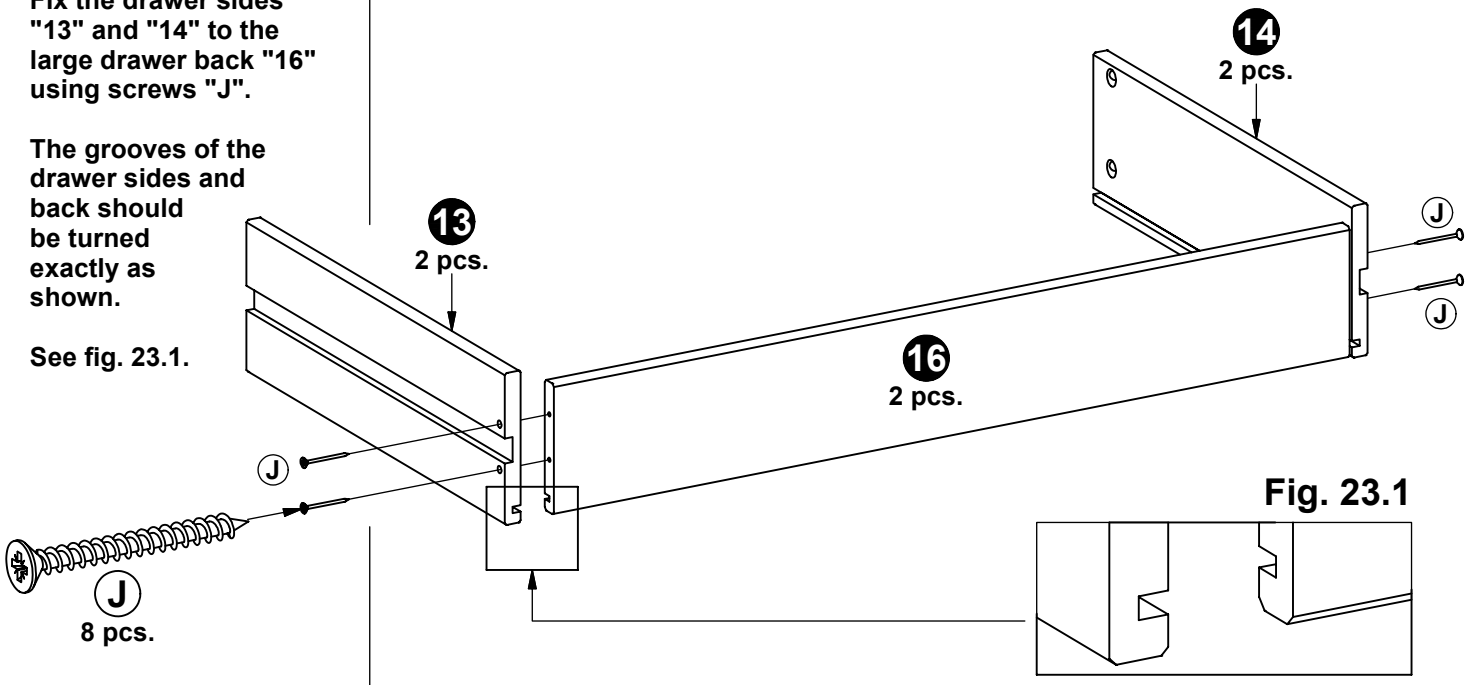


Fig. 23.1


24. Sliding the drawer bottom into the drawer frame.

Slide the large drawer bottom "18" into the grooves of the the drawer frame.

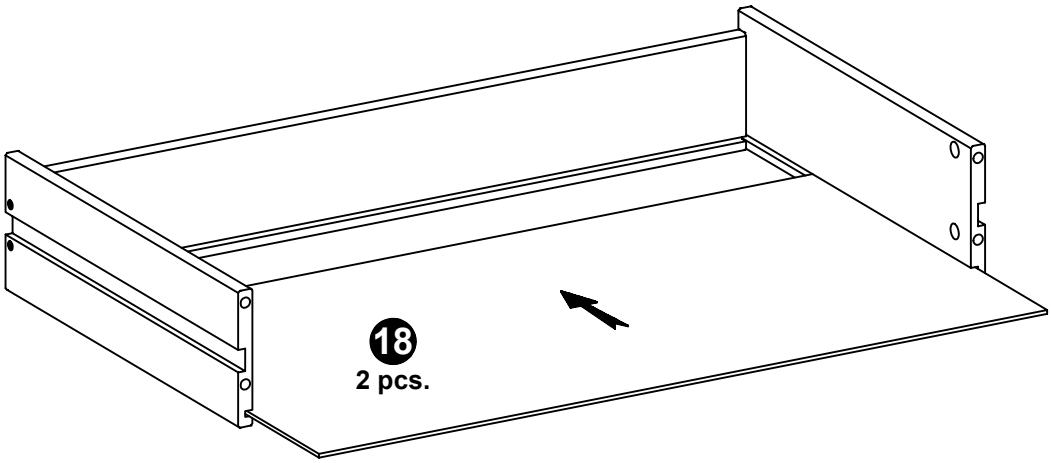

25. Mounting the bolts to the large drawer front.

Screw the bolts "C" into the holes indicated on the large drawer front "10".

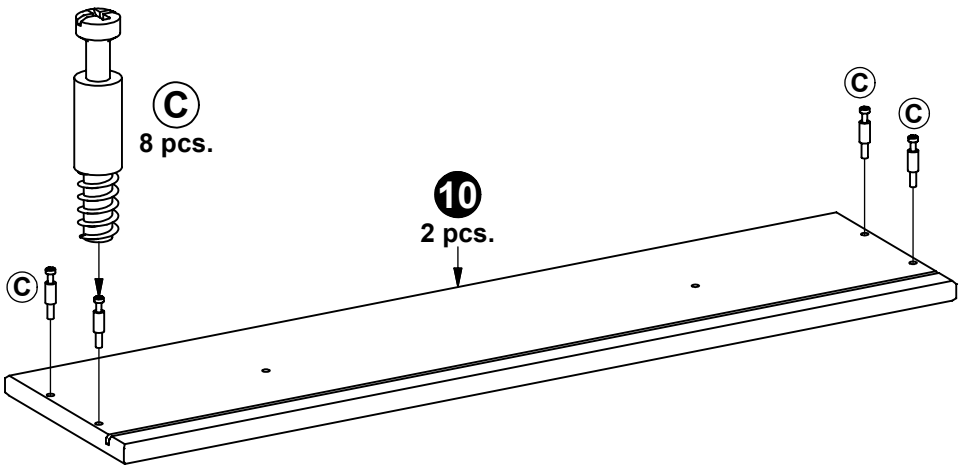


26. Adding the large drawer front to the drawer frame.

Press the drawer front "10" onto the drawer sides "13" and "14".

See page 4 "Function of cam & bolt".


Place the cams "B" into the holes indicated, arrows pointing towards the drawer front / bolts.

Tighten:
Turn the cam to the right.

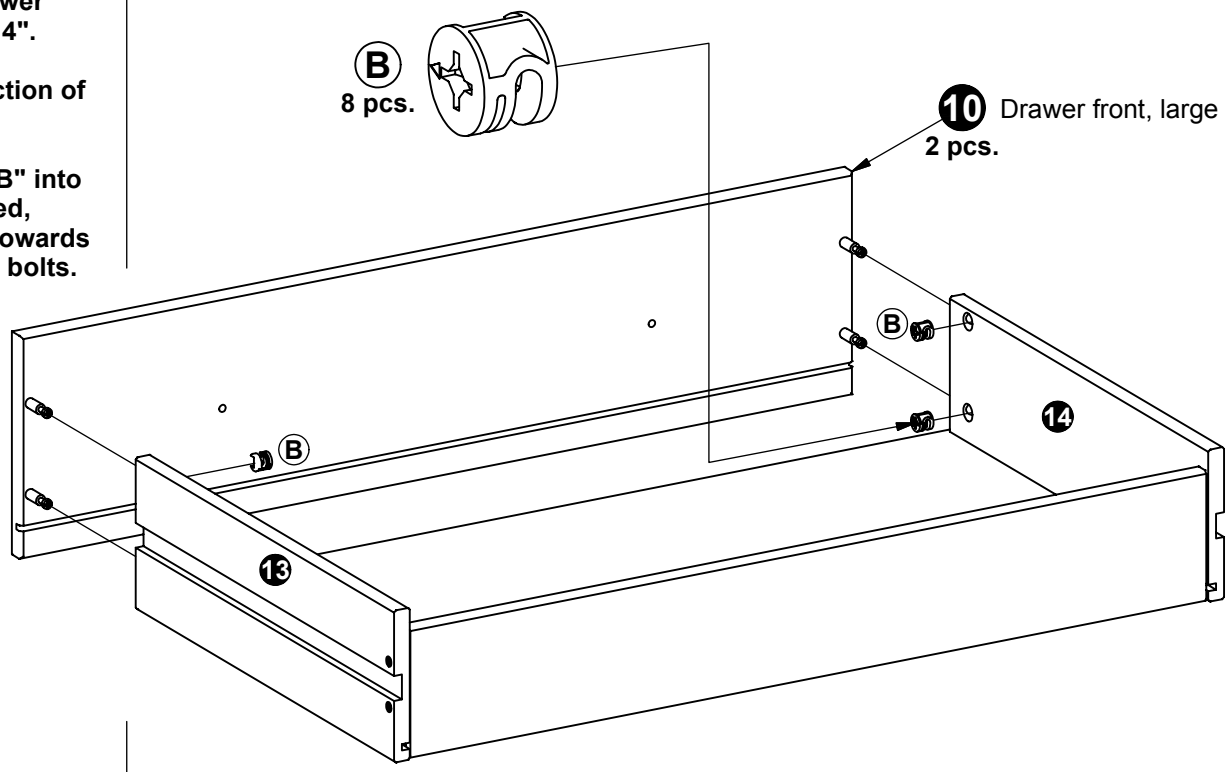

27. Mounting the knobs to the large drawer front.


Fix the knobs "K" to the large drawer front using screws "J".

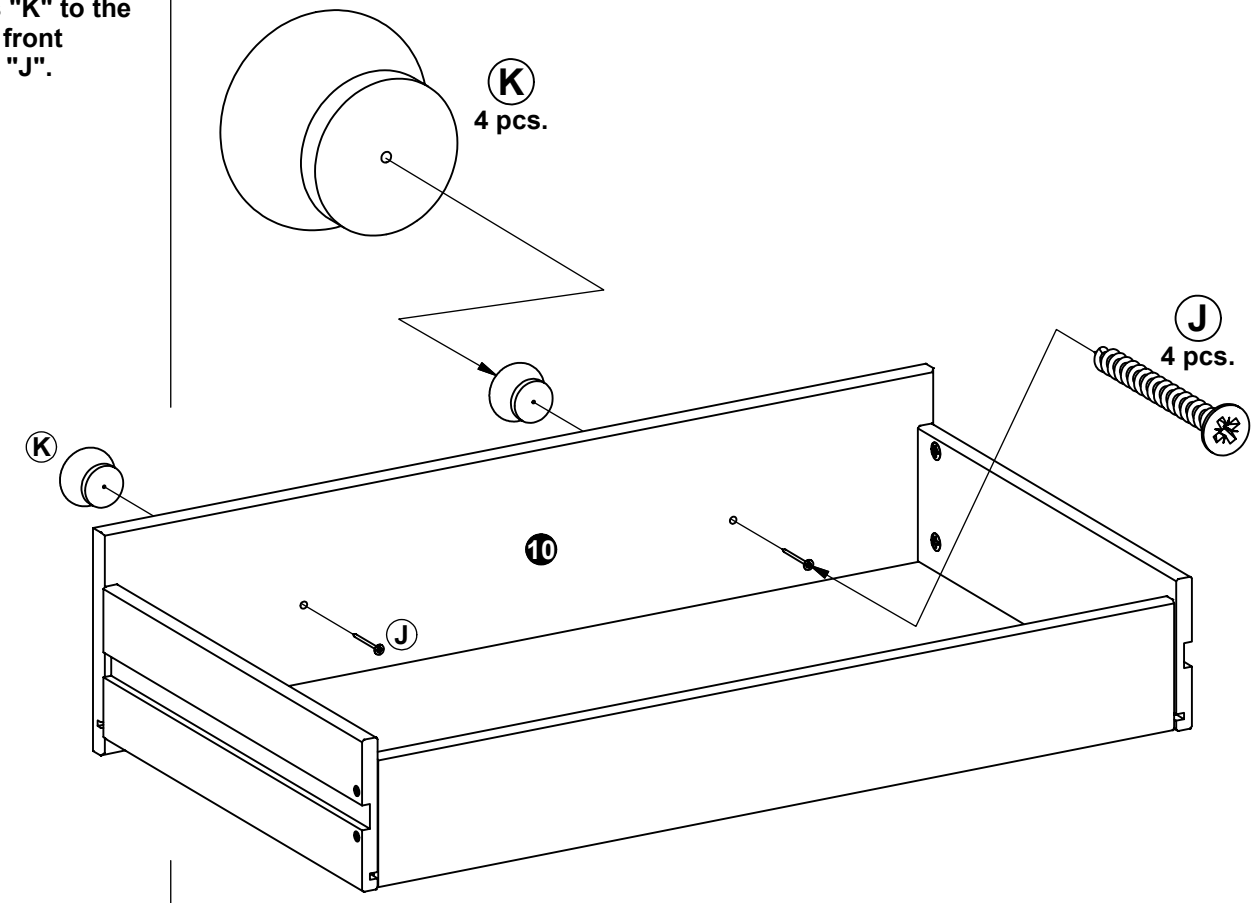

28. Adding the drawers & the hanging rail to the carcass.

Slide the drawers onto the drawer runners.

Lower the hanging rails "P" into the hanging rail cups.

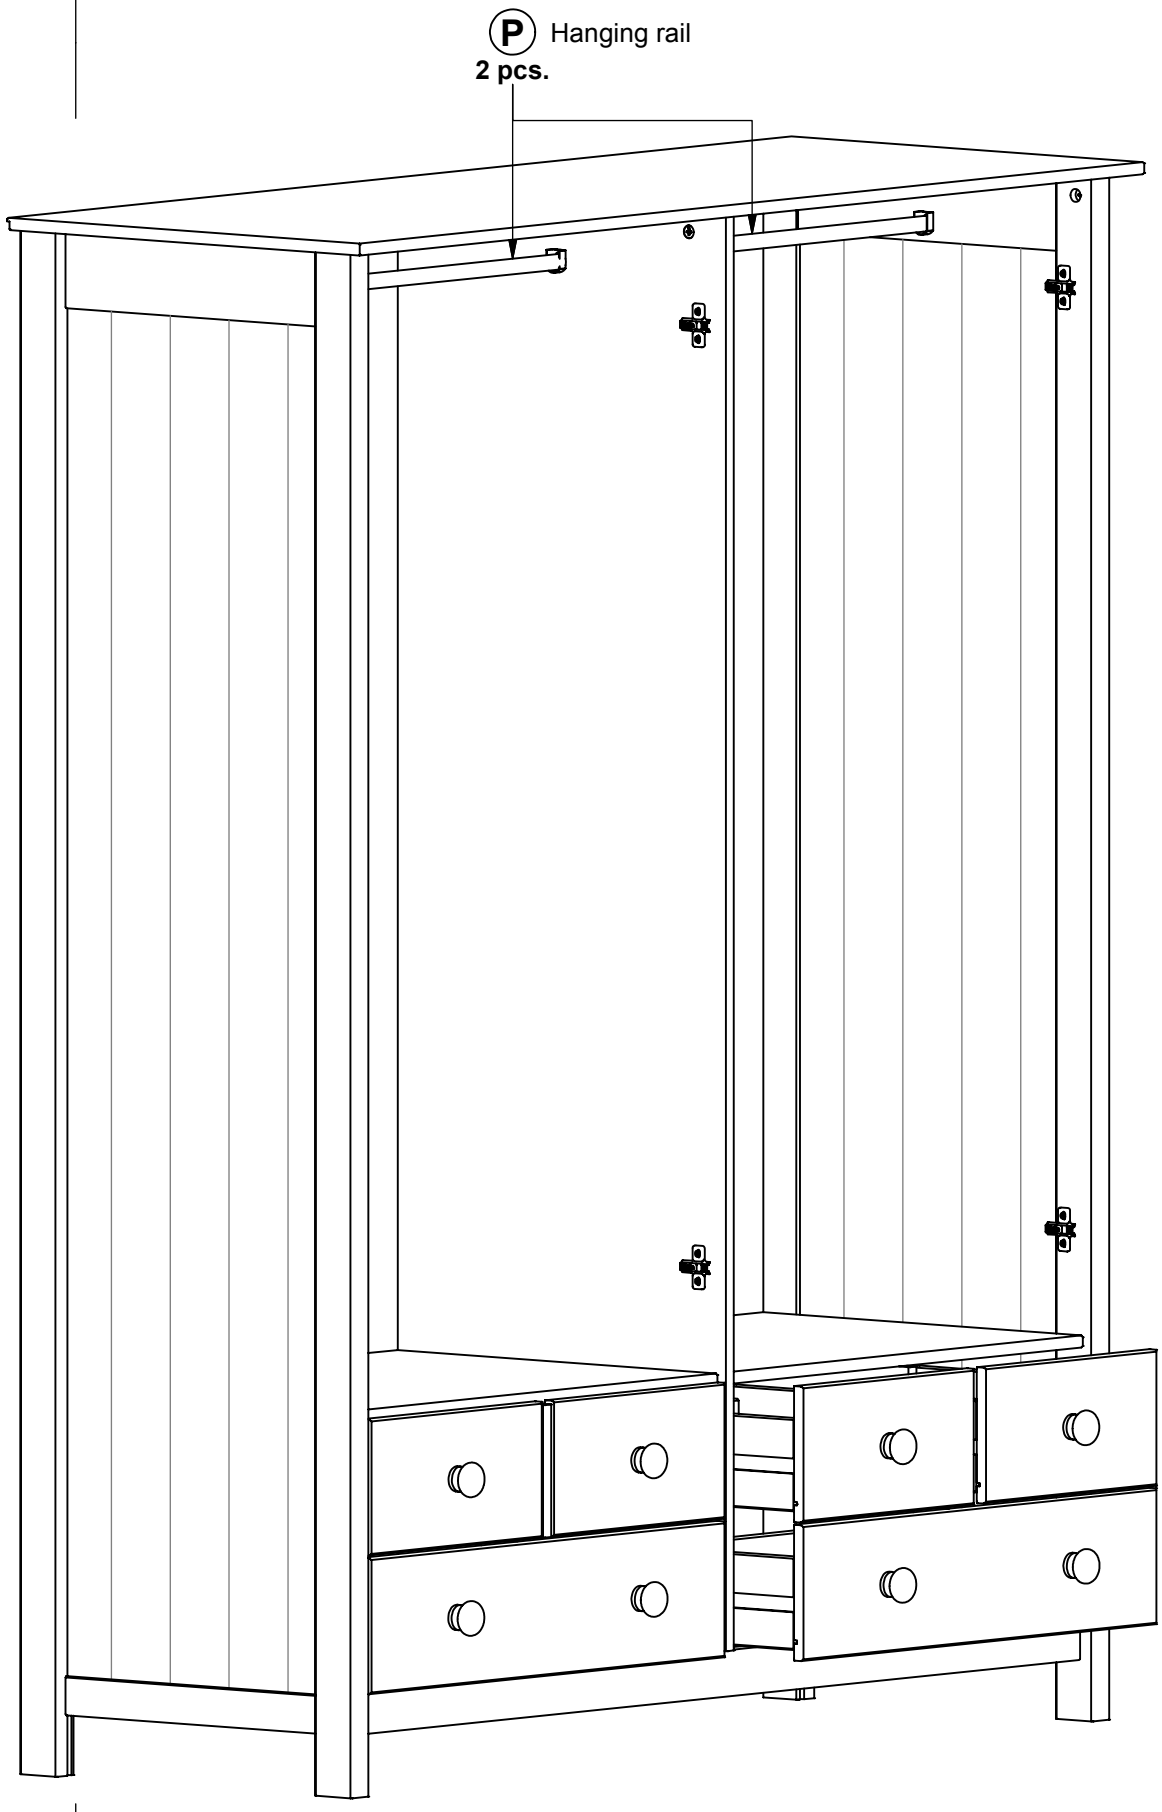

29. Mounting the hinges to the doors.

Press the hinges "N" into the holes indicated on the doors "4" and "5".

Fix the hinges using screws "G".



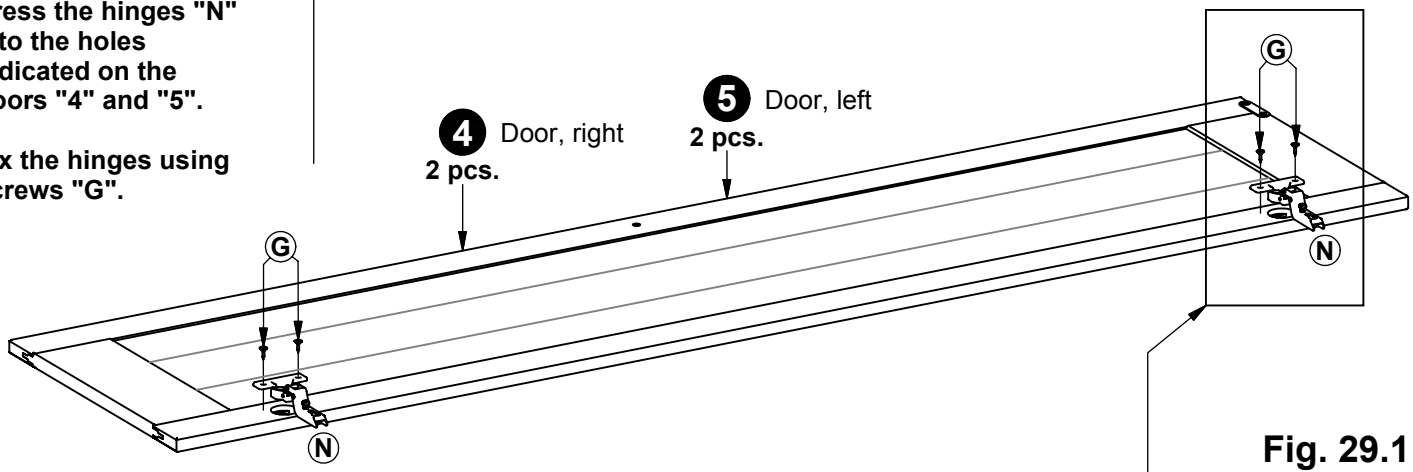


Fig. 29.1

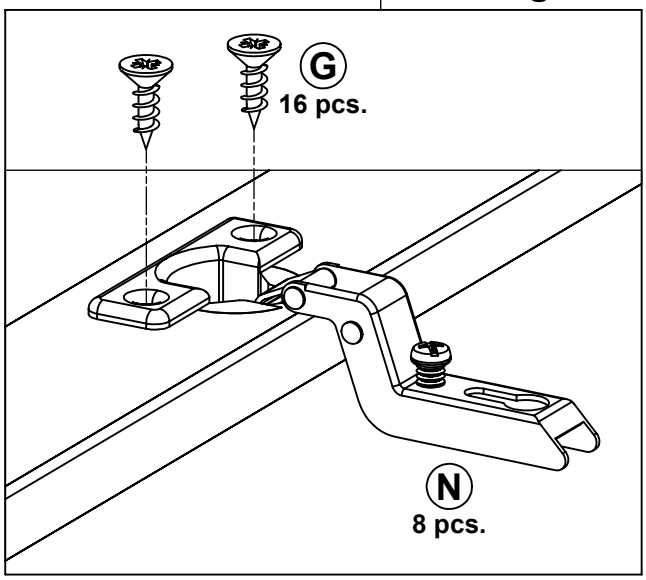

30. Mounting the knobs to the doors.

Fasten the knobs "K" to the doors "4" and "5" using screw "J".

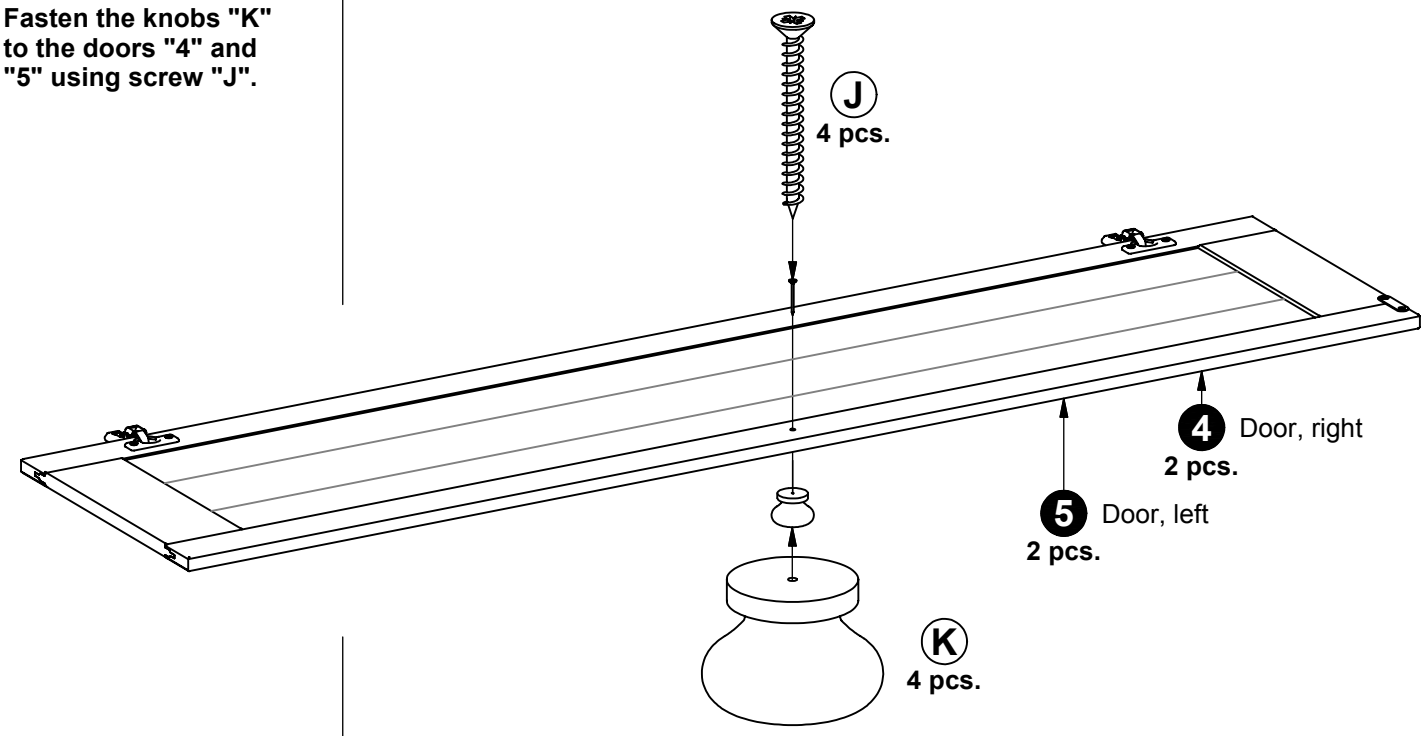

31. Mounting the doors to the carcass.

When placing the doors, the magnet catches MUST point upwards.


Step 1
Place the "adjustment hole" of the cup hinge at the level of the "fixing screw".
Push the cup hinge towards the cross plate - placing the "fixing screw" in the wider part of the "adjustment hole".

It is very IMPORTANT to catch ALL of the "fixing screws".

Step 2
Push the door / cup hinge inwards - placing the "fixing screw" in the narrow end of the "adjustment hole".

Step 3
Tighten the "fixing screws" of ALL the cross plates.

Fig. 31.1

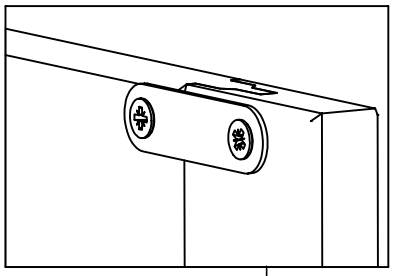



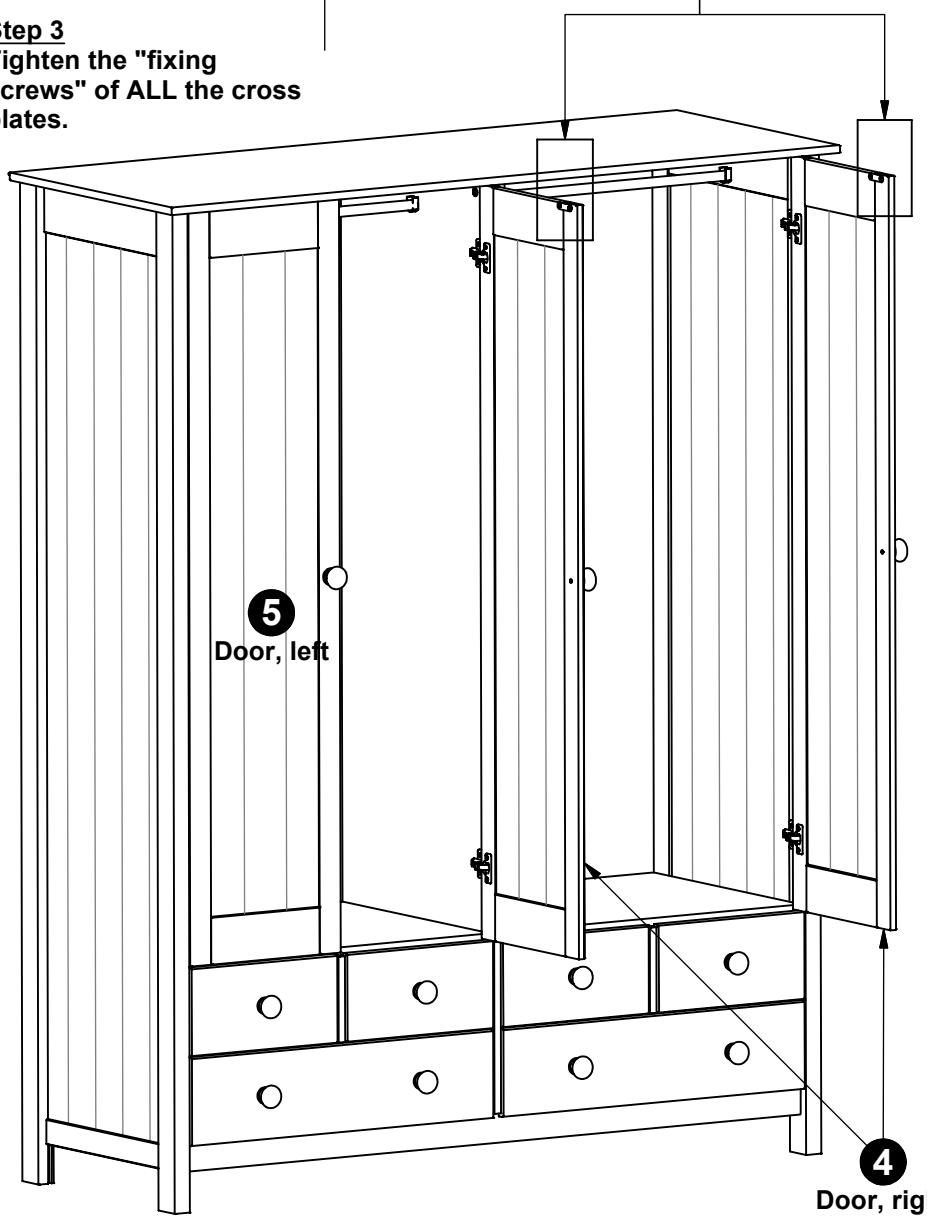



Fig. 31.2

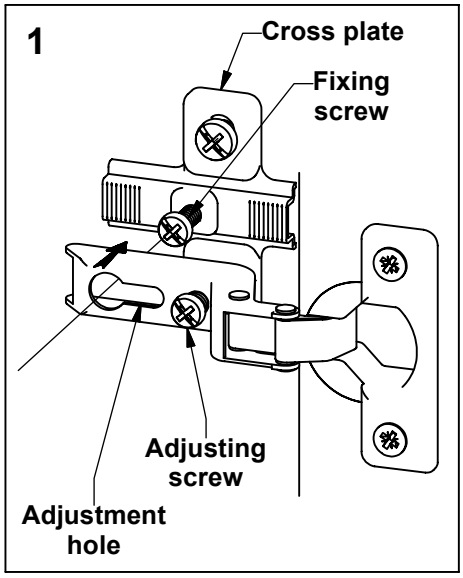

32. Adjusting the doors.

MAKE SURE THE WARDROBE IS PLACED ON A PLANE SURFACE BEFORE YOU BEGIN TO ADJUST THE HINGES.

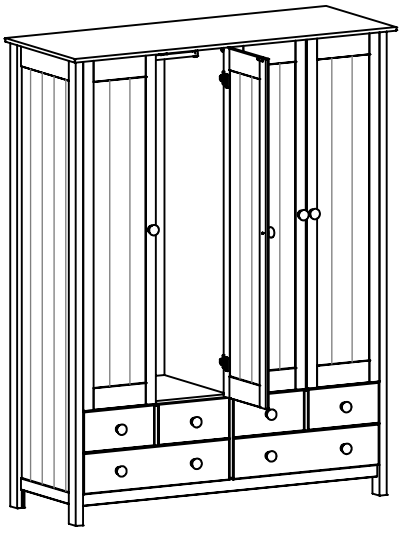

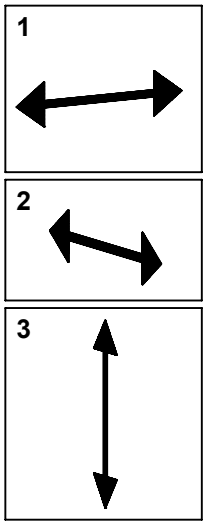


Step 1 - right or left:


Loosen the fixing screw.


To adjust the door towards the left hand side - turn the adjusting screw to the right.


To adjust the door towards the right hand side - turn the adjusting screw to the left.

Continue adjustment - see step 2 - or tighten the fixing screws of the cross plates.

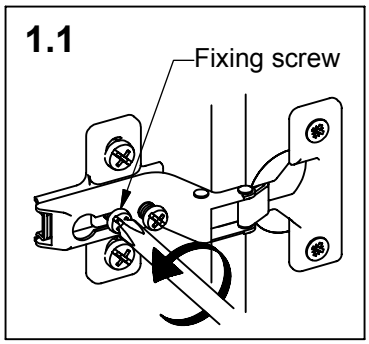

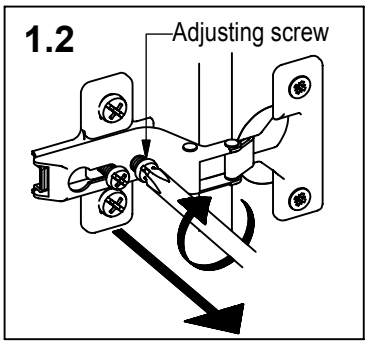

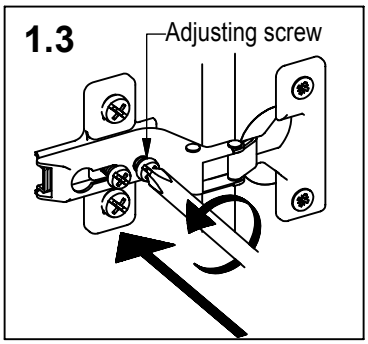

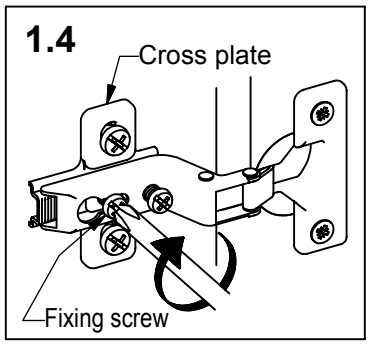



Step 2 - forwards or backwards:


Loosen the fixing screw.

Push the cup hinges / the door back OR forth to adjust. The door should level with the front edge of the sides.

Tighten the fixing screws of ALL the cross plates.

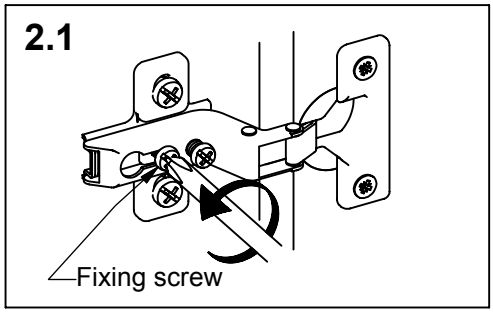

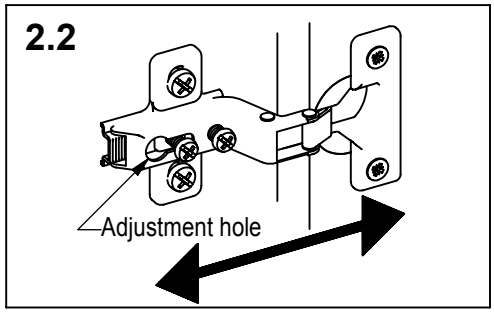

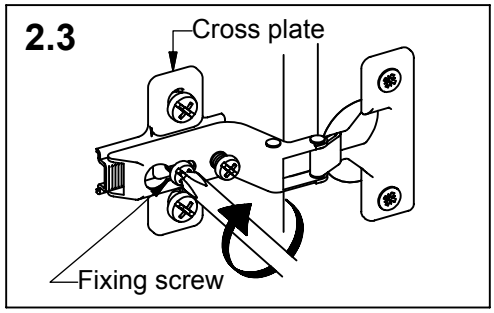



Step 3 - up or down:


Loosen the two screws "G"/"H" of each cross plate, BUT ONLY as much as it will allow the cross plate to move up and down.

Adjust the cross plate / the door.

Tighten the screws "G"/"H" of ALL the cross plates.

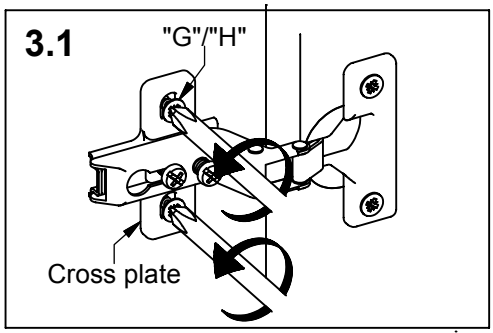

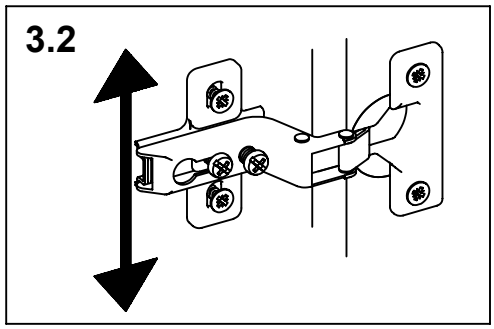

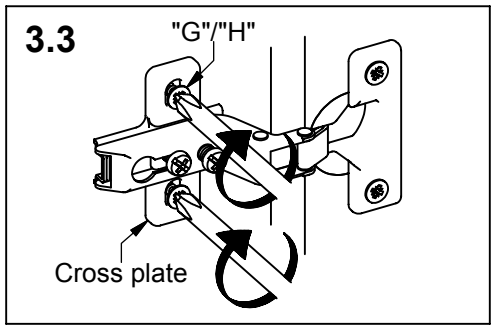

Dear Customer.

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.


Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.

Scandinavia - 4 Door robe w. 2+4 drws

Assembly Instruction - Please keep for future reference | 642/3818

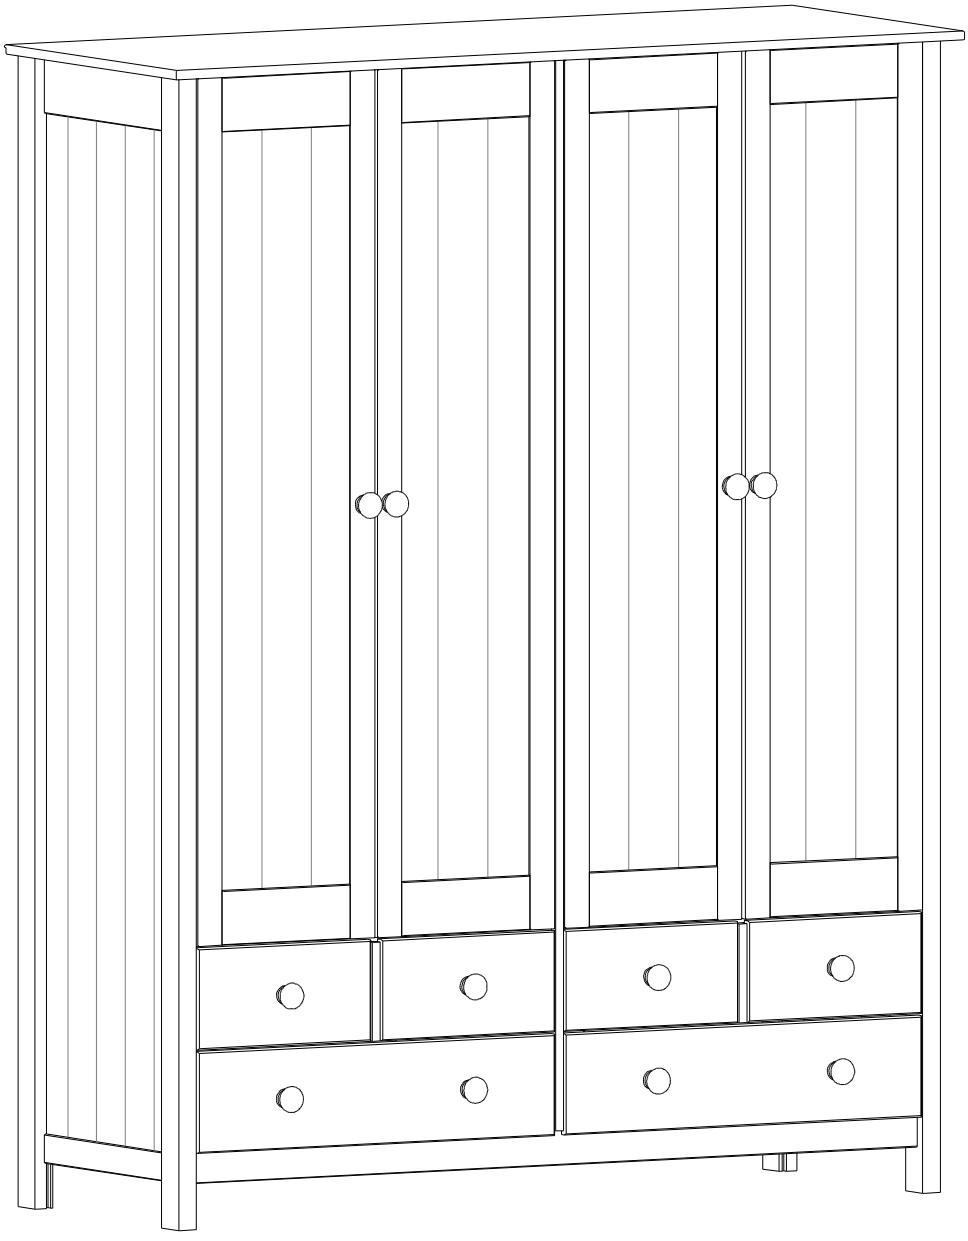

Dimensions

Width - 140,4cm
Depth - 53cm
Height - 179,9cm


Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

⚠ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

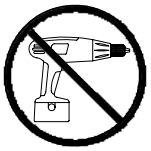

- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.


Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

Please check you have all the fittings listed below

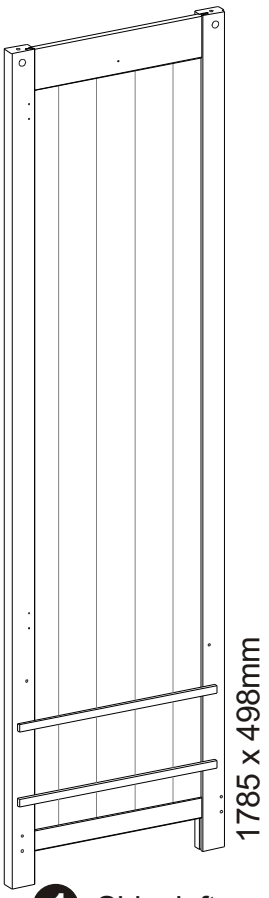


1 Side, left
1 pcs.

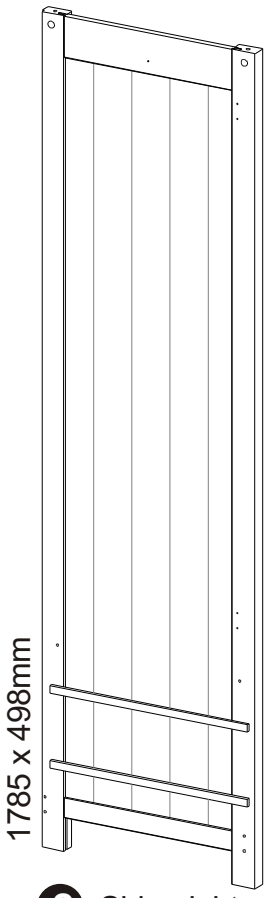


2 Side, right
1 pcs.


3 Divider, large
1 pcs.

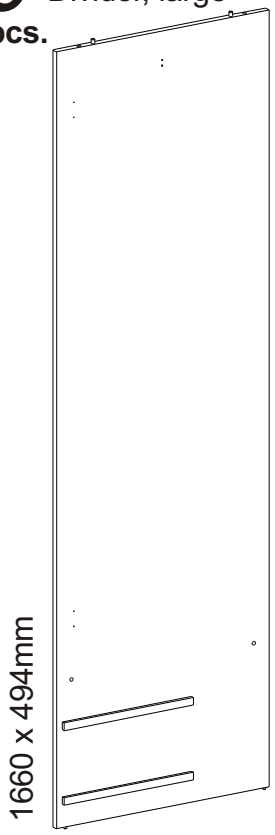


4 Door, right
2 pcs.

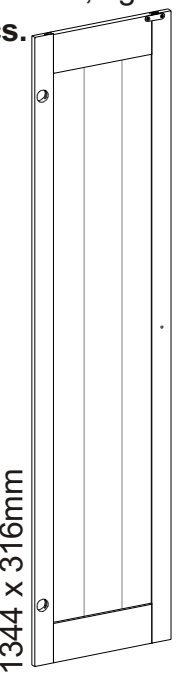


5 Door, left
2 pcs.

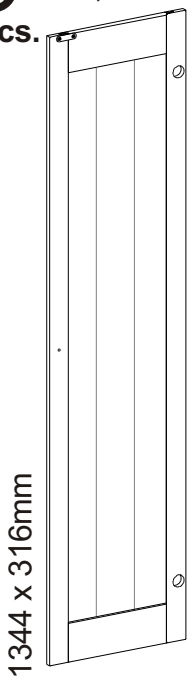


6 Top
1 pcs.

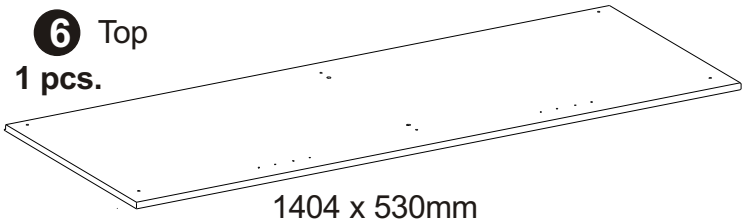


7 Plinth
2 pcs.

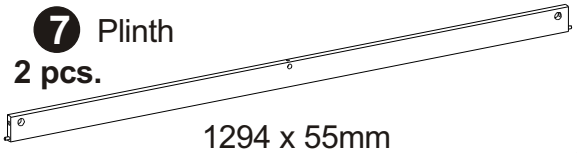


8 Bottom
2 pcs.

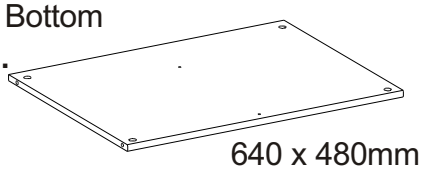


9 Divider, small
2 pcs.




10 Drawerfront, large
2 pcs.

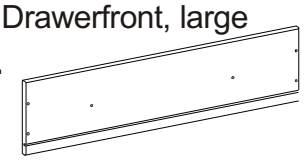


11 Drawerfront, small
4 pcs.
309 x 157mm




12 Back
4 pcs.

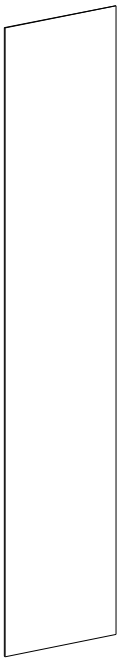


14 Drawer side, left
6 pcs.
342 x 110mm




13 Drawer side, left
6 pcs.
342 x 110mm




15 Drawer back, small
4 pcs.




16 Drawer back, large
2 pcs.

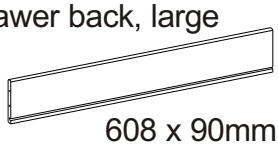

17 Drawer bottom, small
4 pcs.



18 Drawer bottom, large
2 pcs.
















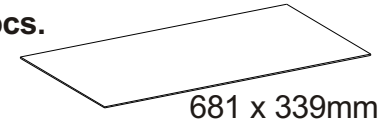


Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the fittings listed below

Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

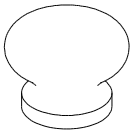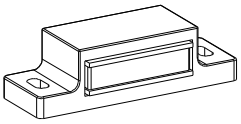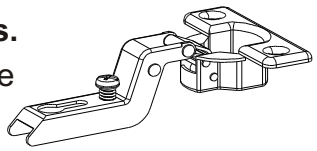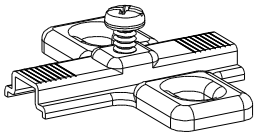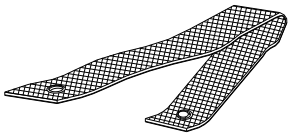
A **22 pcs.** Cam ø15 x 12mm 	**B** **24 pcs.** Cam ø12 x 10,5mm 	**C** **42 pcs.** Locking pin 
D **60 pcs.** Nail - 1,6 x 20mm 	**E** **2 pcs.** Locking pin - ø6mm 	**F** **2 pcs.** Screw - ø4 x 20mm 
G **42 pcs.** Screw - ø3,5 x 14mm 	**H** **8 pcs.** Screw - ø3,5 x 25mm 	**I** **36 pcs.** Screw - ø3,5 x 35mm 
J **12 pcs.** Knob ø40 x 30mm 	**K** **4 pcs.** Hanging Rail Cup 	**L** **4 pcs.** Magnet 
M **8 pcs.** Cup Hinge 	**N** **8 pcs.** Cross Plate 	**P** **2 pcs.** Mini block 
Q **2 pcs.** Wall strap 	**R** **2 pcs.** Wall plug 	**S** **4 pcs.** Washer 
T **2 pcs.** Hanging Rail - ø16 x 636mm 	**U** **2 pcs.** Joining Strip - 1335mm 	


Tools required


Philips screwdriver (medium & large)



Flatblade screwdriver (medium)

7mm Suitable drill bit (for use with wall plug)

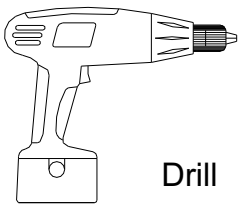

Drill


Small hammer



Ruler/tape measure

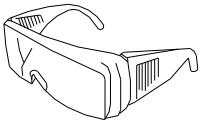
Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Key Diagram.

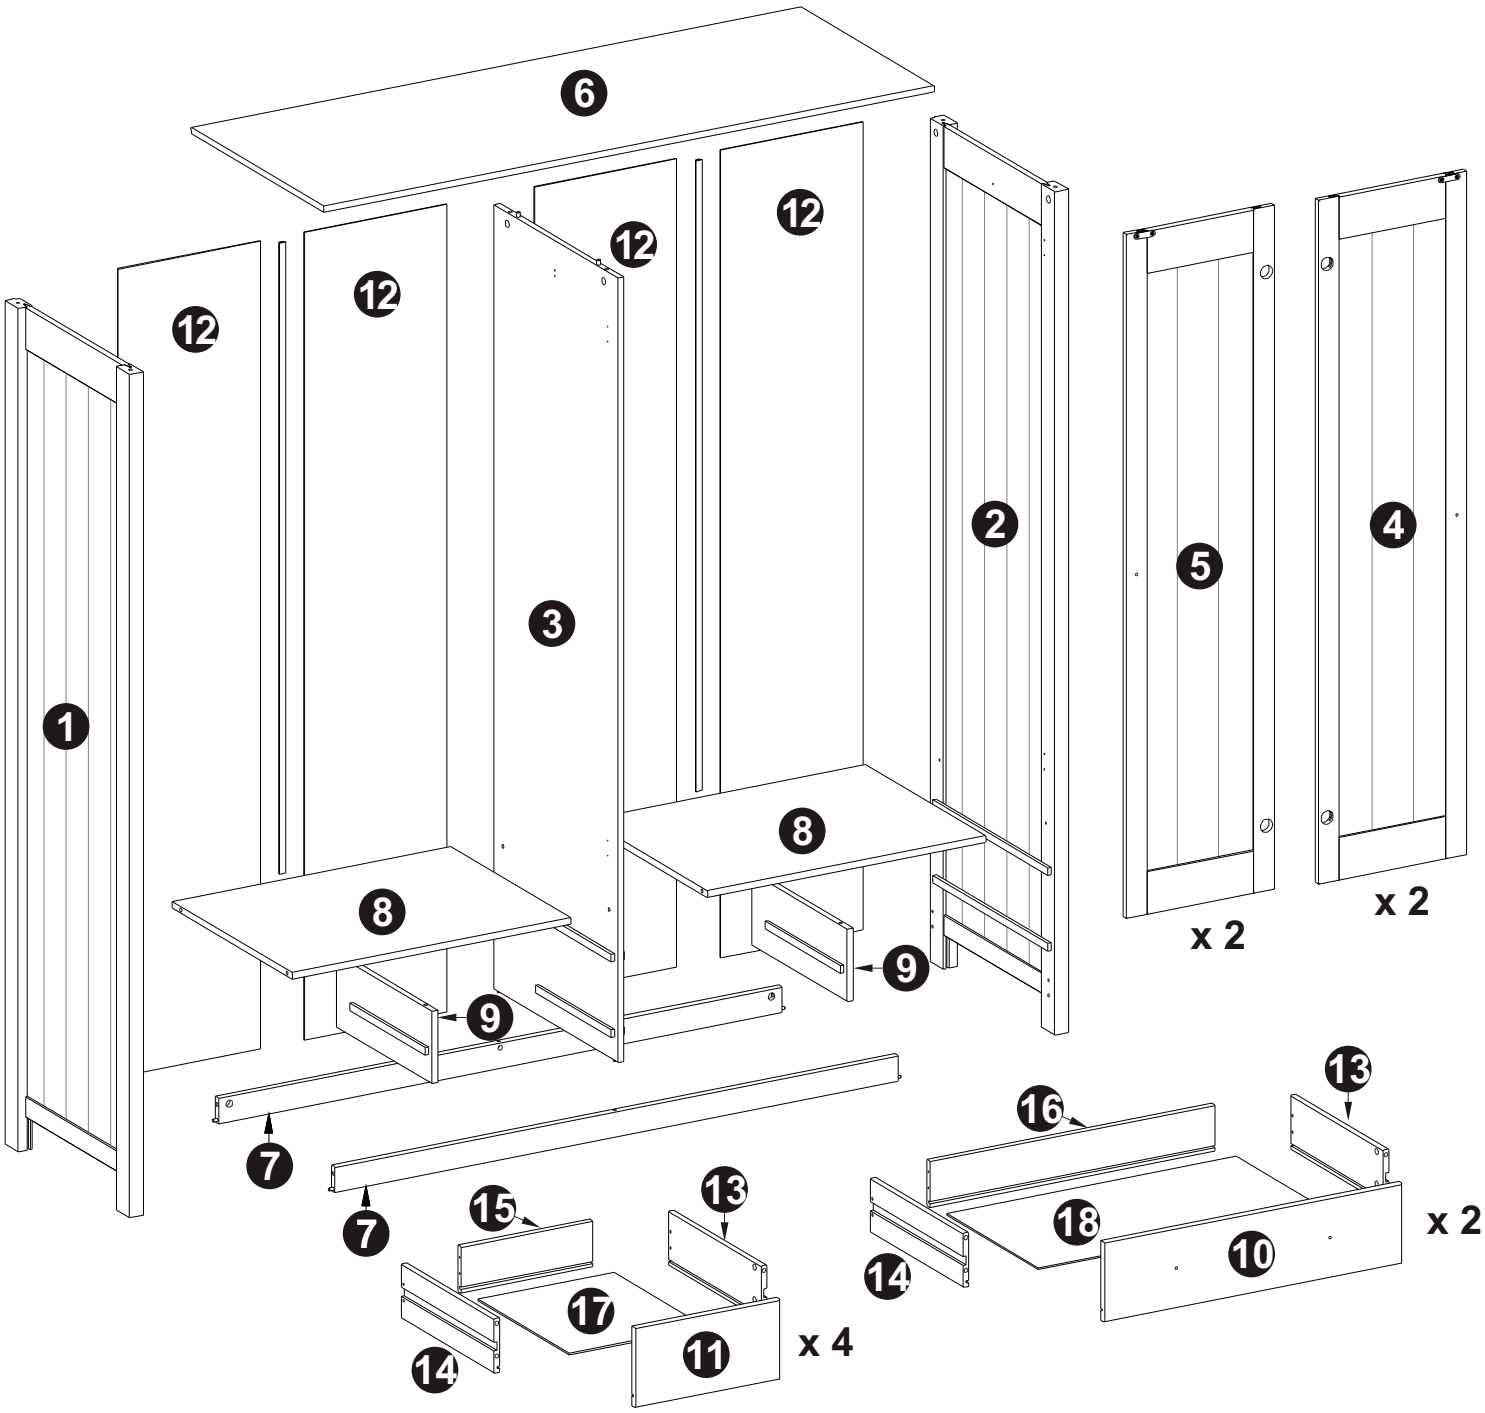


Function of cam & locking pin.

Step 1:
Fix the locking pin to the wooden panel.

Step 2:
Push the wooden panel with the attached locking pin onto the other wooden panel.

Step 3:
Place the cam into the hole, arrow pointing towards the locking pin.

Step 4:
Tighten: Turn the cam to the right.

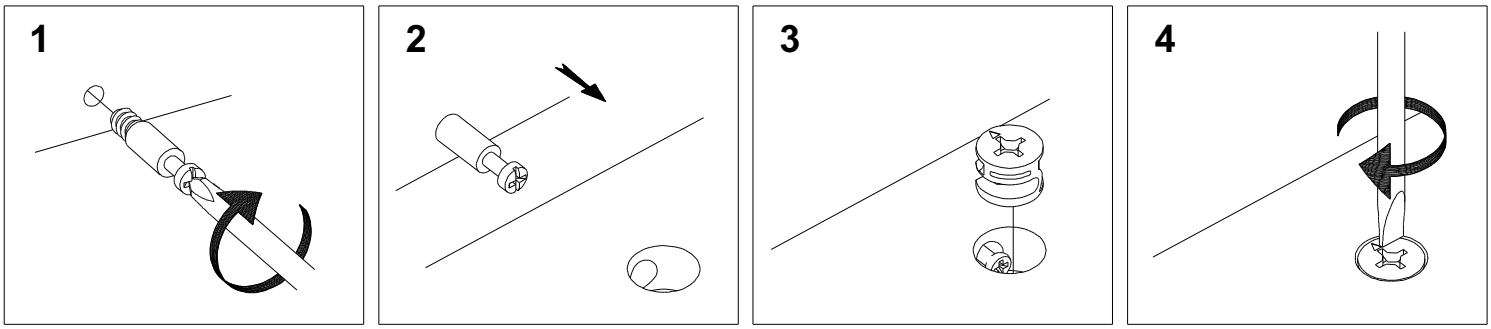

1. Mounting the cross plates to the sides.

Fix the cross plates “N” to the sides “1” & “2” using screws “H” into the holes indicated.

It is important that the cross plates is placed exactly as shown.

The short end of the cross plates must point towards the front edge of the sides.

See fig. 1.1

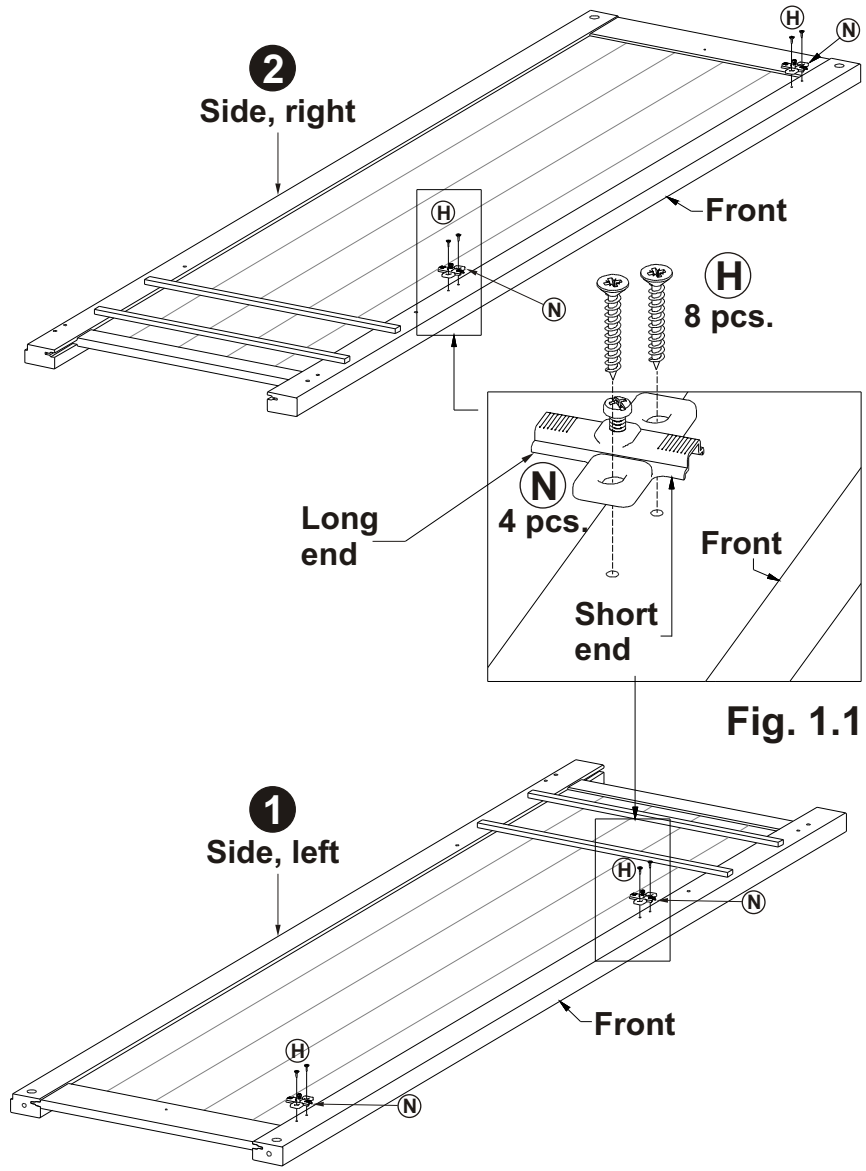


Fig. 1.1

2. Mounting the hanging rail cups to the sides.

Fix the hanging rail cups “K” onto the sides “1” & “2” using screws “G” into the pre-drilled holes.

See fig. 2.1


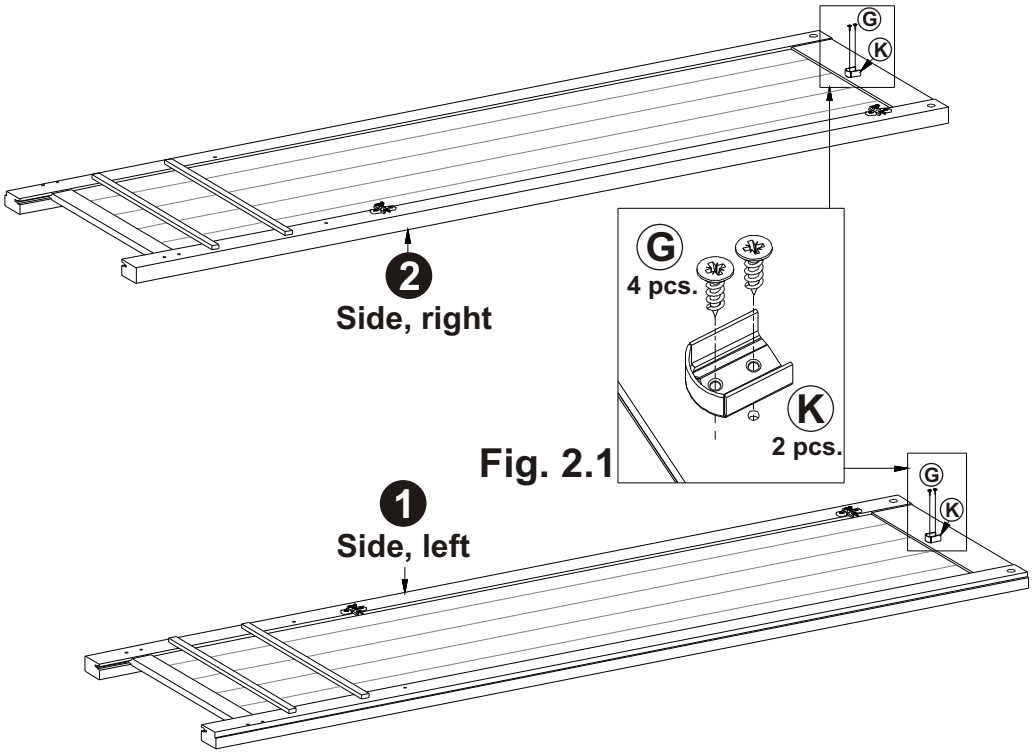


Fig. 2.1

3. Mounting the locking pins to the sides.

Screw the locking pins “C” into the holes indicated on the sides “1” & “2”.

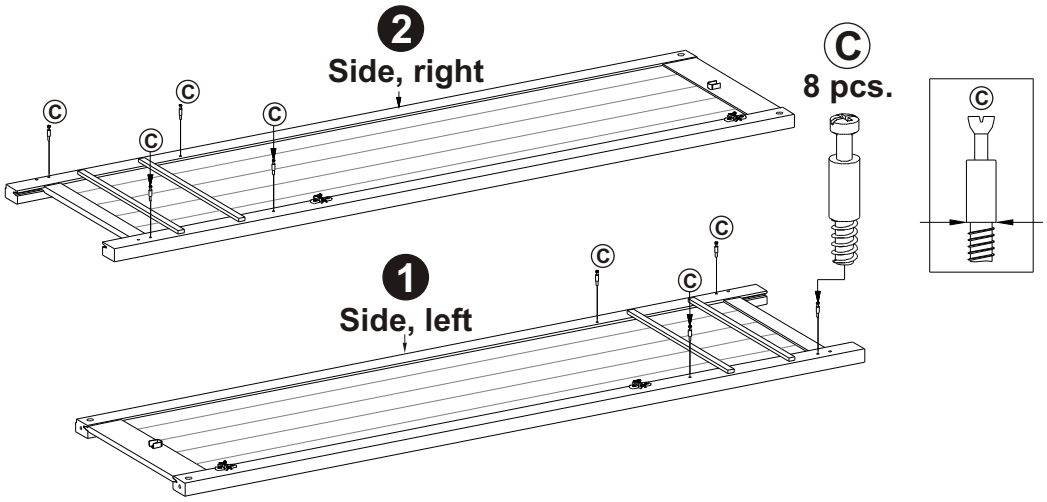

4a. Mounting the cross plates to the large divider.

Fix the cross plates “N” to the left hand side of the large divider “3” using screws “G” into the holes indicated.

It is important that the cross plates is placed exactly as shown.

The short end of the cross plates must point towards the front edge of the sides.

See fig. 4a.1

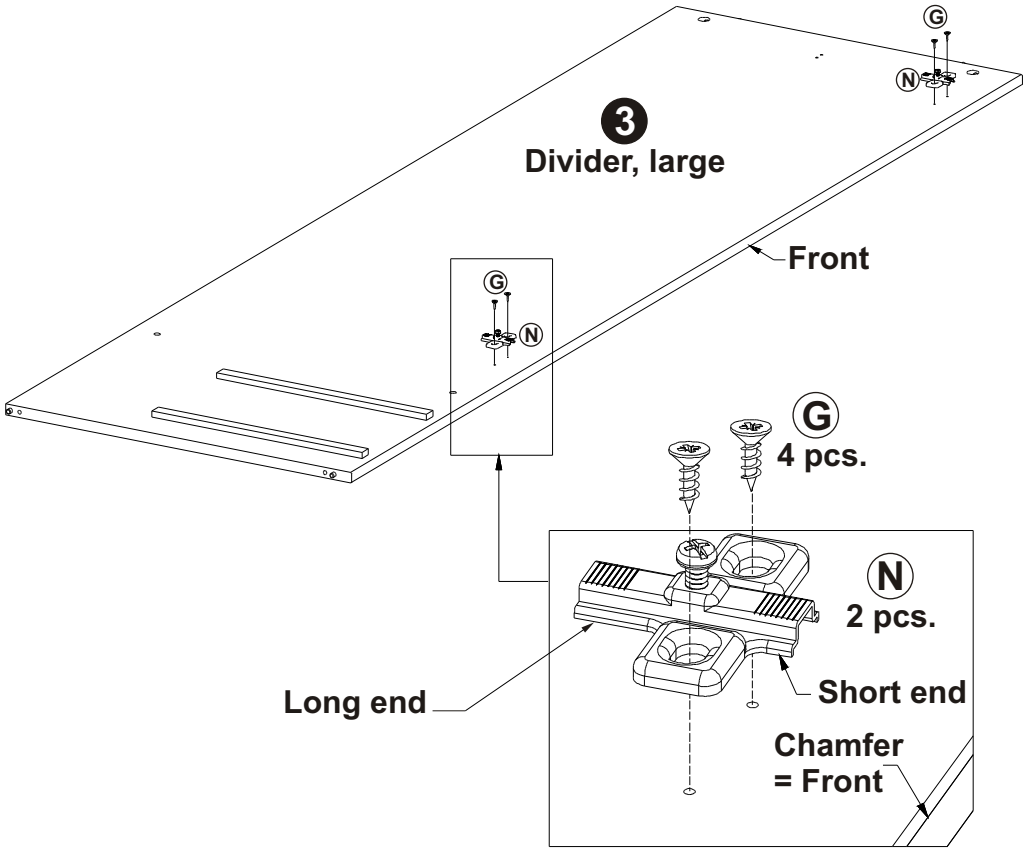


Fig. 4a.1


4b. Mounting the cross plates to the large divider.

Fix the cross plates “N” to the right hand side of the large divider “3” using screws “G” into the holes indicated.

It is important that the cross plates is placed exactly as shown.

The short end of the cross plates must point towards the front edge of the sides.

See fig. 4a.1

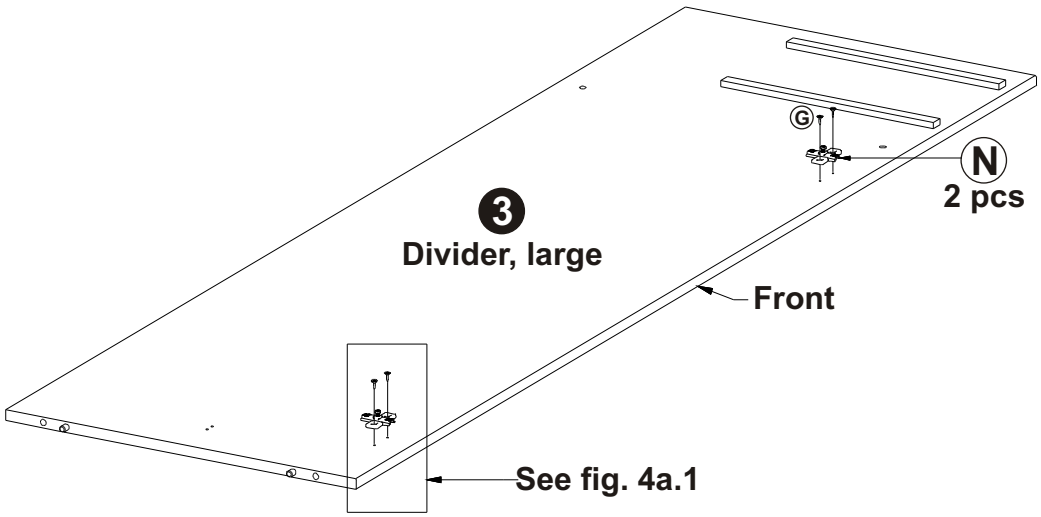


5a. Mounting the hanging cup to the large divider.

Fix the hanging rail cup “K” to the left hand side of the large divider “3” using screws “G” into the pre-drilled holes.

See fig. 5a.1


Fig. 5a.1

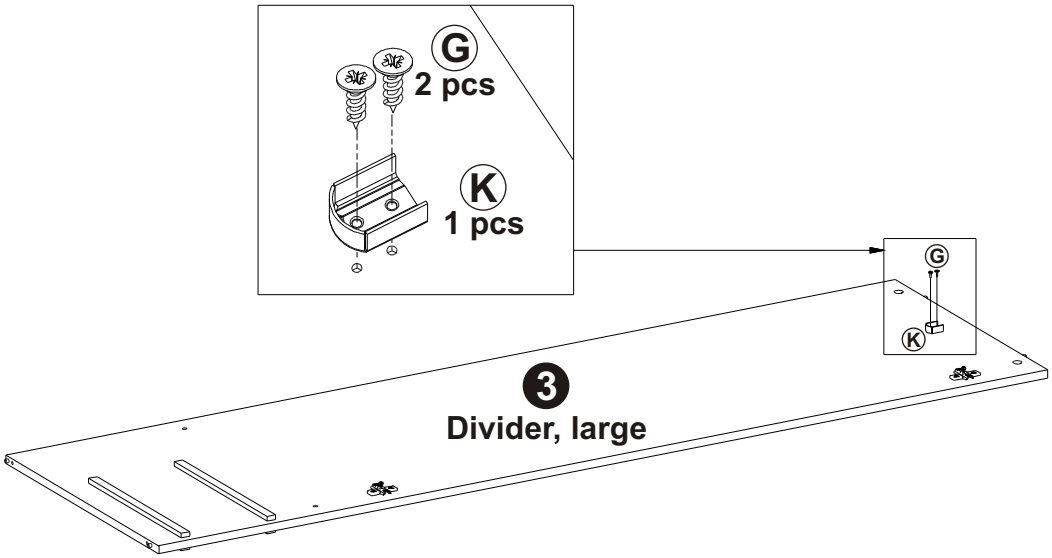

5b. Mounting the hanging rail cup to the large divider.


Fix the hanging rail cup “K” to the right hand side of the large divider “3” using screws “G” into the pre-drilled holes.

See fig. 5a.1

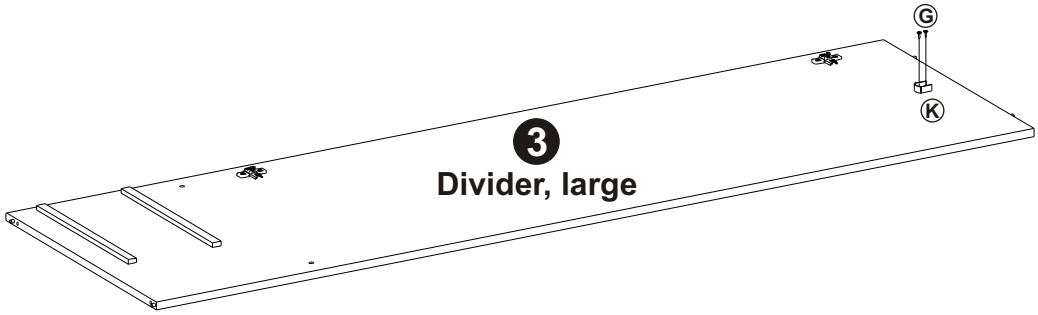

6. Mounting the locking pins to the top.

Screw the locking pins “C” into the holes indicated on the top “6”.

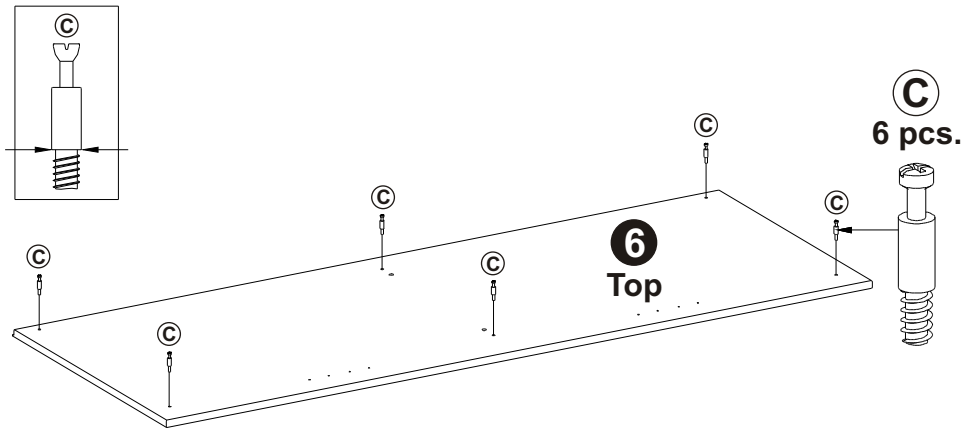

7. Mounting the magnets to the top.

Fix the magnets “L” to the top “6” using screws “G” into the pre-drilled holes.

It is important that the magnetic part points towards the fornt edge of the top.

See fig. 7.1


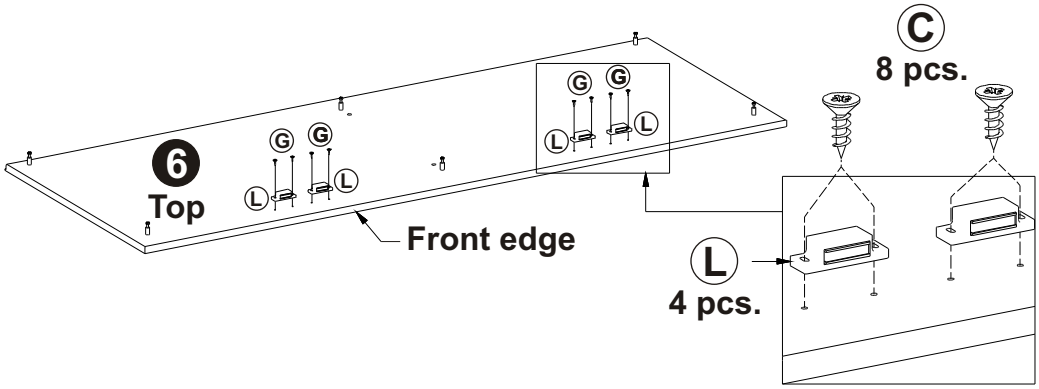


Fig. 7.1

8. Mounting the locking pins to the bottoms.

Screw the locking pins “C” into the holes indicated on the bottom “8”.

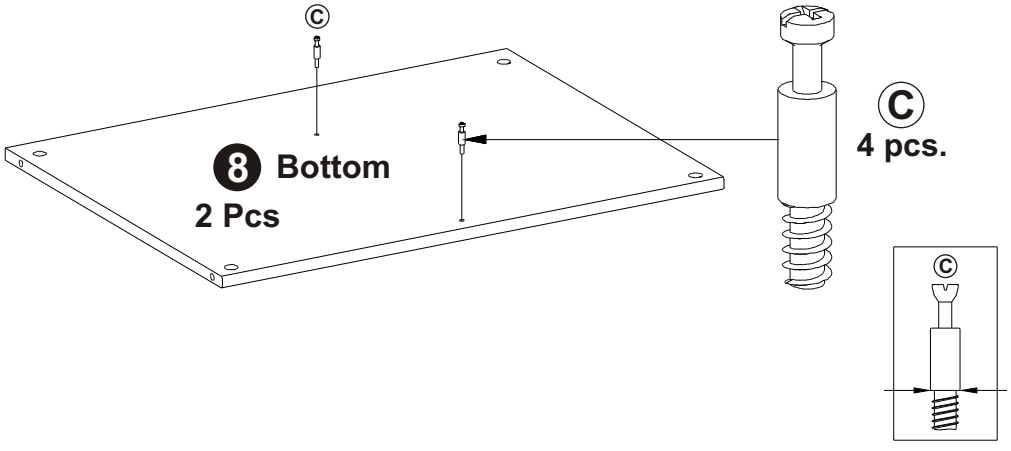

9. Assembling the small dividers to the bottoms.

Press the small divider “9” onto the bottom “8”.

See page 5 - “Function of cam & locking pin”.

Place the cams “A” into the holes indicated, arrows pointing towards the bottom/locking pin.

Tighten:
Turn the cam “A” to the right.


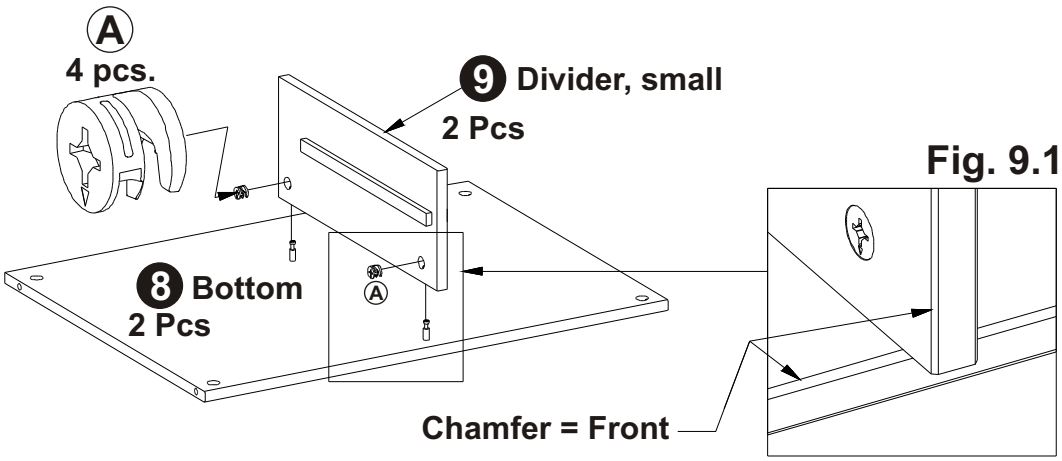


Fig. 9.1

10. Adding the mini blocks to the plinths.

Knock the mini blocks “P” into the holes indicated on the plinths “7”.

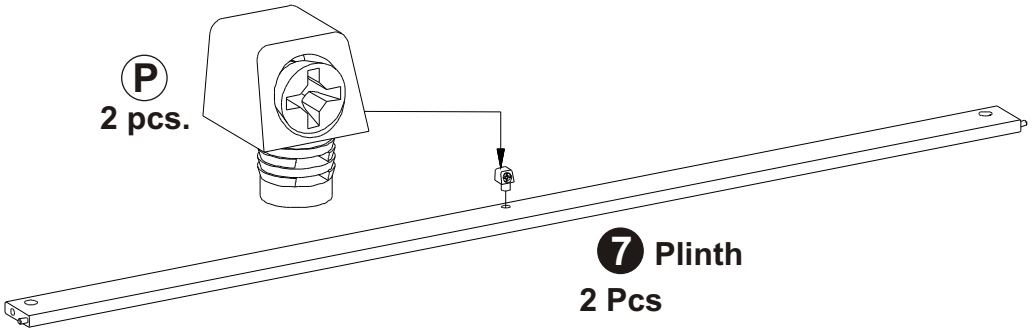

11a. Assembling the bottoms to the large divider.

Push the locking pins “E” through the holes indicated on the large divider “3”.


It is important that the locking pins is turned exactly as shown.

Press the bottom “8” onto the left hand side of the large divider “3”.

See page 5 - “Function of cam & bolt”.

Place the cams “A” into the holes indicated, arrows pointing towards the divider/locking pin.

Tighten:
Turn the cam to the right.

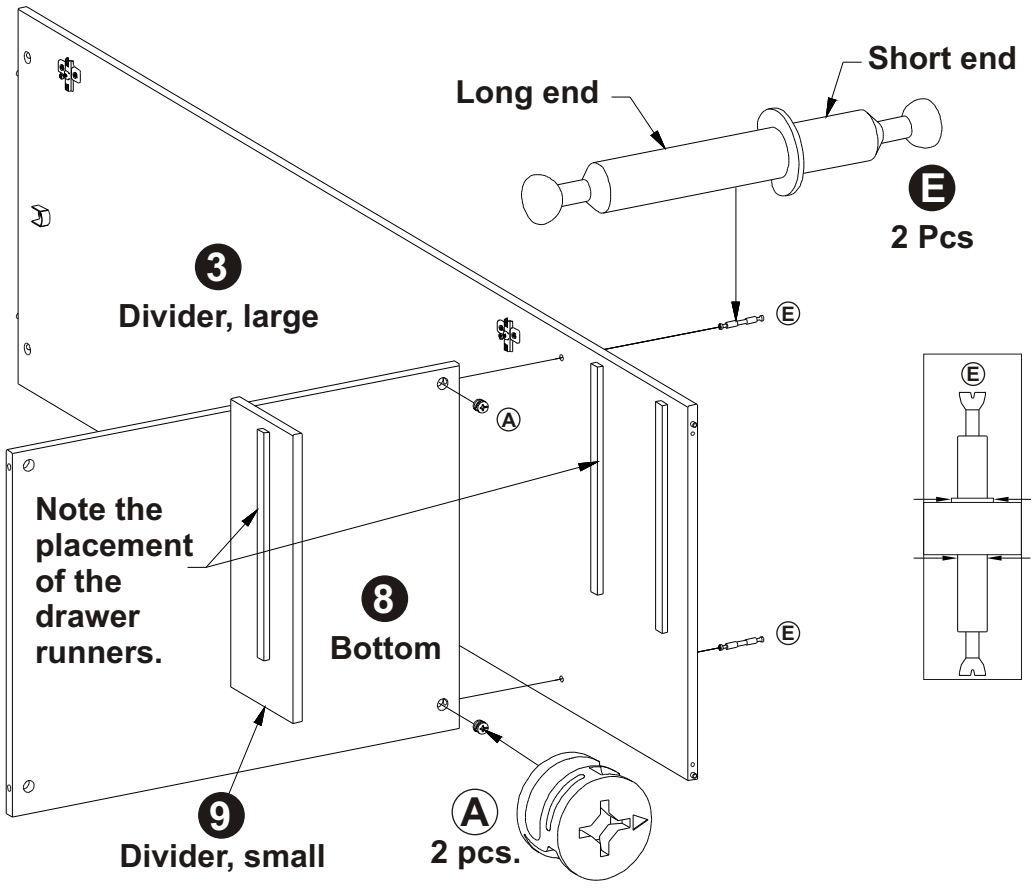


11b. Assembling the bottoms to the large divider.

Press the bottom "8" onto the large divider "3".

See page 5 "Function of cam and locking pin".

Place the cams "A" into the holes indicated, arrows pointing towards the side / locking pin.

Tighten:
Turn the cams to the right.

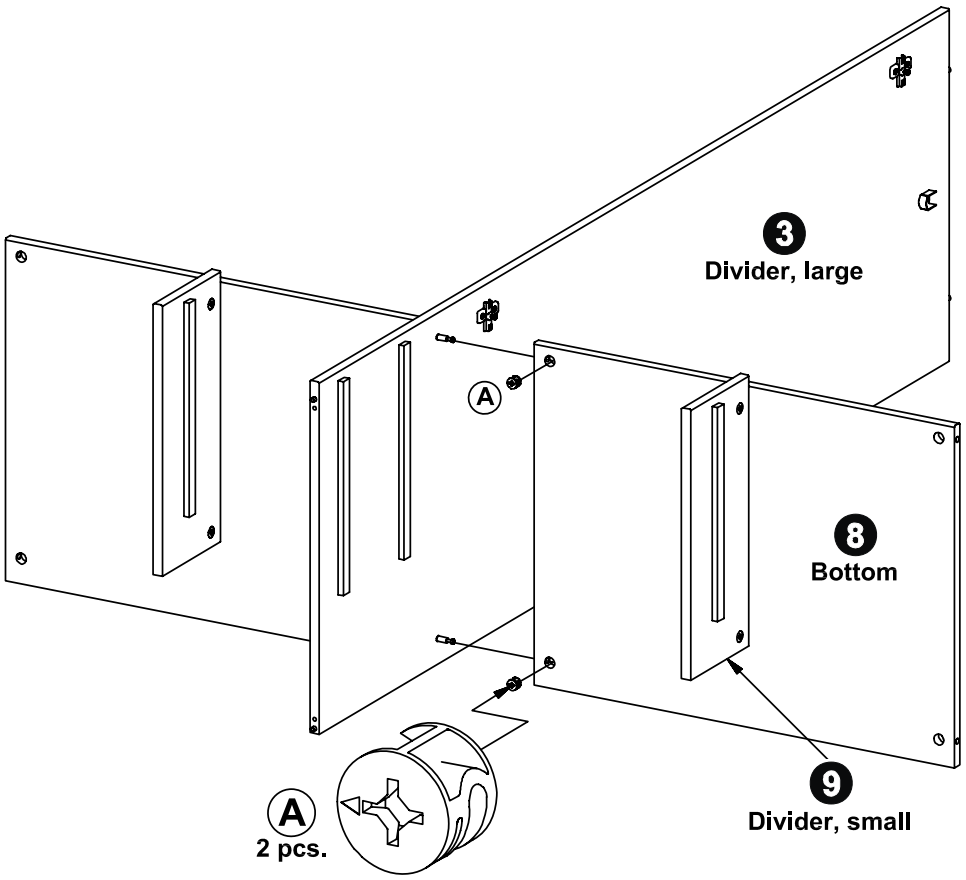


12. Assembling the right hand side to the bottom.

Press the side "2" onto the bottom "8".

See page 5 "Function of cam and locking pin".

Place the cams "A" into the holes indicated, arrows pointing towards the side / locking pin.

Tighten:
Turn the cams to the right.

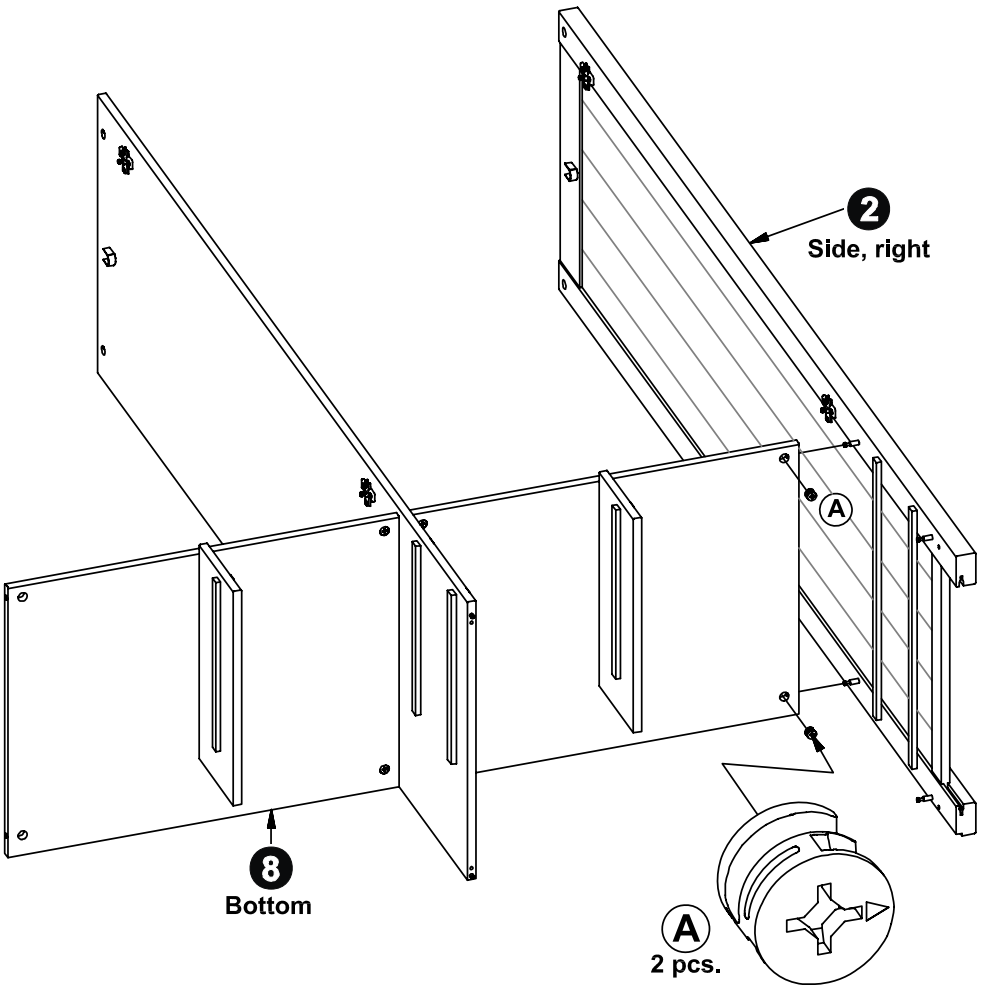

13. Adding the plinths to the side and the large divider.

Press the plinth "7" onto the side "2".

The dowels at the end of the large divider "3" should fit into the holes on the plinths.

See page 5 "Function of cam and locking pin".

Place the cams "A" into the holes indicated, arrows pointing towards the side / locking pin.

Tighten:
Turn the cams to the right.

Fix the miniblocks "P" onto the divider.

See fig. 13.1

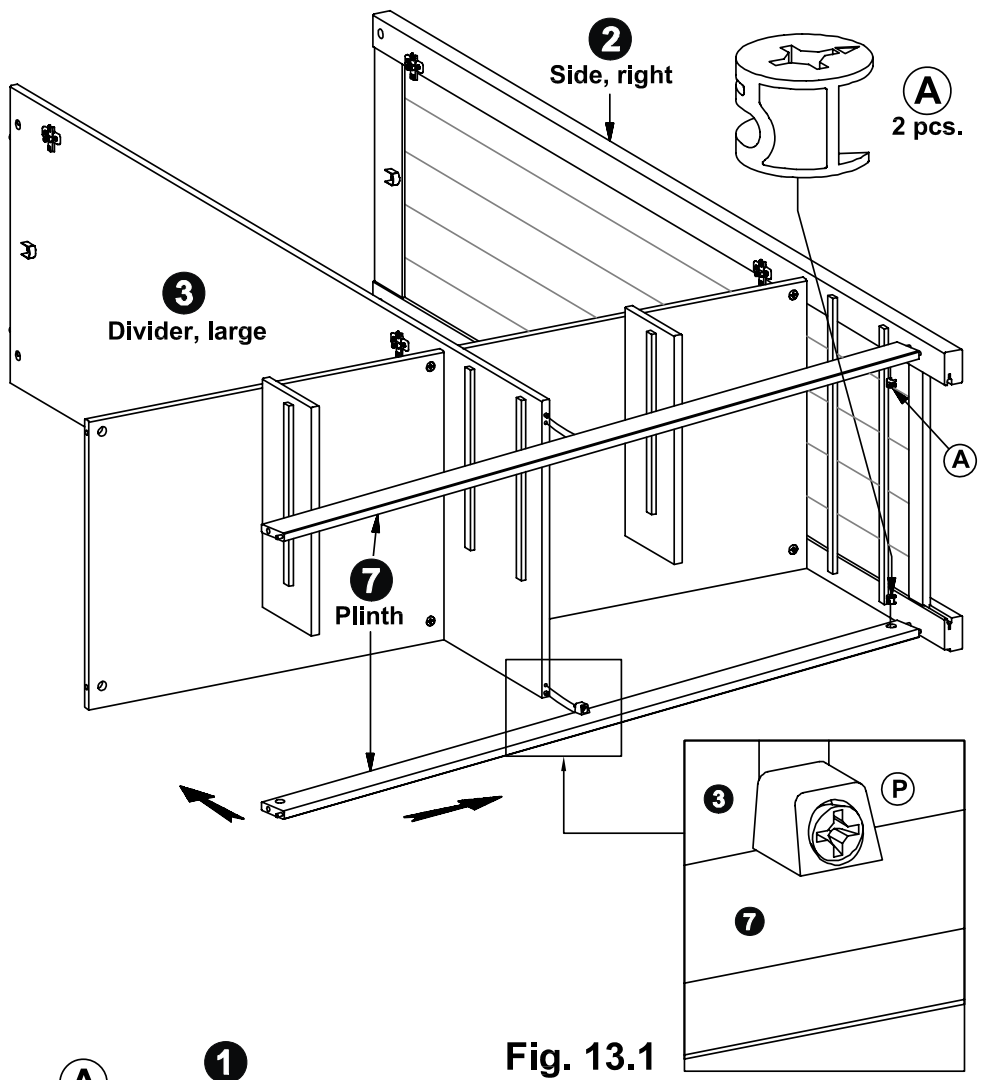


Fig. 13.1


14. Assembling the left hand side to the carcass.

Press the side "1" onto the bottom "8" and the plinth "7".

See page 5 "Function of cam and locking pin".

Place the cams "A" into the holes indicated, arrows pointing towards the side / locking pin.

Tighten:
Turn the cams to the right.

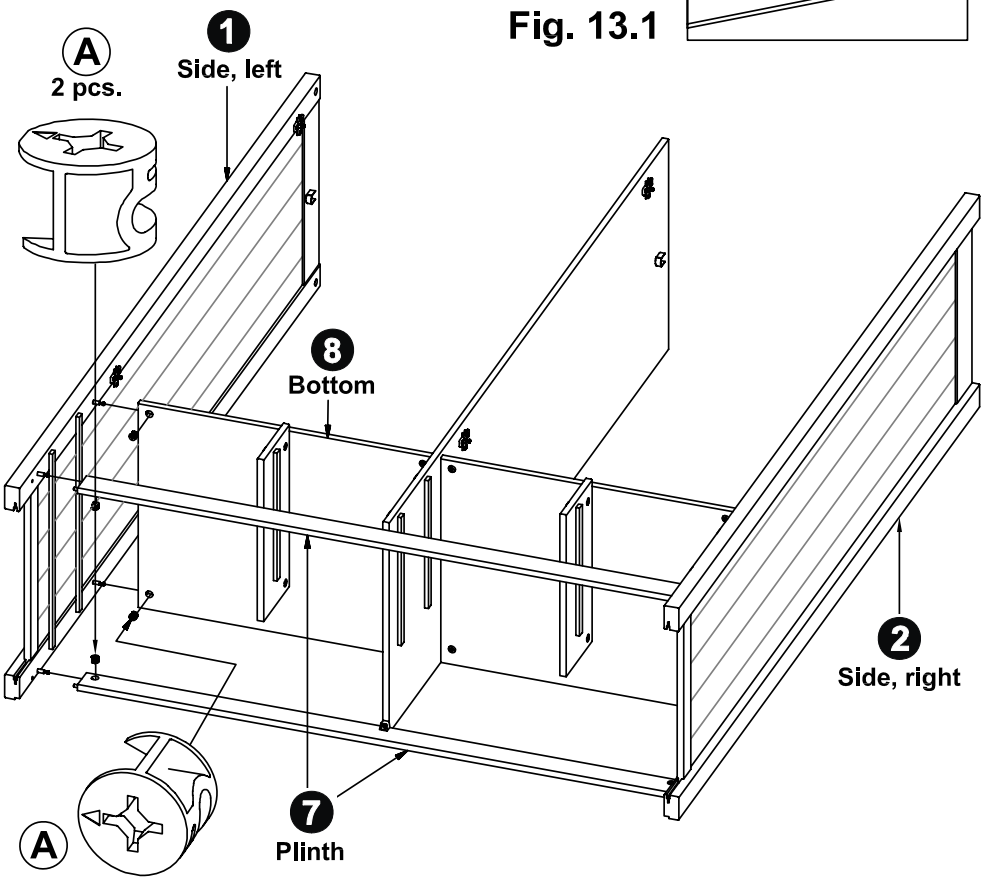

15. Assembling the top to the carcass.

Lower the top “6” onto the divider “3” and the sides “1” & “2”.

See page 5 - “Function of cam & locking pin”.

Place the cams “A” into the holes indicated, arrows pointing towards the top/locking pin.

Tighten:
Turn the cam “A” to the right.

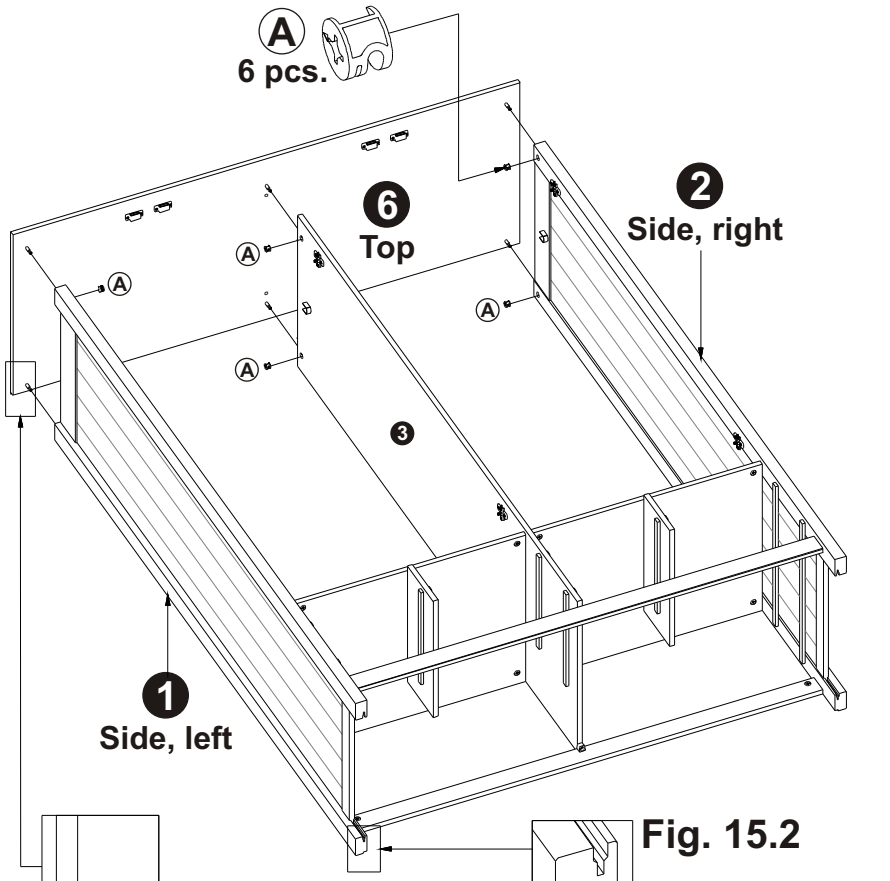


Fig. 15.1


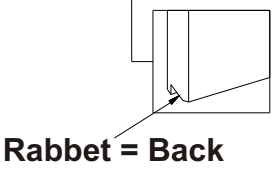


Fig. 15.2

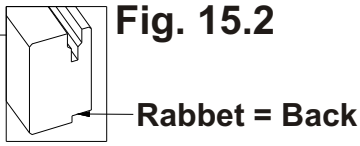

16. Adding the back to the carcass.

Place the back “12” into the rabbet of the top “6” and the side “2”.

Ensure there is NO GAP between the side and the back, NOR between the top and the back.

Fasten the back with nails “D” along the top.


The angle between the top and the side must be 90 degrees. Fig. 16.1

To accomplish this, ensure there is NO GAP between the side and the back.

Fasten the back along the side and the bottom.

Repeat the procedure placing the back to the other side.

Fig. 16.1

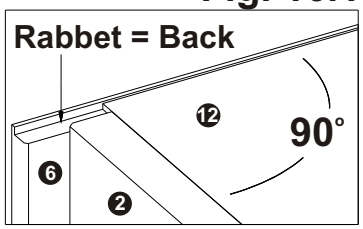

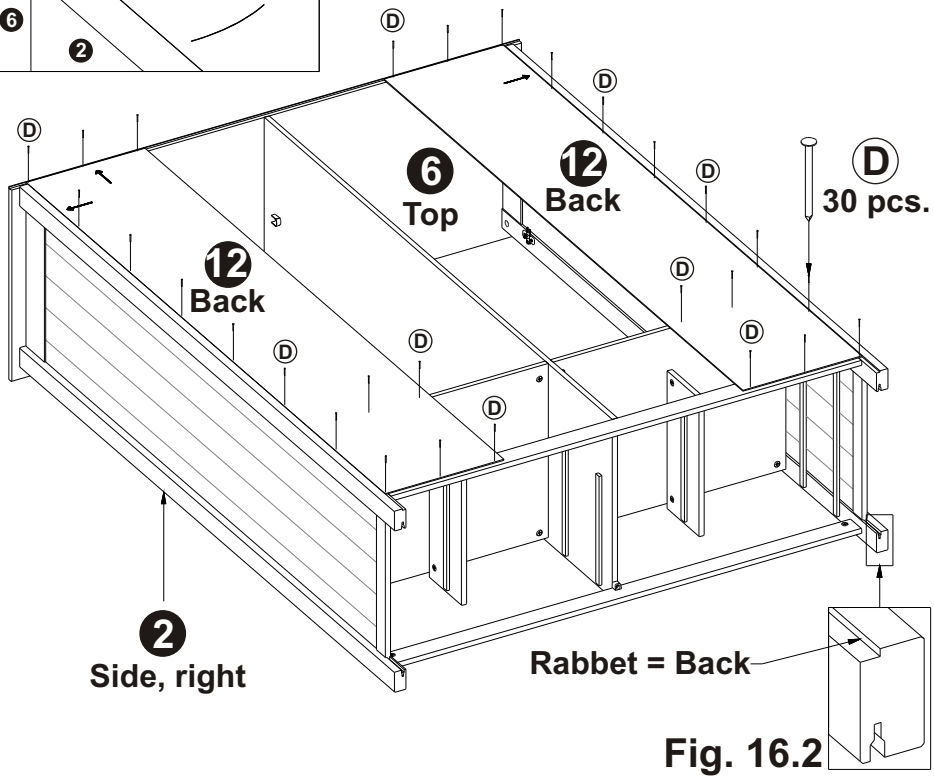


Fig. 16.2

17. Adding the back and the joining strip to the carcass.

Place the joining strip “U” onto the back.

See Fig. 17.1

Place the back into the rabbet of the top “6”.

Fasten the back along the top.

Fasten the back along the side and the bottom.

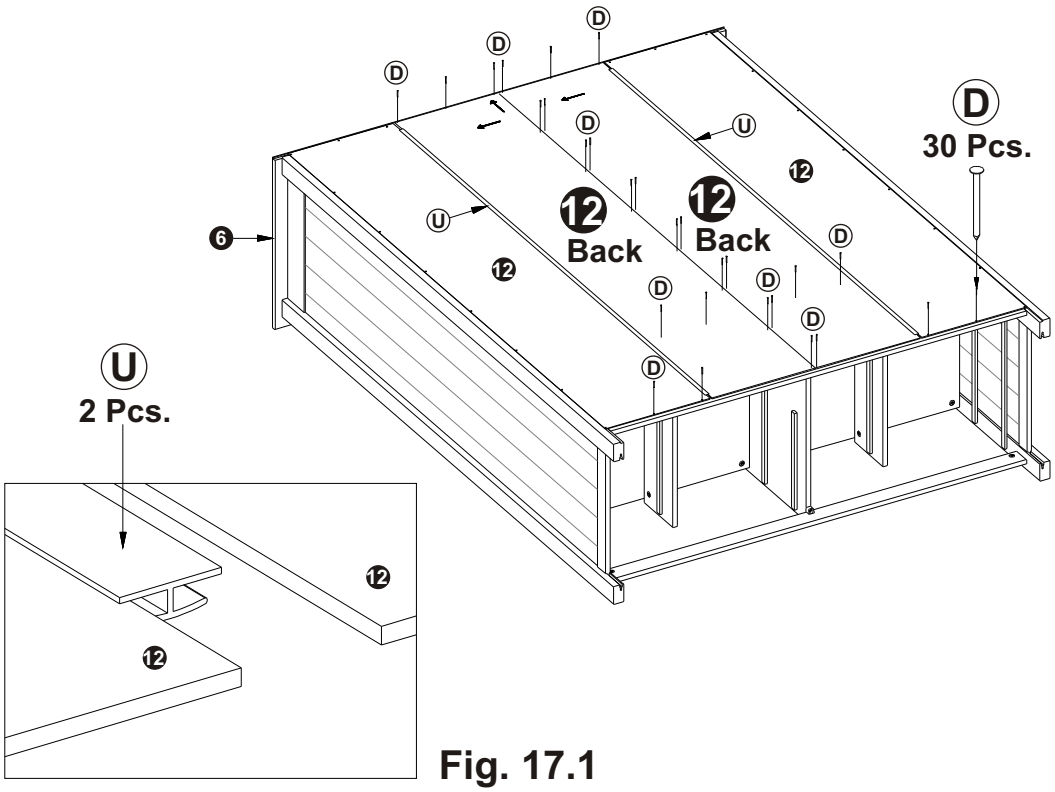


Fig. 17.1

18. Mounting the drawer sides to the small drawer back.

Fix the drawer sides “13” and “14” to the small drawer back “15” using screws “I”.

The grooves of the drawer sides and back should be turned exactly as shown.

See Fig. 18.1


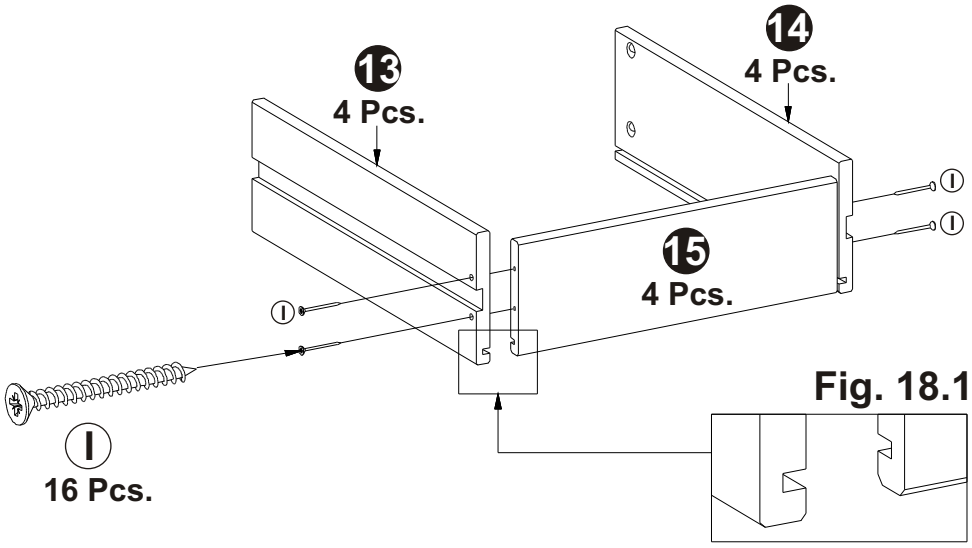


Fig. 18.1


19. Sliding the drawer bottom into the drawer frame.

Slide the small drawer bottom “17” into the grooves of the drawer frame.

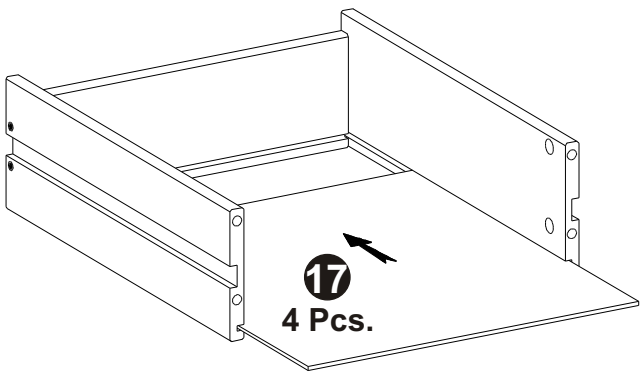

20. Mounting the locking pins to the small drawer front.

Screw the locking pins “C” into the holes indicated on the small drawer front “11”.

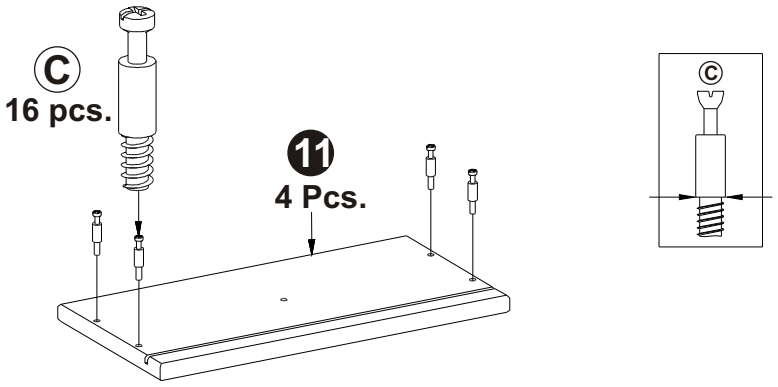


21. Adding the small drawer front to the drawer frame.

Press the drawer front “11” onto the drawer sides “13” and “14”.

See page 5 “Function of cam & locking pin.


Place the cams “B” into the holes indicated, arrows pointing towards the drawer front/ locking pins.

Tighten:
Turn the cam to the right.

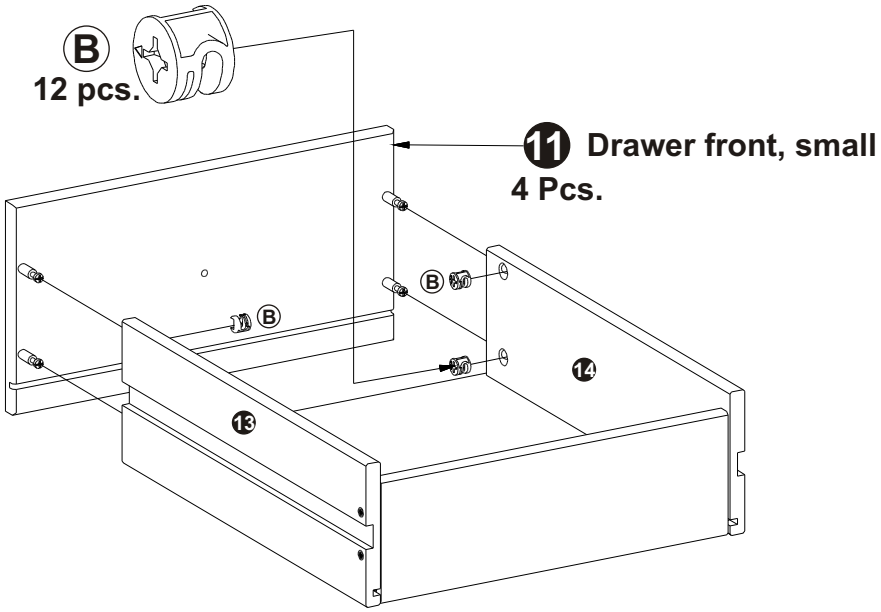

22. Mounting the knobs to the small drawer front.

Fix the knobs “J” to the drawer front using screws “I”.

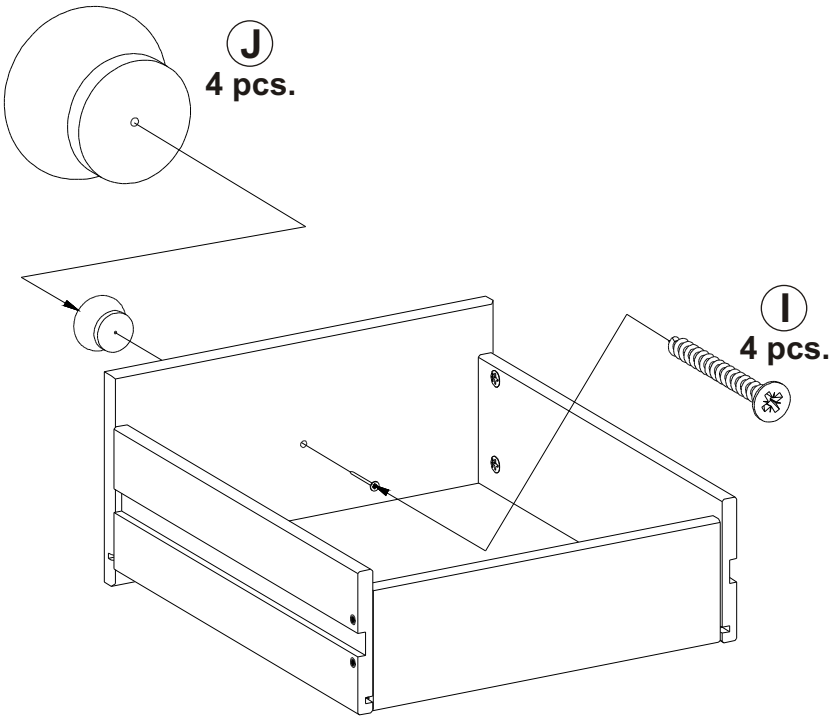

23. Mounting the drawer sides to the large drawer back.

Fix the drawer sides “13” and “14” to the large drawer back “16” using screws “I”.

The grooves of the drawer sides and back should be turned exactly as shown.

See fig. 23.1.


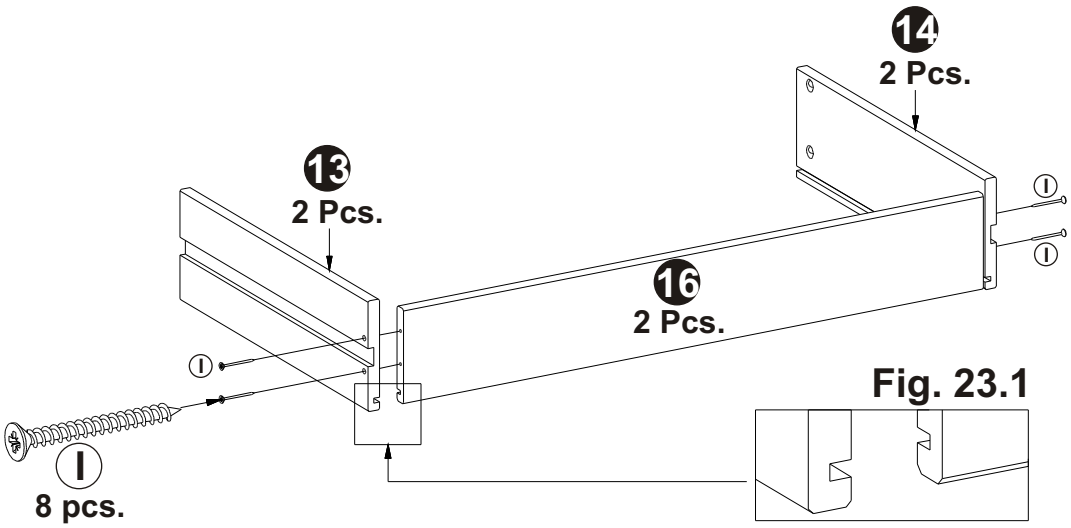


Fig. 23.1


24. Sliding the drawer bottom into the drawer frame.

Slide the large drawer bottom “18” into the grooves of the drawer frame.

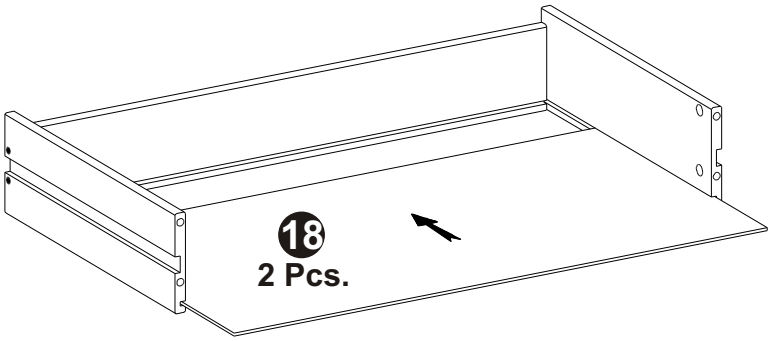

25. Mounting the locking pins to the large drawer front.

Screw the locking pins “C” into the holes indicated on the large drawer front “10”.

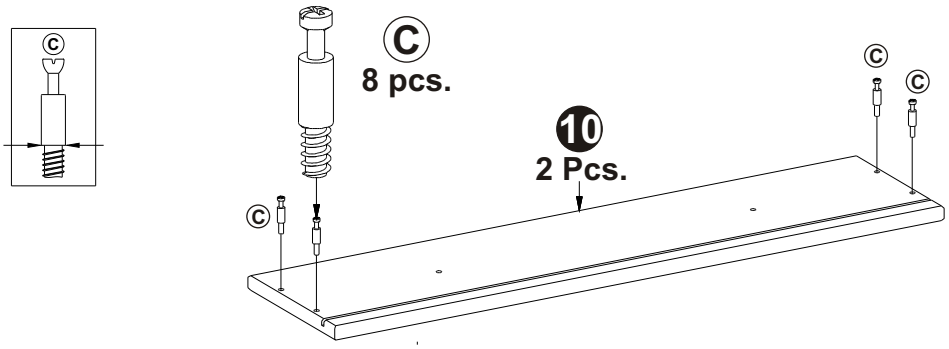


26. Adding the large drawer front to the drawer frame.

Press the drawer front “10” onto the drawer sides “13” and “14”.

See page 5 “ Function of cam & locking pin”.


Place the cams “B” into the holes indicated, arrows pointing towards the drawer front / locking pins.

Tighten:
Turn the cam to the right.

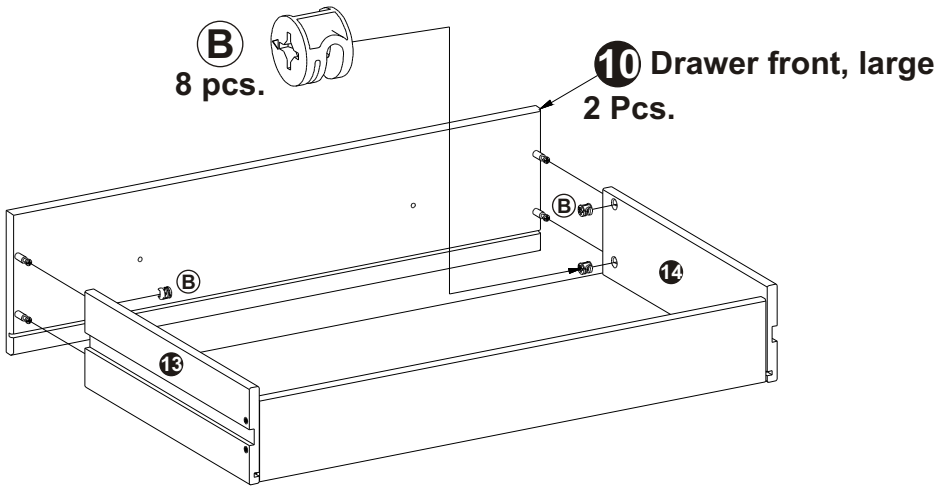

27. Mounting the knobs to the large drawer front.


Fix the knobs “J” to the large drawer front using screws “I”.

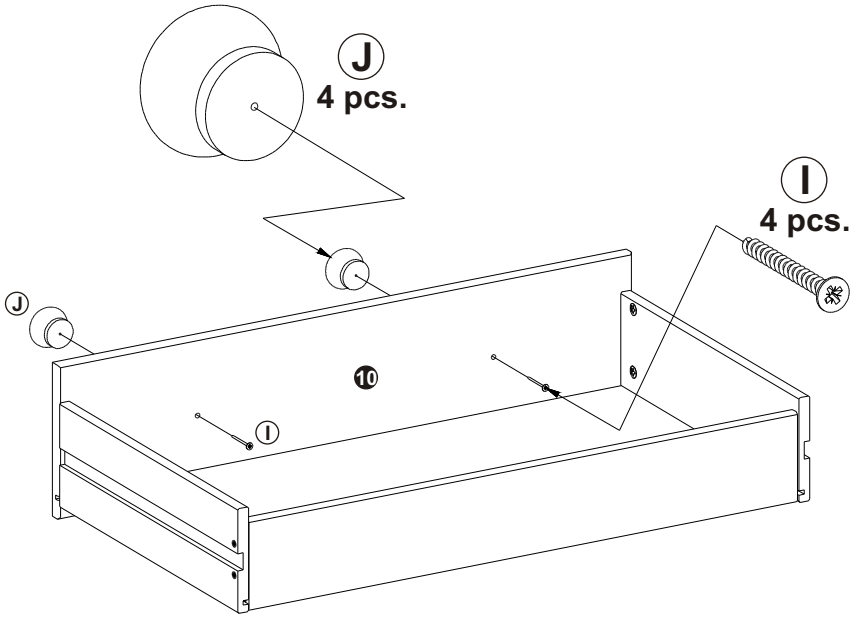

28. Adding the drawer & the hanging rail to the carcass.

Slide the drawers onto the drawer runners.

Lower the hanging rails “T” into the hanging rail cups.

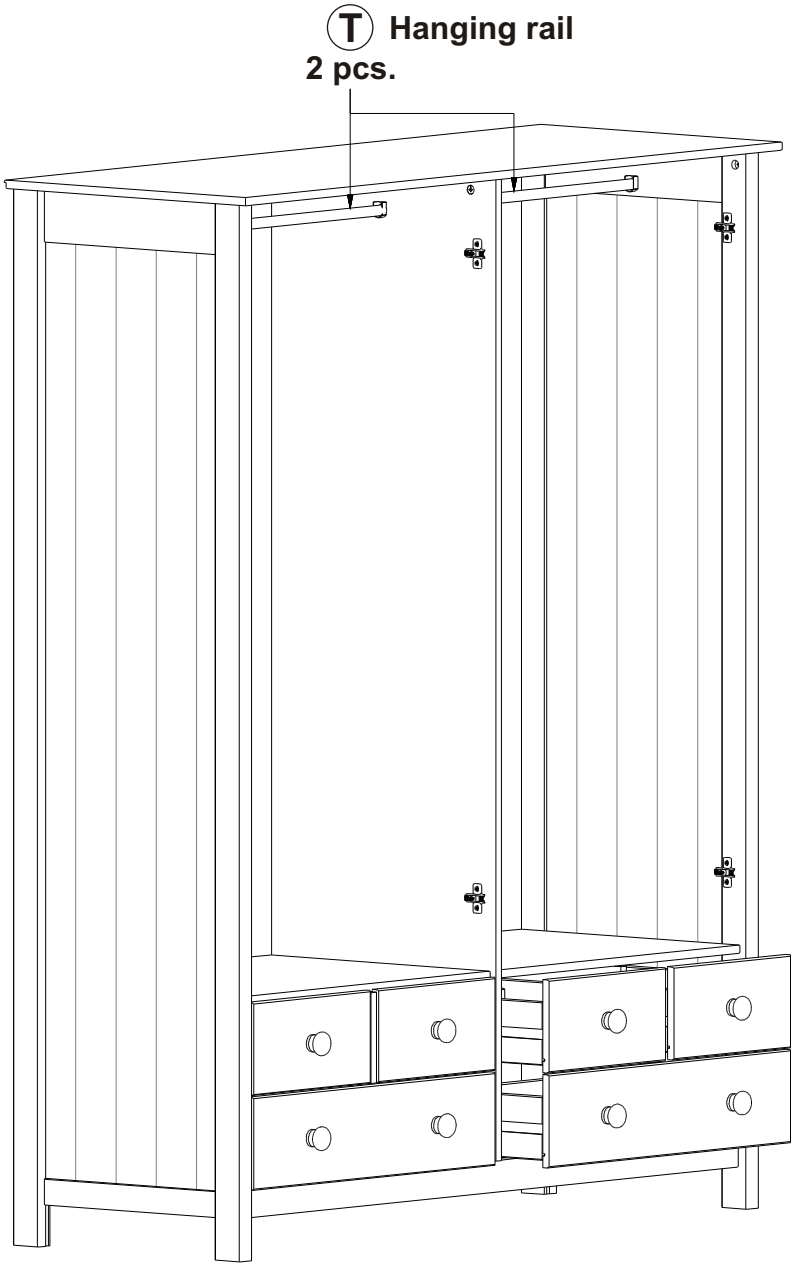

29. Mounting the hinges to the doors.

Press the hinges “M” into the holes indicated on the doors “4” & “5”.

Fix the hinges using screws “G”.


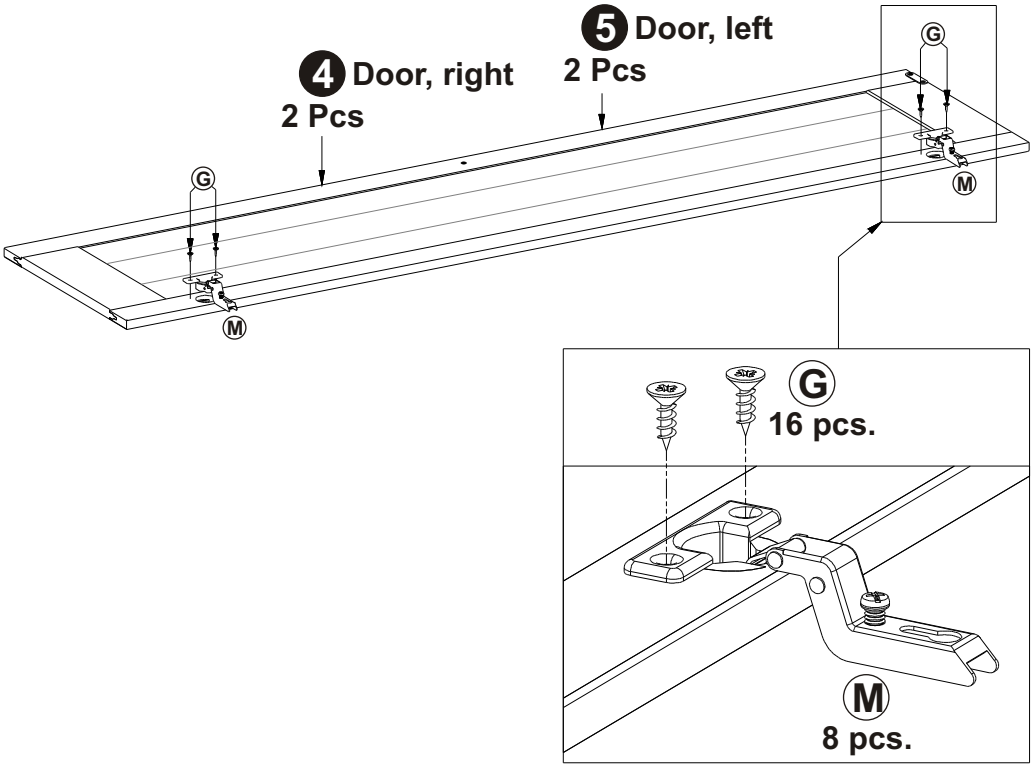


Fig. 29.1

30. Mounting the knobs to the doors.

Fasten the knobs “J” to the doors “4” & “5” using screw “I”.

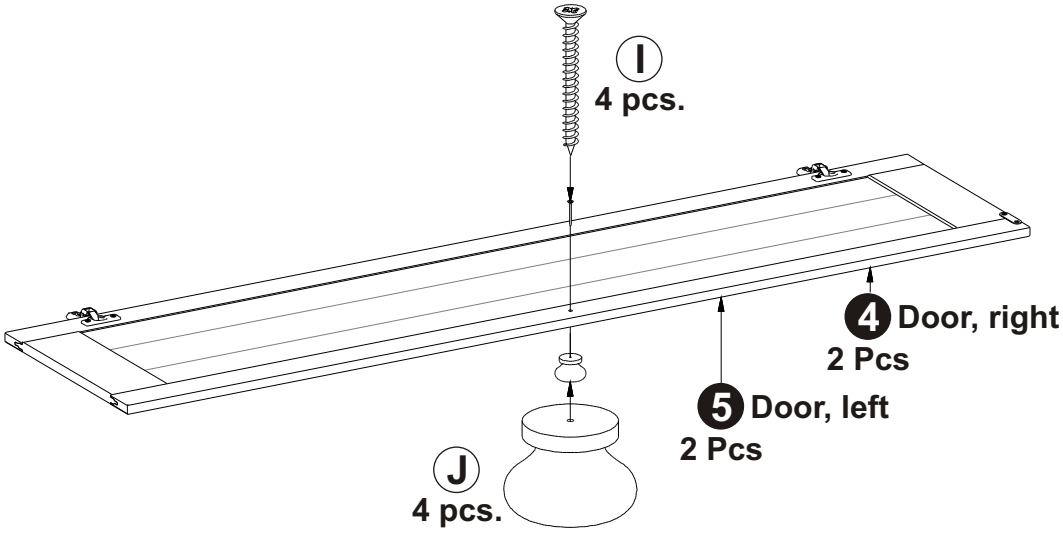

31. Mounting the doors to the carcass.

When placing the doors, the magnet catches MUST point upwards.

Step 1
Place the “adjustment hole” of the cup hinge at the level of the “fixing screw”.
Push the cup hinge towards the cross plate - placing the “fixing screw” in the wider part of the “adjustment hole”.

It is very IMPORTANT to catch ALL of the “fixing screws”.

Step 2
Push the door / cup hinge inwards - placing the “fixing screw” in the narrow end of the “ adjustment hole”.

Step 3
Tighten the “fixing screws” of ALL the cross plates.

Fig. 31.1




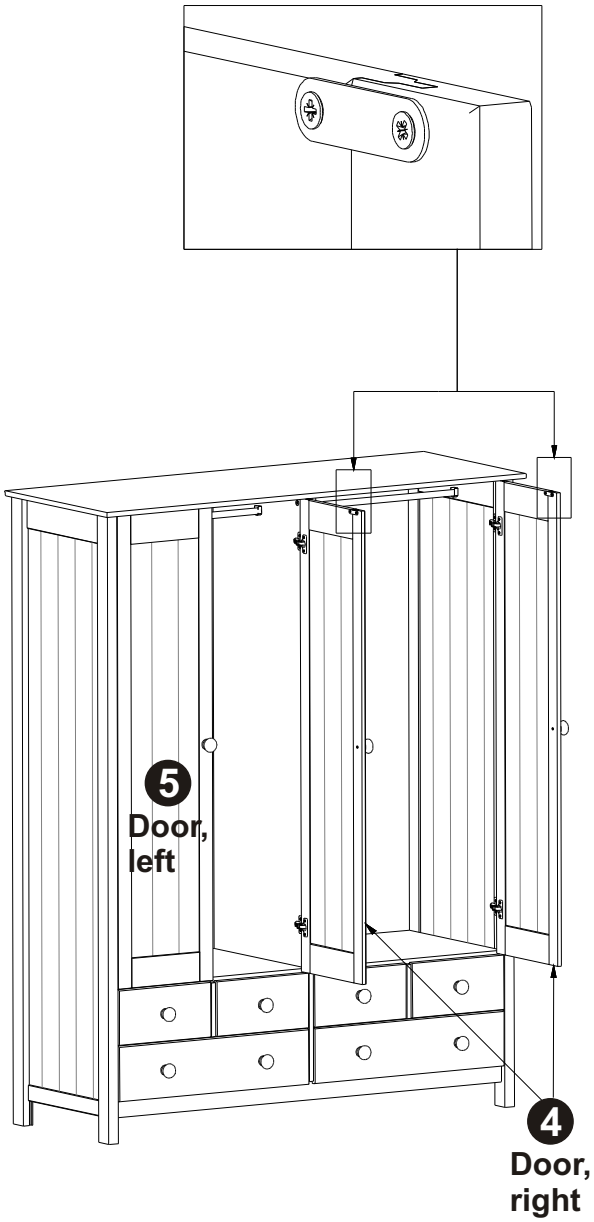


Fig. 31.2

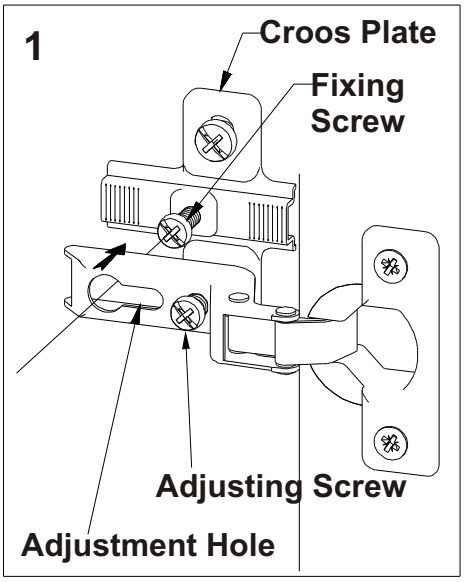


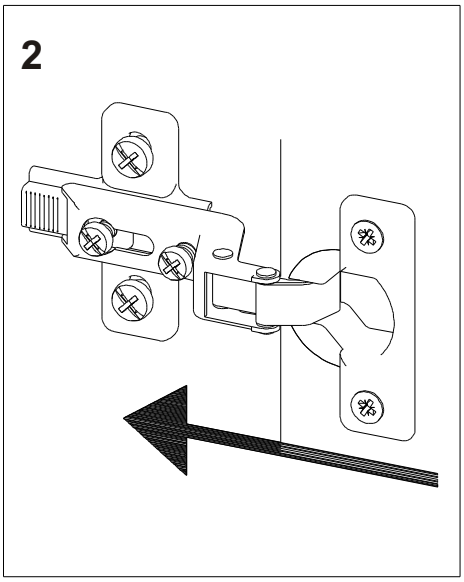


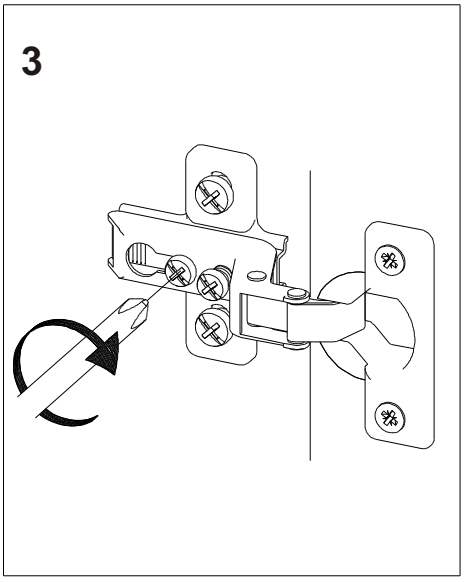

32. Adjusting the doors.

MAKE SURE THE WARDROBE IS PLACED ON A PLANE SURFACE BEFORE YOU BEGIN TO ADJUST THE HINGES.

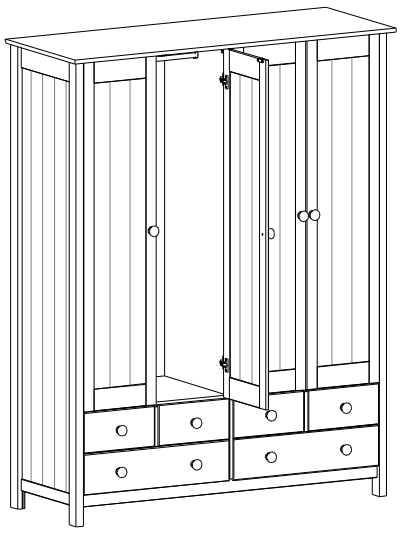

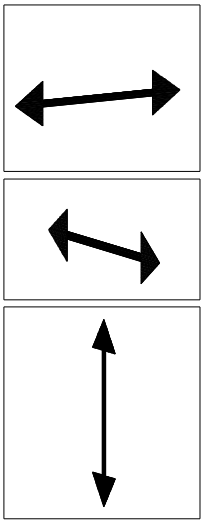


Step 1 - right or left:


Loosen the fixing screw.


To adjust the door towards the left hand side - turn the adjusting screw to the right.


To adjust the door towards the right hand side - turn the adjusting screw to the left.

Continue adjustment - see step 2 - or tighten the fixing screw of the cross plates

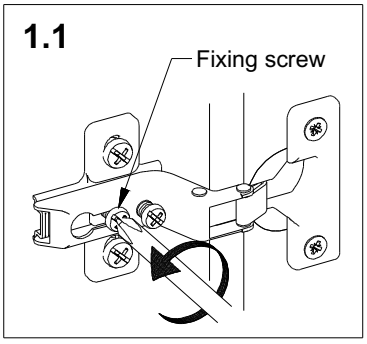

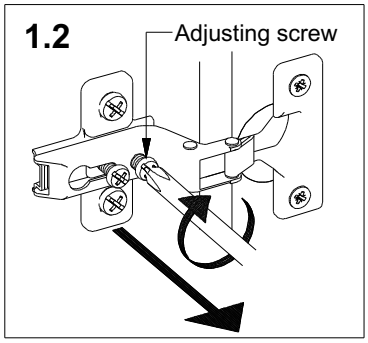

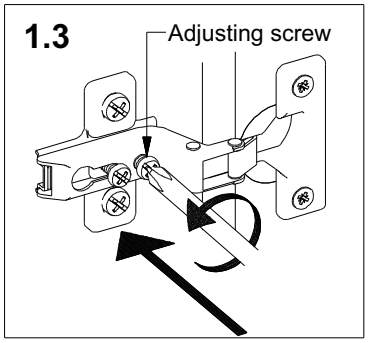

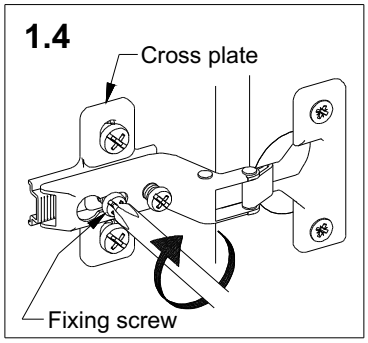



Step 2 - forwards or backwards:


Loosen the fixing screw.

Push the cup hinges / the door back OR forth to adjust. The door should level with the front edge of the sides.

Tighten the fixing screws of ALL the cross plates.

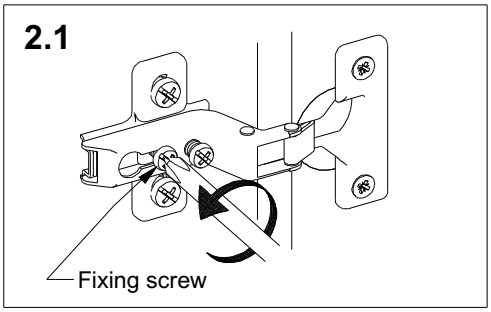

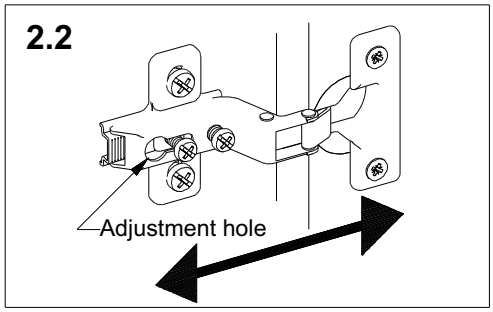

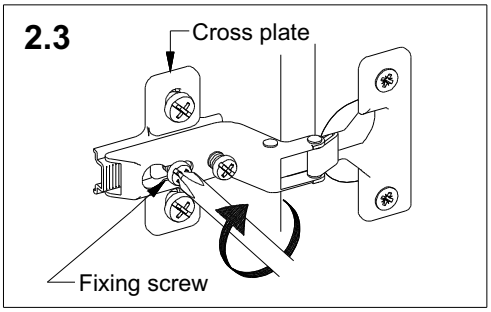



Step 3 - up or down:


Loosen the two screw "E" of each cross plate, BUT ONLY as much as it will allow the cross plate to move up and down.

Adjust the cross plate / door.

Tighten the screws "E" of ALL the cross plates.

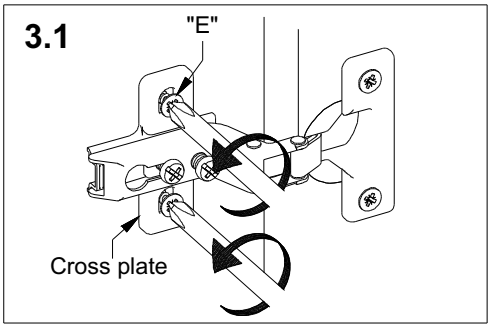

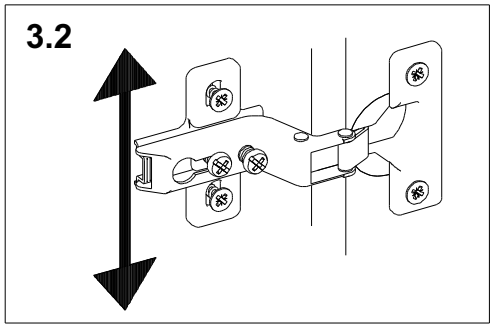

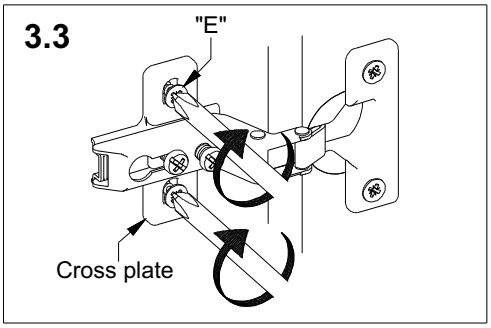

Step 33

Fixing to wall

It is recommended that the wardrobe is fixed to a wall.

Fix wall strap Q to top of wardrobe using screw G.

Will help, move wardrobe into position.

Warning:
The wardrobe is heavy.
Lift with care.


Mark fixing hole on wall and remove wardrobe.

Drill 7mm hole and insert wall plug R.

Warning:
Before drilling, check wall for hidden pipes and cables.


Resposition wardrobe and fix wall strap using screw F .

Assembly is complete.

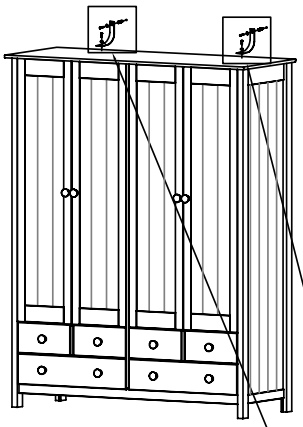

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

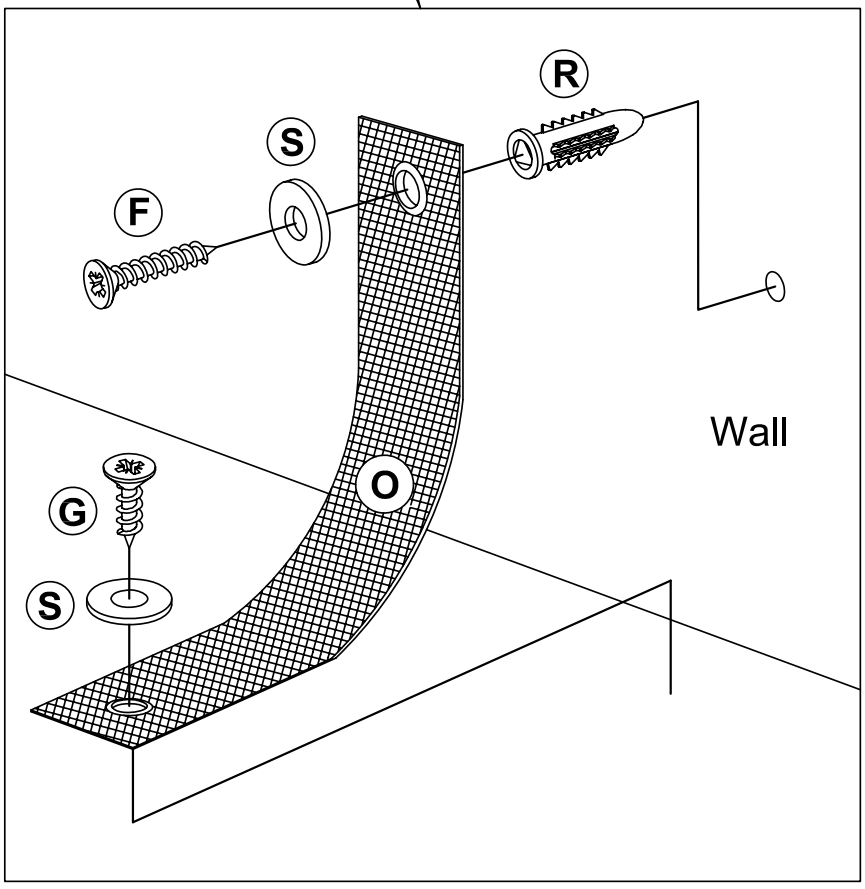

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 “General Purpose” wall plug

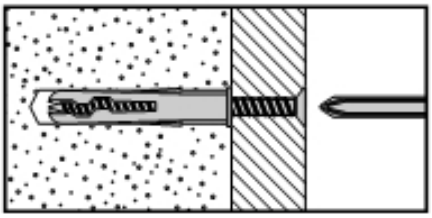


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 “Plasterboard” wall plug

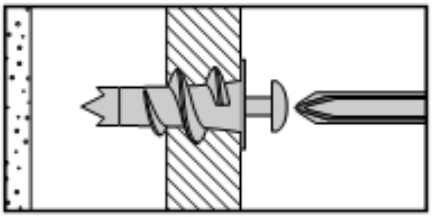


For use when attaching light loads on to plasterboard partitions.

No.3 “Cavity Fixing” wall plug

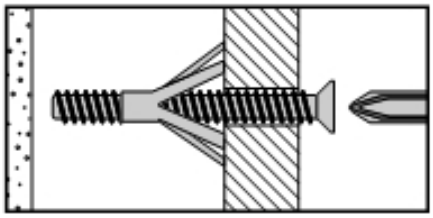


For use with plasterboard partitions or hollow wooden doors.

No.4 “Cavity Fixing-Heavy Duty” wall plug

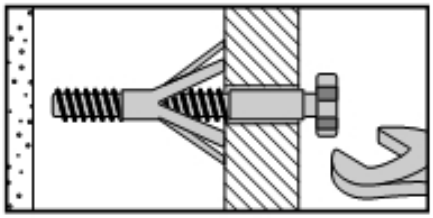


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 “Hammer Fixing” wall plug

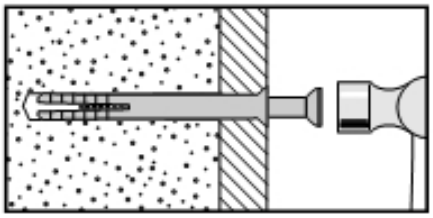

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 “Shield Anchor” wall plug Heavy loads

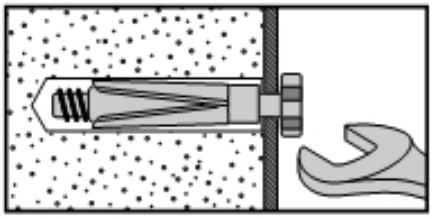

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Dear Customer.

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is place in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.


Please keep these instructions in a safe place for future use.

Scandinavia - 4 Door Robe w. 2+4 drws.

Assembly Instructions - Please keep for future reference

642/3818

643/8494

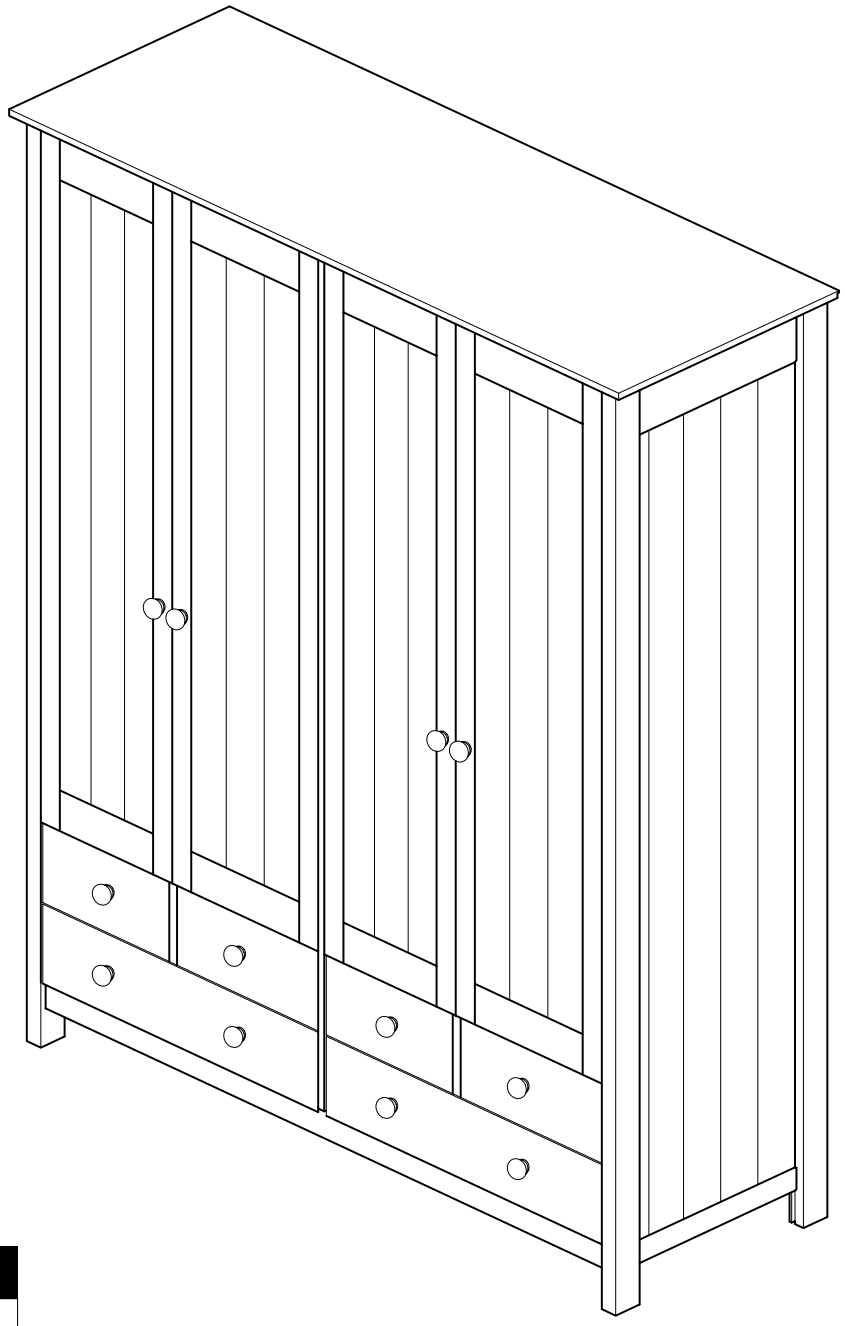

Dimensions

Width - 140.4cm
Depth - 53cm
Height - 179.9cm

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 01/04/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

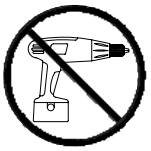

- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

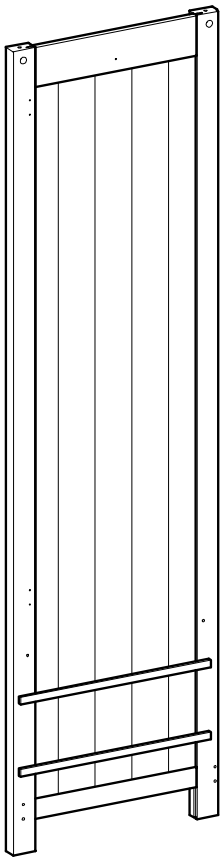


1 Left side
(178.5 x 49.8cm)

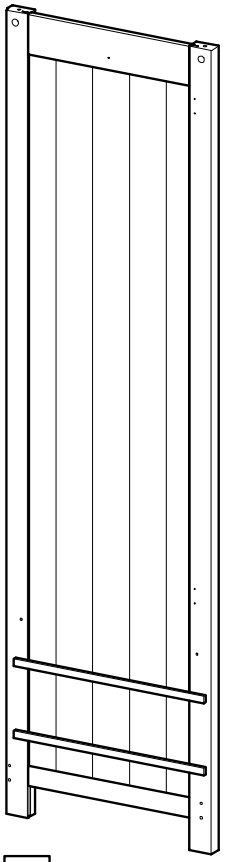


2 Right side
(178.5 x 49.8cm)

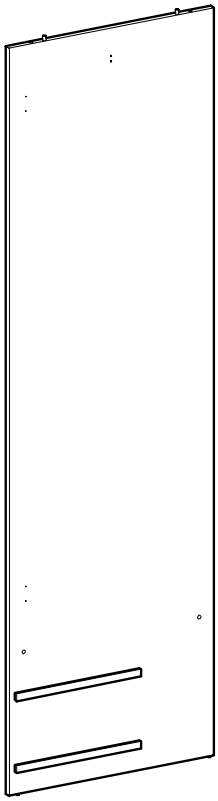


3 Large divider
(166 x 49.4cm)

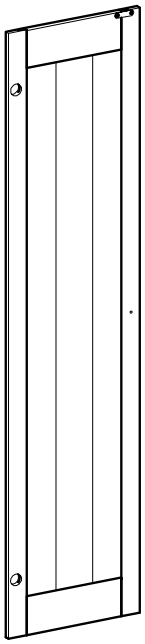


4 Right door x 2
(134.4 x 31.6cm)

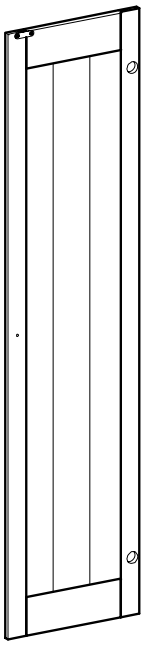


5 Left door x 2
(134.4 x 31.6cm)

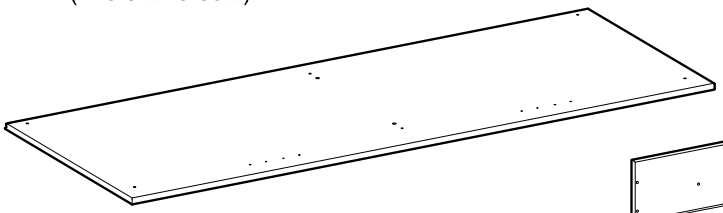


6 Top (140.4 x 53cm)

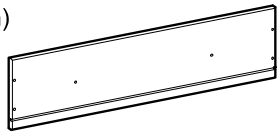


10 Large drawer front x 2
(63.6 x 15.7cm)




11 Small drawer front x 4
(30.9 x 15.7cm)




12 Back x 4
(171 x 32.7cm)

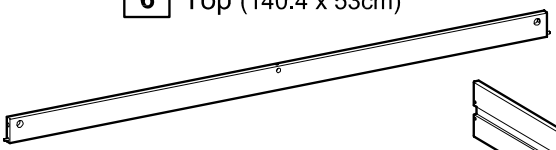


7 Plinth x 2 (129.4 x 5.5cm)



14 Left drawer side x 6
(34.2 x 10.7cm)




13 Right drawer side x 6
(34.2 x 10.7cm)

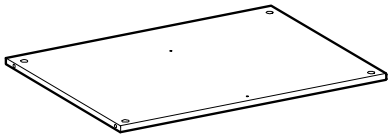

8 Bottom x 2 (64 x 48cm)




15 Small drawer back x 4
(28.1 x 9cm)




16 Large drawer back x 2
(60.8 x 9cm)



9 Small divider x 2
(38 x 15.3cm)



17 Small drawer bottom x 4
(33.9 x 29.1cm)
















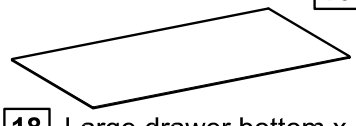


18 Large drawer bottom x 2
(61.8 x 33.9cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

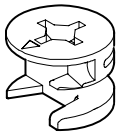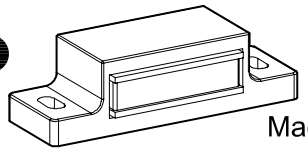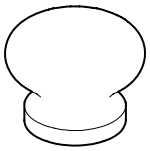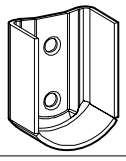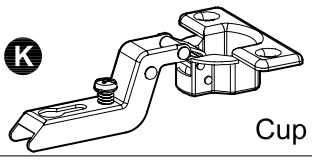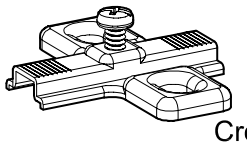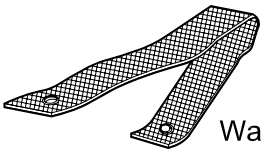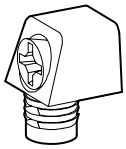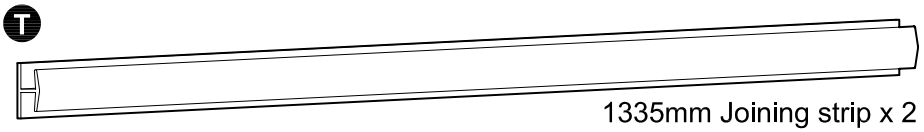
A  Large cam x 22	**B**  Small cam x 24	**C**  Locking pin x 42
D  14mm Screw x 42	**E**  25mm Screw x 8	**F**  35mm Screw x 36
G  16mm Nail x 60	**H**  Magnet x 4	**I**  Knob x 12
J  Hanging rail cup x 4	**K**  Cup hinge x 8	**L**  Cross plate x 8
M  636mm Hanging rail x 2	**N**  Locking pin x 2	**O**  20mm Screw x 2
P  Wall strap x 2	**Q**  Wall plug x 2	**R**  Washer x 4
S  Miniblock x 2	**T**  1335mm Joining strip x 2	


Tools required



Philips screwdriver (medium & large)



Flatblade screwdriver (medium)

Suitable drill bit (for use with wall plug)

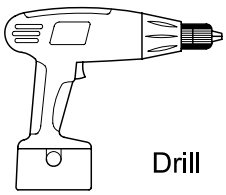

Drill


Small hammer



Ruler/tape measure

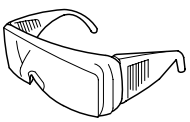
Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Components - Key Diagram

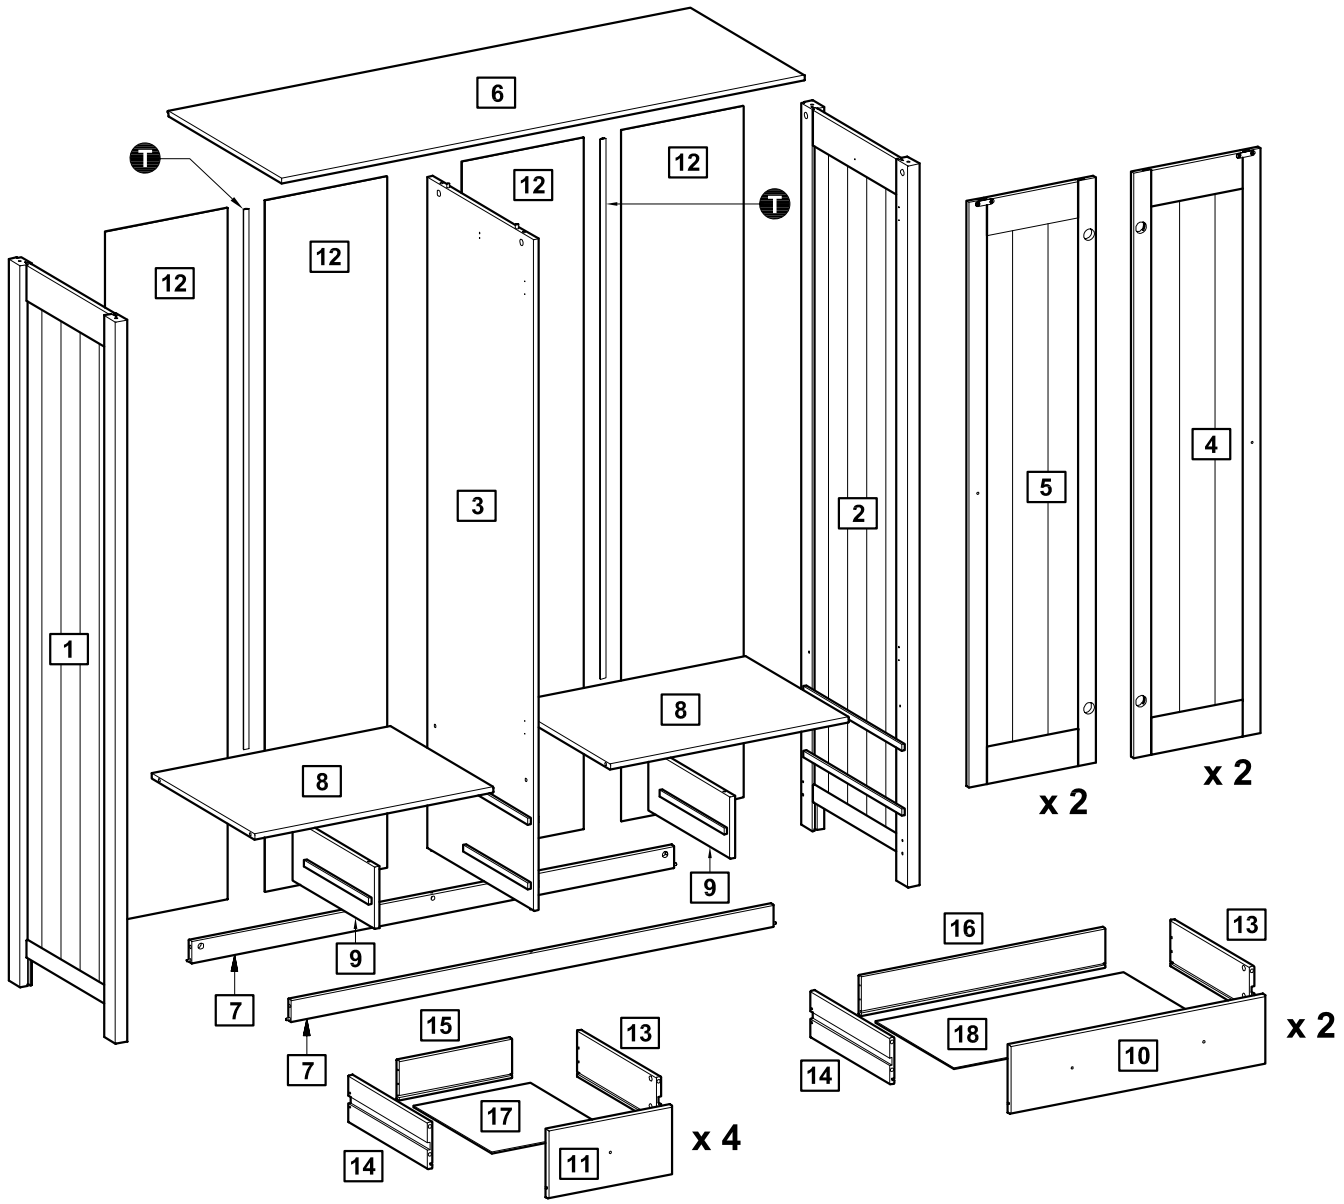


Function of Cam and Locking Pin

Step 1:
Fix the locking pin to the wooden panel.

Step 2:
Push the wooden panel with the attached locking pin onto the other wooden panel.

Step 3:
Place the cam into the hole, arrow pointing towards the locking pin.

Step 4:
Tighten: Turn the cam to the right.

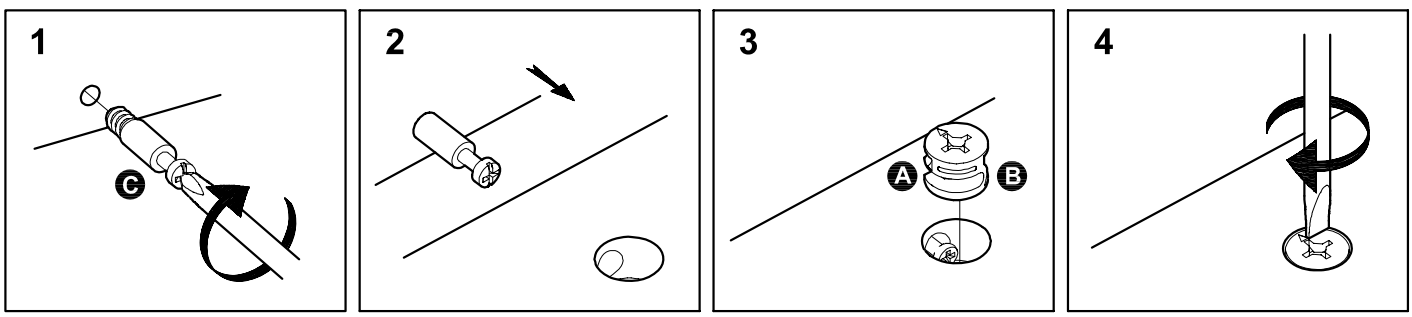

Assembly Instructions


Step 1

Mounting the cross plates to the sides.

Fix the cross plates L to the sides 1 & 2 using the screws E into the holes indicated.

It is important that the cross plates are placed exactly as shown.


The short end of the cross plates must point towards the front edge of the sides.

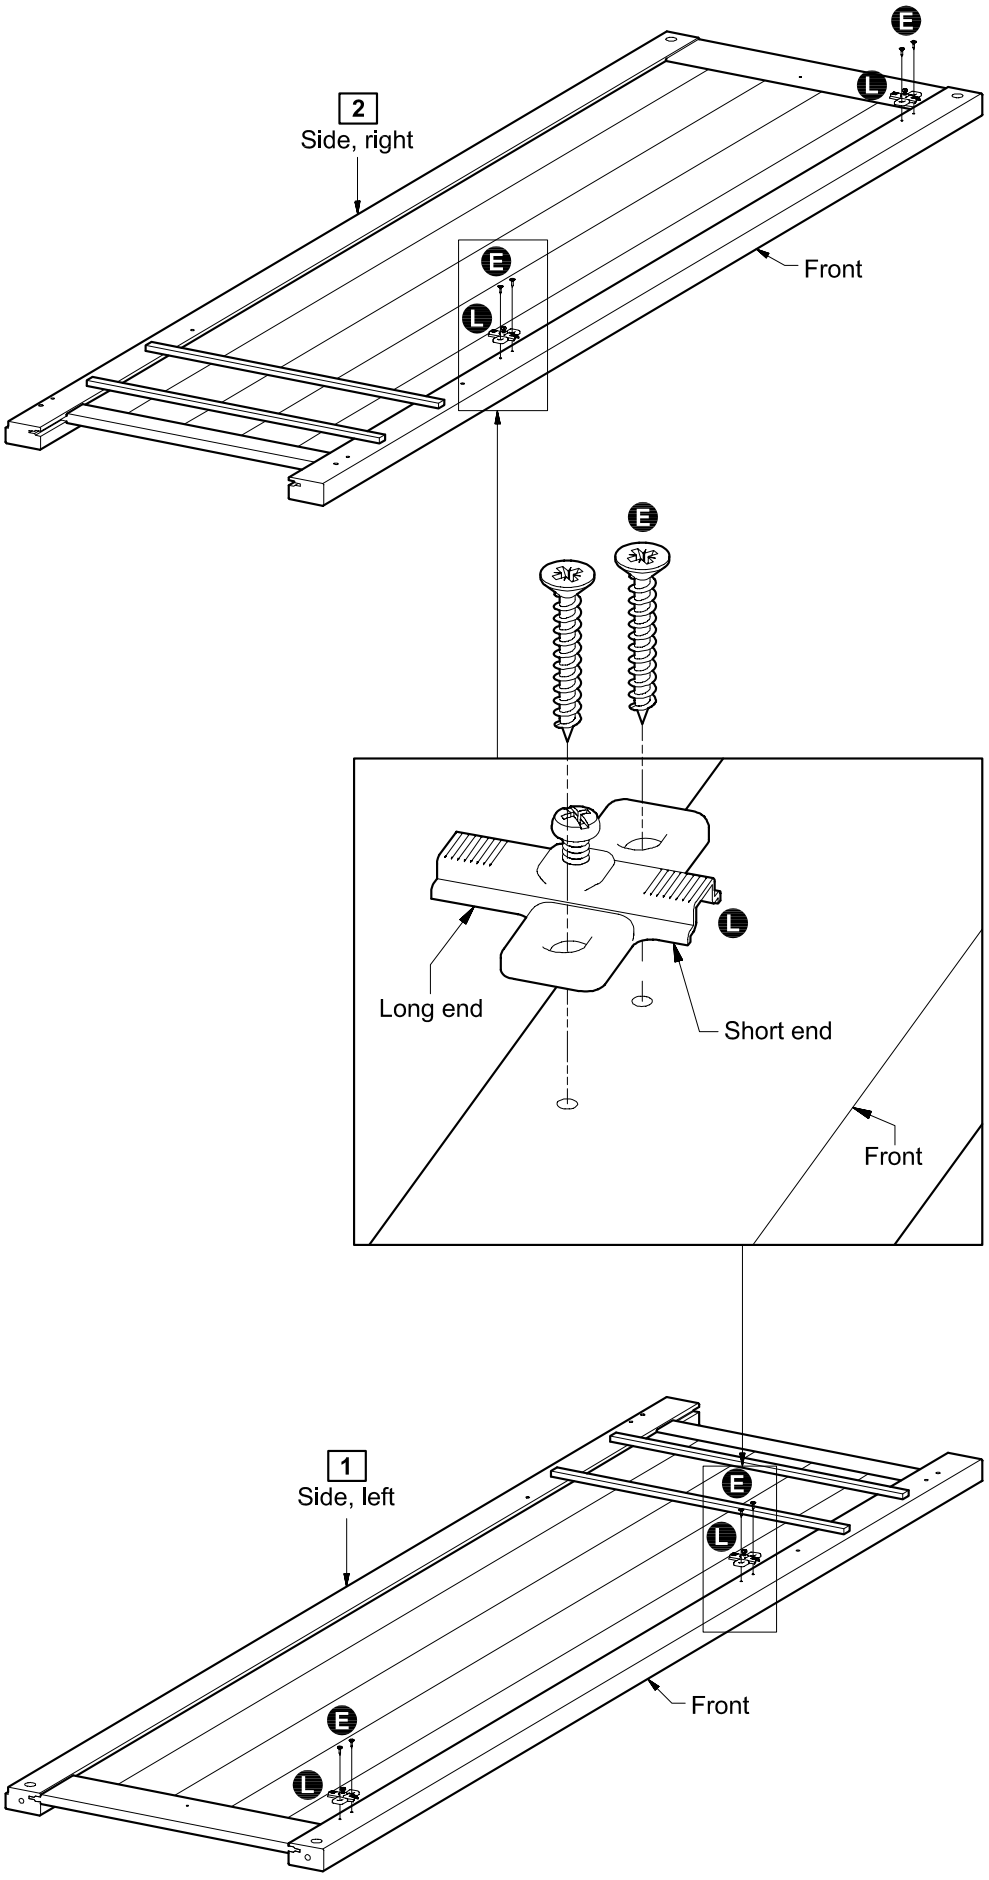

Step 2

Mounting the hanging rail cups to the sides.

Fix the hanging rail cups Ⓙ onto the sides [1] and [2] using screws Ⓓ into the pre-drilled holes.

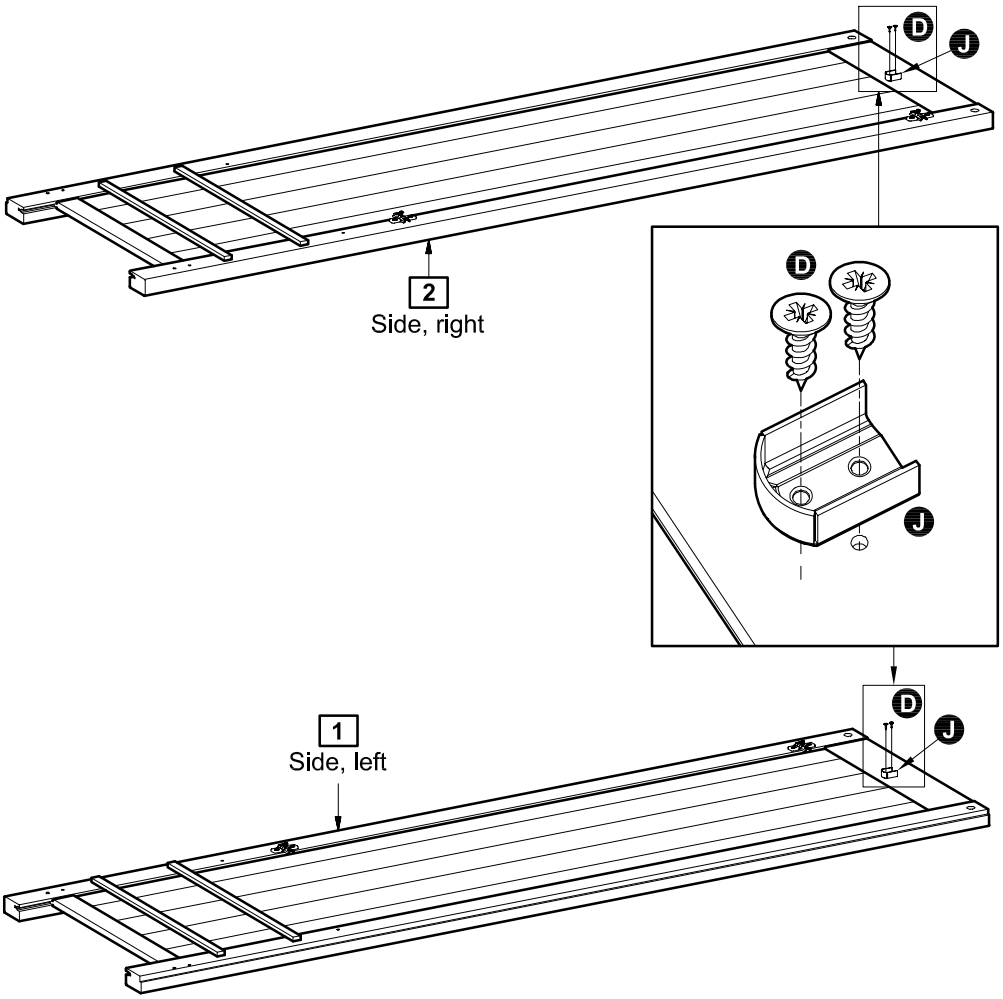


Step 3

Mounting the locking pins to the sides.

Screw the locking pins Ⓒ into the holes indicated on the sides [1] and [2].

Note: Insert locking pins Ⓒ as far as shown. **Do not over tighten.**

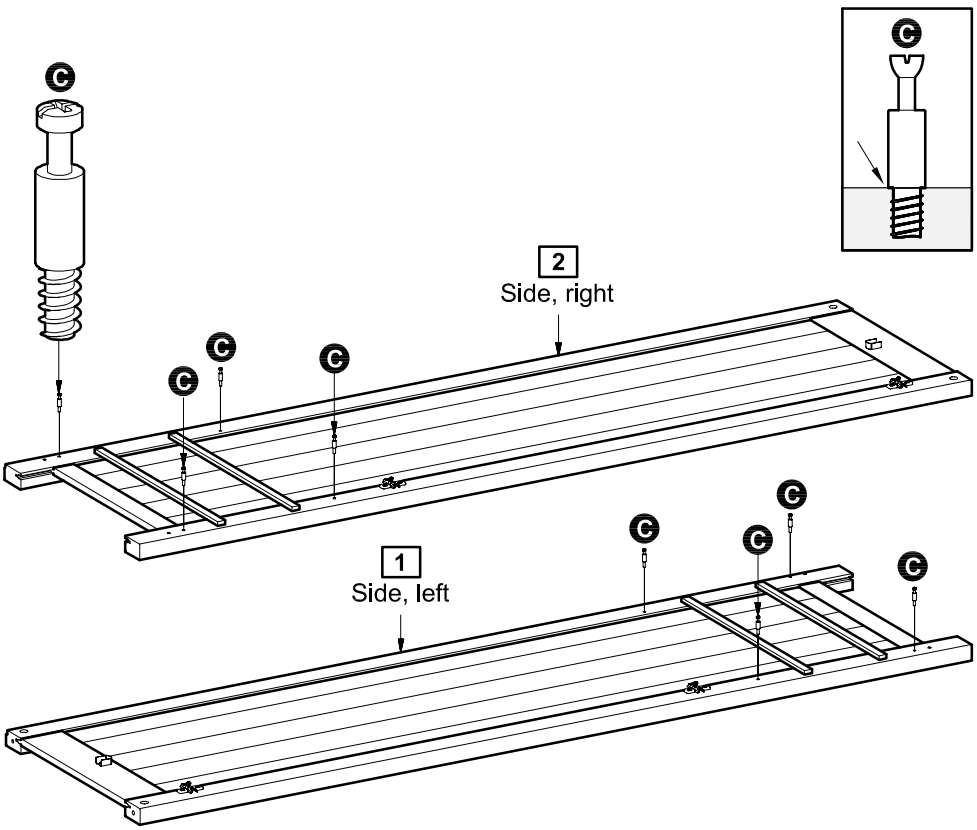


Step 4

Mounting the cross plates to the left hand side of the large divider.

Fix the cross plates Ⓛ to the left hand side of the large divider 3 using screws Ⓓ into the holes indicated.

It is important that the cross plates are placed exactly as shown.

The short end of the cross plates must point towards the front edge of the sides.

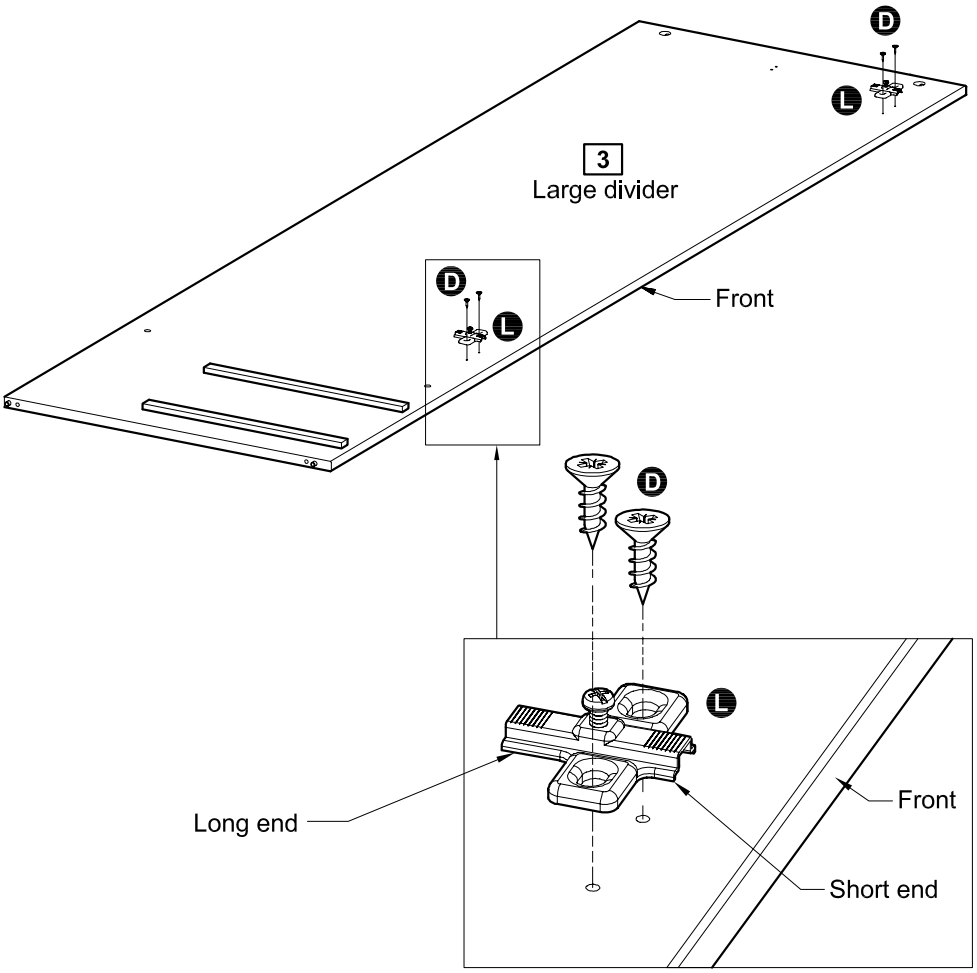


Step 5

Mounting the cross plates to the right hand side of the large divider.

Fix the cross plates Ⓛ to the right hand side of the large divider 3 using screws Ⓓ into the holes indicated.

It is important that the cross plates are placed exactly as shown.


The short end of the cross plates must point towards the front edge of the sides.

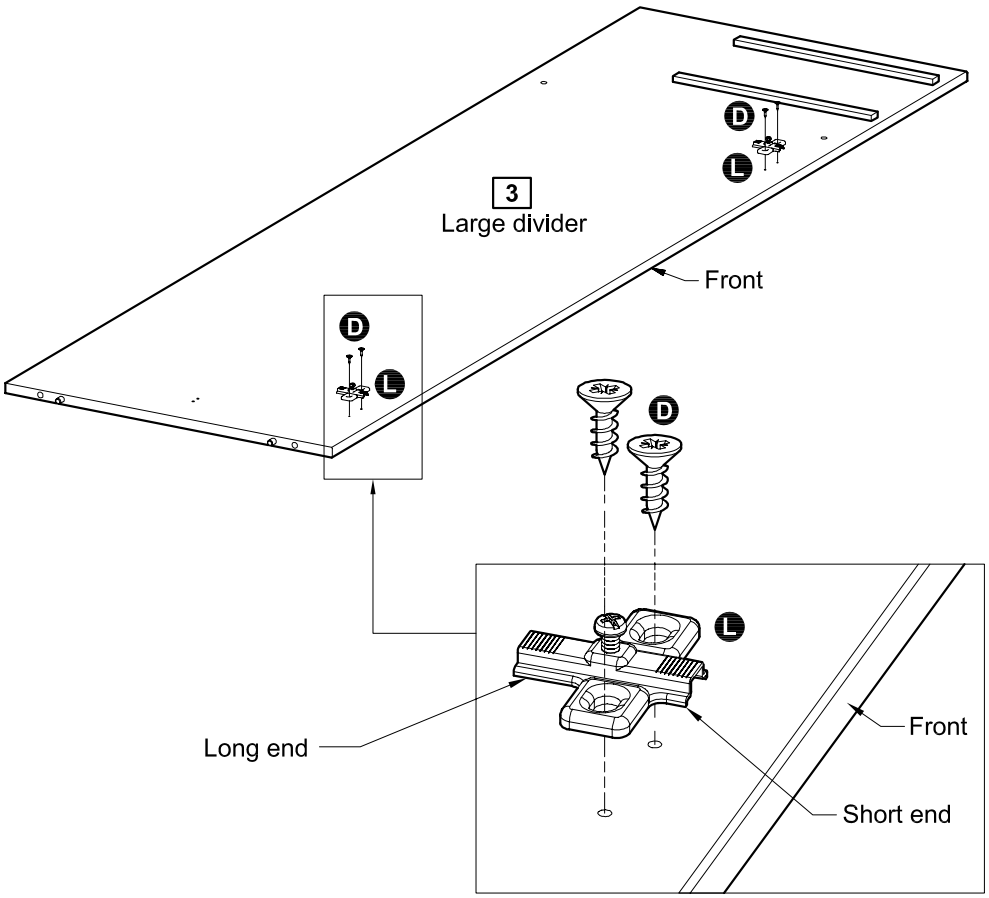

Step 6

Mounting the hanging rail cup to the left hand side of the large divider.


Fix the hanging rail cup J onto the left hand side of the large divider 3 using screws D into the pre-drilled holes.

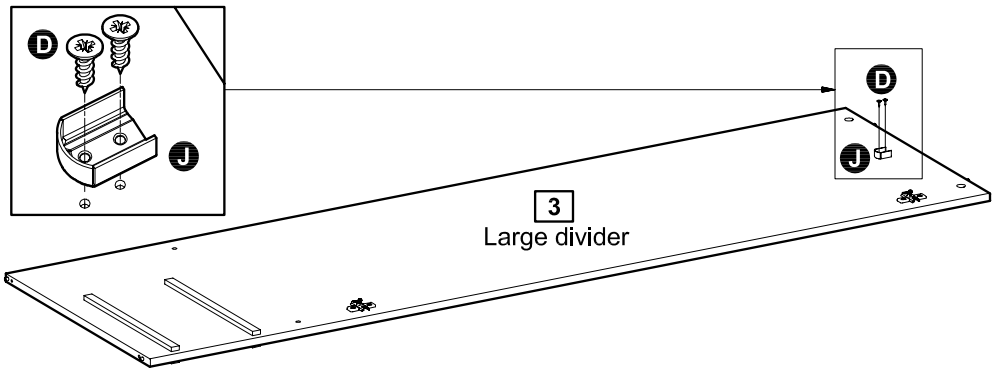

Step 7

Mounting the hanging rail cup to the right hand side of the large divider.

Fix the hanging rail cup J onto the right hand side of the large divider 3 using screws D into the pre-drilled holes.

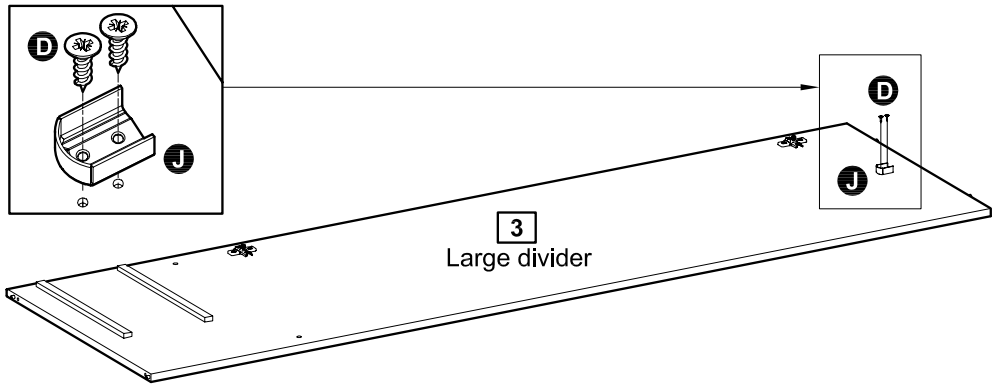


Step 8

Mounting the locking pins to the top.

Screw the locking pins C into the holes indicated on the top 6.

Note: Insert locking pins C as far as shown. **Do not over tighten.**

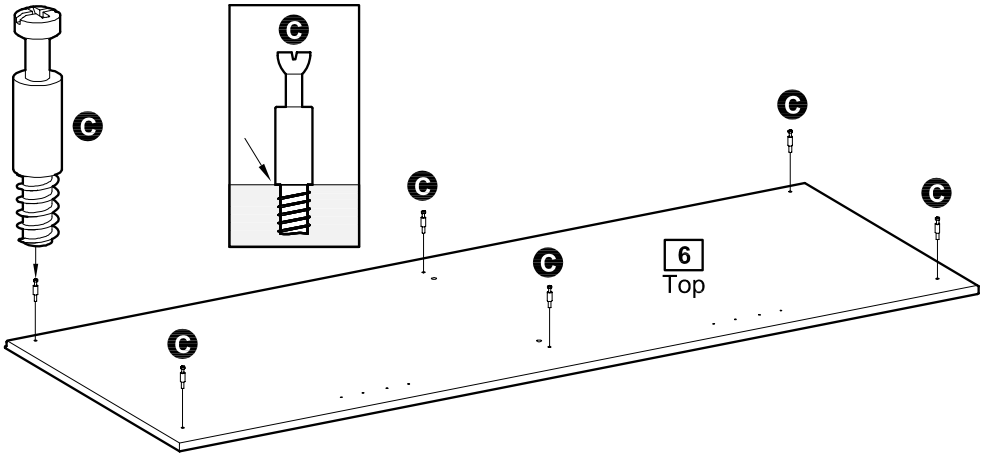


Step 9

Mounting the magnets to the top.

Fix the magnets H to the top 6 using screws D into the pre-drilled holes.

It is important that the magnetic part points towards the front edge of the top.

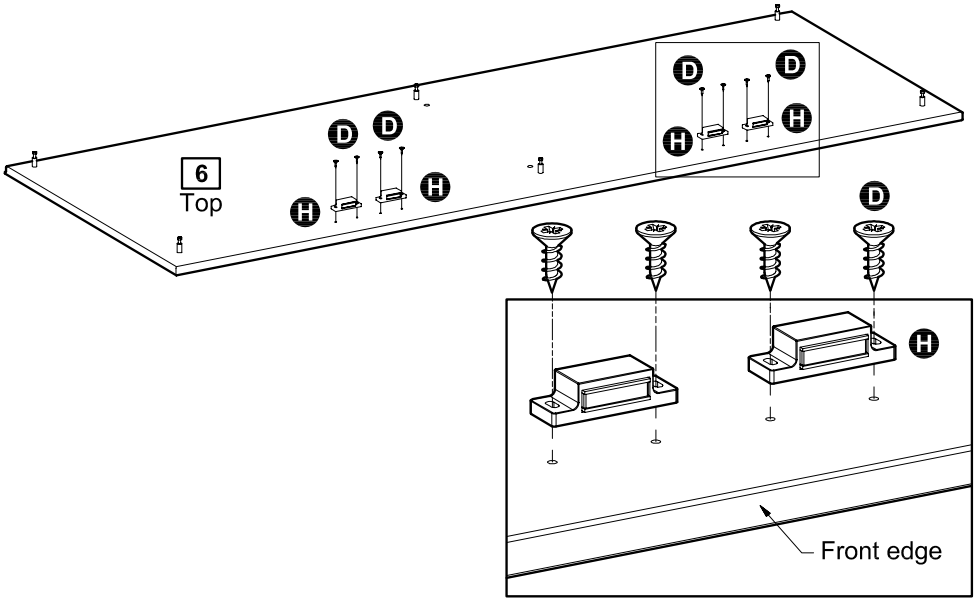


Step 10

Mounting the locking pins to the bottoms.

Screw the locking pins C into the holes indicated on the bottoms 8.

Note: Insert locking pins C as far as shown. **Do not over tighten.**

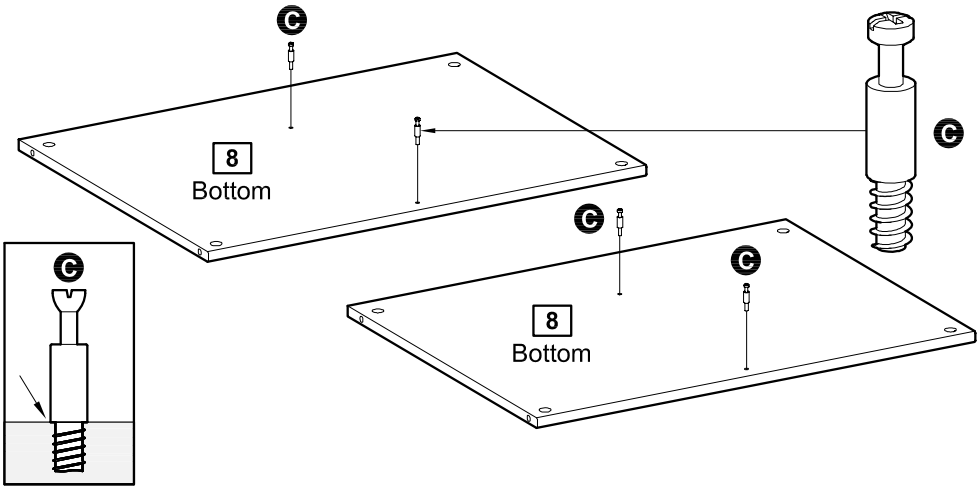

Step 11


Assembling the small dividers to the bottoms.

Press the small dividers 9 onto the bottoms 8.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the bottom / locking pins.


To tighten cams: Turn to the right using a screwdriver.

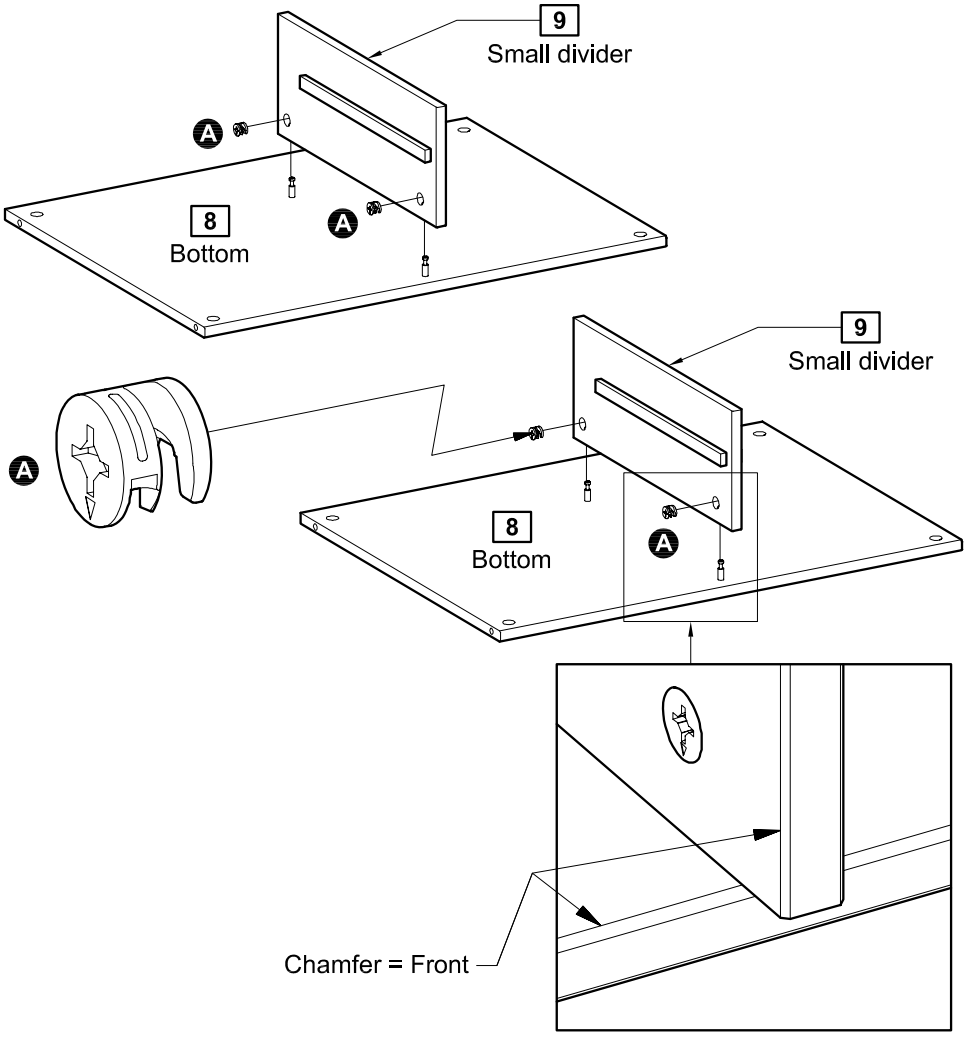

Step 12

Adding the miniblocks to the plinths.

Insert the miniblocks S into the holes indicated on the plinths 7.

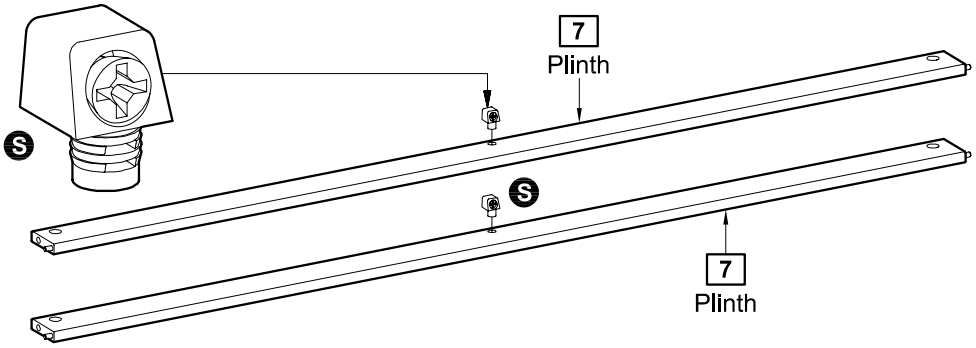

Step 13

Assembling the bottom to the left hand side of the large divider .

Push the locking pins (N) through the holes indicated on the large divider [3] , note the placement of the drawer runners.


It is important that the locking pins is turned exactly as shown.

Press the bottom [8] onto the left hand side of the large divider [3].

See page 4 "Function of cam and locking pin".

Place the large cams (A) into the holes indicated, arrows pointing towards the divider / locking pins.

To tighten cams: Turn to the right using a screwdriver.

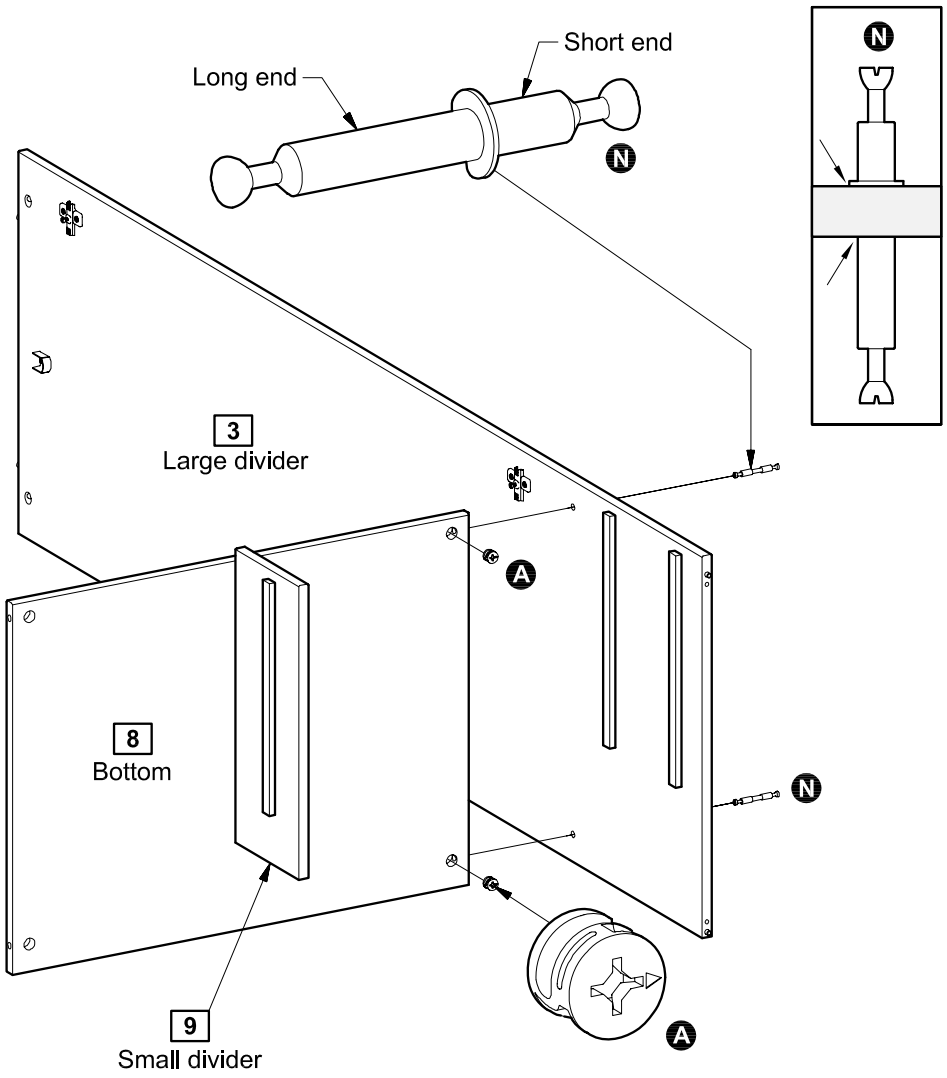

Step 14


Assembling the bottom to the right hand side of the large divider .

Press the bottom [8] onto the right hand side of the large divider [3].

See page 4 "Function of cam and locking pin".

Place the large cams (A) into the holes indicated, arrows pointing towards the divider / locking pins.

To tighten cams: Turn to the right using a screwdriver.

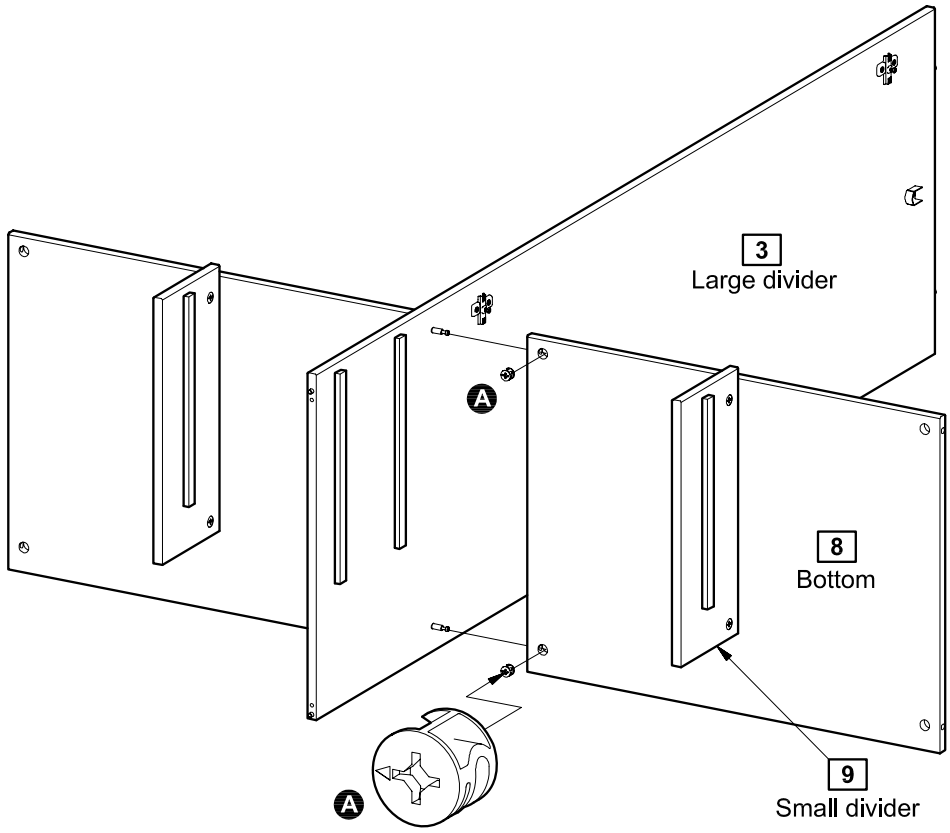

Step 15


Assembling the right hand side to the bottom.

Fit the side 2 onto the bottom 8.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

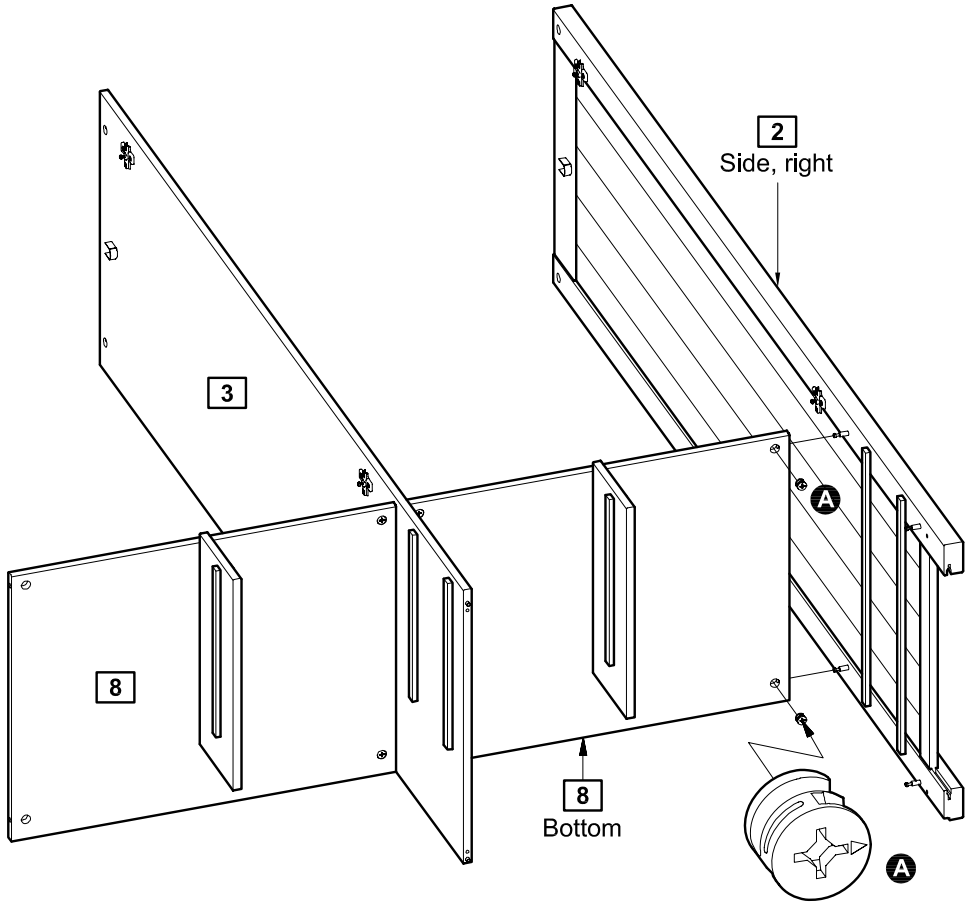

Step 16

Adding the plinths to the side and the large divider.

Fit the plinths 7 onto the side 2.


The dowels at the end of the large divider 3 should fit into the holes on the plinths.


See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

Fix the miniblocks S onto the large divider 3.

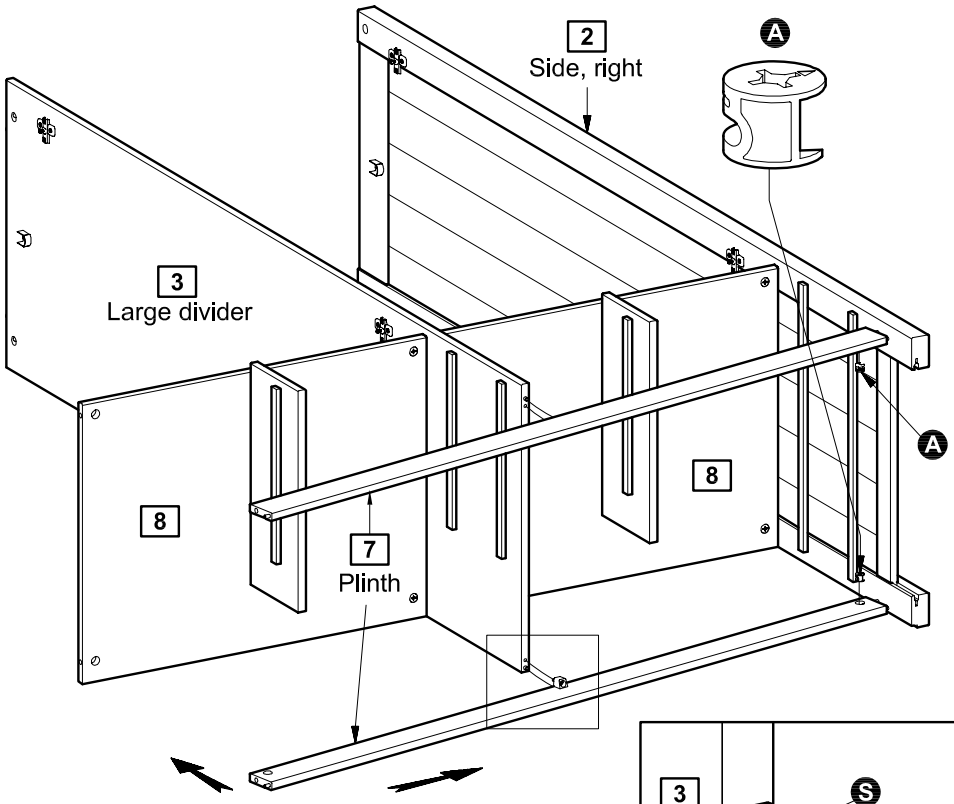

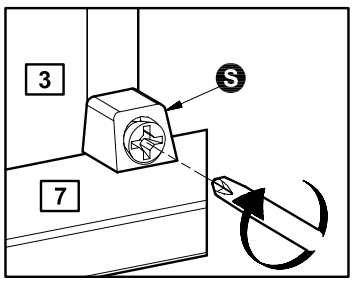

Step 17


Assembling the left hand side to the plinths and the bottom.

Fit the side 1 onto the plinths 7 and the bottom 8.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

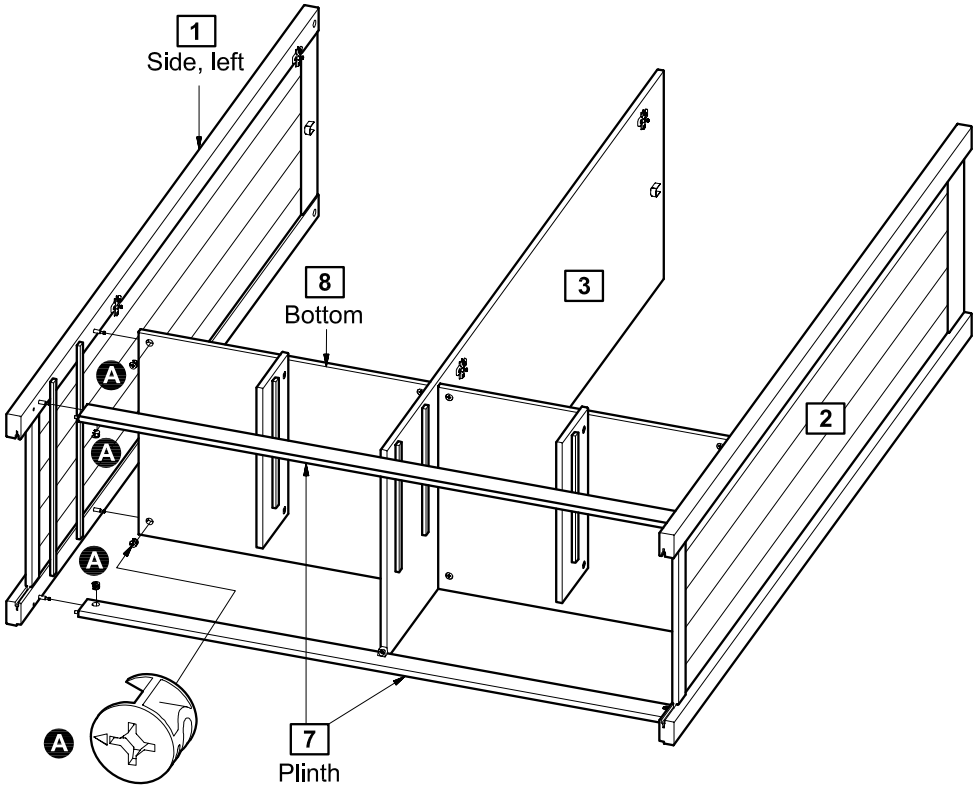

Step 18


Assembling the top to the sides and the large divider.

Attach the top 6 onto the sides 1 and 2 and the large divider 3.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the top / locking pins.

To tighten cams: Turn to the right using a screwdriver.

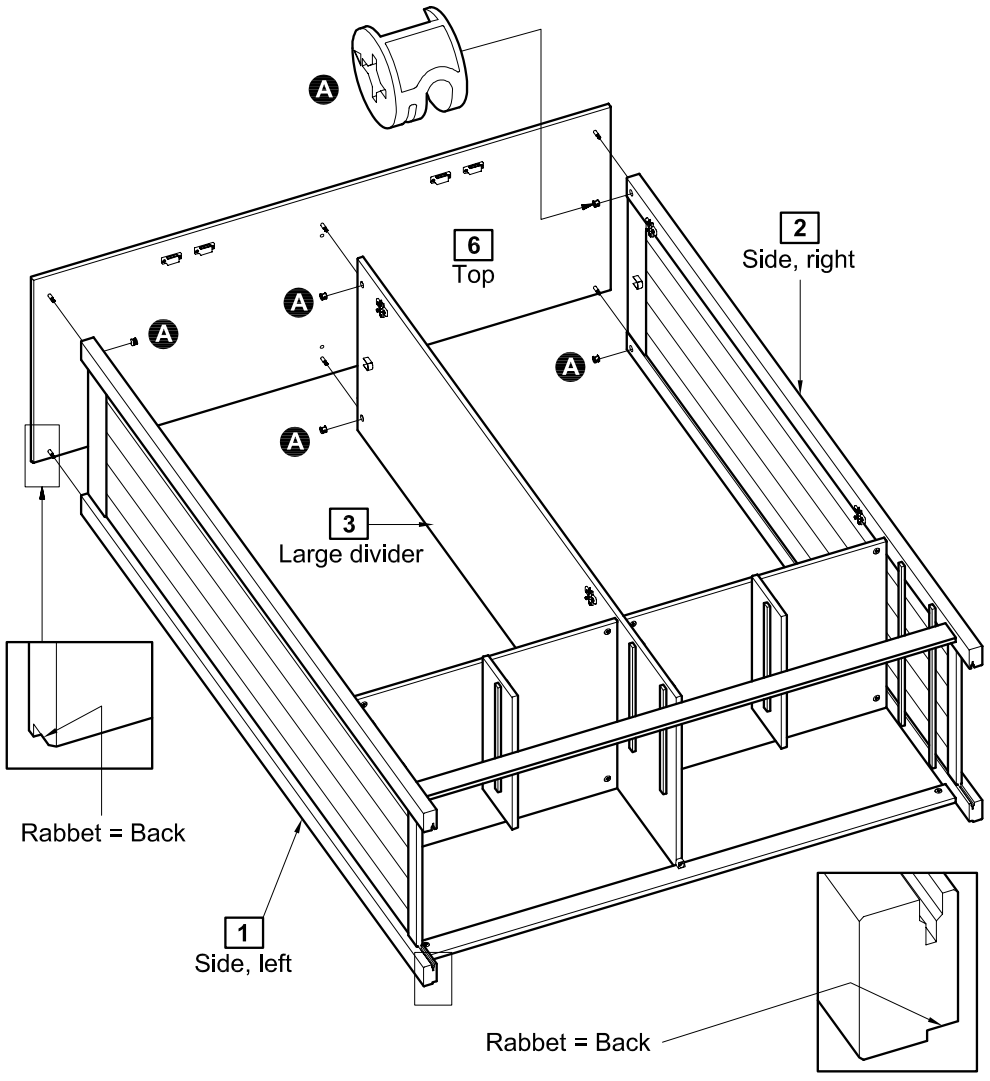

Step 19

Adding the backs to the carcass.

Place the backs 12 into the rabbet of the top 6 and the side 2.


Ensure that there is no gap between the side and the backs, nor between the top and the backs.

Fasten the backs with nails G along the top.

The angle between the top and the side must be 90 degrees.

To accomplish this, ensure that there is no gap between the side and the backs.

Fasten the backs with nails G along the side and the bottoms.

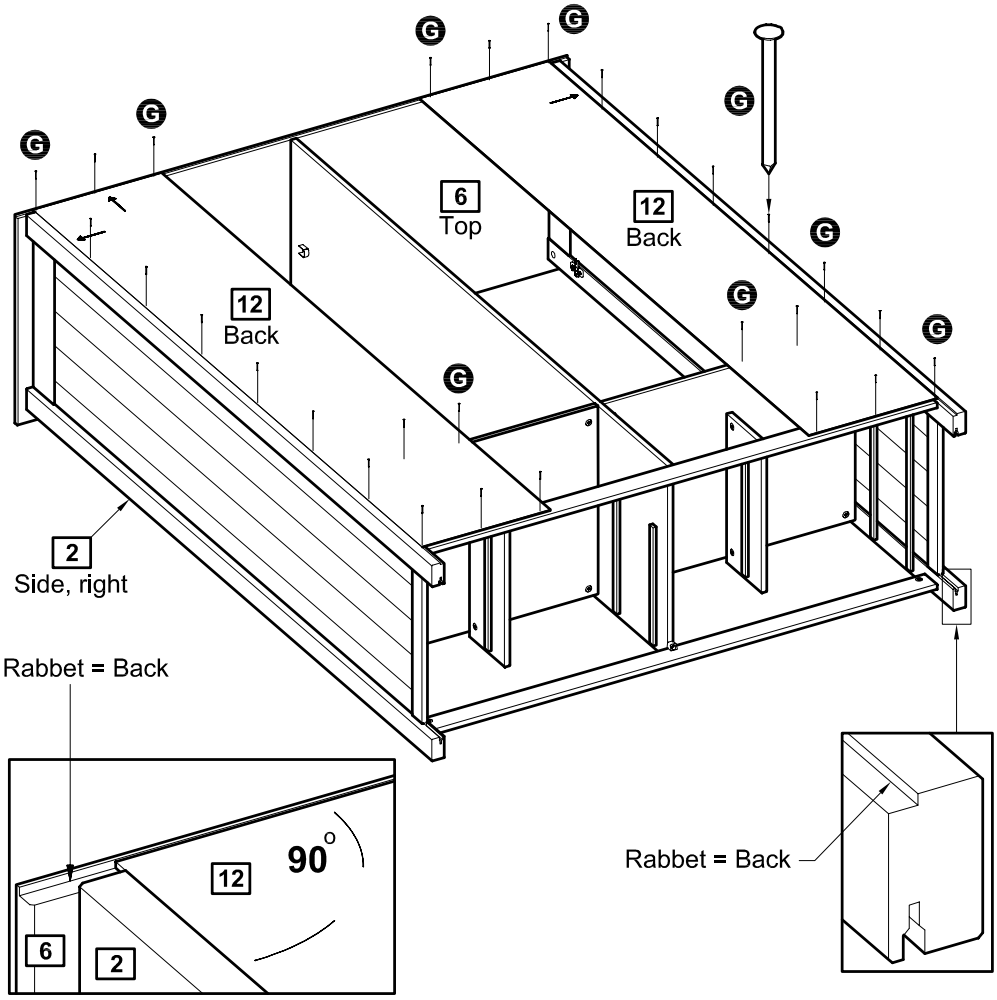

Step 20

Adding the backs and the joining strips to the carcass.


Place the joining strips T onto the backs.

Place the backs 12 into the rabbet of the top 6 and the side 1.

Fasten the backs with nails G along the top.

Ensure that there is no gap between the side and the backs, nor between the top and the backs.

Fasten the backs with nails G along the side and the bottoms.

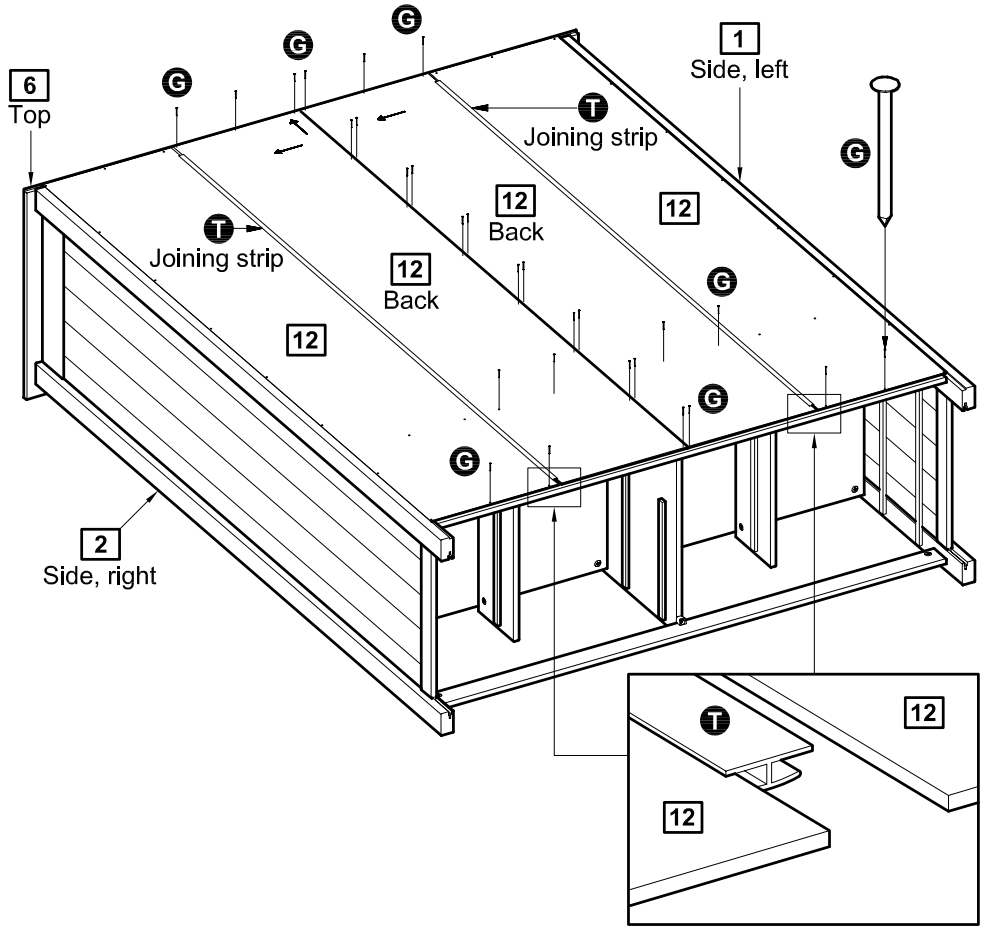

Step 21

Large drawer assembly.

a: Fix the drawer sides 13 and 14 to the large drawer back 16 using screws F .

b: Slide the drawer bottom 18 into the grooves of the drawer frame.

c: Screw the locking pins C into the holes indicated on the large drawer front 10 .


Note: Insert locking pins C as far as shown. **Do not over tighten.**

d: Press the large drawer front 10 onto the drawer sides 13 and 14 . Place the small cams B into the holes indicated, arrows pointing towards the drawer front / locking pins.
To tighten cams: Turn to the right using a screwdriver.
"Function of cam and locking pin" see page 4.


e: Fix the knobs I to the large drawer front 10 using screws F.

Repeat with remaining drawers.


a:

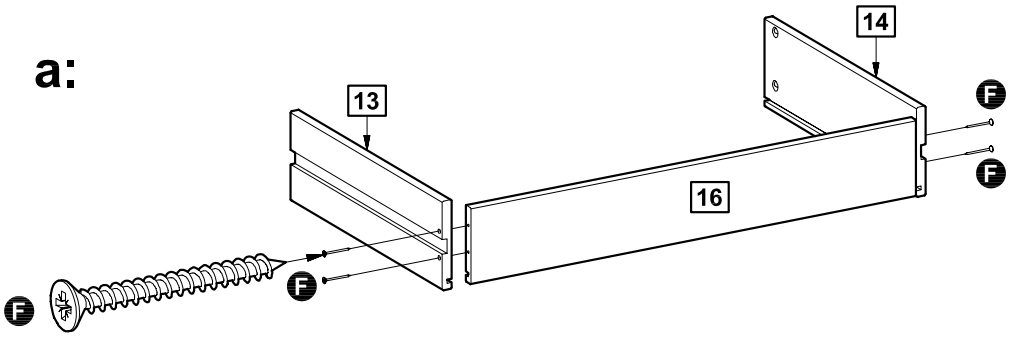


b:

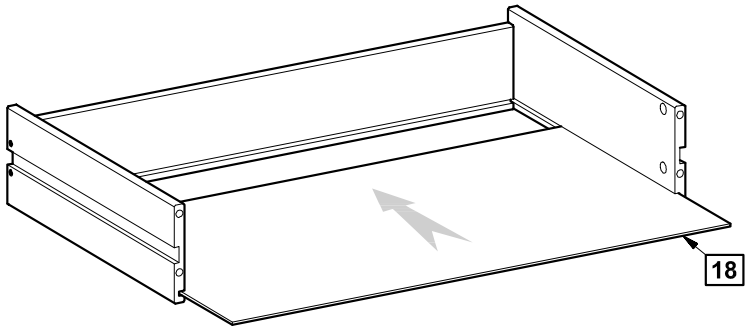


c:

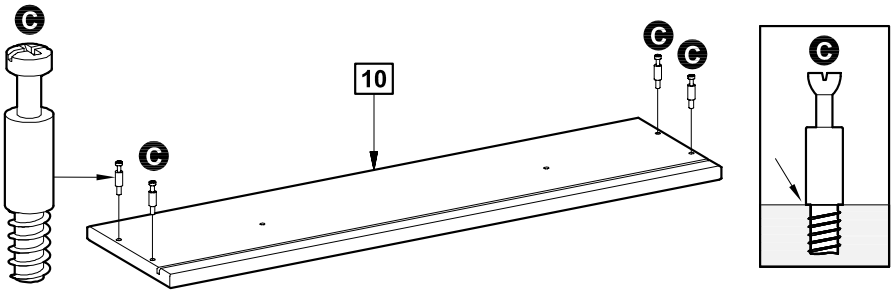

d:

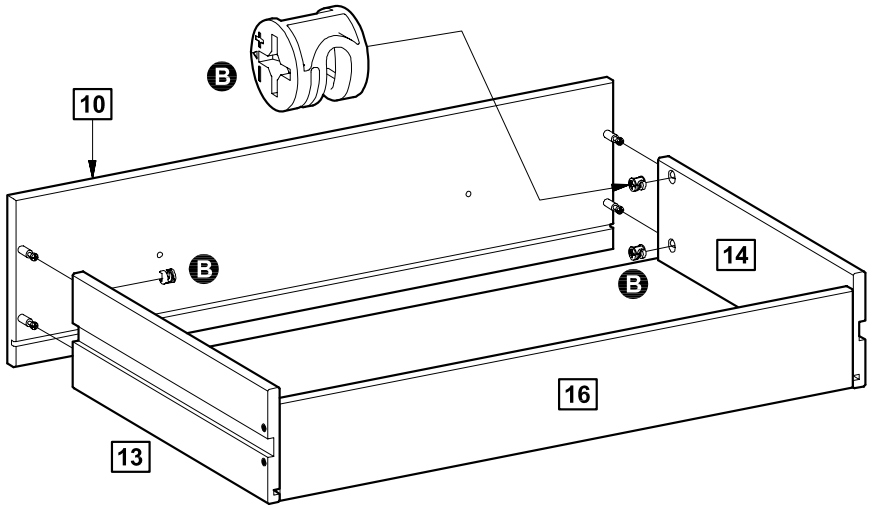


e:

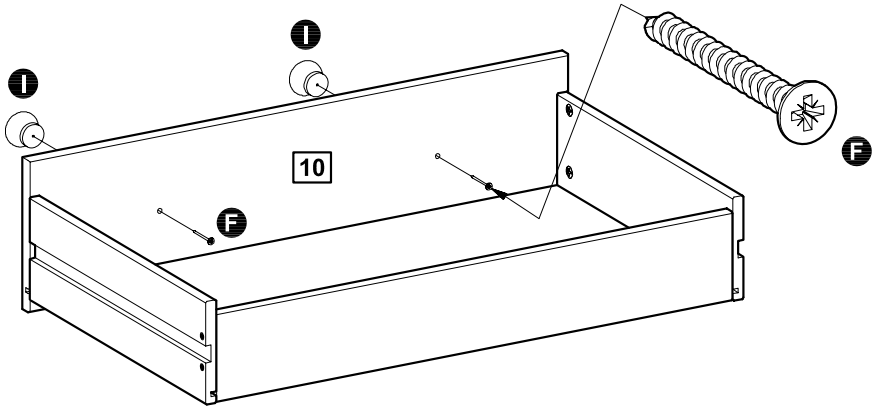


Step 22

Small drawer assembly.

a: Fix the drawer sides [13] and [14] to the small drawer back [15] using screws (F).

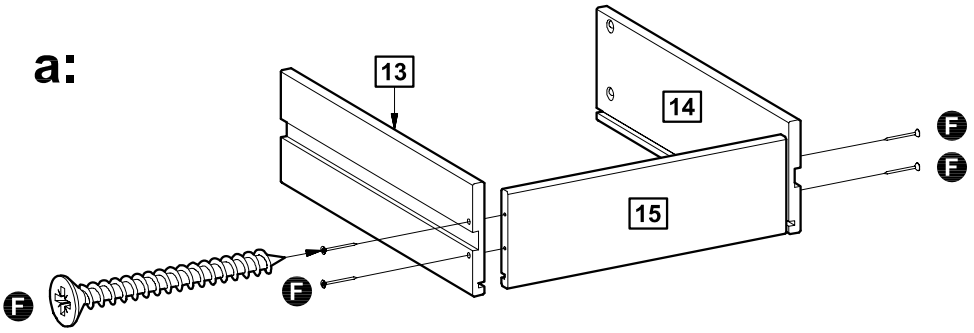


b: Slide the drawer bottom [17] into the grooves of the drawer frame.

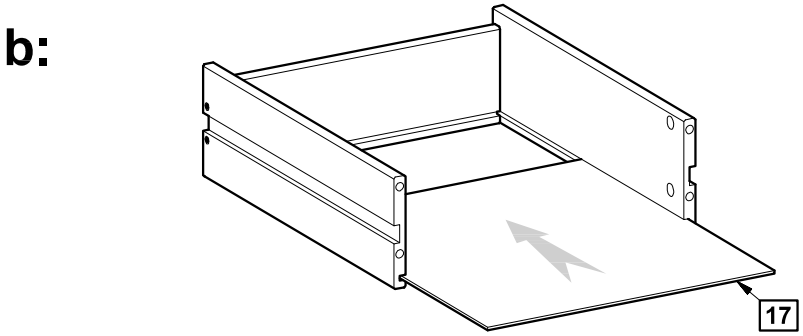


c: Screw the locking pins (C) into the holes indicated on the small drawer front [11].


Note: Insert locking pins (C) as far as shown. **Do not over tighten.**

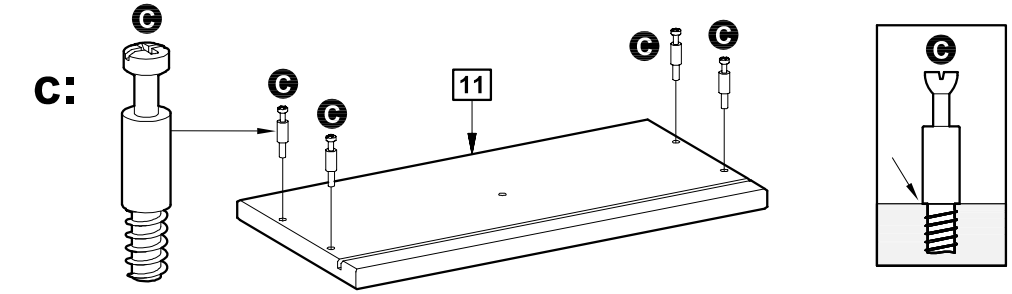

d: Press the small drawer front [11] onto the drawer sides [13] and [14]. Place the small cams (B) into the holes indicated, arrows pointing towards the drawer front / locking pins.
To tighten cams: Turn to the right using a screwdriver.
"Function of cam and locking pin" see page 4.

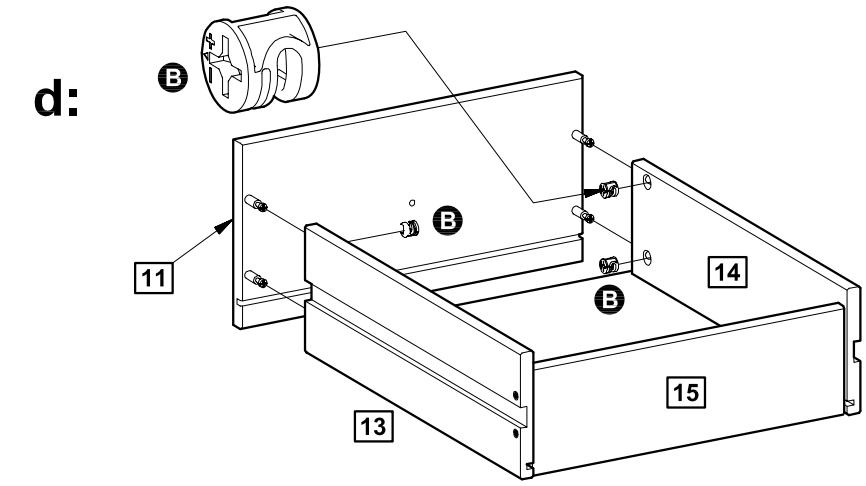

e: Fix the knob (I) to the small drawer front [11] using screw (F).

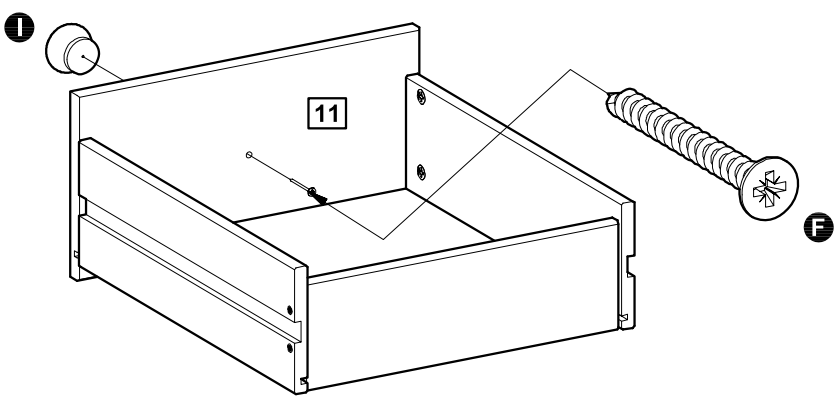


Repeat with remaining drawers.

Step 23

Adding the drawers and the hanging rails to the carcass.

Slide the drawer onto the drawer runners.

Lower the hanging rails Ⓜ into the hanging rail cups.

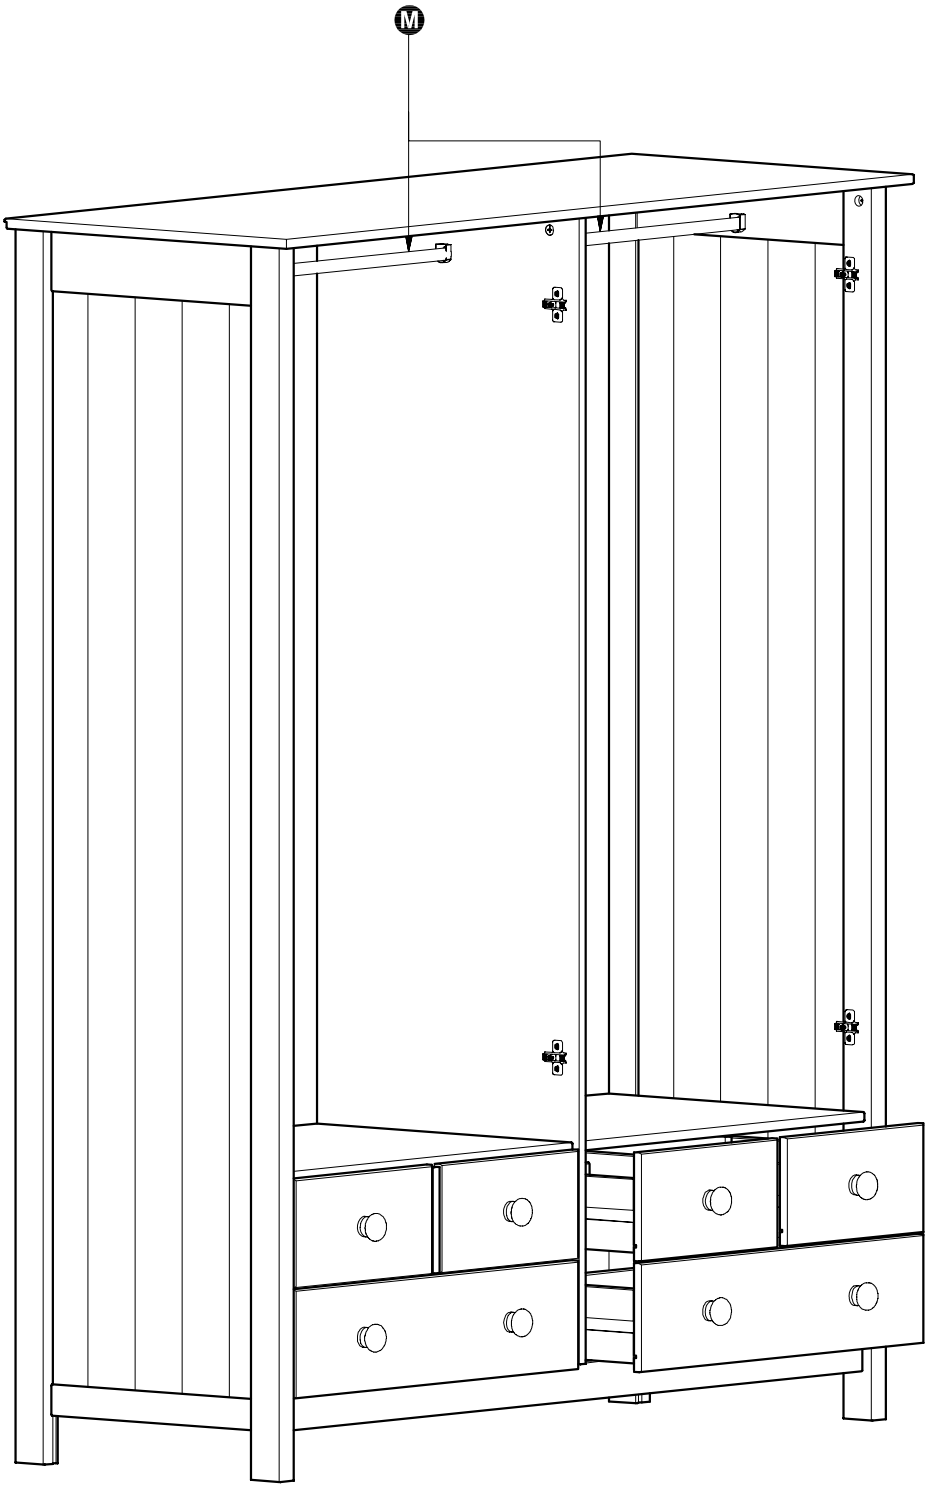


Step 24

Mounting the cup hinges to the doors.

Fix the cup hinges (K) into the holes indicated on the doors [4] and [5].


Attach the hinges using screws (D).

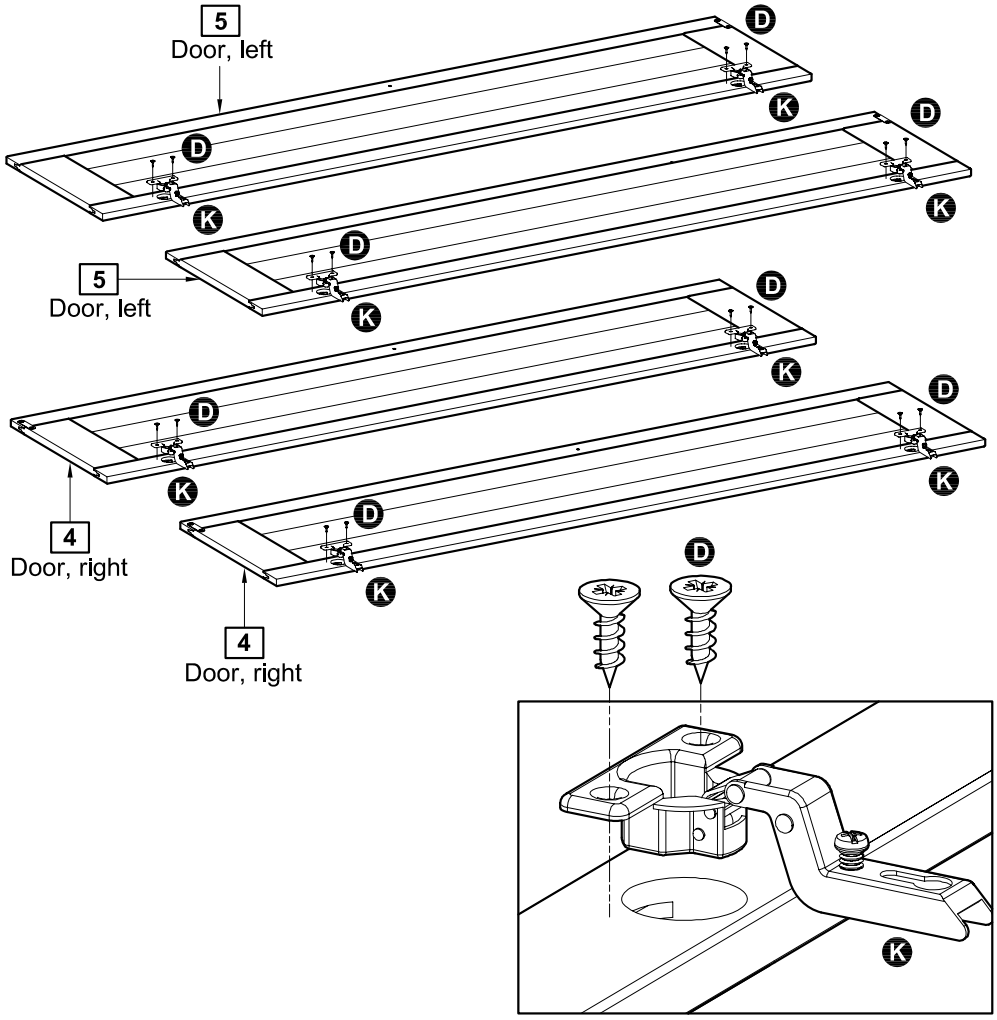

Step 25

Mounting the knobs to the doors.

Fasten the knobs (I) to the doors [4] and [5], using screws (F).

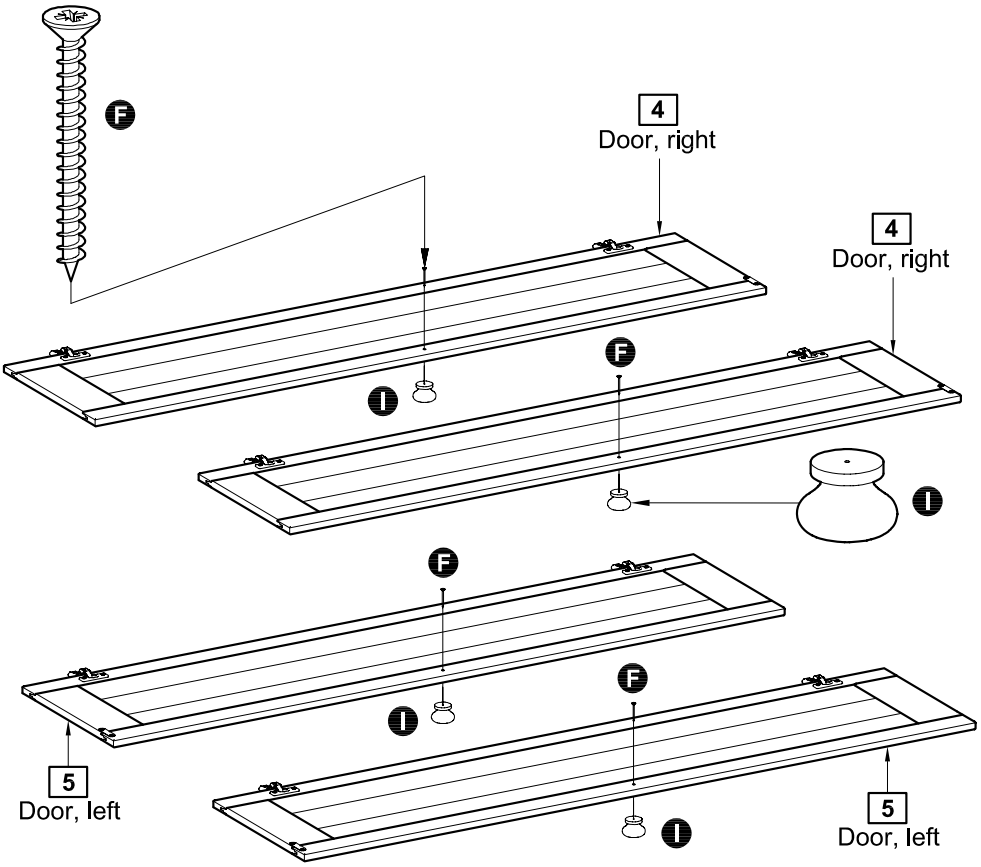

Step 26

Mounting the doors to the carcass.


When placing the doors, the magnetic catch plates must be at the top of the doors.

a: Place the adjustment hole of the cup hinge at the level of the fixing screw. Push the cup hinge towards the cross place - placing the fixing screw in the wider part of the adjustment hole.

Important: Ensure you catch all three of the fixing screws.

b: Push the door / cup hinge inwards - placing the fixing screw in the narrow end of the adjustment hole.


c: Tighten the fixing screws of all three of the cross plates.

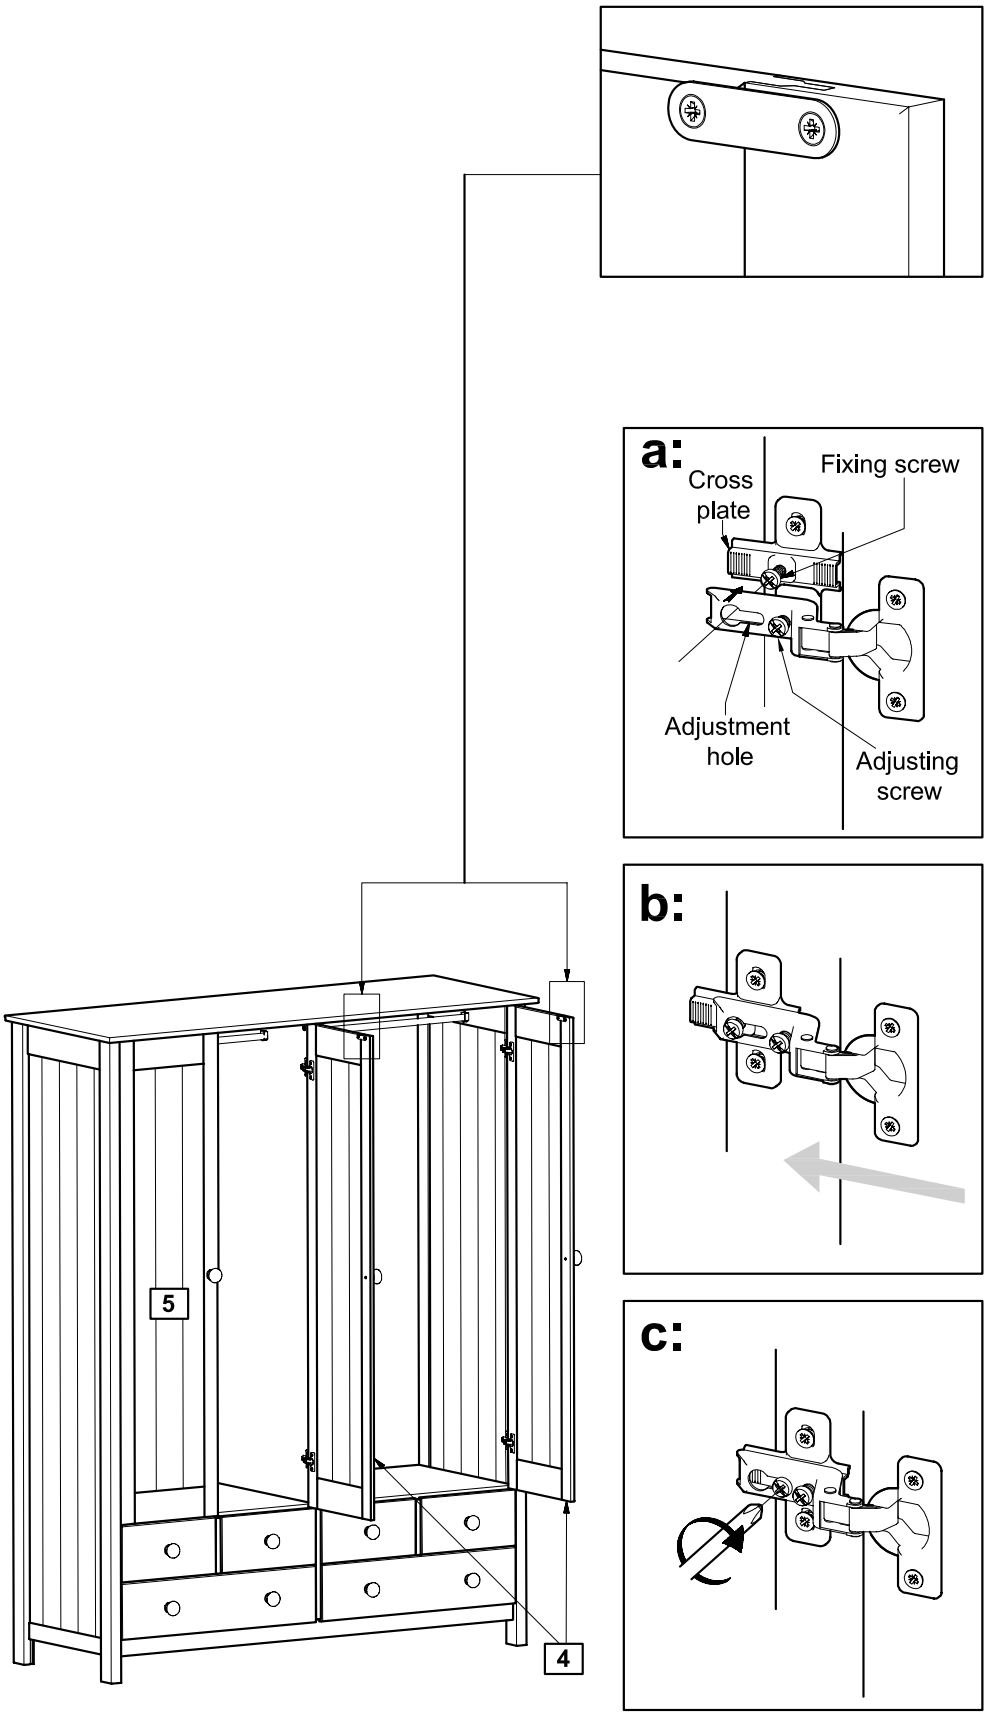


Step 27

Adjusting the doors.


Make sure the wardrobe is placed on a level surface before you begin to adjust the hinges.

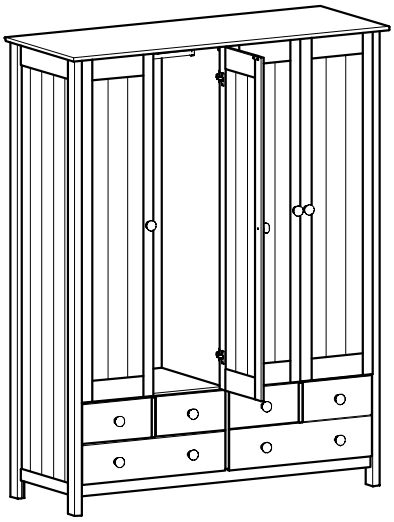

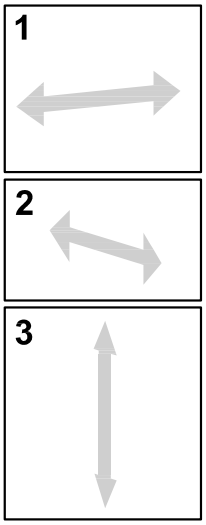


Right or left:


Loosen the fixing screw.

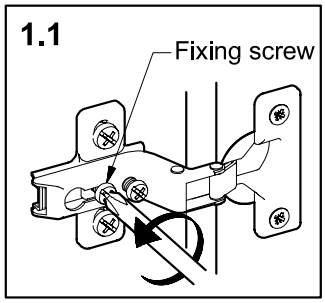


To adjust the door towards the lefthand side - turn the adjusting screw to the right.

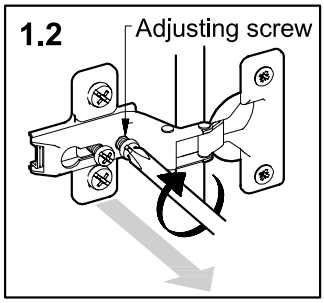

To adjust the door towards the right hand side - turn the adjusting screw to the left.

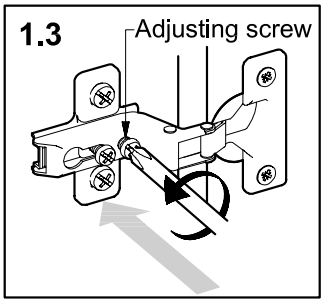


Continue adjustment - see 2 - or tighten the fixing screw of the cross plates

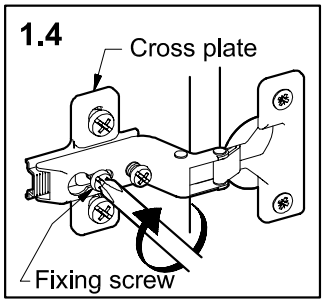


Forwards or backwards:


Loosen the fixing screw.

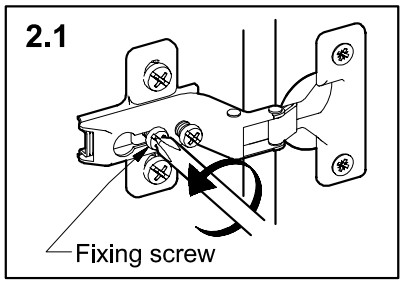

Push the cup hinges / the door back or forth to adjust. The door should level with the front edge of the sides.

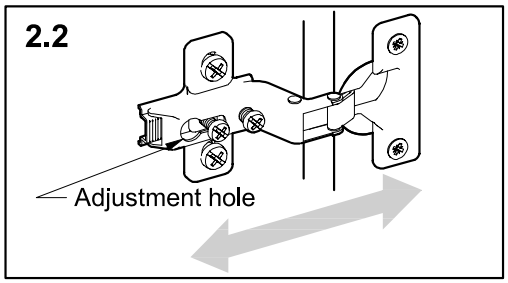


Tighten the fixing screws of all the cross plates.

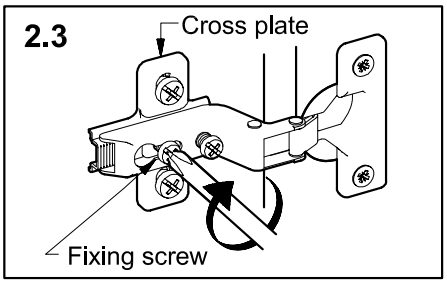


Up or down:


Loosen the two screws Ⓔ of each cross plate, but only as much as it will allow the cross plate to move up and down.

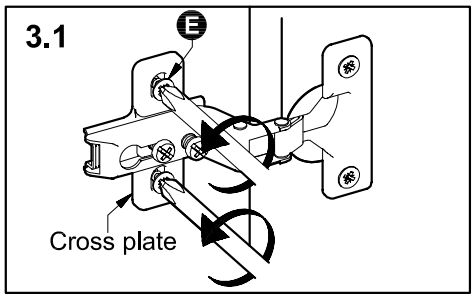

Adjust the cross plate / door.

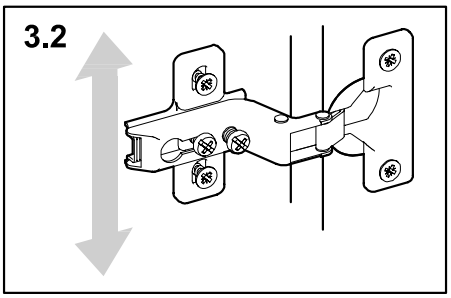

Tighten the screws Ⓔ of all the cross plates.

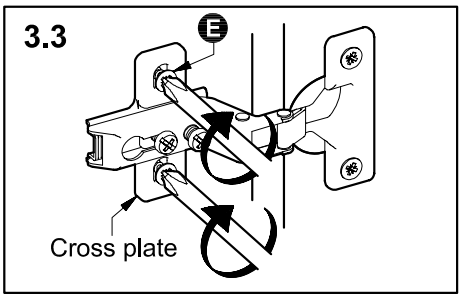

Step 28

Fixing to wall.

It is recommended that the wardrobe is fixed to a wall.

Fix wall straps (P) to top of wardrobe using screws (D).

With help, move wardrobe into position.

Warning:
The wardrobe is heavy.
Lift with care.


Mark fixing holes on wall and remove wardrobe.

Drill 7mm holes and insert wall plugs (Q).

Warning:
Before drilling, check wall for hidden pipes and cables.


Reposition wardrobe and fix wall straps using screws (O) .

Assembly is complete.

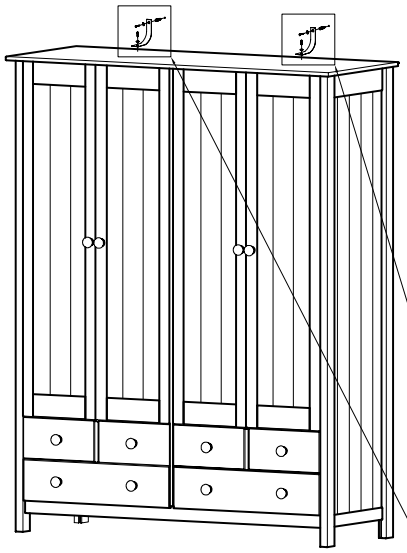

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

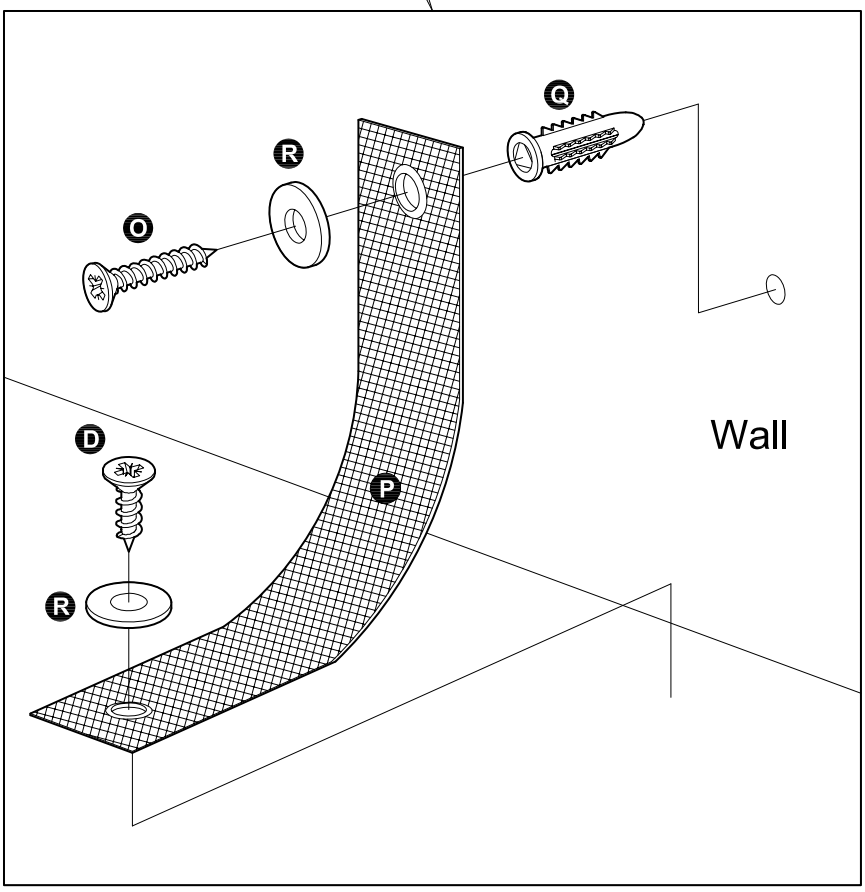

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: **General rule**: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

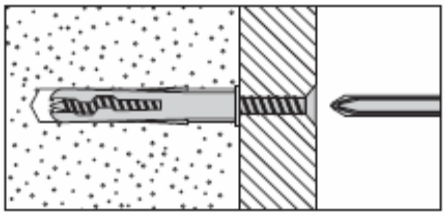


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

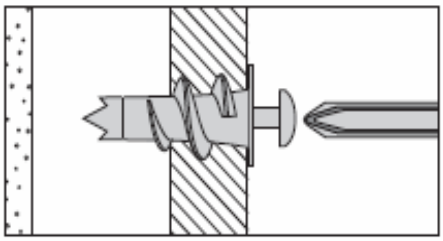


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

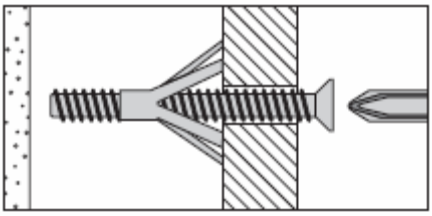


For use with plasterboard partitions or hollow wooden doors.

No.4 "**Cavity Fixing-Heavy Duty" wall plug**

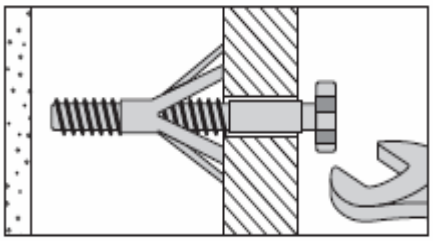


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

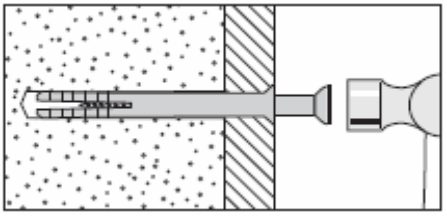

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

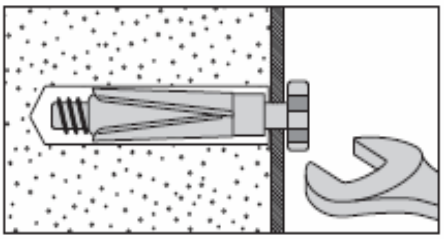

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Dear Customer

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.