
# 3+3 DRAWER CHEST

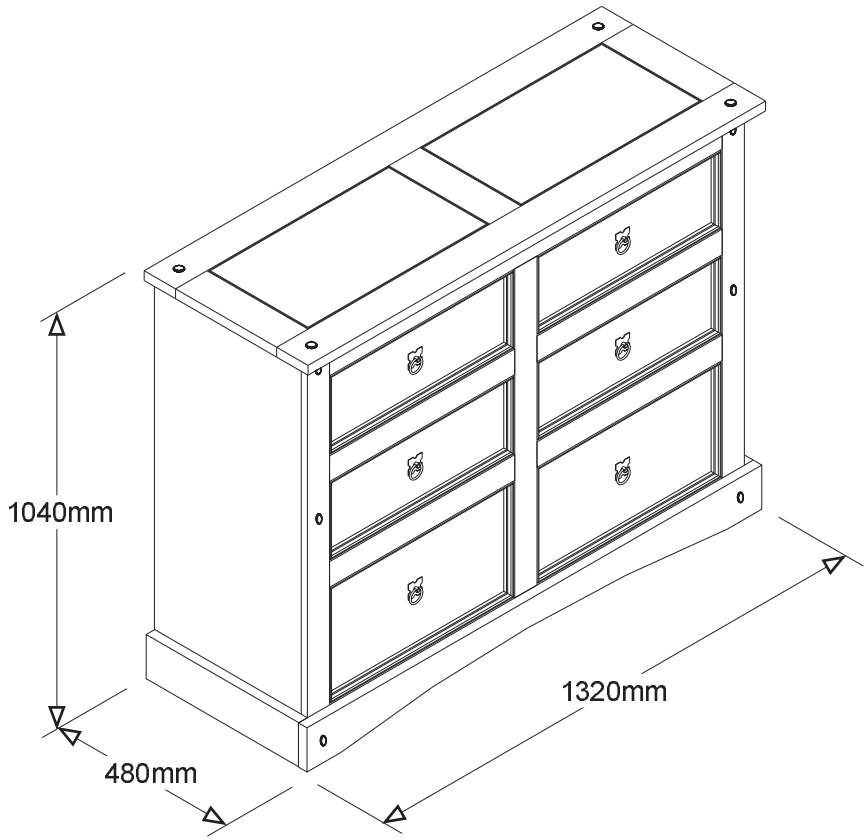




Before you start here in some helpful advise

Assembly time:
**1 Hour**

**Please spend a short time reading through this leaflet and follow the step-by-step assembly instructions provided.**

## Customer Advisory Information


- This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.
- The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture. On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.
- This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly
- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age
- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product


## Assembly Advice


**Before commencing assembly, we recommend that you familiarise yourself with the component parts and the instructions. We suggest that you lay out the components and check these against the parts list supplied.**

- Please retain packaging materials until assembly is complete; then dispose of packaging materials carefully
- We recommend that you assemble the product on a soft/carpeted surface to prevent any damage to panels during assembly
- Ensure that all fixings are tight and check these periodically for tightness

- **Note: small parts pose a potential safety hazard; ensure that these are securely attached and kept out of reach of children**

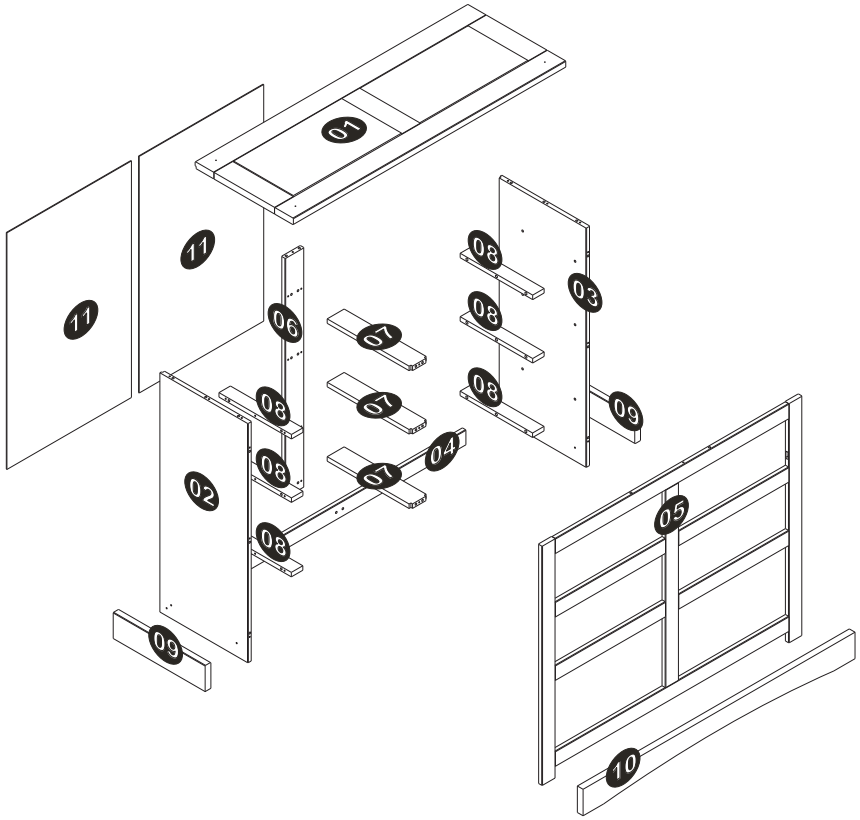

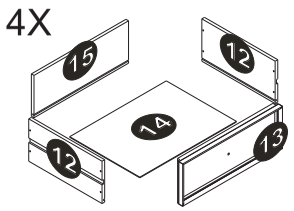


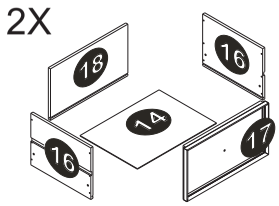


## COMPONENT PARTS

| | | |
|---|---|---|
| **A** X 58<br>8x30 mm | **B** X 64<br>3.5x35 mm | **C** X 19<br>4.0x35 mm |
| **D** + X 6<br>3/16x19 mm | **E** X 10 | **F** X 1<br>3.5x14 mm |
| **G** X 1 | **H** X 8<br>4.0x40 mm | **J** X 18<br>4.5x50 mm |
| **L** X 56 | **M** X 2 | |


**N** X 1

## TOOLS NEEDED

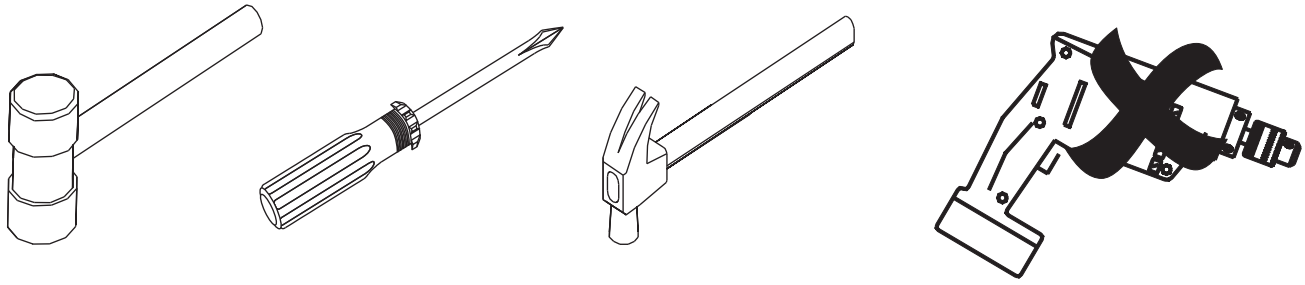




## STEP 1

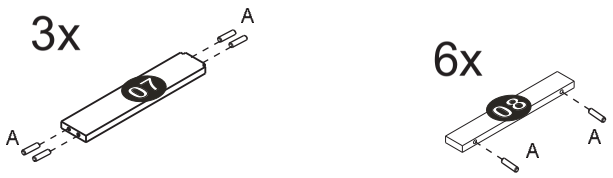



| | | |
|---|---|---|
| **A** | 8x30 mm | **X 46** |
| **J** | 4.5x50 mm | **X 12** |

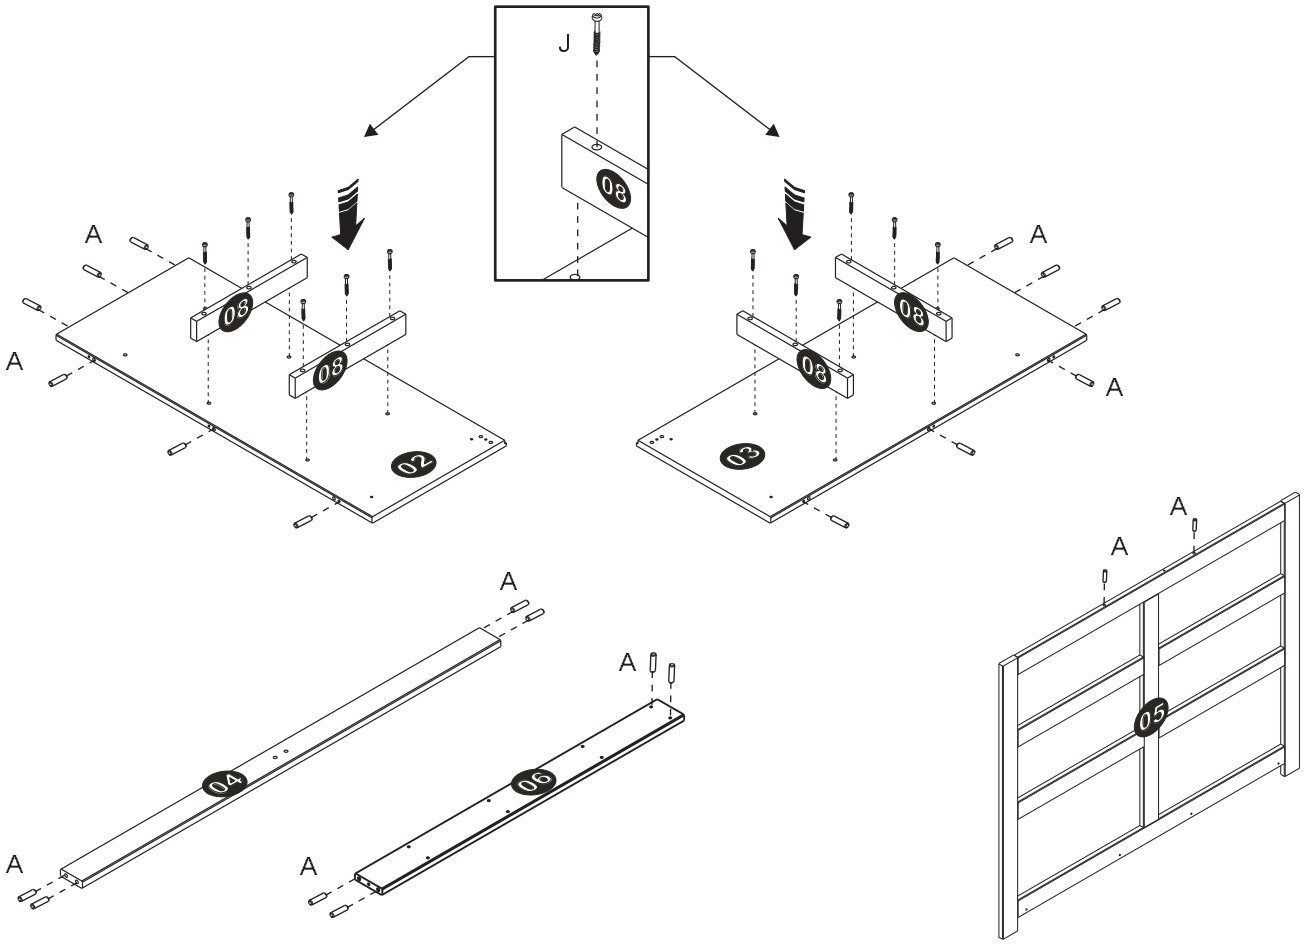



## STEP 2

| | | |
|---|---|---|
| **H** | 4.0x40 mm | **X 2** |

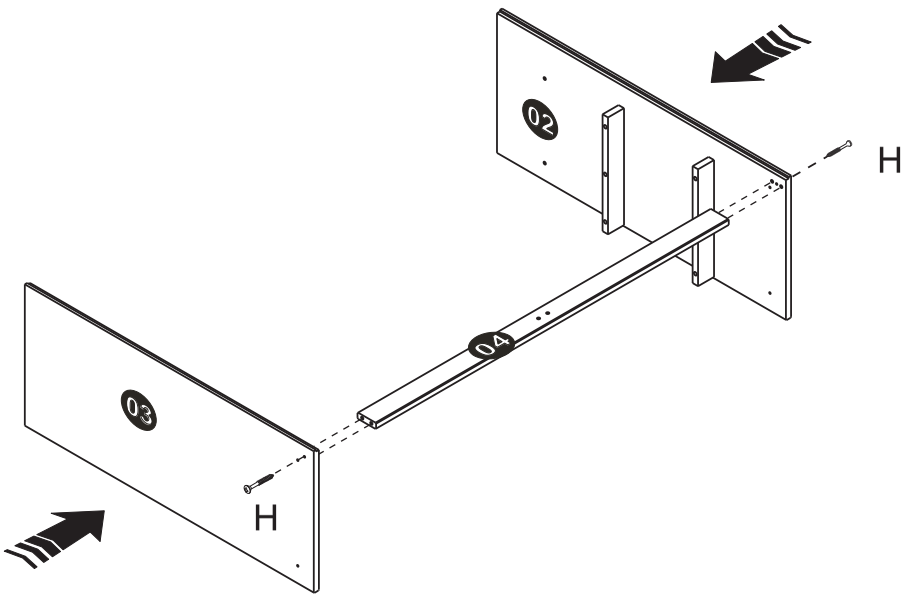

## STEP 3


C X 6
4.0x35 mm

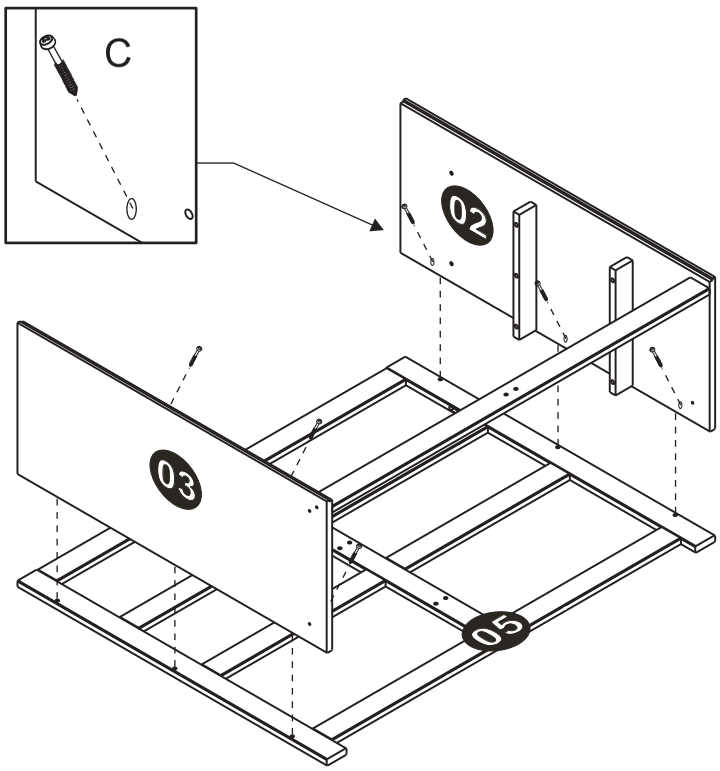



## STEP 4

C X 5
4.0x35 mm


H X 6
4.0x40 mm

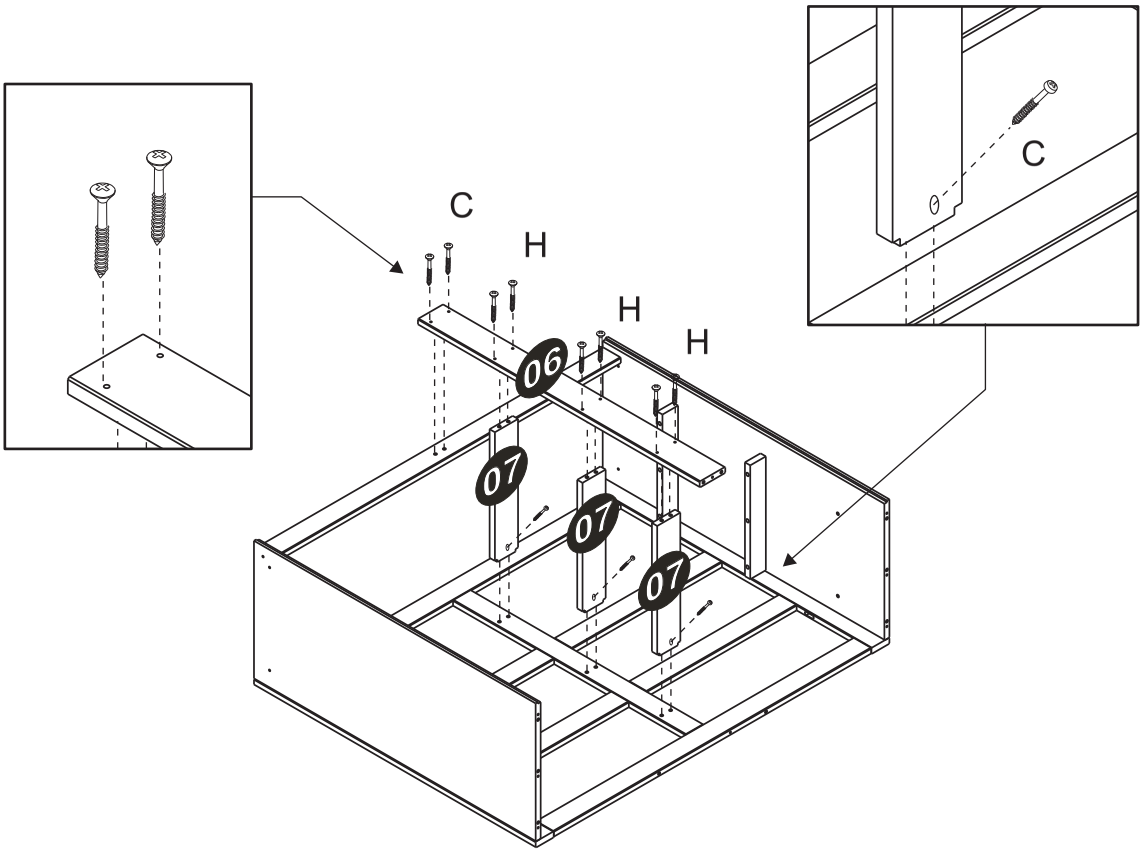


## STEP 5

| | | |
|---|---|---|
| C | 4.0x35 mm | X 7 |
| B | 3.5x35 mm | X 8 |

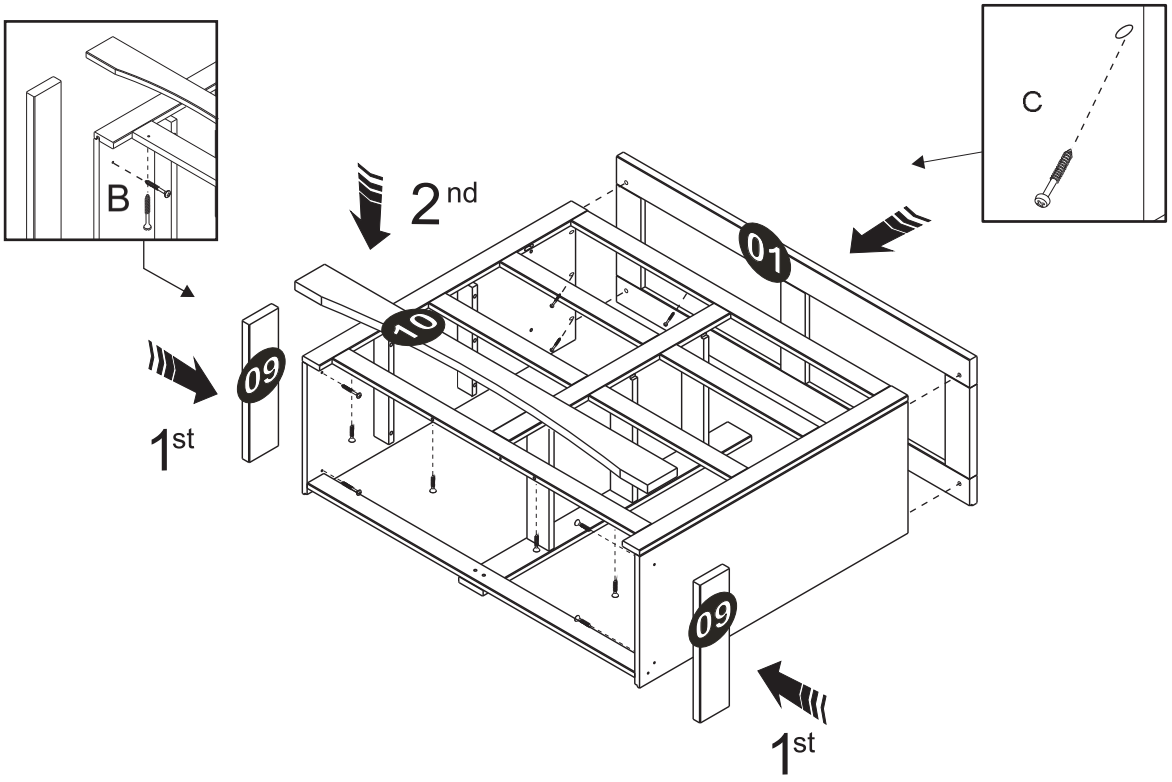


## STEP 6

| | | |
|---|---|---|
| C | 4.0x35 mm | X 1 |
| J | 4.5x50 mm | X 6 |

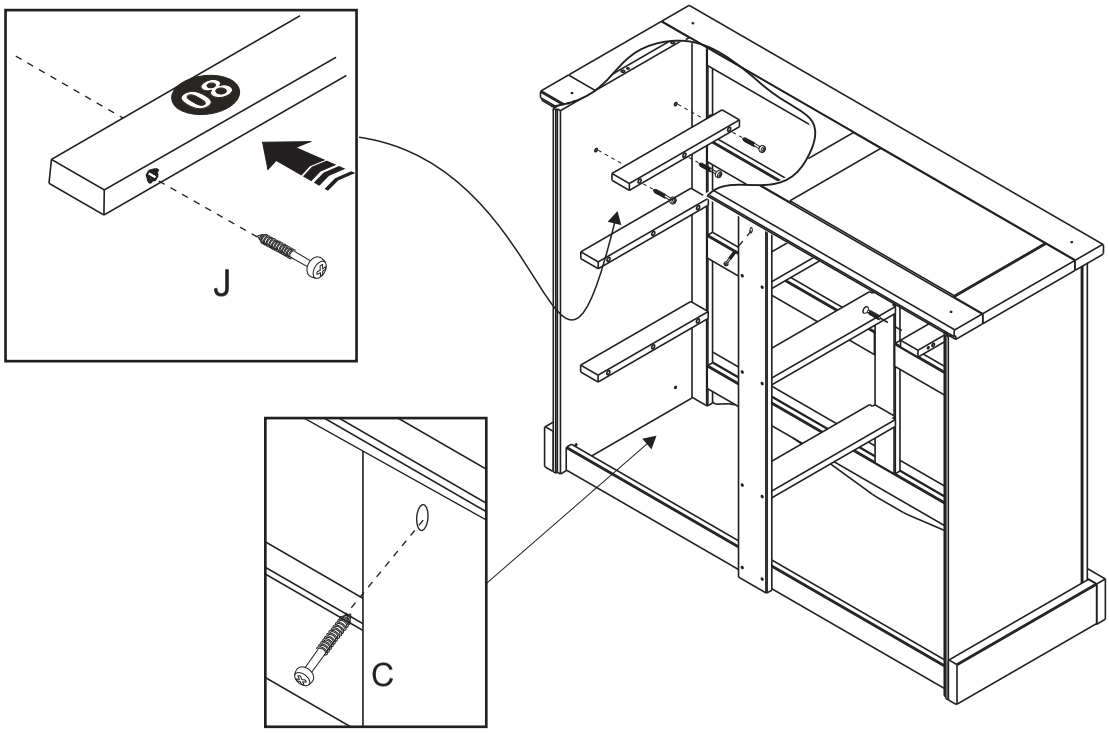


# STEP 7


B X 56
3.5x35 mm


D + X 6
3/16x19 mm

Note!
To ensure good drawer alignment fit drawer front 13/17 in level with sides 12/16 as shown!

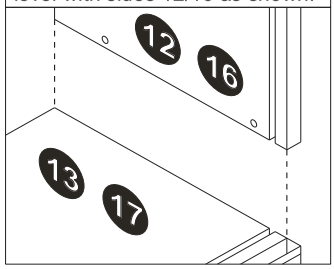



2 X

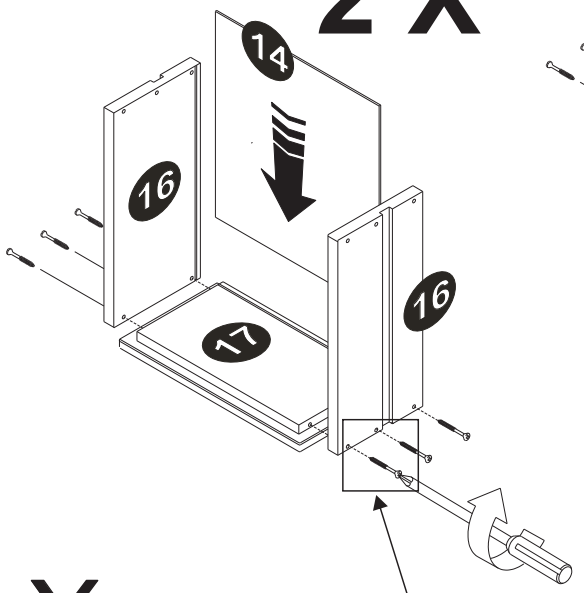

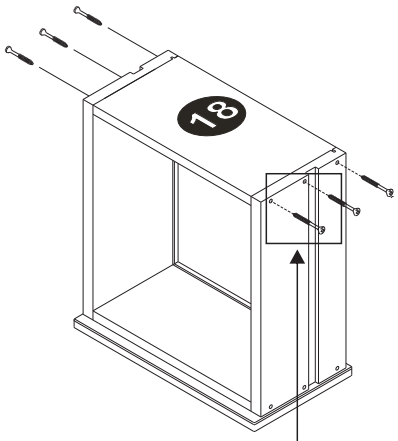



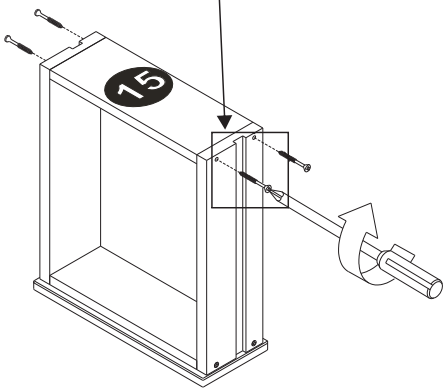

4 X

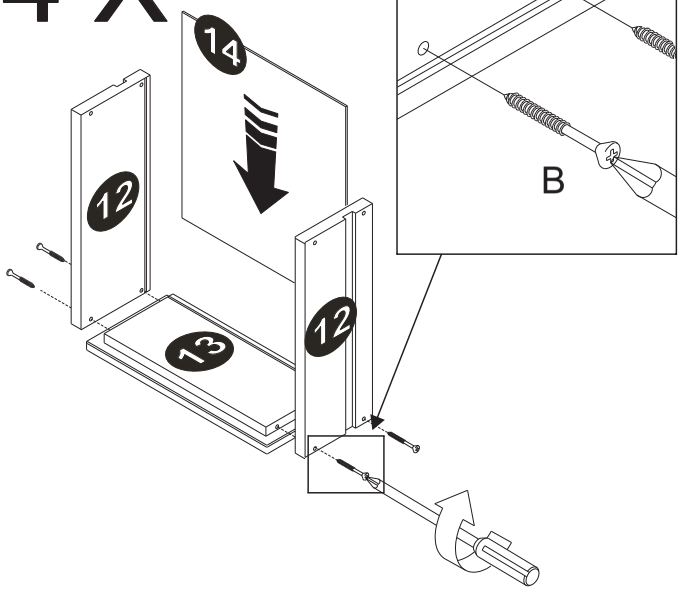







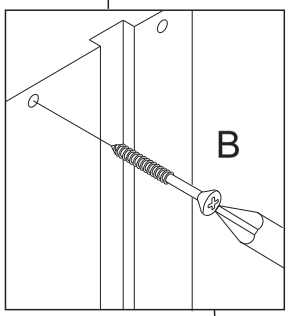


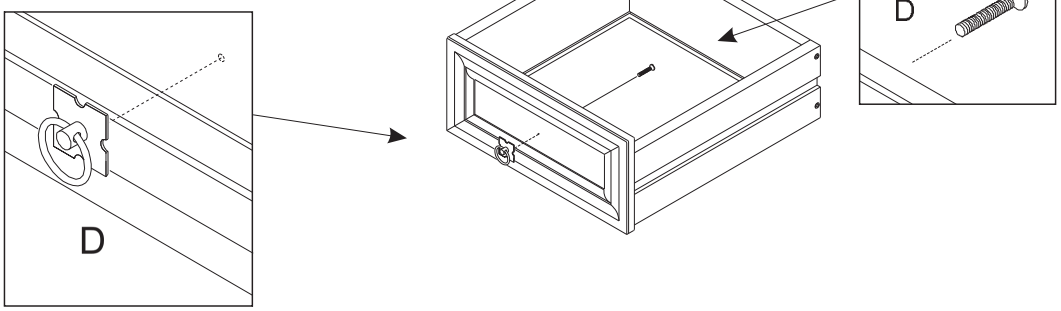



## STEP 8






| | | |
|---|---|---|
| A | 8x30 mm | X 12 |
| E | | X 10 |
| G | | X 1 |

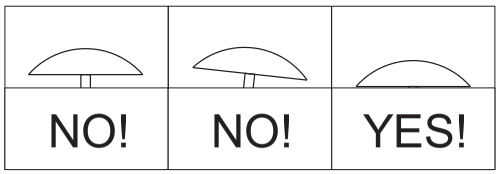


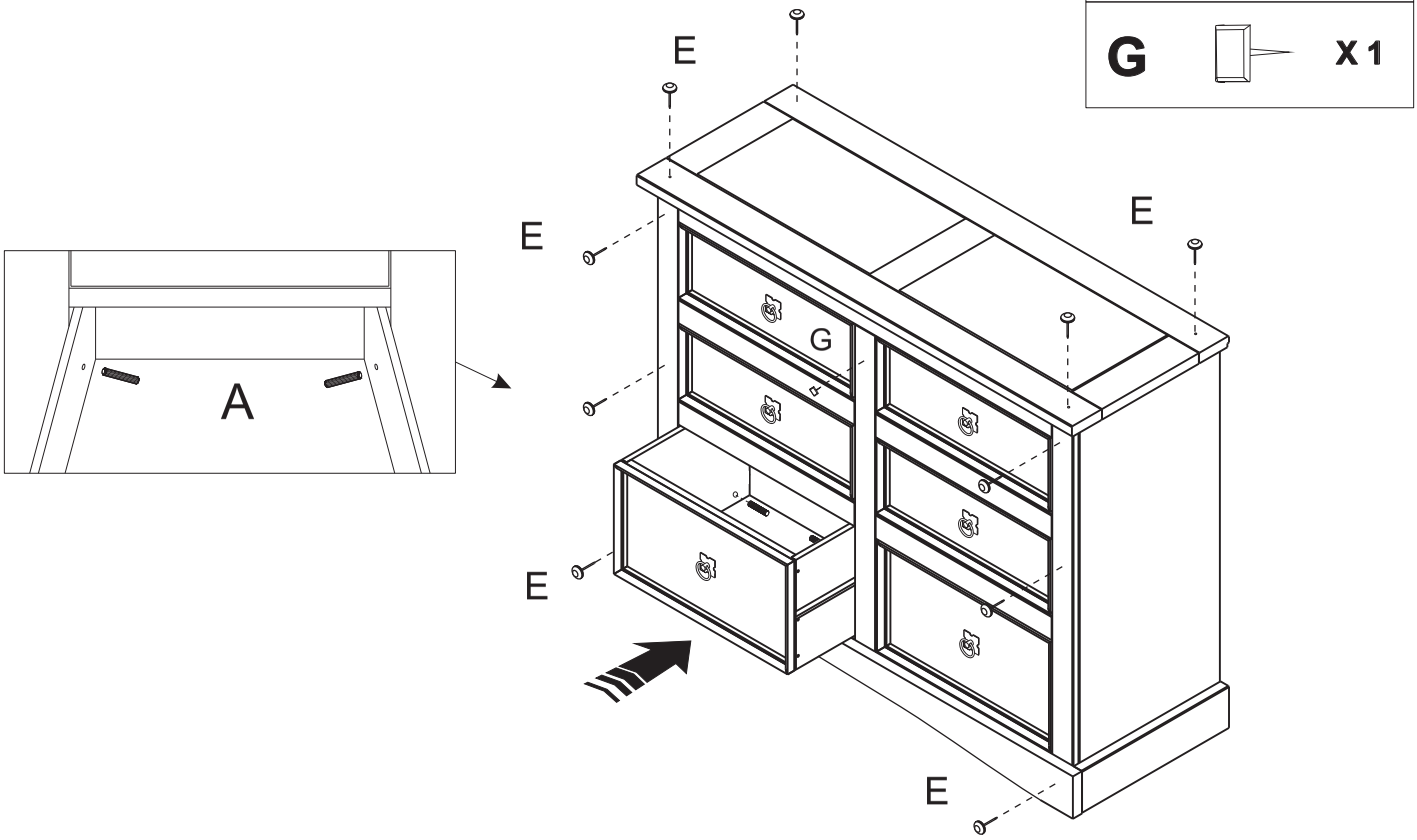
## STEP 9

| | | |
|---|---|---|
| L | | X 56 |

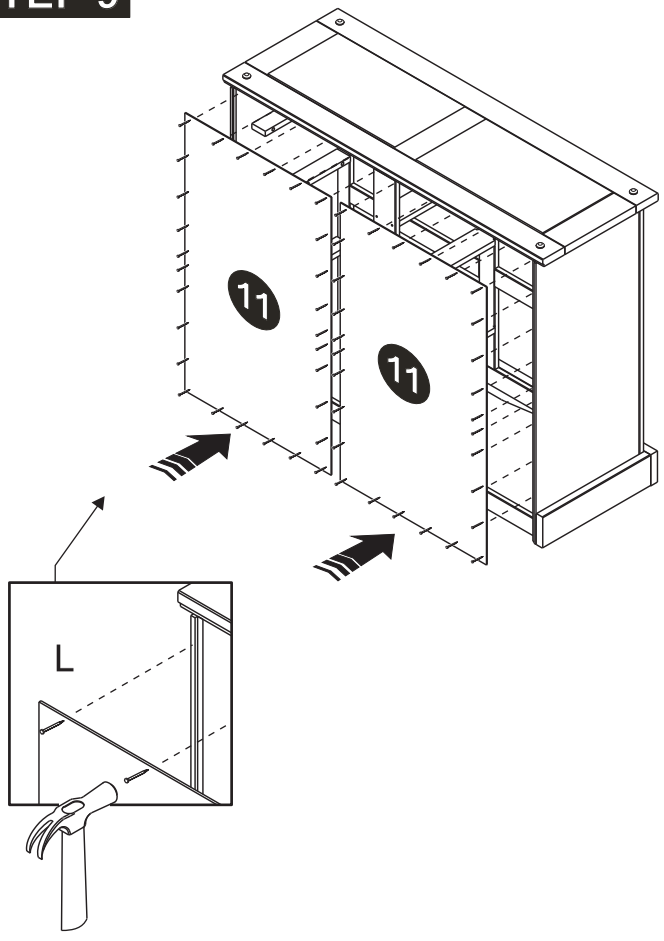

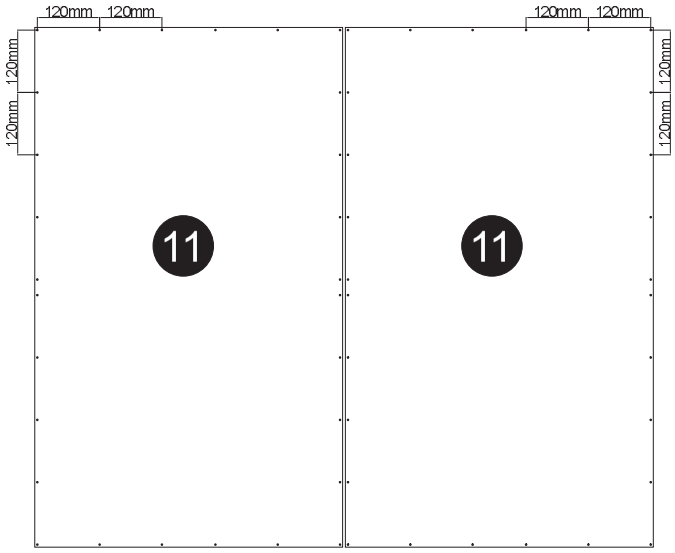F 3.5x14 mm X 1

M X 2

N X 1

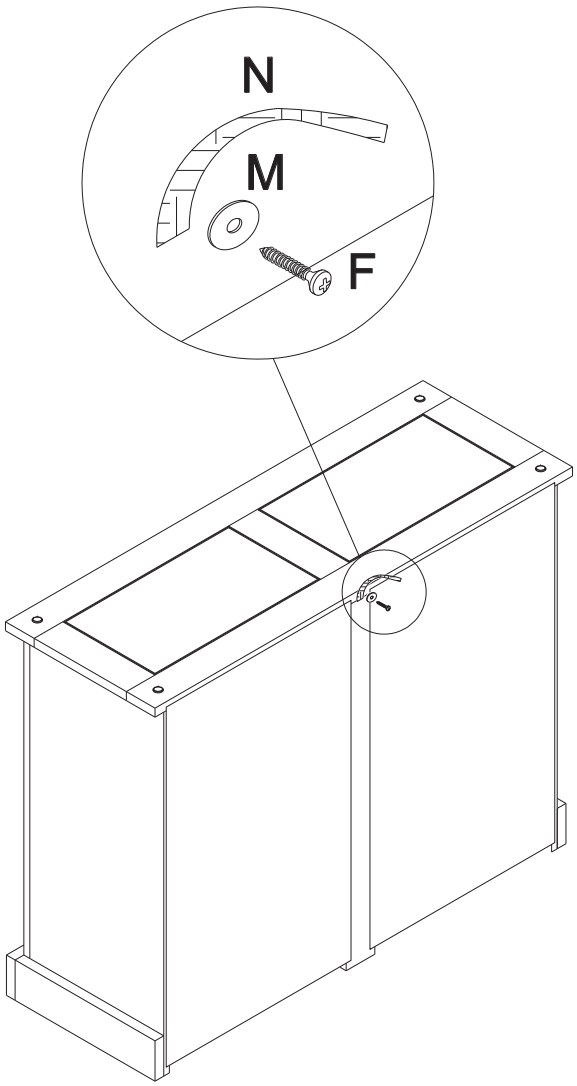



DIAGRAM 1

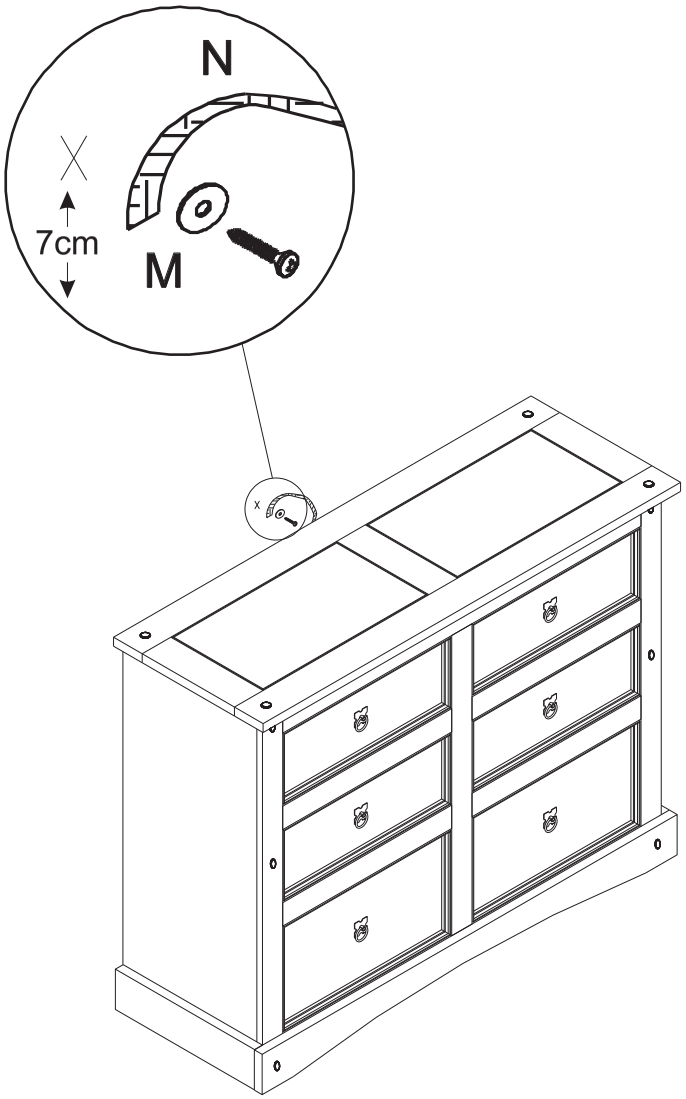




DIAGRAM 2

Once you have decided on your prefered location we recommend that you follow below instructions to secure product to wall.

1. Measure to the centre of product and draw a line on wall as shown in diagram. Remove product

2. Measure 7 cm down from line and secure strap to wall by using an appropriate wall fittings. (NOT SUPPLIED)

3. Referring to diagram 2, fold the strap over the edge and secure using fittings supplied.



# **Puerto Rico -** 3+3 Drawer Chest

**Assembly Instructions** - Please keep for future reference

641/7707

643/1848



**Dimensions**

**Width - 132cm**
**Depth - 48cm**
**Height - 104cm**

**Important – Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 12/07/10

# Safety and Care Advice

**Important** – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fttings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

- The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

- On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

- This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.



- We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.

- Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


***Note:*** *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

# **Components** - Panels


## Please check you have all the panels listed below

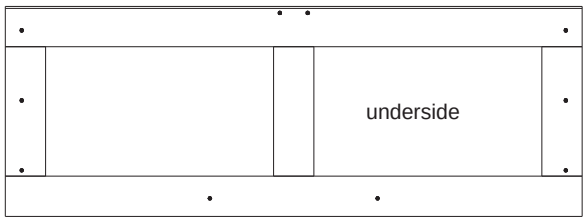



**1** Top panel (132 x 48cm)

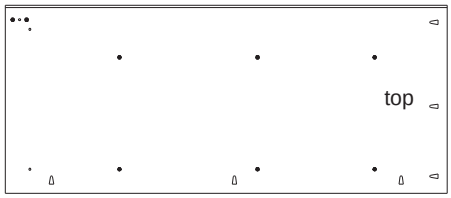


**2** Right side panel (101 x 43cm)

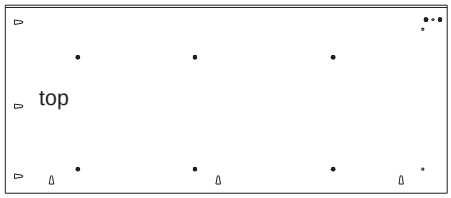



**3** Left side panel (101 x 43cm)

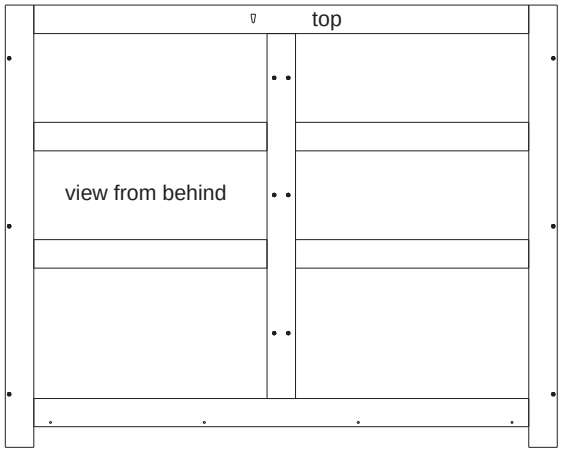



**4** Front panel (101 x 126.3cm)



**5** Front plinth (132 x 11.2cm)

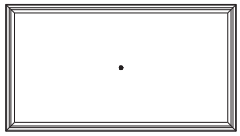


**6** Larger drawer front x 2 (52.8 x 29cm)

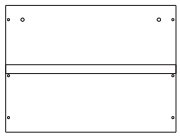

**8** Larger drawer side x 4 (39 x 29cm)



**10** Larger drawer back x 2 (50 x 29cm)



**12** Side plinth x 2 (45 x 11.2cm)



**15** Cross rail (122.7 x 6.5cm)




**16** Bottom support (101 x 9.2cm)




**17** Back panel x2 (100 x 59.3cm)



**18** Drawer bottom x 6 (51 x 37.3cm)



**7** Smaller drawer front x 4 (52.8 x 19.5cm)



**9** Smaller drawer side x 8 (39 x 19.5cm)



**11** Smaller drawer back x 4 (50 x 19.5cm)



**13** Side drawer runner x 6 (35.4 x 5.5cm)












**14** Middle drawer runner x 3 (40.5 x 8.1cm)

# **Components** - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**


## Please check you have all the fittings listed below

***Note:*** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


| | | |
|---|---|---|
| **A**  Wooden dowel x 58 | **B**  14mm Screw x 1 | **C**  35mm Screw x 64 |
| **D**  35mm Screw x 19 | **E**  40mm Screw x 8 | **F**  50mm Screw x 18 |
| **G**  19mm Bolt x 6 | **H**  Drawer handle x 6 | **J**  Nail x 56 |
| **K**  Round Metal stud x 10 | **L**  Square Metal stud x 1 | **M**  Washer x 2 |
| **N**  Wall strap x 1 | | |


## Tools required


Phillips screwdriver (medium & large)

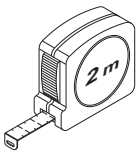


Ruler/tape measure


Small hammer


Eye protection (when using a hammer or glue)


## **Ruler** - Use this ruler to help correctly identify the screws



# Assembly Instructions

## Step 1

Insert dowels (A) into the indicated parts.

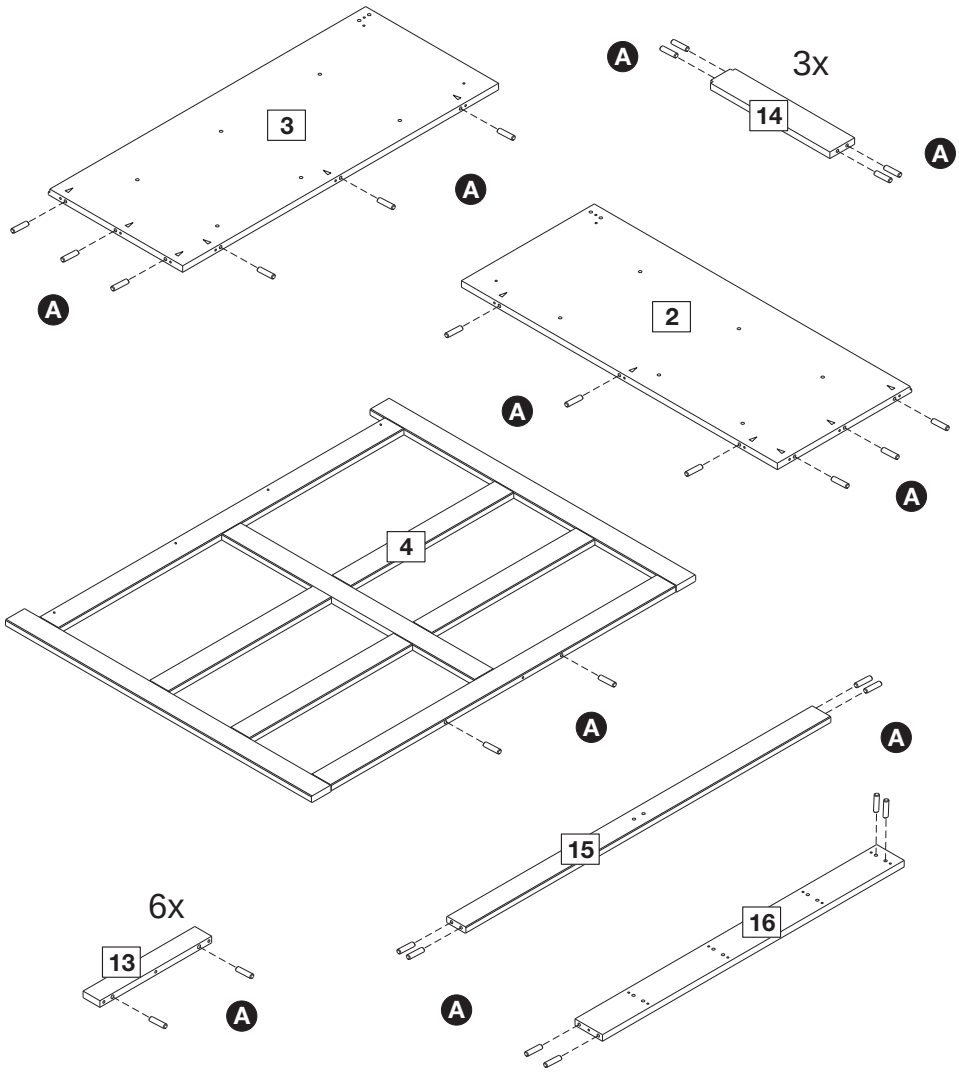



## Step 2

**Fixing drawer runners.**

Attach 2 drawer runners 13 in right side panel 2 using screws (F).

***Note:***
Leave top drawer runner assembly for later.

Repeat above procedures for the left side panel 3 and 2 drawer runners 13.

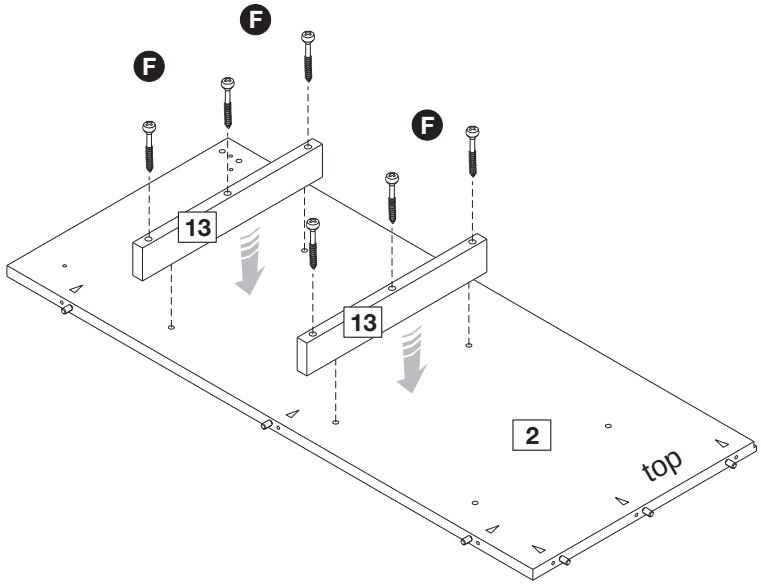


# Assembly Instructions

## Step **3**

**Fixing cross rail.**

Fit cross rail 15 to the side panels 2 and 3 then fix using screws E.

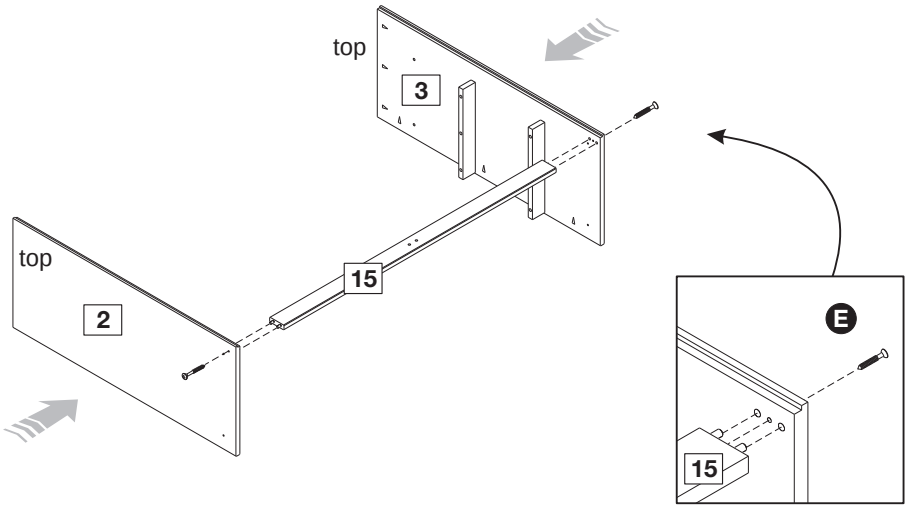



## Step **4**

**Fixing panels.**

Two people required for an easier assembly.

Fit side panels 2 and 3 on the front panel 4.

Attach side panels 2 and 3 on the front panel 4 using screws D.

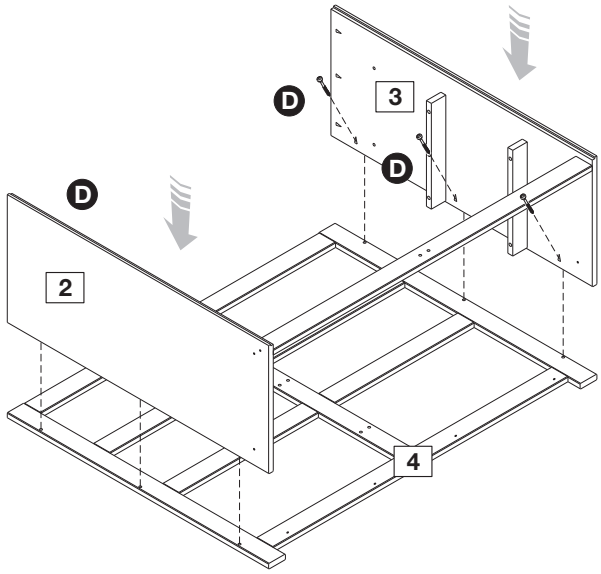



## Step **5**

**Fixing middle drawer runner.**

Fit middle drawer runners 14 at the front panel 4 then fix using screws D.

***Attention:***
Make sure middle drawer runners 14 are positioned as shown in the diagram prior to fixing.

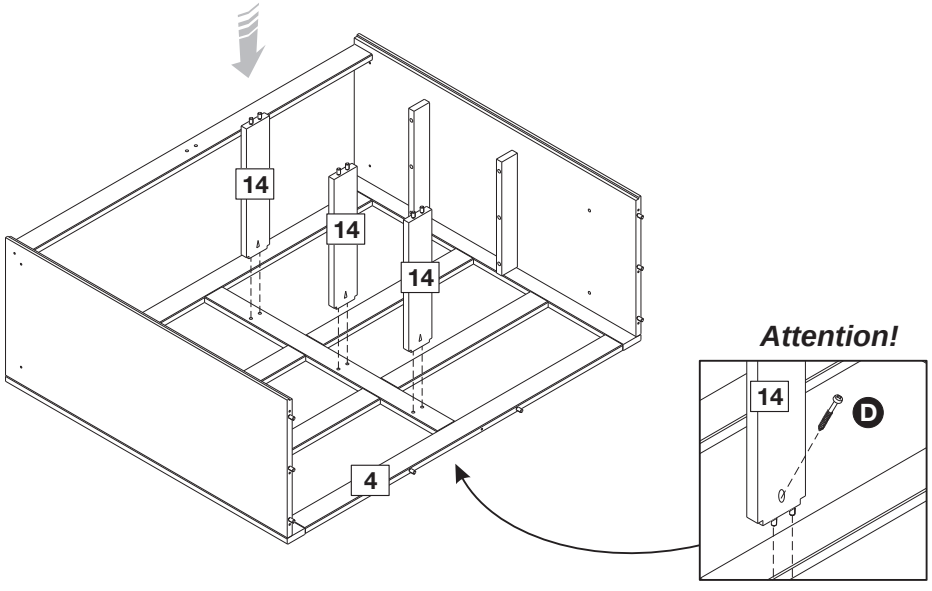

# Assembly Instructions


## Step 6

**Fixing bottom suport.**

Fit bottom suport 16 at the middle drawer runners 14 and cross rail 15.

Attach bottom suport and middle drawer runners using screws E.

Attach bottom suport and cross rail using screws D.

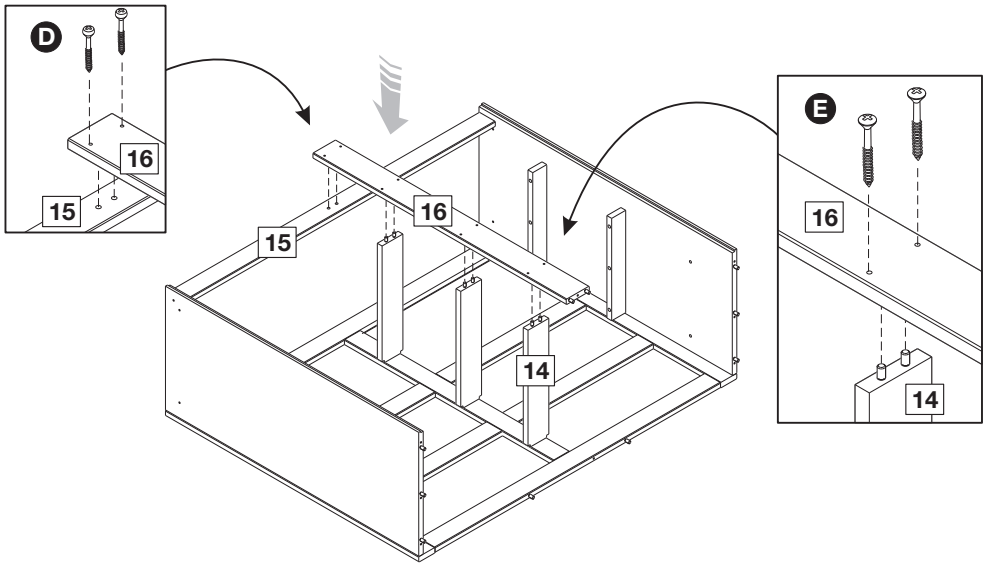



## Step 7

**Fixing top.**


Two people required for an easier assembly.

Attach cabinet to the top panel 1 using screws D.

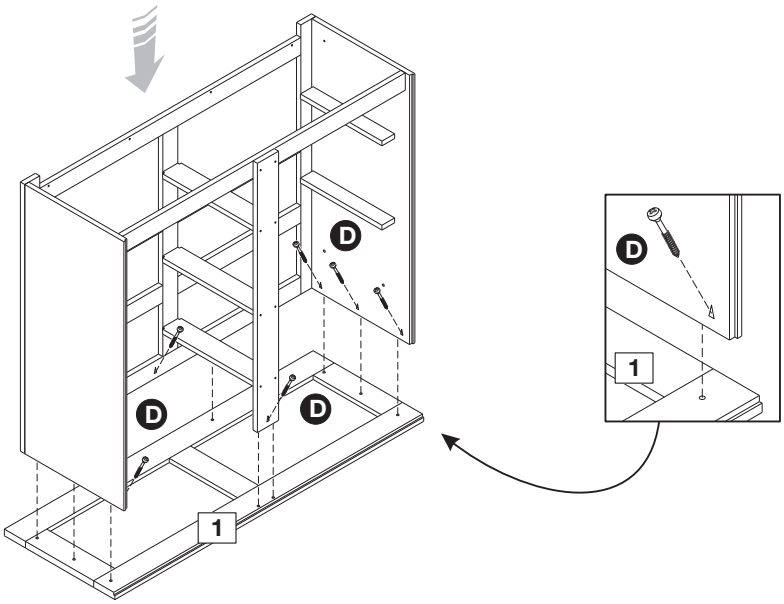


## Step 8

Fix 2 side drawer runners 13 to the side panels using screws F as shown.

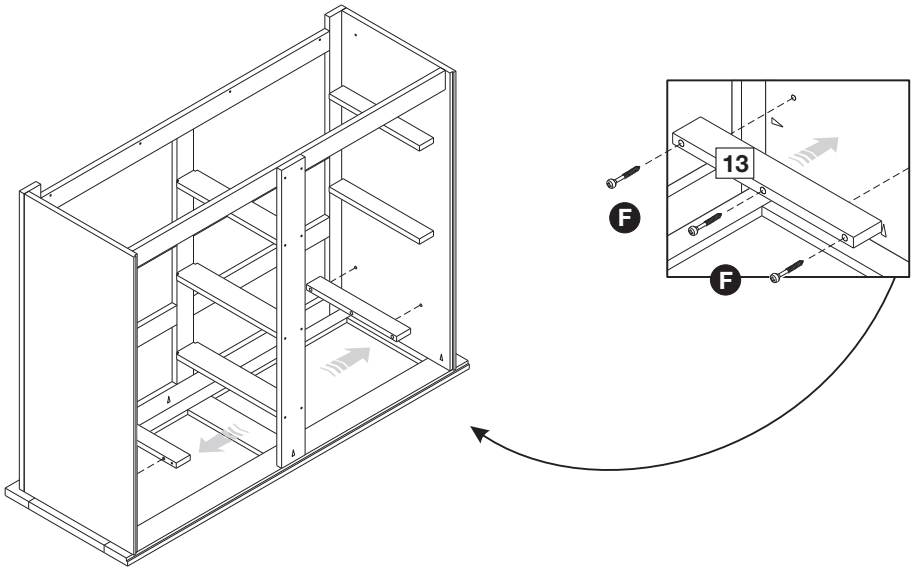

# Assembly Instructions


## Step **9**

**a:** Fix side plinths 12 to the side panels using screws C.

**Note:** Make sure side plinths are aligned to the bottom and front edges of the side panels.

**b:** Fix front plinth 5 to the bottom front panel 4 using screws C.

**Note:** Make sure front plinth 5 is aligned to the bottom edge of the side panels and in line to the side plinths.

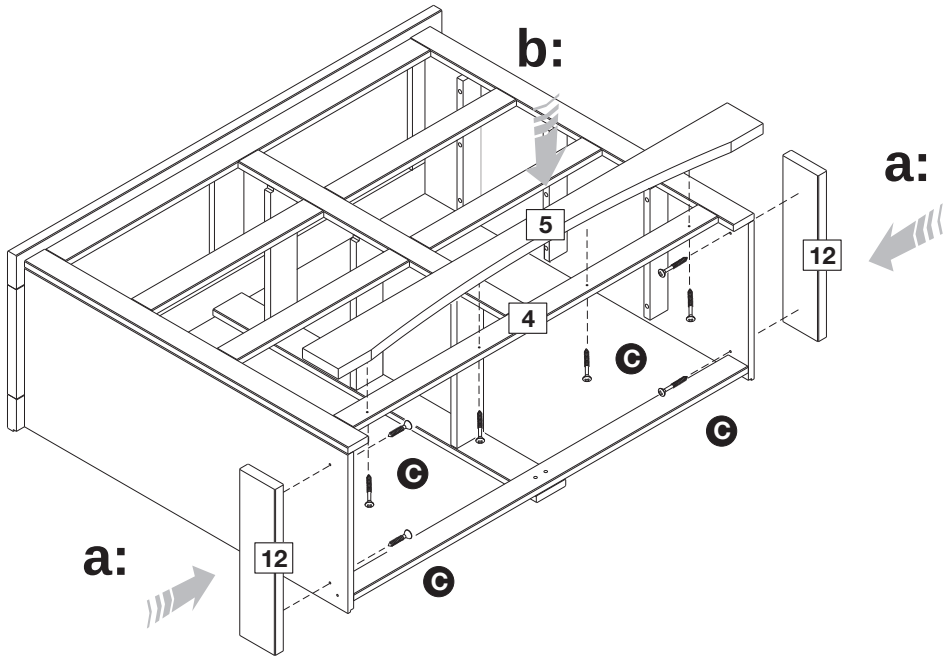


## Step **10**

**Larger drawer assembly.**


**a:** Attach drawer sides 8 to the drawer front 6 using screws C.


**b:** Slide drawer bottom into slots on drawer sides and position drawer back 10 in place.

**c:** Holding the drawer back 10, press the drawer sides and fix them using screws C.

**d:** Using screw G attach the drawer handle H to the drawer front.

Repeat above procedures for the other larger drawer.

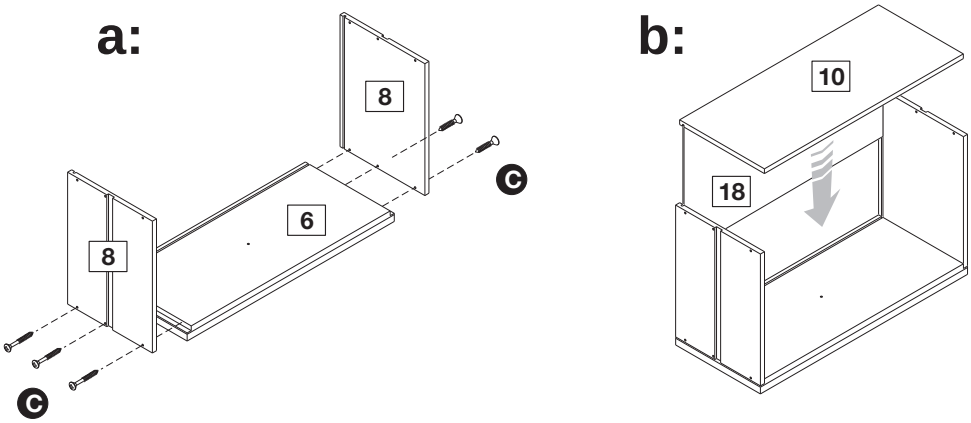
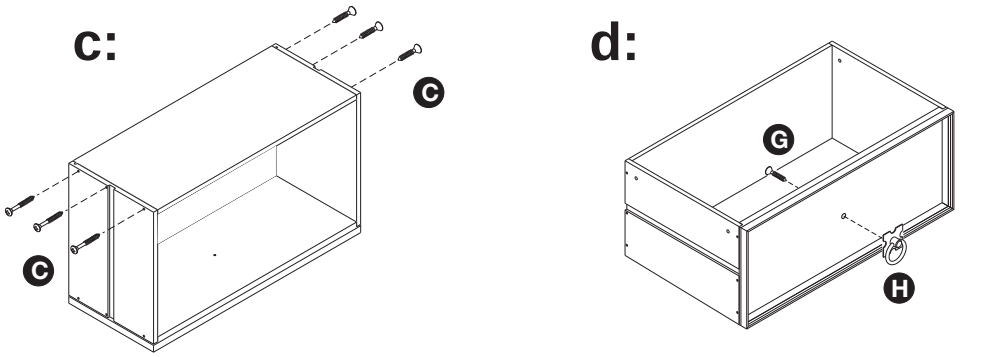
## Step **11**

**Smaller drawer assembly.**


**a:** Attach drawer sides 9 to the drawer front 7 using screws C.

**b:** Slide drawer bottom into slots on drawer sides and position drawer back 11 in place.

**c:** Holding the drawer back 11, press the drawer sides and fix them using screws C.

**d:** Using screw G attach the drawer handle H to the drawer front.

Repeat above procedures for the other smaller drawers.

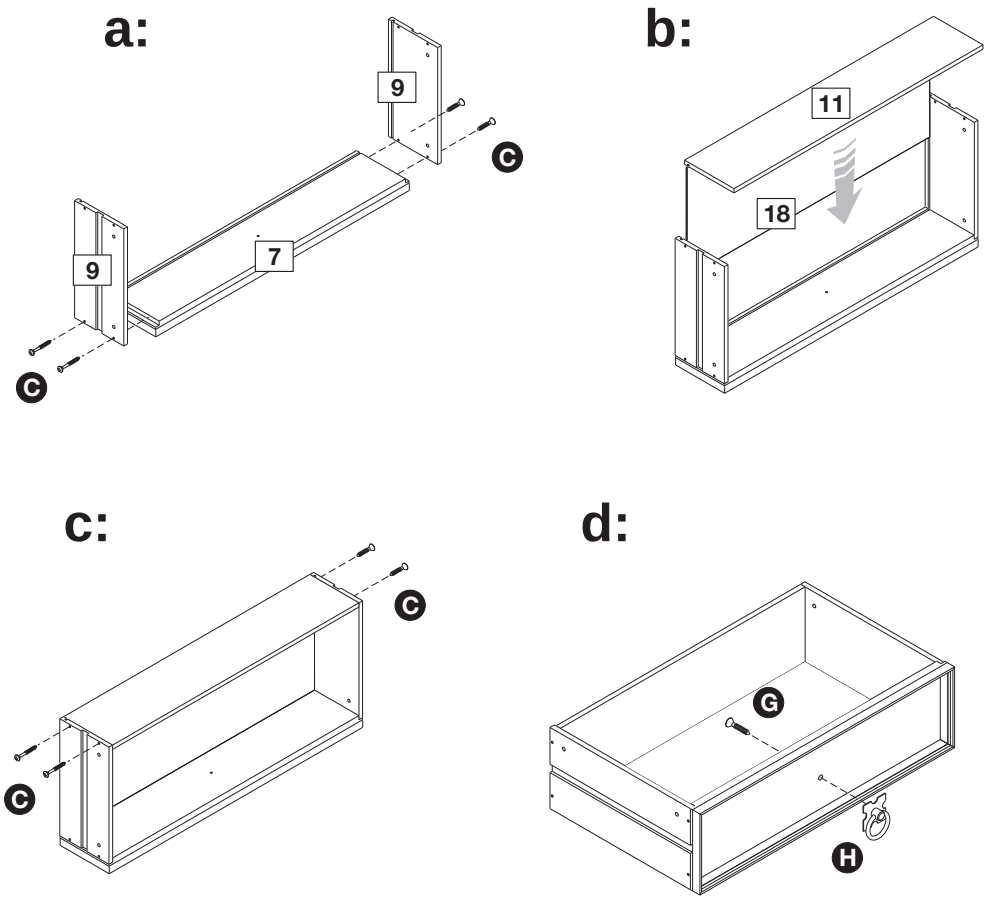



## Step **12**

**Fixing back panels.**

***Important:***
With help, carefully stand the product upright.


***Important:***
Cabinet **MUST** be up right and square when back panel are attached.

Attach the back panels 17 using nails J.

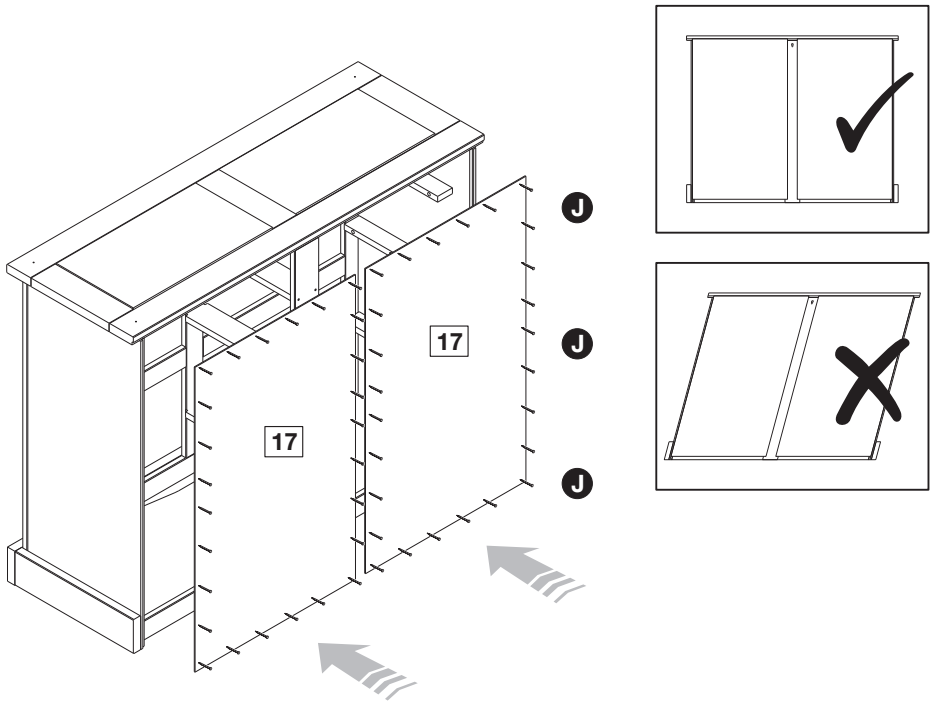


## Step **13**


Insert drawers into unit. With the back of the drawers past the front frames, use a hammer to tap dowels Ⓐ in flush to drawer sides. This is a safety catch to stop drawer falling out.

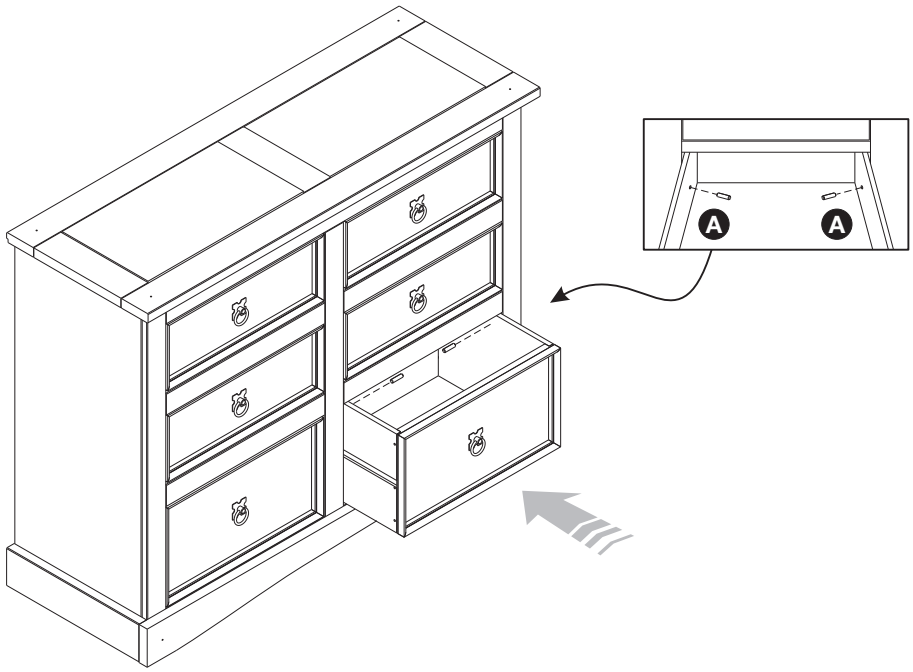



## Step **14**

**a:** Fix round metal studs Ⓚ into the pre drilled holes in the top panel 3, front frame 4 and front plinth 13.

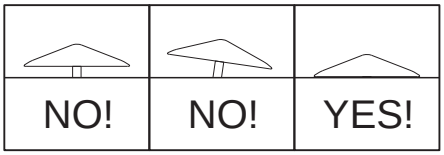

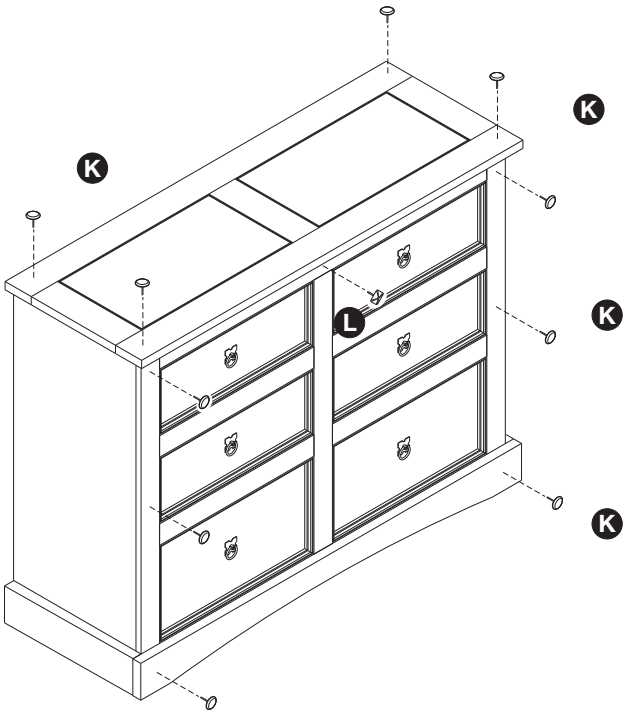

**a:**

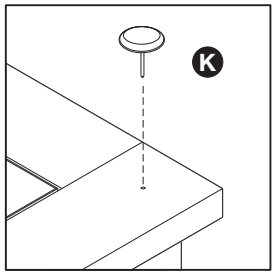


**b:** Fix square metal stud Ⓛ to the product as shown in the diagram.

***Important:*** Make sure Ⓛ is fixed right in the middle of top front pane.

**b:**

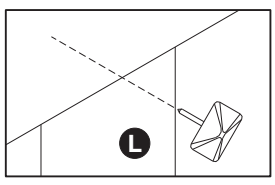

## Step **15**

**Fixing to wall.**

It is recommended that the furniture is fixed to a wall. Fix wall strap **N** to top of furniture using washer **M** and screw **B**. With help, move furniture into position.

**Lift with care.**


Mark fixing hole on wall and remove furniture. Drill hole and insert wall plug (not supplied).


***Warning:*** Before drilling check wall for hidden pipes and cables.

Reposition furniture and fix wall strap using washer **M** and suitable screw.

**Assembly is complete.**

***Note:*** Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

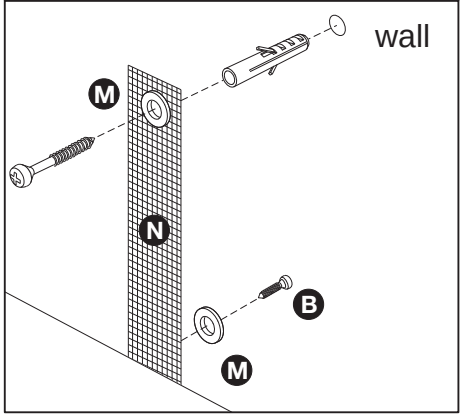

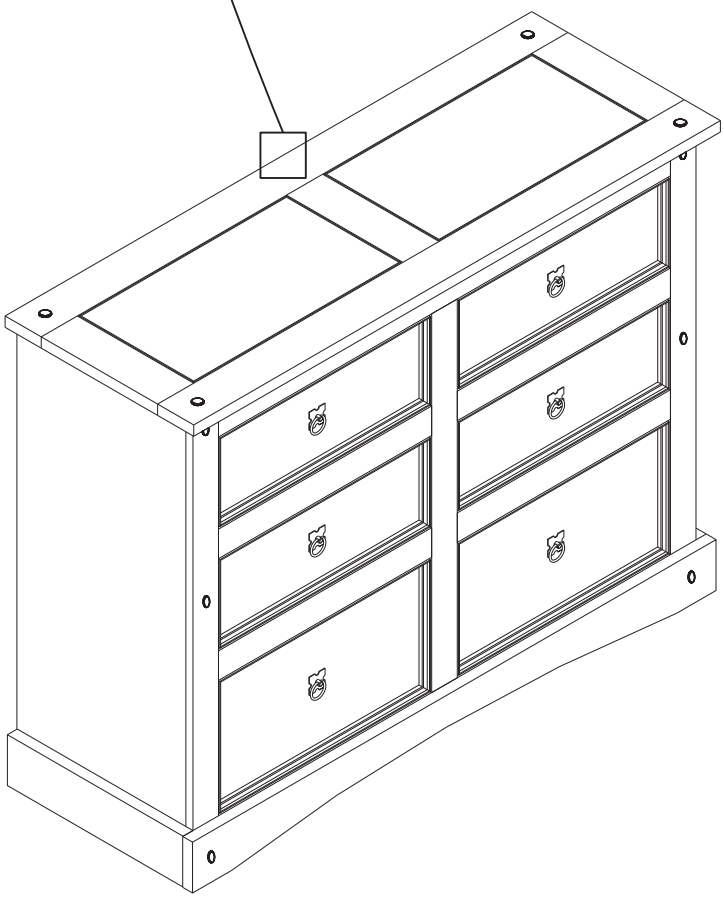If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

# A Guide to - **Wall Mounting & Fixings**

## *Important note:*

**If plastic wall plugs are supplied with your product:**



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

***Important:*** When drilling into walls always check that there are no hidden wires or pipes etc.

**Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.**


***Hints:***

**1: General rule:** Always use a larger screw and wall plug if you are not sure.
**2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
**3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
**4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
**5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

## Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

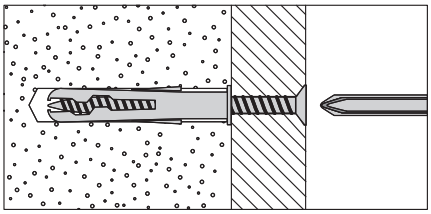


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

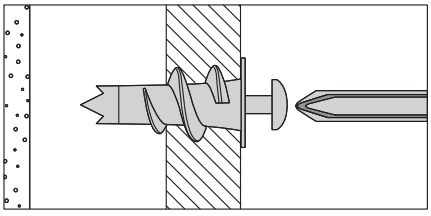


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

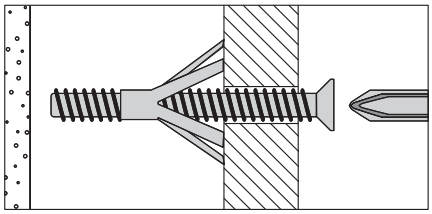


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

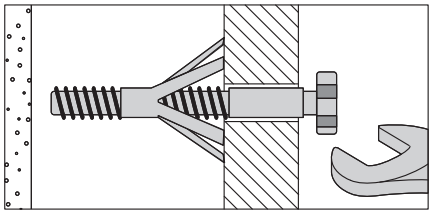


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

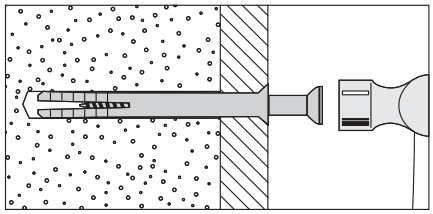

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

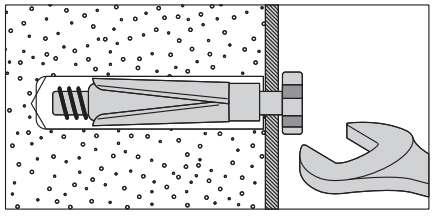

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

## Care & Maintenance

**Safety:** Always check the fitting and location to ensure your safety in and around the home.

**Fitting:** From time to time check the fitting to ensure the wall plugs or screws do not become loose.