
MALIBU

4 DRAWER 3 DOOR ROBE MK2

PRODUCT CODE : ZMB43R2

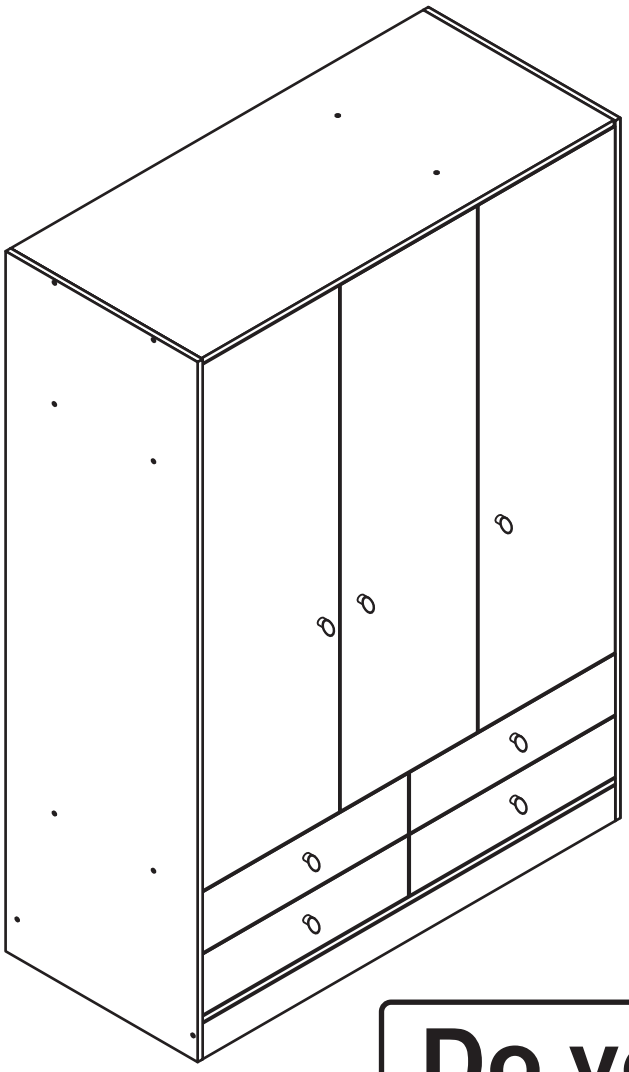

Tip: To prevent damage, we recommend that you build your unit on the carton(s) it was packed in.

MADE IN BRITAIN

Do you need help?

If you have any problems please phone us on

08456 400 800

Recycling – the packaging materials for this product may be recycled through your local recycling centre. When you want to dispose of the product itself, please consider donating it to a local charitable organisation, otherwise recycle it through your local recycling centre.


A92506


YOU WILL NEED 2 PEOPLE TO BUILD THIS UNIT

LET'S GET STARTED


FITTINGS

Use SCISSORS to open the bag of fittings and then empty the contents into a bowl so that they do not get lost!
KEEP all fittings away from young children!

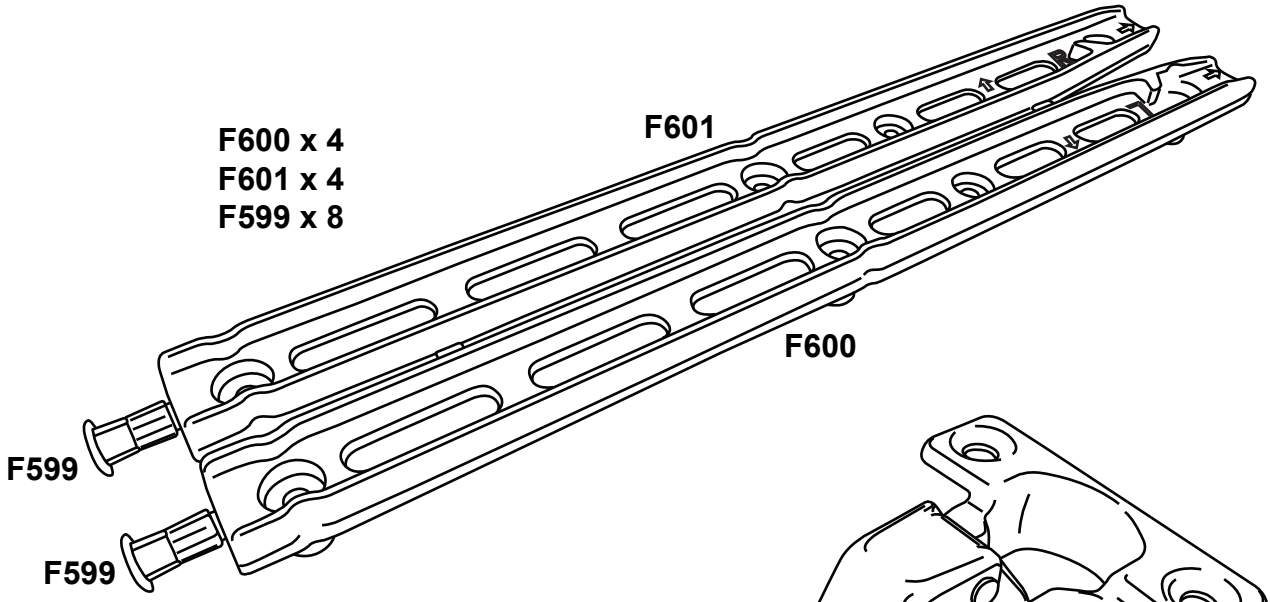


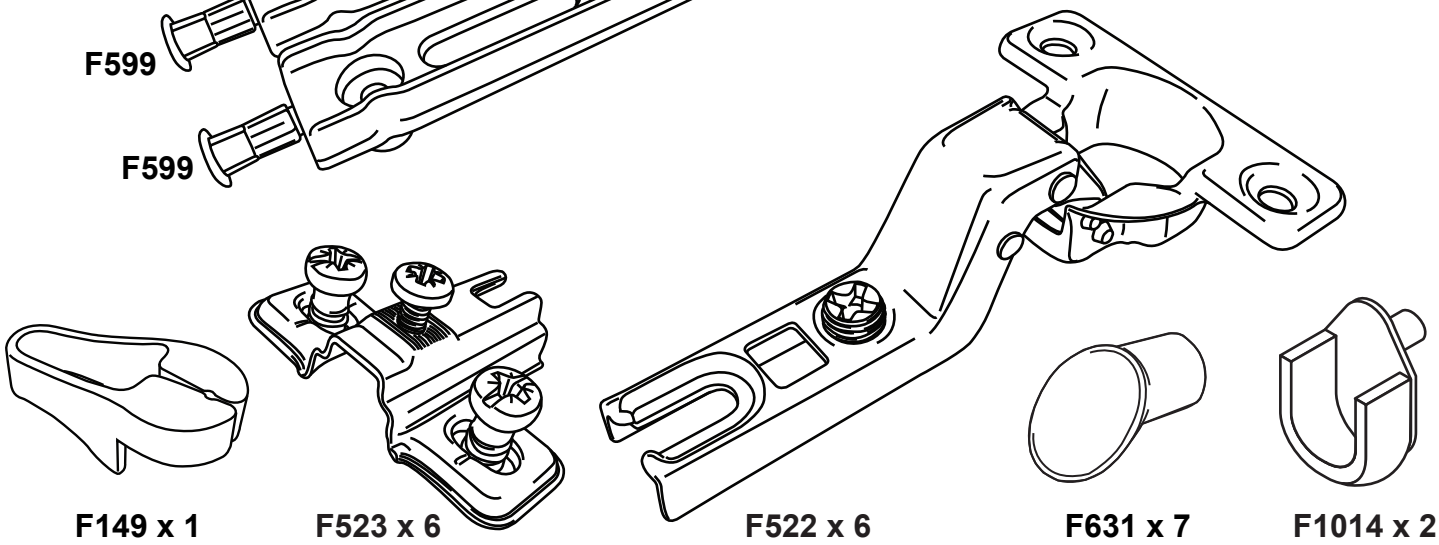

F149 x 1 F523 x 6 F522 x 6 F631 x 7 F1014 x 2

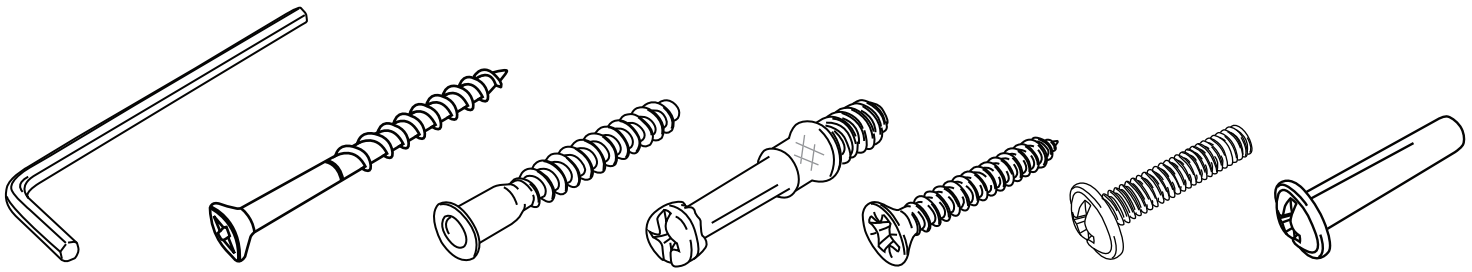


F365 x 1 F65 x 1 F197 x 23 F901 x 8 F50 x 7 F461 x 2 F432 x 2

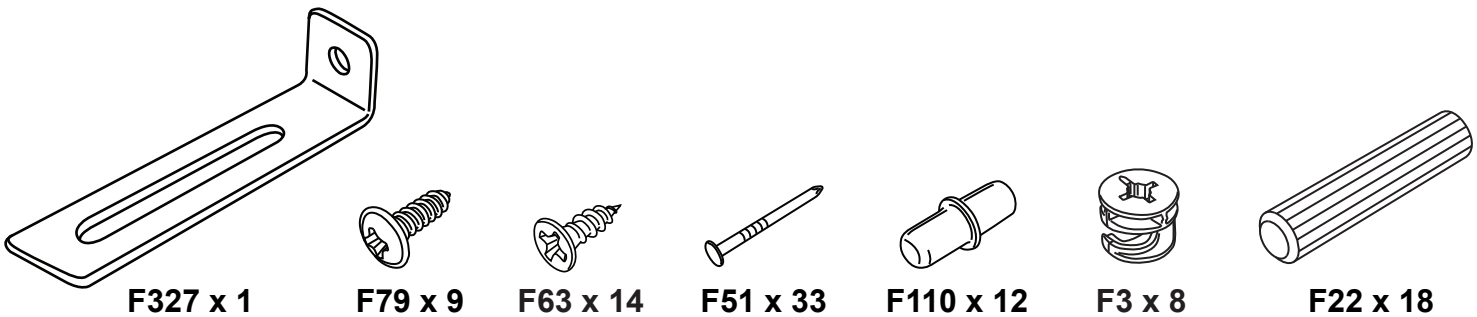

F327 x 1 F79 x 9 F63 x 14 F51 x 33 F110 x 12 F3 x 8 F22 x 18


TOOLS

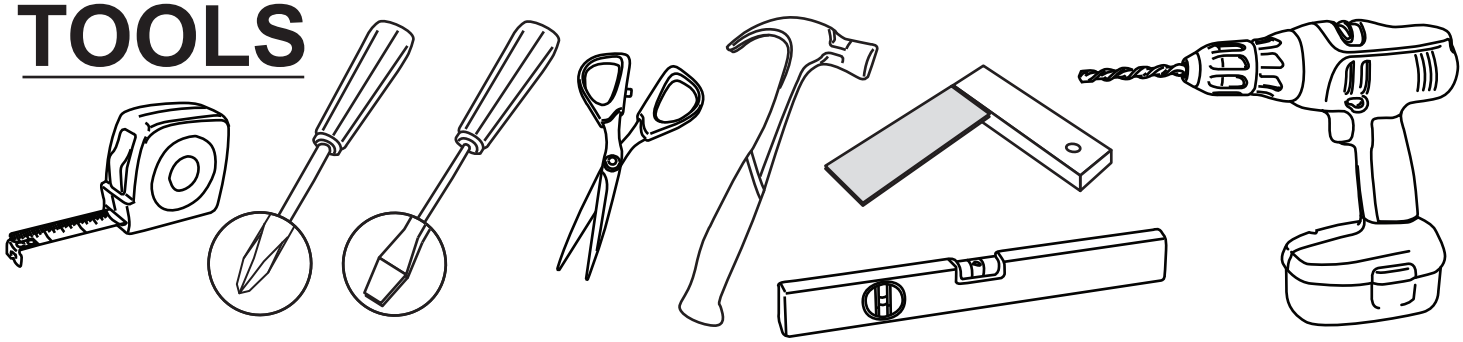


1

Tip: Make sure the Cam Pins F901 are tightened right up against the panel.

Tip: You can identify the Drawer Fronts by the how close the holes are from the edge, see below.

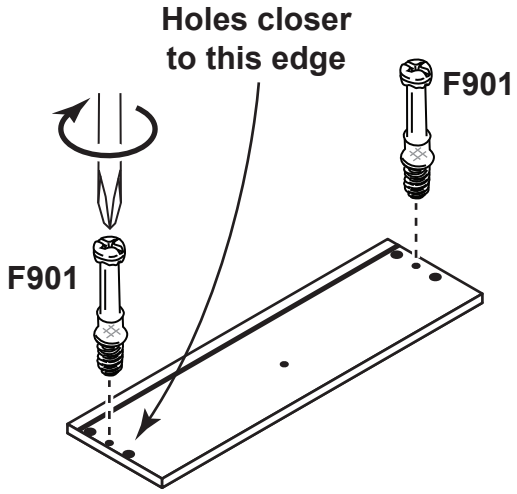


Left Drawer Front - D0157A
531 x 157mm
Packed in Box 1
x2

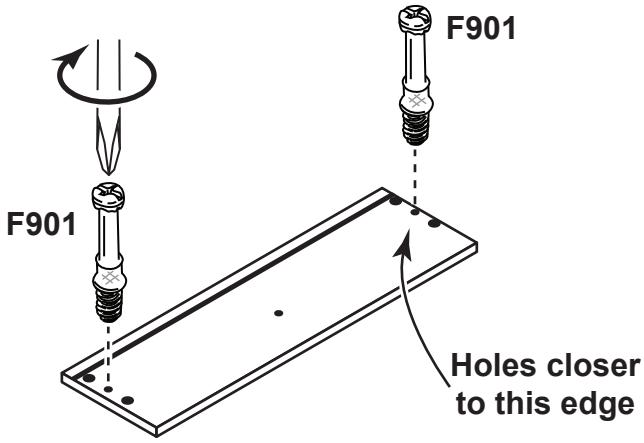

Right Drawer Front - D0158A
531 x 157mm
Packed in Box 1
x2

2


Tip: When you insert F3, make sure the 'arrow' is pointing towards hole in edge of Wrap.

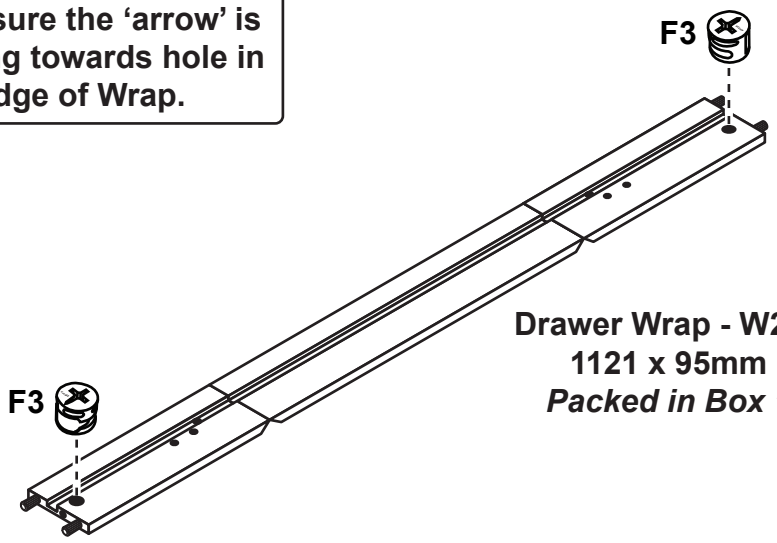


Drawer Wrap - W233
1121 x 95mm
Packed in Box 1
x4

3


Drawer Base - T233
508 x 299mm
Packed in Box 1

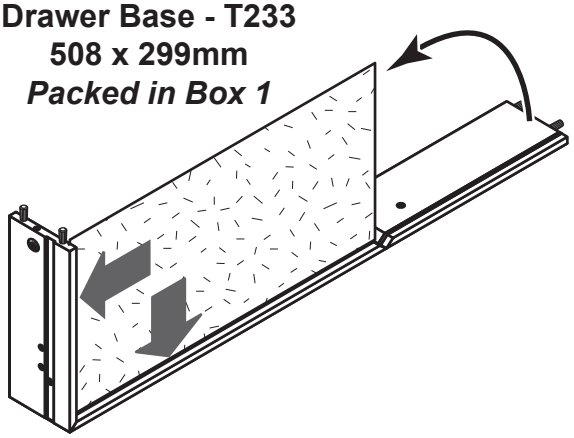

Cam Joining System.
An outline of how the system works

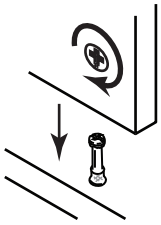


Turn the Drawer Wrap assembly over and push onto the Drawer Front. Use a Cross-head or Flat-head Screwdriver, that is a good fit, to turn the Cam as far as it will go - more than 1/2 a turn.

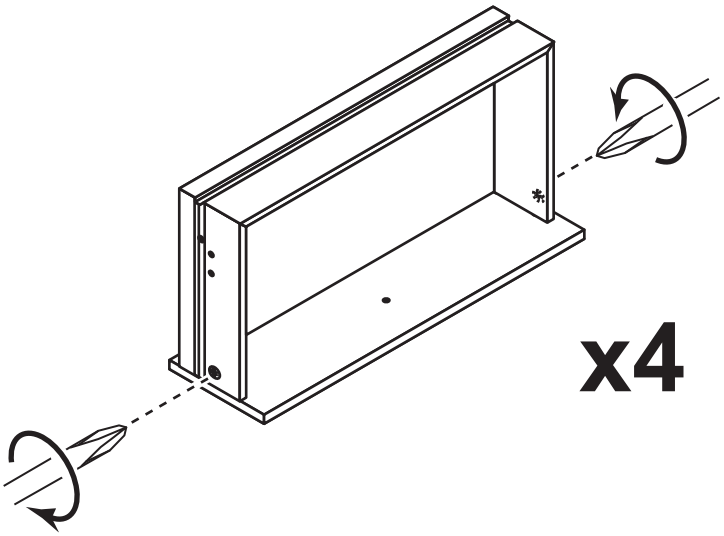

x4


4

Important: Carefully break off the 2 Drawer Stops (F599) from each pair of the Runners. Push the Drawer Stops fully through the Wraps from the inside.

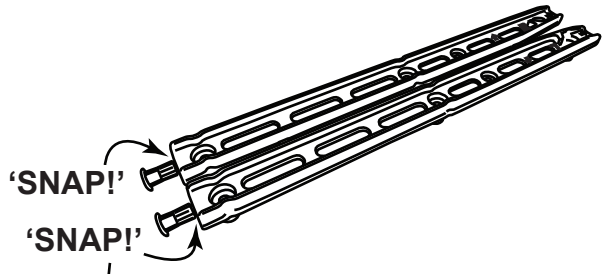


'SNAP!'

'SNAP!'

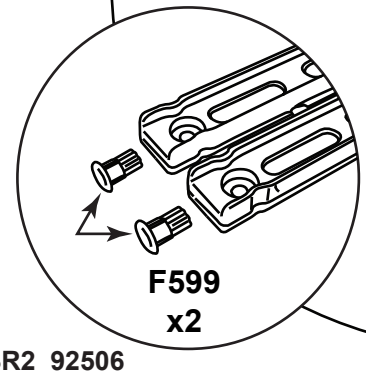

F599
x2

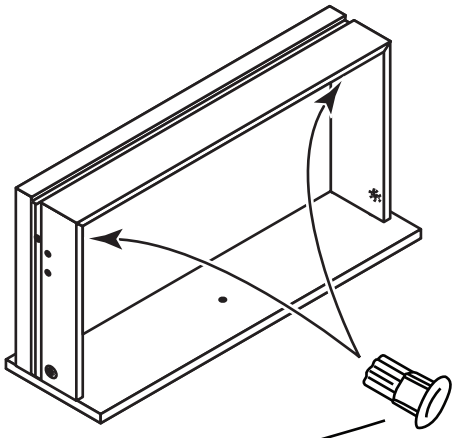


x4

F599 x 2


5


Important: When securing the handles please ensure you do not over tighten the screws.

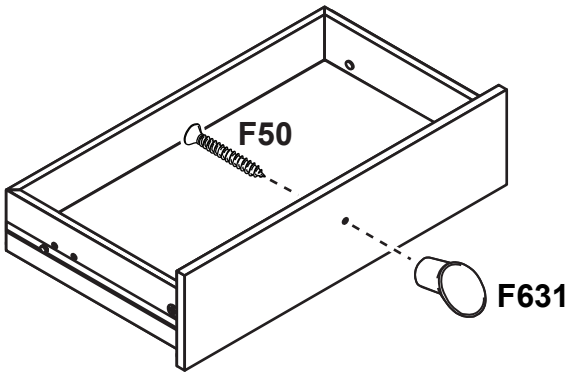


x4

6

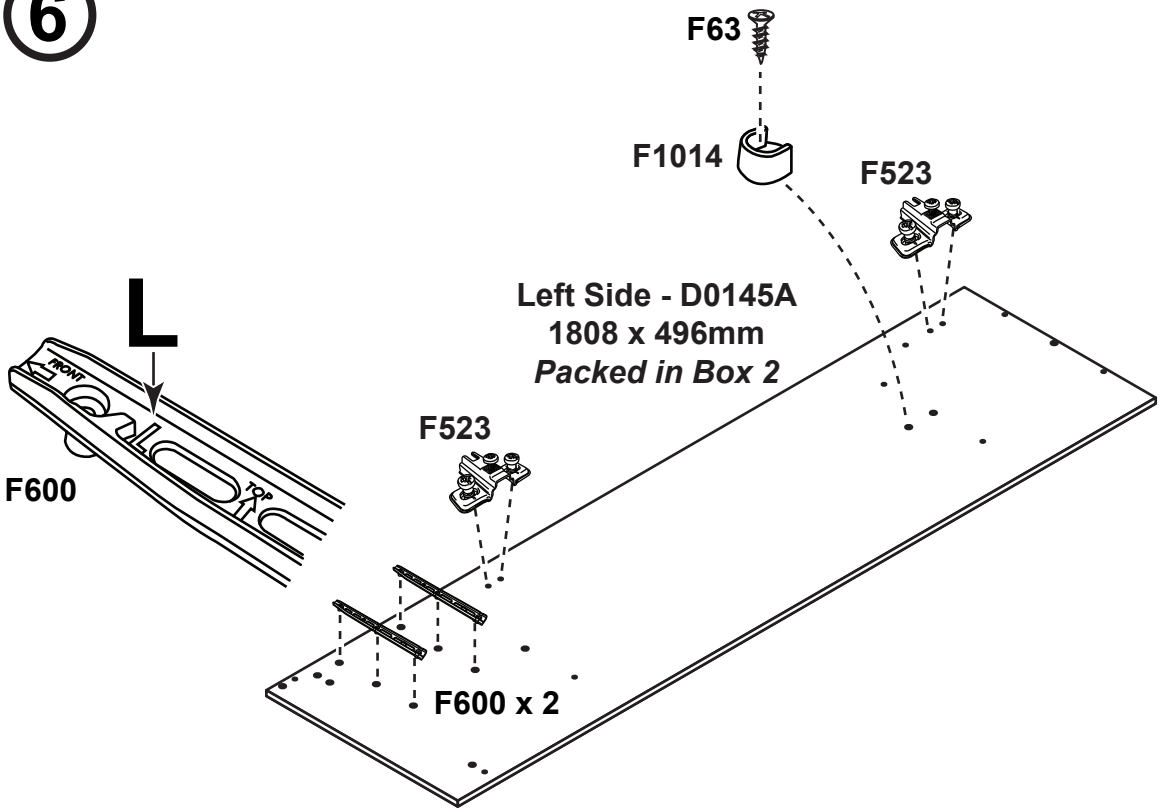


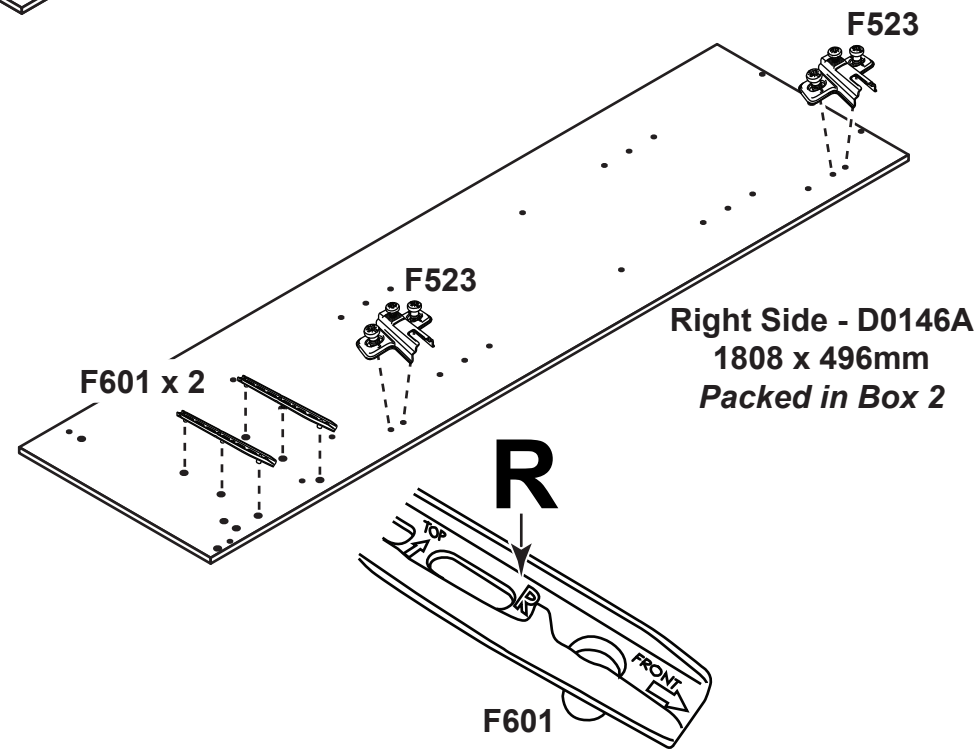


7

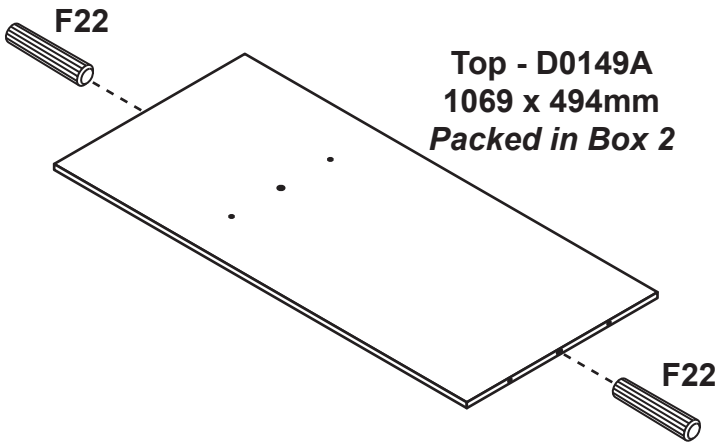
F22
Top - D0149A
1069 x 494mm
Packed in Box 2
F22


8

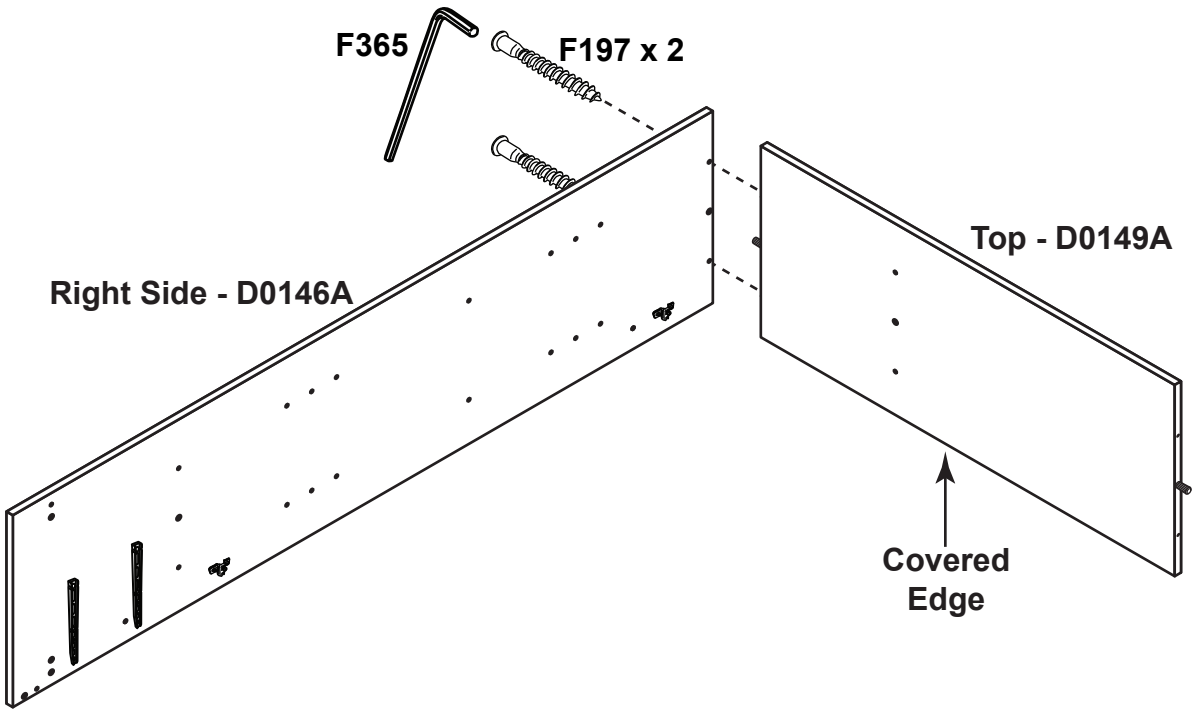
F365
F197 x 2
Top - D0149A
Right Side - D0146A
Covered
Edge


9

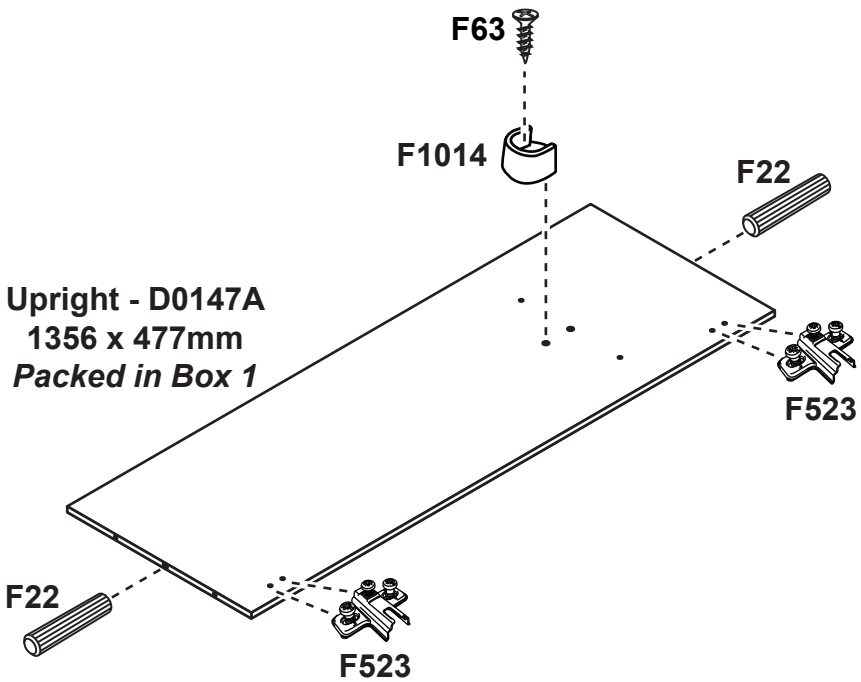

F63
F1014
F22
Upright - D0147A
1356 x 477mm
Packed in Box 1
F523
F22
F523

10

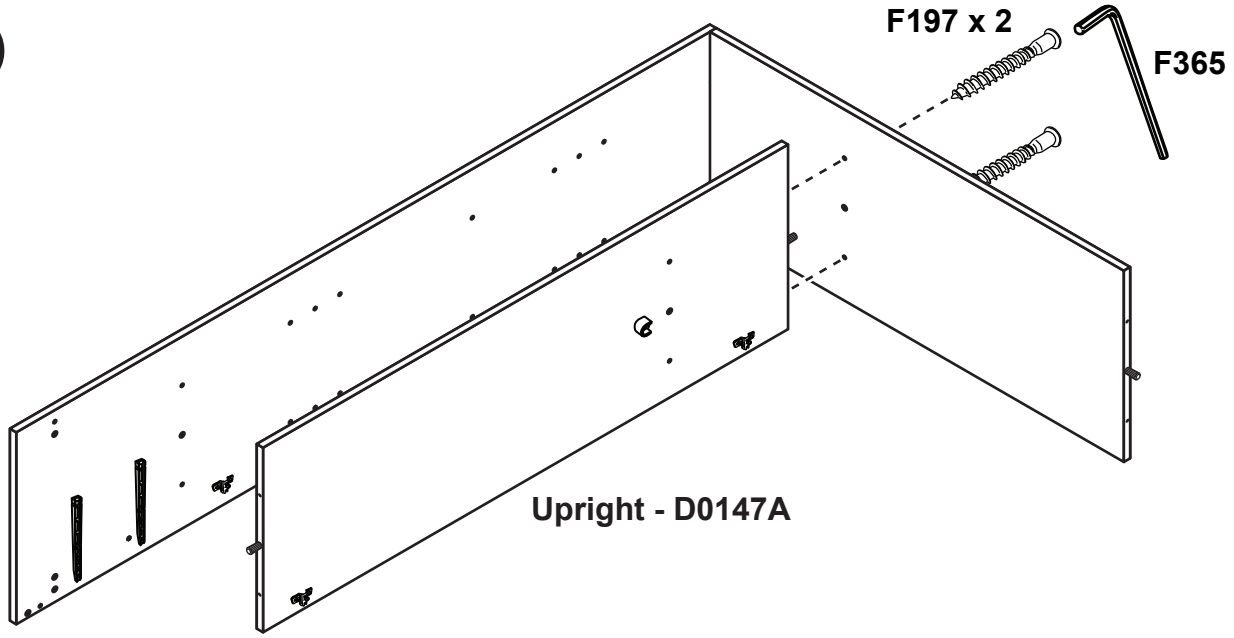

F197 x 2
F365
Upright - D0147A

11

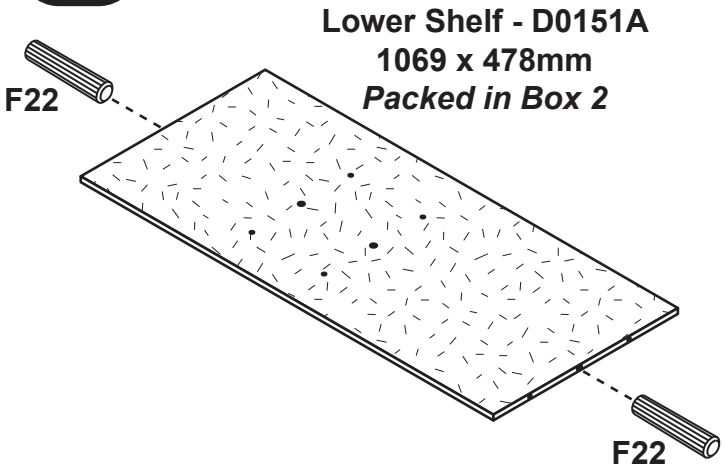
Lower Shelf - D0151A
1069 x 478mm
Packed in Box 2
F22
F22

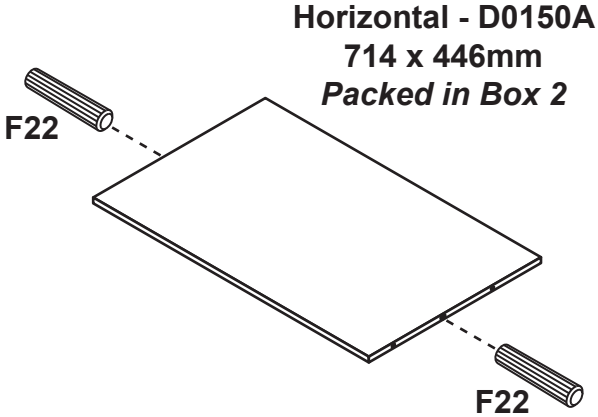
Horizontal - D0150A
714 x 446mm
Packed in Box 2
F22
F22


12

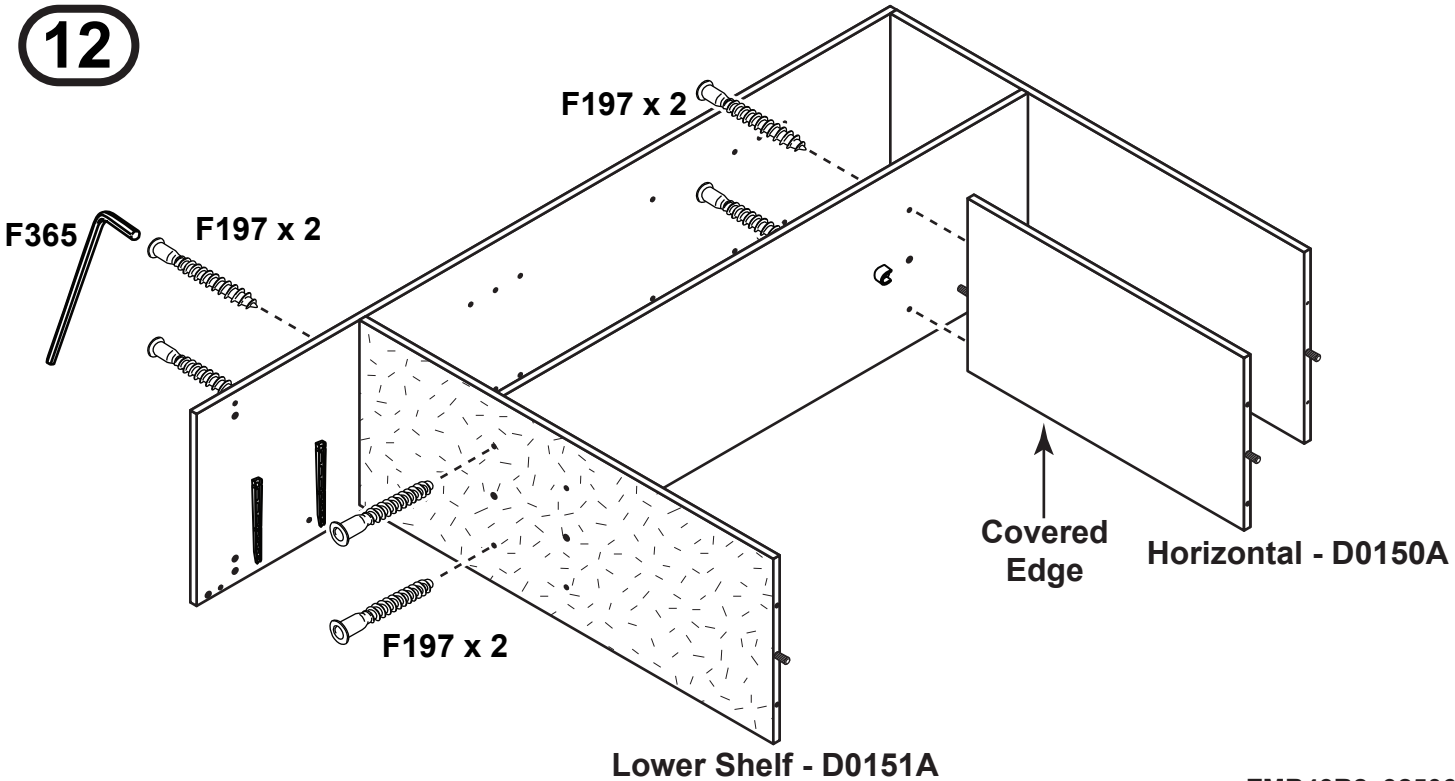
F197 x 2
F365
F197 x 2
Covered Edge
Horizontal - D0150A
F197 x 2
Lower Shelf - D0151A


13

Tip: Use the covered edges and dowel holes to identify which side to fit the correct Drawer Runner.

L

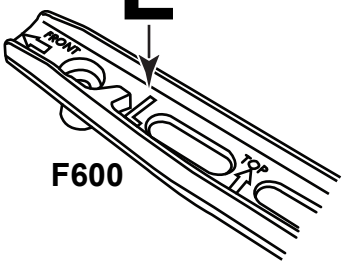



F600

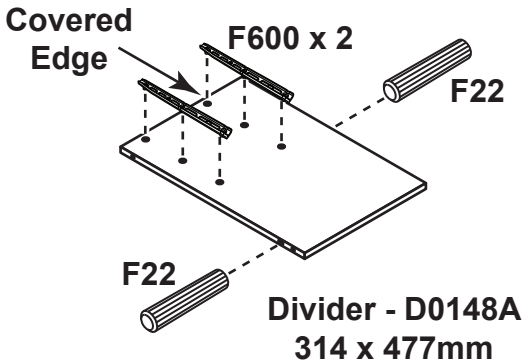


Divider - D0148A
314 x 477mm
Packed in Box 2

Turn Panel Over

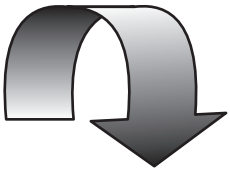

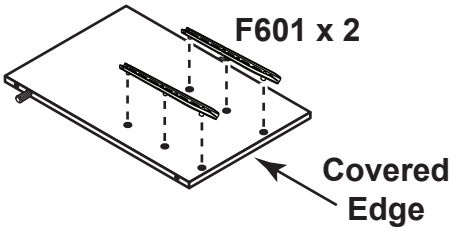


R

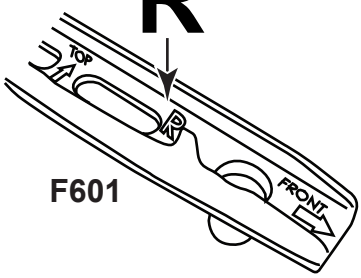

F601


14

Tip: This panel has 2 holes drilled in the middle.

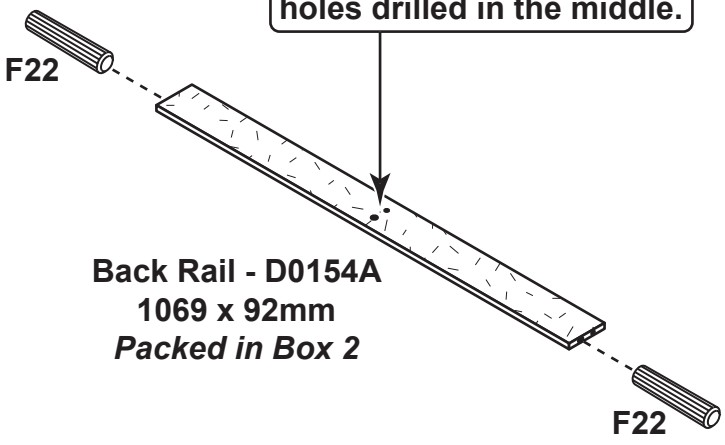


Back Rail - D0154A
1069 x 92mm
Packed in Box 2


15

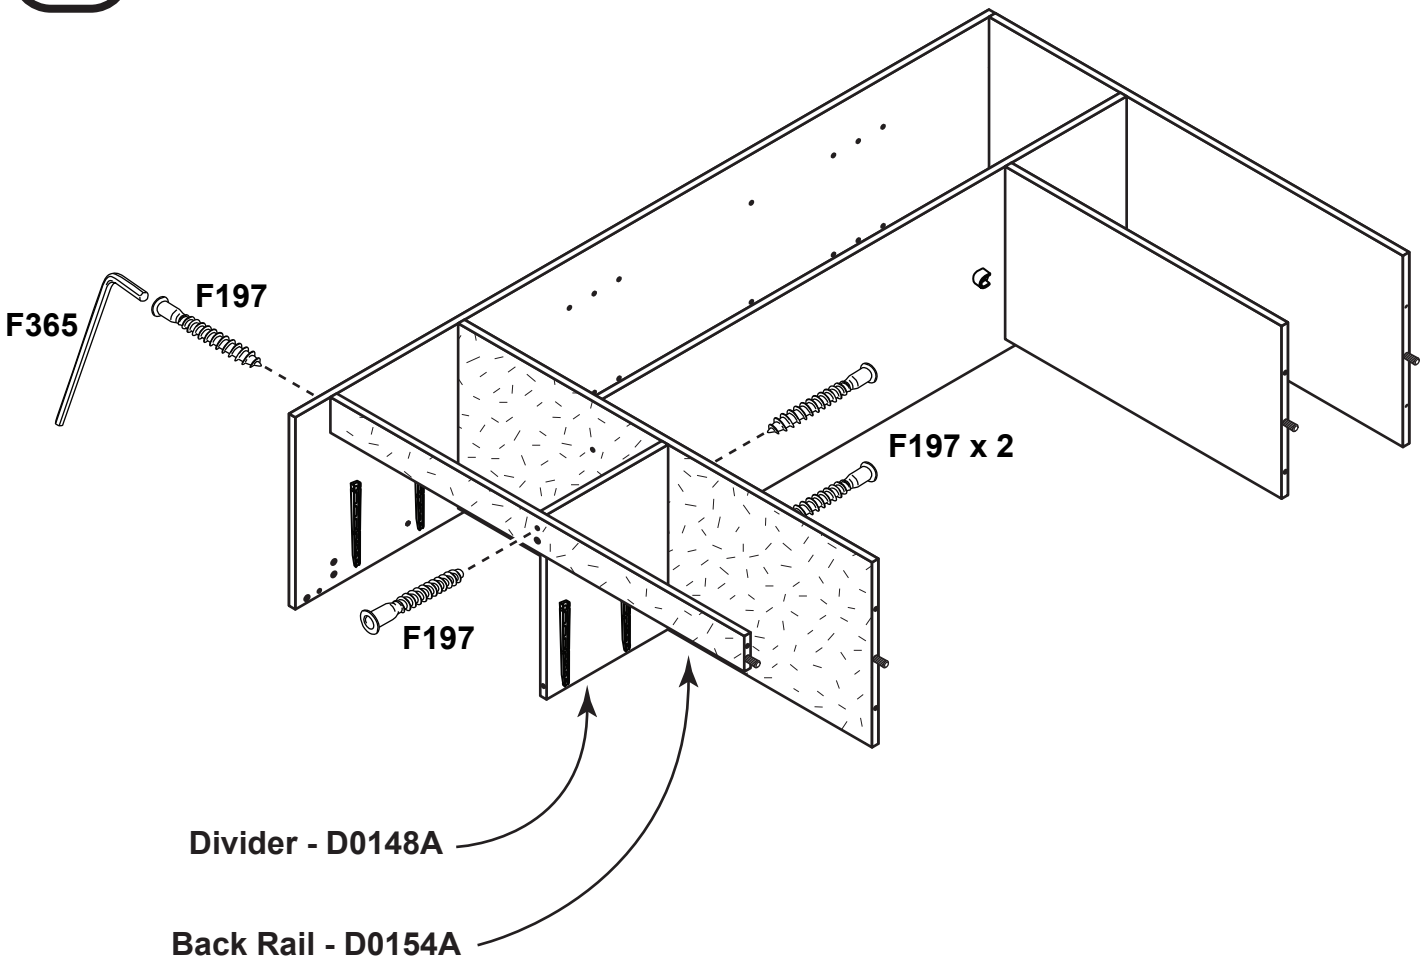
F365
F197
F197 x 2
F197
Divider - D0148A
Back Rail - D0154A


16

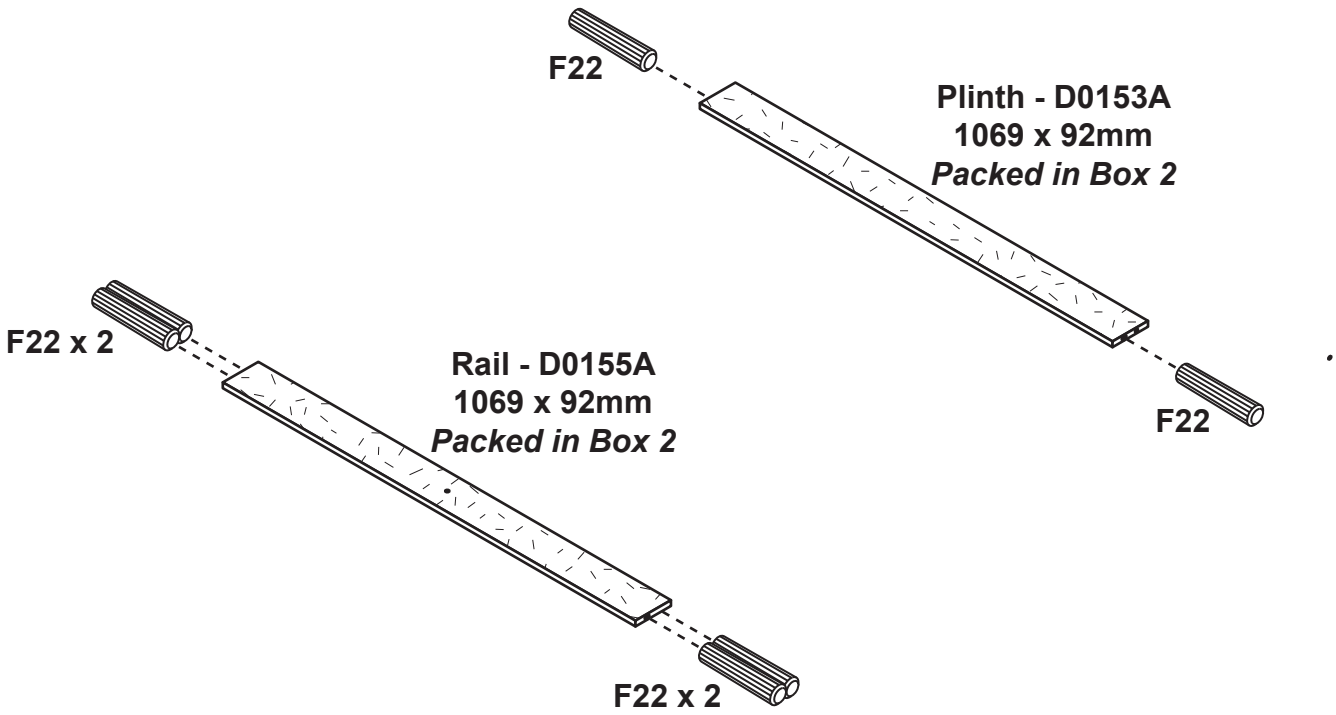
F22
Plinth - D0153A
1069 x 92mm
Packed in Box 2
F22 x 2
Rail - D0155A
1069 x 92mm
Packed in Box 2
F22
F22 x 2


17

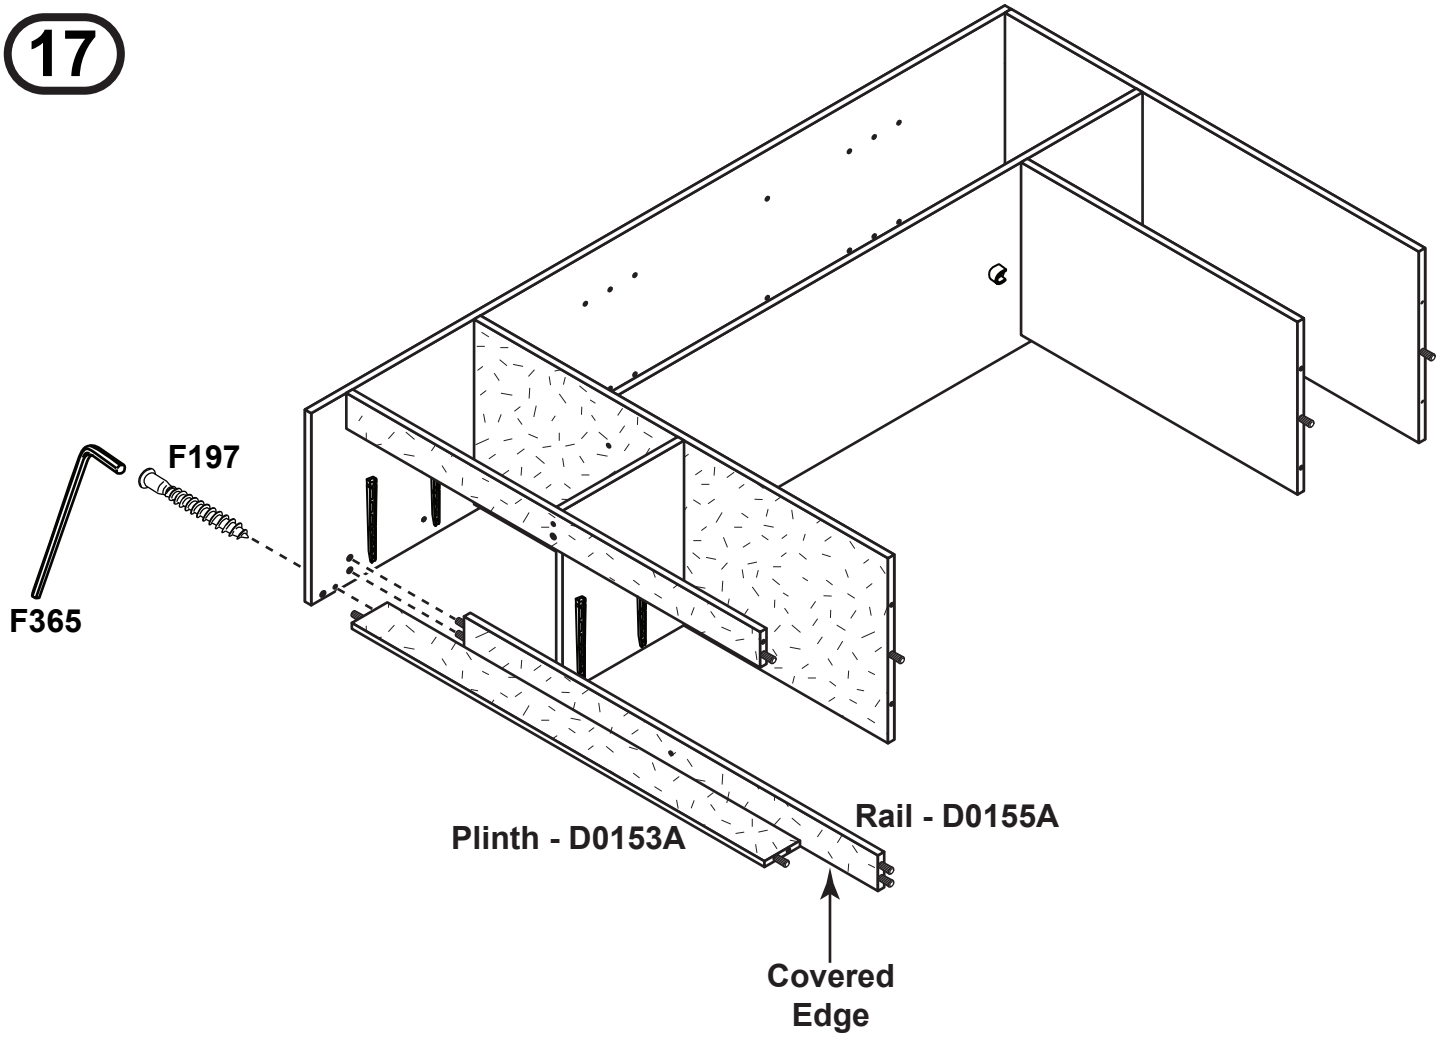
F197
F365
Plinth - D0153A
Rail - D0155A
Covered
Edge

18

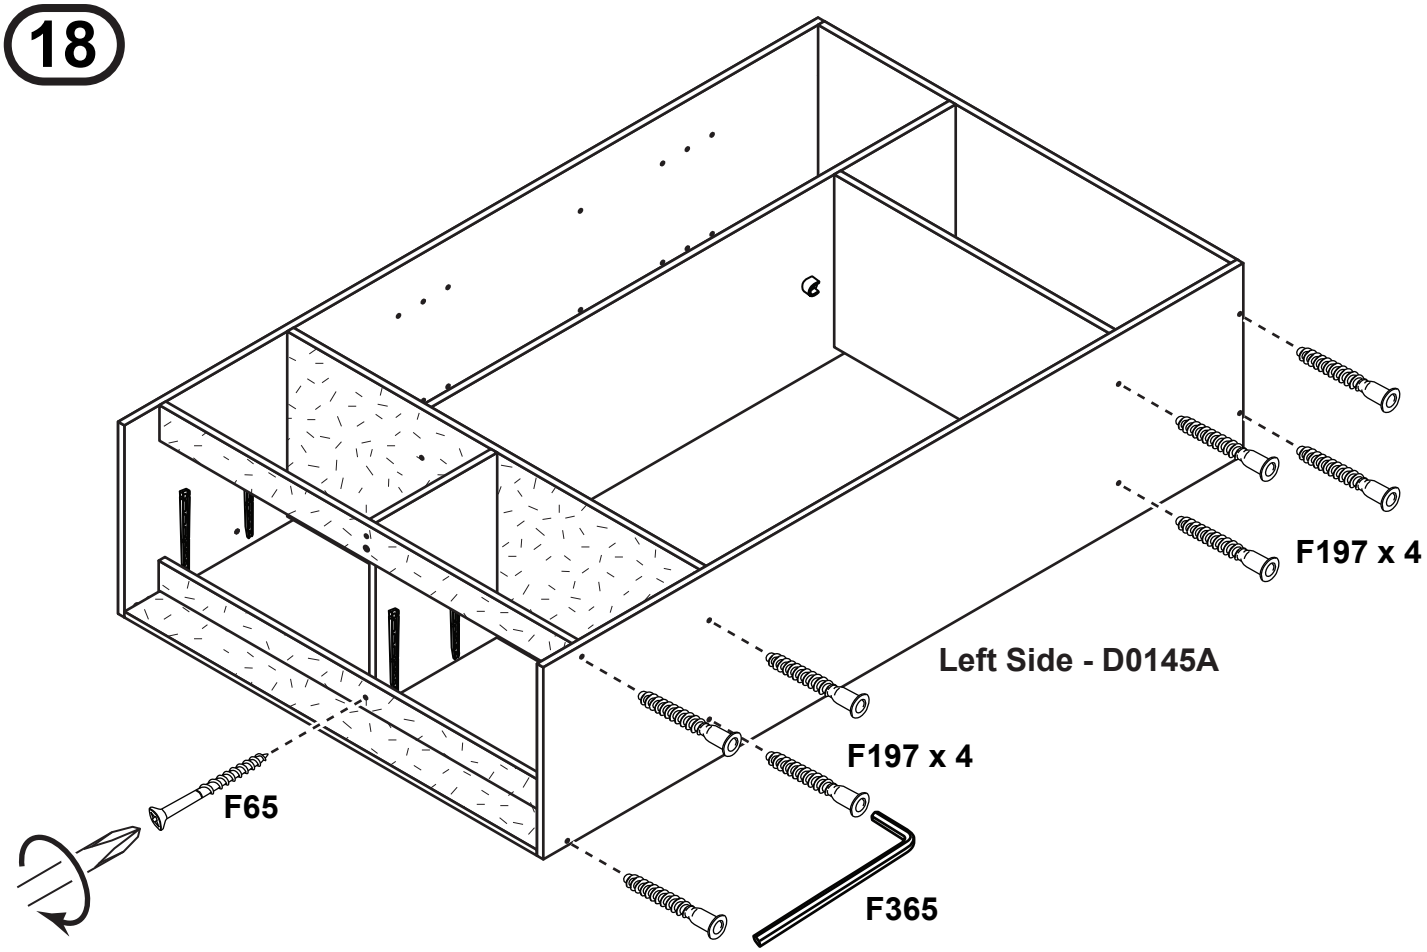
F197 x 4
Left Side - D0145A
F197 x 4
F65
F365

19

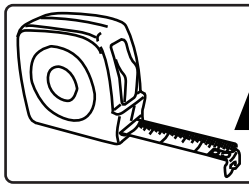

A:A = B:B✓

1 Square up the unit by making sure that measurement A:A equals B:B.


2 Place the Back and Foldy Back down onto the unit as shown, with the white surface facing the inside of the unit.


3 Make sure that the two Backs are pushed up tight against each other and that they meet in the centre of the Upright panel's edge.

4 Nail around the outside edges of the 2 Backs using the Nail Guide (see above). Nails should be about 150mm apart.


5 Using 8 x F79, screw down between the Backs and into the edge of the Upright panel.

Use the Nail Guide F149 to hold the nail vertical and at the correct distance as you secure the Foldy Back. Nails should be spaced about 150mm apart.

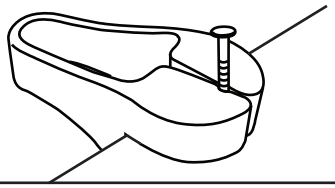


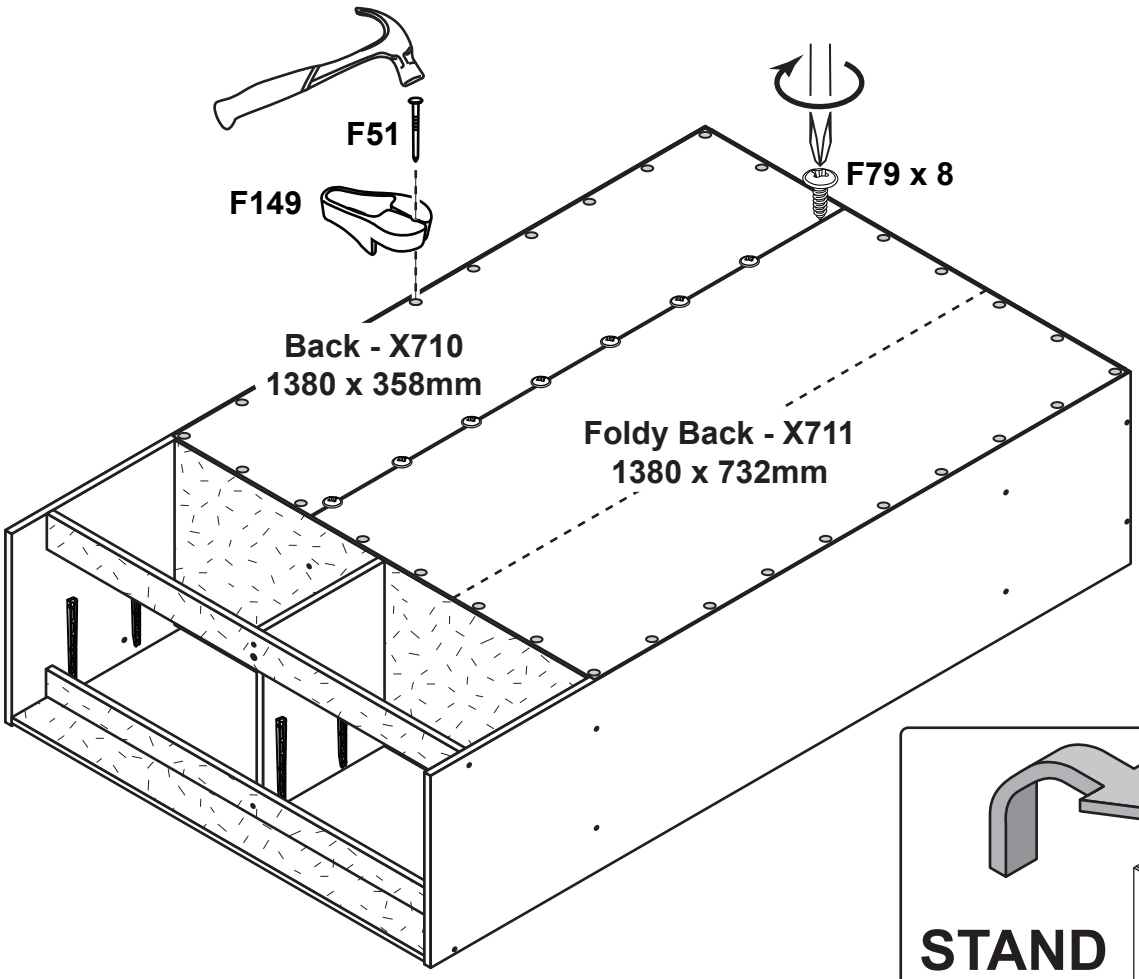

STAND THE UNIT UP!

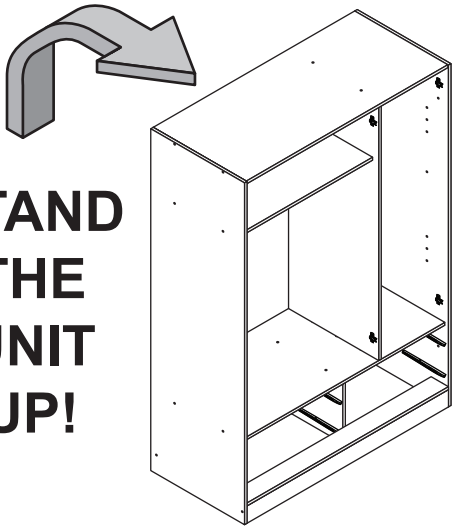

20

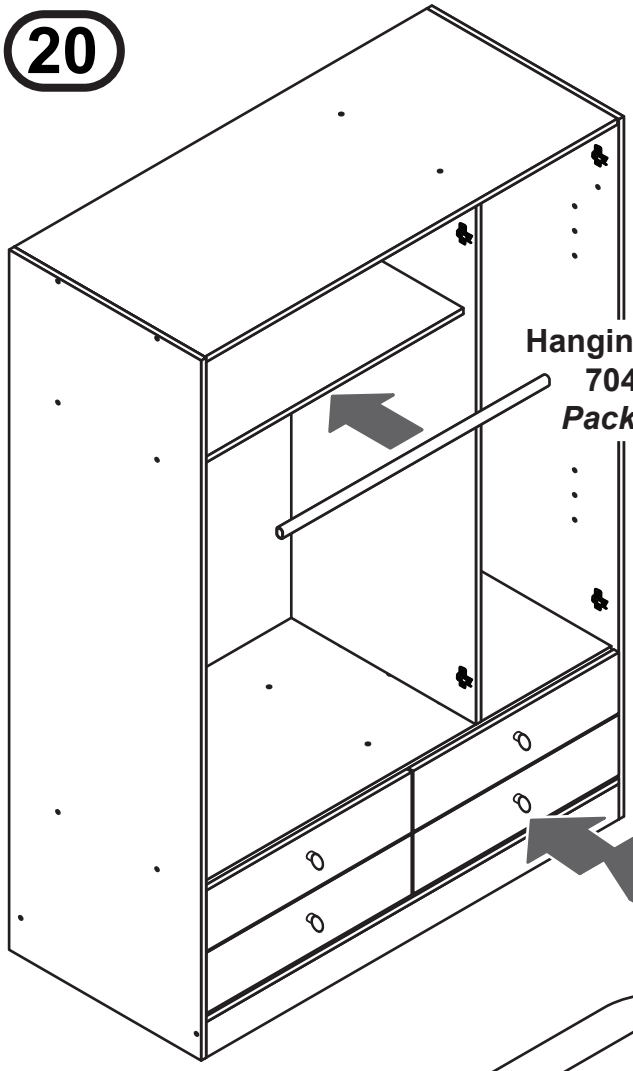


Hanging Rail - X0891
704mm Long
Packed in Box 1

Remember: You can identify the Drawer Fronts by the how close the holes are from the edge, see stage 1.

Tip: To ensure that your Drawers run smoothly, spray a small amount of Furniture Polish into the grooves.

Lift front of Drawer whilst inserting to overcome the 'stop' system.

21

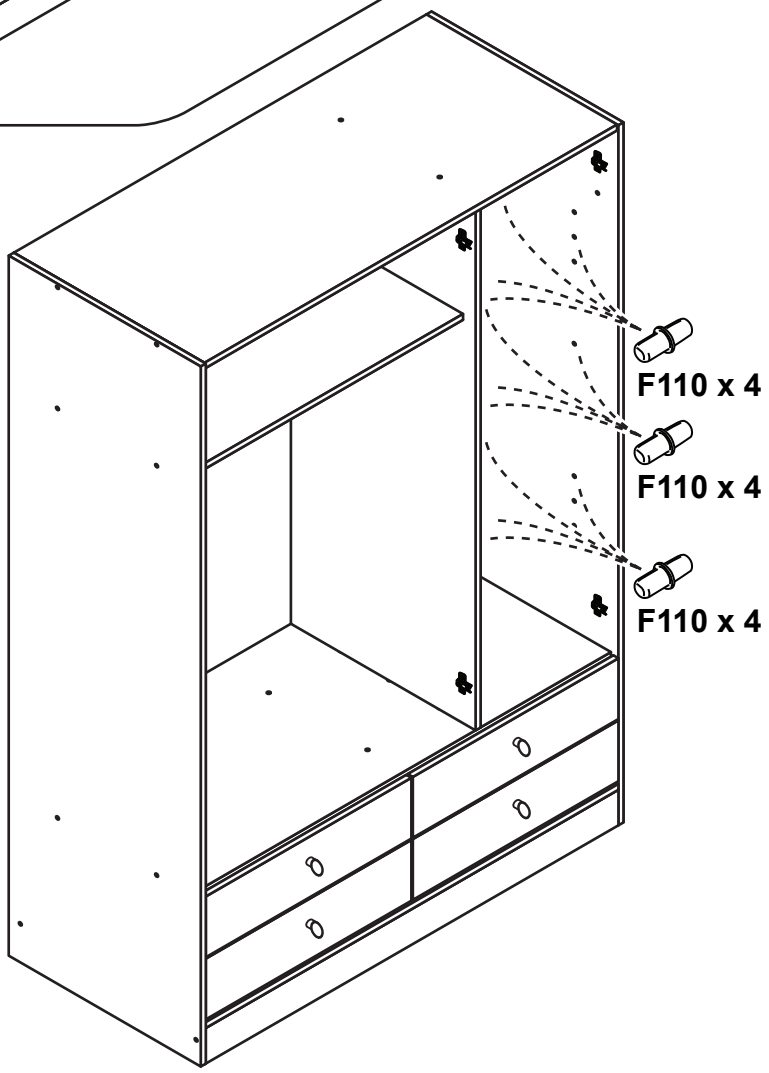


F110 x 4

F110 x 4


F110 x 4


Loose Shelf - D0152A
340 x 446mm
1 Packed in Box 2
2 Packed in Box 1

x3

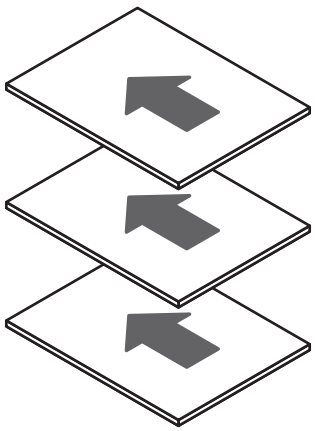

22

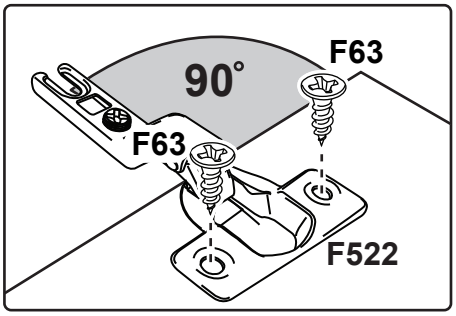

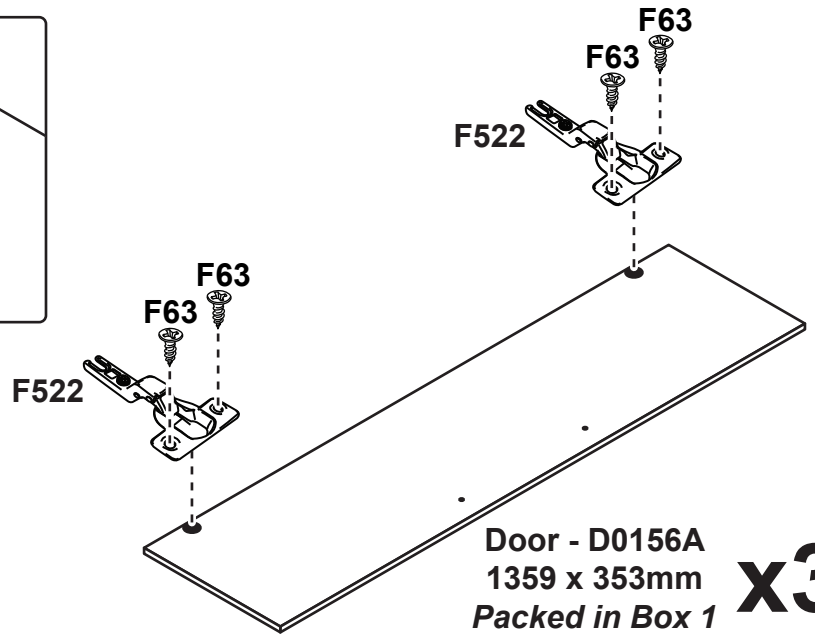

Door - D0156A
1359 x 353mm
Packed in Box 1

x3

23

IMPORTANT NOTE ABOUT DRILLING DOORS

1. Lay the Doors down onto a smooth surface.

2. You will have to drill the hole required for the Handle.
Check that the Hinges and holes are in the same place as the diagrams, below.
Using the pilot hole in the REAR FACE of the Door, drill through the hole indicated below, using a 2.5mm diameter drill.


3. From the FRONT FACE of the Door, open out the 2.5mm diameter hole by drilling back through them with a 5mm drill.

We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any break out.

ONLY drill this hole in ONE of the Doors


DO NOT drill this hole

Door - D0156A **x1**

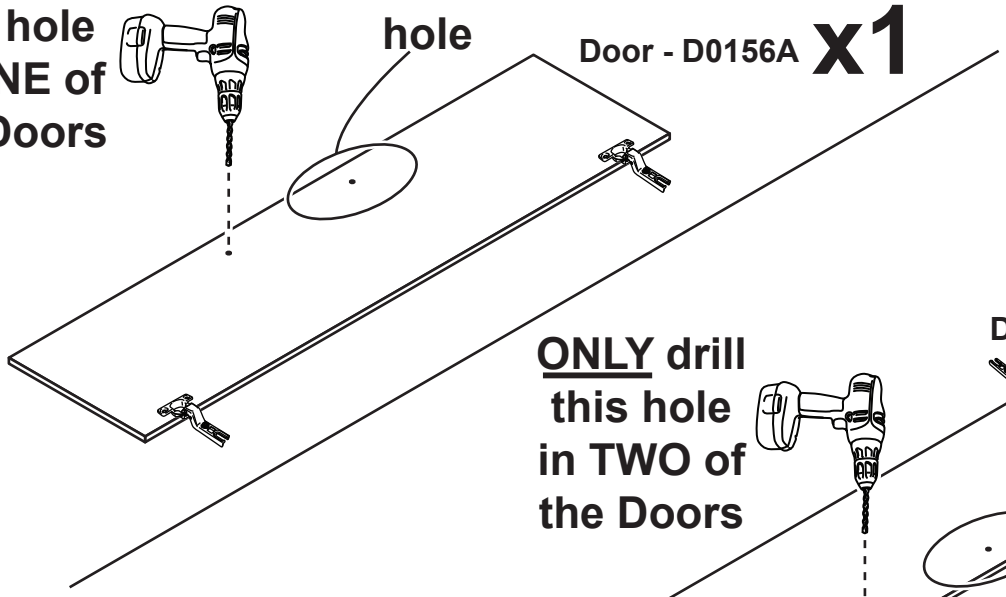

ONLY drill this hole in TWO of the Doors


Door - D0156A **x2**

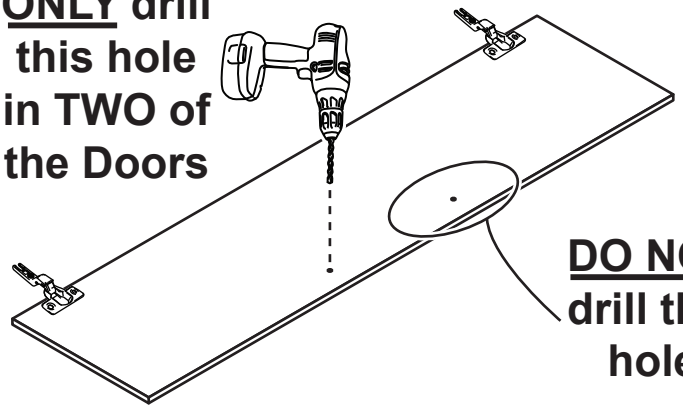


DO NOT drill this hole


24


Lower the Hinge Arm onto the front part of the Hinge Plate.

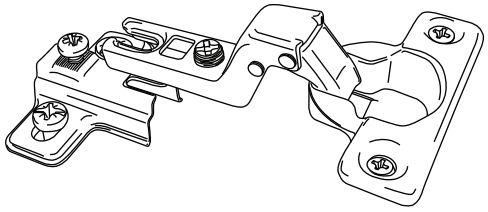

Keep the Hinge Arm FLAT against the Hinge Plate as you slide it across as far as it will go. Tighten Screw A

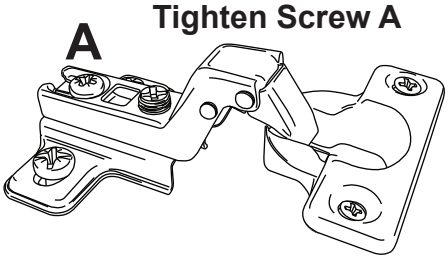

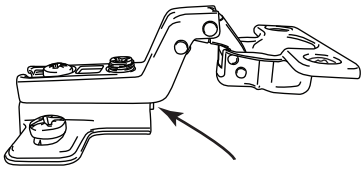

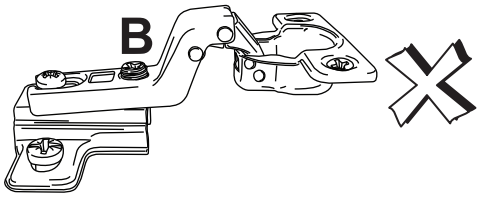

The Hinge Arm must be flat against the Hinge Plate prior to any adjustment.


!!!! WARNING !!!!

The Hinge Arm must NOT be AT AN ANGLE to the Hinge Plate when assembled!

This would indicate that the recess at the bottom of screw 'B' had not located in the slot in the Hinge Plate, and the hinge would not be secure. Remove the Hinge Arm from the Hinge Plate and then re-assemble being careful to follow the above instructions.

Important: Drilled handle holes must be near the bottom of the Doors


Tip: Using 2 people, fit the top Hinge first, then align and fit the other Hinge.

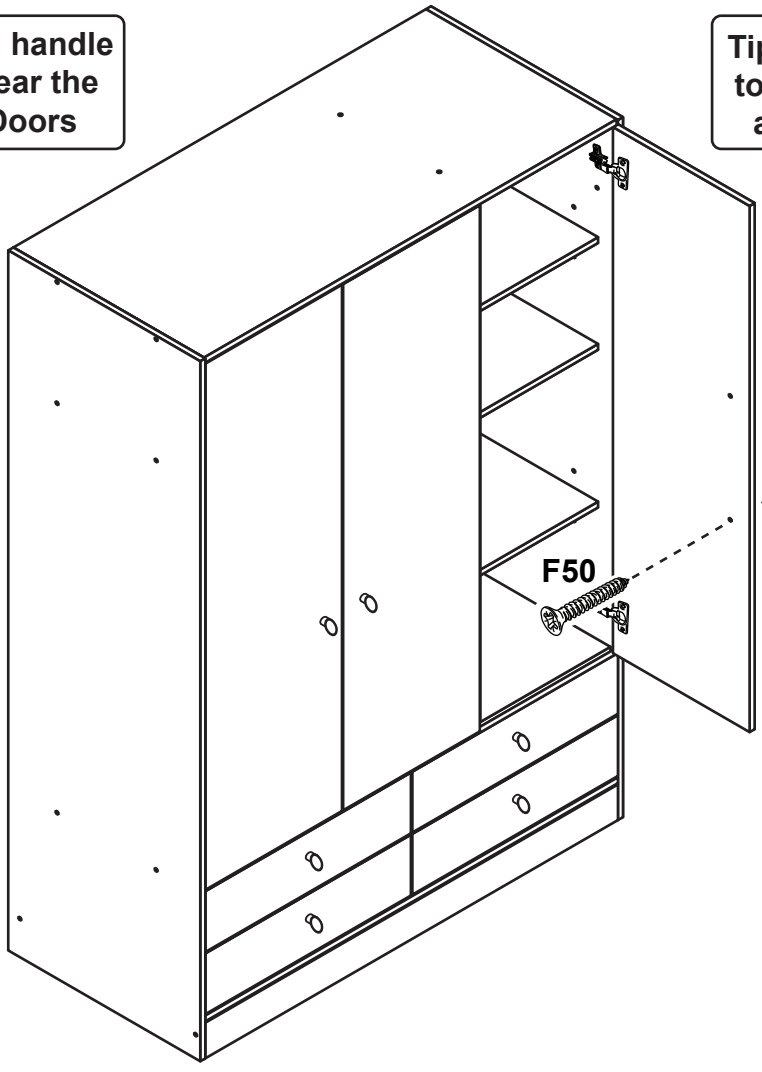


Important: When securing the handles please ensure you do not over tighten the screws.

25


DOOR ADJUSTMENT

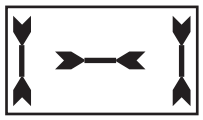


Before adjusting the Doors, use a spirit level to check the Base (or Top) of the unit is level front-to-back and side-to side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustments to the hinges, as shown).

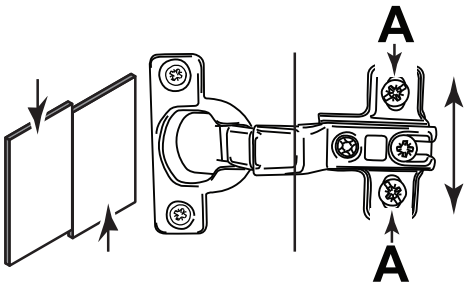

HEIGHT ADJUSTMENT
Loosen screws A on Hinge Plates and move Door up or down as required.
Retighten Screw A!

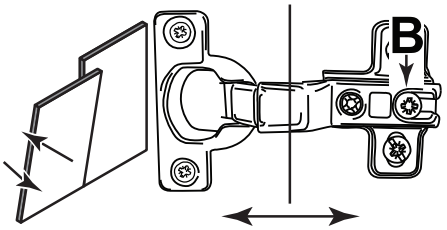

FORWARD or BACKWARDS ADJUSTMENT
Loosen screw B on Hinge Plate and move Door in or out as required.
Retighten screw B!

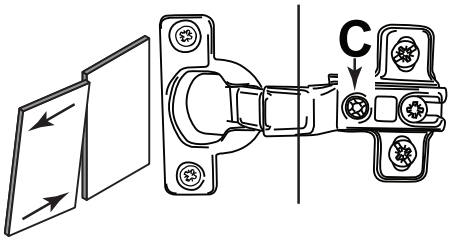

SIDEWAYS ADJUSTMENT
To move Door 'OUT' Loosen screw C!
To move Door 'IN' Tighten screw C!

26


Joining Units Together


Fittings have been supplied so you are able to join units together. Make sure your first unit is level. Push the next unit up against the first unit and ensure they are level.


Check that the ends are flush and in line then clamp together.

Drill through the 2 circled holes into the next Side panel.


Push the connectors F432 x 2 into the 2 holes (circled) and then screw bolts F461 in from the other side. Tighten with a screwdriver.

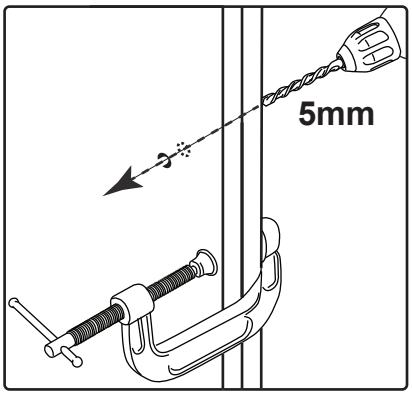


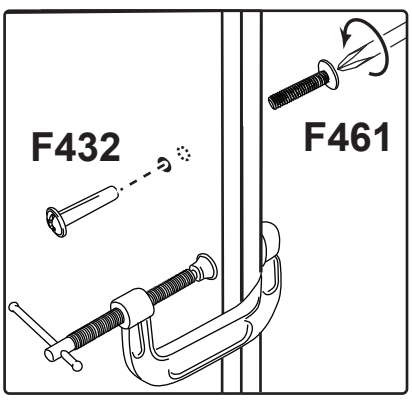


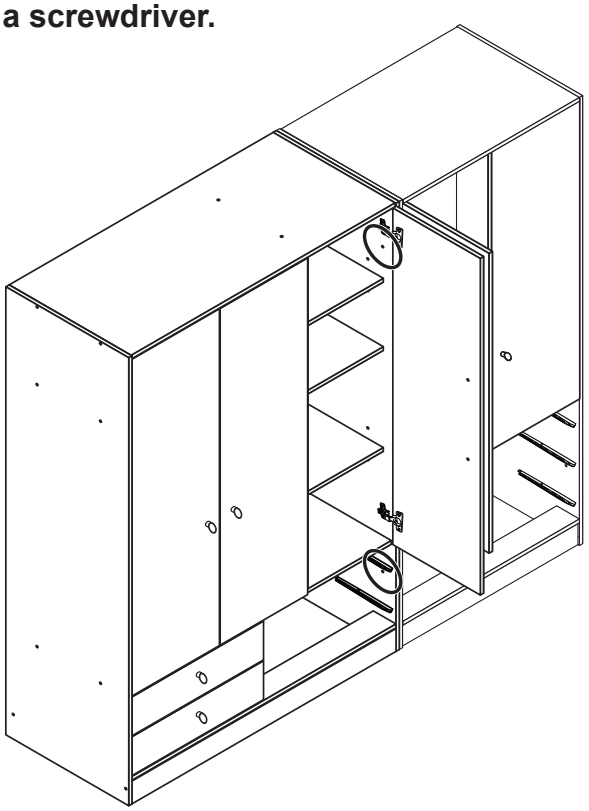

24

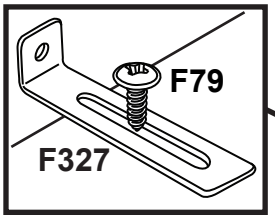

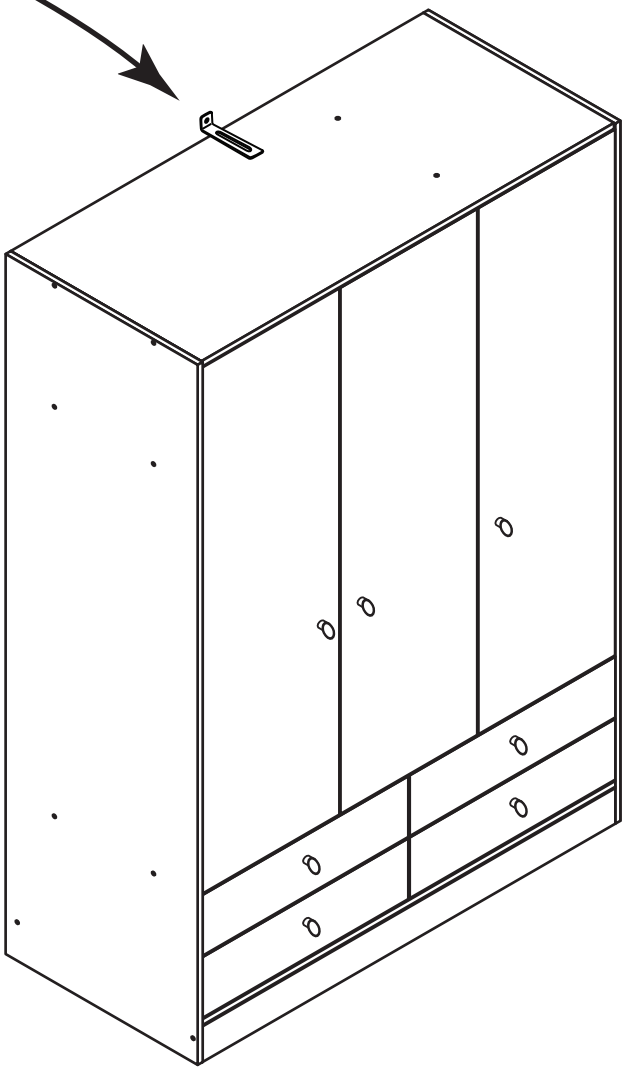

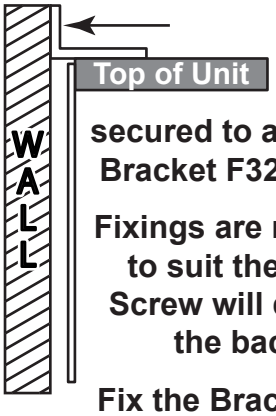

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by use of the 'L' Bracket F327 fitted to the Top of the unit.

Fixings are not supplied as they will need to suit the wall type and the length of Screw will depend on the distance from the back of the Unit to the wall.

Fix the Bracket F327 loosely onto the top of the unit using screw F79 and mark the wall for the wall fixing.

Swivel the Bracket away from the wall and drill a hole in the wall using a suitable drill bit and fit your wall fixing.

Swivel the Bracket back and fix the Bracket to the wall, then tighten Screw F79.

Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.


Well done, you have finished your Malibu 4 Drawer 3 Door Robe.
Now all you have to do is fill it with all your bits and pieces!

Take care of your unit by using a damp cloth to clean it.
Please remember to occasionally check that all Cams and Screws are tight.

Malibu - 4 Drawer 3 Door Robe

Assembly Instructions - Please keep for future reference

643/6520
643/6506
643/6537
643/6489
643/8542

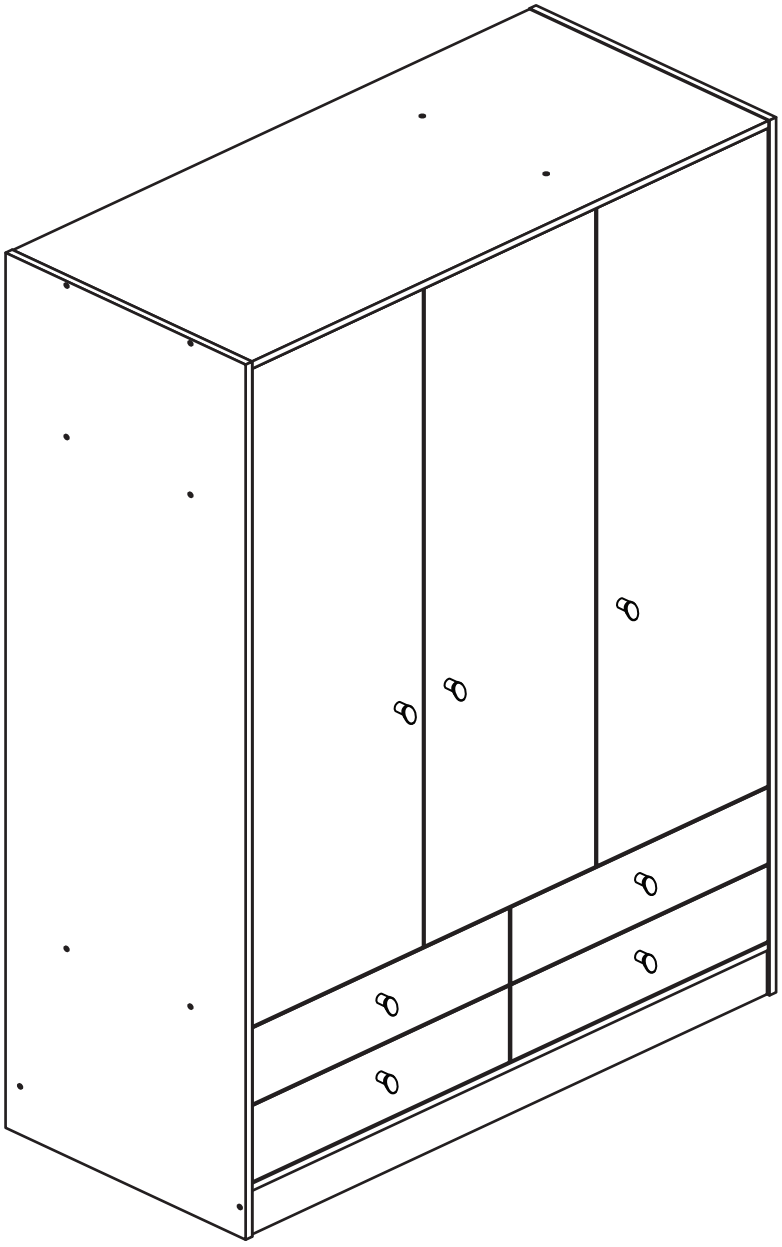

Dimensions
Width - 110cm
Depth - 50cm
Height - 181cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 21/01/10

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 79kgs. Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

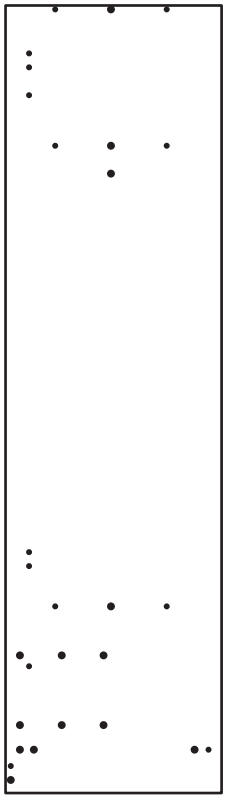


1 Left Side *(D0145A)*
(1808 x 496mm)

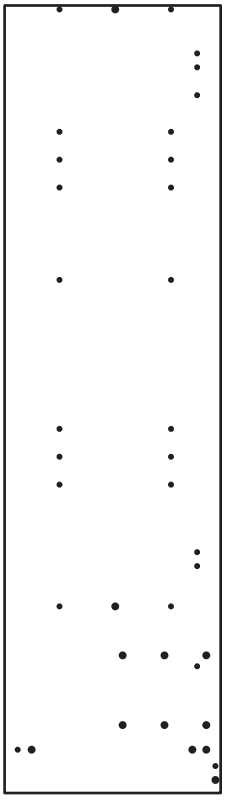


2 Right Side *(D0146A)*
(1808 x 496mm)

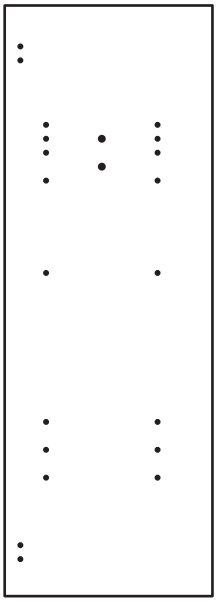


3 Upright *(D0147A)*
(1356 x 477mm)




4 Horizontal *(D0150A)*
(714 x 446mm)

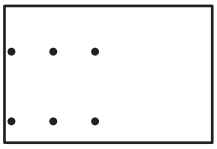


5 Divider *(D0148A)*
(314 x 477mm)

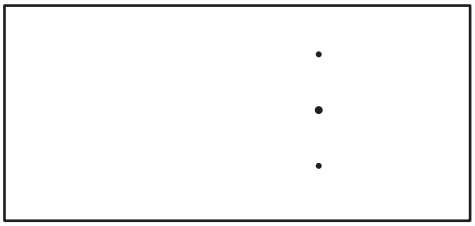


6 Top *(D0149A)*
(1069 x 494mm)

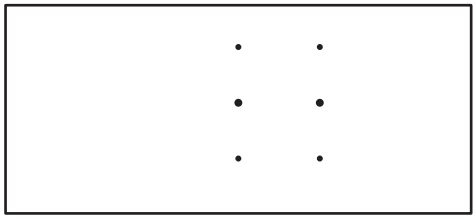


7 Lower Shelf *(D0151A)*
(1069 x 478mm)



8 Left Drawer Front *(D0157A)*
(531 x 157mm) x 2



9 Right Drawer Front *(D0158A)*
(531 x 157mm) x 2



10 Drawer Wrap *(W233)*
(1121 x 95mm) x 4

11 Hanging Rail *(X0891)*
(704mm long)



12 Loose Shelf *(D0152A)*
(340 x 446mm) x 3




13 Drawer Base *(T233)*
(508 x 299mm) x 4



14 Back Rail *(D0154A)*
(1069 x 92mm)




15 Rail *(D0155A)*
(1069 x 92mm)




16 Plinth *(D0153A)*
(1069 x 92mm)



17 Door *(DO156A)*
(1359 x 353mm)
x 3

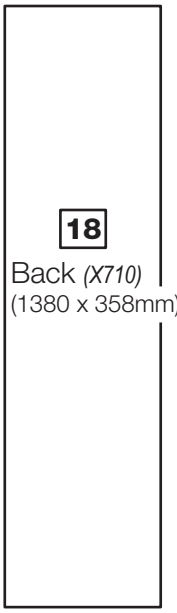

18 Back *(X710)*
(1380 x 358mm)

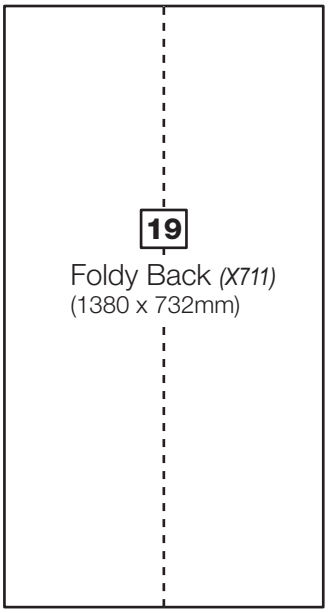


19 Foldy Back *(X711)*
(1380 x 732mm)


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 
Wooden dowel *(F22)* x 18


B 
Metal dowel *(F901)* x 8

C 
40mm Screw *(F910)* x 23

D 
Nail *(F51)* x 33

E 
45mm Screw *(F65)* x 1


F 
Small locking nut *(F3)* x 8


G 
Shelf stud *(F110)* x 12

H 
25mm Screw *(F50)* x 7

I 
Handle *(F631)* x 7


J 
19mm Connecting bolt *(F461)* x 2

K 
25mm Connecting sleeve *(F432)* x 2

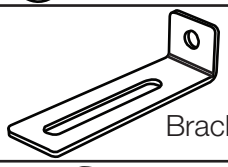
L 
Bracket *(F327)* x 1


M 
13mm Screw *(F79)* x 9


N 
13mm Screw *(F63)* x 14

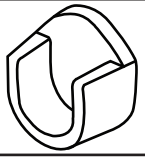O 
Rail holder *(F1014)* x 2

P 
Nail holder *(F149)* x 1

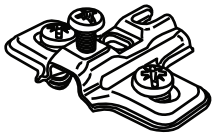
Q 
Hinge plate *(F523)* x 6

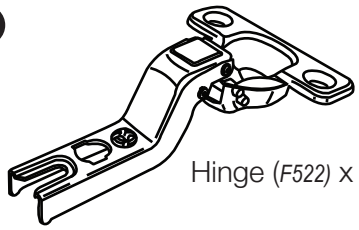
R 
Hinge *(F522)* x 6

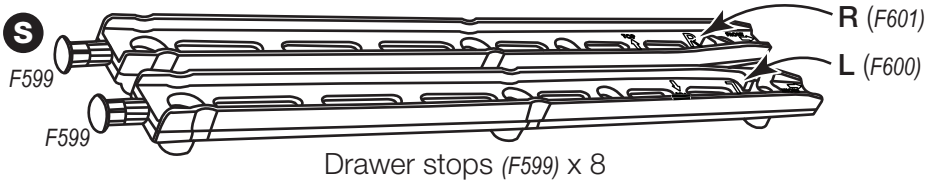S 


Drawer stops *(F599)* x 8
Runners *(F600)* x 4 *and (F601)* x 4

Tools required

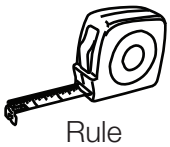
Rule


Spirit level


Eye protection (when using a hammer or drill)


Cross-head screwdriver



Electric drill


Step ladder



Square


Scissors


Hammer


Bradawl

Ruler - Use this ruler to help correctly identify the screws

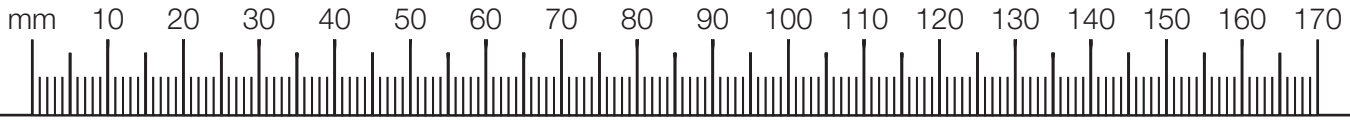

Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Step 1

Prepare 4 drawer fronts and wraps

Note: The right drawer front 9 has a small identification hole.


a: Screw 2 metal dowels B into the holes on the back of the drawer fronts 8 and 9.

Note: Tighten metal dowels up fully against the panels.

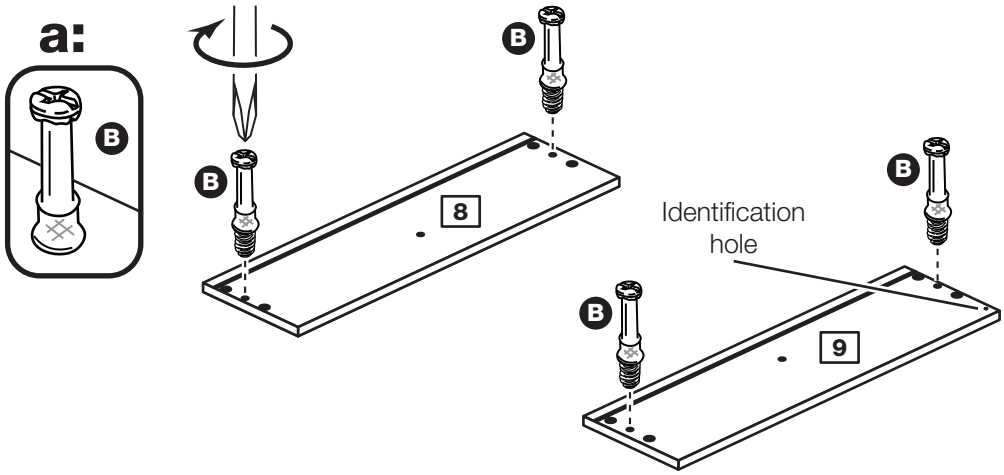

b: Insert 2 small locking nuts F into the holes shown on the drawer wrap 10.


Note: Arrow on locking nut **must** point towards hole in edge of panel.

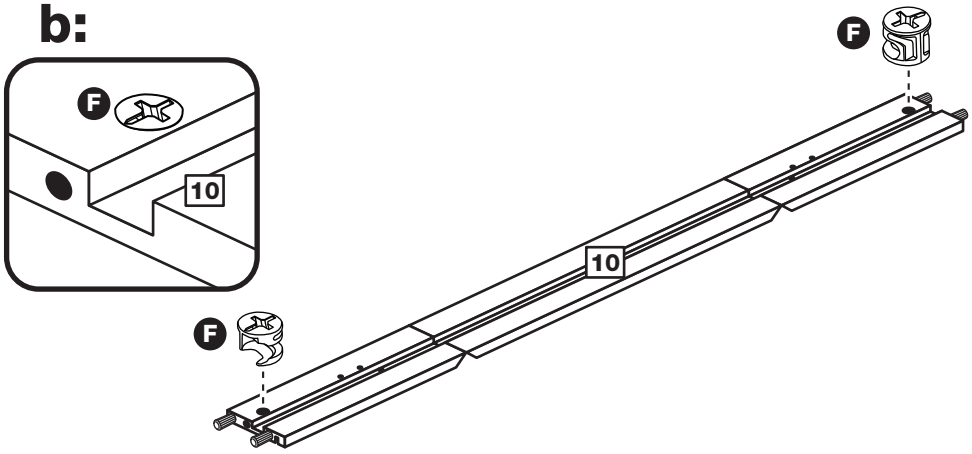

Step 2


Assemble the drawers

a: Place drawer base 13 into the narrow slot on the drawer wrap 10. Fold wrap around the base.

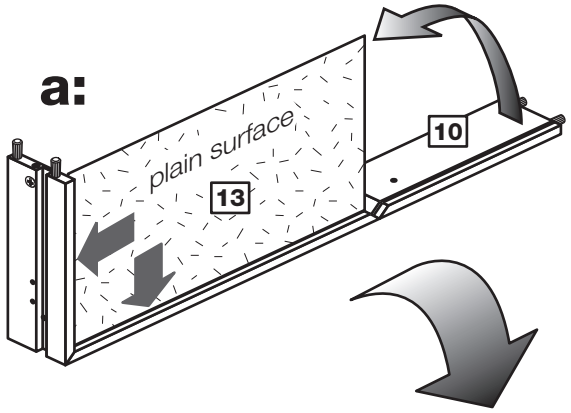

b: Turn drawer wrap assembly over and push onto the back of the drawer fronts 8 and 9.

Turn locking nuts F clockwise to secure panels - more than 1/2 a turn.

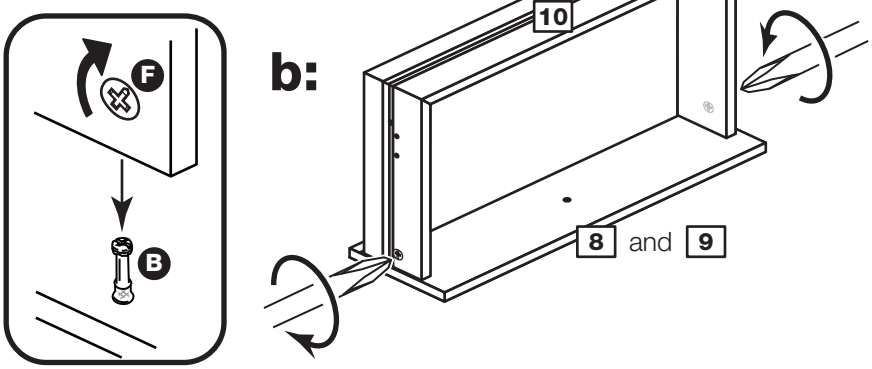


Step 3

Fit the drawer stops

Carefully break off the 2 drawer stops *(F599)* from each pair of the drawer runners **S**.

Push the drawer stops fully through the drawer wraps **10** from the inside.

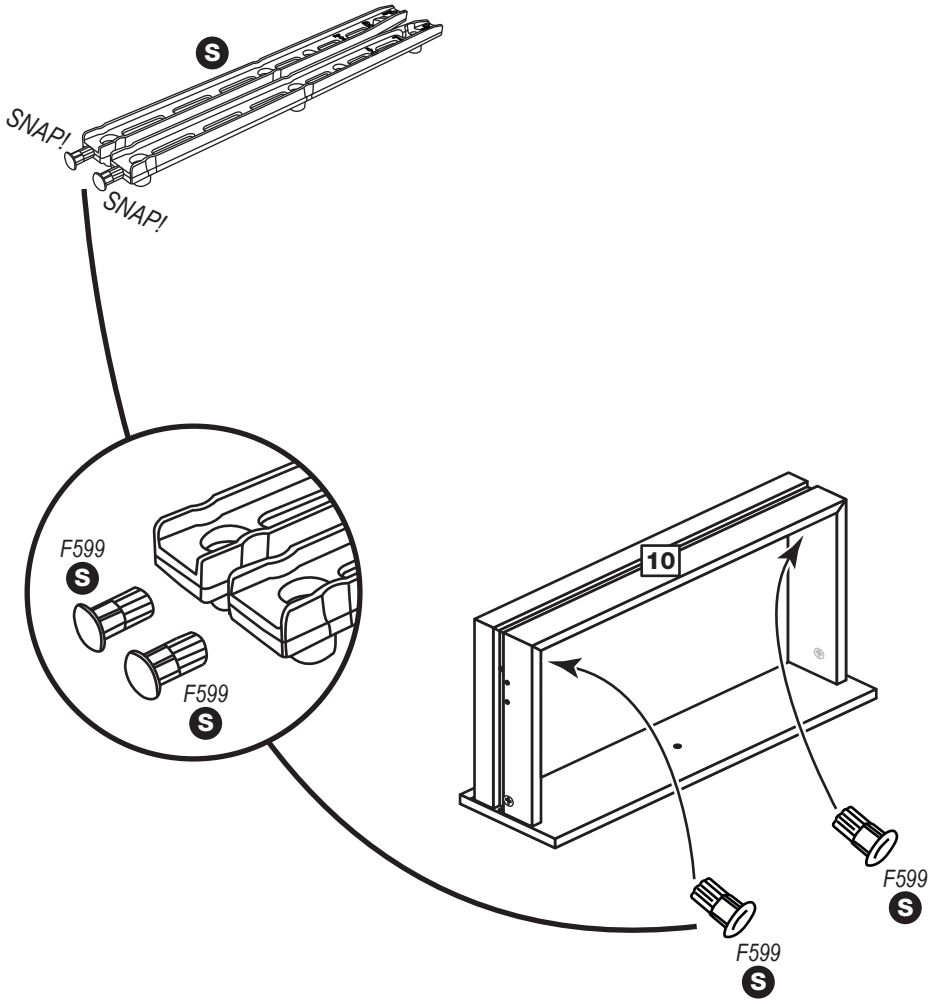


Step 4

Attach the handles

Attach a handle **I** to each drawer front **8** and **9** using screw **H**.

Note: Do not overtighten the screw.

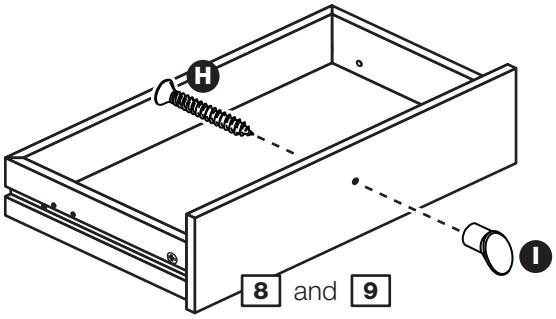

Assembly Instructions

Step 5

Prepare the left and right side

Separate runners (S).

a: Push fit 2 left runners (S) marked '**L**' into the holes shown on left side [1].


Note: Runners must be be fitted flat against the panel. If necessary gently tap into final position.


Fit 2 hinge plates (Q) making sure that the slot is facing towards the finished front edge.


Push rail holder (O) into the hole shown. Make sure that it is fitted straight, in line with the panel edges and then secure with screw (N).


b: Push fit 2 right runners (S) marked '**R**' into the holes shown on right side [2].


Fit 2 hinge plates (Q) making sure that the slot is facing towards the finished front edge.

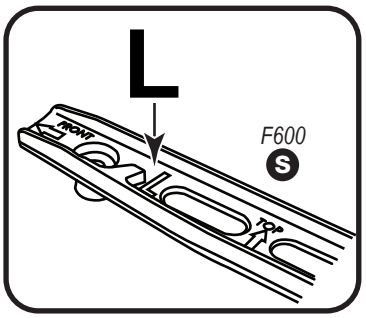


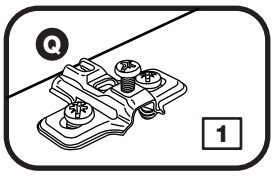

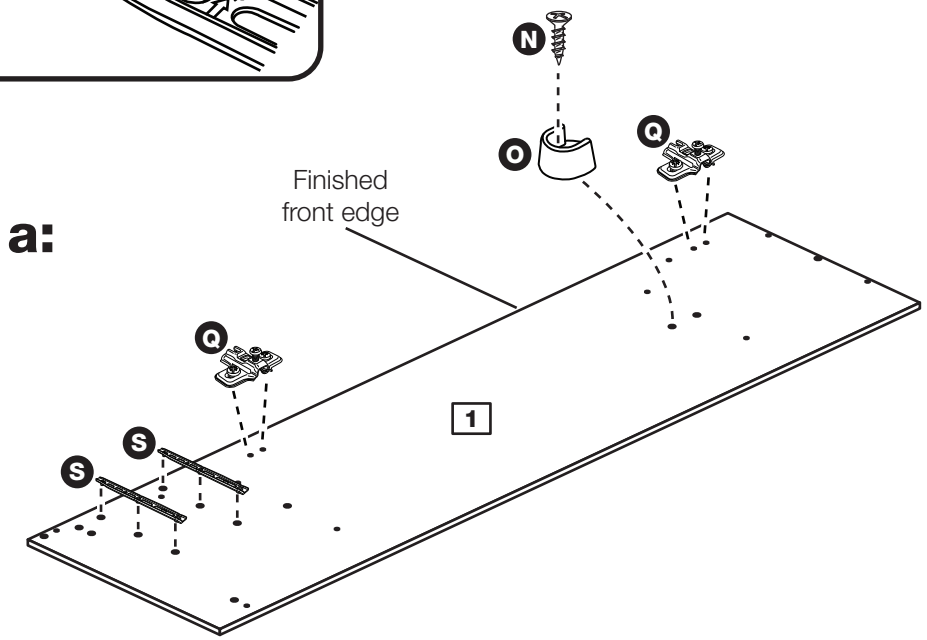

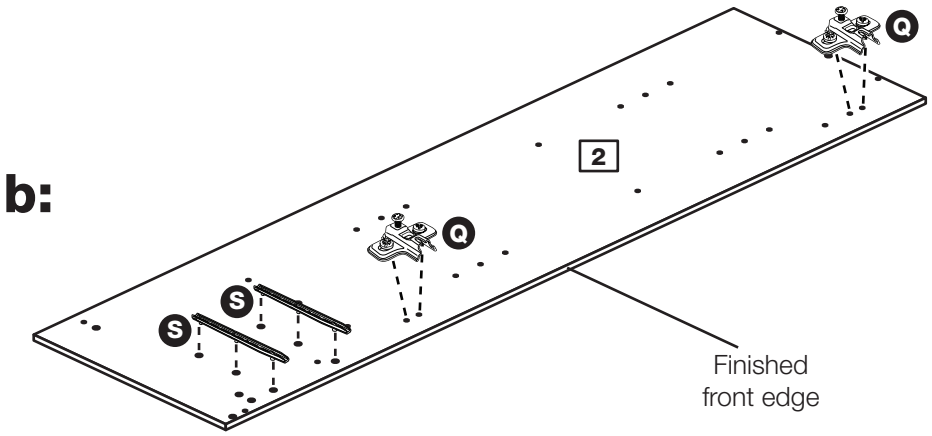

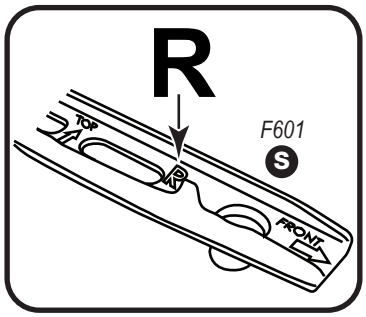

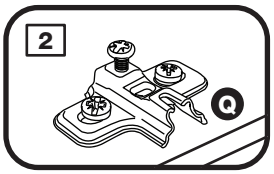


Assembly Instructions

Step 6

Prepare the top


Tap 2 wooden dowels A into the ends of the top 6.

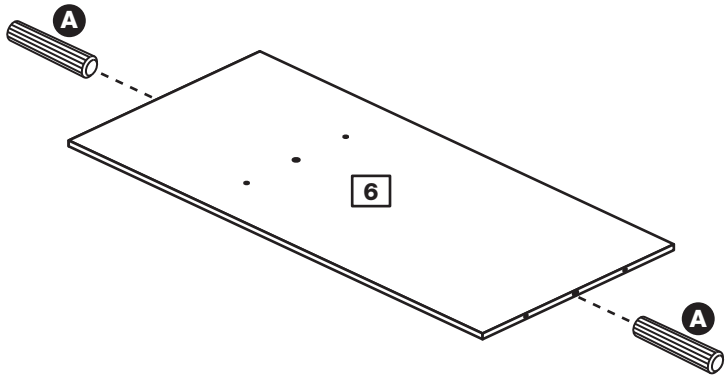

Step 7

Fit the top to the right side

Attach the top 6 to the right side 2 using the dowel already fitted and secure with 2 screws C.

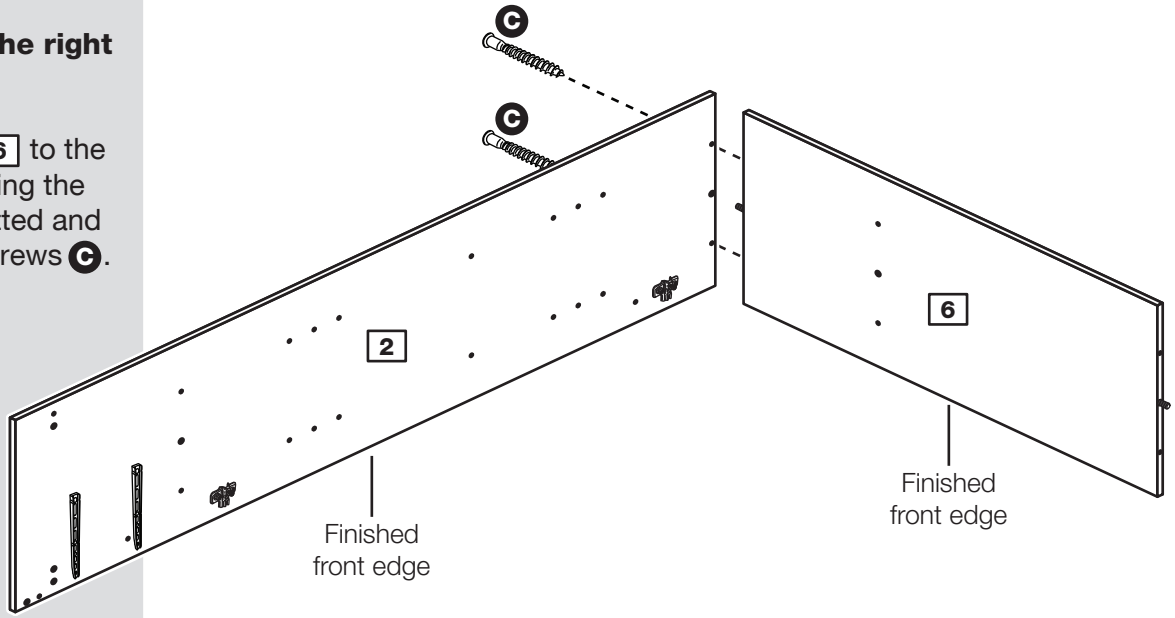


Step 8

Prepare the upright

Fit 2 hinge plates Q into the holes shown on the upright 3 making sure that the slot is facing towards the finished front edge.

Push rail holder O into the hole shown. Make sure that it is fitted straight, in line with the panel edges and then secure with screw N.

Tap in 2 wooden dowels A as shown.

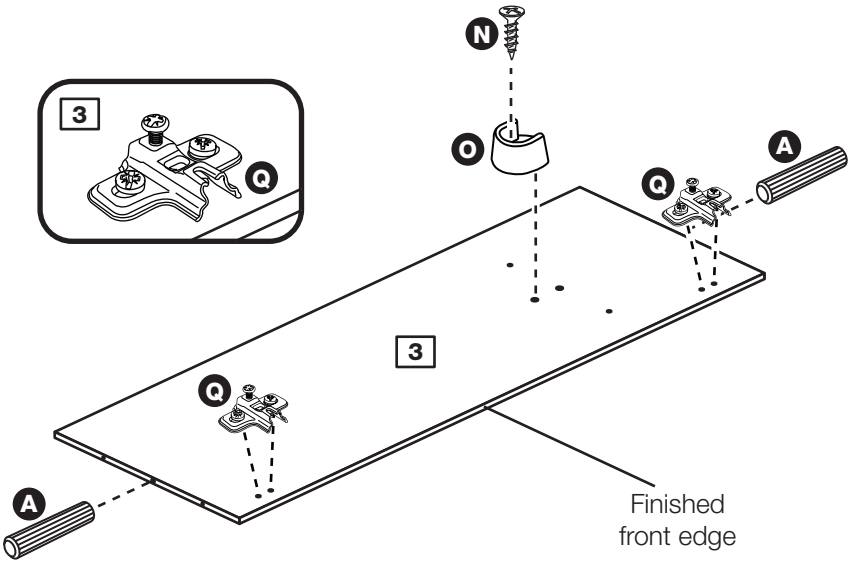


Assembly Instructions

Step 9

Fit the upright to the top


Attach the upright 3 to the top 6 using the dowel already fitted and secure with 2 screws C.

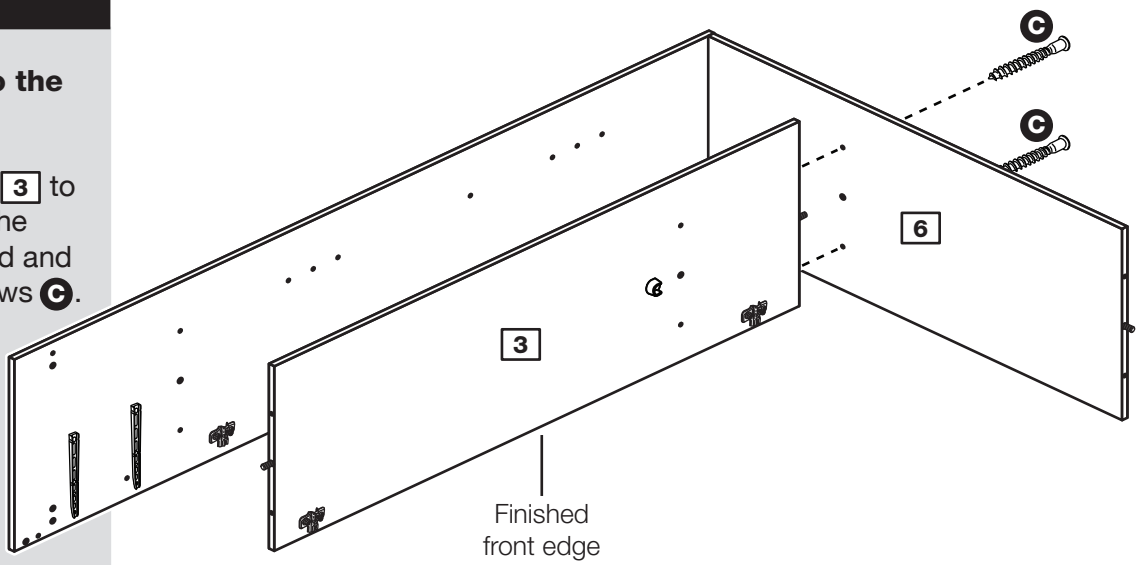

Step 10

Prepare the lower shelf


Tap 2 wooden dowels A into the ends of the lower shelf 7.

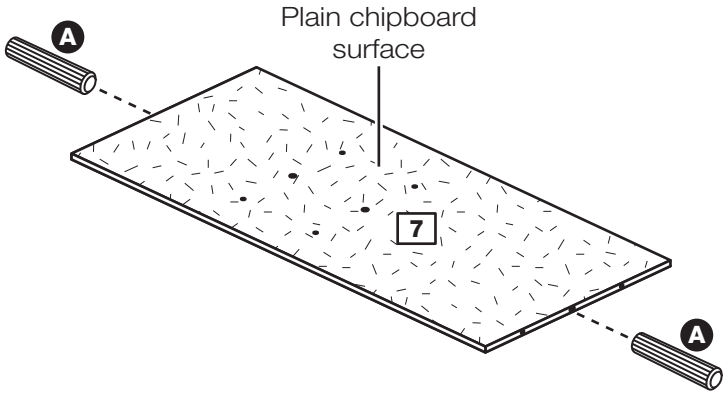

Step 11

Fit the lower shelf

Attach the lower shelf 7 to the right side 2 and upright 3 then secure with 4 screws C.

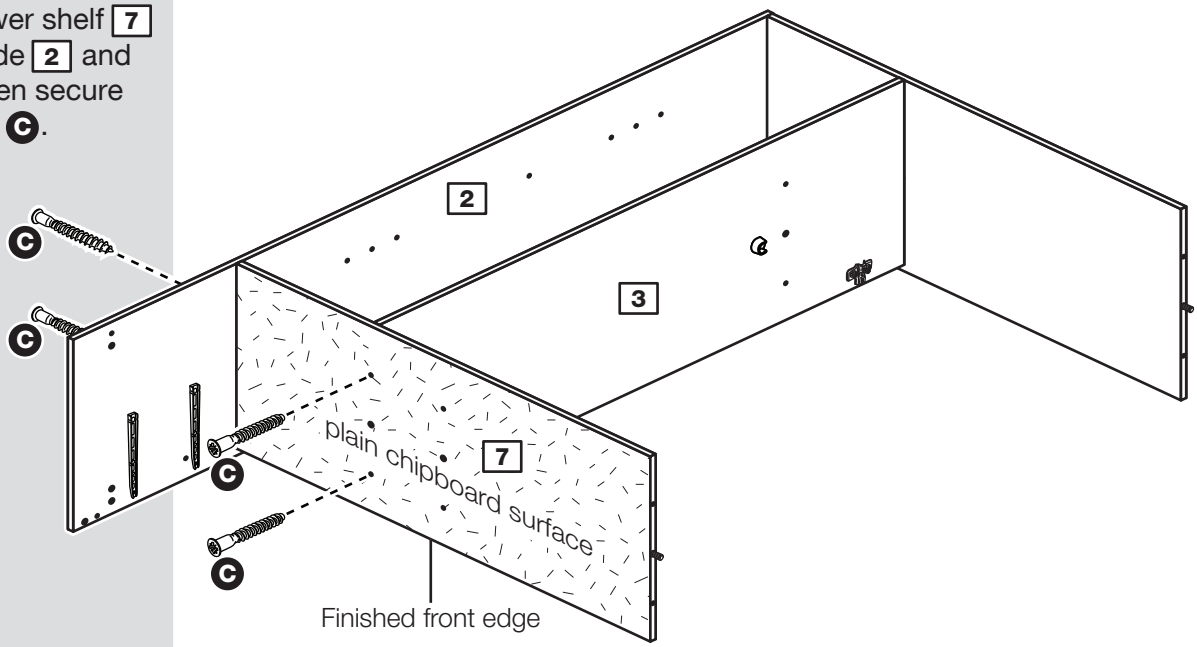


Assembly Instructions

Step 12

Prepare the horizontal


Tap 2 wooden dowels A into the ends of the horizontal 4.

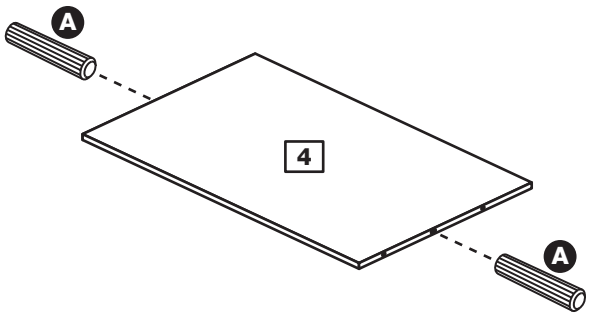

Step 13

Fit the horizontal to the upright

Attach the horizontal 4 to the upright 3 using the dowel already fitted and secure with 2 screws C.

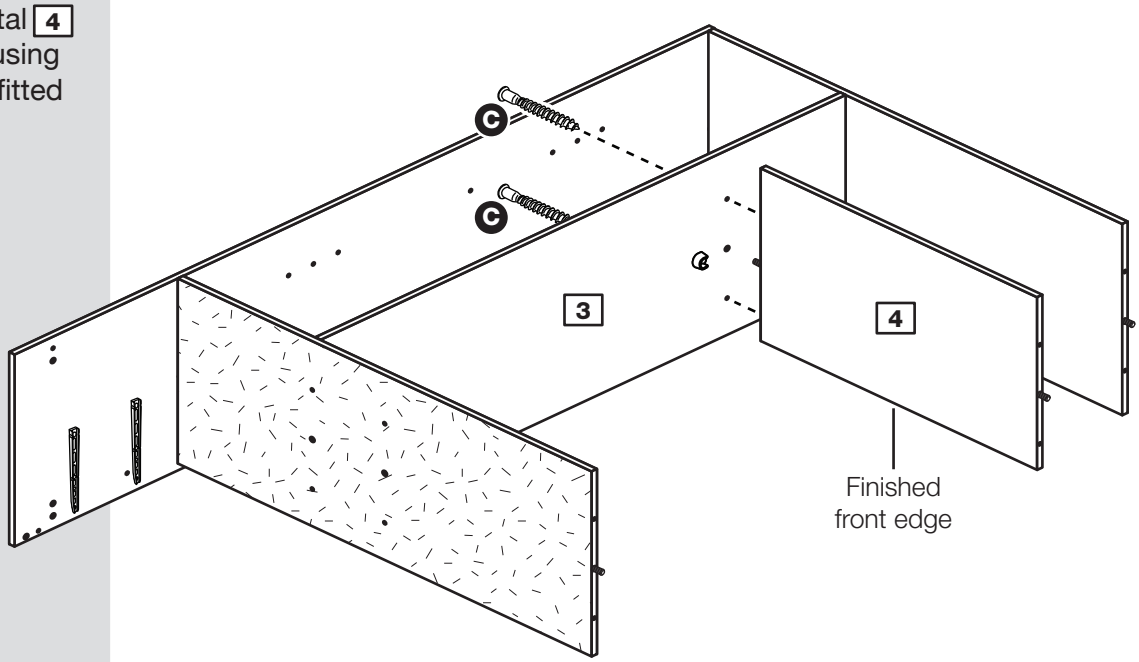

Step 14


Prepare both surfaces of the divider

a: Push fit 2 left runners (S) marked '**L**' into the divider [5].

Tap in 2 wooden dowels (A), as shown.


Turn the divider over

a:

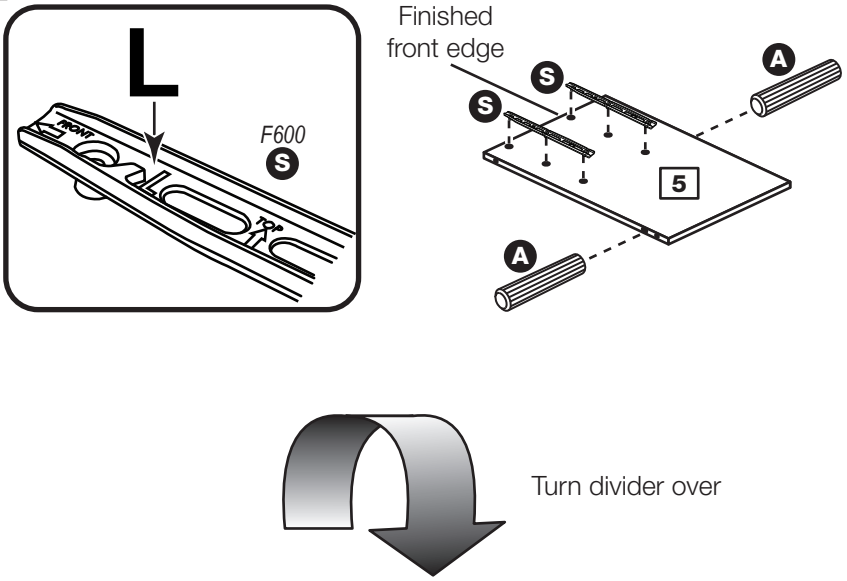

b: Push fit 2 right runners (S) marked '**R**' into the divider [5].


b:

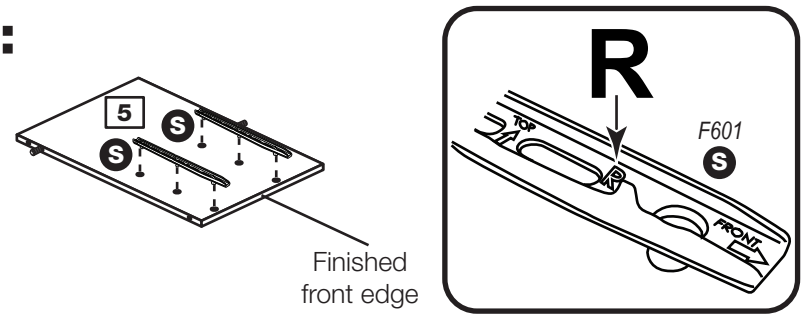

Step 15

Fit the divider

Attach the divider [5] to the lower shelf [7] using the dowel already fitted and secure with 2 screws (C).

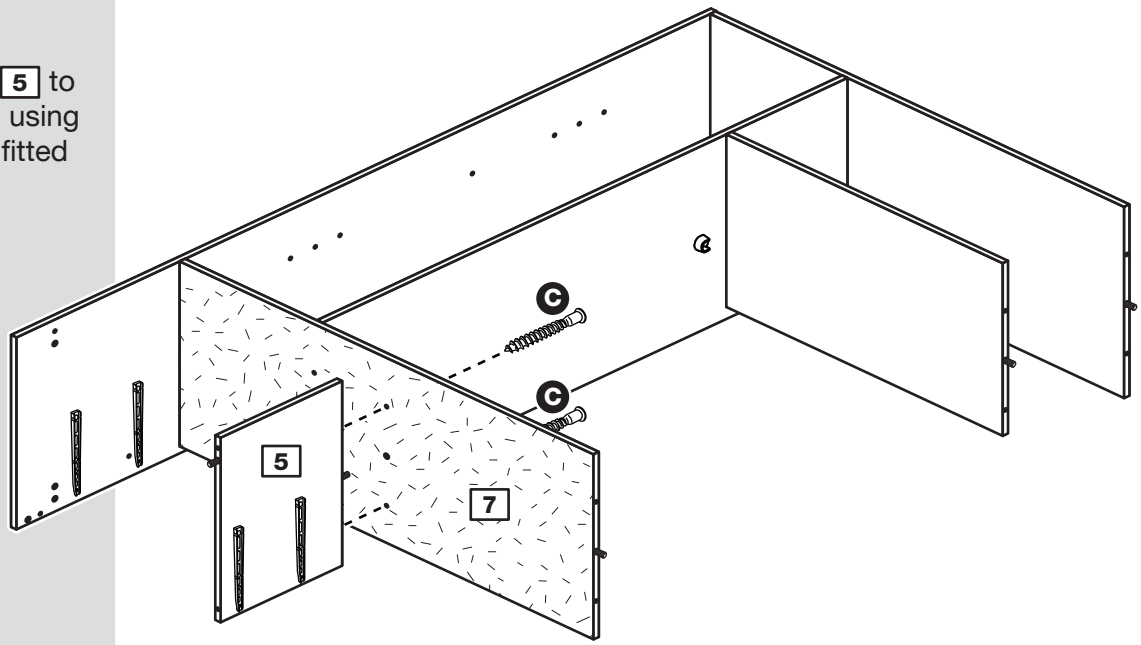


Step 16

Prepare the back rail, rail and plinth

Tap 2 wooden dowels A into the ends of the back rail 14.

Tap 4 wooden dowels A into the ends of the rail 15.


Tap 2 wooden dowels A into the ends of the plinth 16.

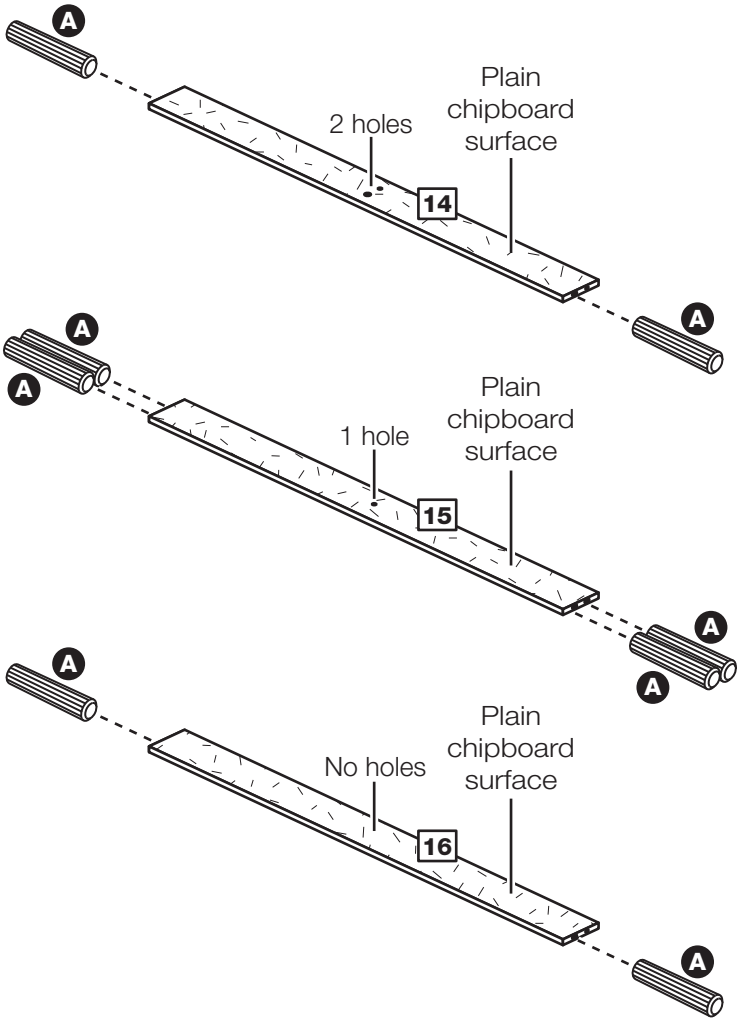

Step 17

Fit the back rail

Attach the back rail 14 to the right side 2 and divider 5 and secure with 2 screws C.

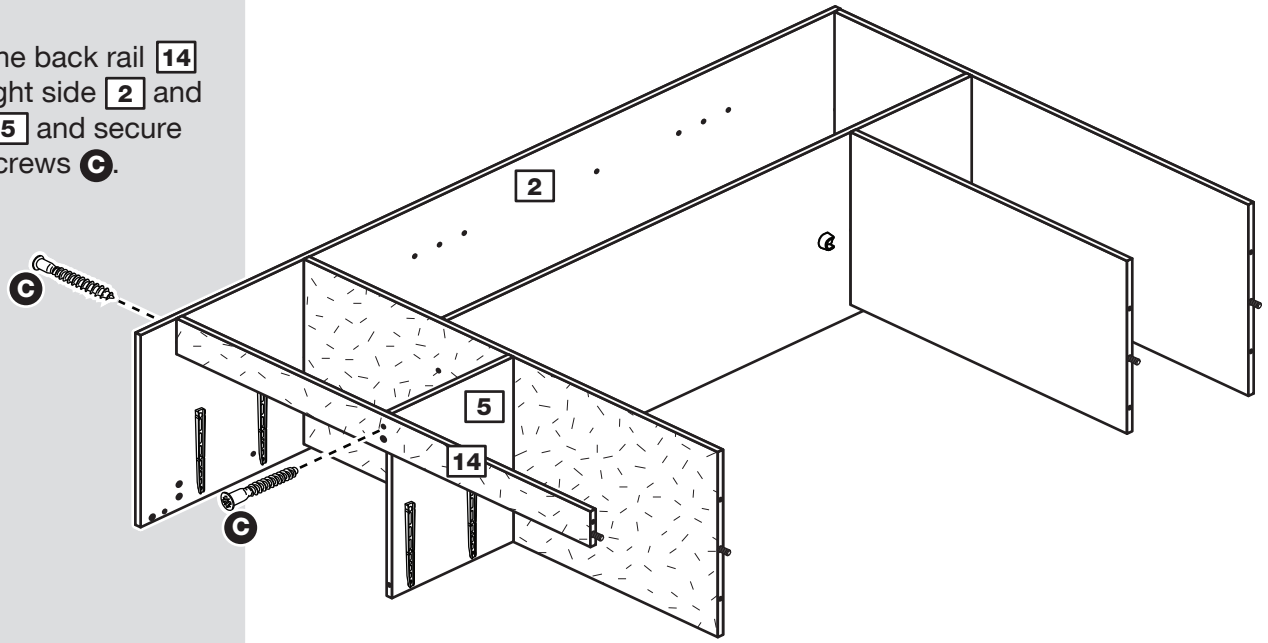


Step 18

Fit the rail and plinth

Attach the rail 15 to the right side 2 using the dowels already fitted.

Attach the plinth 16 to the right side 2 and and secure with screw C.

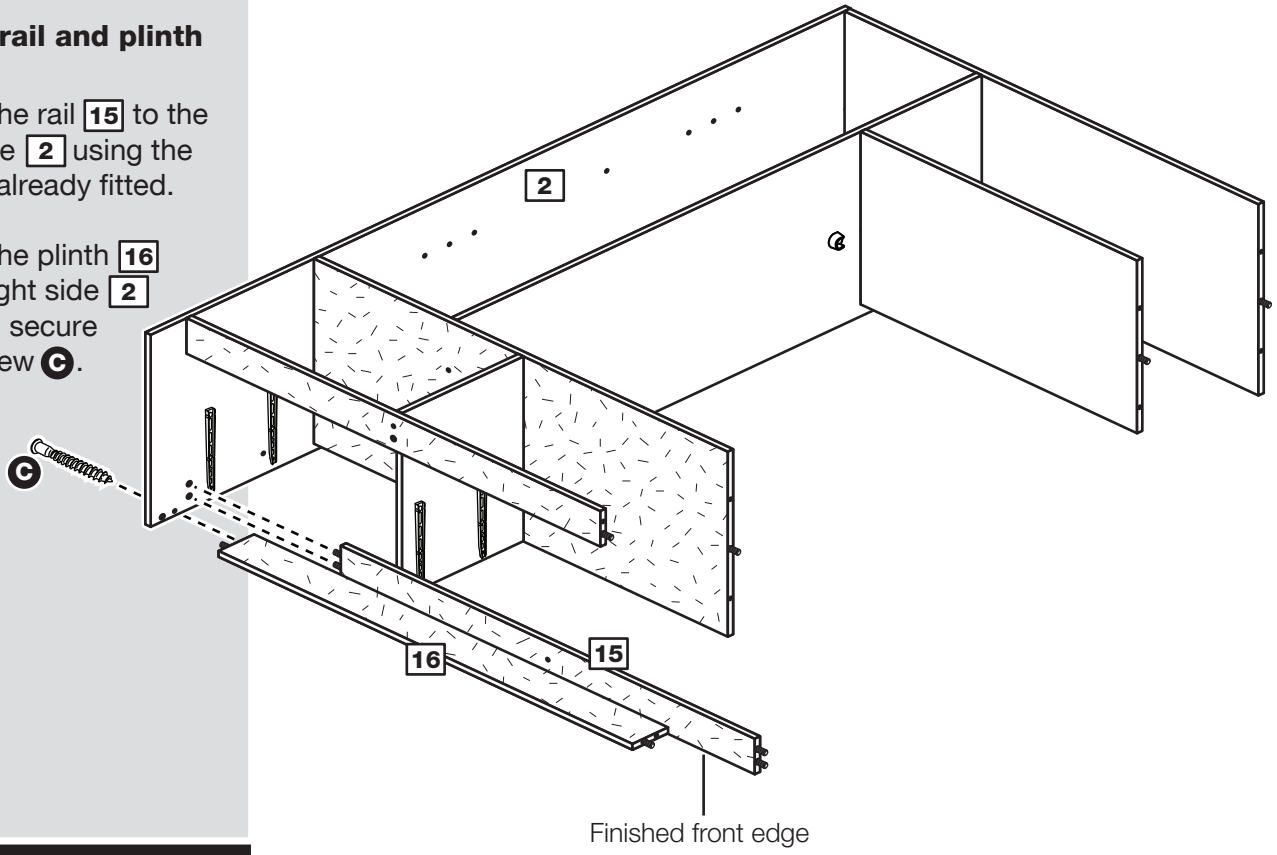


Step 19

Fit the left side and secure the rail to the divider

Attach the left side 1 to the assembly and secure using 8 screws C.

Secure the rail 15 to the divider 5 using screw E.

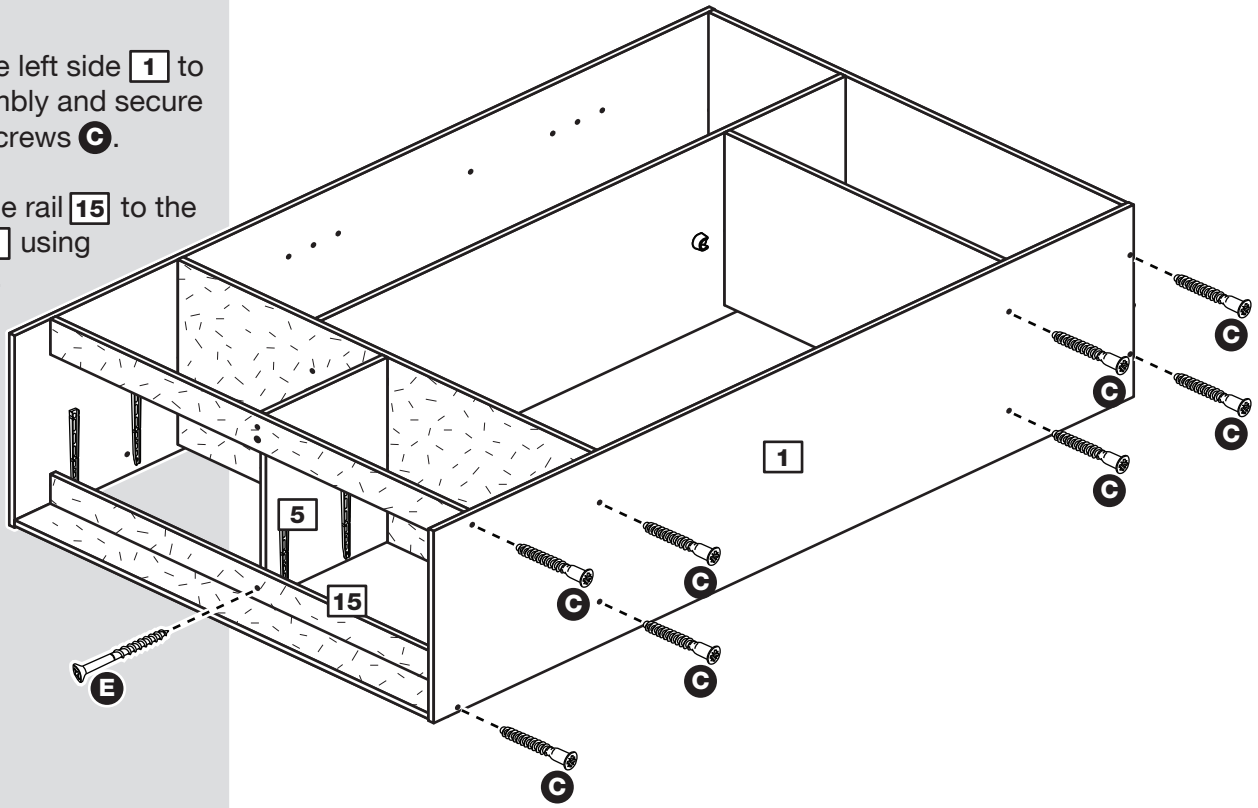

Step 20

Fit the back panel

a: Square up the unit by making sure that measurement **x to x equals y to y.**

Place the back 18 and foldy back 19 down onto the unit as shown, with the white surface facing the inside of the unit.

Make sure that the 2 backs are pushed up tight against each other and that they meet in the centre of the upright panel's edge.

b: Use the nail guide P to hold the nails D vertical and at the correct distance whilst you nail around the outside edges only of the 2 back panels 18 and 19.


Note: Nails should be spaced about 150mm apart.

c: Using 8 screws M, screw down between the backs and into the back edge of the upright panel

Stand the unit up for the next stage.

Warning: The robe is heavy. Lift with care.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

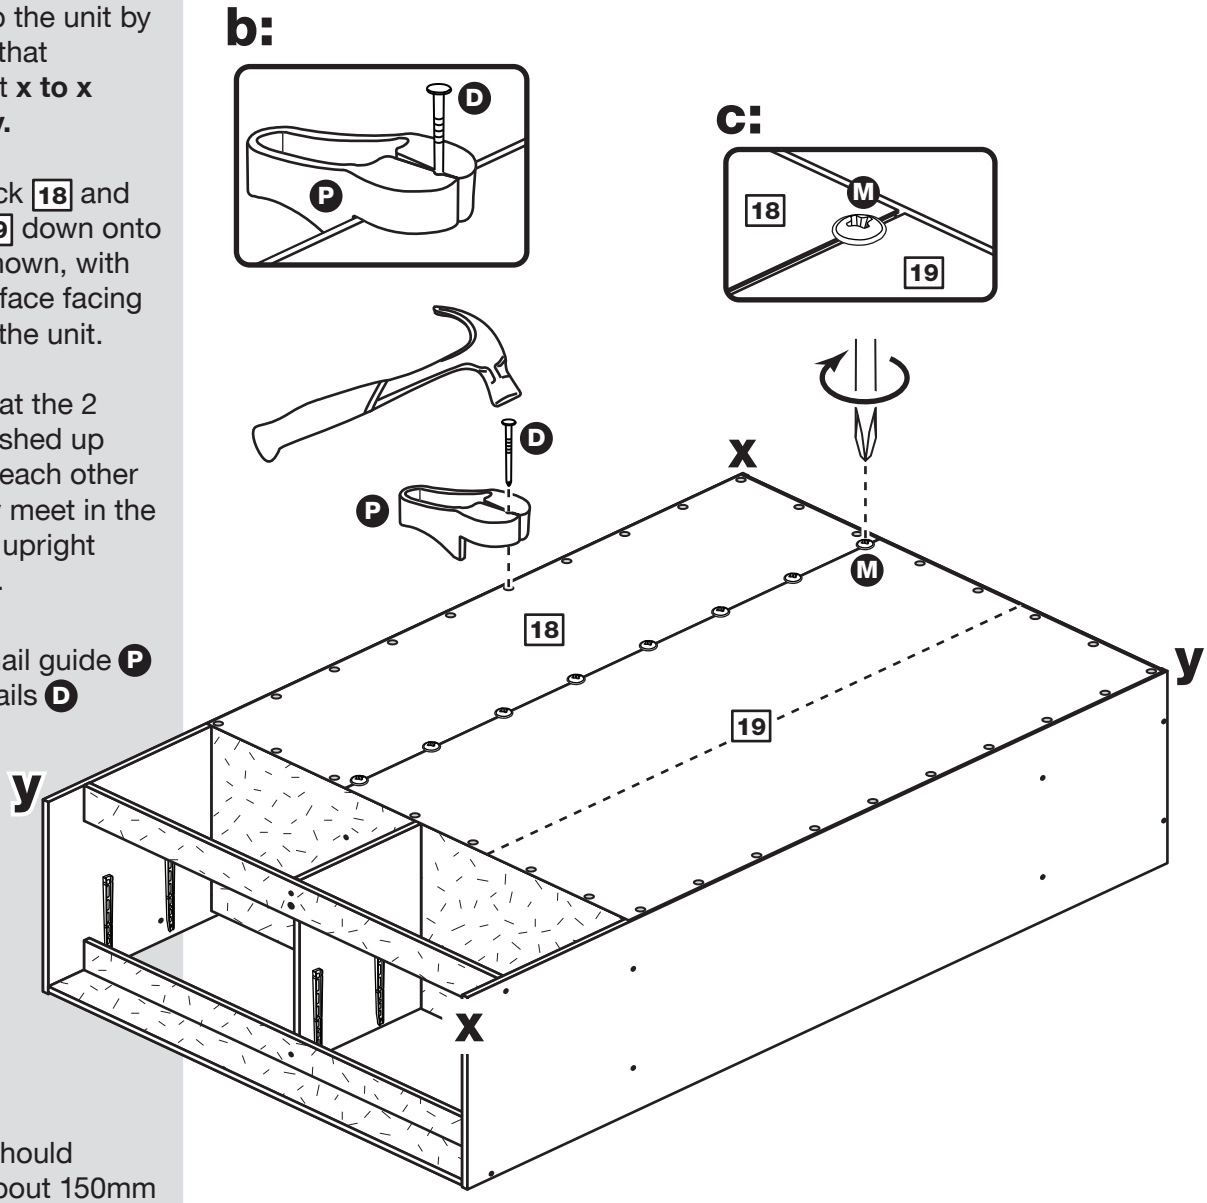

Step 21


Fit the hanging rail and drawers

a: Push the hanging rail 11 into the rail holders O on the side panels.

b: Lift the front of the drawer whilst inserting to overcome the 'stop' system.

Note: Remember the right drawer front has an identification hole - refer back to step 1.

Note: To ensure that your drawers run smoothly, spray a small amount of furniture polish into the grooves.

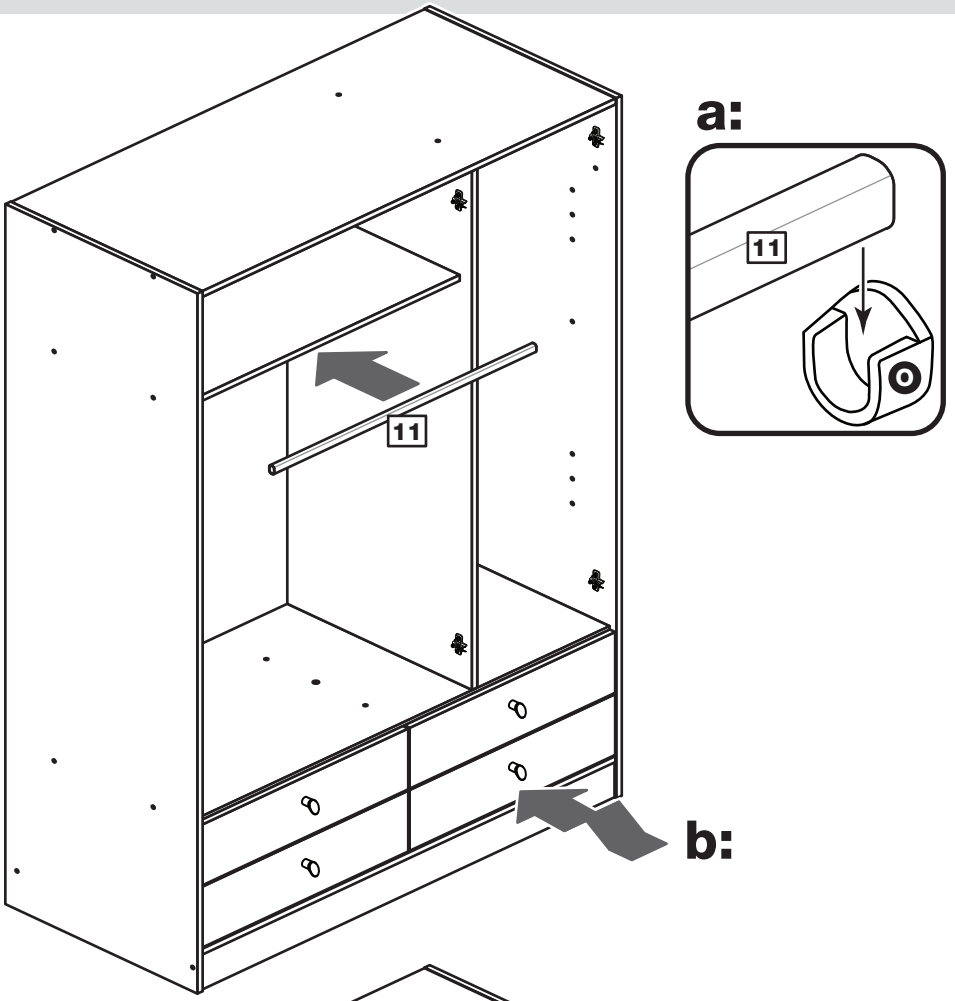


Step 22

Fit the 3 loose shelves

Insert 4 shelf studs G for each of the shelves.

Slide in the 3 loose shelves 12, placing them on top of the shelf studs G.

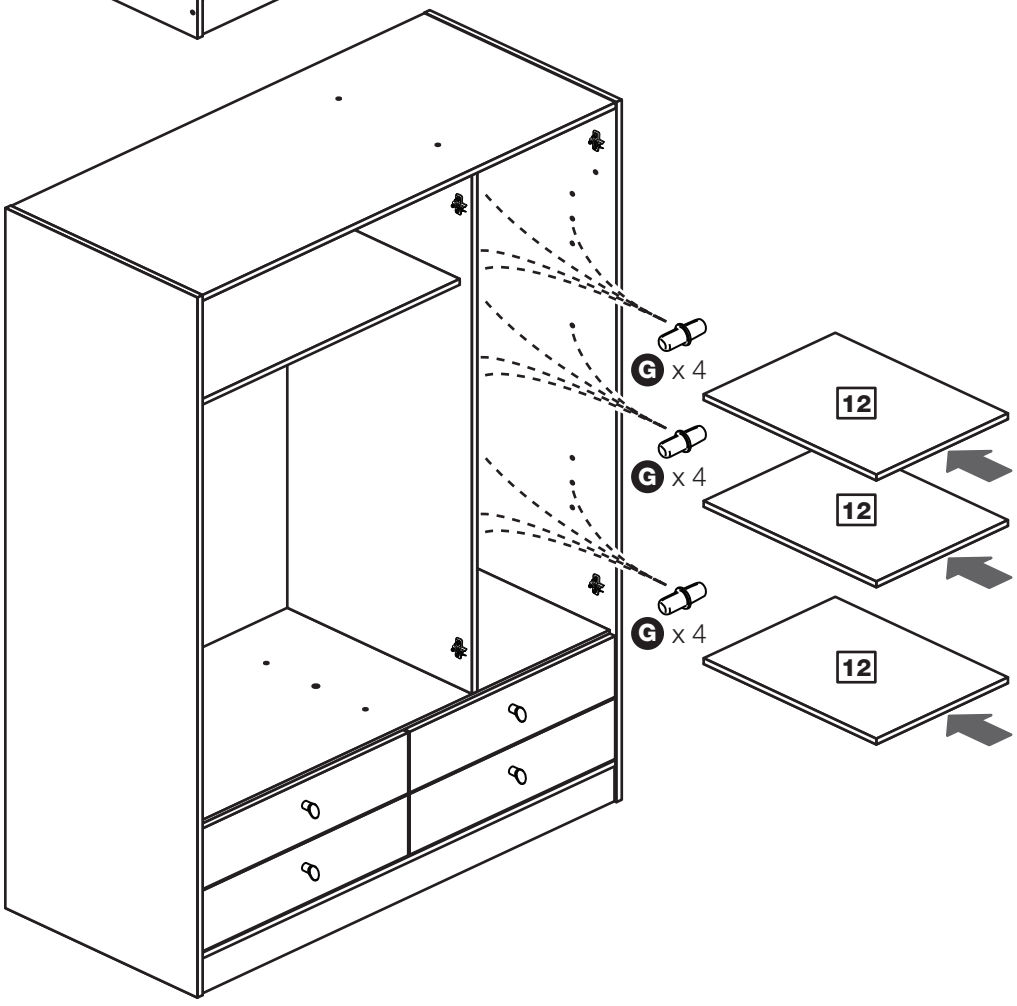


Step 23

Prepare the 3 doors

Push fit the hinges (R) into the door [17].

Secure each hinge with 2 screws (N).

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the front edge of the door.

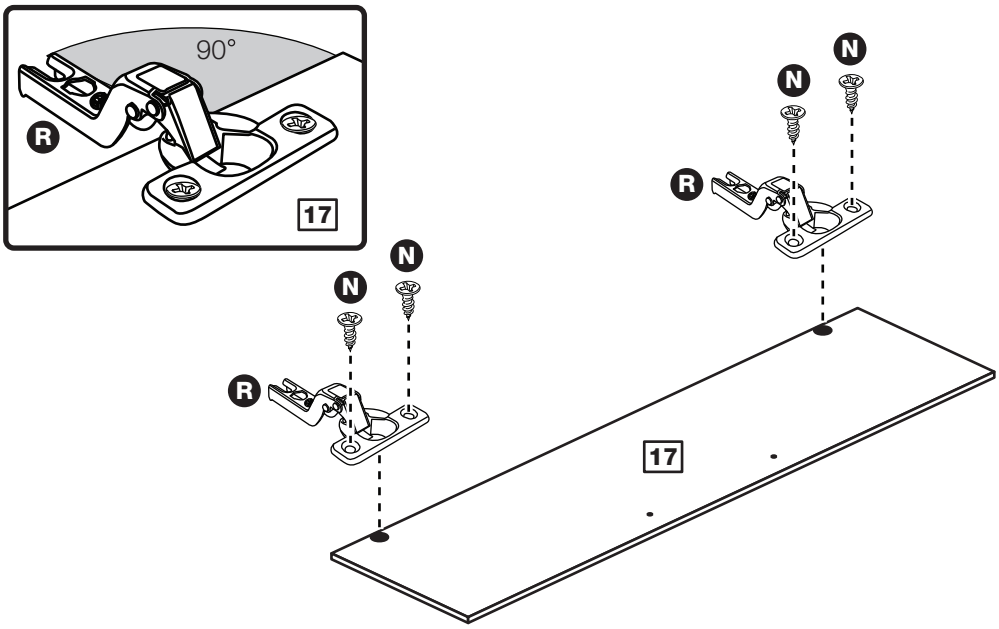

Step 24

Drill 1 handle hole in each door

Important: Please follow these instructions carefully.


Lay the 3 doors down onto a smooth surface.


Check that the hinges (R) and holes are in the same place as the diagrams.

Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.

Using the pilot hole in the rear face of the door, drill through the hole indicated opposite, using a 2.5mm diameter drill.

Turn the door over and open out the 2.5mm hole that you have just drilled by drilling back through it with a 5mm drill.

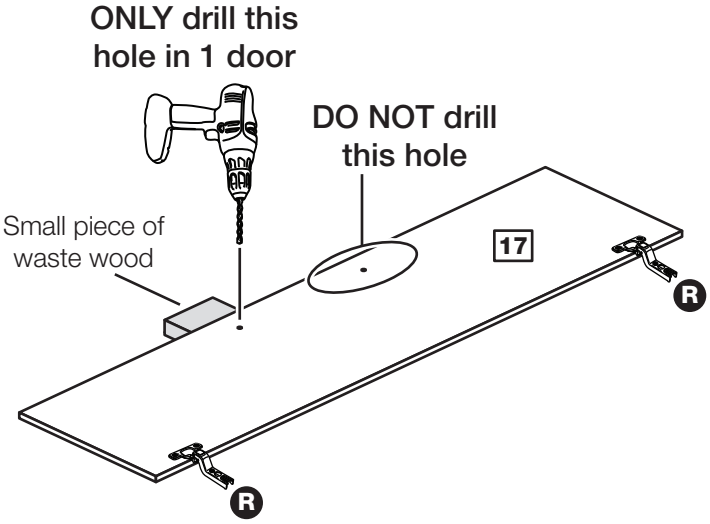

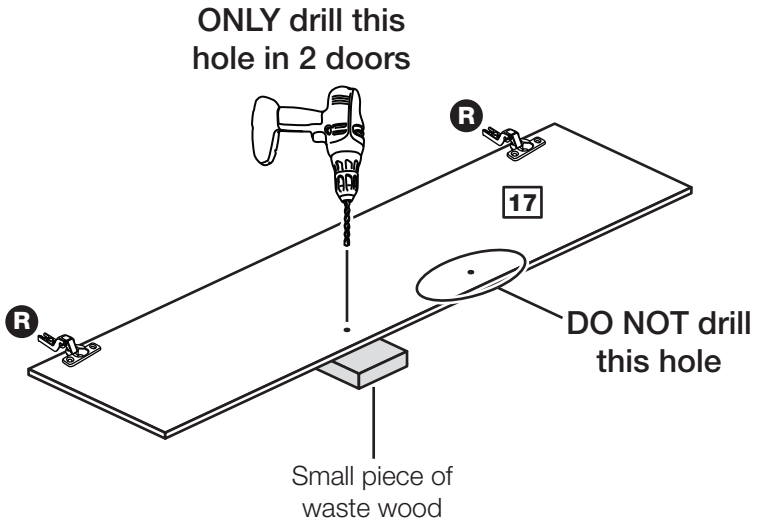

Step 25

Fit doors and handles

2 people are needed here

Note: The easiest way to attach the doors 17 is to fit the top hinge first, then align and fit the bottom hinge.

a: Push the hinge R onto the front part of the hinge plate Q.


b: Keep the hinge R FLAT against the hinge plate Q as you slide it across as far as it will go. Tighten screw A.


c: The hinge R must be flat against the hinge plate Q prior to any adjustment.

d: The hinge R must NOT be AT AN ANGLE to the hinge plate Q when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle I to each of the doors using screw H.

Note: Do not overtighten screw H.

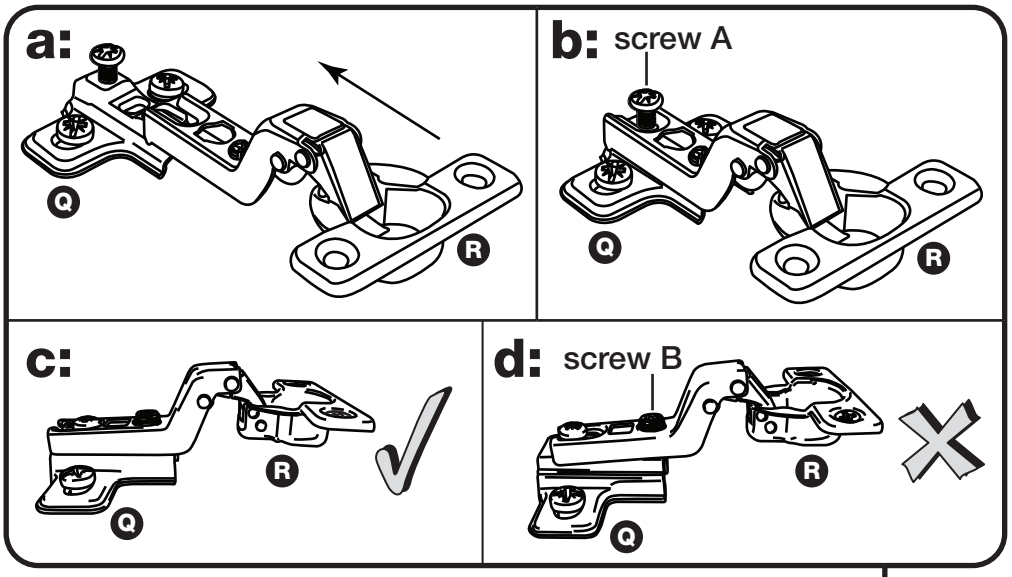

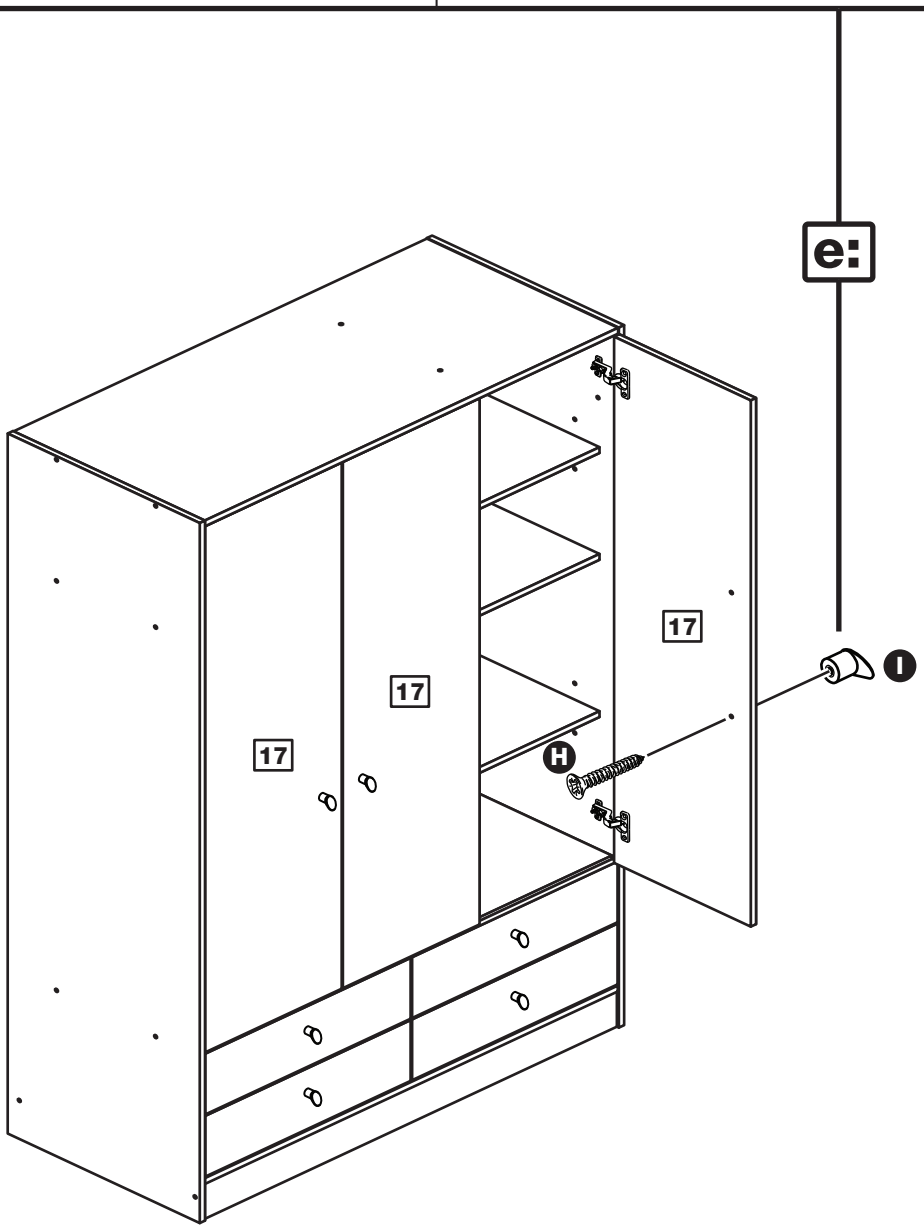

Step 26


Adjust the doors if required

a: Before adjusting the doors, use a spirit level to check the lower shelf (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

c: Forward and Back adjustment.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

d: Sideways adjustment.
To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

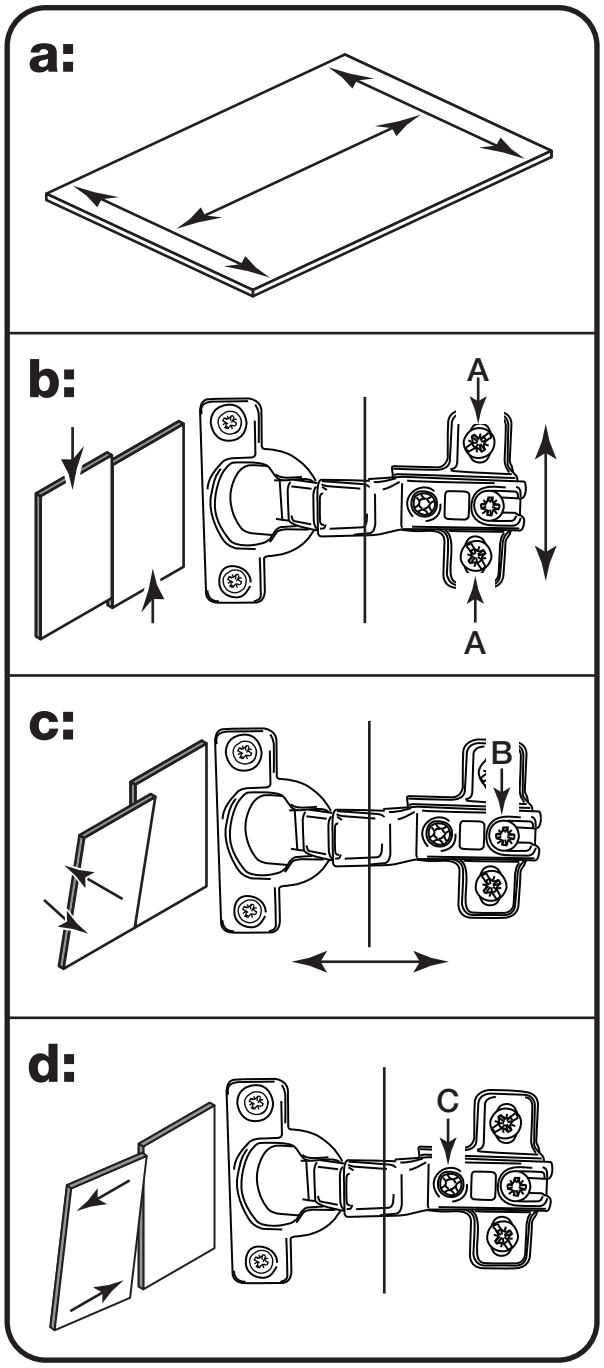

Step 27

Joining units together

Fittings have been supplied so you are able to join units together.


Make sure that your first unit is level.


Push the other unit up against the first unit and ensure both units are level.


Check that the ends are flush and in line, then clamp them together.

Using a 5mm drill bit, drill through the 2 holes (shown circled) in the side panel into the adjoining side panel of the other unit.

Push the connecting sleeves K into the holes and then screw the connecting bolts J in from the other side.

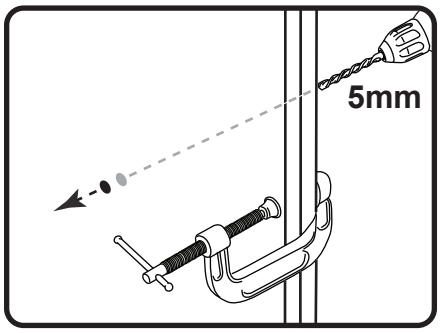

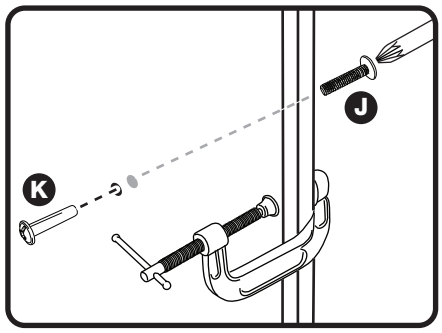

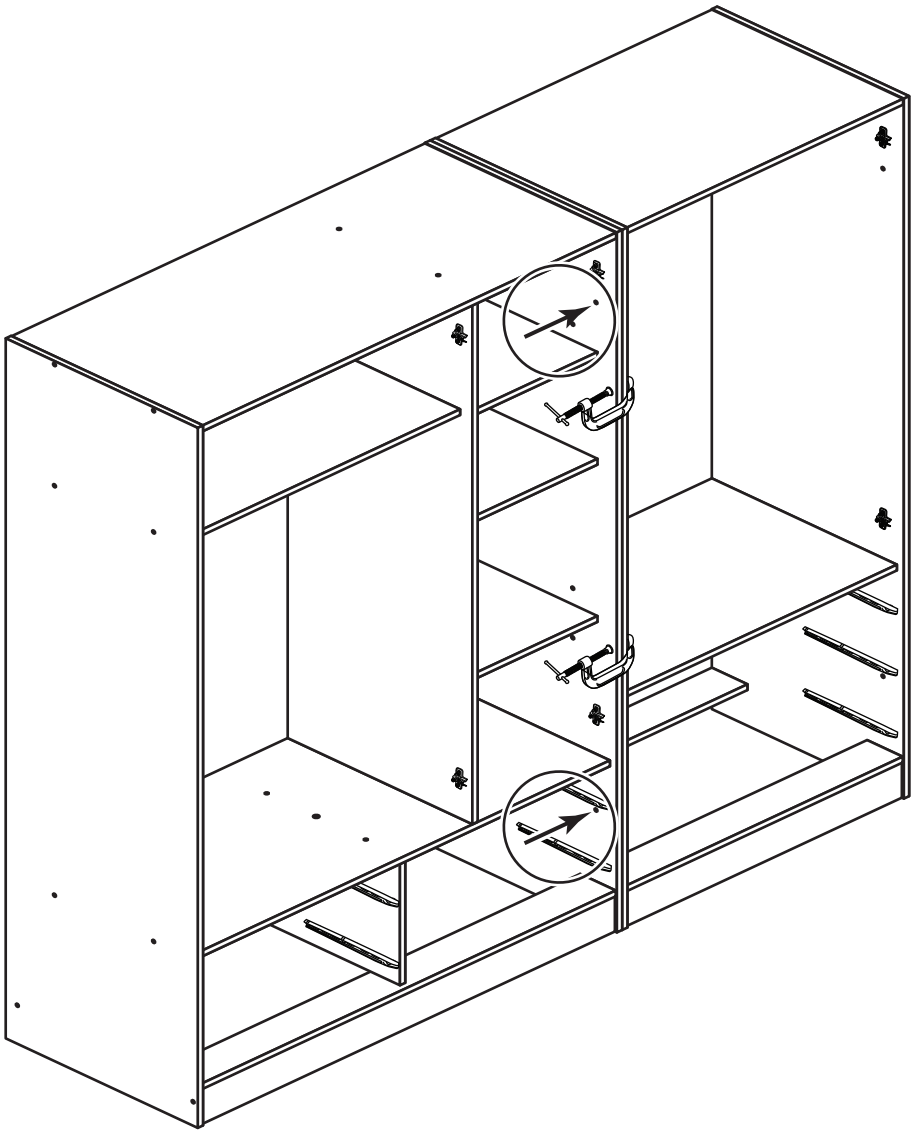

Step 28

Attach bracket to top

To prevent possible overbalancing, we recommend that this unit is secured to a suitable wall by use of the bracket (L) fitted to the top of the unit.

Fixings are not supplied, as they will need to suit the wall type and the length of screw will depend on the distance from the back of the unit to the wall.

Fix the bracket (L) loosely onto the top of the unit using screw (M) and mark the wall for the wall fixing.


Swivel the bracket (L) away from the wall and drill a hole in the wall using a suitable drill bit and fit your wall fixing.

Swivel the bracket (L) back and fix the bracket to the wall, then tighten Screw (M).

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

Warning: The robe is heavy. Lift with care.

Assembly is complete

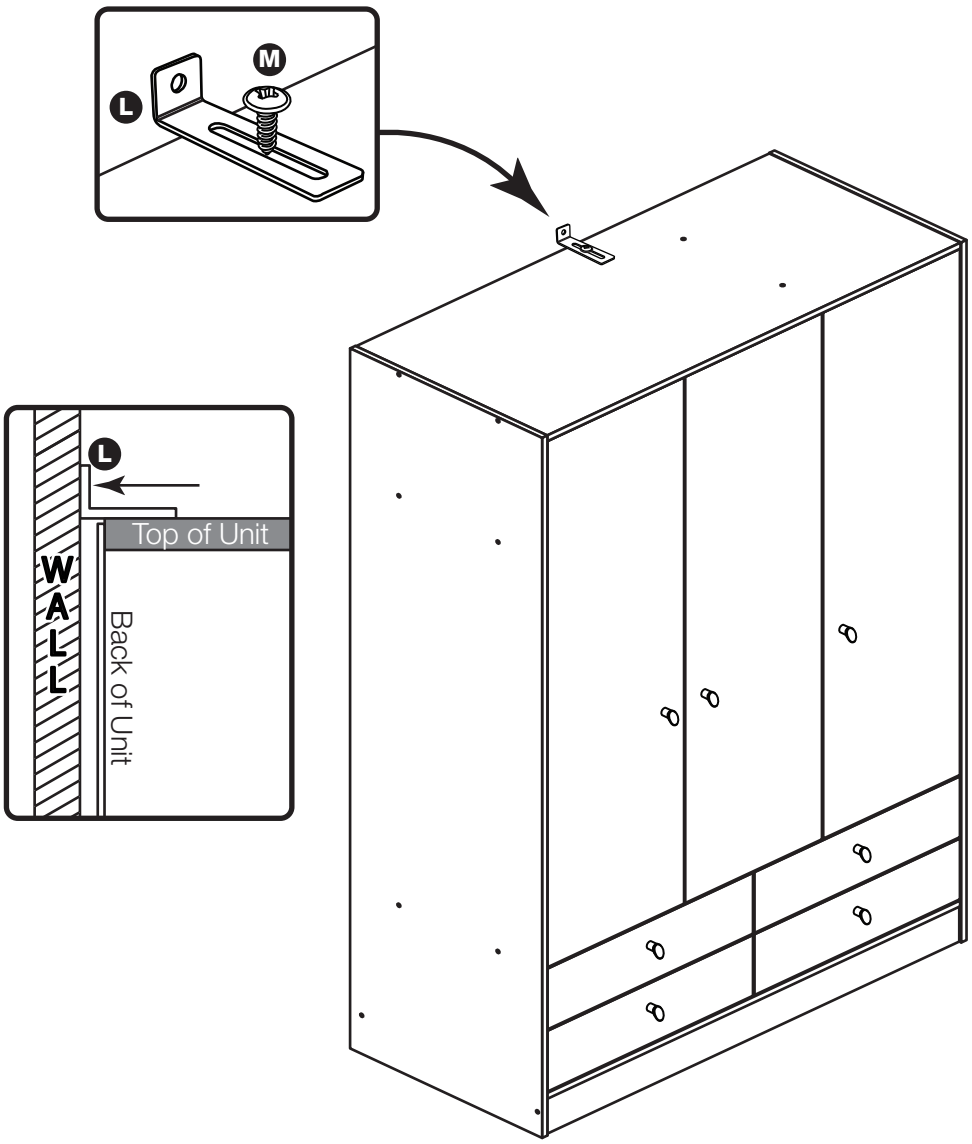


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

Malibu - 4 Drawer 3 Door Robe

Assembly Instructions - Please keep for future reference

643/6520
643/6506
643/6537
643/6489
643/8542

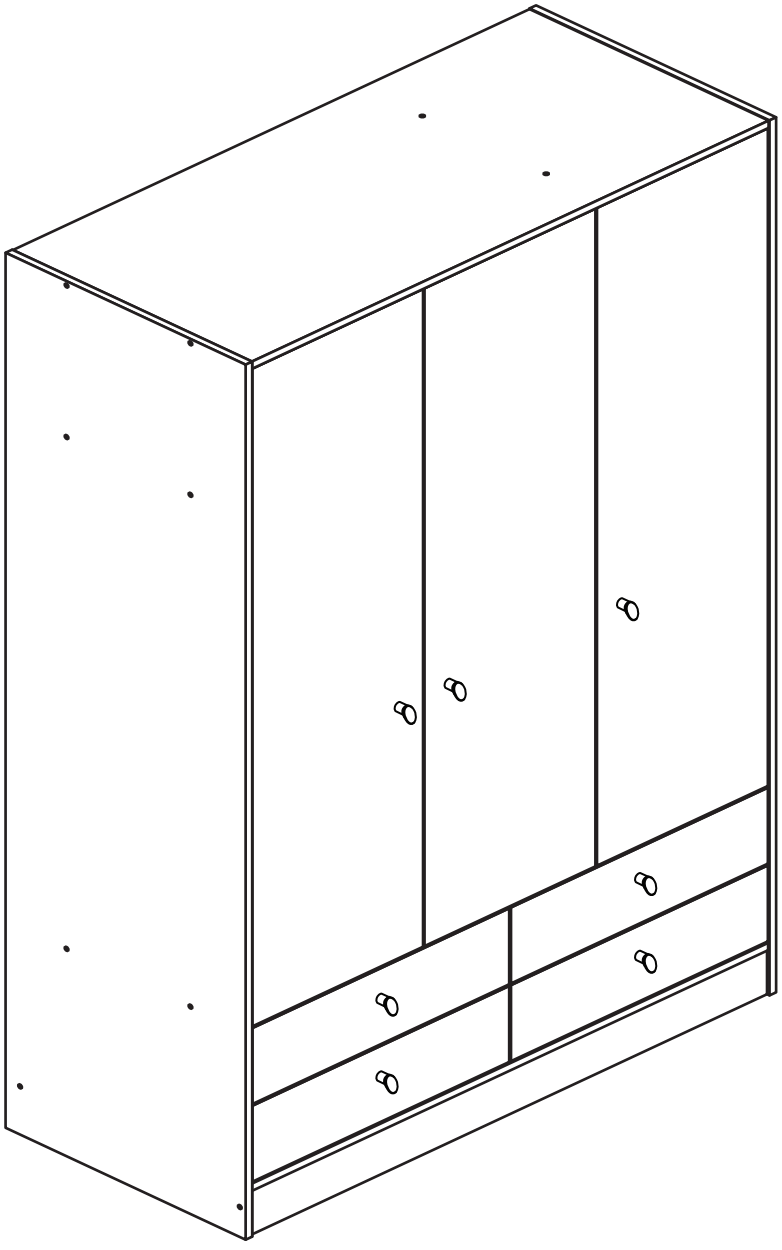

Dimensions
Width - 110cm
Depth - 50cm
Height - 181cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 17/09/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 79kgs. Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

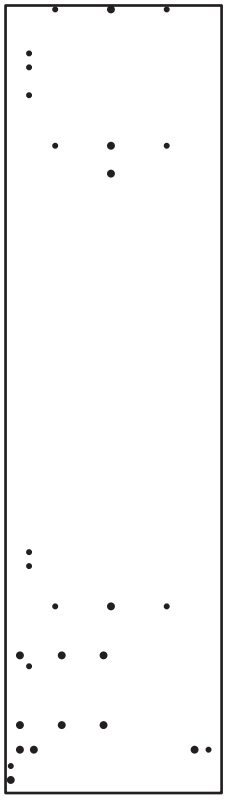


1 Left Side *(D0145A)*
(1808 x 496mm)

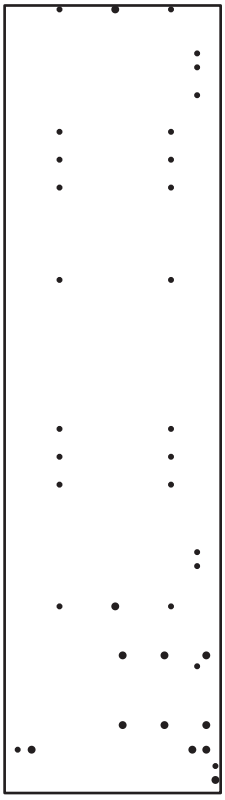


2 Right Side *(D0146A)*
(1808 x 496mm)

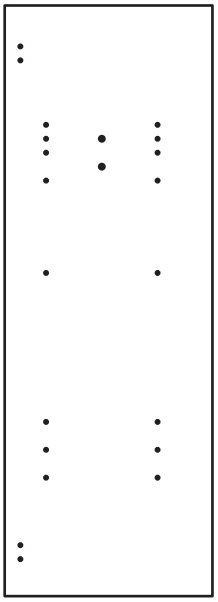


3 Upright *(D0147A)*
(1356 x 477mm)




4 Horizontal *(D0150A)*
(714 x 446mm)

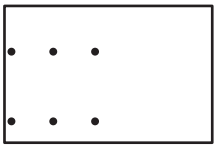


5 Divider *(D0148A)*
(314 x 477mm)

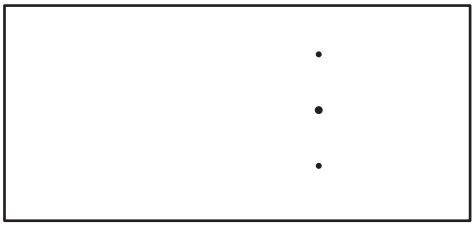


6 Top *(D0149A)*
(1069 x 494mm)

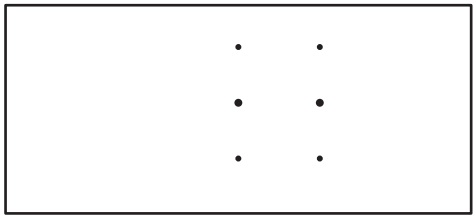


7 Lower Shelf *(D0151A)*
(1069 x 478mm)



8 Left Drawer Front *(D0157A)*
(531 x 157mm) x 2



9 Right Drawer Front *(D0158A)*
(531 x 157mm) x 2



10 Drawer Wrap *(W233)*
(1121 x 95mm) x 4

11 Hanging Rail *(FHR704)*
(704mm long)



12 Loose Shelf *(D0152A)*
(340 x 446mm) x 3




13 Drawer Base *(T233)*
(508 x 299mm) x 4



14 Back Rail *(D0154A)*
(1069 x 92mm)




15 Rail *(D0155A)*
(1069 x 92mm)




16 Plinth *(D0153A)*
(1069 x 92mm)



17 Door *(DO156A)*
(1359 x 353mm)
x 3

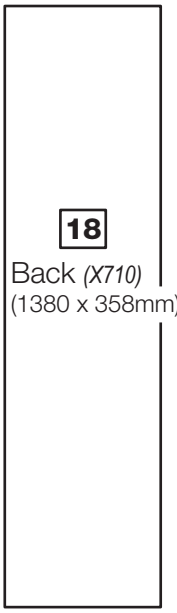

18 Back *(X710)*
(1380 x 358mm)

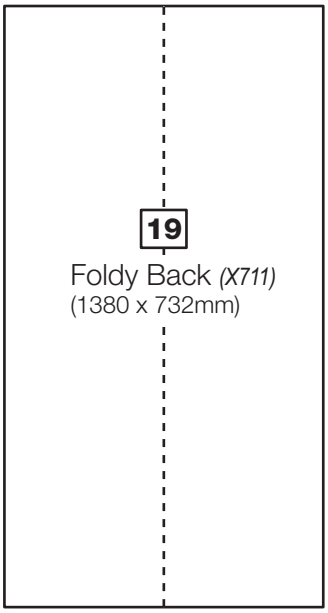


19 Foldy Back *(X711)*
(1380 x 732mm)


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 
Wooden dowel *(F22)* x 18


B 
Metal dowel *(F901)* x 8

C 
40mm Screw *(F910)* x 23

D 
Nail *(F51)* x 33

E 
45mm Screw *(F65)* x 1


F 
Small locking nut *(F3)* x 8


G 
Shelf stud *(F110)* x 12

H 
25mm Screw *(F50)* x 7

I 
Handle *(F631)* x 7


J 
19mm Connecting bolt *(F461)* x 2

K 
25mm Connecting sleeve *(F432)* x 2

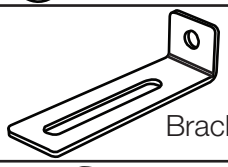
L 
Bracket *(F327)* x 1


M 
13mm Screw *(F79)* x 9


N 
13mm Screw *(F63)* x 14

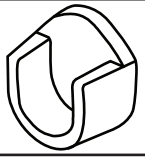O 
Rail holder *(F1014)* x 2

P 
Nail holder *(F149)* x 1

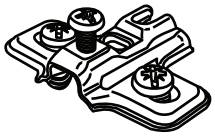
Q 
Hinge plate *(F523)* x 6

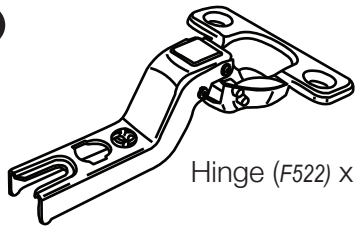
R 
Hinge *(F522)* x 6

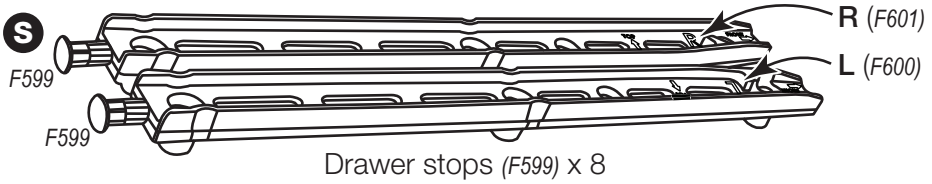S 


Drawer stops *(F599)* x 8
Runners *(F600)* x 4 *and (F601)* x 4

Tools required

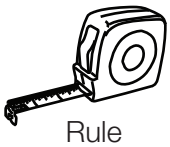
Rule


Spirit level


Eye protection (when using a hammer or drill)


Cross-head screwdriver



Electric drill


Step ladder



Square


Scissors


Hammer


Bradawl

Ruler - Use this ruler to help correctly identify the screws

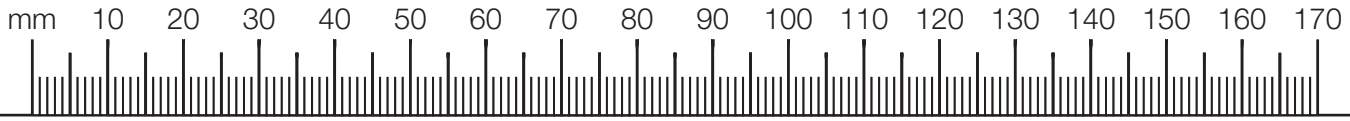

Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare 4 drawer fronts and wraps


Note: The right drawer front 9 has a small identification hole.

a: Screw 2 metal dowels B into the holes on the back of the drawer fronts 8 and 9.

Note: Tighten metal dowels up fully against the panels.

b: Insert 2 small locking nuts F into the holes shown on the drawer wrap 10.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

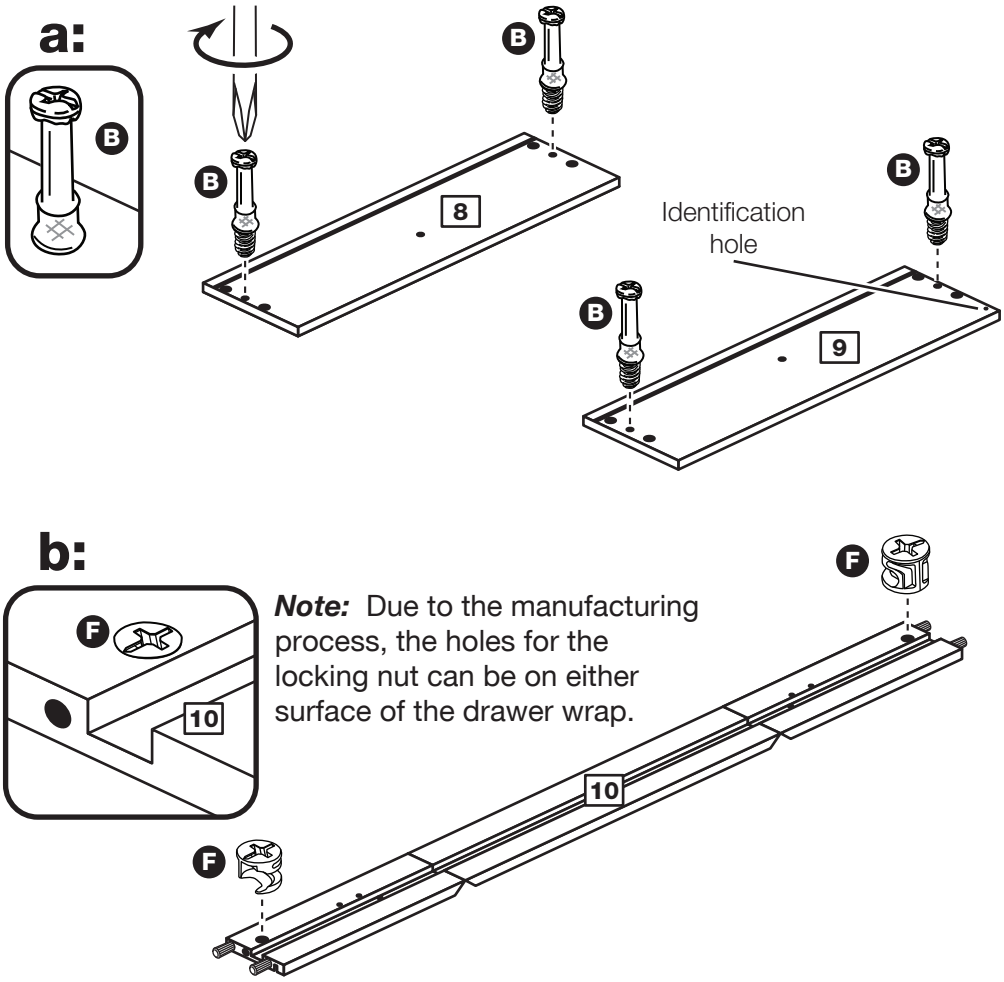


Step 2

Assemble the drawers

a: Place drawer base 13 into the narrow slot on the drawer wrap 10. Fold wrap around the base.

b: Turn drawer wrap assembly over and push onto the back of the drawer fronts 8 and 9.

Turn locking nuts F clockwise to secure panels - more than 1/2 a turn.

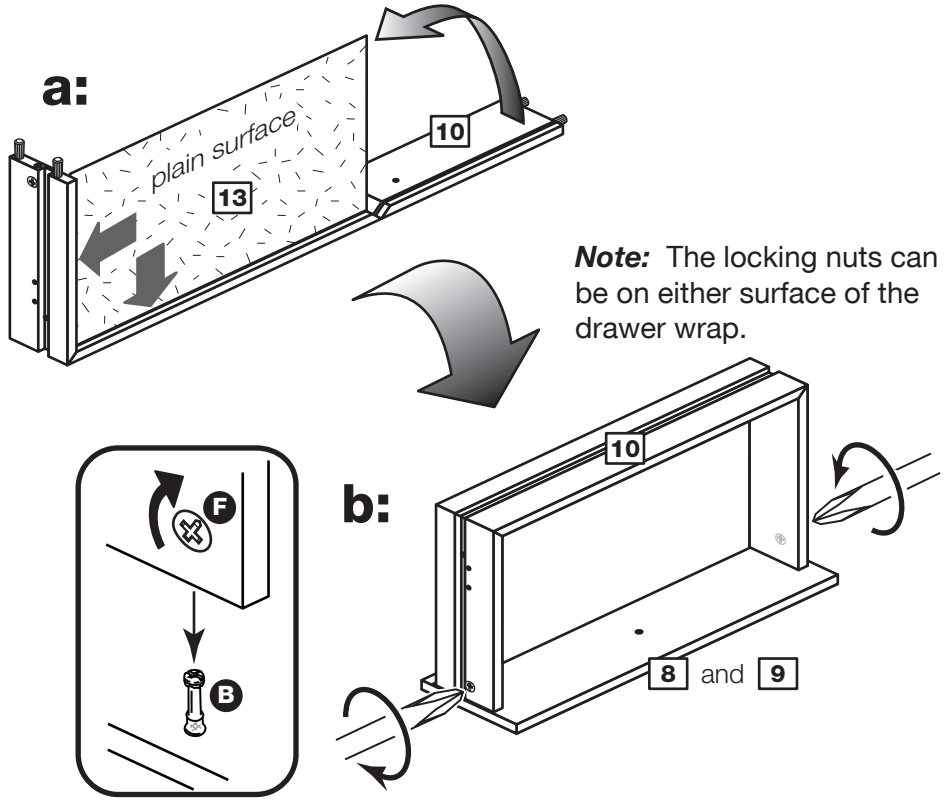


Step 3

Fit the drawer stops

Carefully break off the 2 drawer stops *(F599)* from each pair of the drawer runners **S**.

Push the drawer stops fully through the drawer wraps **10** from the inside.

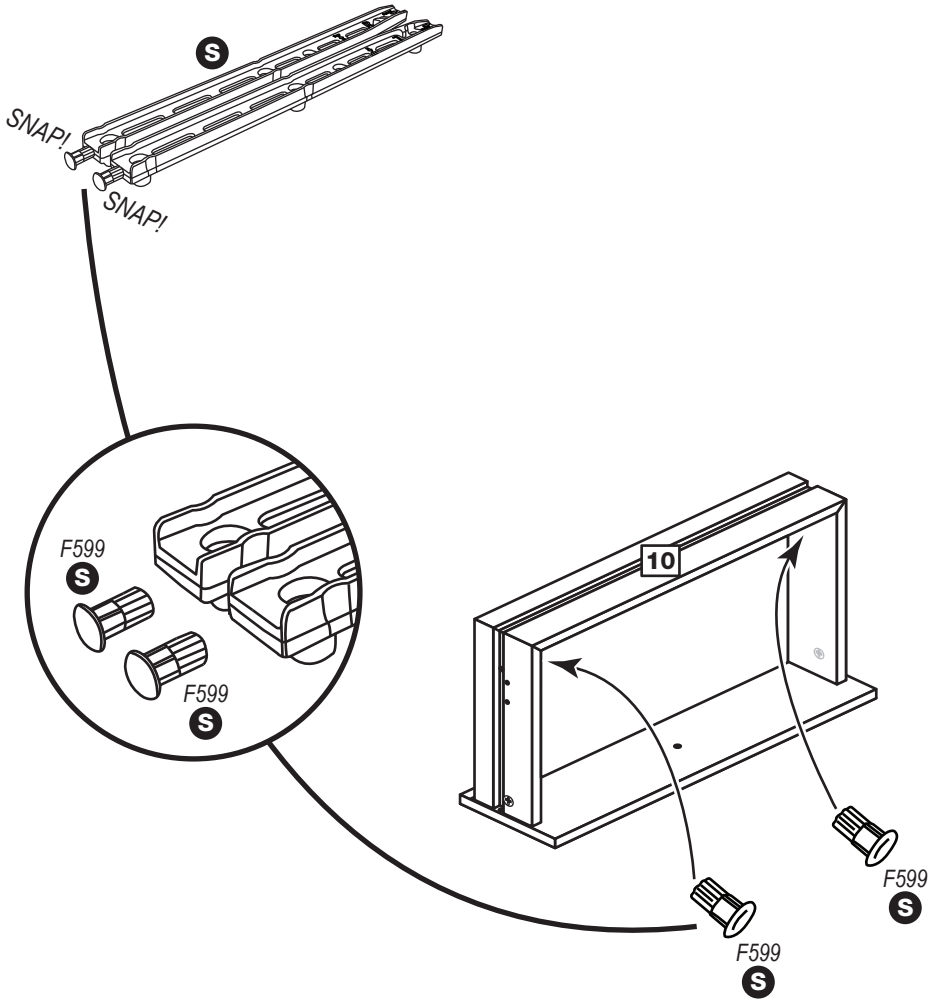


Step 4

Attach the handles

Attach a handle **I** to each drawer front **8** and **9** using screw **H**.

Note: Do not overtighten the screw.

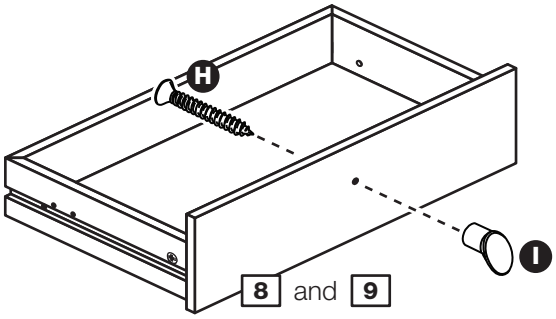

Assembly Instructions

Step 5

Prepare the left and right side

Separate runners (S).

a: Push fit 2 left runners (S) marked '**L**' into the holes shown on left side [1].


Note: Runners must be be fitted flat against the panel. If necessary gently tap into final position.


Fit 2 hinge plates (Q) making sure that the slot is facing towards the finished front edge.


Push rail holder (O) into the hole shown. Make sure that it is fitted straight, in line with the panel edges and then secure with screw (N).


b: Push fit 2 right runners (S) marked '**R**' into the holes shown on right side [2].


Fit 2 hinge plates (Q) making sure that the slot is facing towards the finished front edge.

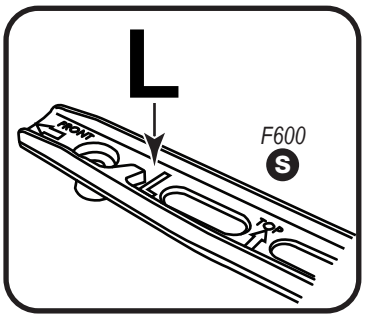


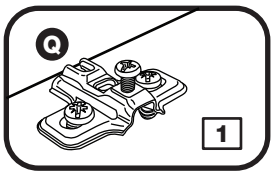

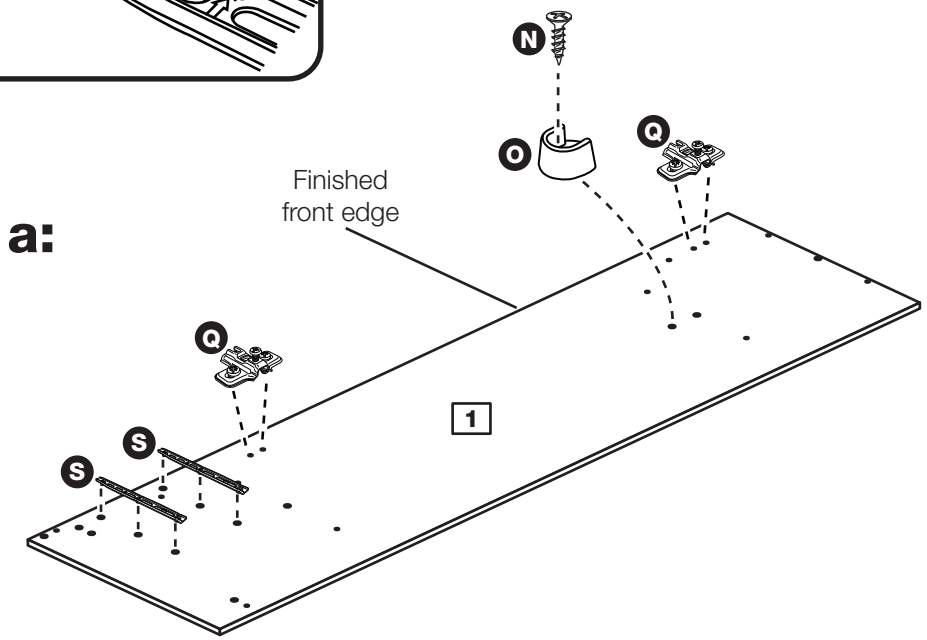

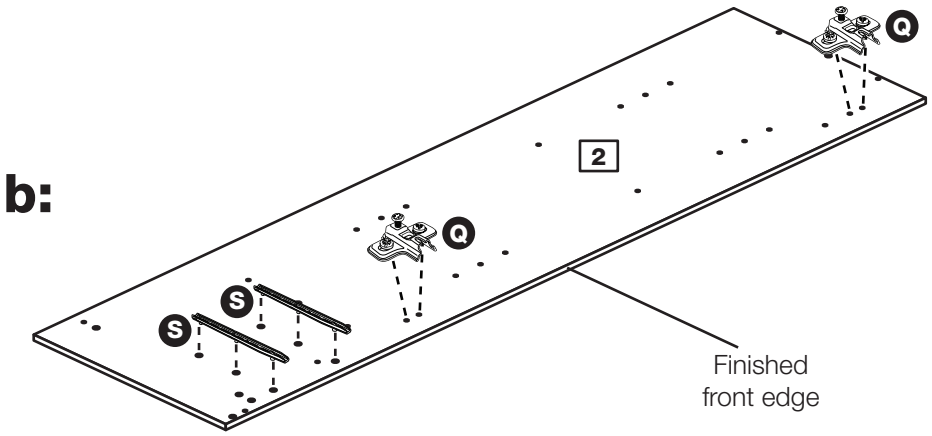

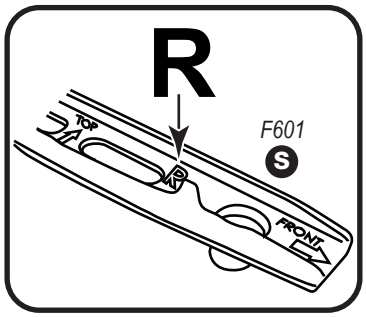

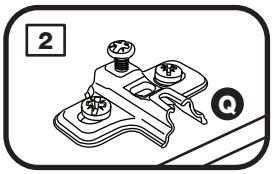


Assembly Instructions

Step 6

Prepare the top


Tap 2 wooden dowels A into the ends of the top 6.

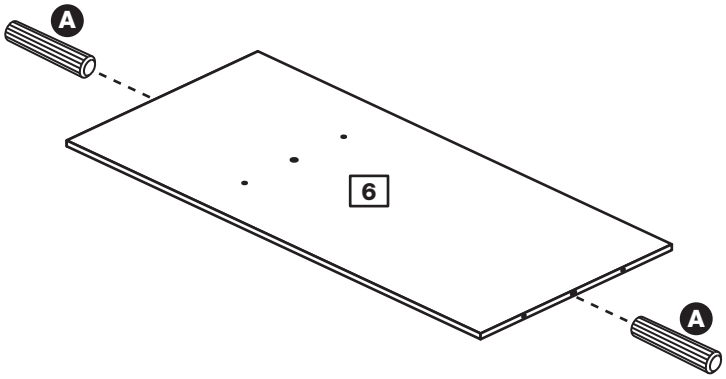

Step 7

Fit the top to the right side

Attach the top 6 to the right side 2 using the dowel already fitted and secure with 2 screws C.

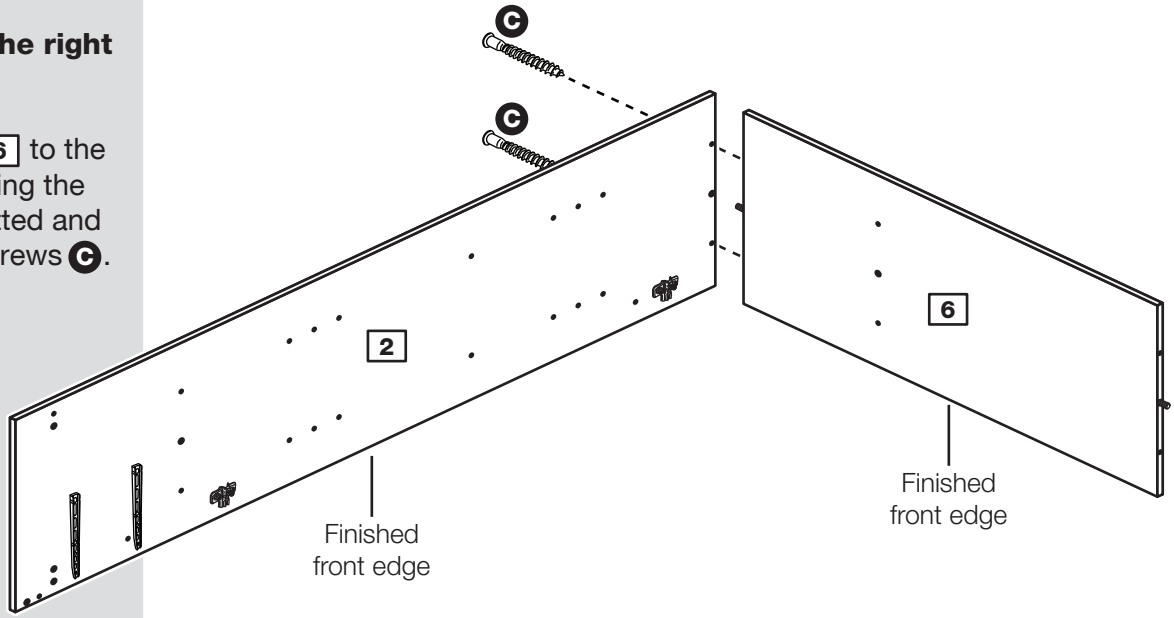


Step 8

Prepare the upright

Fit 2 hinge plates Q into the holes shown on the upright 3 making sure that the slot is facing towards the finished front edge.

Push rail holder O into the hole shown. Make sure that it is fitted straight, in line with the panel edges and then secure with screw N.

Tap in 2 wooden dowels A as shown.

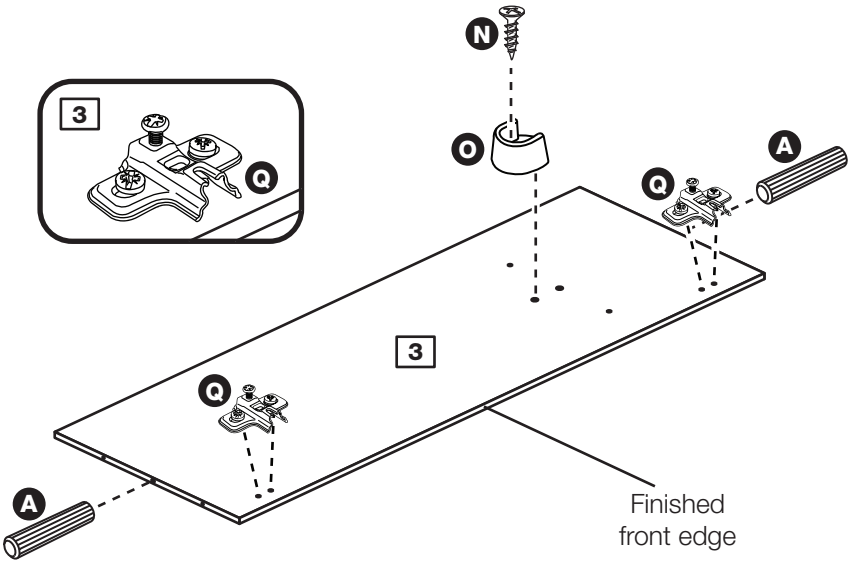


Assembly Instructions

Step 9

Fit the upright to the top


Attach the upright 3 to the top 6 using the dowel already fitted and secure with 2 screws C.

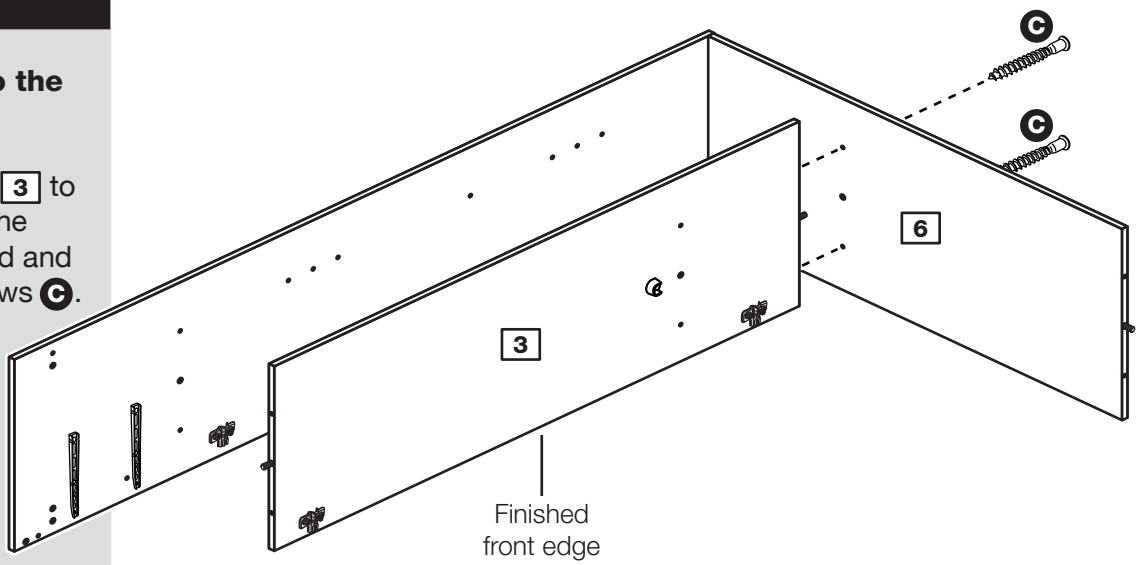

Step 10

Prepare the lower shelf


Tap 2 wooden dowels A into the ends of the lower shelf 7.

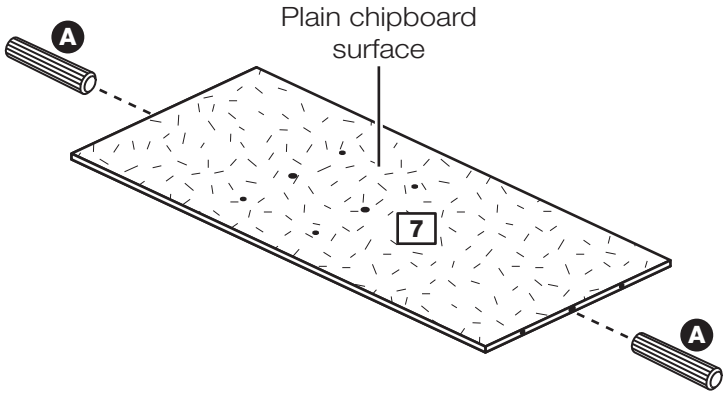

Step 11

Fit the lower shelf

Attach the lower shelf 7 to the right side 2 and upright 3 then secure with 4 screws C.

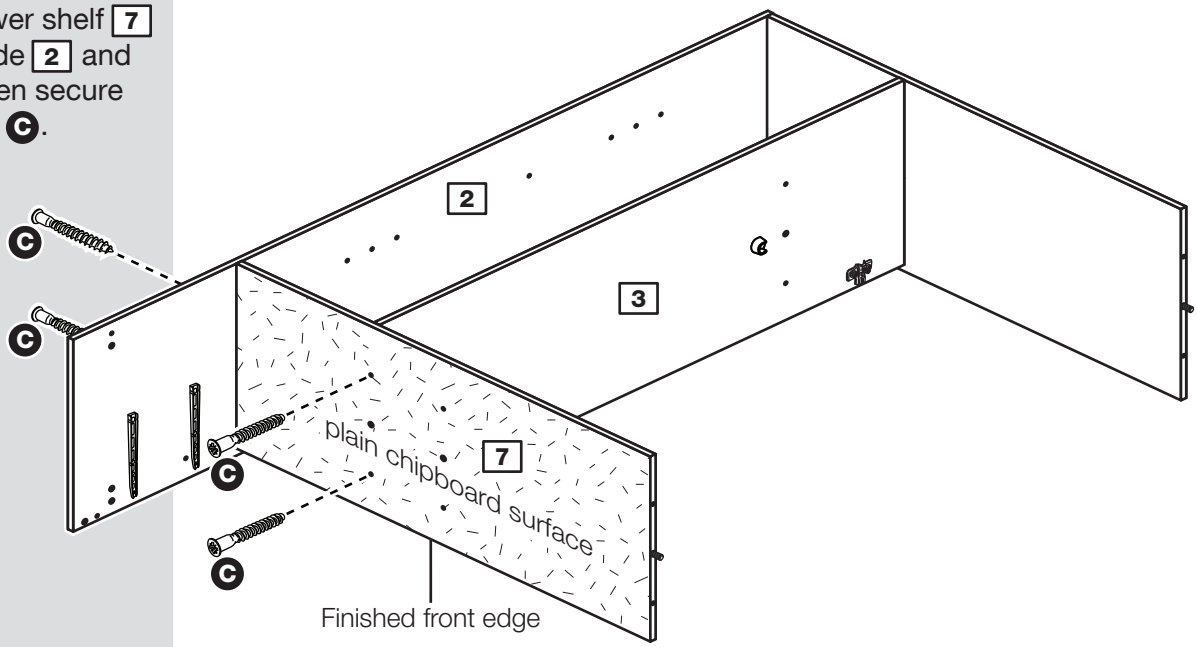


Assembly Instructions

Step 12

Prepare the horizontal


Tap 2 wooden dowels A into the ends of the horizontal 4.

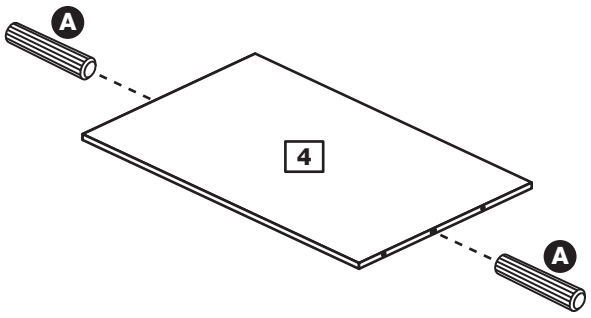

Step 13

Fit the horizontal to the upright

Attach the horizontal 4 to the upright 3 using the dowel already fitted and secure with 2 screws C.

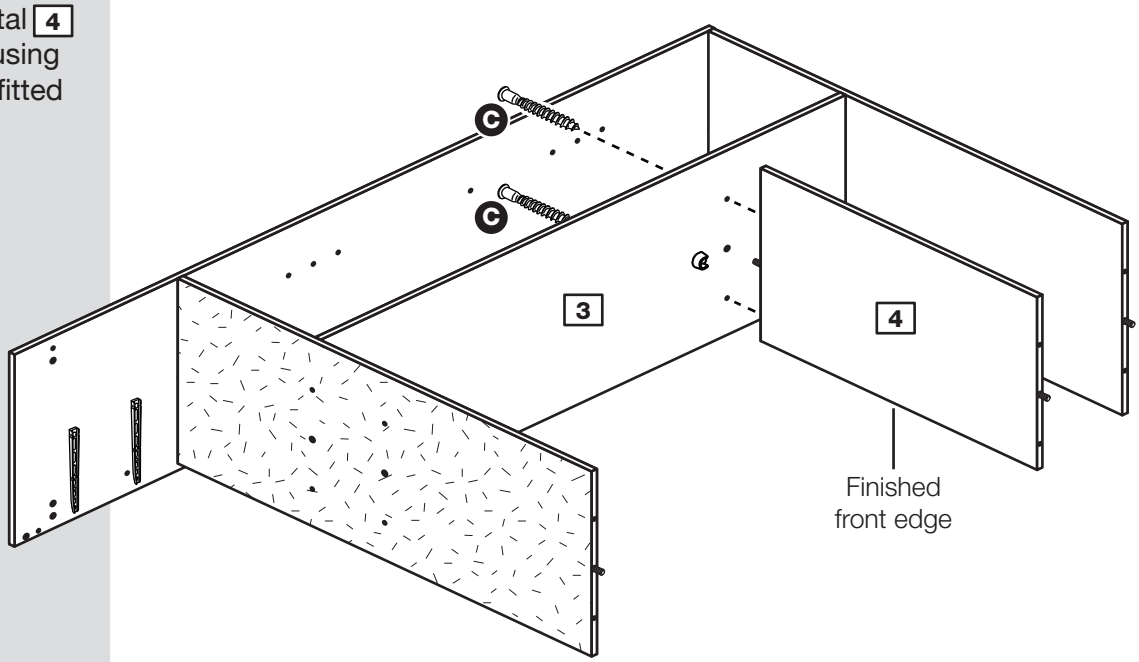

Step 14


Prepare both surfaces of the divider

a: Push fit 2 left runners (S) marked '**L**' into the divider [5].

Tap in 2 wooden dowels (A), as shown.


Turn the divider over

a:

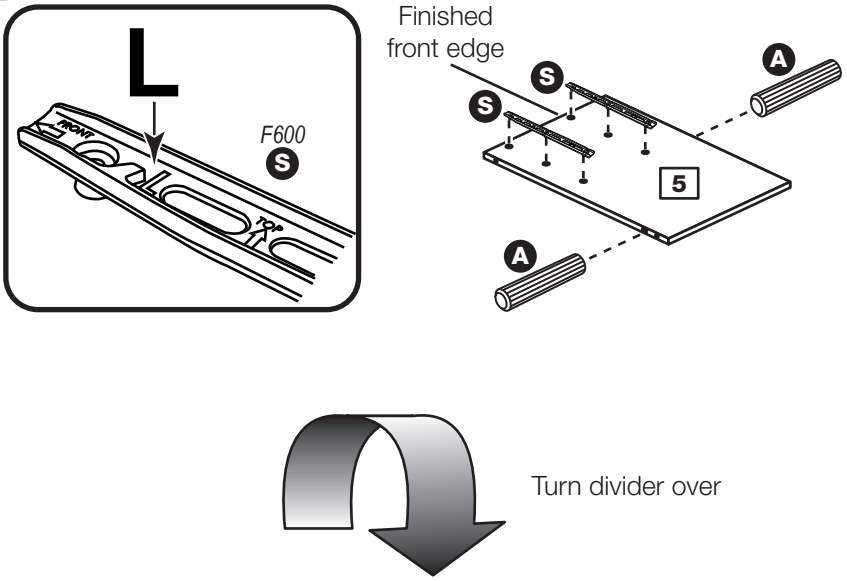

b: Push fit 2 right runners (S) marked '**R**' into the divider [5].


b:

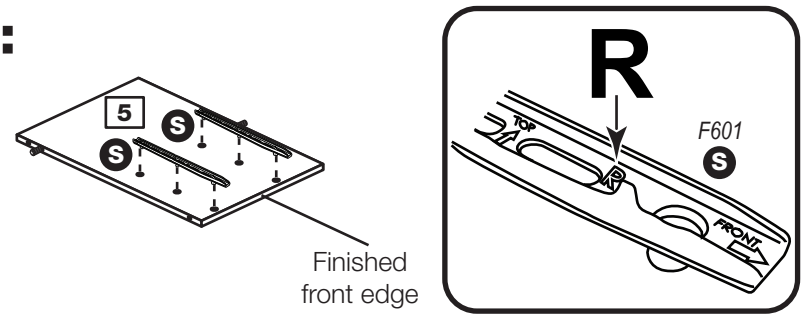

Step 15

Fit the divider

Attach the divider [5] to the lower shelf [7] using the dowel already fitted and secure with 2 screws (C).

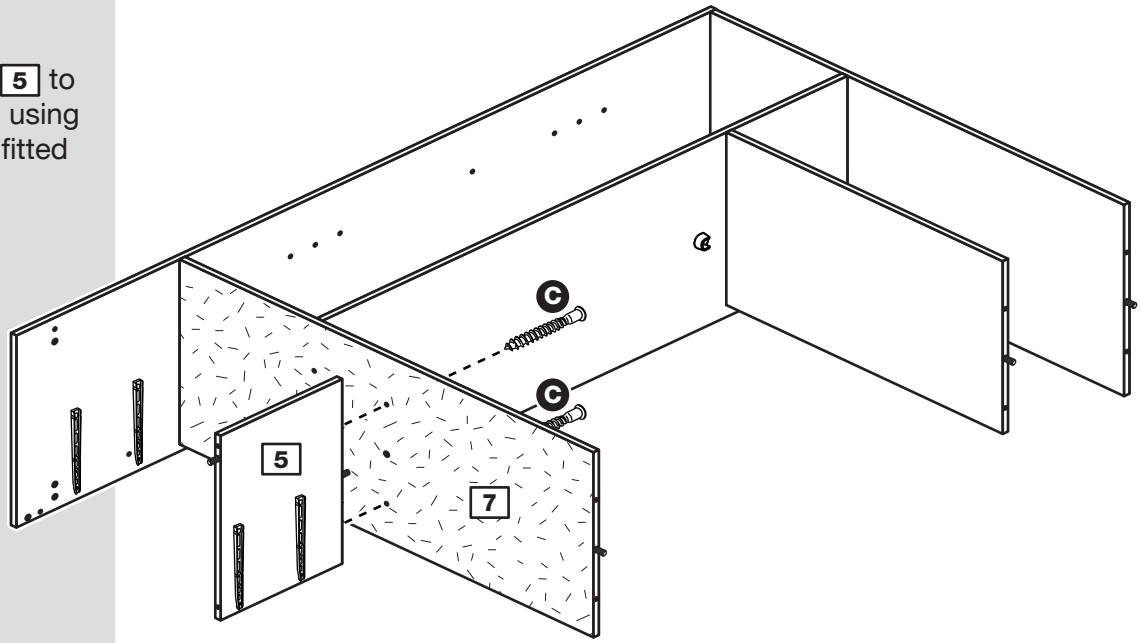


Step 16

Prepare the back rail, rail and plinth

Tap 2 wooden dowels A into the ends of the back rail 14.

Tap 4 wooden dowels A into the ends of the rail 15.


Tap 2 wooden dowels A into the ends of the plinth 16.

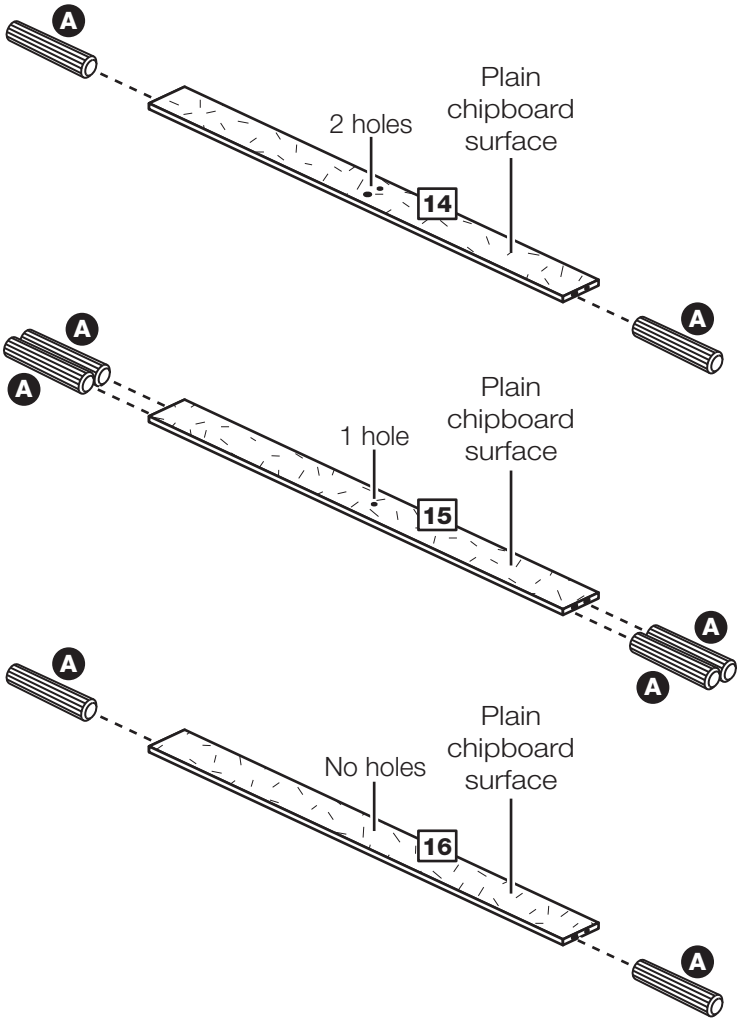

Step 17

Fit the back rail

Attach the back rail 14 to the right side 2 and divider 5 and secure with 2 screws C.

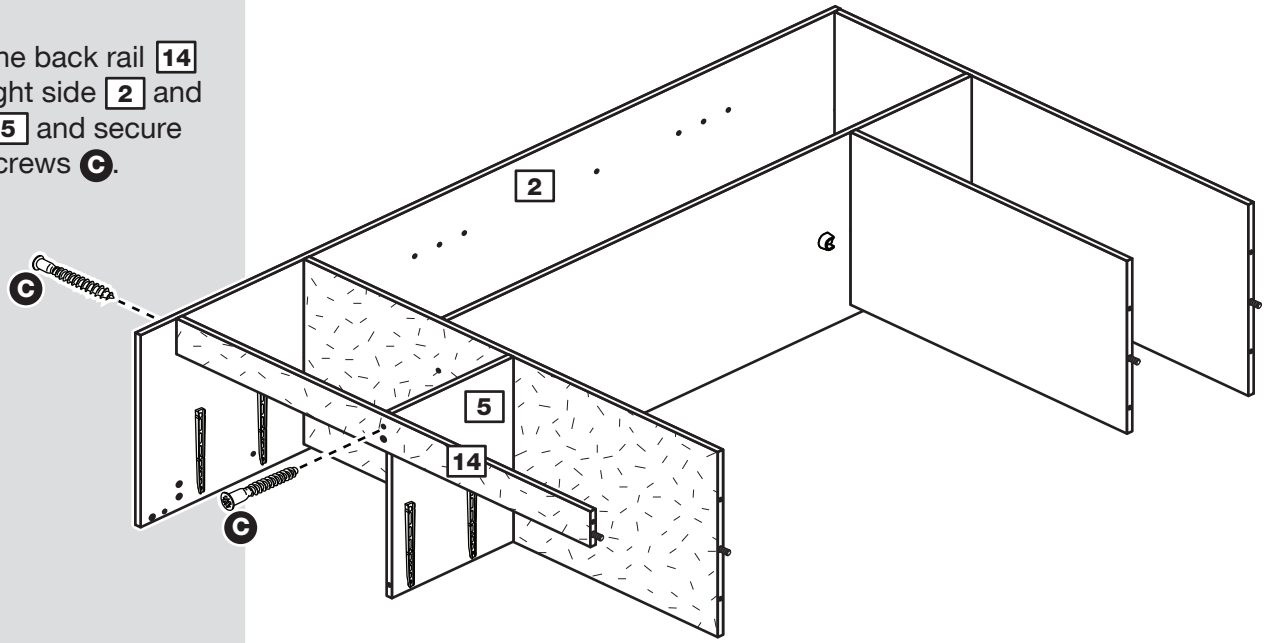


Step 18

Fit the rail and plinth

Attach the rail 15 to the right side 2 using the dowels already fitted.

Attach the plinth 16 to the right side 2 and and secure with screw C.

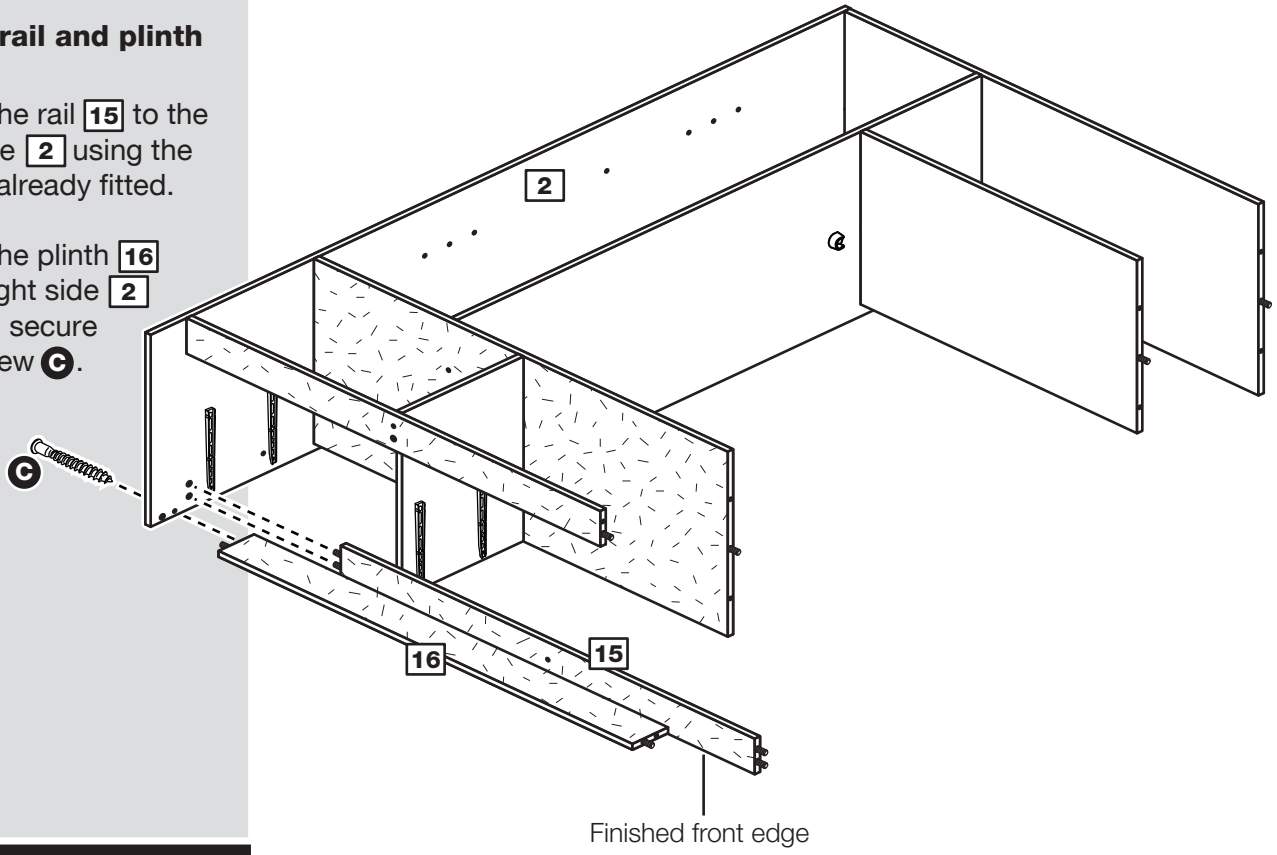


Step 19

Fit the left side and secure the rail to the divider

Attach the left side 1 to the assembly and secure using 8 screws C.

Secure the rail 15 to the divider 5 using screw E.

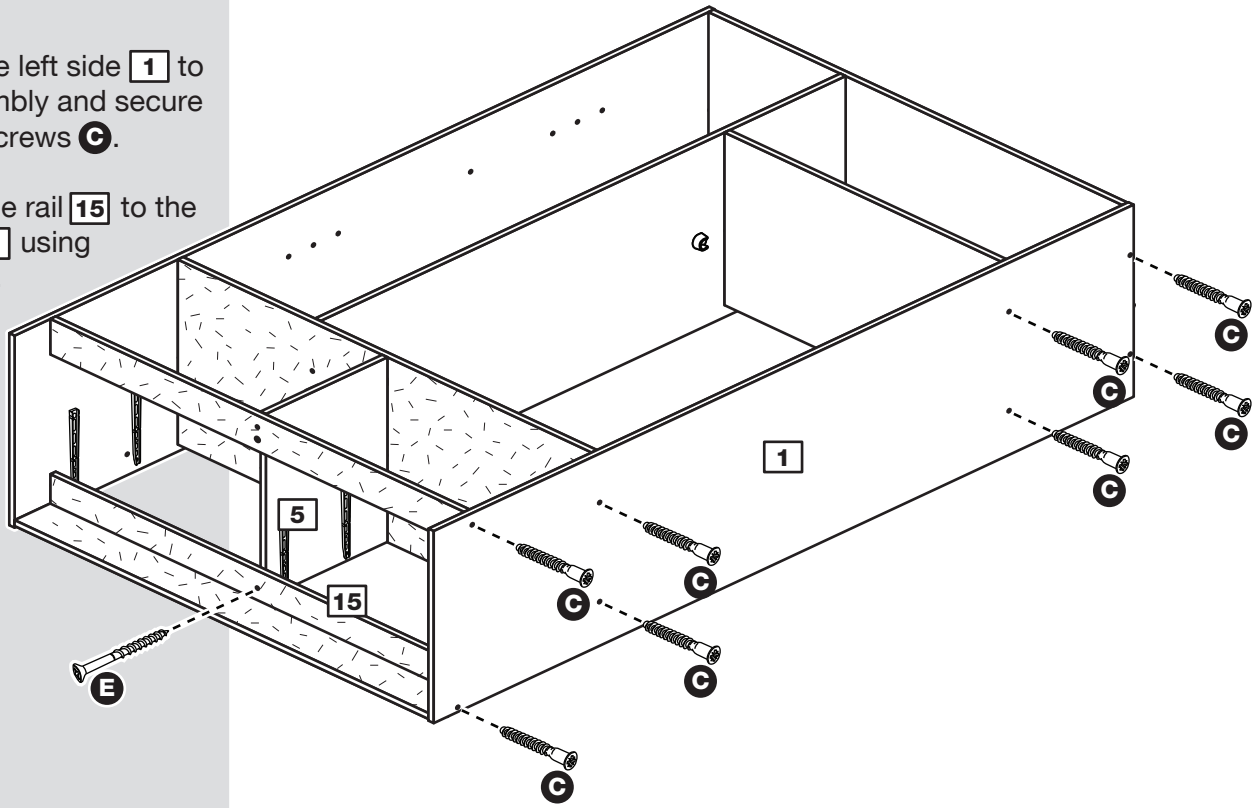

Step 20

Fit the back panel

a: Square up the unit by making sure that measurement **x to x equals y to y.**

Place the back 18 and foldy back 19 down onto the unit as shown, with the white surface facing the inside of the unit.

Make sure that the 2 backs are pushed up tight against each other and that they meet in the centre of the upright panel's edge.

b: Use the nail guide P to hold the nails D vertical and at the correct distance whilst you nail around the outside edges only of the 2 back panels 18 and 19.


Note: Nails should be spaced about 150mm apart.

c: Using 8 screws M, screw down between the backs and into the back edge of the upright panel

Stand the unit up for the next stage.

Warning: The robe is heavy. Lift with care.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

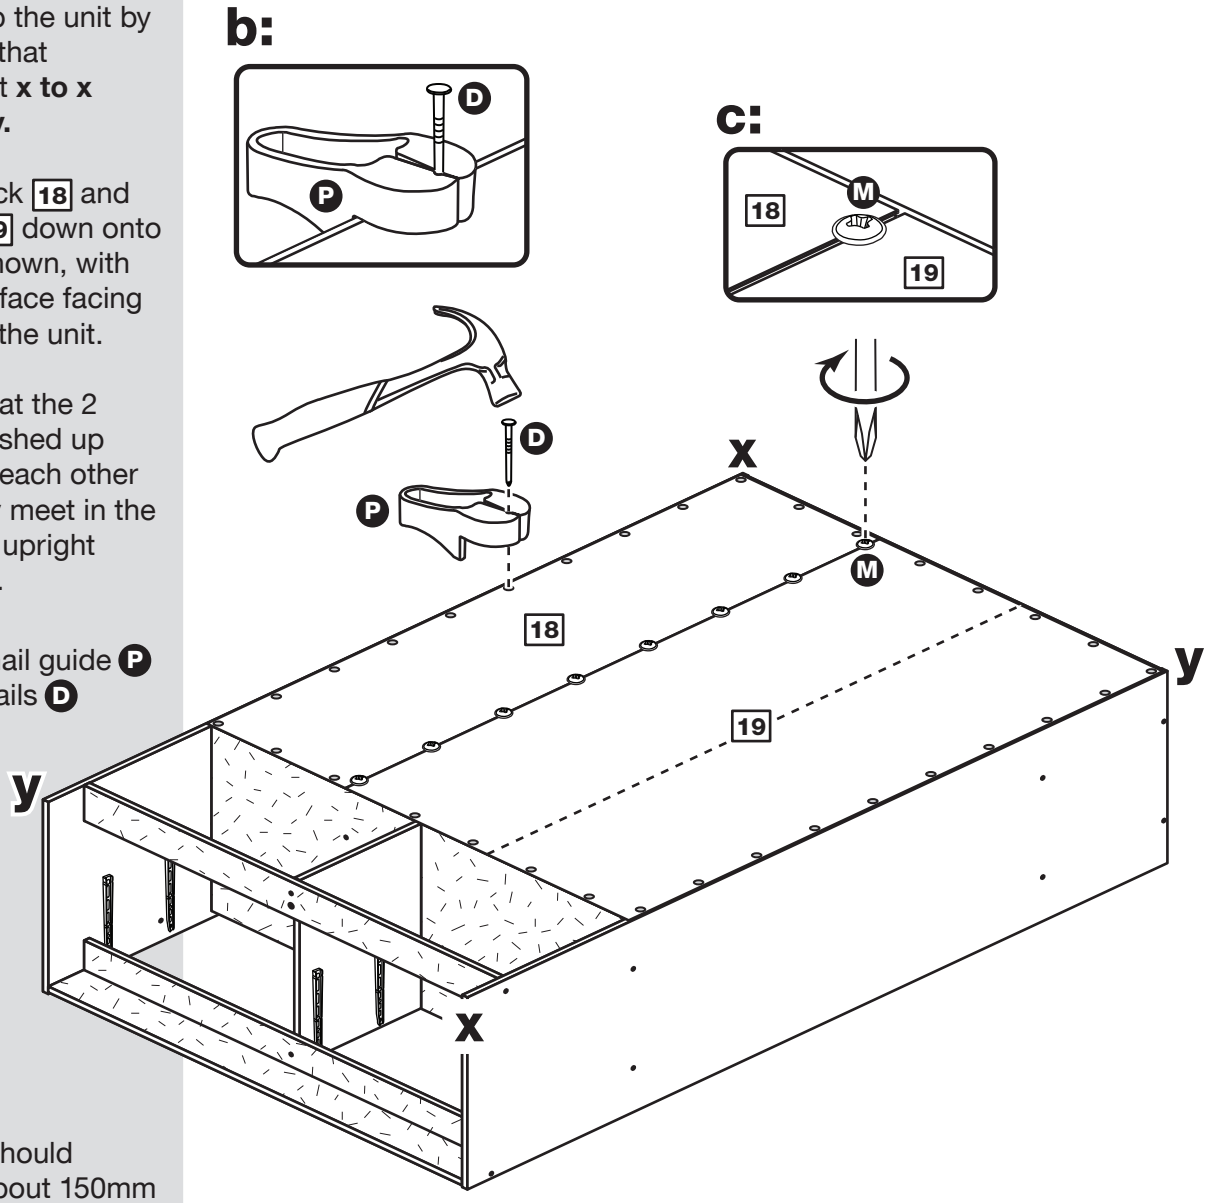

Step 21


Fit the hanging rail and drawers

a: Push the hanging rail 11 into the rail holders O on the side panels.

b: Lift the front of the drawer whilst inserting to overcome the 'stop' system.

Note: Remember the right drawer front has an identification hole - refer back to step 1.

Note: To ensure that your drawers run smoothly, spray a small amount of furniture polish into the grooves.

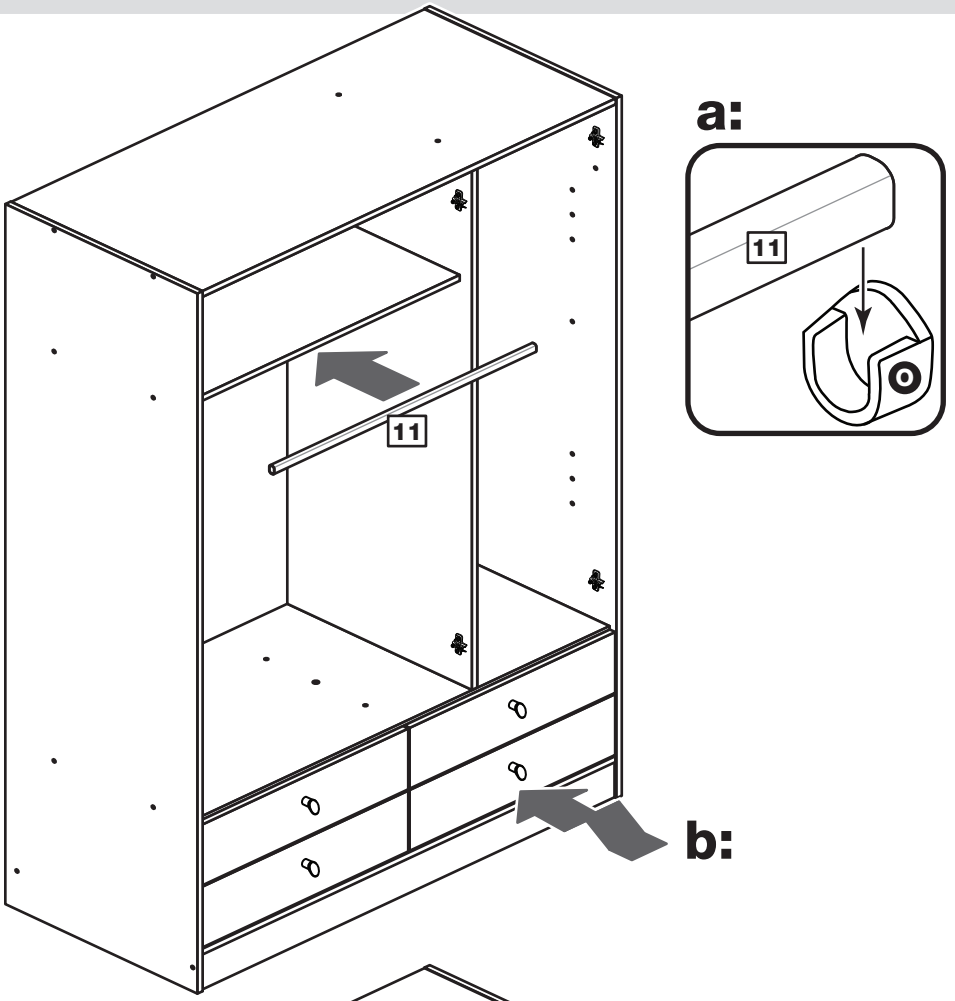


Step 22

Fit the 3 loose shelves

Insert 4 shelf studs G for each of the shelves.

Slide in the 3 loose shelves 12, placing them on top of the shelf studs G.

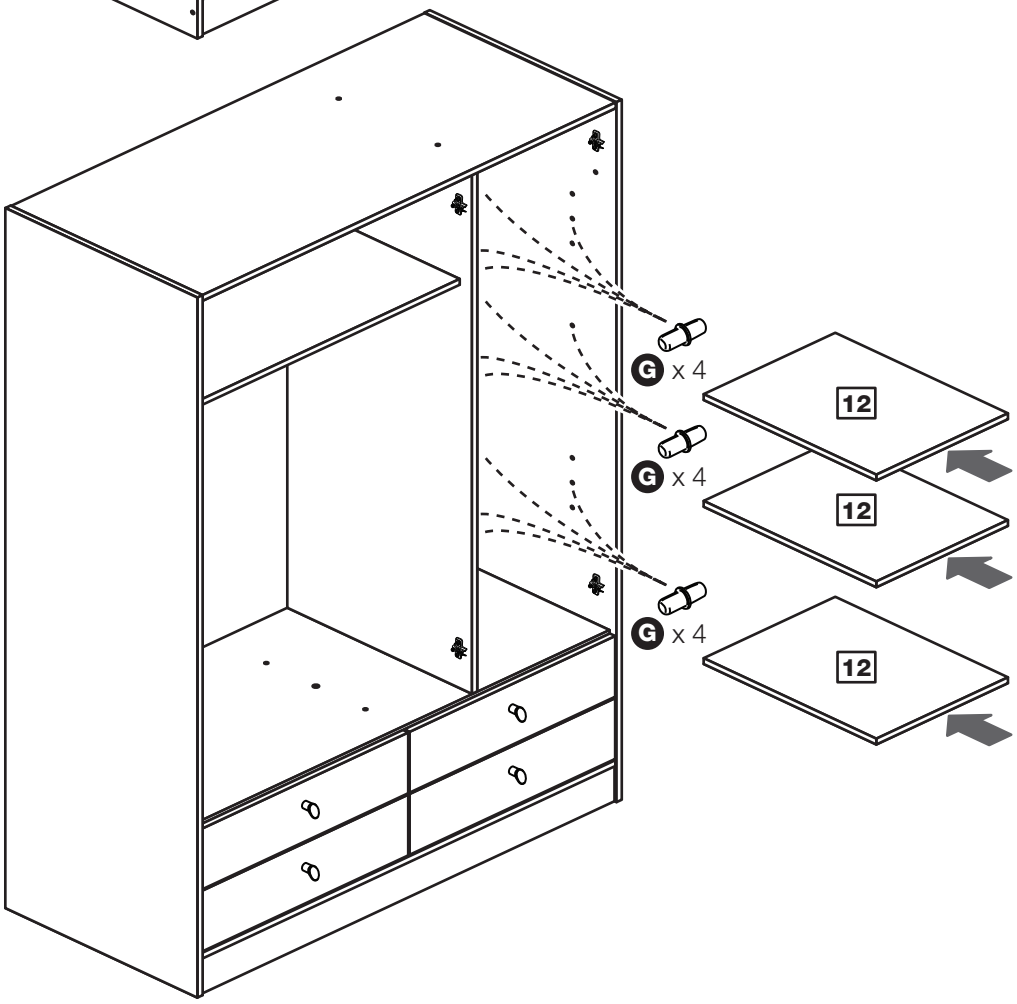


Step 23

Prepare the 3 doors

Push fit the hinges (R) into the door [17].

Secure each hinge with 2 screws (N).

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the front edge of the door.

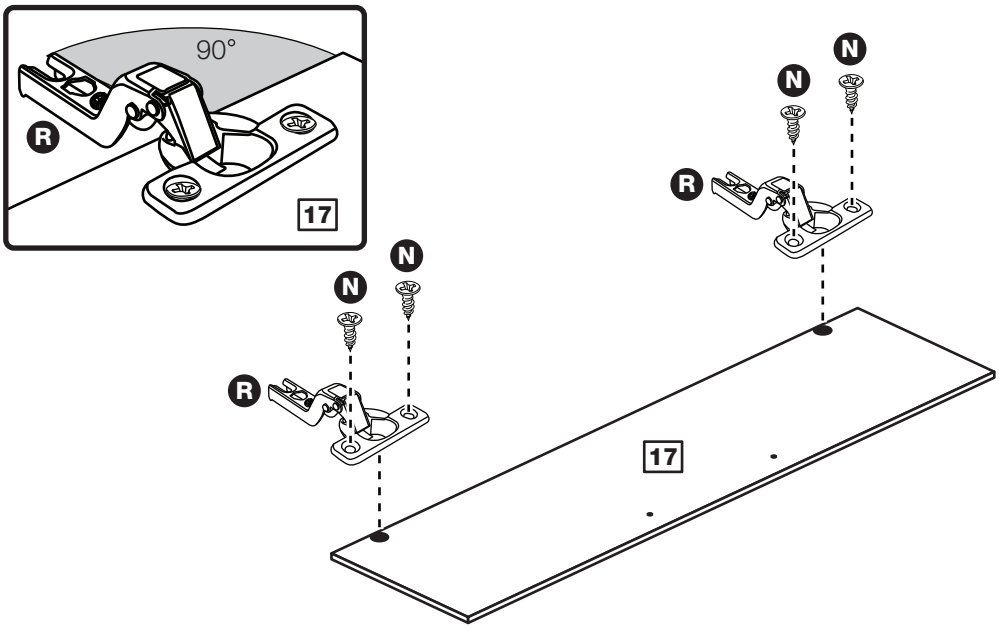

Step 24

Drill 1 handle hole in each door

Important: Please follow these instructions carefully.


Lay the 3 doors down onto a smooth surface.


Check that the hinges (R) and holes are in the same place as the diagrams.

Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.

Using the pilot hole in the rear face of the door, drill through the hole indicated opposite, using a 2.5mm diameter drill.

Turn the door over and open out the 2.5mm hole that you have just drilled by drilling back through it with a 5mm drill.

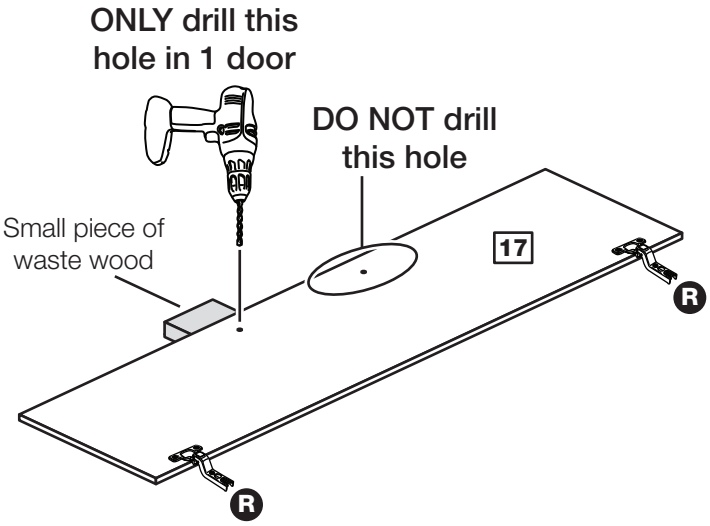

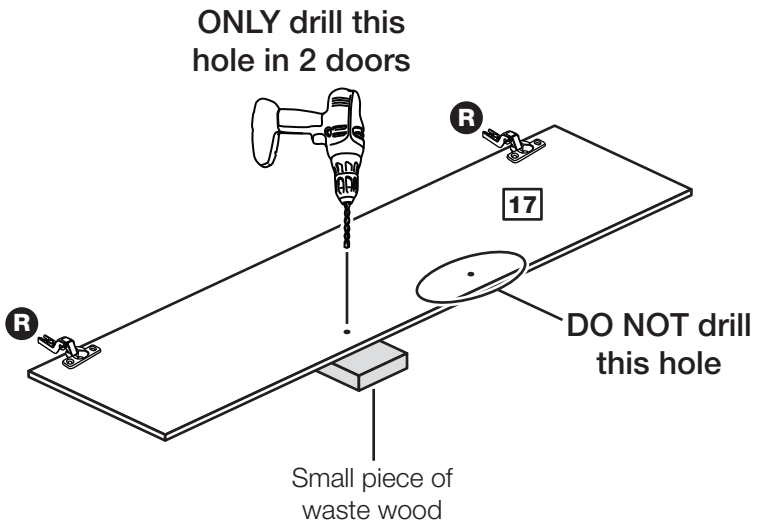

Step 25

Fit doors and handles

2 people are needed here

Note: The easiest way to attach the doors 17 is to fit the top hinge first, then align and fit the bottom hinge.

a: Push the hinge R onto the front part of the hinge plate Q.


b: Keep the hinge R FLAT against the hinge plate Q as you slide it across as far as it will go. Tighten screw A.


c: The hinge R must be flat against the hinge plate Q prior to any adjustment.

d: The hinge R must NOT be AT AN ANGLE to the hinge plate Q when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle I to each of the doors using screw H.

Note: Do not overtighten screw H.

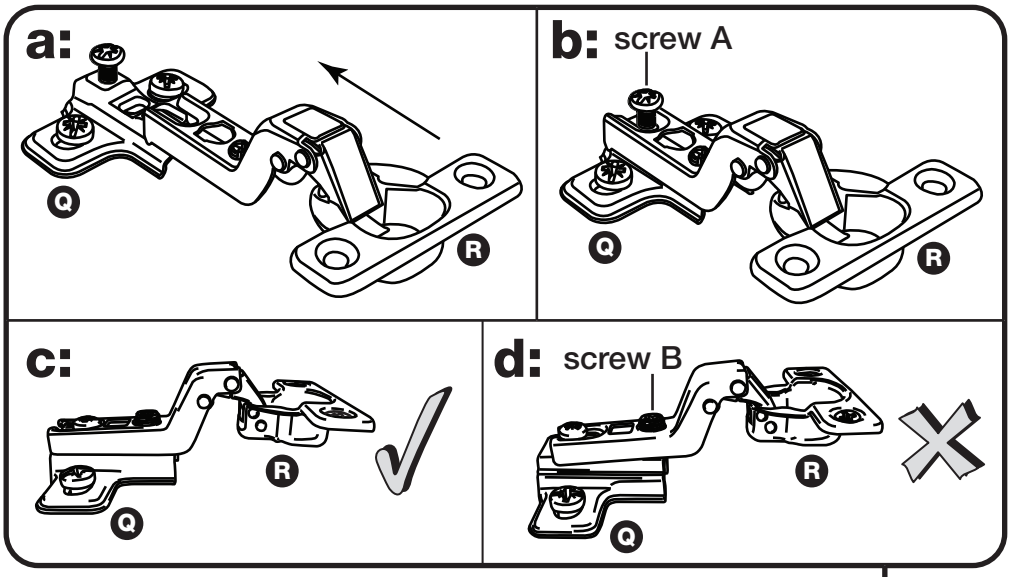

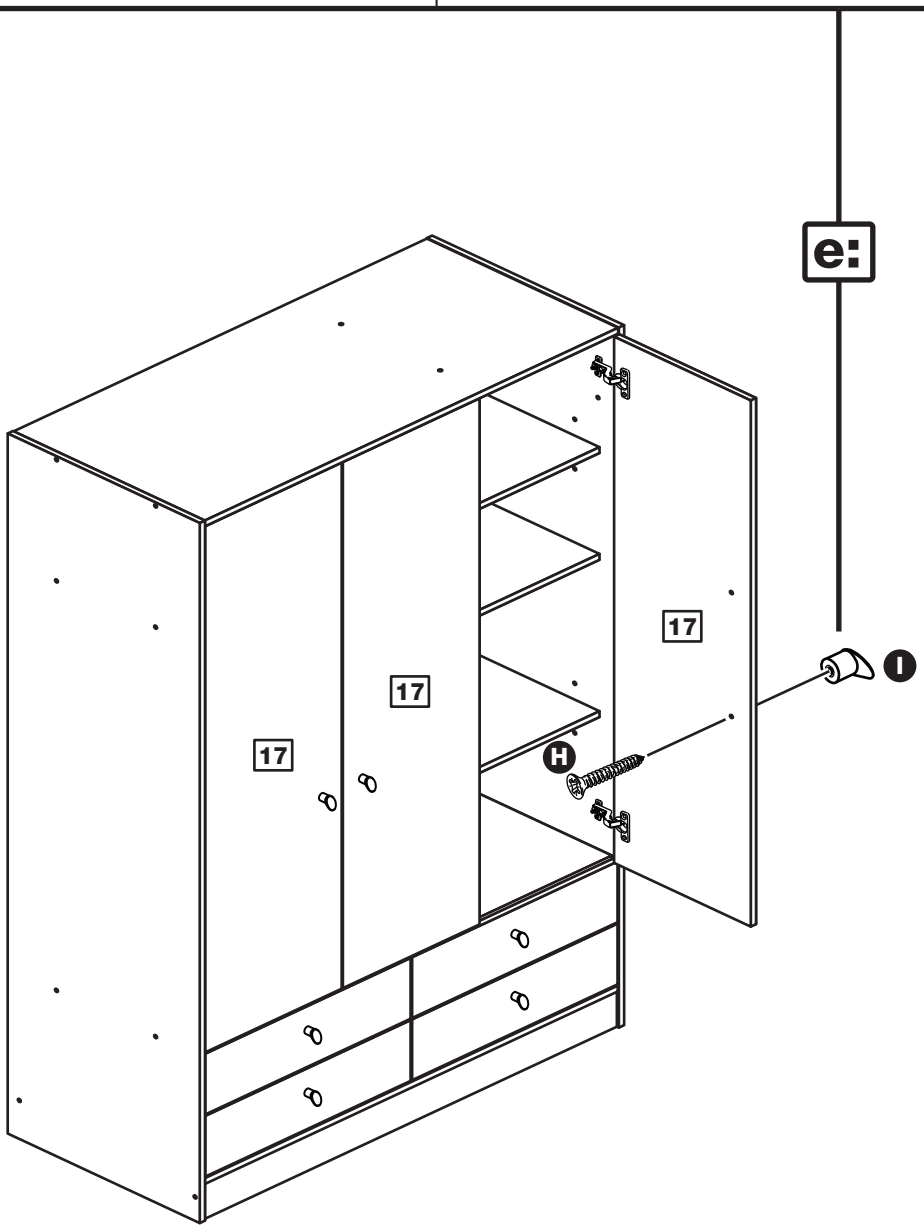

Step 26


Adjust the doors if required

a: Before adjusting the doors, use a spirit level to check the lower shelf (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

c: Forward and Back adjustment.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

d: Sideways adjustment.
To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

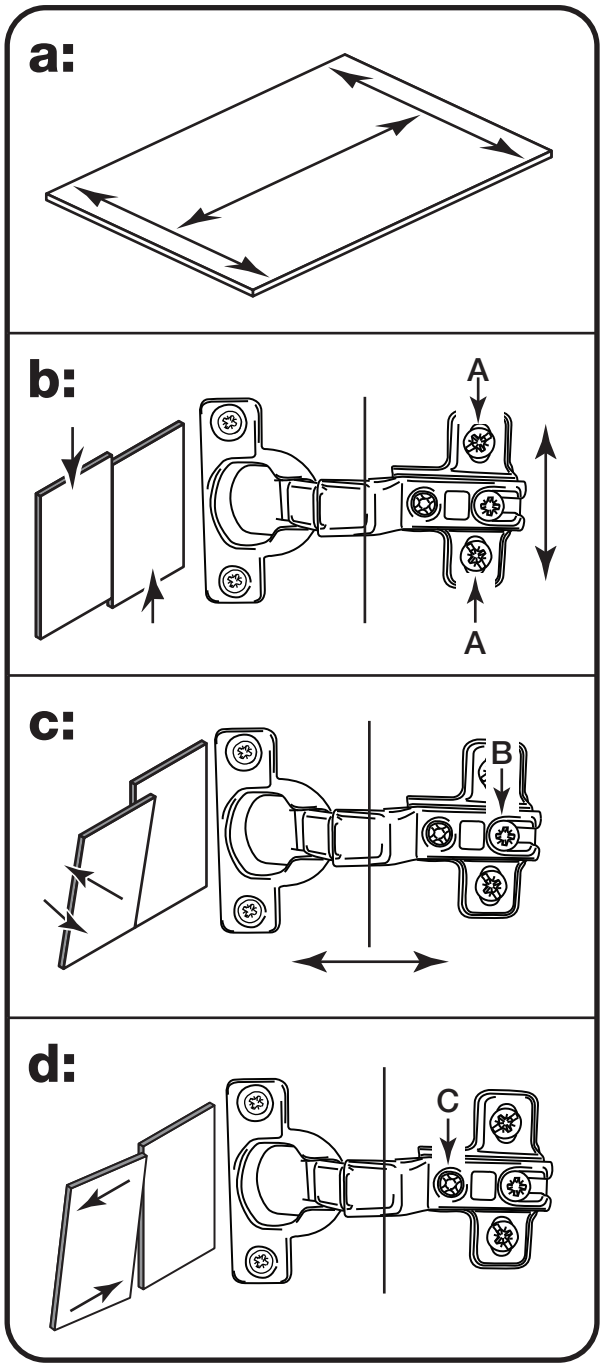

Step 27

Joining units together

Fittings have been supplied so you are able to join units together.


Make sure that your first unit is level.


Push the other unit up against the first unit and ensure both units are level.


Check that the ends are flush and in line, then clamp them together.

Using a 5mm drill bit, drill through the 2 holes (shown circled) in the side panel into the adjoining side panel of the other unit.

Push the connecting sleeves K into the holes and then screw the connecting bolts J in from the other side.

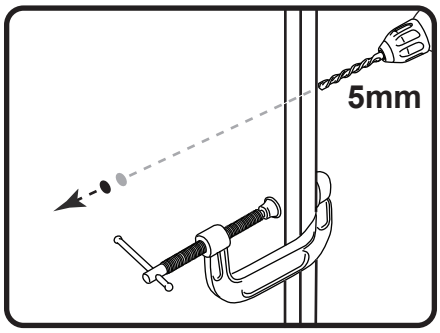

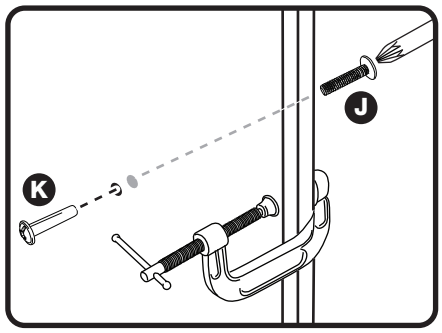

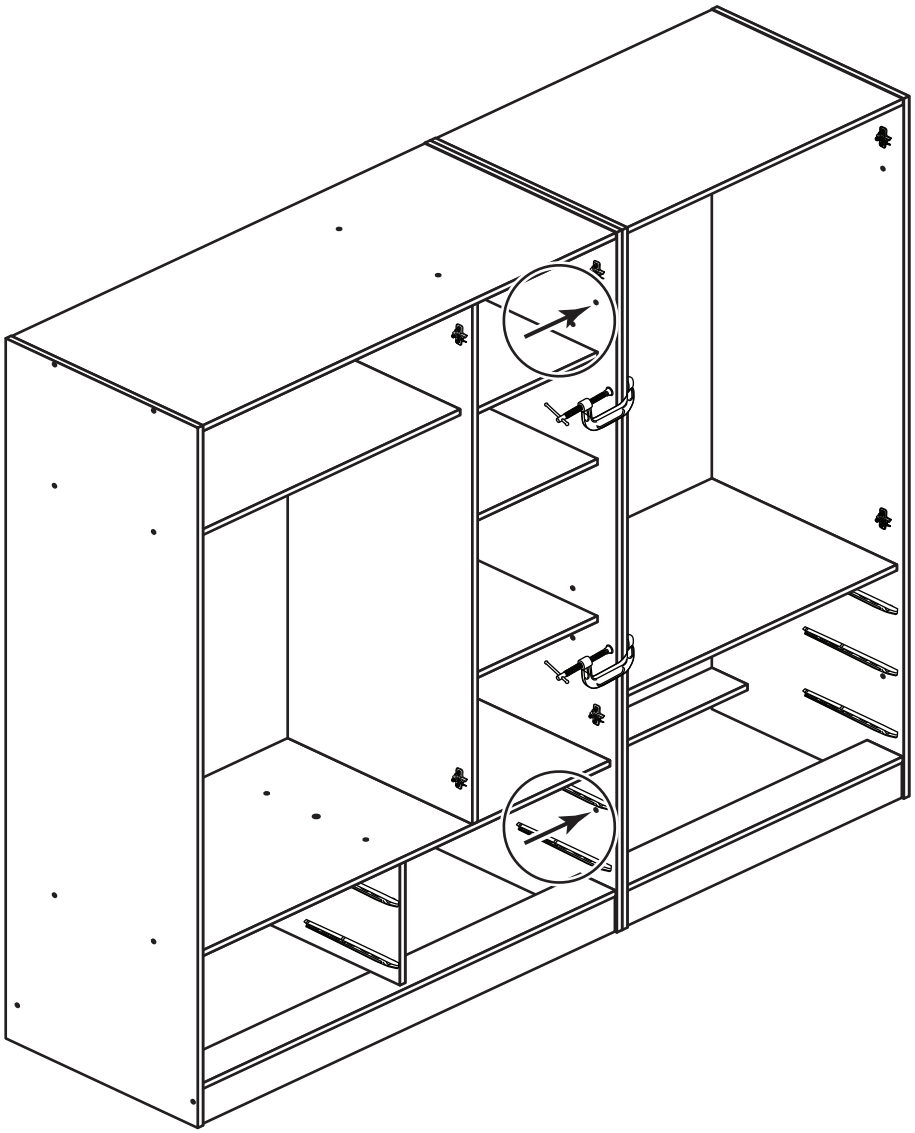

Step 28

Attach bracket to top

To prevent possible overbalancing, we recommend that this unit is secured to a suitable wall by use of the bracket (L) fitted to the top of the unit.

Fixings are not supplied, as they will need to suit the wall type and the length of screw will depend on the distance from the back of the unit to the wall.

Fix the bracket (L) loosely onto the top of the unit using screw (M) and mark the wall for the wall fixing.


Swivel the bracket (L) away from the wall and drill a hole in the wall using a suitable drill bit and fit your wall fixing.

Swivel the bracket (L) back and fix the bracket to the wall, then tighten Screw (M).

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

Warning: The robe is heavy. Lift with care.

Assembly is complete

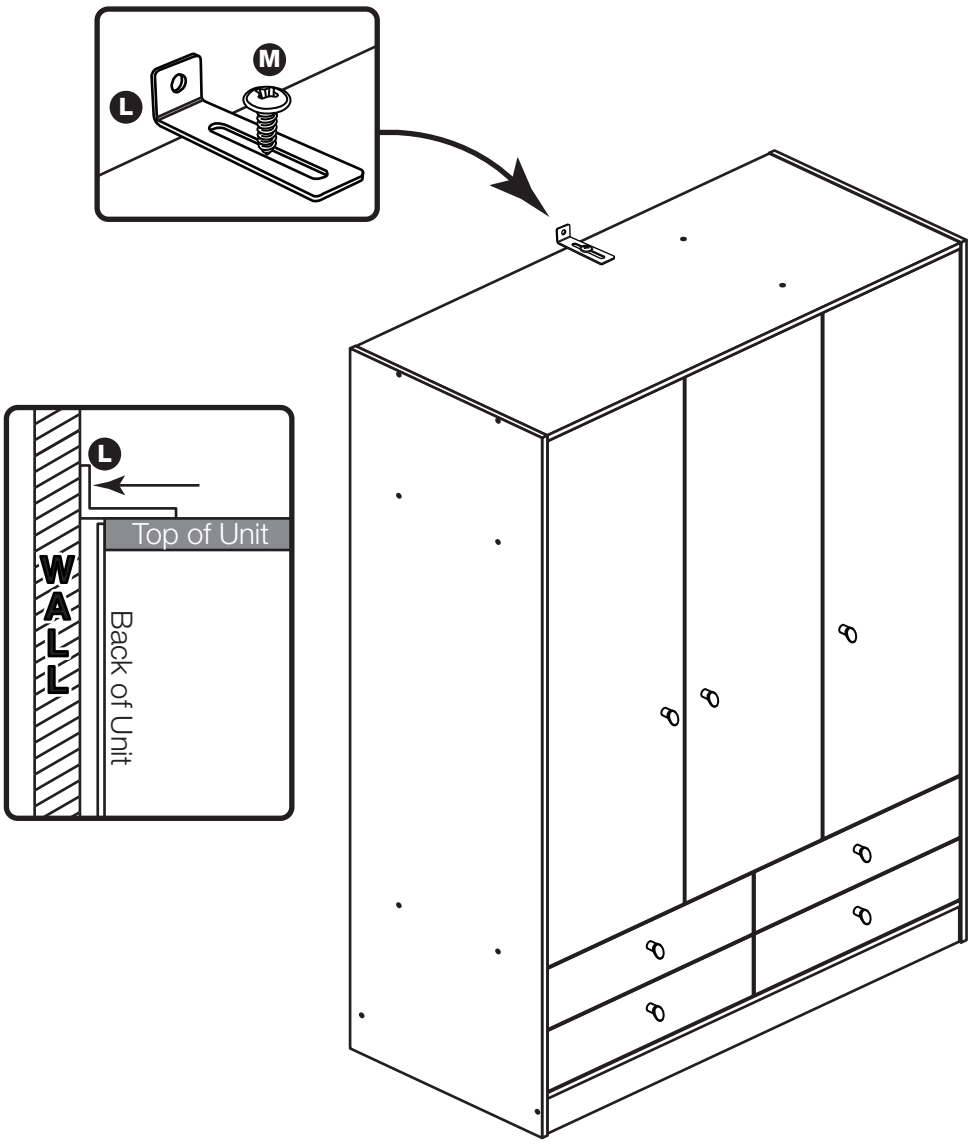

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW