
# Scandinavia - Dressing Table w. 8 Drws + Stool

**Assembly Instructions** - Please keep for future reference

642/3746

643/6908

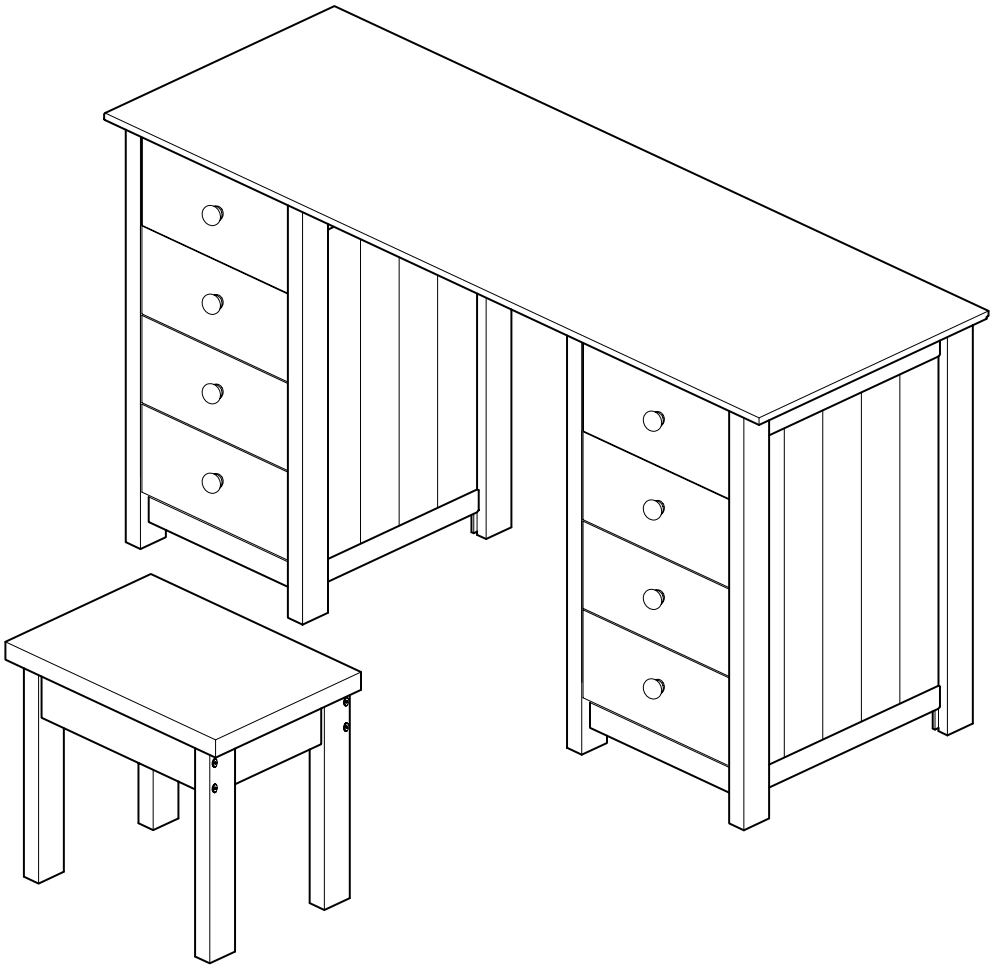

## Dimensions

Width - 140cm
Depth - 58cm
Height - 74cm

**Important** - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 01/04/12

# Safety and Care Advice

**Important -** Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

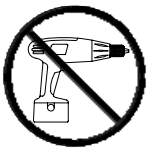

- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- The maximum safe weight of user: 110kg.

## Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

***Note:*** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

# Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


## Please check you have all the panels listed below

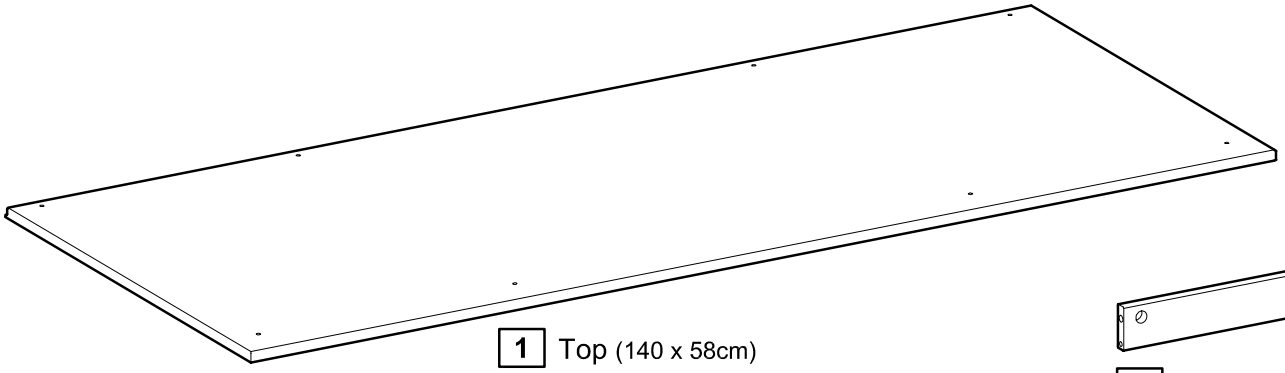


**1** Top (140 x 58cm)




**4** Plinth x 2
(31.8 x 5.5cm)

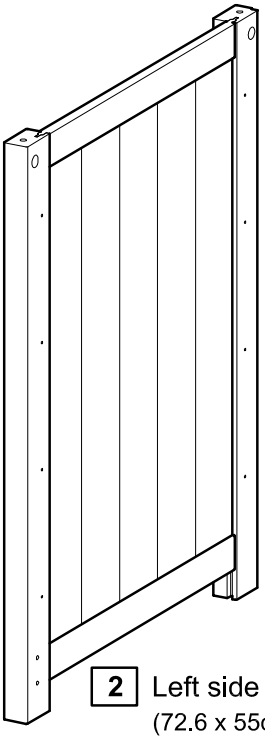


**2** Left side x 2
(72.6 x 55cm)

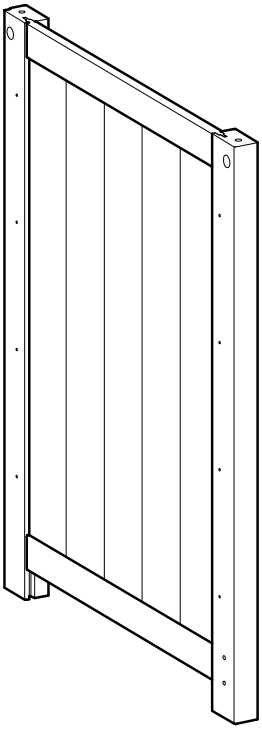


**3** Right side x 2
(72.6 x 55cm)

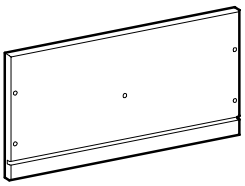


**5** Drawer front x 8
(31.4 x 15.7cm)

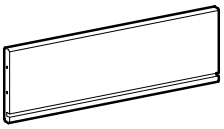


**6** Drawer back x 8
(28.6 x 9cm)

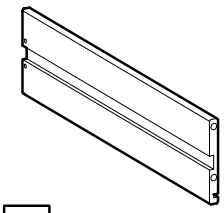


**7** Left drawer side x 8
(44.2 x 10.7cm)

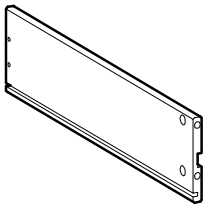


**8** Right drawer side x 8
(44.2 x 10.7cm)

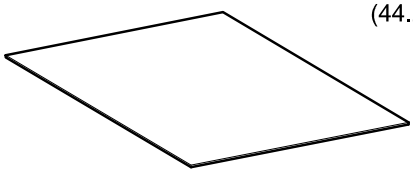


**9** Drawer bottom x 8
(43.9 x 29.7cm)

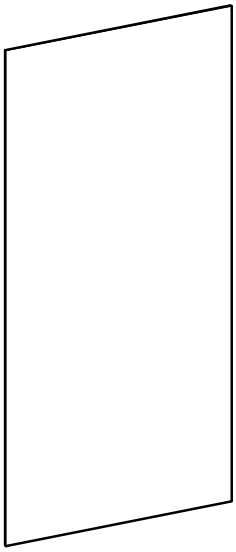


**10** Back x 2
(68 x 33.6cm)




**11** Stool leg x 4
(38.6 x 5.5cm)



**12** End rail x 2
(19.4 x 9cm)

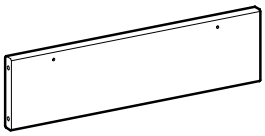

**13** Side rail x 2
(34 x 9cm)












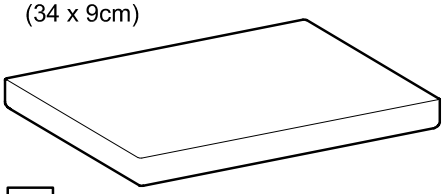


**14** Seat
(45 x 35cm)


# Components - Fittings


## Please check you have all the fittings listed below

***Note:*** The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

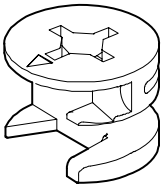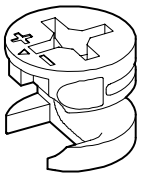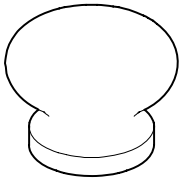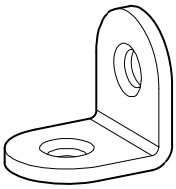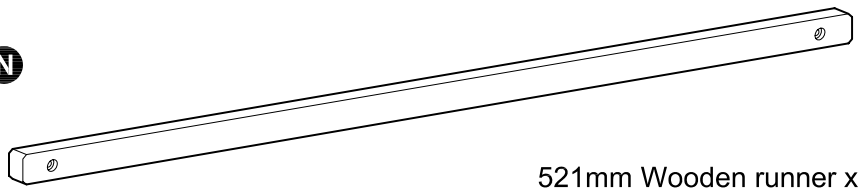
| | | |
|---|---|---|
| **A**  Large cam x 20 | **B**  Small cam x 32 | **C**  Locking pin x 52 |
| **D**  12mm Screw x 8 | **E**  20mm Screw x 32 | **F**  35mm Screw x 40 |
| **G**  16mm Nail x 30 | **H**  30mm Dowel x 4 | **I**  30mm Dowel x 4 |
| **J**  Allen key x 1 | **K**  Knob x 8 | **L**  Angle x 4 |
| **M**  60mm Screw x 8 | **N**  521mm Wooden runner x 16 | |


## Tools required



Philips screwdriver (medium & large)



Flatblade screwdriver (medium)


Suitable drill bit (for use with wall plug)

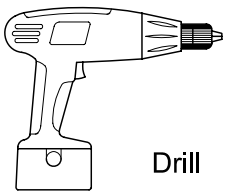

Drill


Small hammer



Ruler/tape measure


Eye protection (when using a hammer or glue)

## Ruler - Use this ruler to help correctly identify the screws



# Components - Key Diagram

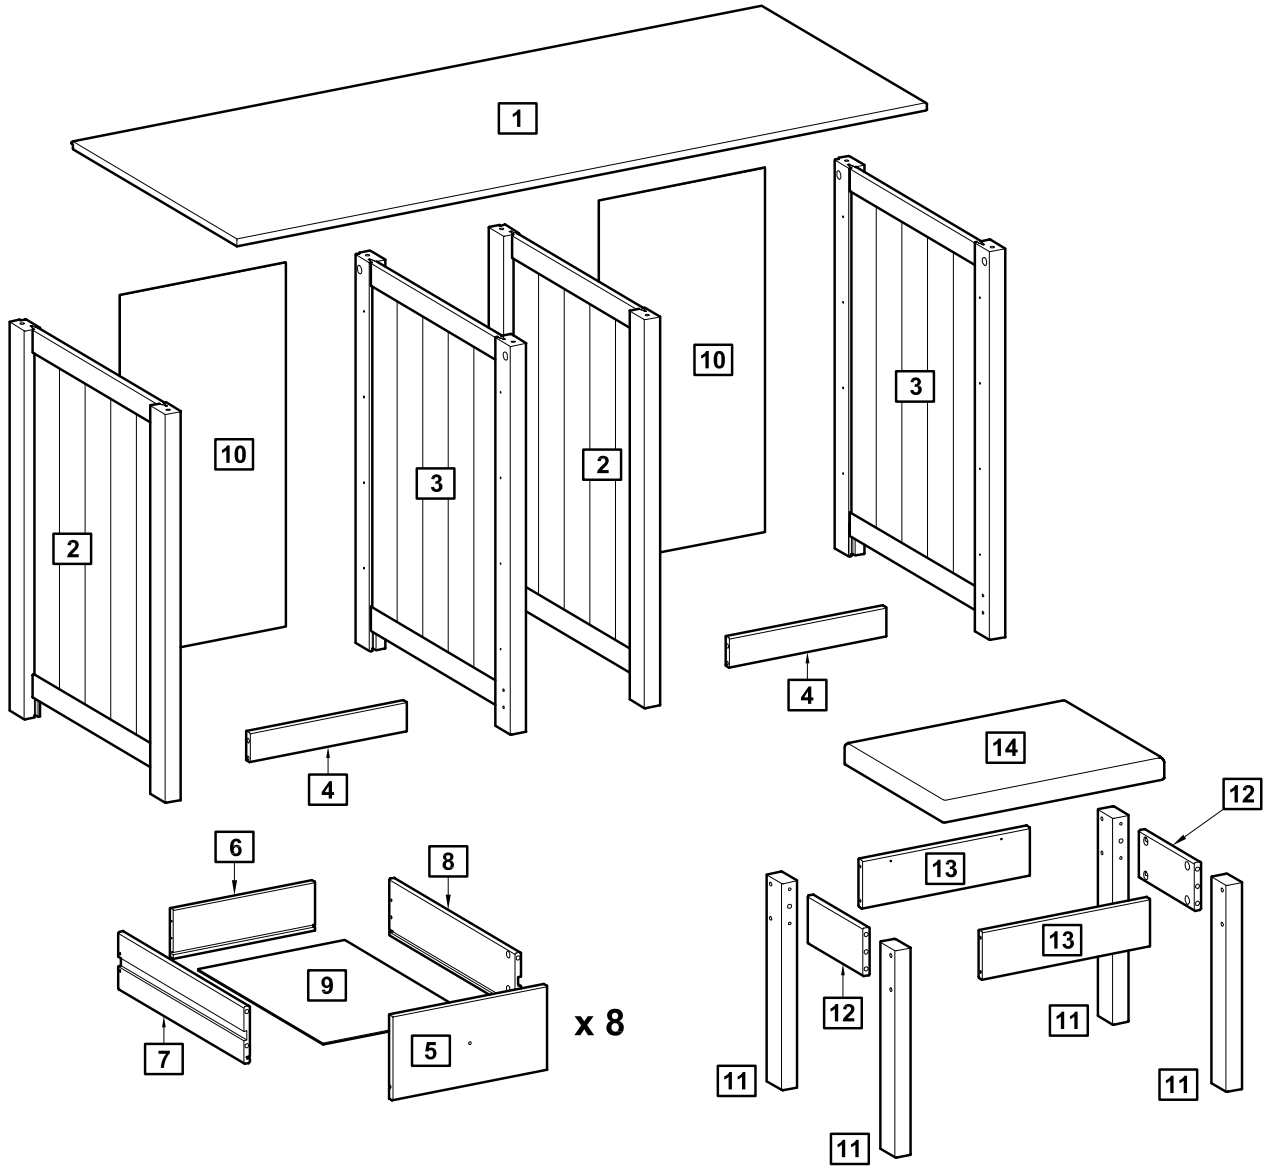



# Function of Cam and Locking Pin

**Step 1:**
Fix the locking pin to the wooden panel.

**Step 2:**
Push the wooden panel with the attached locking pin onto the other wooden panel.

**Step 3:**
Place the cam into the hole, arrow pointing towards the locking pin.

**Step 4:**
Tighten: Turn the cam to the right.

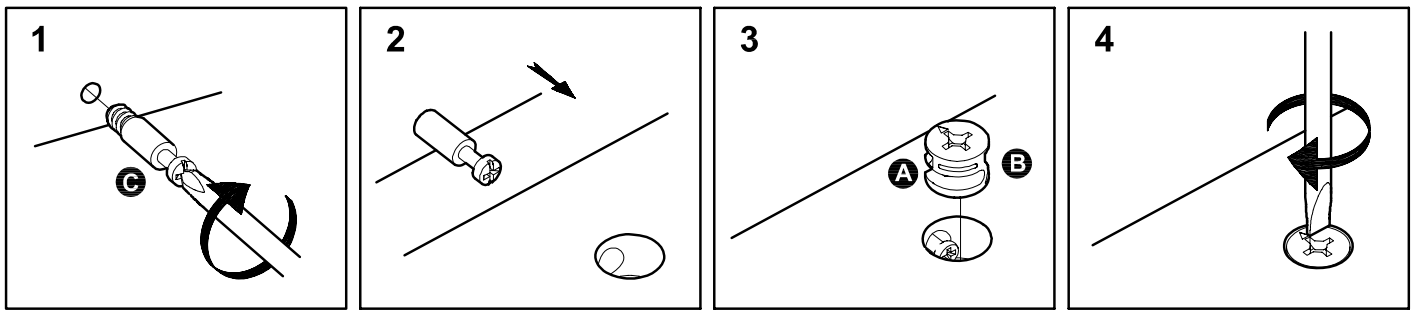


# Assembly Instructions

## Assembly of dressing table.

### Step 1

**Attaching the wooden runners to the sides.**

Fix the wooden runners N to the sides 2 and 3, using screws E through the holes indicated.

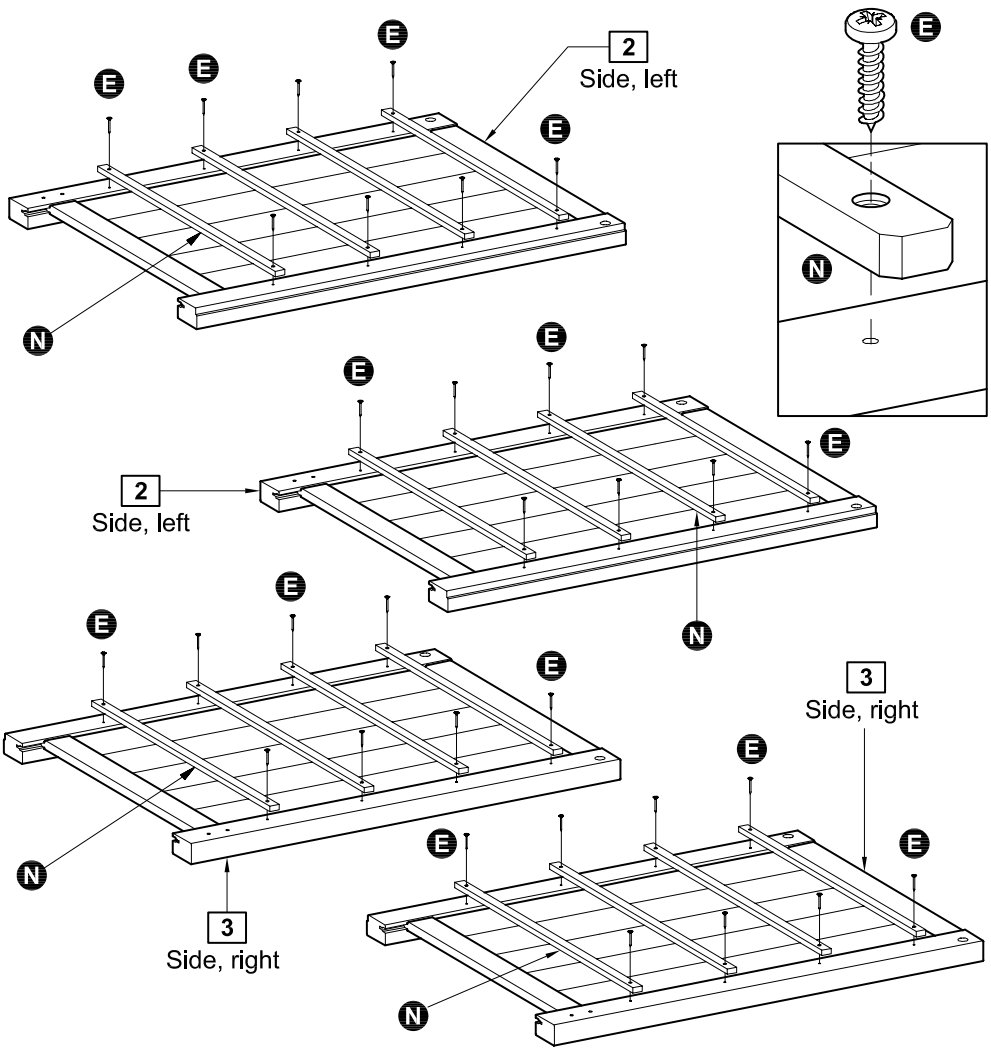



### Step 2

**Mounting the locking pins to the sides.**

Screw the locking pins C into the holes indicated on the sides 2 and 3.

***Note:*** Insert locking pins C as far as shown. **Do not over tighten.**

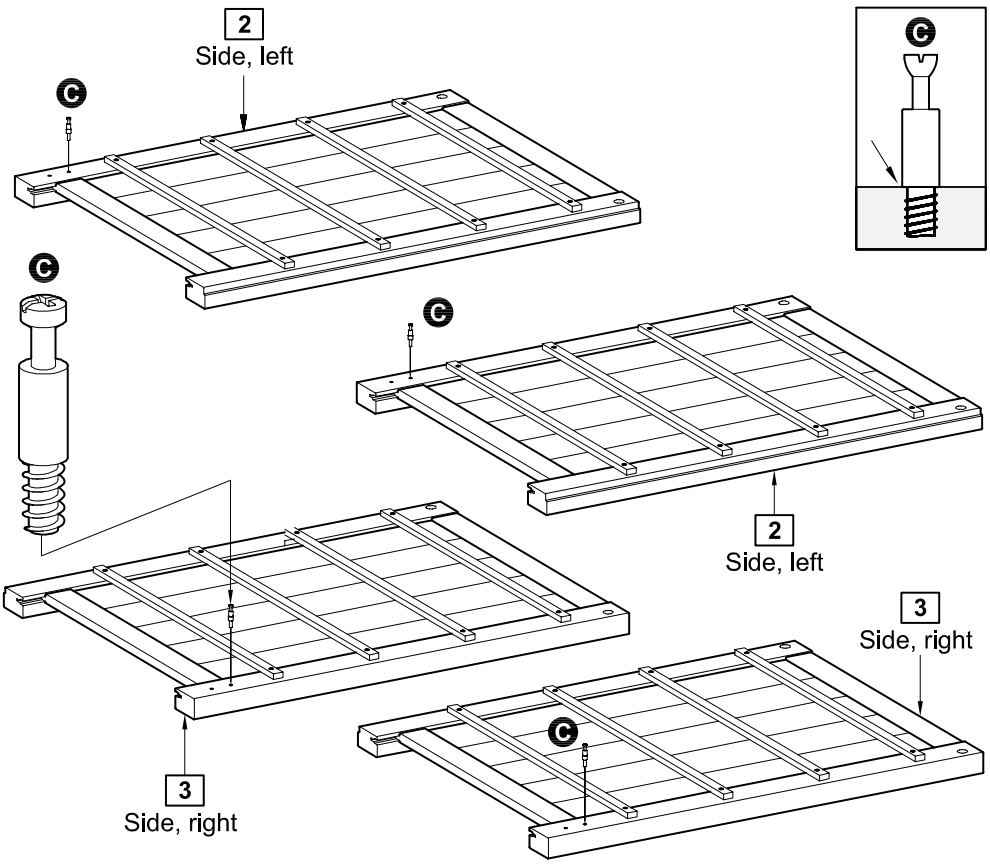


## Step 3

**Mounting the locking pins to the top.**

Screw the locking pins C into the holes indicated on the top 1 .


***Note:*** Insert locking pins C as far as shown. **Do not over tighten.**

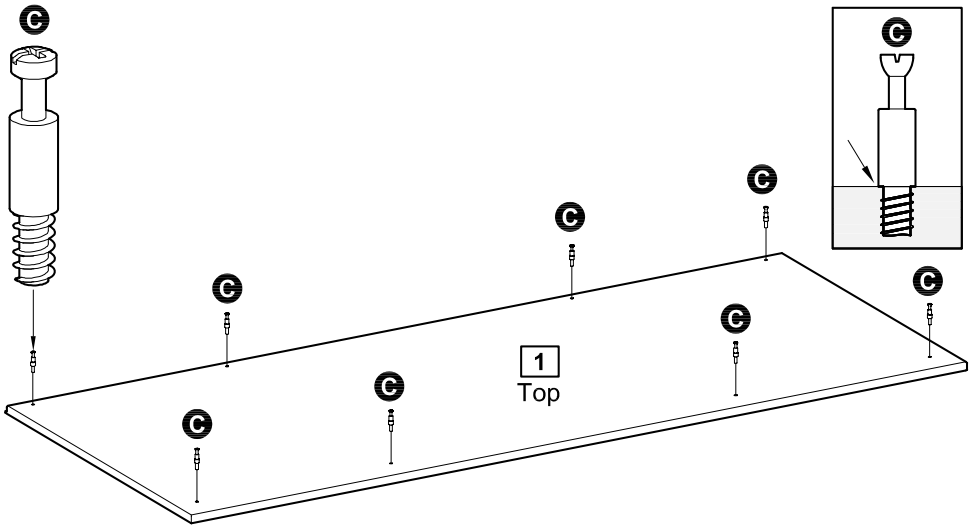


## Step 4

**Inserting the dowels to the plinths.**

Insert the dowels H into the holes indicated on the plinths 4.

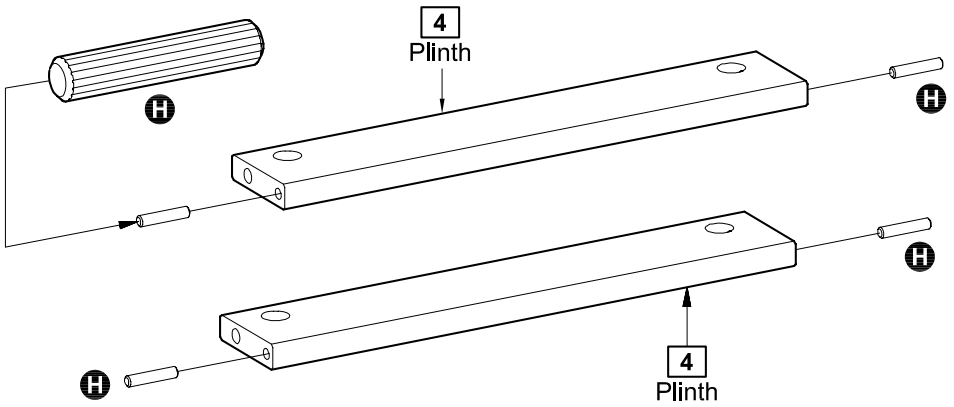


## Step 5


**Mounting the plinths to the right hand sides.**

Fit the plinths 4 onto the right hand sides 3.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

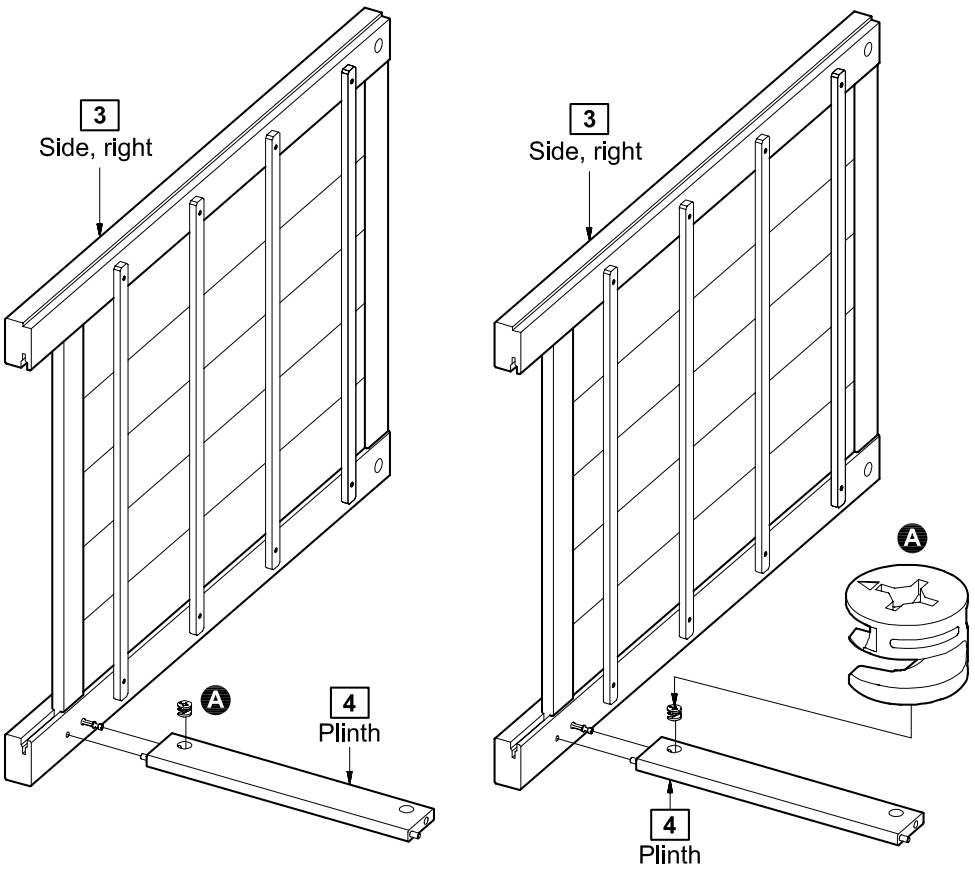

## Step 6


**Mounting the left hand sides to the plinths.**

Fit the left hand sides 2 onto the plinths 4.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

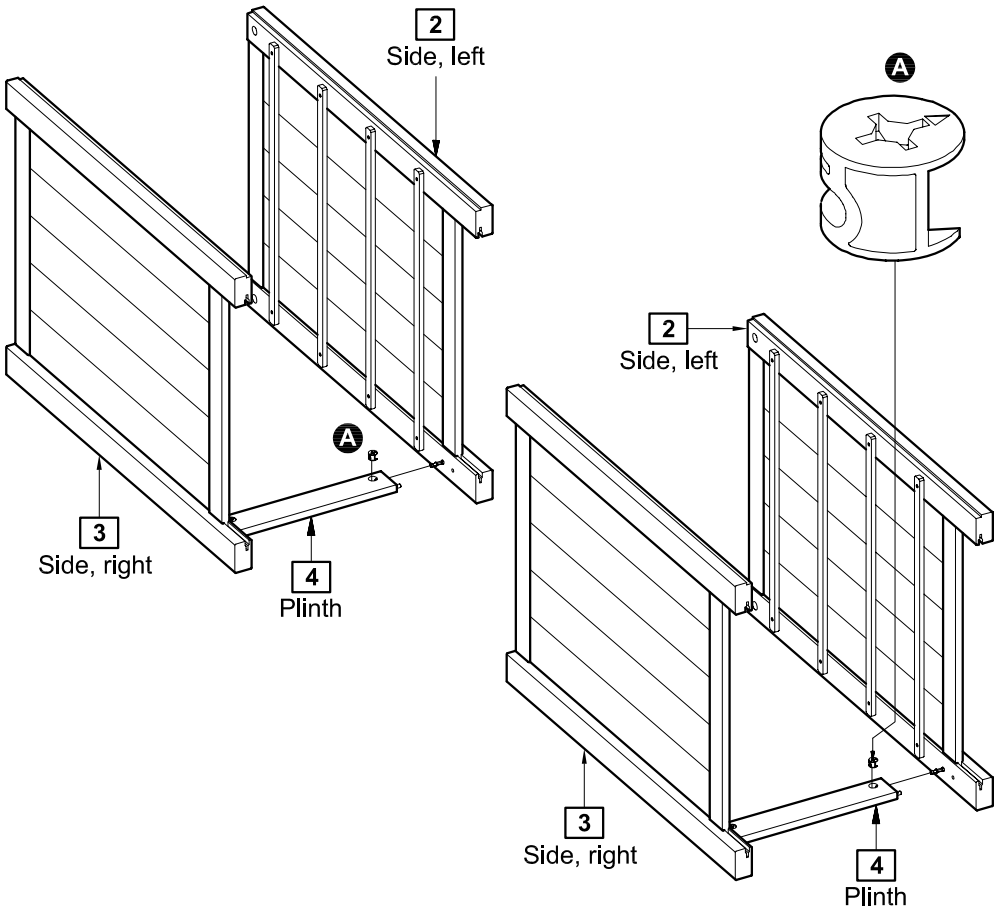


## Step 7


**Assembling the top to the sides.**

Attach the top 1 onto the sides 2 and 3.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the top / locking pins.

To tighten cams: Turn to the right using a screwdriver.

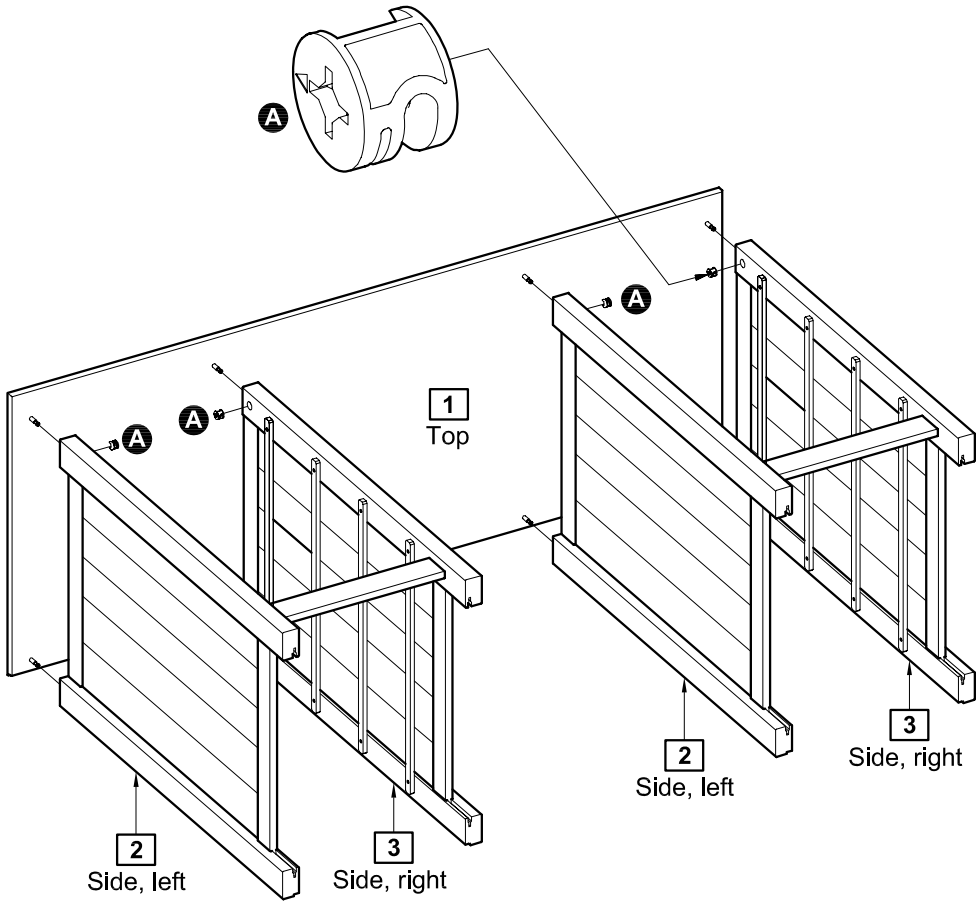

## Step 8

**Nailing the back to the top and sides.**

Place the backs [10] into the rabbet of the top [1] and the sides [3].


Ensure that there is no gap between the right hand sides [3] and the backs [10], nor between the top and the backs.


Fasten the backs with nails (G) along the top.


The angle between the top and the sides must be 90 degrees.

To accomplish this, ensure that there is no gap between the right hand sides [3] and the backs [10].

Fasten the backs with nails (G) along the sides.

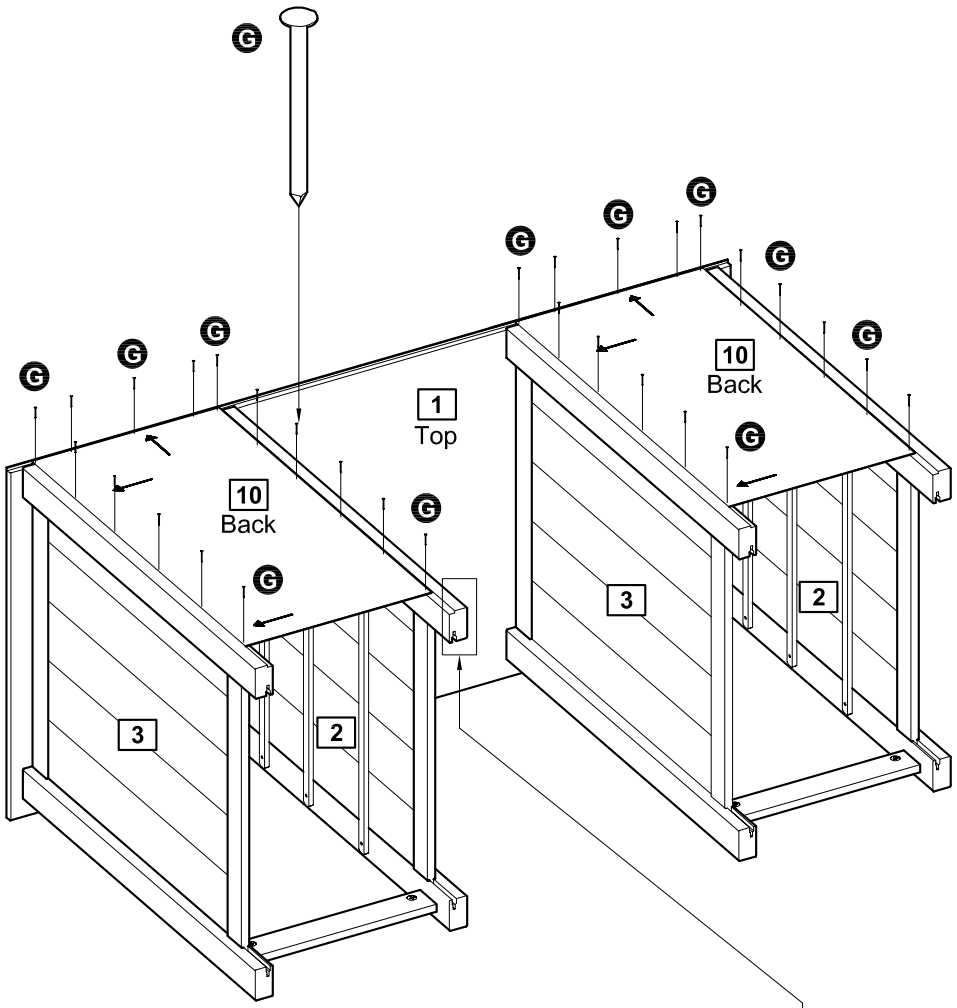
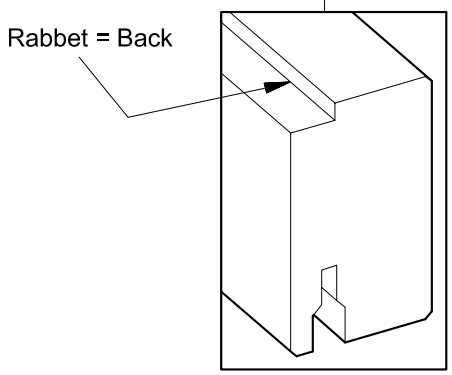
## Step 9

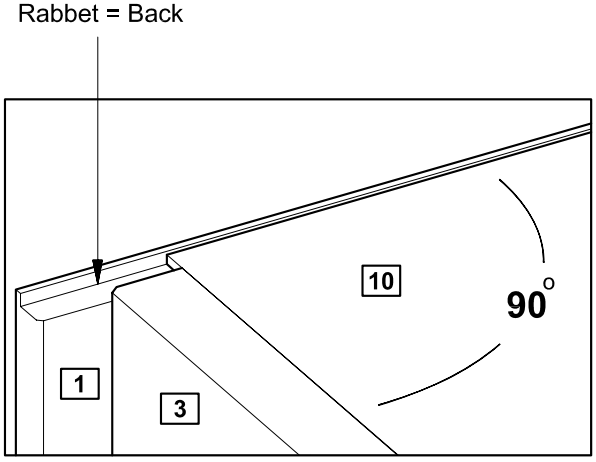**Drawer assembly.**

**a:** Fix the drawer sides [7] and [8] to the drawer back [6] using screws (F).

**b:** Slide the drawer bottom [9] into the grooves of the drawer frame.

**c:** Screw the locking pins (C) into the holes indicated on the drawer front [5].


***Note:*** Insert locking pins (C) as far as shown. **Do not over tighten.**

**d:** Press the drawer front [5] onto the drawer sides [7] and [8].
Place the small cams (B) into the holes indicated, arrows pointing towards the drawer front / locking pins.
To tighten cams: Turn to the right using a screwdriver.
"Function of cam and locking pin" see page 4.


**e:** Fix the knob (K) to the drawer front [5] using screw (F).

**Repeat with remaining drawers.**


**a:**

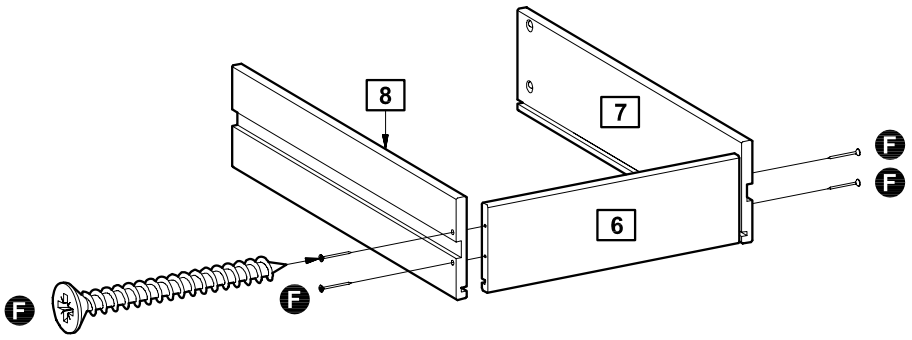



**b:**

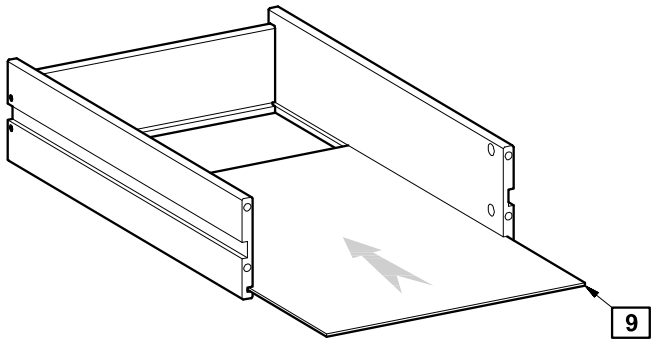



**c:**

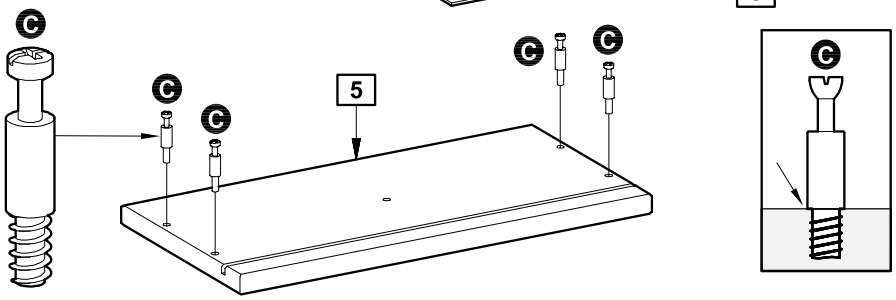


**d:**

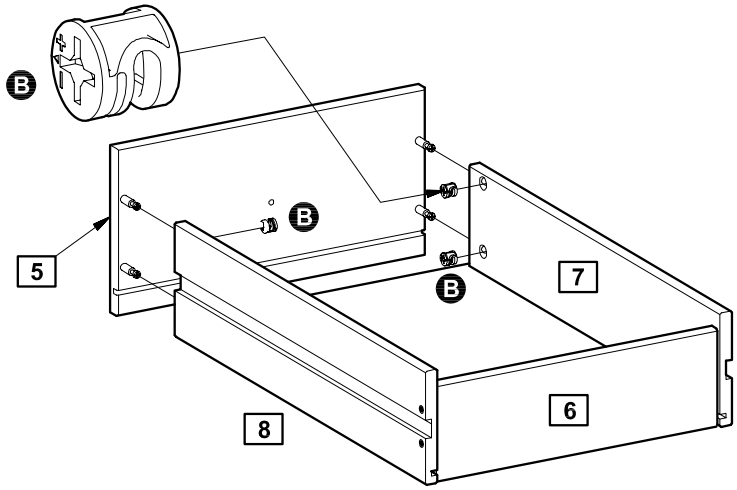



**e:**

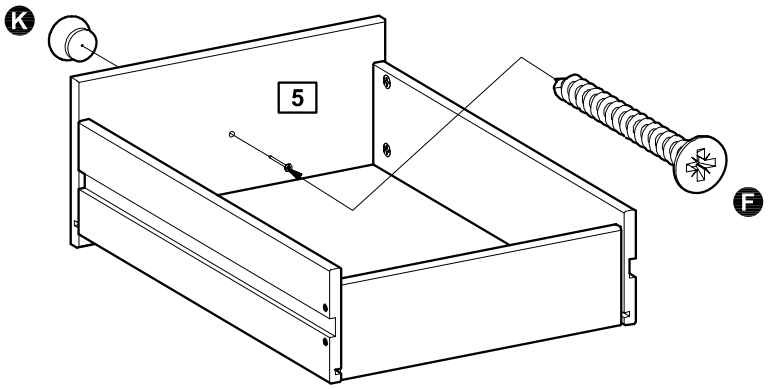

## Step 10

**Adding the drawers to the table.**

Slide the drawers onto the wooden runners.

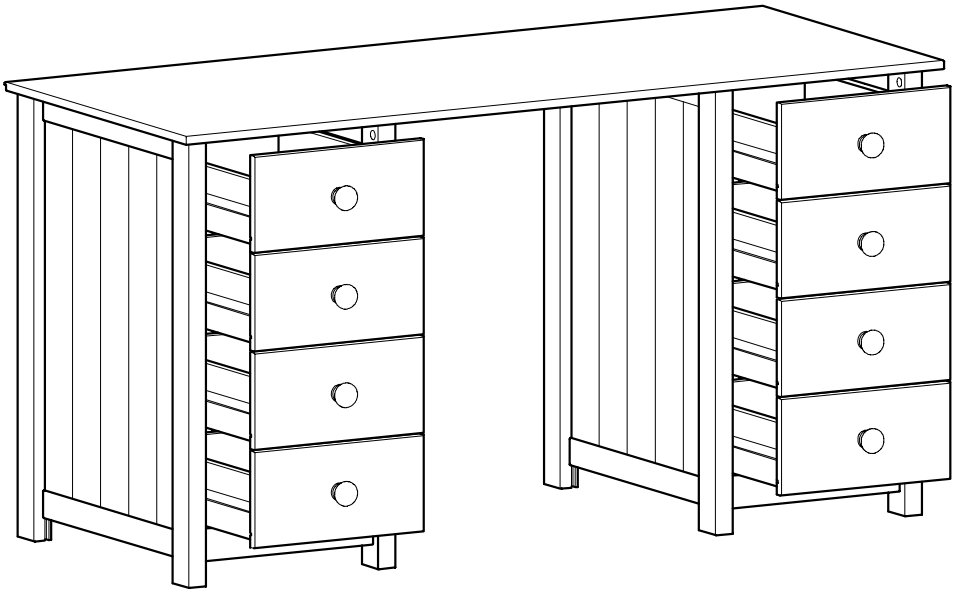


## Assembly of dressing stool.

## Step 11

**Mounting the locking pins to the stool legs.**

Screw the locking pins C into the holes indicated on the stool legs 11 .


***Note:*** Insert locking pins C as far as shown. **Do not over tighten.**

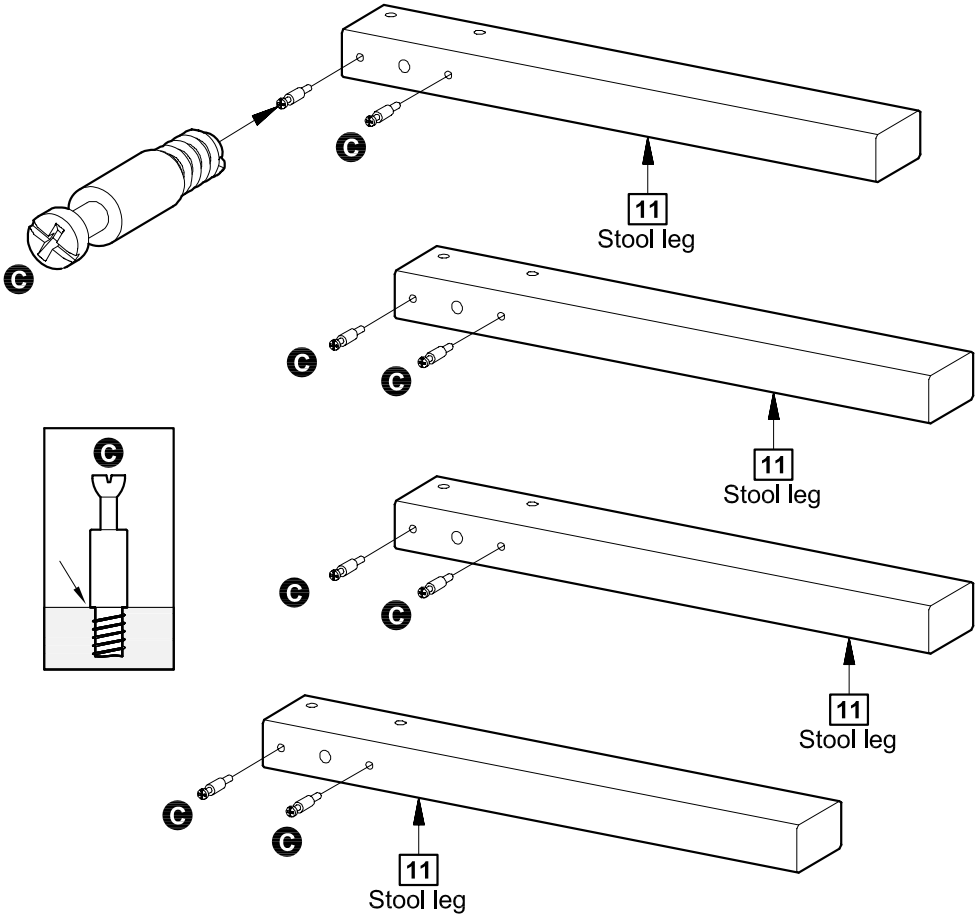


## Step 12

**Inserting the dowels to the end rails.**

Insert the dowels I into the holes indicated on the end rails 12 .

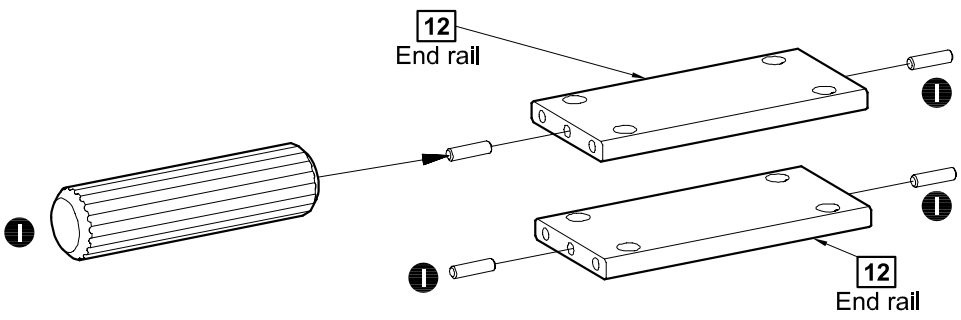

## Step 13


**Mounting the stool legs to the end rails.**

Press the stool legs 11 onto the end rails 12 .

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the stool leg / locking pins.

To tighten cams: Turn to the right using a screwdriver.

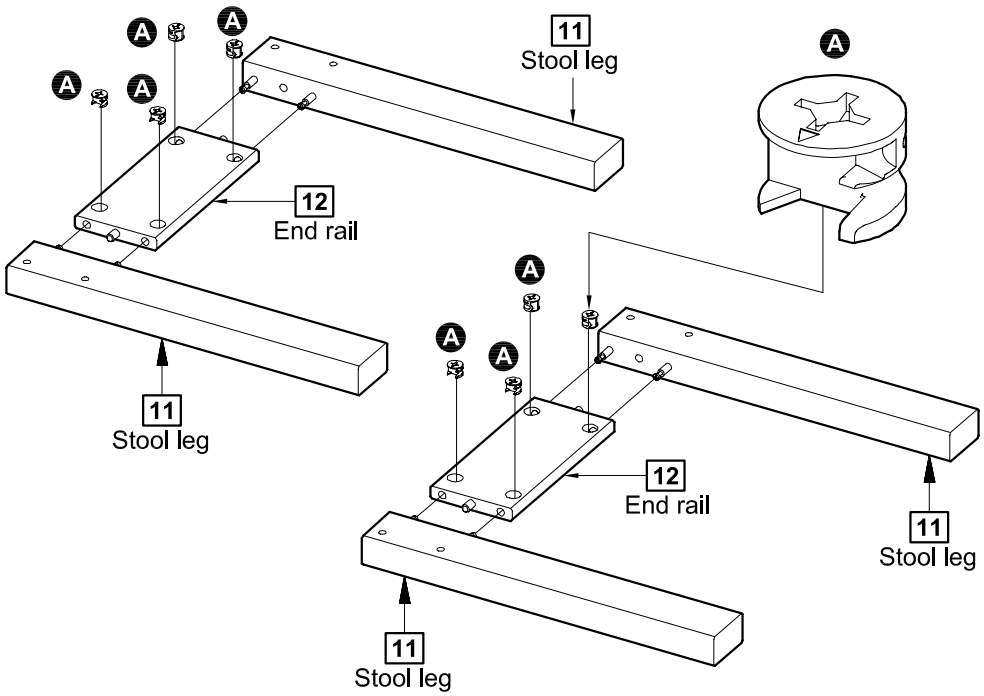




## Step 14

**Fixing the angles onto the side rails.**

Fix the angles L onto the side rails 13 using screws D into the pre-drilled holes.

The angels must be turn exactly as shown.

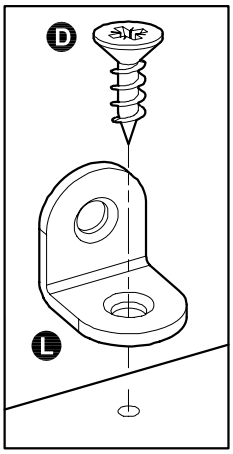

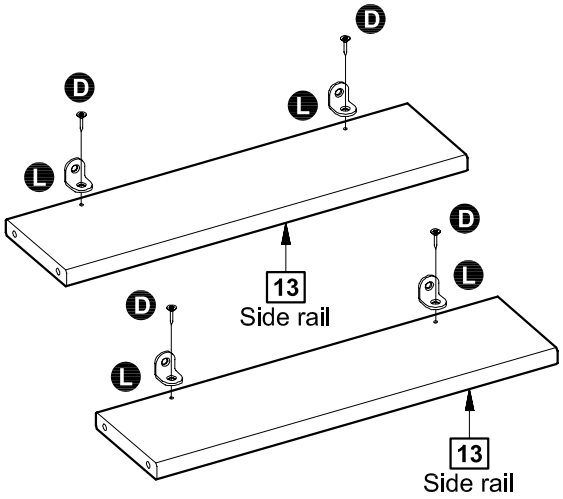

## Step 15

**Mounting the side rails onto the stool legs.**

Press the side rails 13 onto the stool legs 11 .

***Note the angles.***

Fix the side rails using screws M and allen key J through the holes indicated.

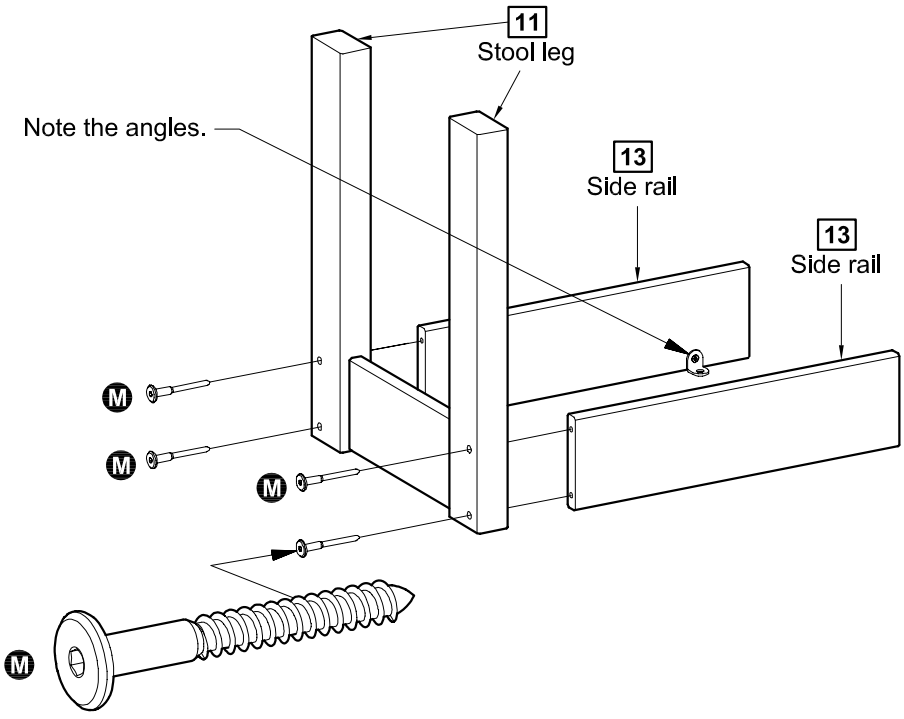


## Step 16

**Mounting the stool legs onto the side rails.**

Press the stool legs 11 onto the side rails 13.


Fix the side rails using screws M and allen key J through the holes indicated.

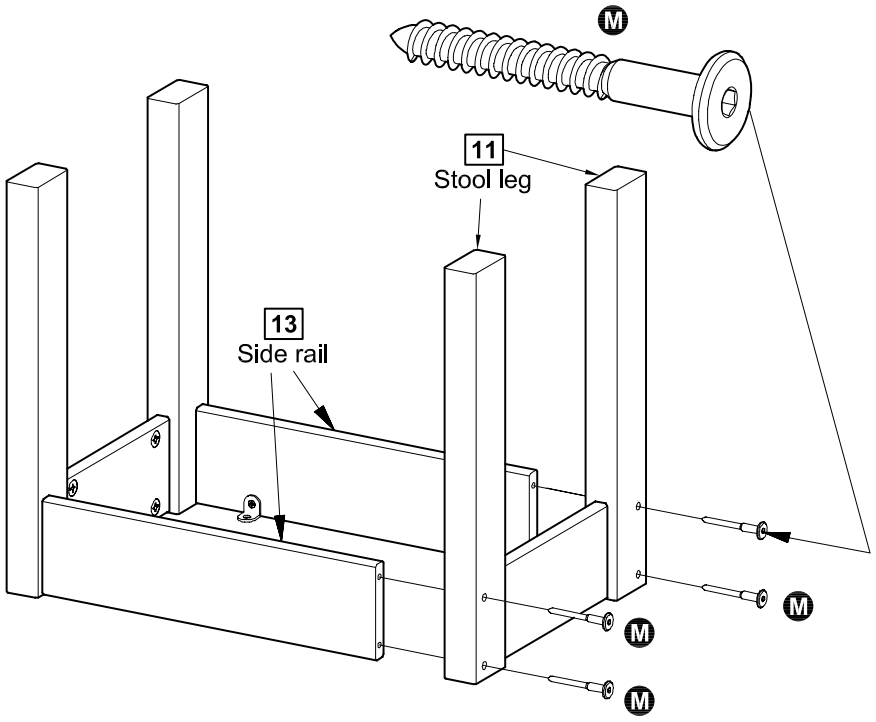


## Step 17

**Adding the seat to the stool.**

Fix the side rails 13 onto the seat 14 using screws D through the angles.

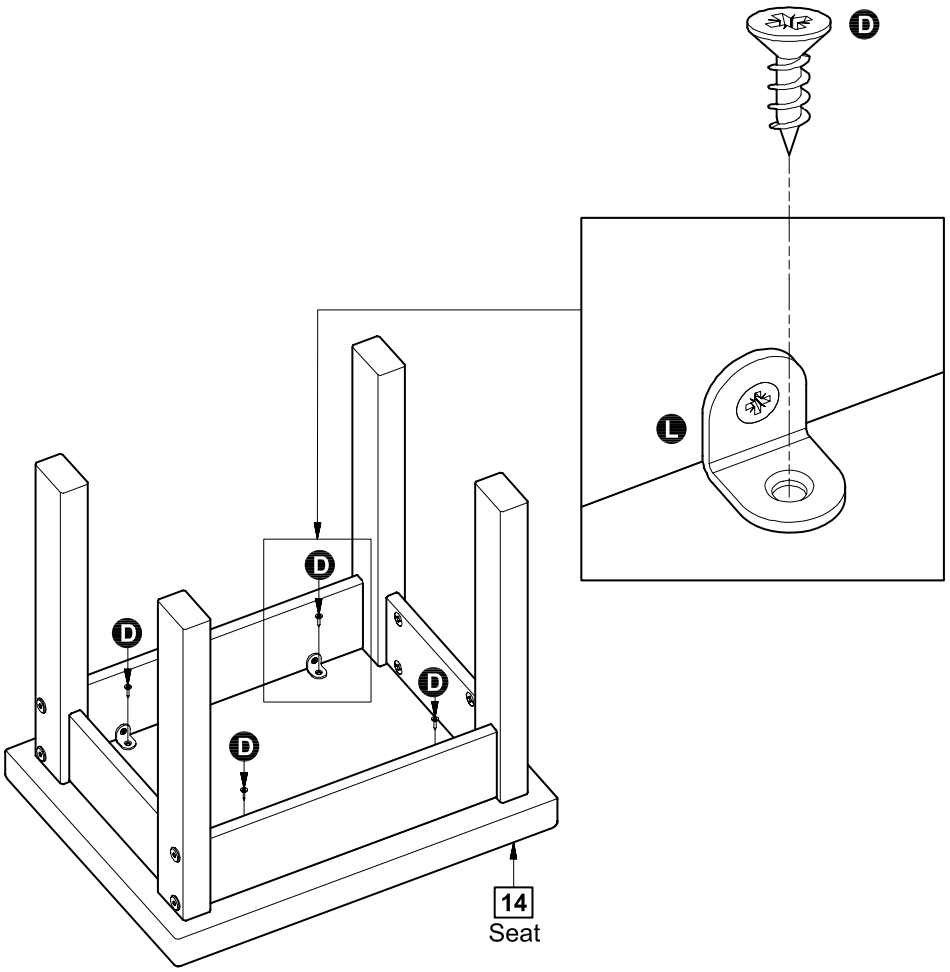


**Assembly is complete.**

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

# Dear Customer

**Please note that the product you have purchased is a natural living timber.**

**Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.**

**Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.**

**In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.**

**The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.**

**Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.**

**Tighten all joints of the furniture after six months.**

**Please keep these instructions in a safe place for future use.**