
Scandinavia - 4 Door Robe w. 2+4 drws.

Assembly Instructions - Please keep for future reference

642/3818

643/8494

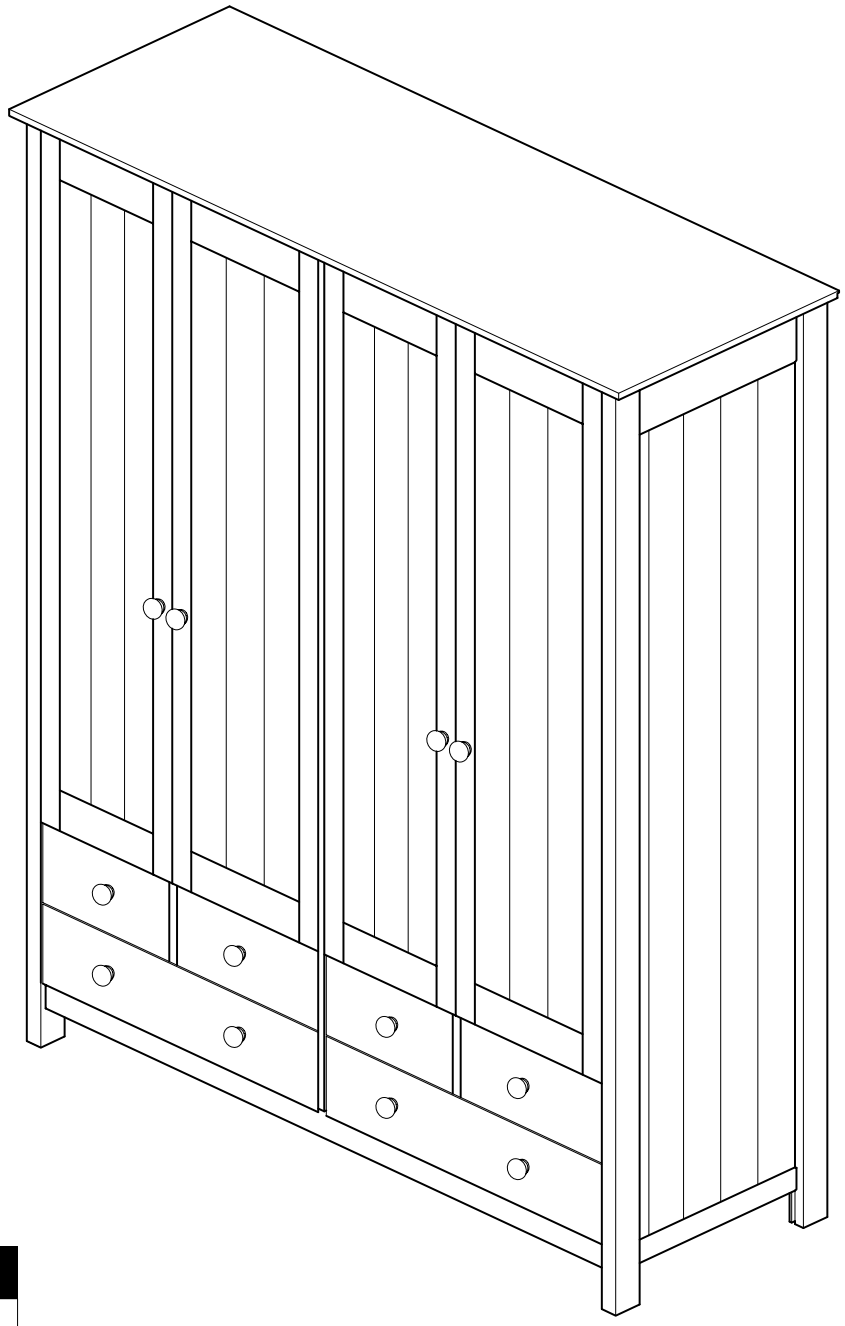

Dimensions

Width - 140.4cm
Depth - 53cm
Height - 179.9cm

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 01/04/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

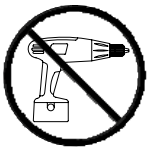

- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

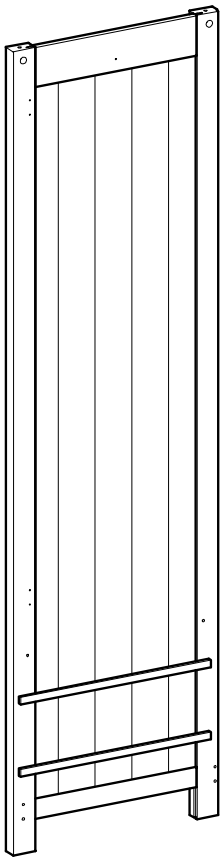


1 Left side
(178.5 x 49.8cm)

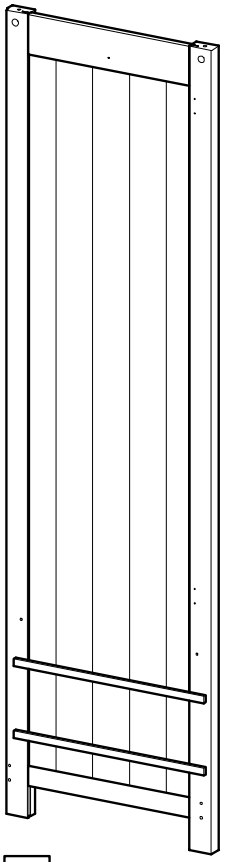


2 Right side
(178.5 x 49.8cm)

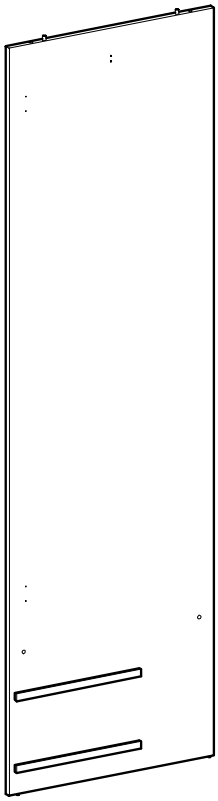


3 Large divider
(166 x 49.4cm)

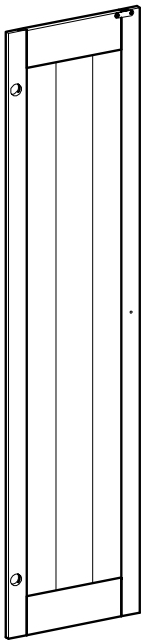


4 Right door x 2
(134.4 x 31.6cm)

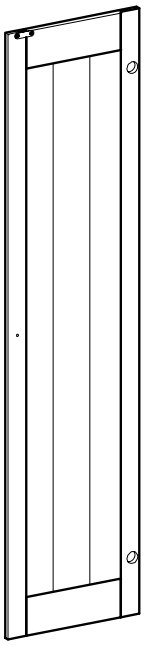


5 Left door x 2
(134.4 x 31.6cm)

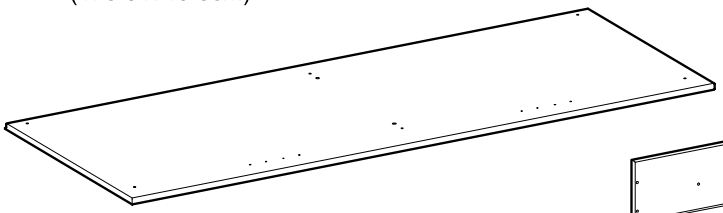


6 Top (140.4 x 53cm)

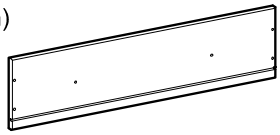


10 Large drawer front x 2
(63.6 x 15.7cm)




11 Small drawer front x 4
(30.9 x 15.7cm)




12 Back x 4
(171 x 32.7cm)

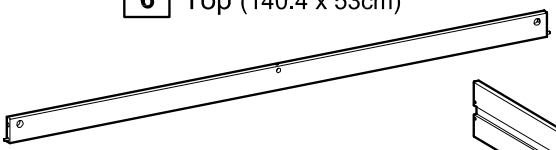


7 Plinth x 2 (129.4 x 5.5cm)



14 Left drawer side x 6
(34.2 x 10.7cm)




13 Right drawer side x 6
(34.2 x 10.7cm)

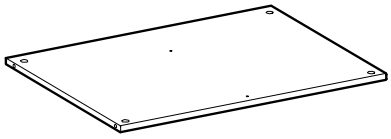

8 Bottom x 2 (64 x 48cm)




15 Small drawer back x 4
(28.1 x 9cm)




16 Large drawer back x 2
(60.8 x 9cm)



9 Small divider x 2
(38 x 15.3cm)



17 Small drawer bottom x 4
(33.9 x 29.1cm)
















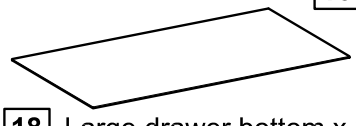


18 Large drawer bottom x 2
(61.8 x 33.9cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

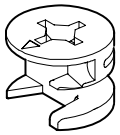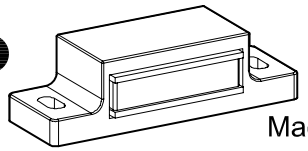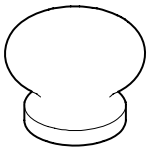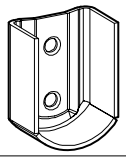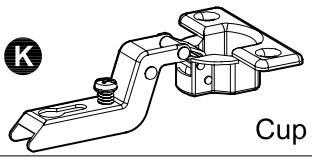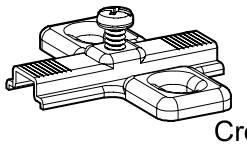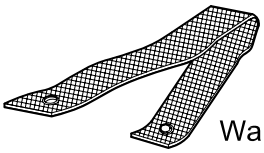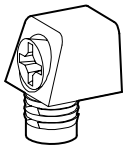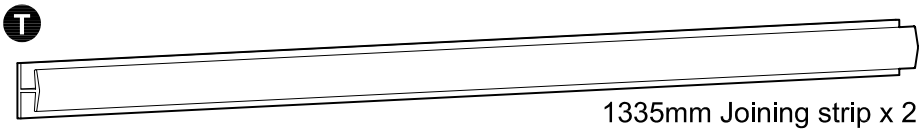
A  Large cam x 22	**B**  Small cam x 24	**C**  Locking pin x 42
D  14mm Screw x 42	**E**  25mm Screw x 8	**F**  35mm Screw x 36
G  16mm Nail x 60	**H**  Magnet x 4	**I**  Knob x 12
J  Hanging rail cup x 4	**K**  Cup hinge x 8	**L**  Cross plate x 8
M  636mm Hanging rail x 2	**N**  Locking pin x 2	**O**  20mm Screw x 2
P  Wall strap x 2	**Q**  Wall plug x 2	**R**  Washer x 4
S  Miniblock x 2	**T**  1335mm Joining strip x 2	


Tools required



Philips screwdriver (medium & large)



Flatblade screwdriver (medium)

Suitable drill bit (for use with wall plug)

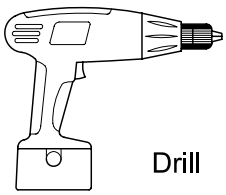

Drill


Small hammer



Ruler/tape measure

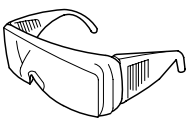
Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Components - Key Diagram

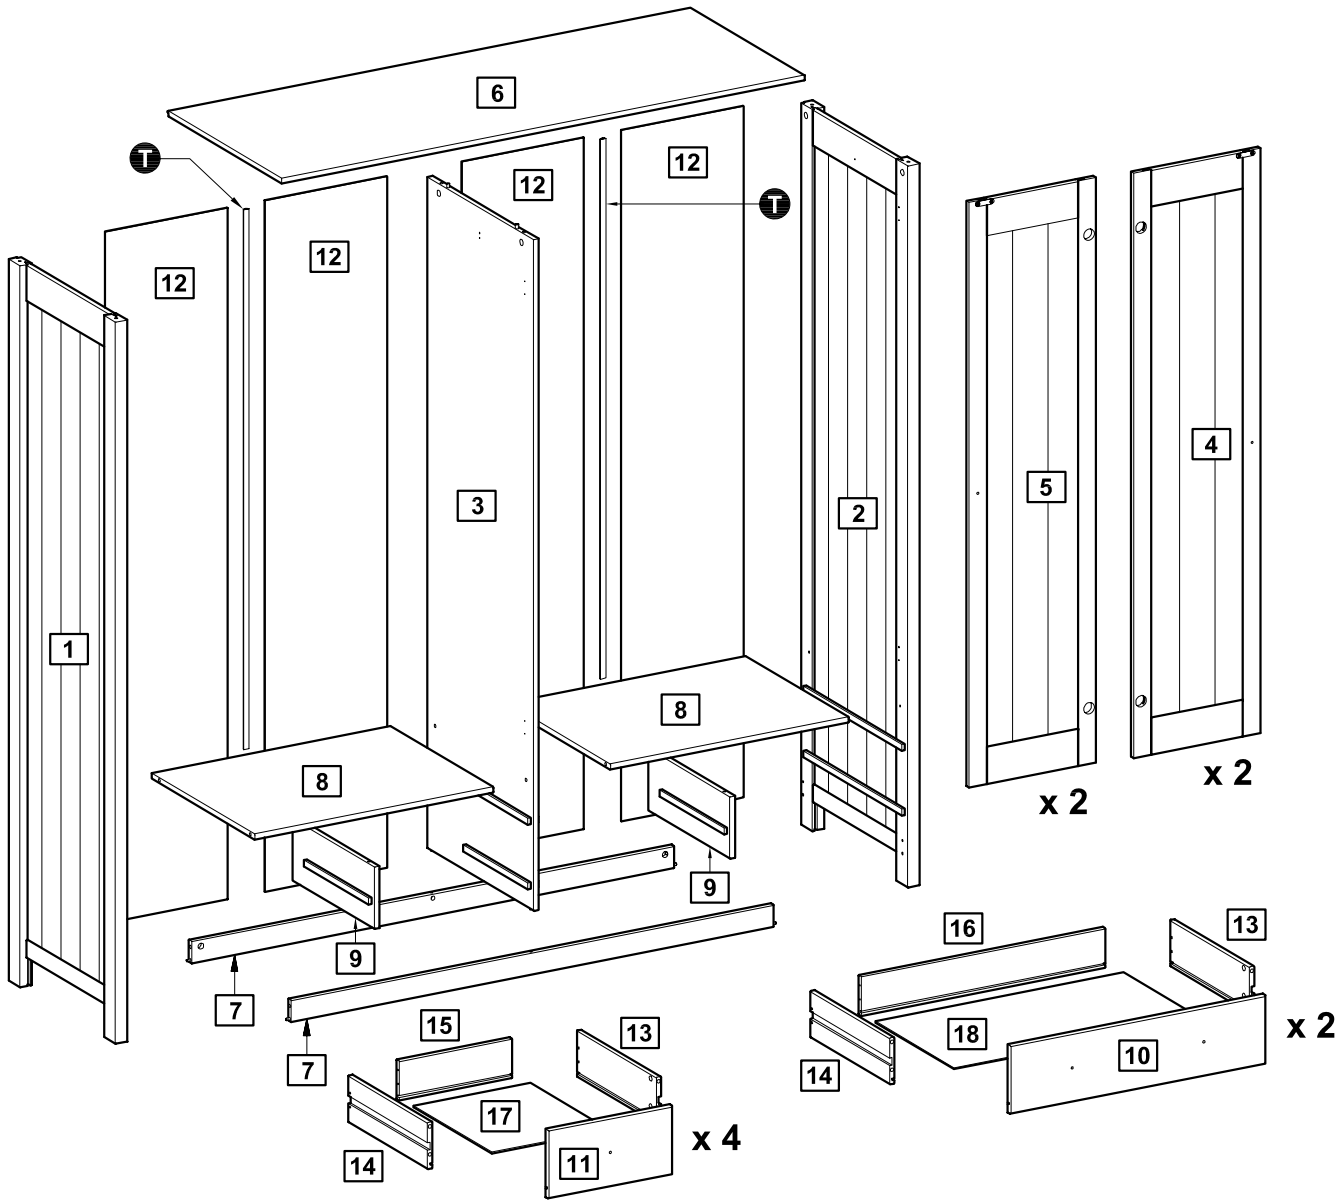


Function of Cam and Locking Pin

Step 1:
Fix the locking pin to the wooden panel.

Step 2:
Push the wooden panel with the attached locking pin onto the other wooden panel.

Step 3:
Place the cam into the hole, arrow pointing towards the locking pin.

Step 4:
Tighten: Turn the cam to the right.

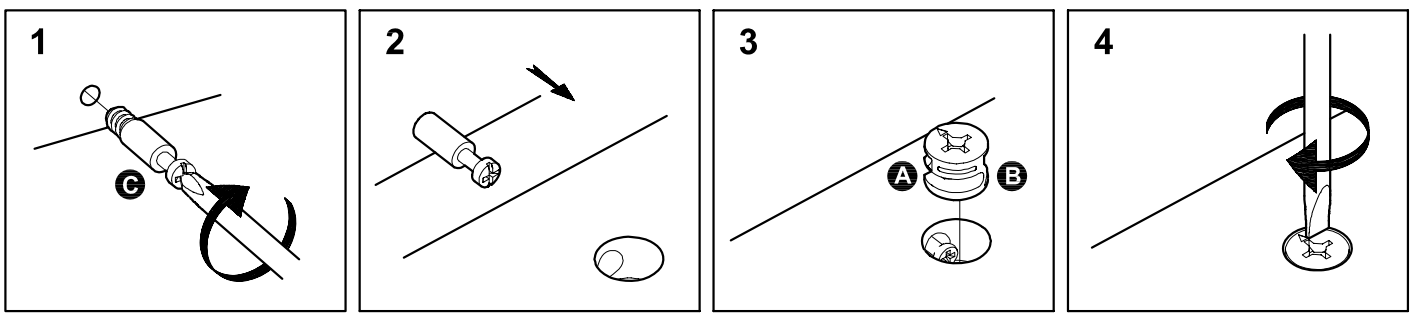

Assembly Instructions


Step 1

Mounting the cross plates to the sides.

Fix the cross plates L to the sides 1 & 2 using the screws E into the holes indicated.

It is important that the cross plates are placed exactly as shown.


The short end of the cross plates must point towards the front edge of the sides.

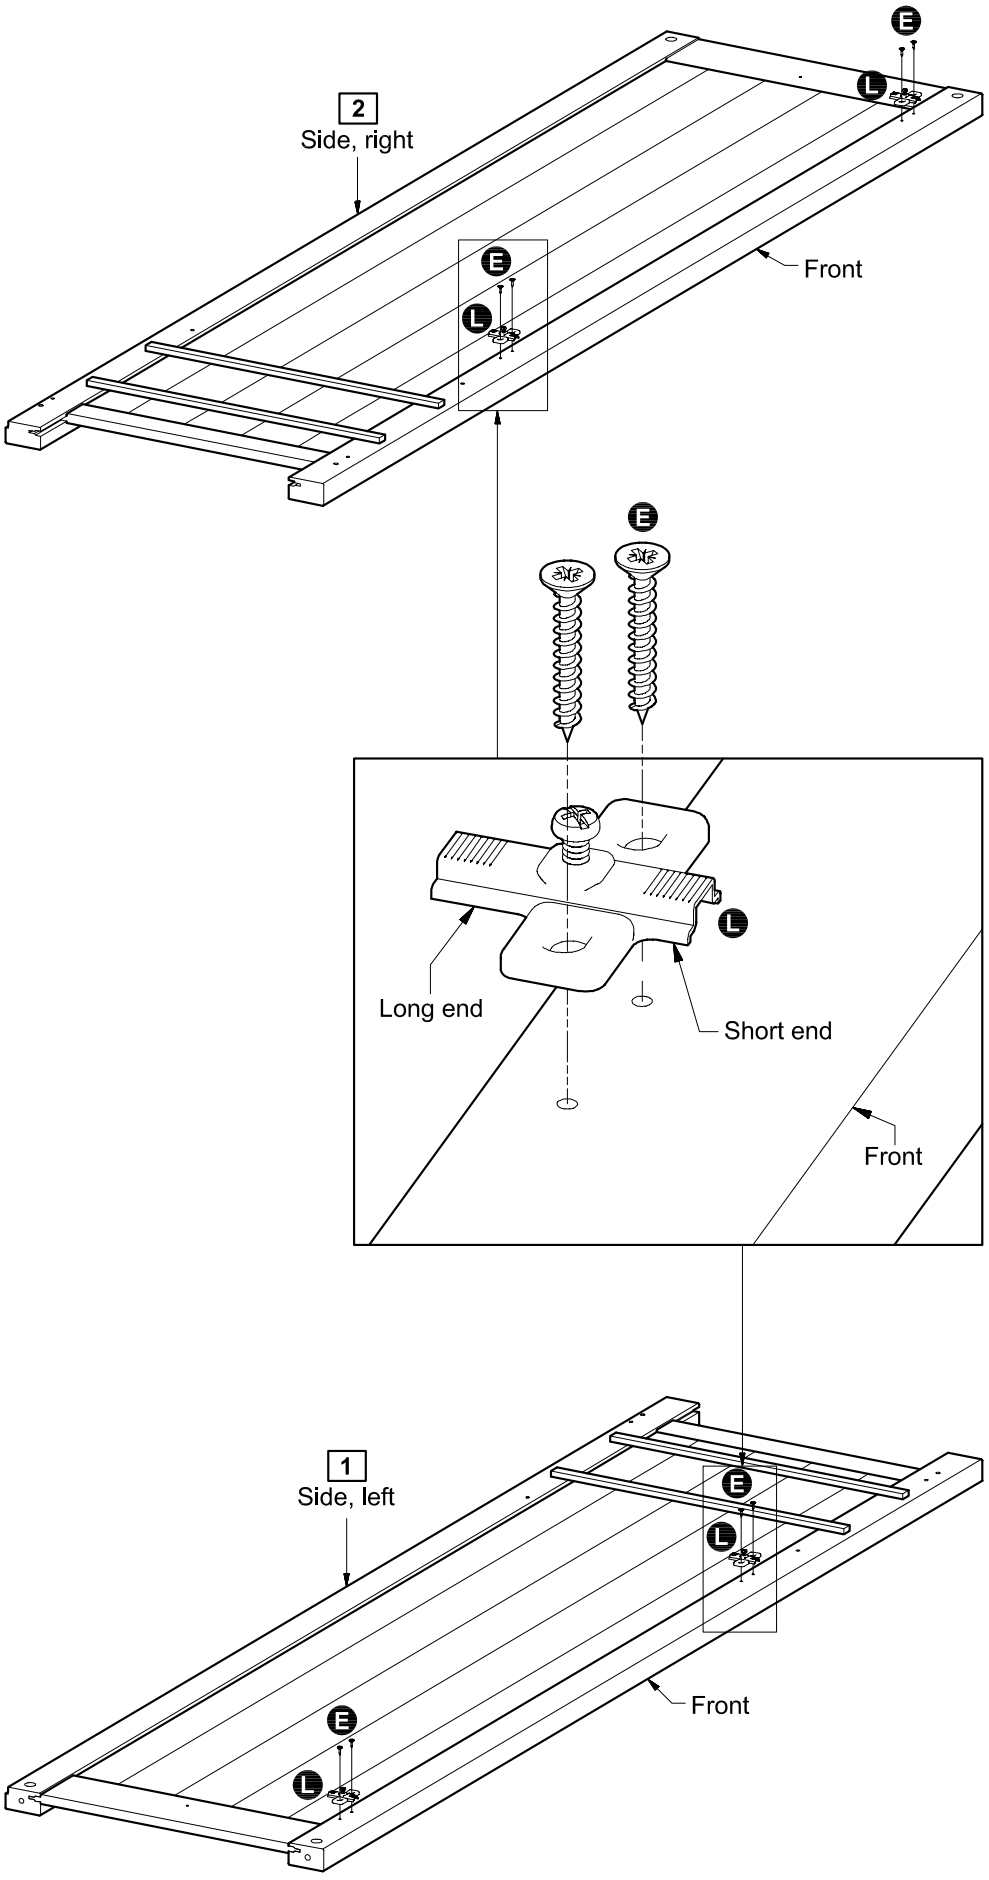

Step 2

Mounting the hanging rail cups to the sides.

Fix the hanging rail cups Ⓙ onto the sides [1] and [2] using screws Ⓓ into the pre-drilled holes.

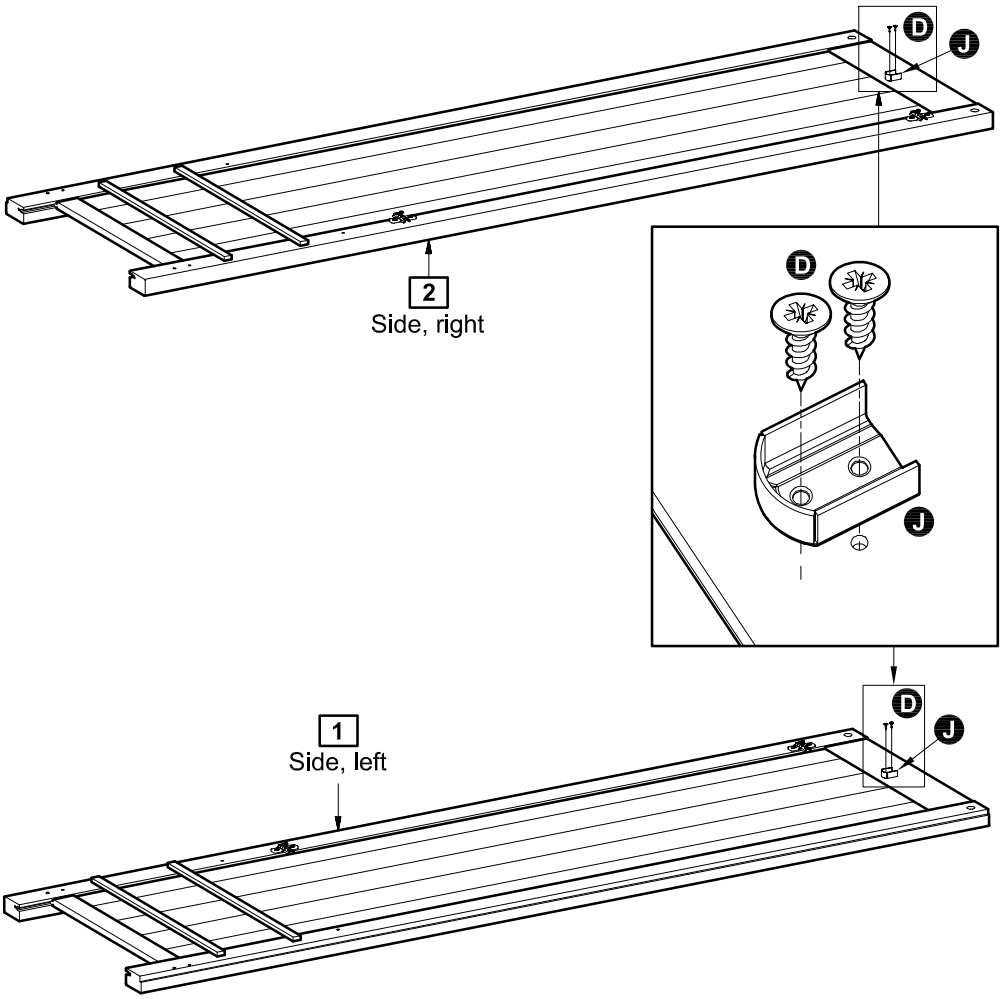


Step 3

Mounting the locking pins to the sides.

Screw the locking pins Ⓒ into the holes indicated on the sides [1] and [2].

Note: Insert locking pins Ⓒ as far as shown. **Do not over tighten.**

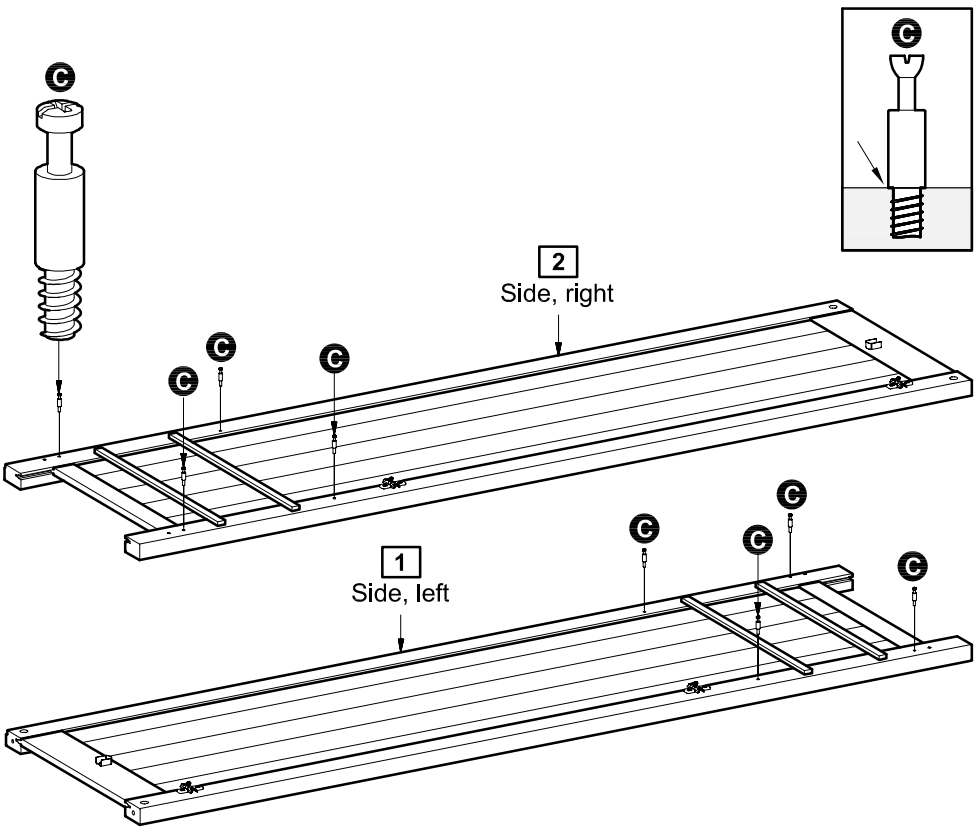


Step 4

Mounting the cross plates to the left hand side of the large divider.

Fix the cross plates Ⓛ to the left hand side of the large divider 3 using screws Ⓓ into the holes indicated.

It is important that the cross plates are placed exactly as shown.

The short end of the cross plates must point towards the front edge of the sides.

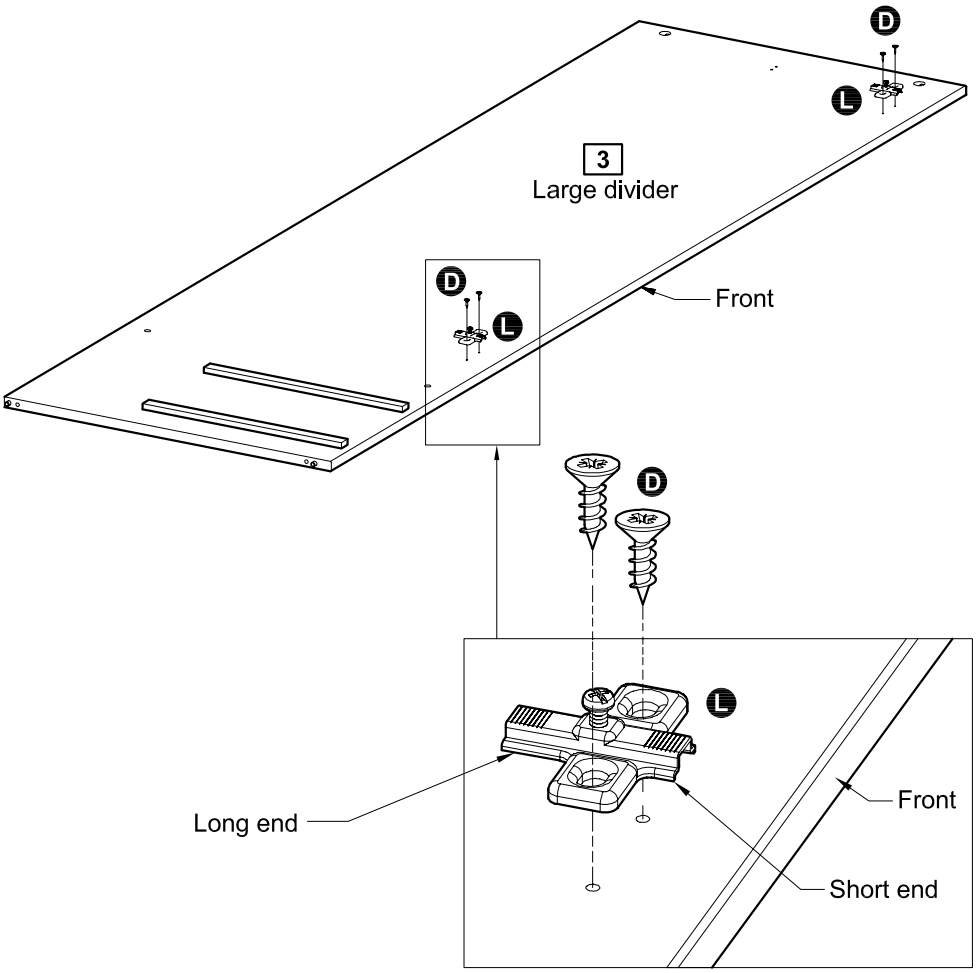


Step 5

Mounting the cross plates to the right hand side of the large divider.

Fix the cross plates Ⓛ to the right hand side of the large divider 3 using screws Ⓓ into the holes indicated.

It is important that the cross plates are placed exactly as shown.


The short end of the cross plates must point towards the front edge of the sides.

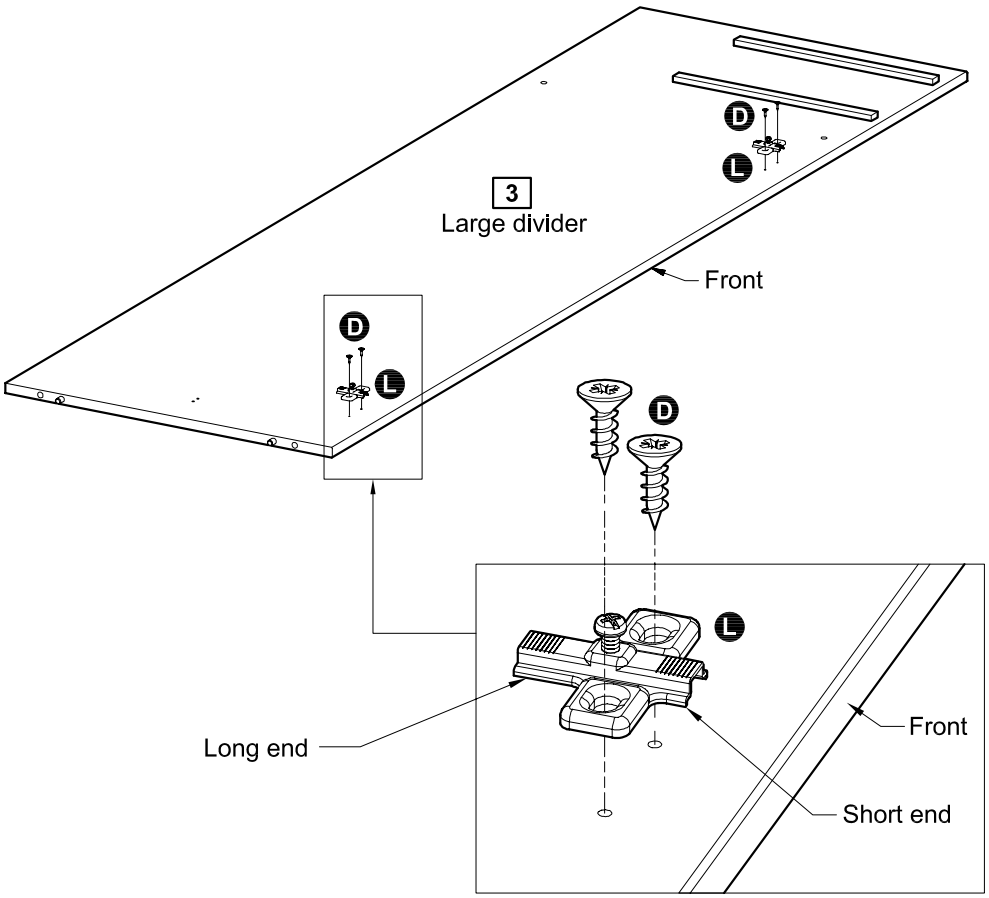

Step 6

Mounting the hanging rail cup to the left hand side of the large divider.


Fix the hanging rail cup J onto the left hand side of the large divider 3 using screws D into the pre-drilled holes.

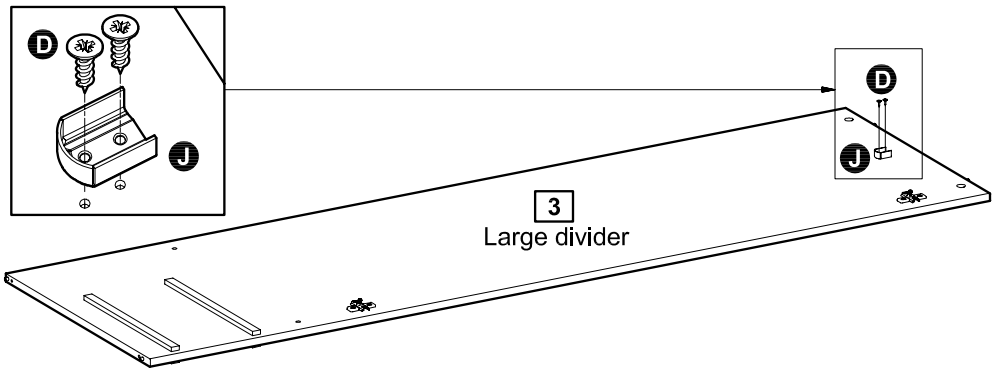

Step 7

Mounting the hanging rail cup to the right hand side of the large divider.

Fix the hanging rail cup J onto the right hand side of the large divider 3 using screws D into the pre-drilled holes.

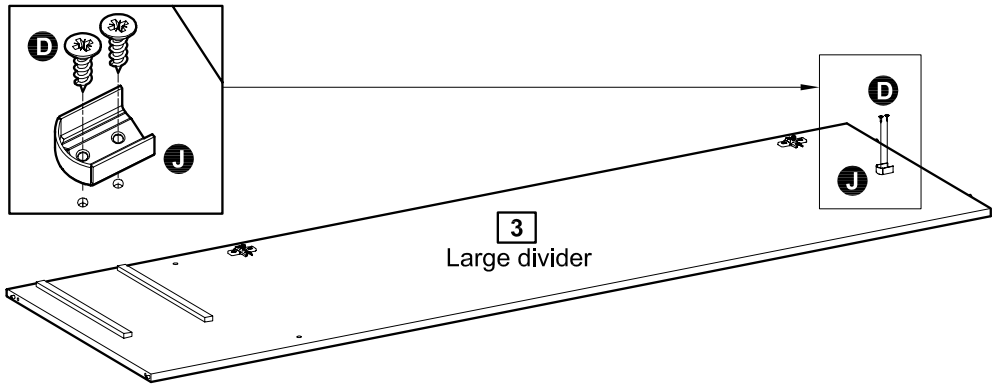


Step 8

Mounting the locking pins to the top.

Screw the locking pins C into the holes indicated on the top 6.

Note: Insert locking pins C as far as shown. **Do not over tighten.**

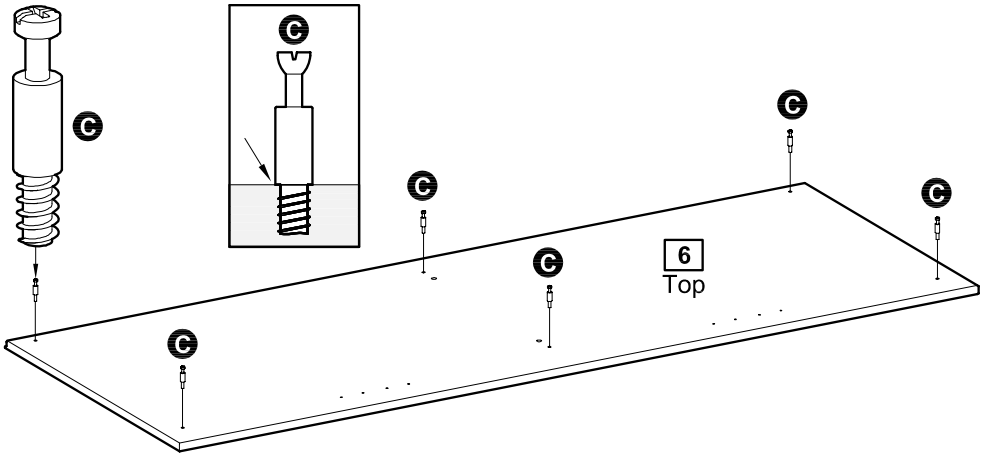


Step 9

Mounting the magnets to the top.

Fix the magnets H to the top 6 using screws D into the pre-drilled holes.

It is important that the magnetic part points towards the front edge of the top.

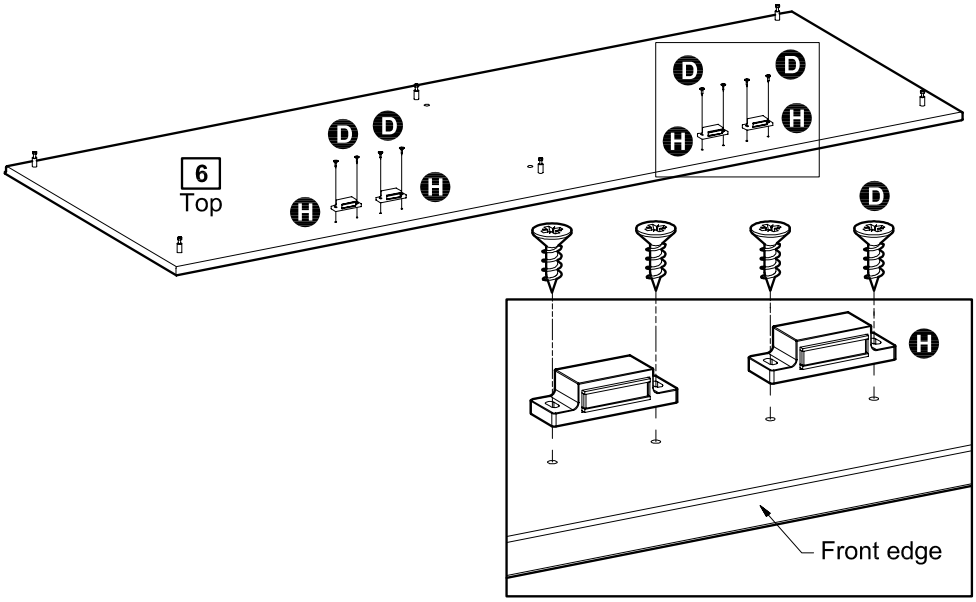


Step 10

Mounting the locking pins to the bottoms.

Screw the locking pins C into the holes indicated on the bottoms 8.

Note: Insert locking pins C as far as shown. **Do not over tighten.**

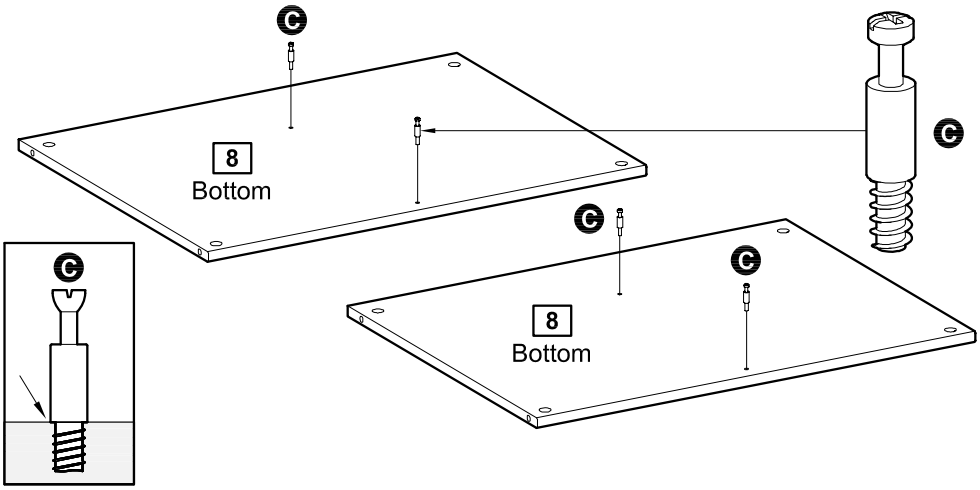

Step 11


Assembling the small dividers to the bottoms.

Press the small dividers 9 onto the bottoms 8.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the bottom / locking pins.


To tighten cams: Turn to the right using a screwdriver.

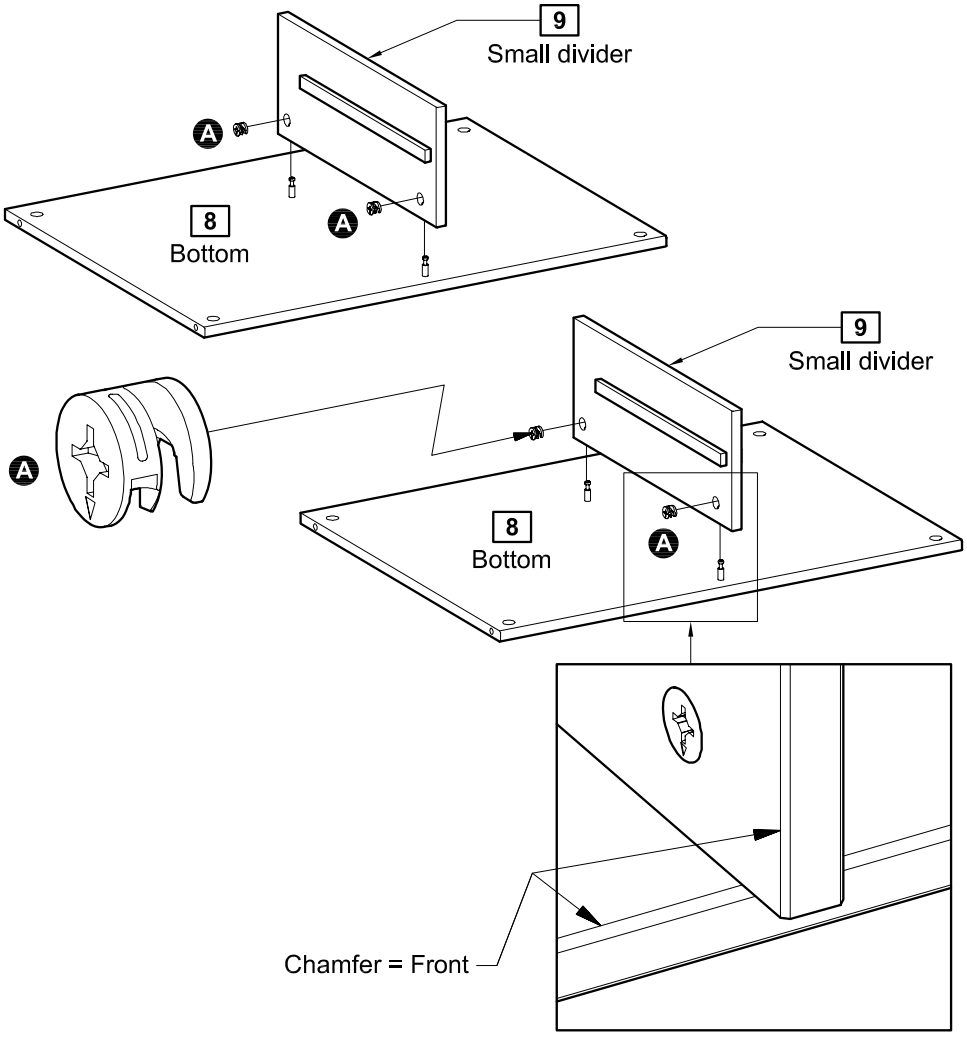

Step 12

Adding the miniblocks to the plinths.

Insert the miniblocks S into the holes indicated on the plinths 7.

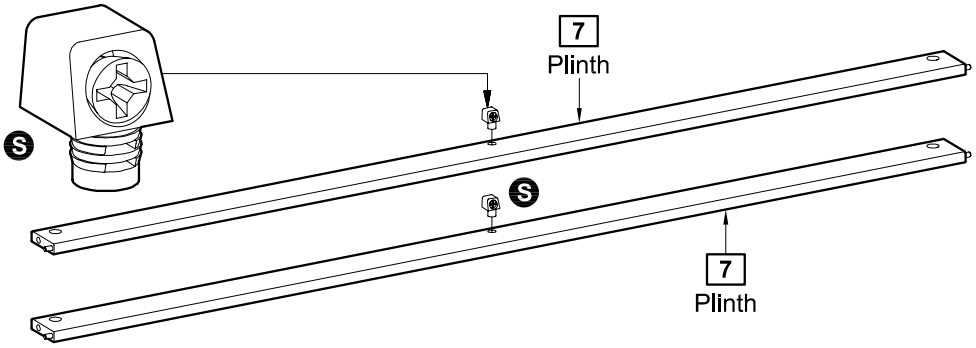

Step 13

Assembling the bottom to the left hand side of the large divider .

Push the locking pins (N) through the holes indicated on the large divider [3] , note the placement of the drawer runners.


It is important that the locking pins is turned exactly as shown.

Press the bottom [8] onto the left hand side of the large divider [3].

See page 4 "Function of cam and locking pin".

Place the large cams (A) into the holes indicated, arrows pointing towards the divider / locking pins.

To tighten cams: Turn to the right using a screwdriver.

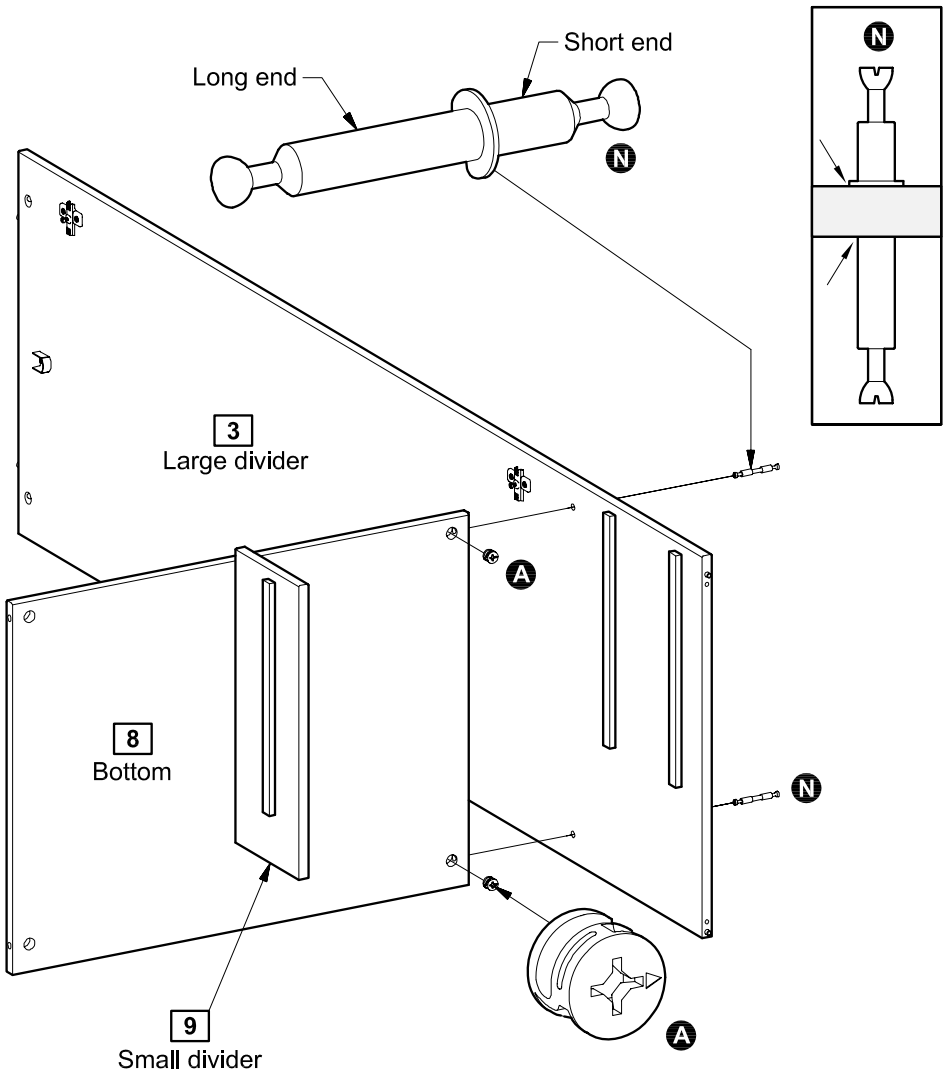

Step 14


Assembling the bottom to the right hand side of the large divider .

Press the bottom [8] onto the right hand side of the large divider [3].

See page 4 "Function of cam and locking pin".

Place the large cams (A) into the holes indicated, arrows pointing towards the divider / locking pins.

To tighten cams: Turn to the right using a screwdriver.

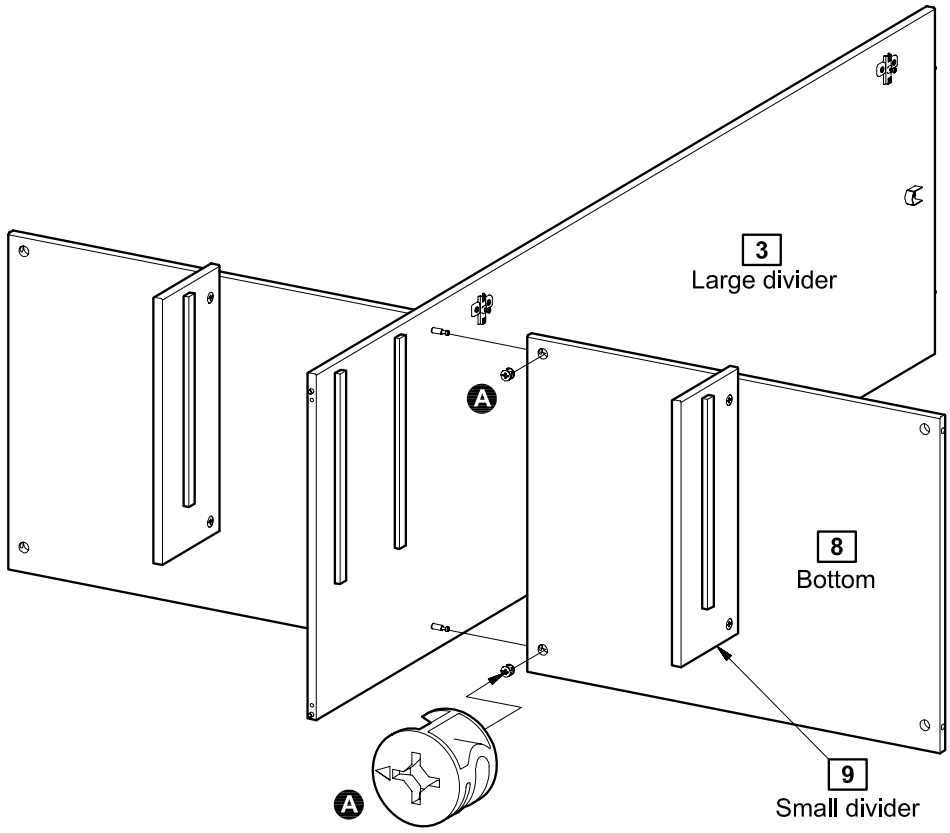

Step 15


Assembling the right hand side to the bottom.

Fit the side 2 onto the bottom 8.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

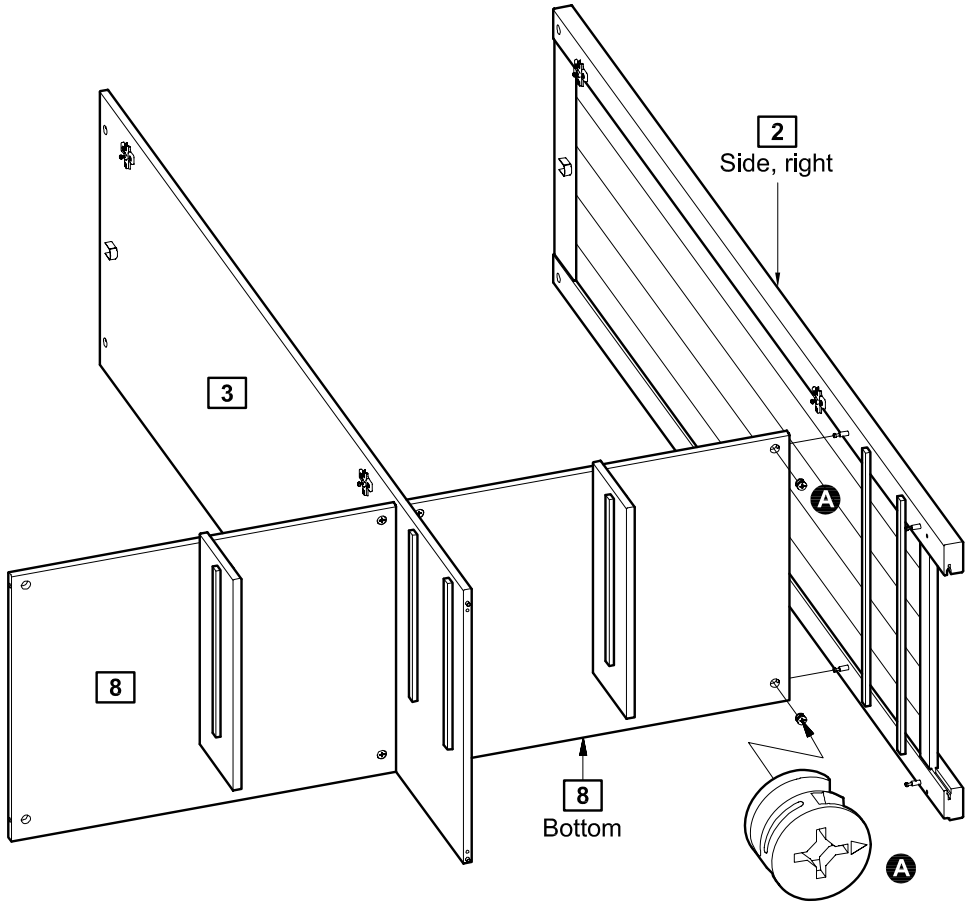

Step 16

Adding the plinths to the side and the large divider.

Fit the plinths 7 onto the side 2.


The dowels at the end of the large divider 3 should fit into the holes on the plinths.


See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

Fix the miniblocks S onto the large divider 3.

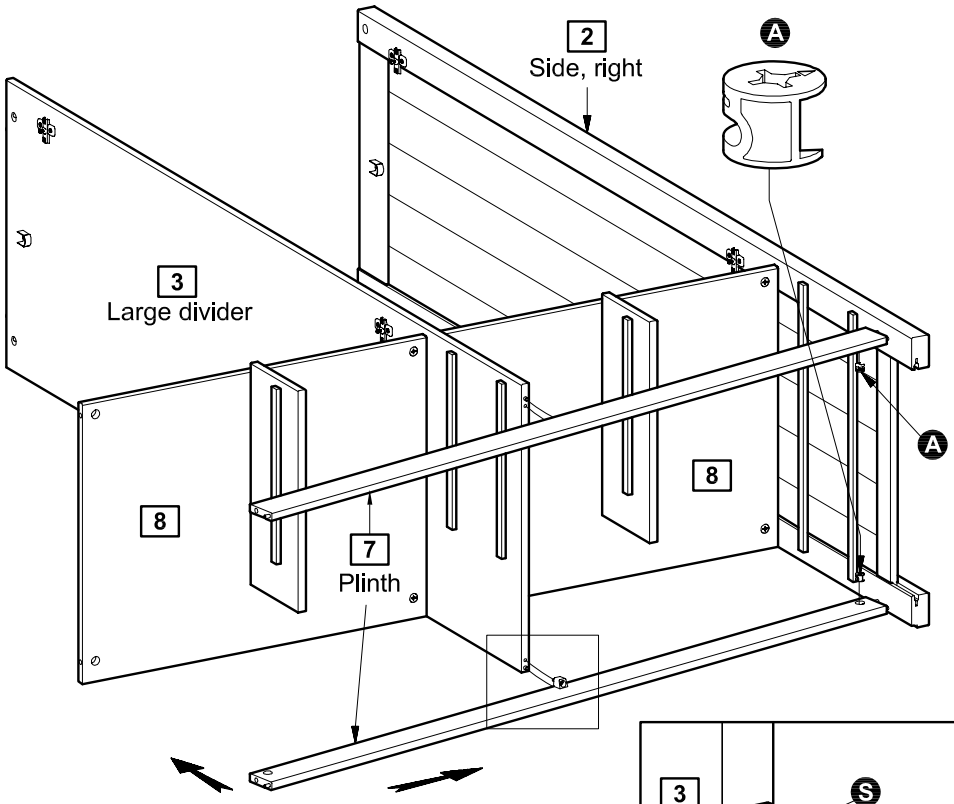

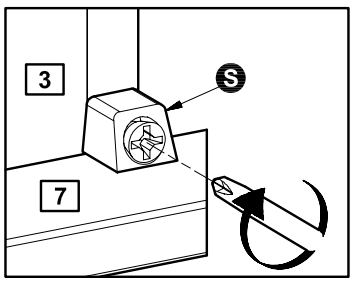

Step 17


Assembling the left hand side to the plinths and the bottom.

Fit the side 1 onto the plinths 7 and the bottom 8.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the side / locking pins.

To tighten cams: Turn to the right using a screwdriver.

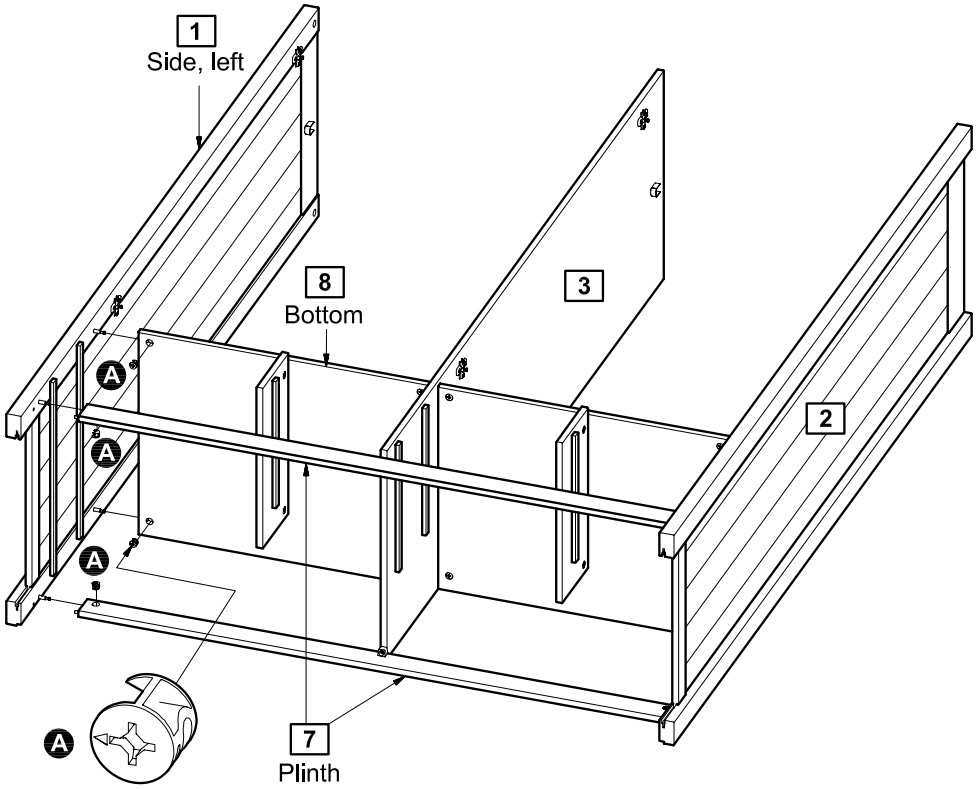

Step 18


Assembling the top to the sides and the large divider.

Attach the top 6 onto the sides 1 and 2 and the large divider 3.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the top / locking pins.

To tighten cams: Turn to the right using a screwdriver.

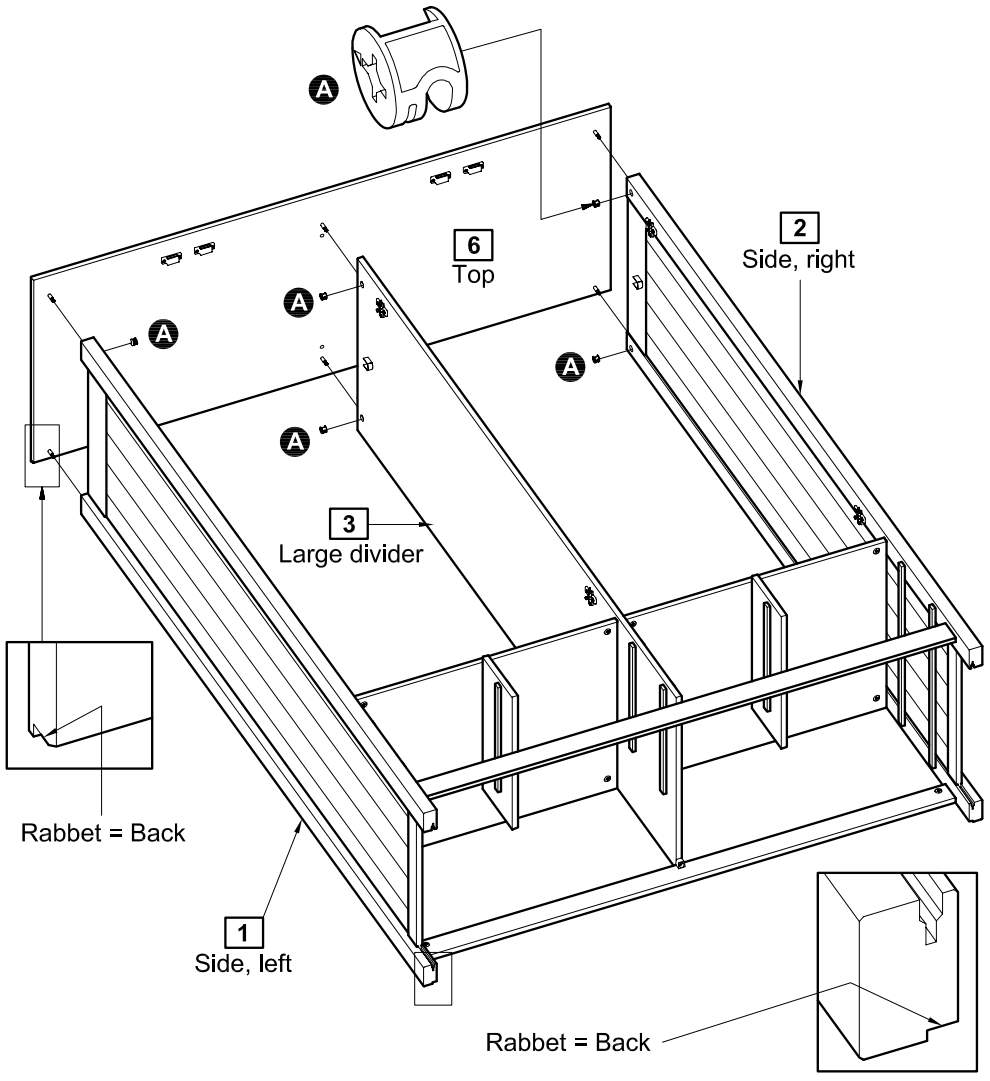

Step 19

Adding the backs to the carcass.

Place the backs 12 into the rabbet of the top 6 and the side 2.


Ensure that there is no gap between the side and the backs, nor between the top and the backs.

Fasten the backs with nails G along the top.

The angle between the top and the side must be 90 degrees.

To accomplish this, ensure that there is no gap between the side and the backs.

Fasten the backs with nails G along the side and the bottoms.

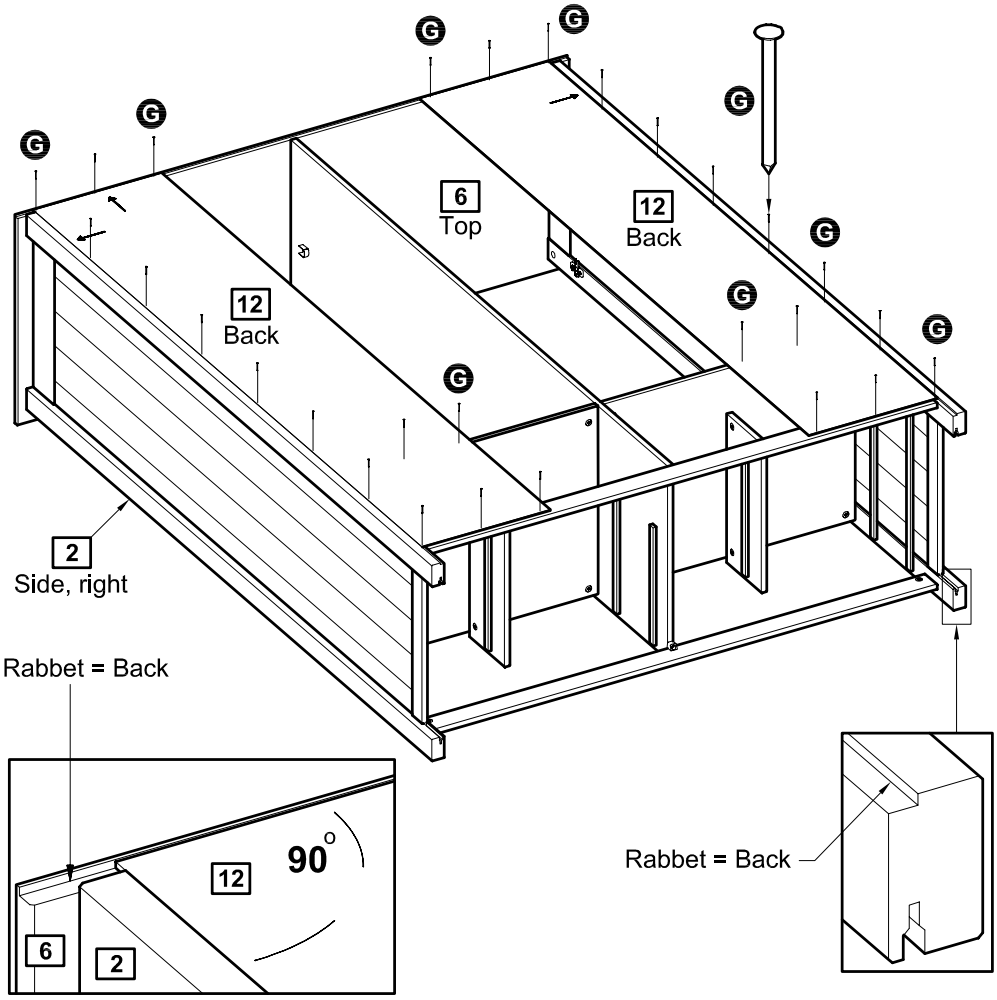

Step 20

Adding the backs and the joining strips to the carcass.


Place the joining strips T onto the backs.

Place the backs 12 into the rabbet of the top 6 and the side 1.

Fasten the backs with nails G along the top.

Ensure that there is no gap between the side and the backs, nor between the top and the backs.

Fasten the backs with nails G along the side and the bottoms.

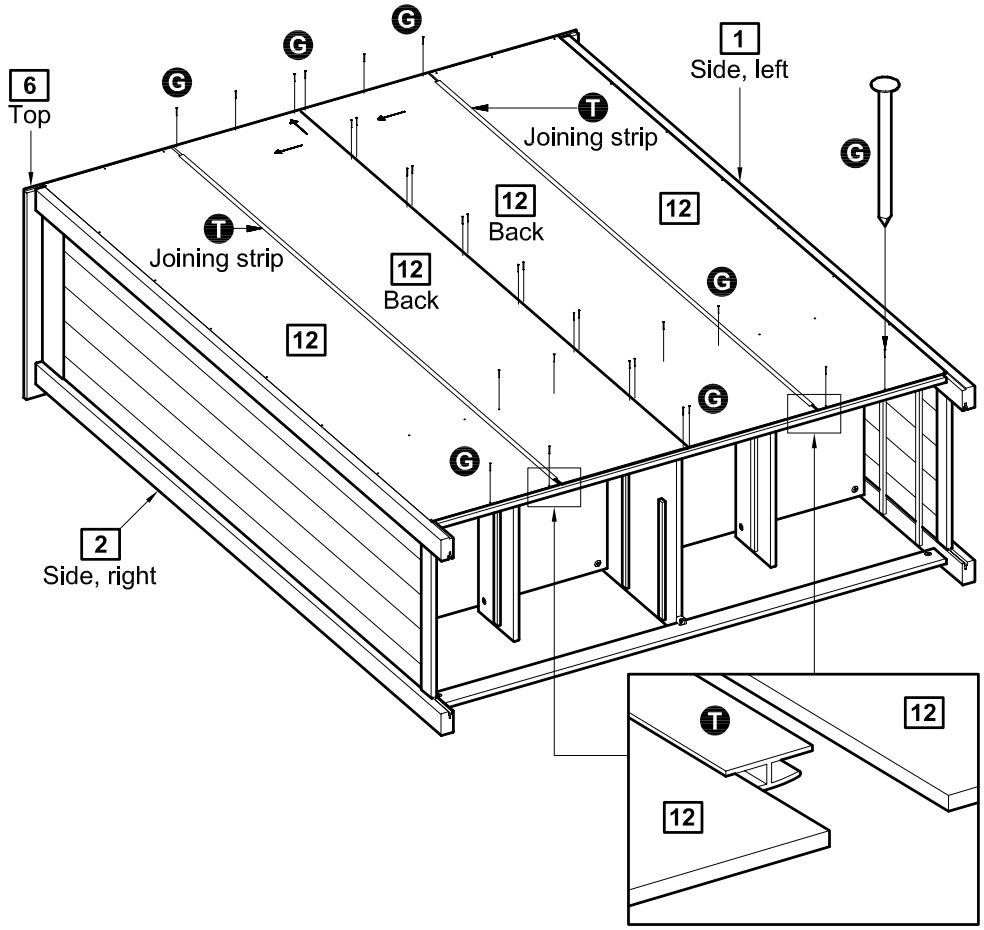

Step 21

Large drawer assembly.

a: Fix the drawer sides 13 and 14 to the large drawer back 16 using screws F .

b: Slide the drawer bottom 18 into the grooves of the drawer frame.

c: Screw the locking pins C into the holes indicated on the large drawer front 10 .


Note: Insert locking pins C as far as shown. **Do not over tighten.**

d: Press the large drawer front 10 onto the drawer sides 13 and 14 . Place the small cams B into the holes indicated, arrows pointing towards the drawer front / locking pins.
To tighten cams: Turn to the right using a screwdriver.
"Function of cam and locking pin" see page 4.


e: Fix the knobs I to the large drawer front 10 using screws F.

Repeat with remaining drawers.


a:

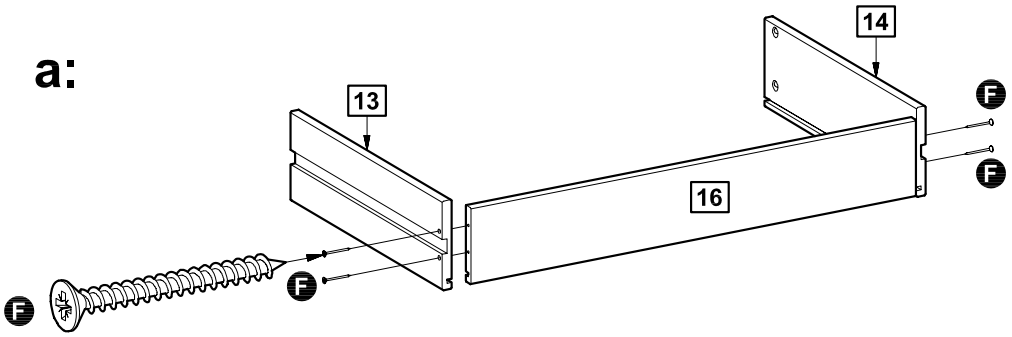


b:

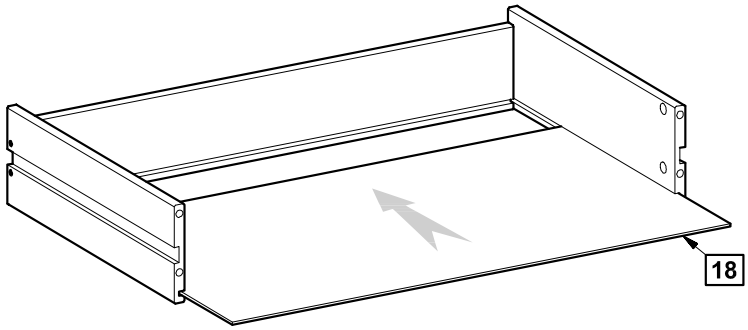


c:

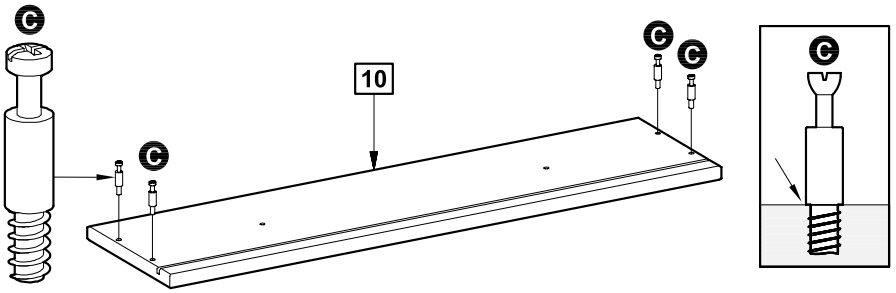

d:

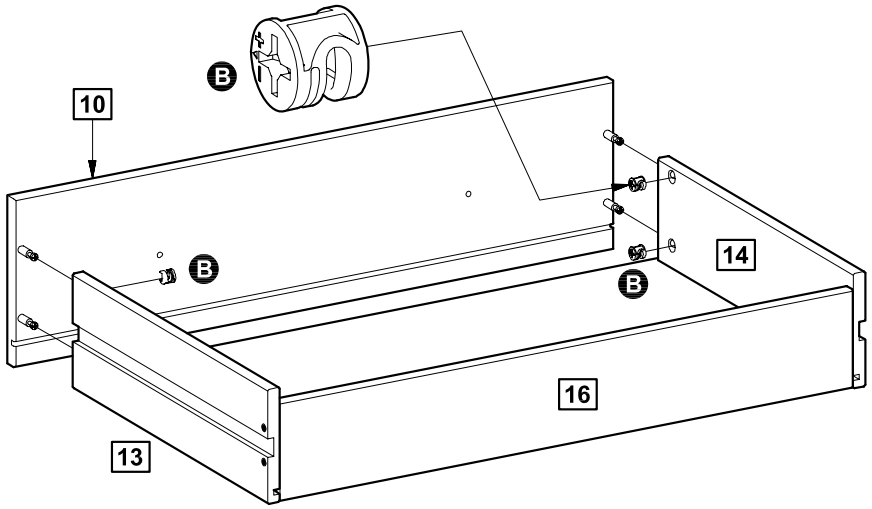


e:

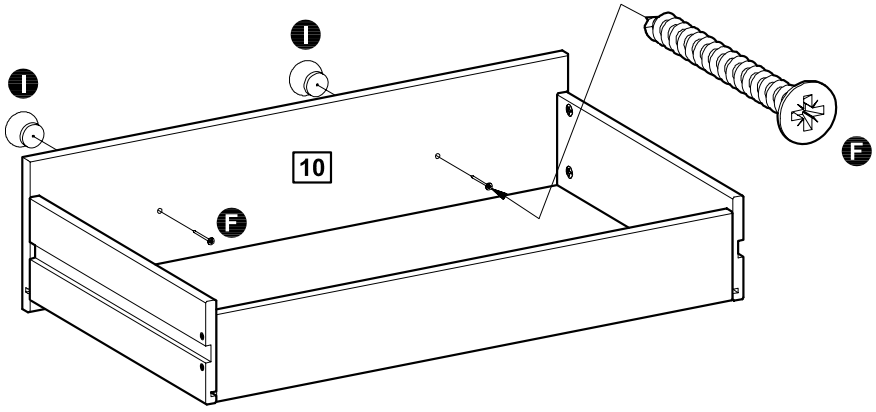


Step 22

Small drawer assembly.

a: Fix the drawer sides [13] and [14] to the small drawer back [15] using screws (F).

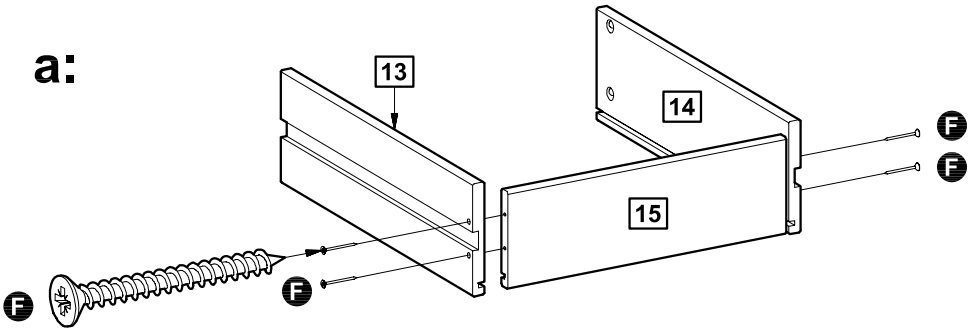


b: Slide the drawer bottom [17] into the grooves of the drawer frame.

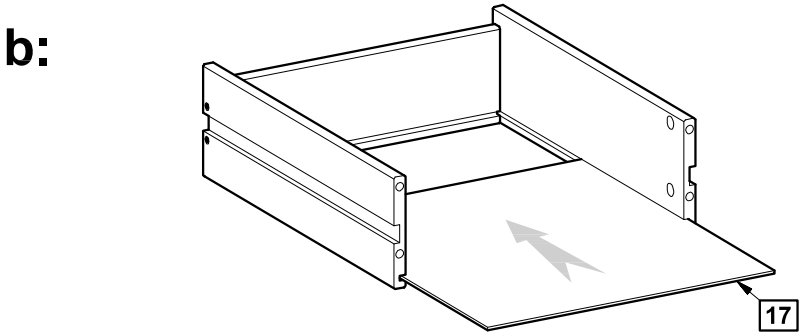


c: Screw the locking pins (C) into the holes indicated on the small drawer front [11].


Note: Insert locking pins (C) as far as shown. **Do not over tighten.**

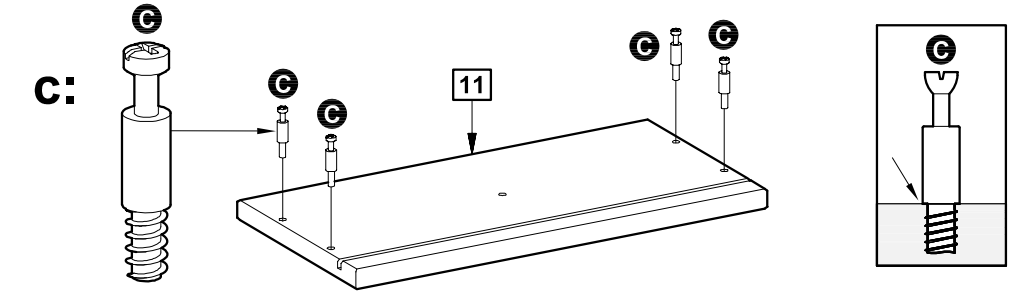

d: Press the small drawer front [11] onto the drawer sides [13] and [14]. Place the small cams (B) into the holes indicated, arrows pointing towards the drawer front / locking pins.
To tighten cams: Turn to the right using a screwdriver.
"Function of cam and locking pin" see page 4.

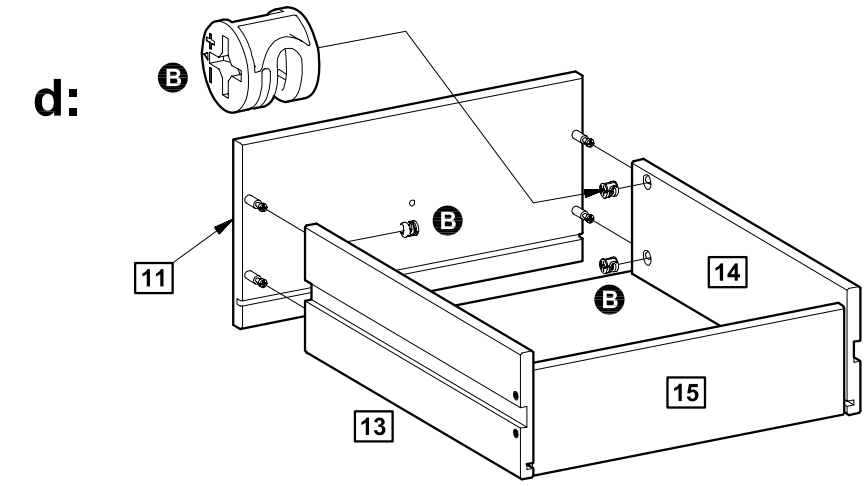

e: Fix the knob (I) to the small drawer front [11] using screw (F).

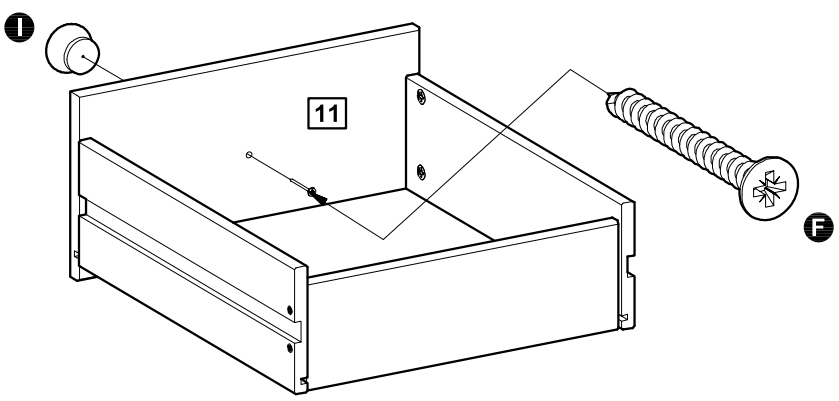


Repeat with remaining drawers.

Step 23

Adding the drawers and the hanging rails to the carcass.

Slide the drawer onto the drawer runners.

Lower the hanging rails Ⓜ into the hanging rail cups.

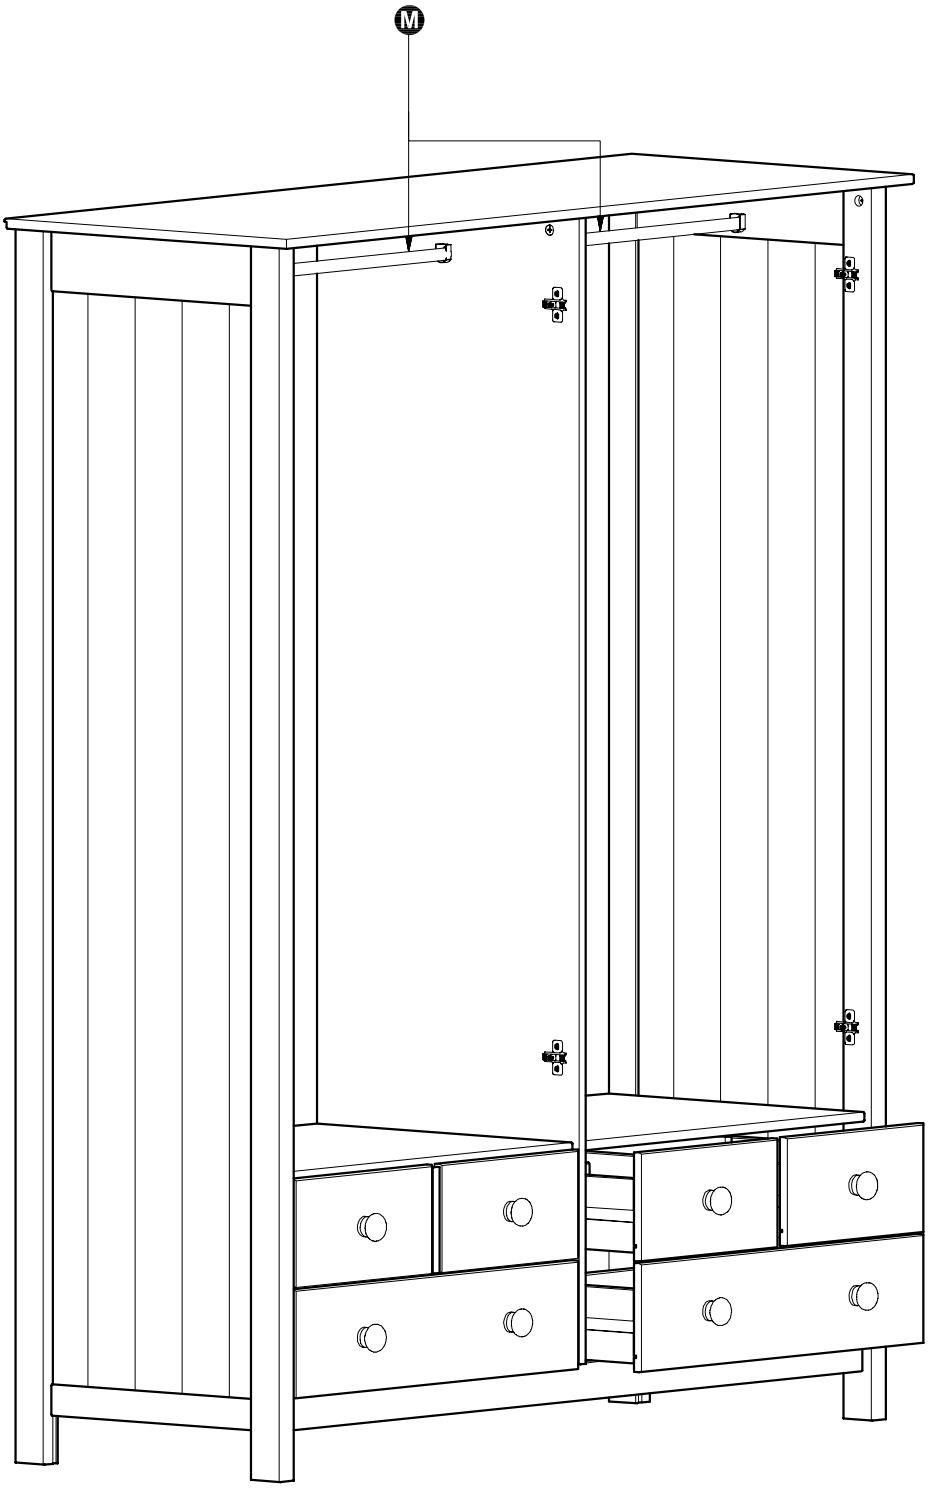


Step 24

Mounting the cup hinges to the doors.

Fix the cup hinges (K) into the holes indicated on the doors [4] and [5].


Attach the hinges using screws (D).

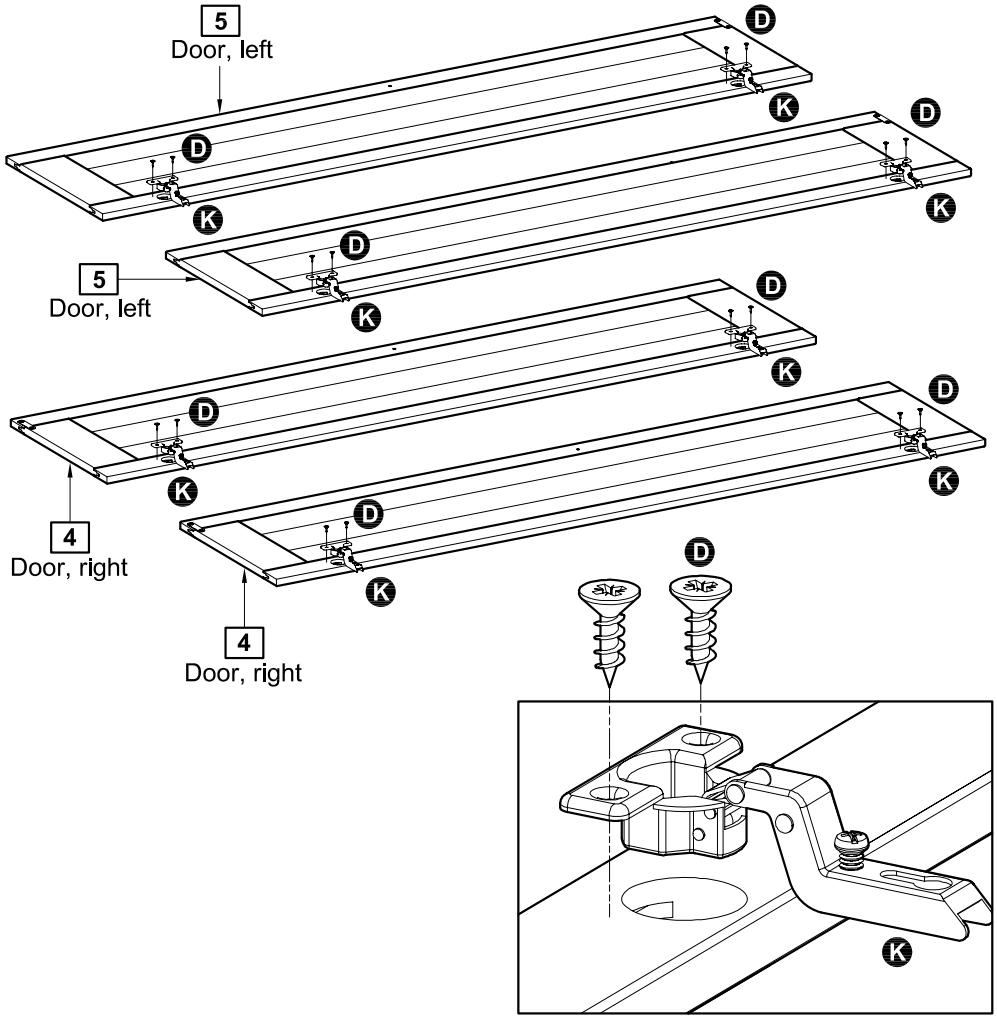

Step 25

Mounting the knobs to the doors.

Fasten the knobs (I) to the doors [4] and [5], using screws (F).

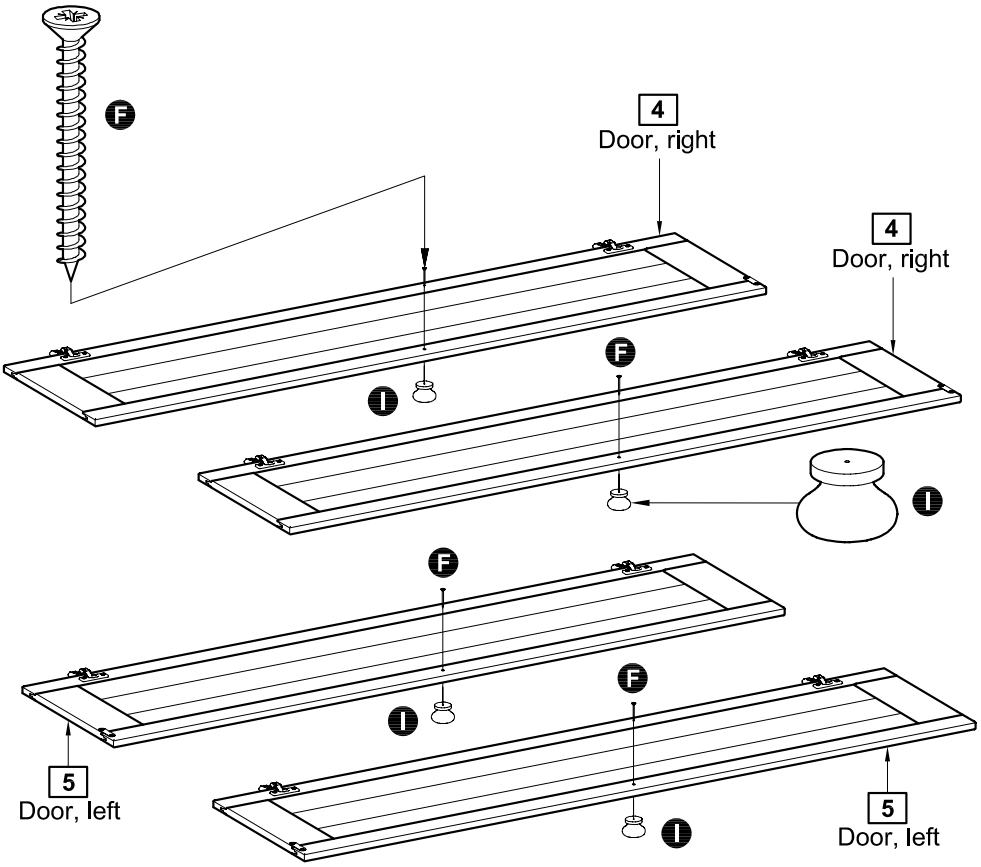

Step 26

Mounting the doors to the carcass.


When placing the doors, the magnetic catch plates must be at the top of the doors.

a: Place the adjustment hole of the cup hinge at the level of the fixing screw. Push the cup hinge towards the cross place - placing the fixing screw in the wider part of the adjustment hole.

Important: Ensure you catch all three of the fixing screws.

b: Push the door / cup hinge inwards - placing the fixing screw in the narrow end of the adjustment hole.


c: Tighten the fixing screws of all three of the cross plates.

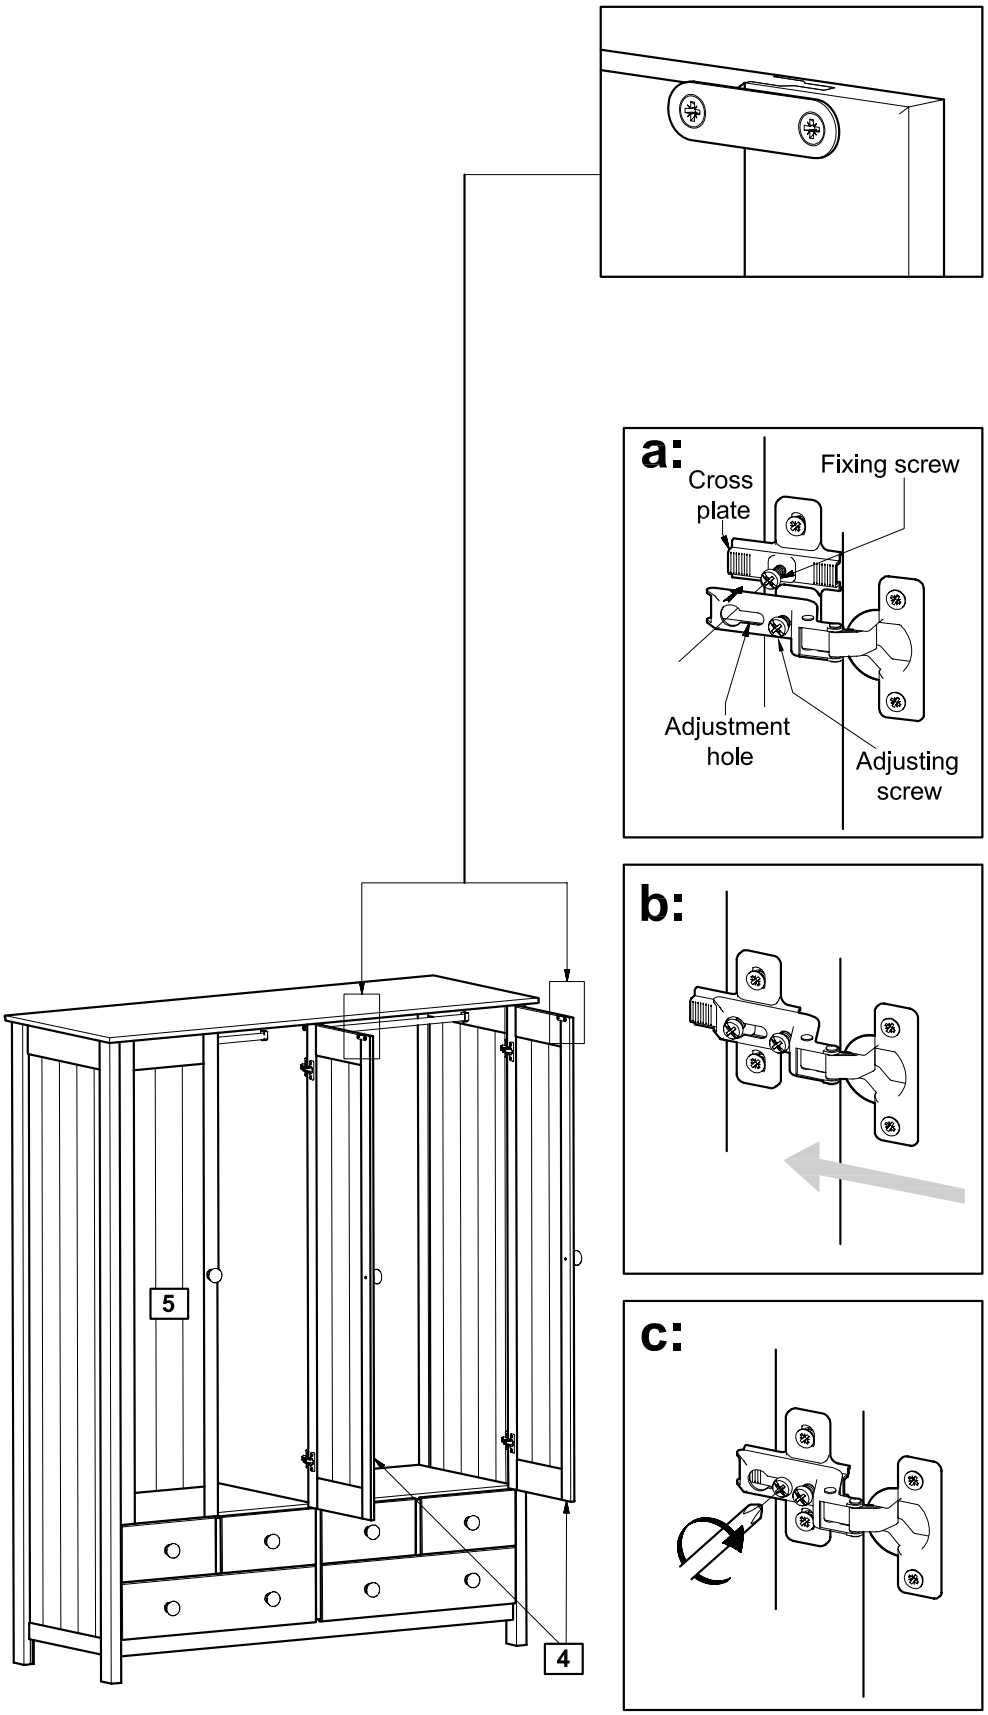


Step 27

Adjusting the doors.


Make sure the wardrobe is placed on a level surface before you begin to adjust the hinges.

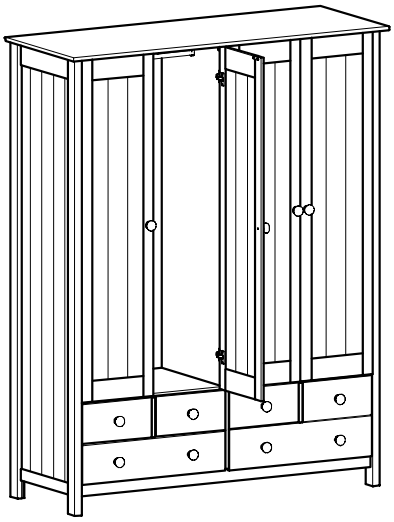

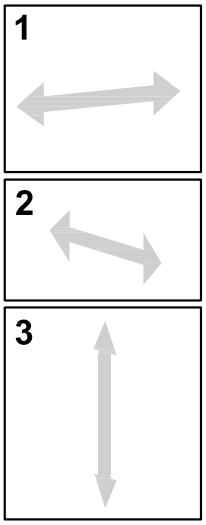


Right or left:


Loosen the fixing screw.

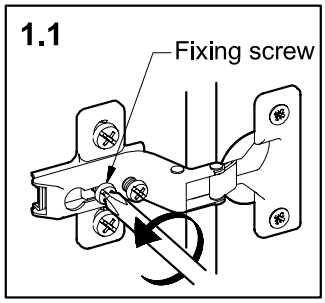


To adjust the door towards the lefthand side - turn the adjusting screw to the right.

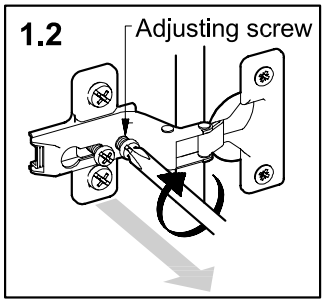

To adjust the door towards the right hand side - turn the adjusting screw to the left.

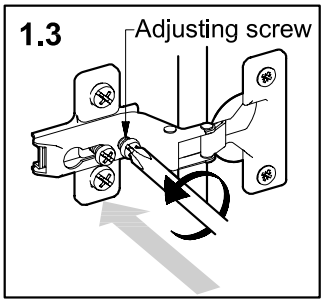


Continue adjustment - see 2 - or tighten the fixing screw of the cross plates

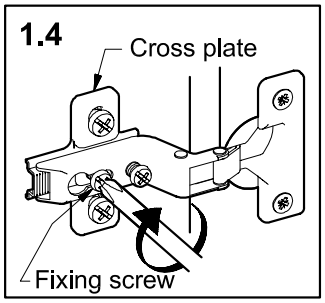


Forwards or backwards:


Loosen the fixing screw.

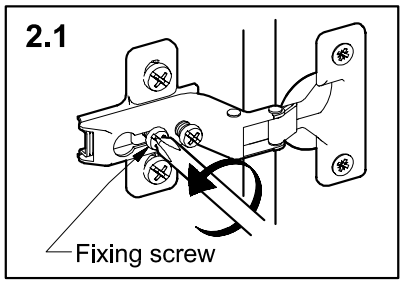

Push the cup hinges / the door back or forth to adjust. The door should level with the front edge of the sides.

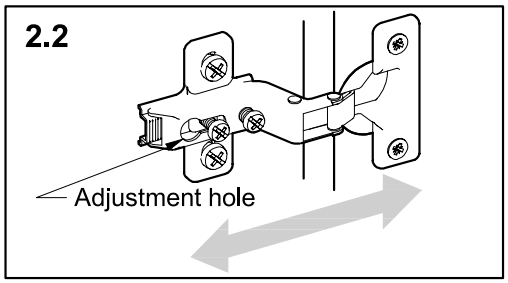


Tighten the fixing screws of all the cross plates.

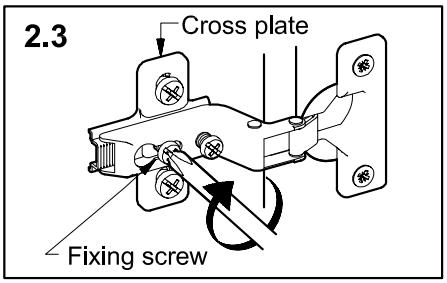


Up or down:


Loosen the two screws Ⓔ of each cross plate, but only as much as it will allow the cross plate to move up and down.

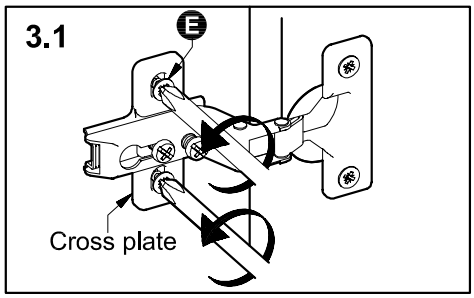

Adjust the cross plate / door.

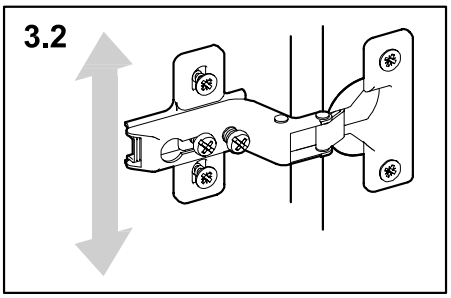

Tighten the screws Ⓔ of all the cross plates.

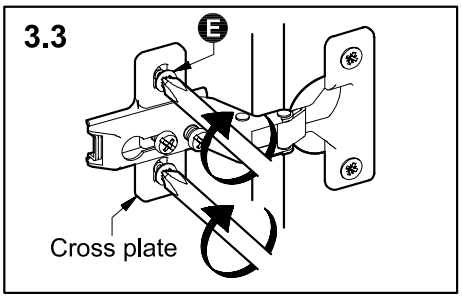

Step 28

Fixing to wall.

It is recommended that the wardrobe is fixed to a wall.

Fix wall straps (P) to top of wardrobe using screws (D).

With help, move wardrobe into position.

Warning:
The wardrobe is heavy.
Lift with care.


Mark fixing holes on wall and remove wardrobe.

Drill 7mm holes and insert wall plugs (Q).

Warning:
Before drilling, check wall for hidden pipes and cables.


Reposition wardrobe and fix wall straps using screws (O) .

Assembly is complete.

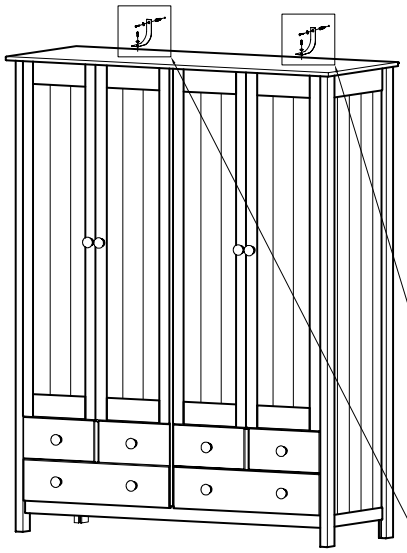

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

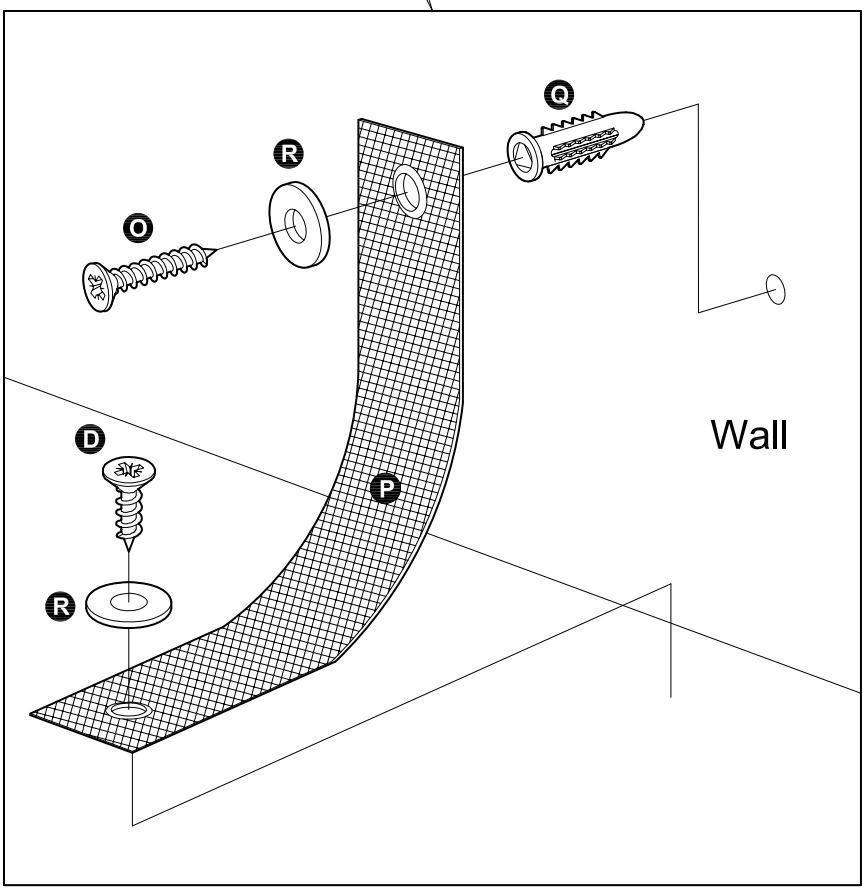

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: **General rule**: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

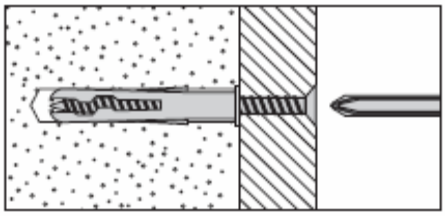


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

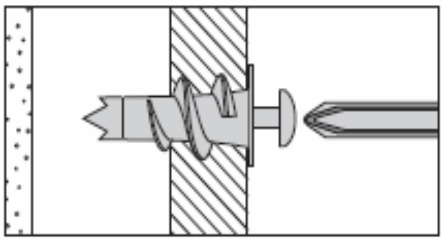


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

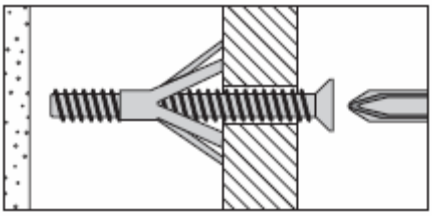


For use with plasterboard partitions or hollow wooden doors.

No.4 "**Cavity Fixing-Heavy Duty" wall plug**

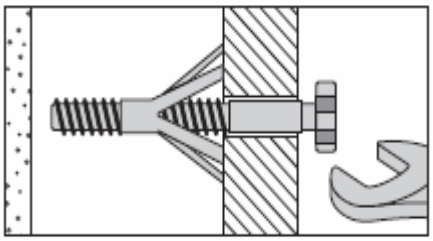


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

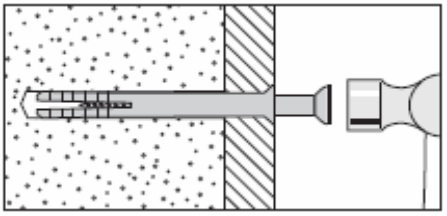

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

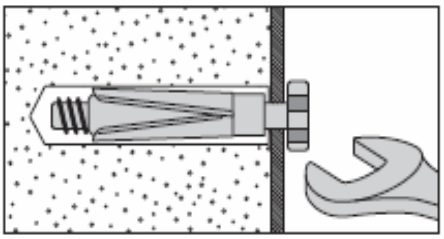

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Dear Customer

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.