KITFORM


TRUNDLE BED
KA7146/02

IMPORTANT NOTICE


To safeguard your own interests you are advised to CHECK the contents of this kit thoroughly BEFORE ASSEMBLY.

Commencement of assembly will be regarded by the manufacturer that both panels and fittings were correct and in good condition when you received them. Claims against the manufacturer regarding quality or quantity of parts will become invalid after the commencement of assembly. This notice does not affect your statutory rights.


Our policy is of constant improvements to our furniture. Components may occasionally differ slightly from diagrams shown. Spare components can be disposed of once assembly is complete.
Kit-form Furniture reserve the right to change specification without prior notice.

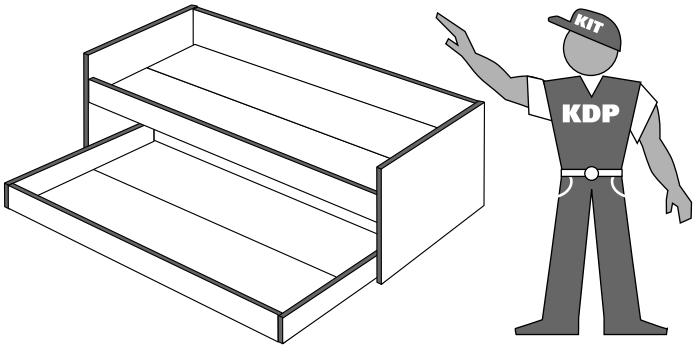

TOOLS REQUIRED

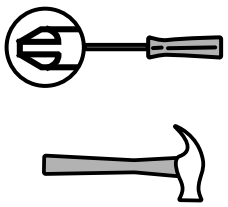


IMPORTANT SPARE PARTS CANNOT BE SUPPLIED WITHOUT PANEL DESCRIPTION/FITTINGS REF. CODE AND FULL ASSEMBLY GUIDE TITLE

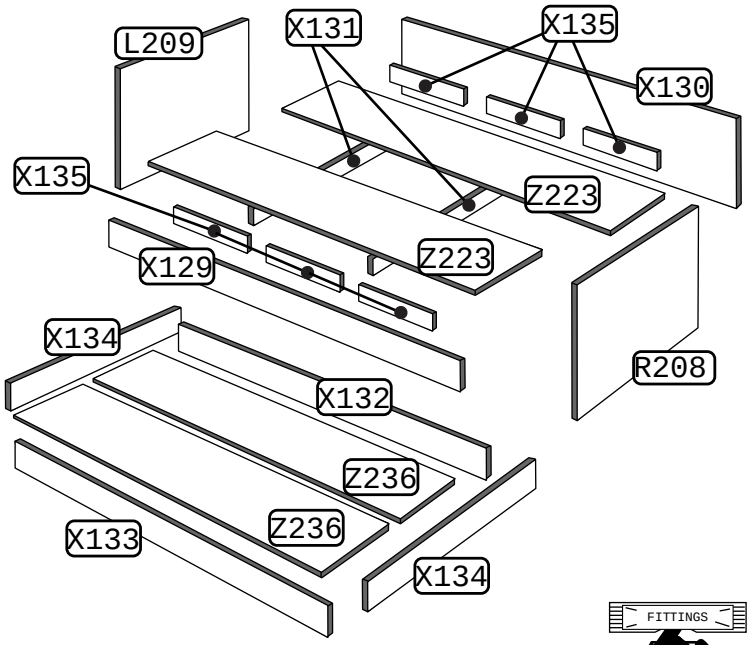





This product contains a universal kit therefore you may have surplus fittings after assembly.


BED

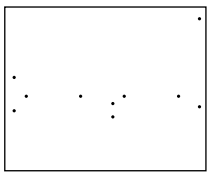

L209 990x666



R208 990x666


X129 1965x200

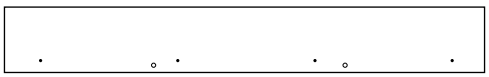

X130 1956x400

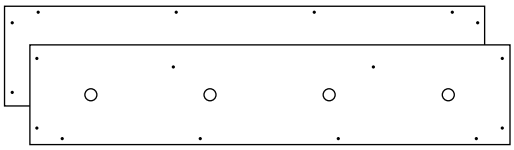

Z223 1955x471



X131 945x80



X135 250x50

TRUNDLE


X132 1906 x180



X133 1906 x180



X134 948x180

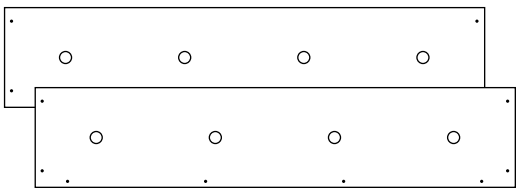

Z236 1906x455

DIMENSIONS ARE IN MILLIMETRES

FITTINGS SUPPLIED


K65 X 20


K243 X 12



K30


K40 X 36


K76 X 6



K16 X 24


1

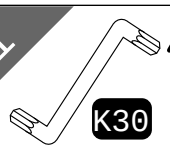
K30


K65


FITTINGS NEEDED


K65 X 4



K30

2


FITTINGS NEEDED



K65 X 4



K30

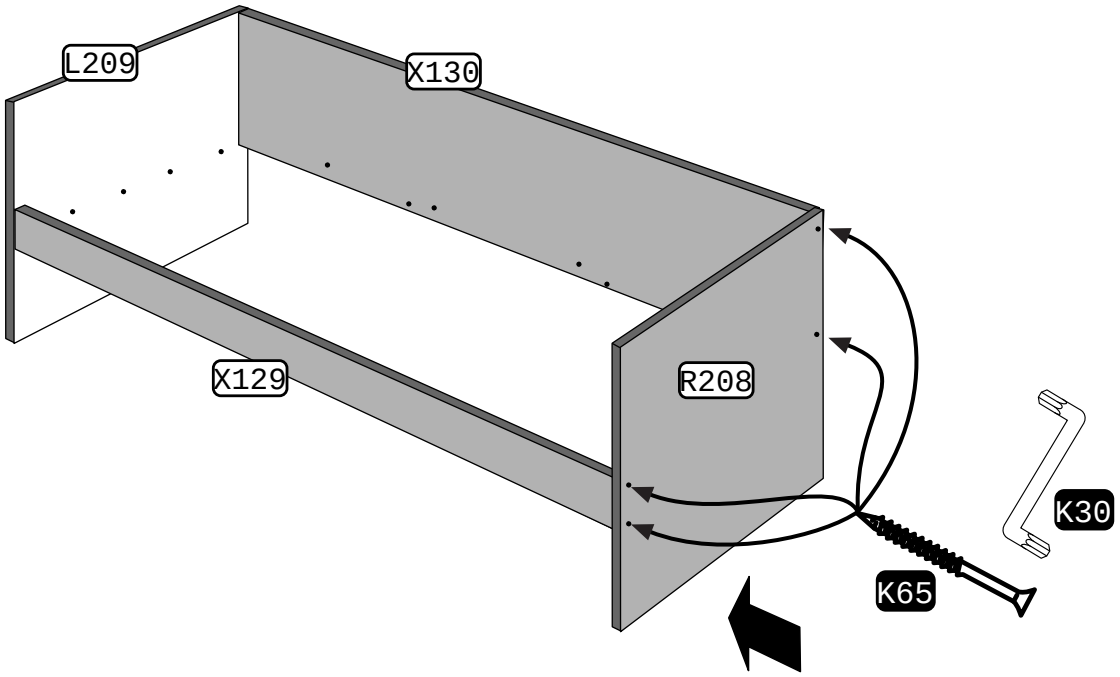

3


FITTINGS NEEDED




K40 X 4

FOR EASIER FITTING,
REMOVE SCREWS FROM MINI BLOCKS

Knock in on a flat firm surface

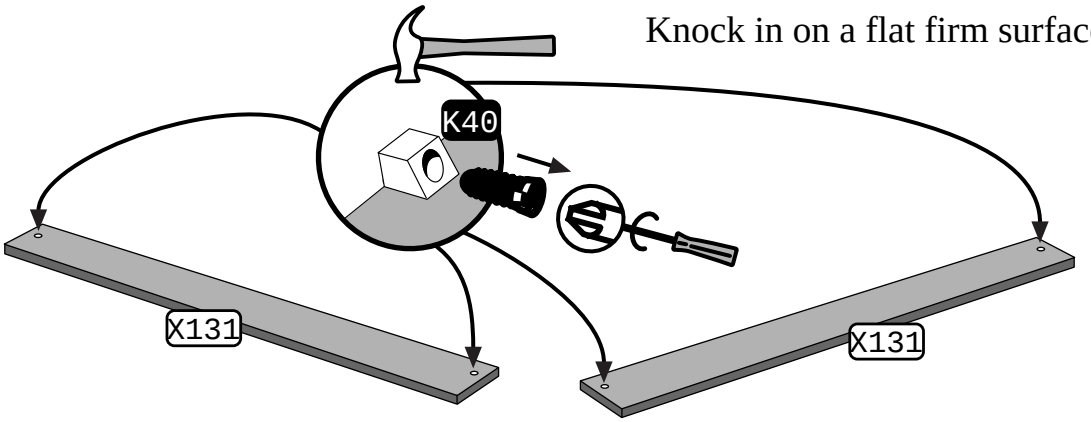

4

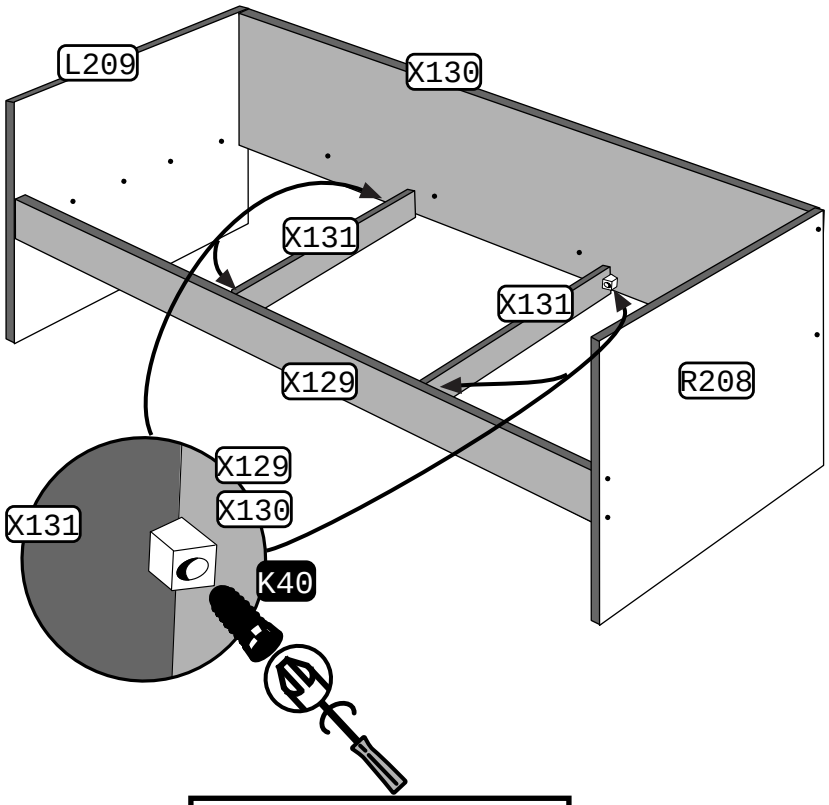


5

FITTINGS NEEDED




K40 X 16

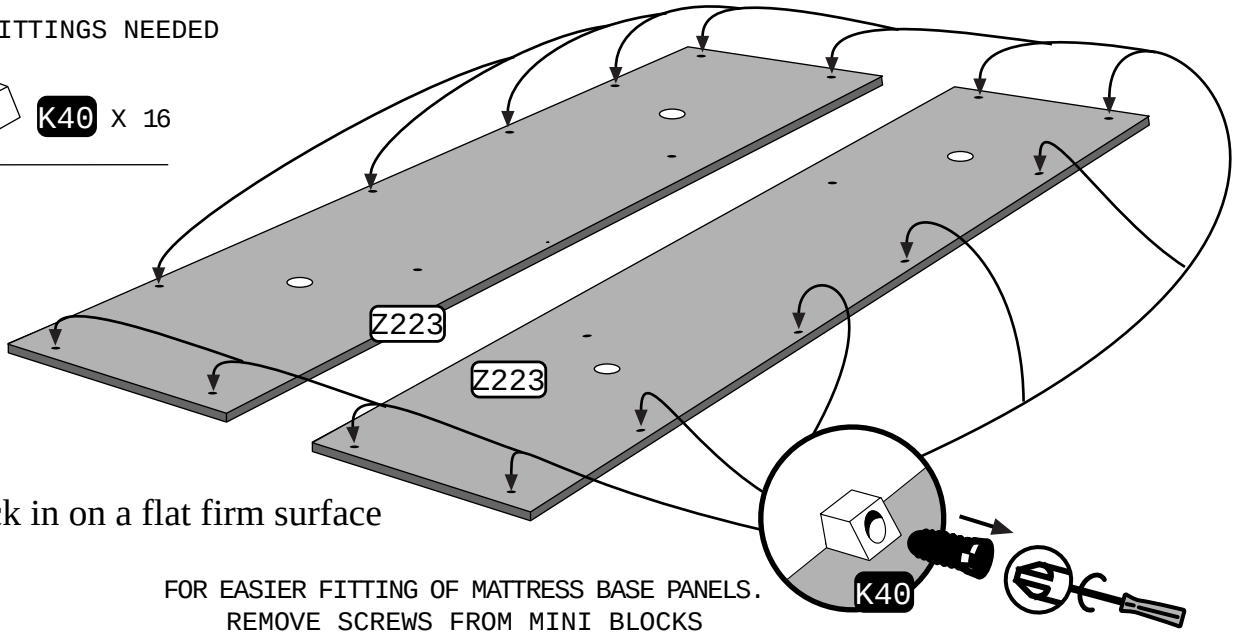

Knock in on a flat firm surface


FOR EASIER FITTING OF MATTRESS BASE PANELS.
REMOVE SCREWS FROM MINI BLOCKS

6

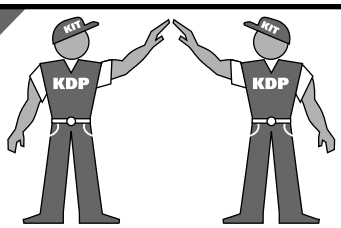

TWO PEOPLE REQUIRED
FOR THIS SECTION

7

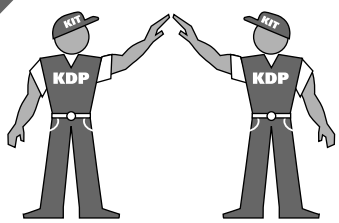


TWO PEOPLE REQUIRED
FOR THIS SECTION

8

FITTINGS
NEEDED




K243 X 12

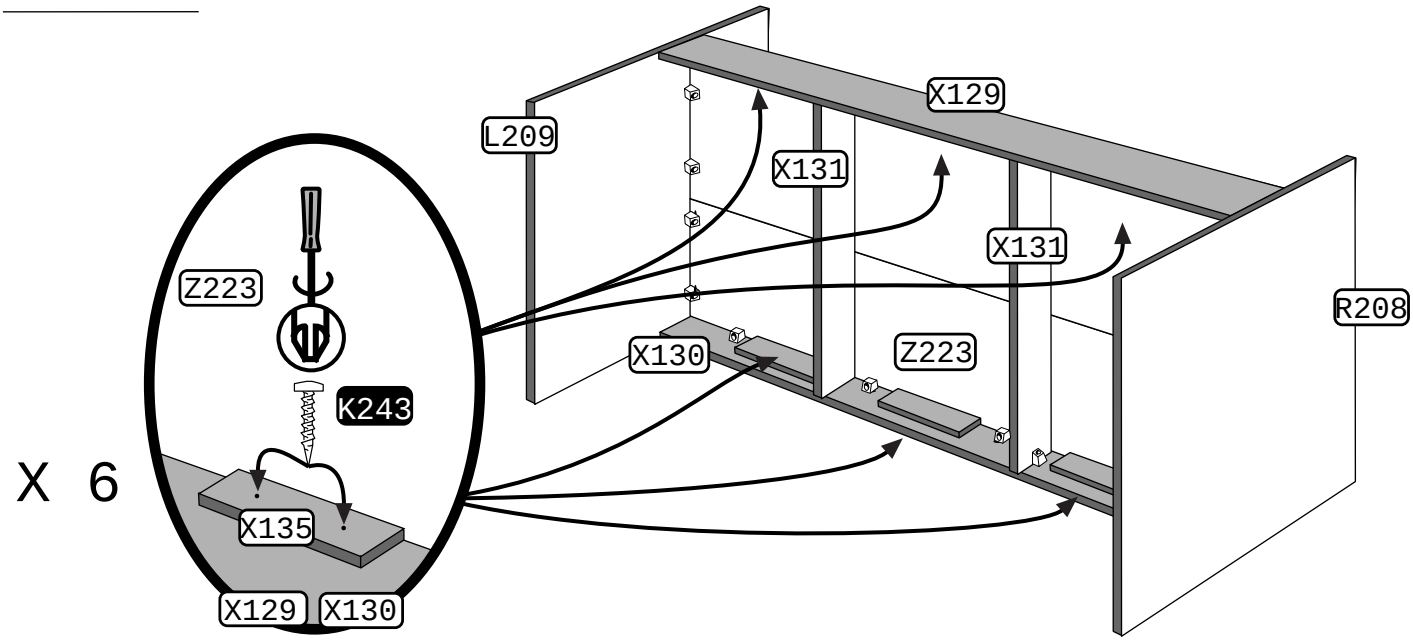


9


FITTINGS
NEEDED




K65 X 4




K30

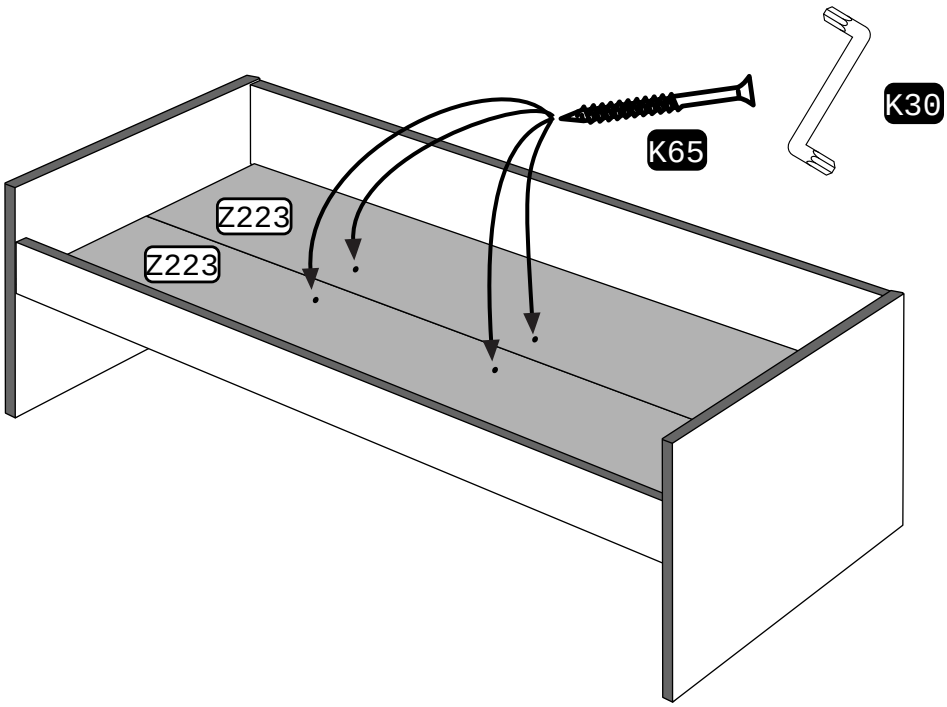

10

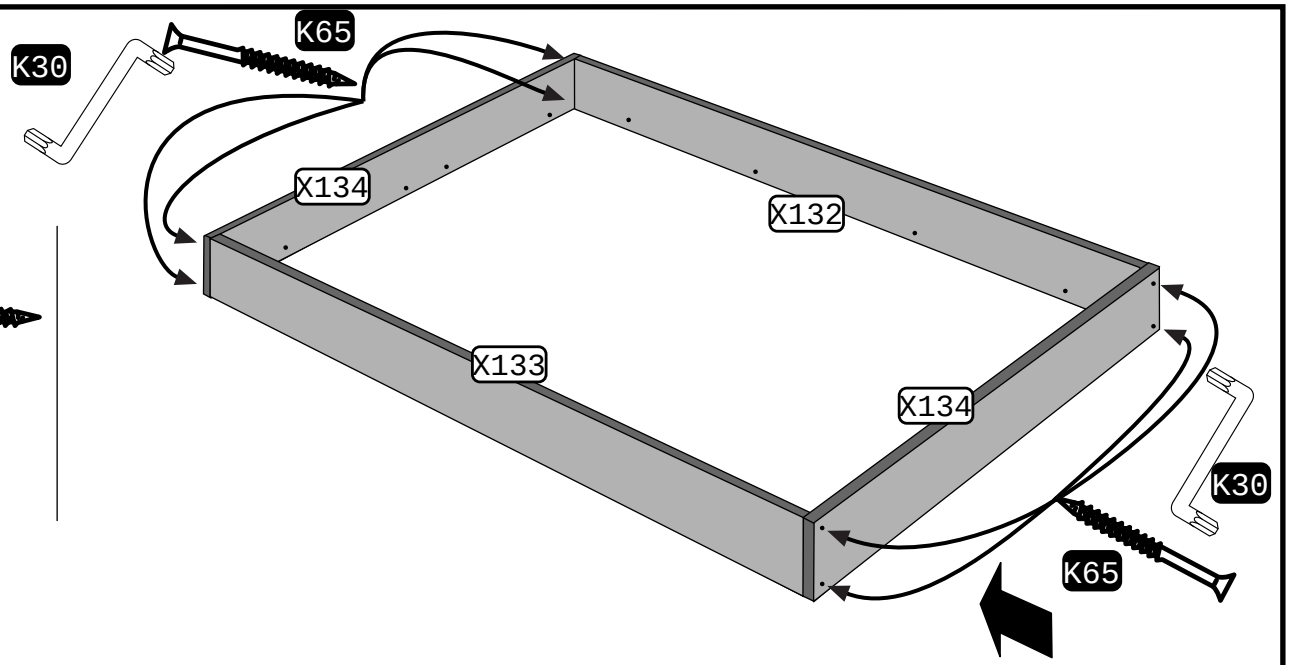

FITTINGS NEEDED

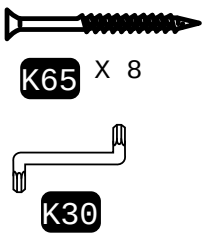

K65 X 8


K30

11

FITTINGS NEEDED




K40 X 16

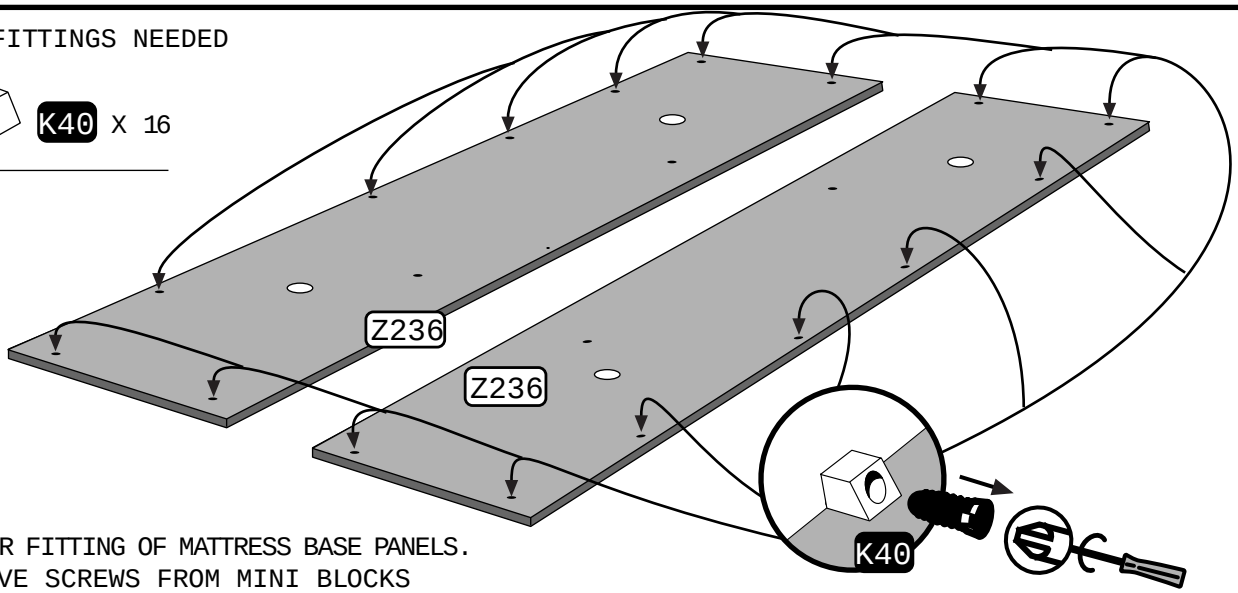


FOR EASIER FITTING OF MATTRESS BASE PANELS.
REMOVE SCREWS FROM MINI BLOCKS

12

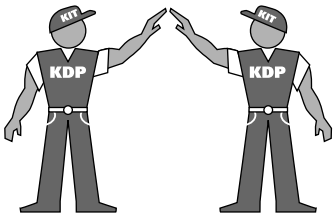

TWO PEOPLE REQUIRED
FOR THIS SECTION

13

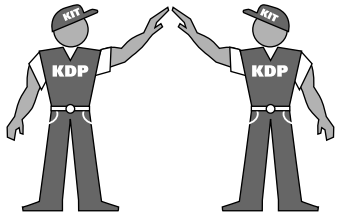

TWO PEOPLE REQUIRED
FOR THIS SECTION

14


FITTINGS
NEEDED




K76
X 6




K16
X 24

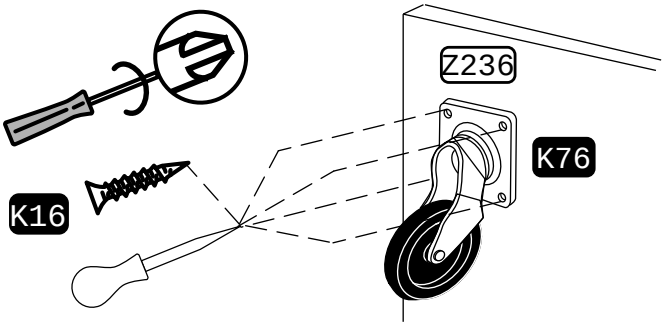

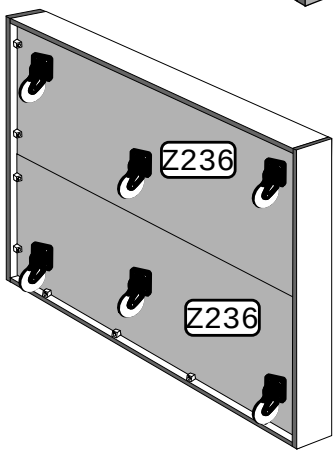

15

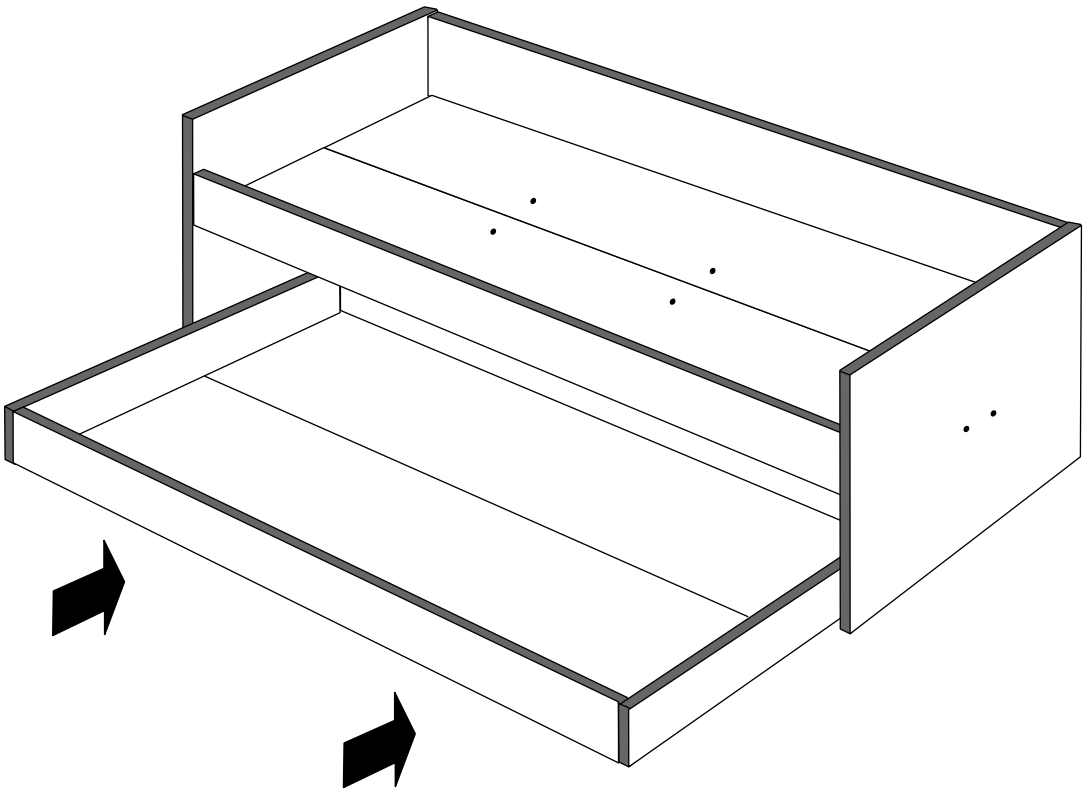



CUSTOMER HELPLINE

TRUNDLE BED
KA7146/02

Address: Support Desk, KD Products Ltd, Redwither Tower, Wrexham Industrial Estate, Wrexham, LL13 9XT

Fax: 01978 661848 e-mail: helpline@kdproducts.co.uk

Trundle Bed
Birch / Birch Cream / Birch Black *Code: B71/ 72 46 B / E / A*

Thank you for your purchase!!!

In the unlikely event that this product has missing or damaged parts, please fill in the form below and post, fax or e-mail to the address / number above.

The phone line is available for advice on assembly only and not for missing or damaged parts. The line is open between 8am and 5pm Monday to Thursday, 0844 880 6770.

NOTE: PLEASE ALLOW 14 WORKING DAYS FOR DELIVERY OF REPLACEMENT PARTS

Your details: *All the fields marked with * are essential to process your request correctly.*

*Name: _

*Address: _

_ *Postcode: _ _ _ _ _ _

*Day Tel: _ Eve Tel: _

e-mail: _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _