
# Sherington









## 3FT 2DRW FRAME

Item No.: 6582766 Date:02-02-2008

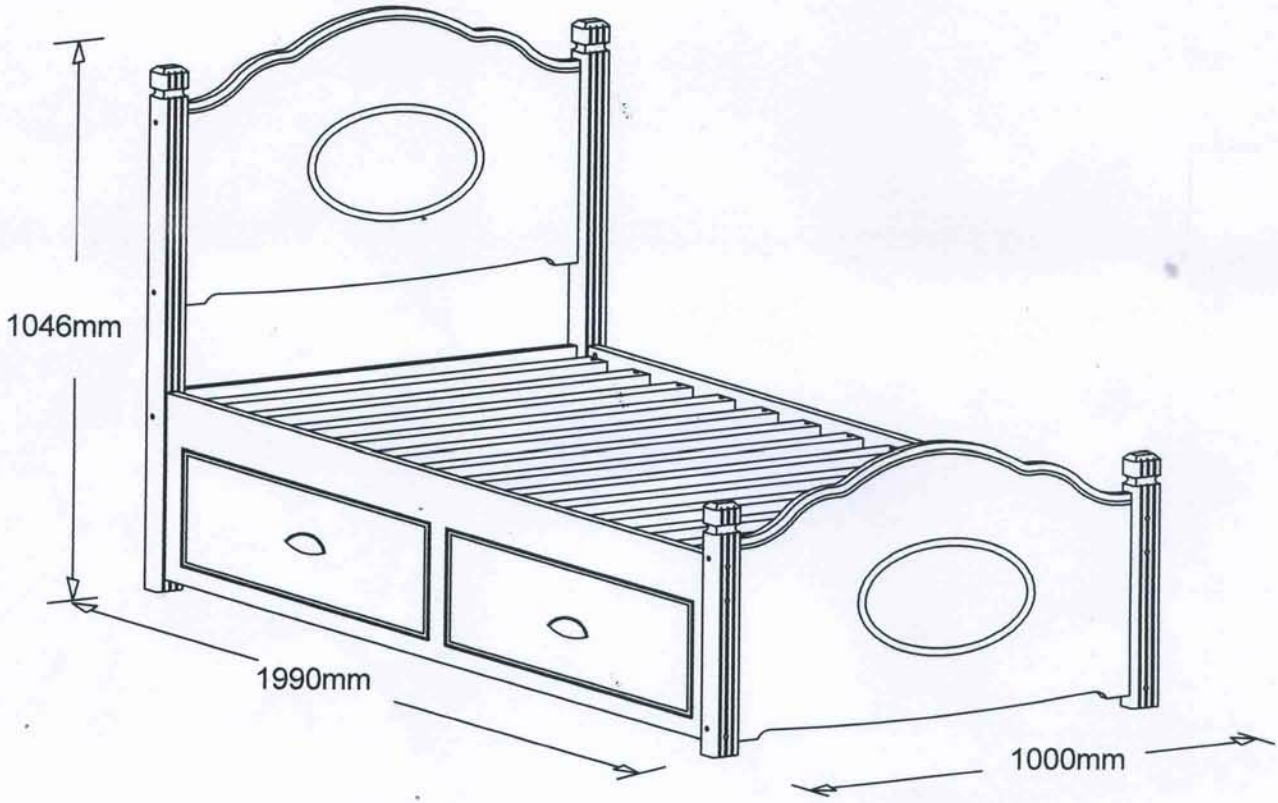

Please sort out all parts before you begin to assemble the item.
This to make sure you always use the correct par .


## Fittings contained in the box.
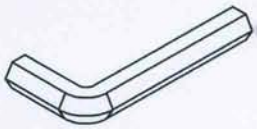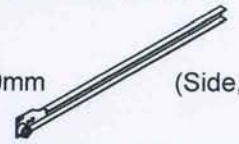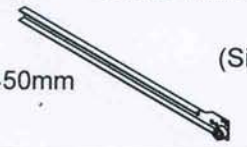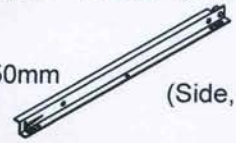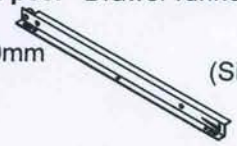
| | | |
|---|---|---|
| **A** **16 pcs.** Cam - ø15 x 12mm  | **B** **16 pcs.** Bolt - ø6,5 x 33.5/11mm  | **C** **24 pcs.** Dowel - ø8 x 30mm  |
| **D** **2 pcs.** Cam - ø12 x 11mm  | **E** **2 pcs.** Bolt - ø6,5 x 20/11mm  | **F** **32 pcs.** Screw - ø3,5 x 15mm  |
| **G** **38 pcs.** Screw - ø3,5 x 30mm  | **H** **12 pcs.** Bolt- ø6 x 80mm  | **I** **10 pcs.** Bolt - ø6 x 90mm  |
| **J** **22 pcs.** Barrel Nut  M6,Ø10 x 13mm | **K** **8 pcs.** Screw - ø7 x 50mm  | **L** **1 Pcs.** Allen key - 4mm  |
| **M** **2 pcs.** **Handle**  | **N** **4 pcs.** Bolt - ø5/32 x 5/8"  | **O** **2 pcs.** Drawer runner 450mm (Side, left)  |
| **P** **2 pcs.** Drawer runner 450mm (Side,right)  | **Q** **2 pcs.** Drawer runner 450mm (Side, left)  | **R** **2 pcs.** Drawer runner 450mm (Side,right)  |

**Fittings A, B, C, D, E, F, G, H,I, J,K,L and N are shown in their actual dimensions.**

## Hazard Warning !
## Keep small components out of the reach of children.

## Tools needed.

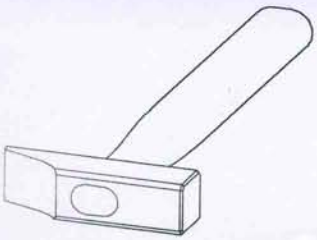



# Wooden parts contained in the box.

1 Post,headboard

2 pcs.





2 Post,foot

**2 pcs.**





3 Head-/footboard

**2 pcs.**

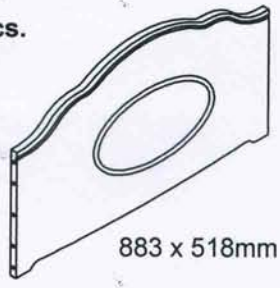


4 Rail,headboard

**1 pcs.**

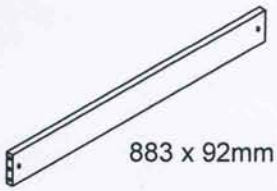



5 Side,right

**1 pcs.**





6 Side,left

**1 pcs.**

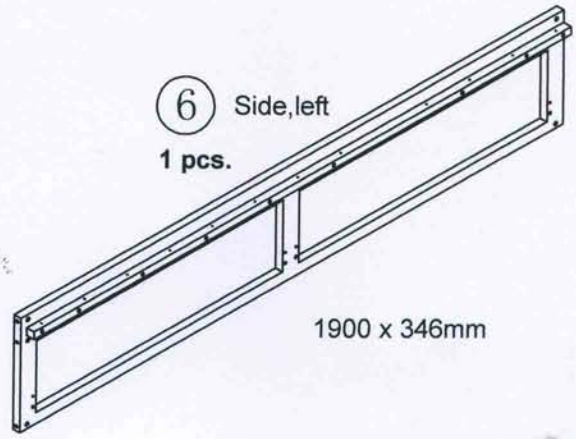



7 Slats

**13 pcs.**

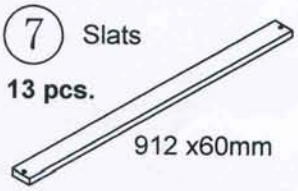



8 Drawer rai,left

**2 pcs.**

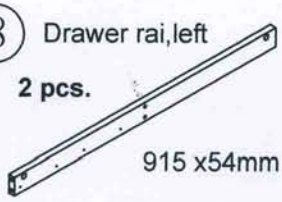



Drawer rail,right 9

**2 pcs.**

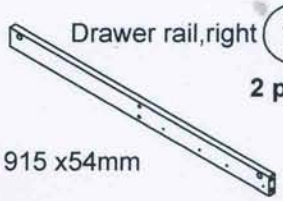



10 Rail

**2 pcs.**

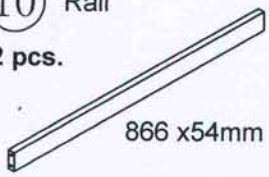



11 Drawer front

**2 pcs.**

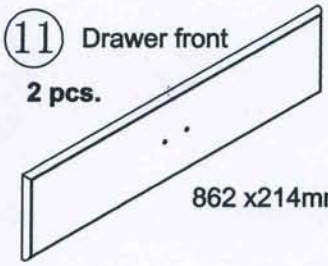



12 Drawer side,left

**2 pcs.**

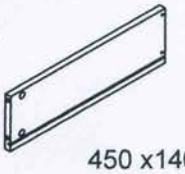



13 Drawer side,right

**2 pcs.**

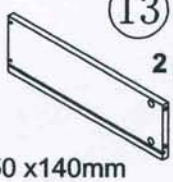



14 Drawer bottom rail

**2 pcs.**

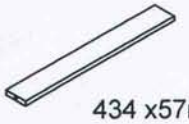



15 Drawer back

**2 pcs.**

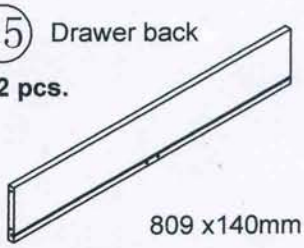



16 Drawer bottom

**2 pcs.**

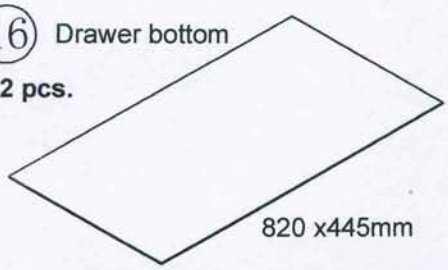


# Key diagram.

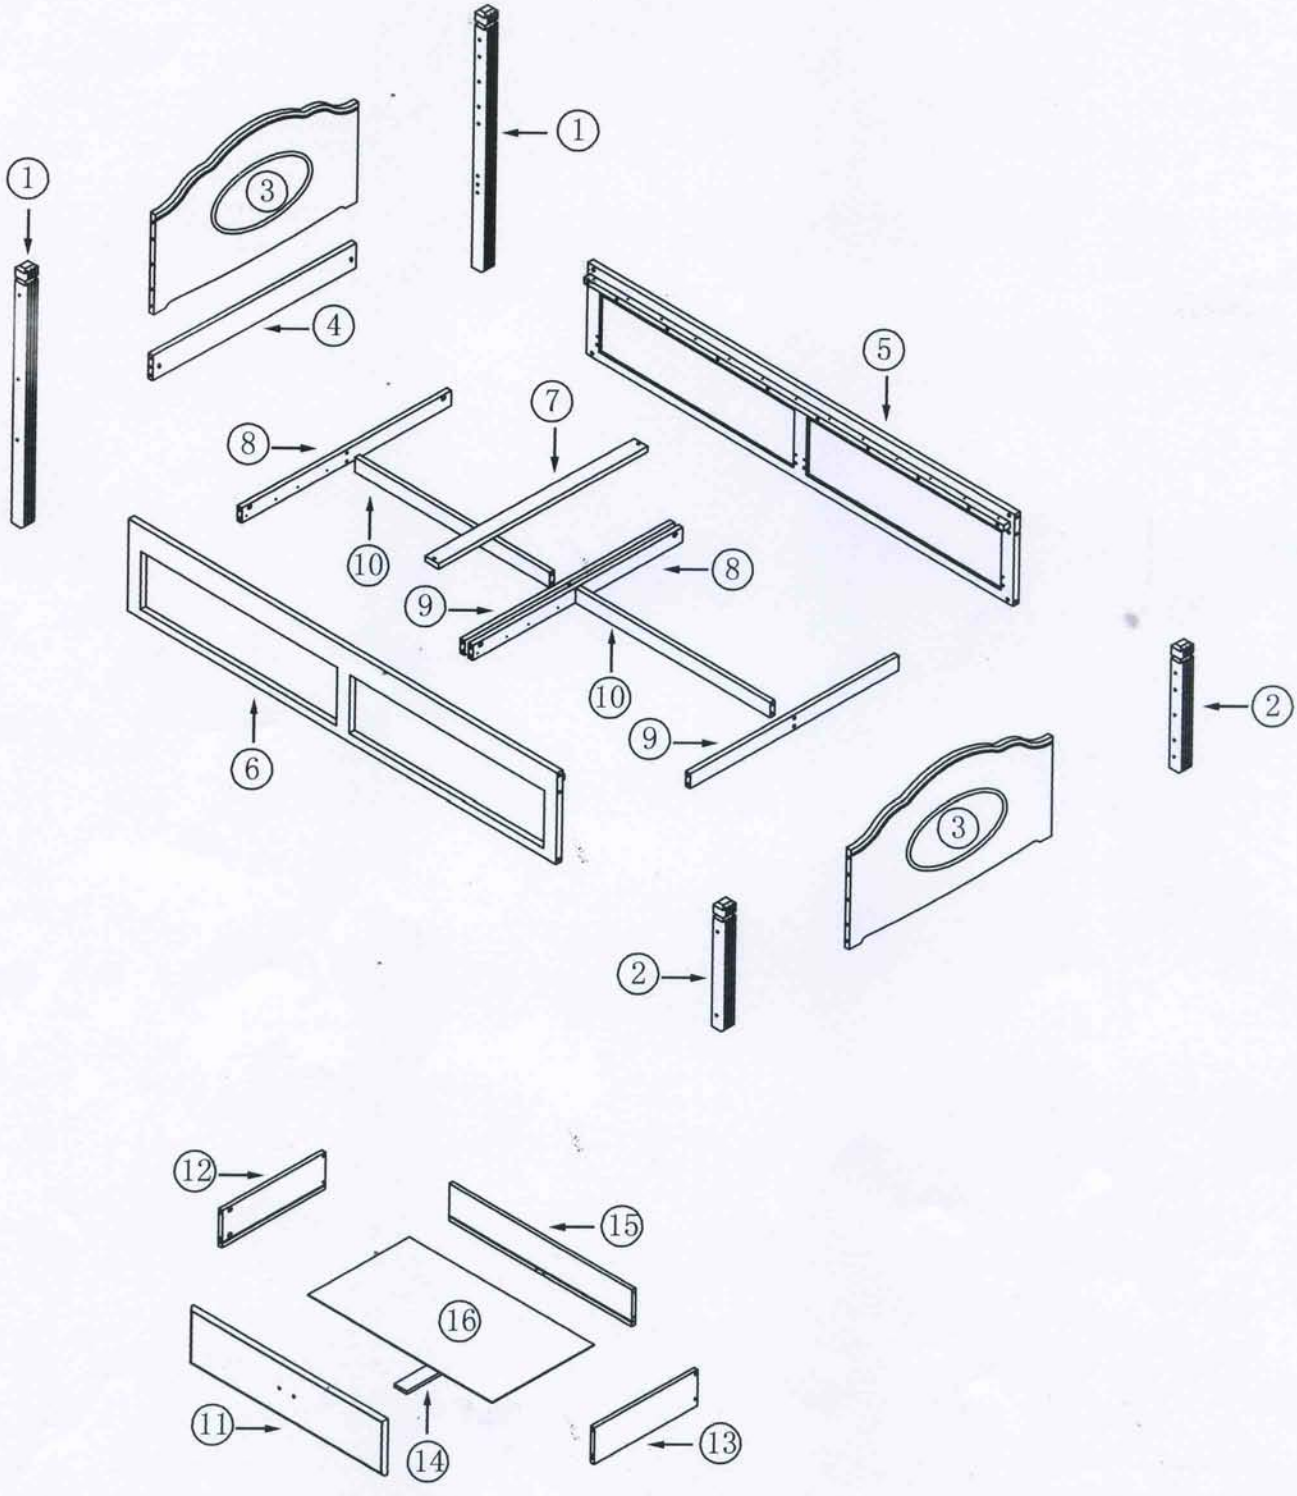


# 1.Inserting the dowels to the head-/ footboard and the rail.

Insert the dowels "C" into the holes indicated on the head- / footboards "3" and the headboard rail "4".

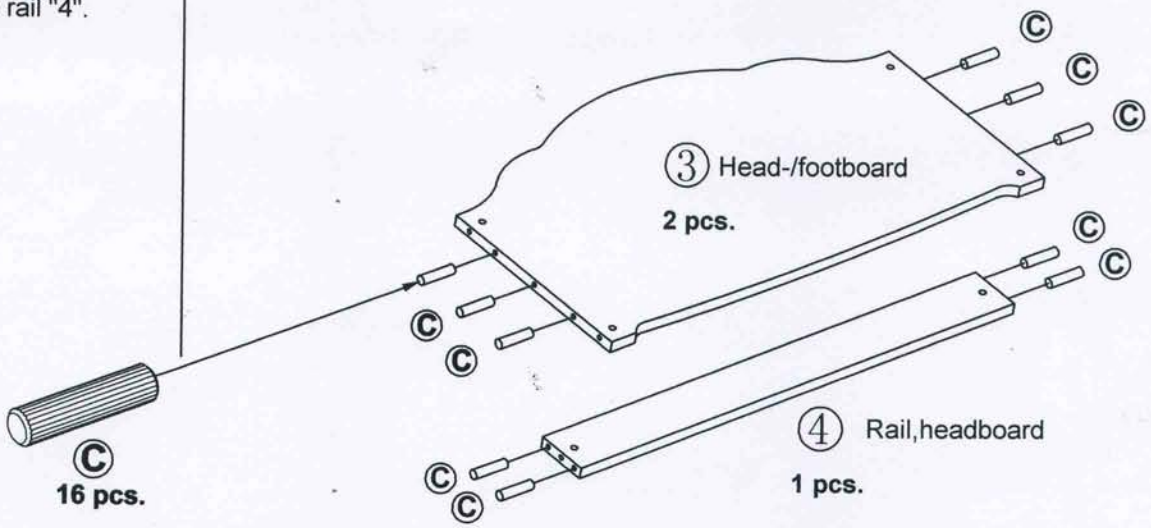


# 2.Mounting the posts to the footboard.


Press the foot posts "2" onto the head-/ footboard "3",and fix them using the barrel nuts "J" and the bolts "I".

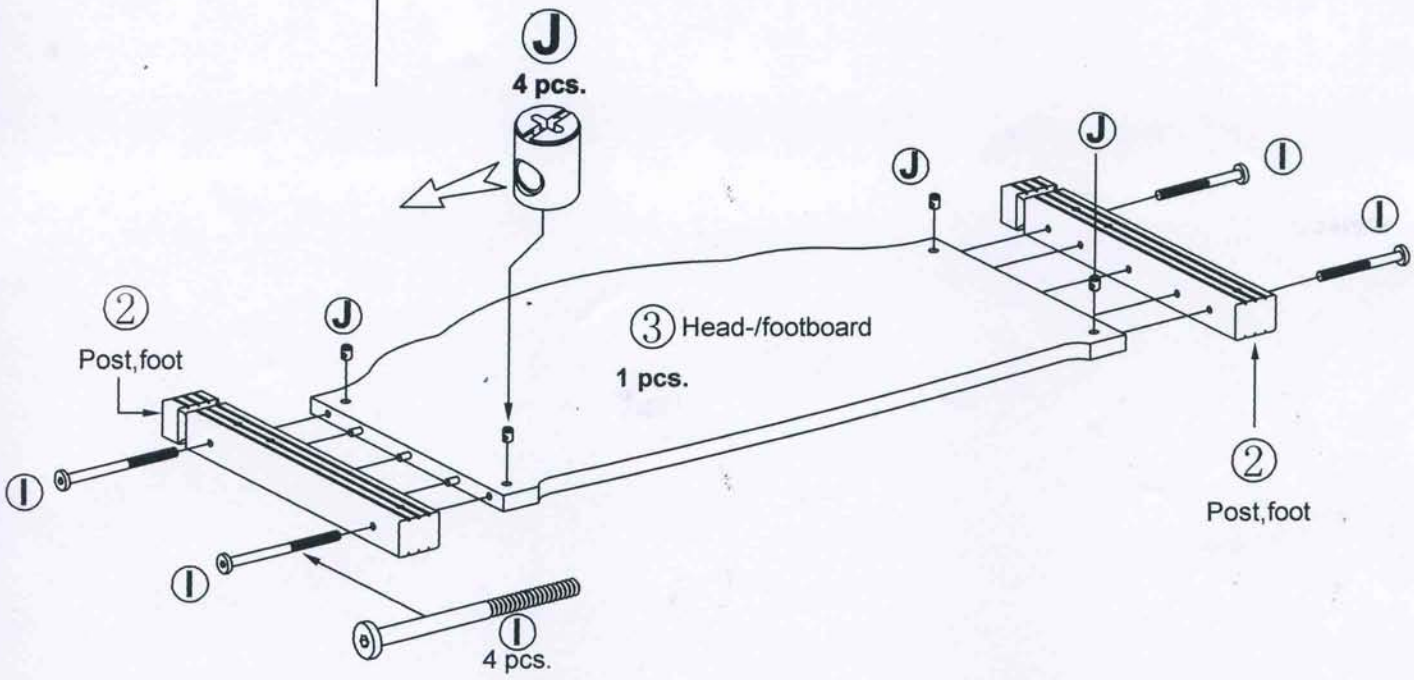

# 3.Mounting the rail in the headboard onto a post.

Press one of the headboard post "1" onto the headboard rail "4".

Fix it using the barrel nuts "J" and the bolts "I".

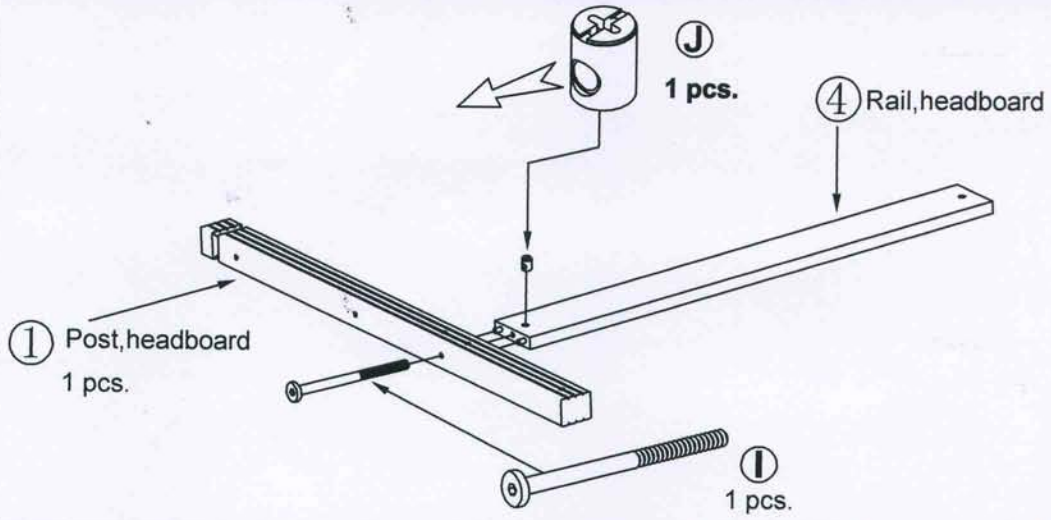



# 4.Inserting the headboard and fixing the other post.

Place the headboard "3" as shown.

Press the other headboard posts "1" onto the headboard rail "4".


Fix it using the barrel nuts "J" and the bolts "I".

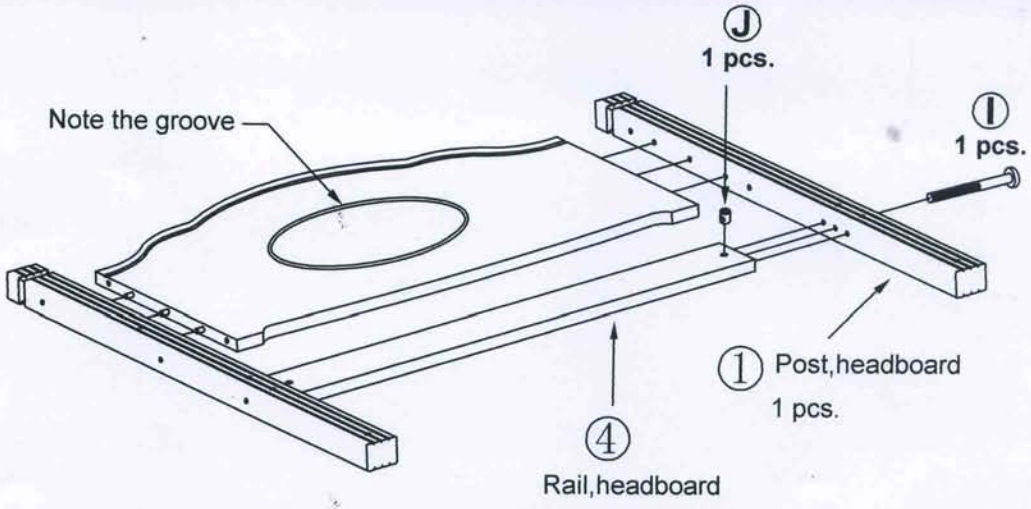


# 5.Fixing the posts onto the headboard.

Turn around the headboard. see fig.5.1

Fix the posts "1" to the headboard "3" using the barrel nuts "J" and the bolts "I".

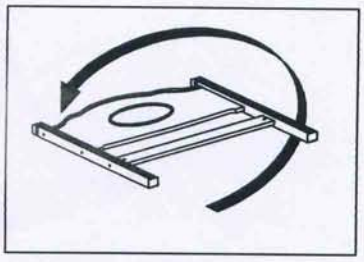


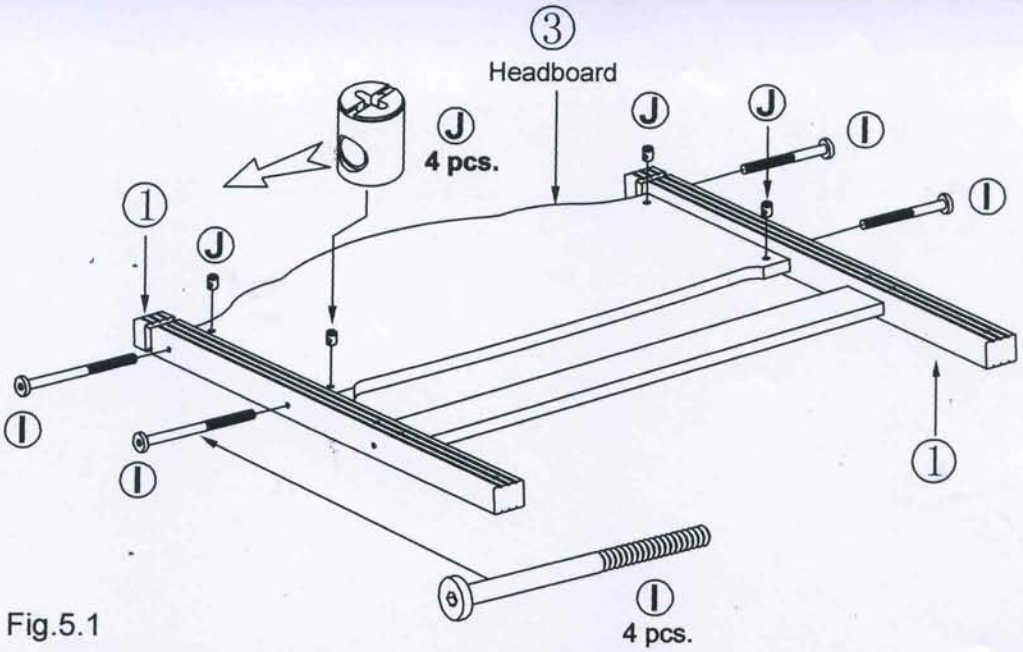



Fig.5.1


# 6.Mounting the bolts to the sides.

Screw the bolts "B" into the holes indicated on the sides "5" and "6".

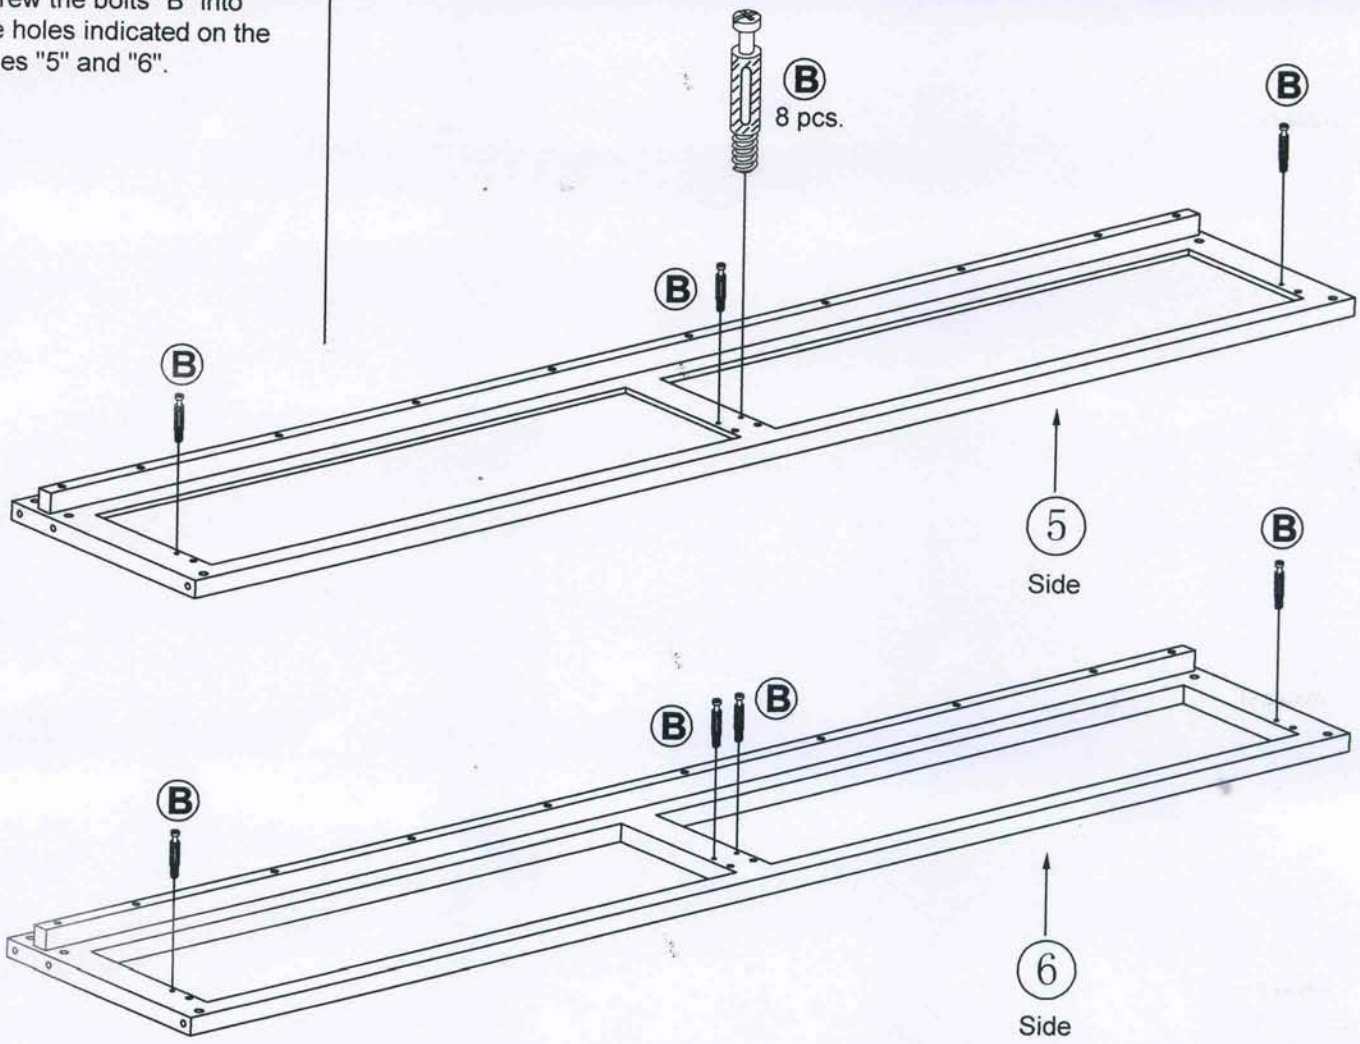



# 7.Inserting the dowels to the drawer rails.

Insert the dowels "C" into the holes indicated on the drawer rails "8" and "9".

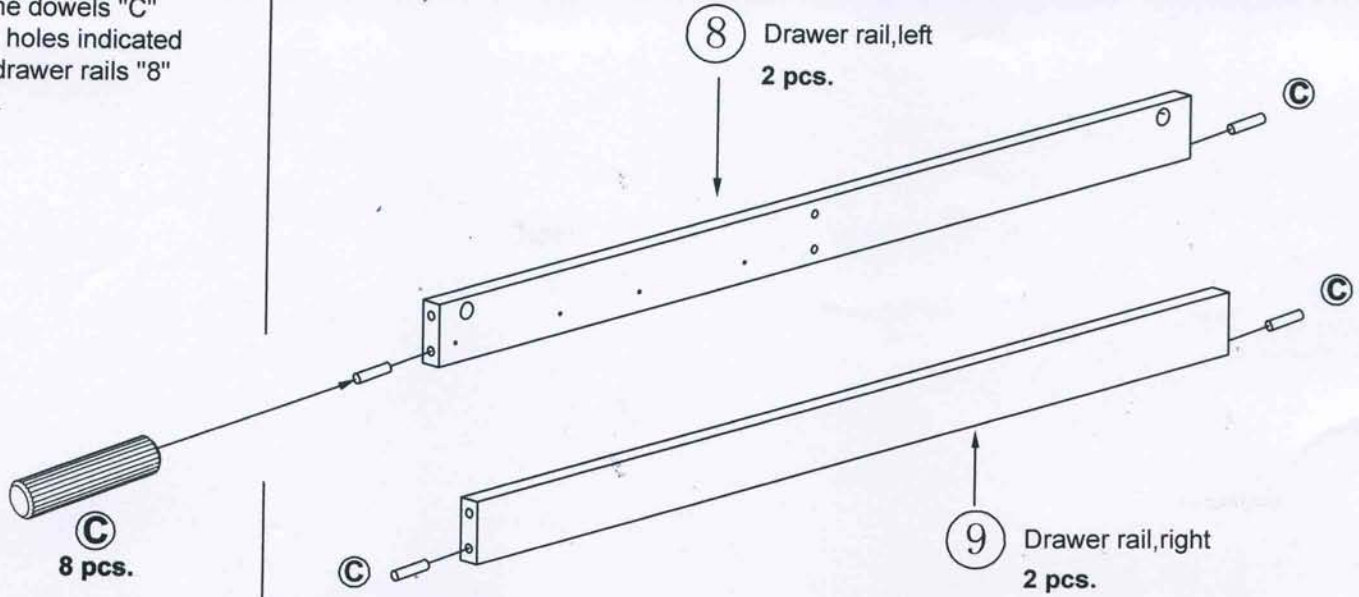


# 8.Mounting the drawer runners to the drawer rails.

Fix the drawer runners "O" and "P" to the drawer rails "8" and "9" into the predrilled holes.

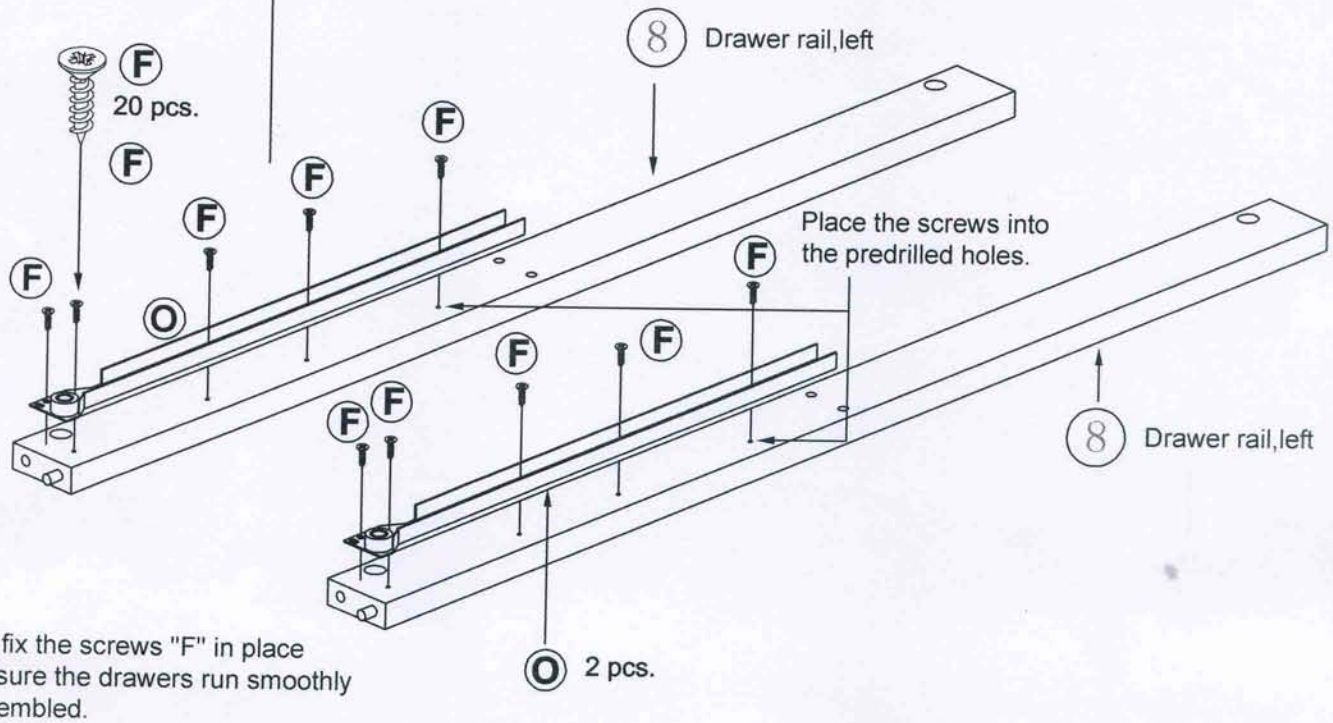



Note: To fix the screws "F" in place to make sure the drawers run smoothly after assembled.

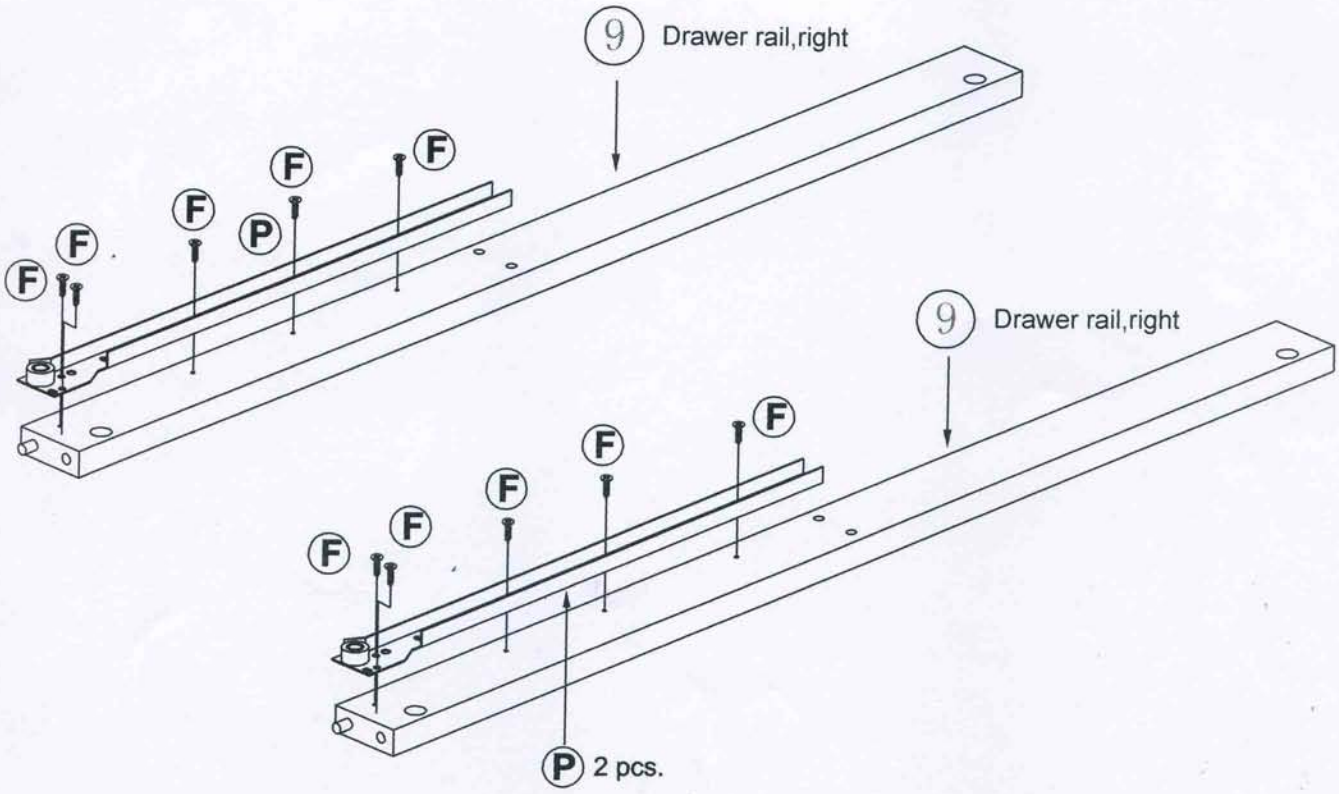

# 9.Assembling the drawer rails to the rails.

Fix the drawer rails "8" and "9" to the rails "10" using screws "K" and the allen key "L".

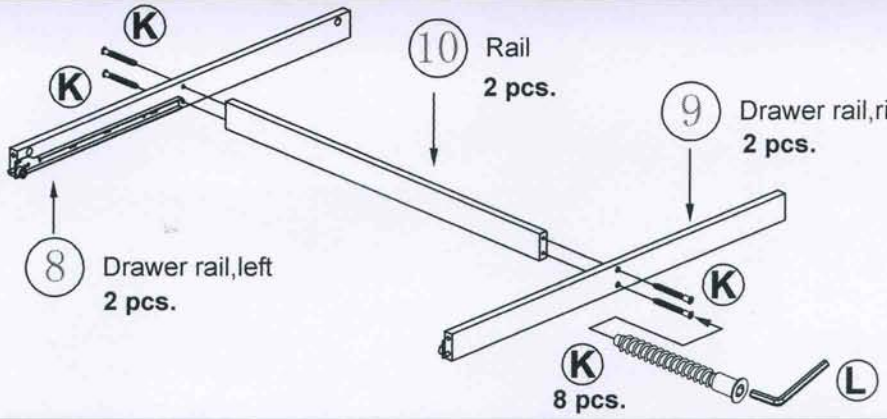


# 10.Mounting the right side to the drawer rails.

Press the drawer rails "8" onto the right side "5".

The drawer rails must be placed exactly as shown. See fig.10.1

Fix the drawer rails to the side using the cams "A".

Place the cams "A" into the holes indicated,arrows pointing towards the side/bolt.

Tighten:
Turn the cam "A" clockwise.

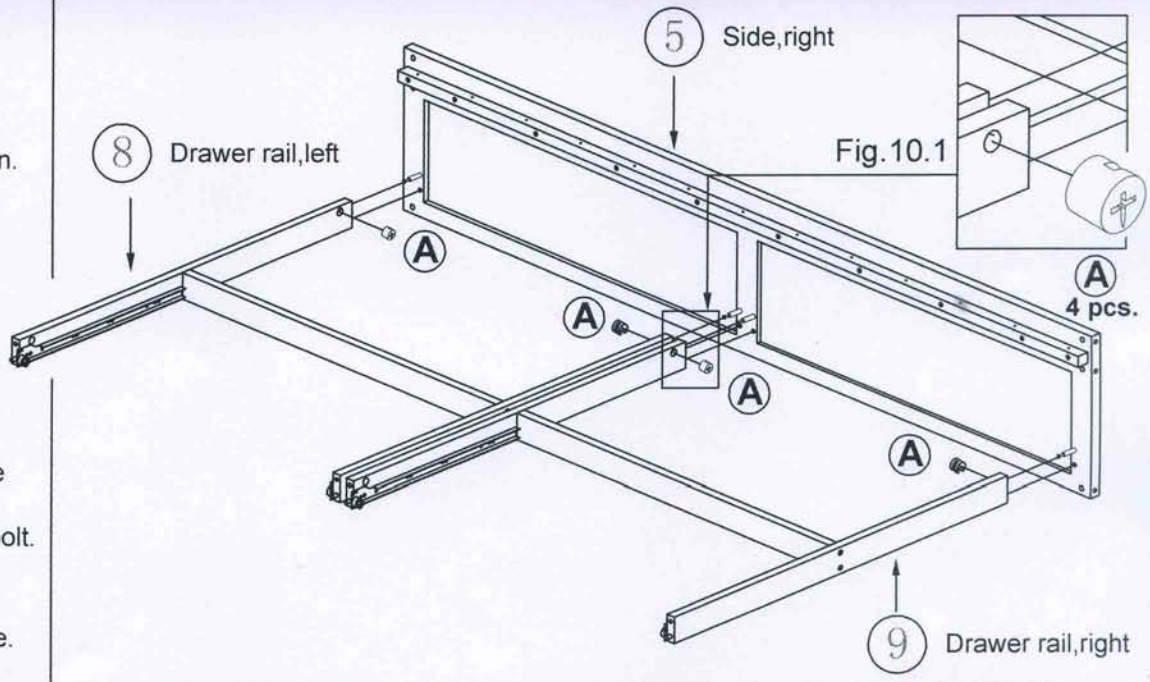



Fig.10.1

# 11.Mounting the left side to the drawer rails.

Press the left side "6" onto the drawer rails "8" and "9".

The drawer rails must be placed exactly as shown. See fig.11.1

Fix the side to the drawer rails using the cams "A" into the holes indicated.


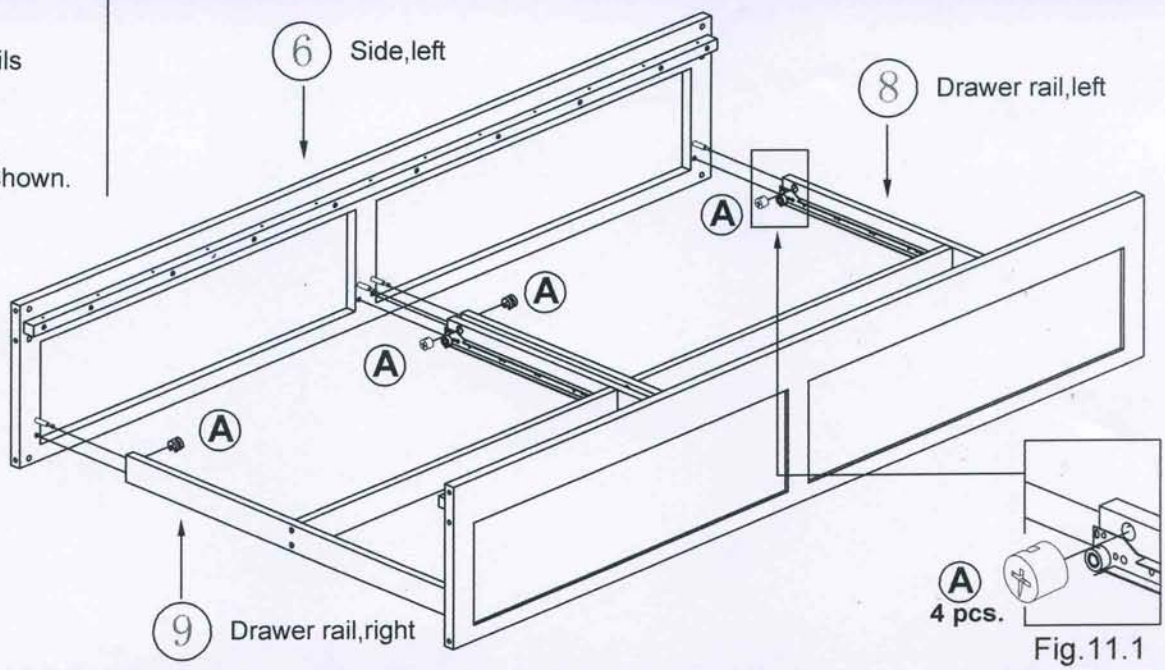



Fig.11.1

# 12.Mounting the footboard to the sides.

Press the footboard onto the side "5" and "6".

Fix it using the barrel nuts "J" and the bolts "H".

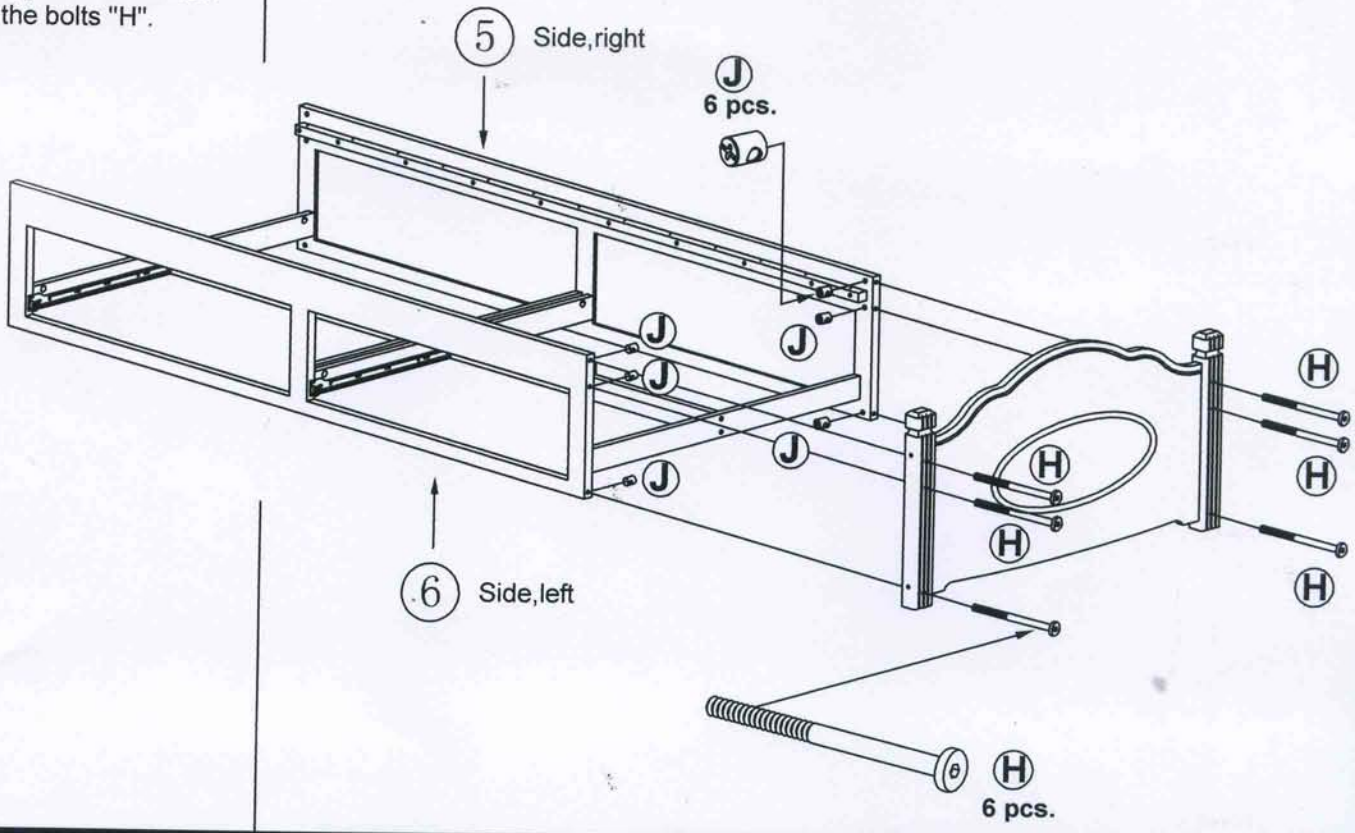



# 13.Mounting the headboard to the sides.

Press the headboard onto both of the sides "5" and "6".

Fix it using the barrel nuts "J" and the bolts "H".

Note:
The side of drawer can be decided by exchanging headboard and footboard.

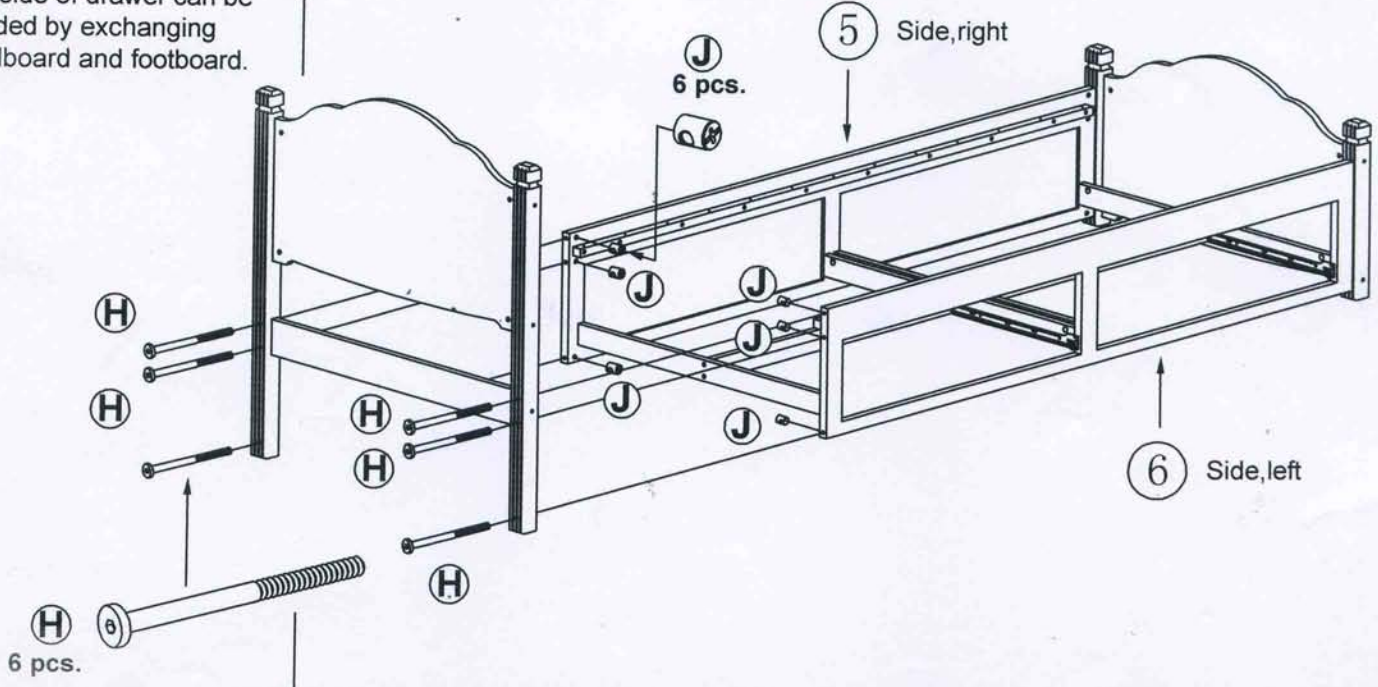

# 14.Fixing the slats to the slatholders.

Start spreading the slats evenly in the bed frame.

Fix the slats "7" to the slatholders on the sides using screws "G" into the predrilled holes.

See fig.14.1 for placement.


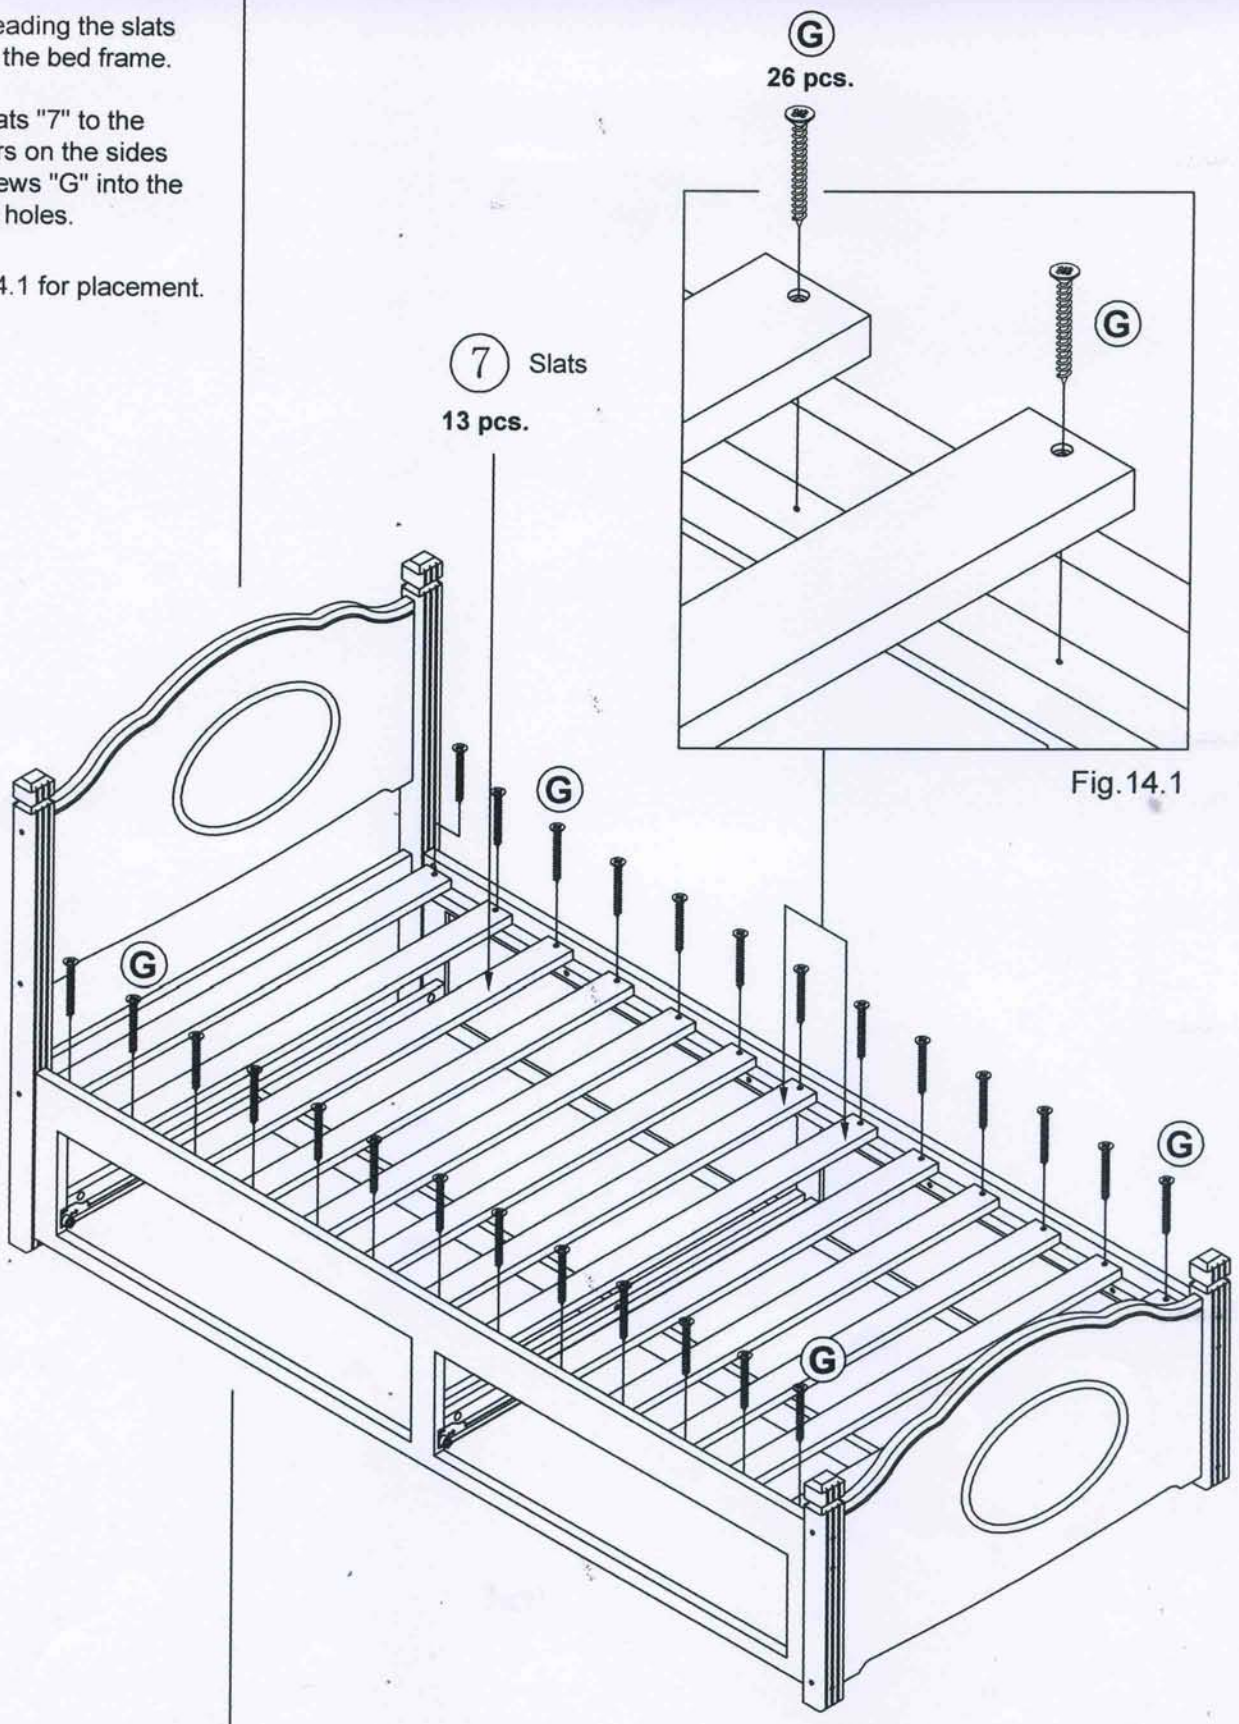



Fig.14.1

# 15.Mounting the bolts to the drawer fronts.

Screw the bolts "B" and "E" into the holes indicated on the drawer front "11".

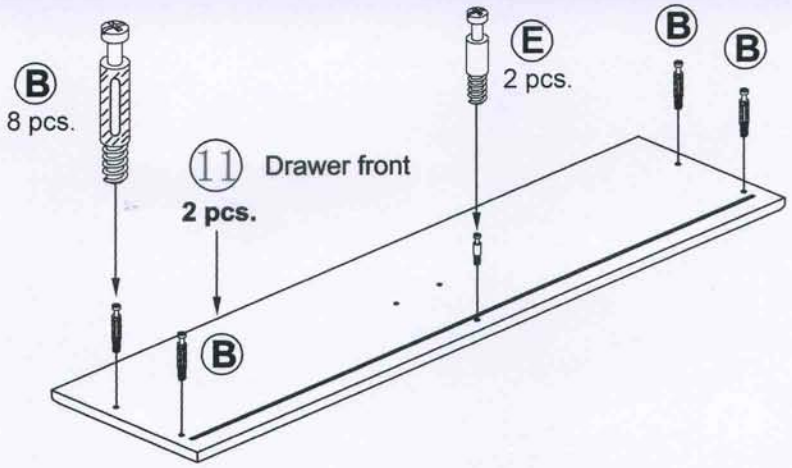



# 16.Mounting the drawer sides and rail to the drawer front.

Press the drawer sides "12" ,"13" and the drawer bottom rail "14" onto the drawer front "11".


Place the cams "A" and "D" into the holes indicated, arrows pointing towards the drawer front.

Tighten:
Turn the cam "A" clockwise.

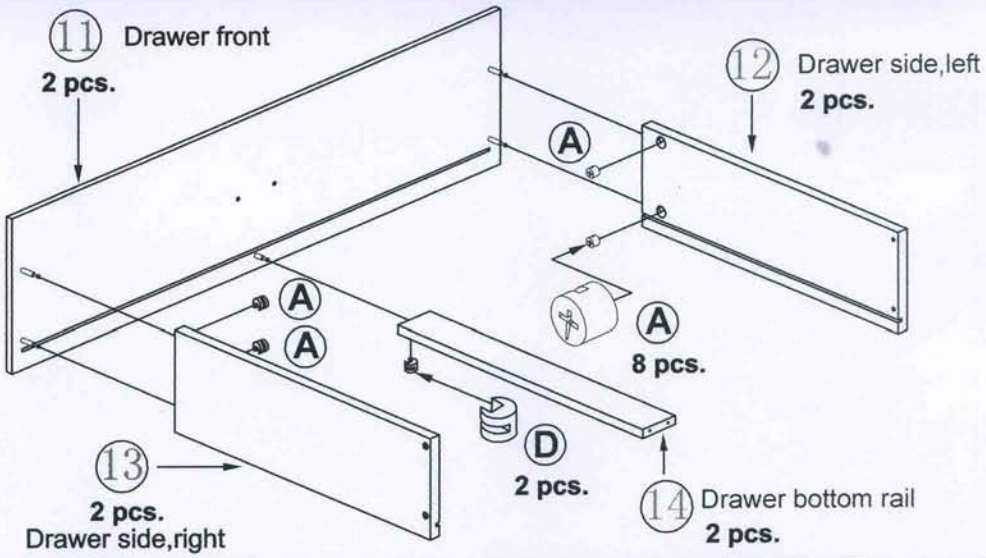


# 17.Sliding the drawer bottom into the drawer frame.


Slide the drawer bottom "16" into the grooves of the drawer frame.

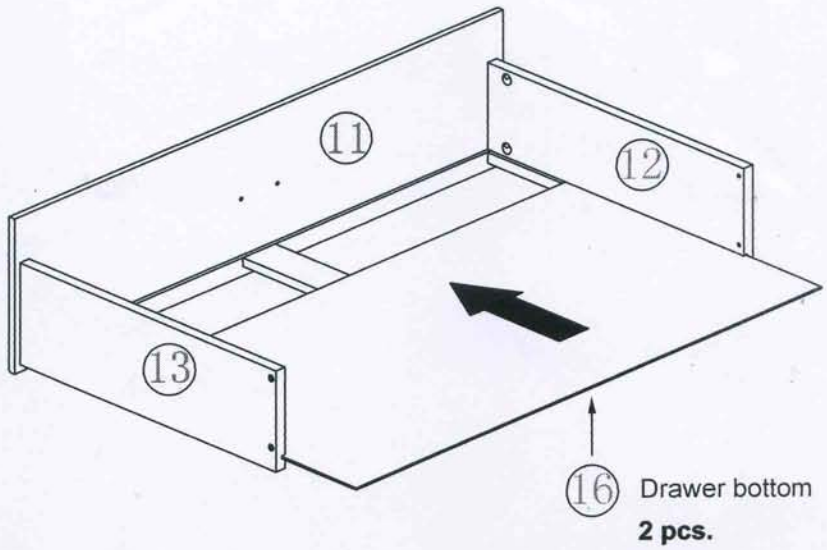

# 18.Mounting the drawer back to the drawer frame.


Place the drawer back "15" in between the drawer sides "12" and "13".

Fix the drawer back using screws "G" into the holes indicated.

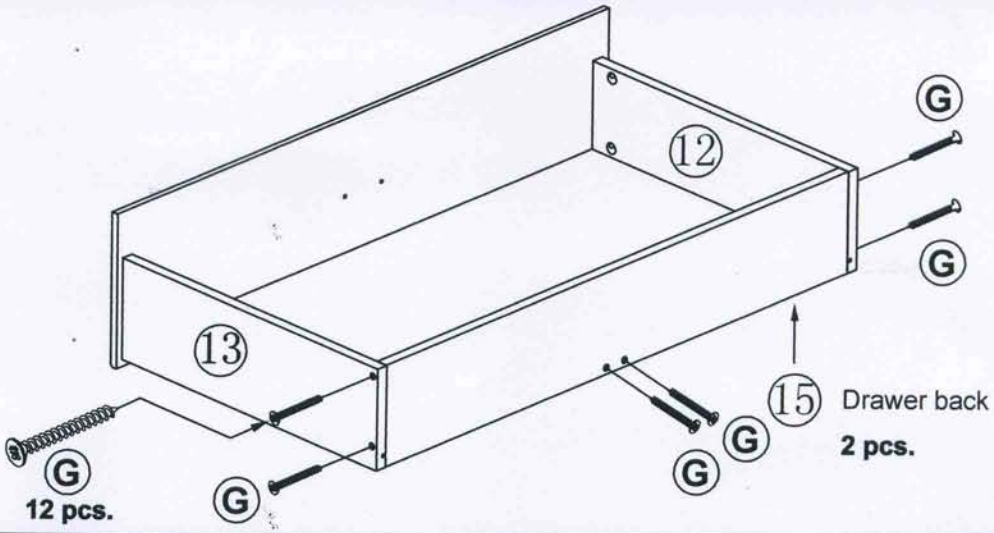


# 19.Mounting the handles to the drawer fronts.

Fix the handles "M" to the drawer fronts "11" using bolts "N".

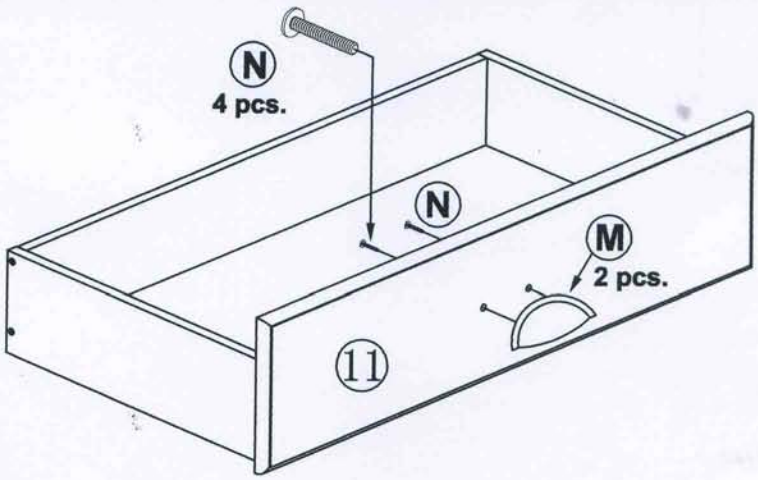



# 20.Mounting the drawer runners to the drawer sides.

Fix the drawer runners "Q" and "R" onto the lower edge of the drawer sides,using screws "F".


Push the drawer runners up against the backside of the drawer front "11".

Note the placement of the wheels.

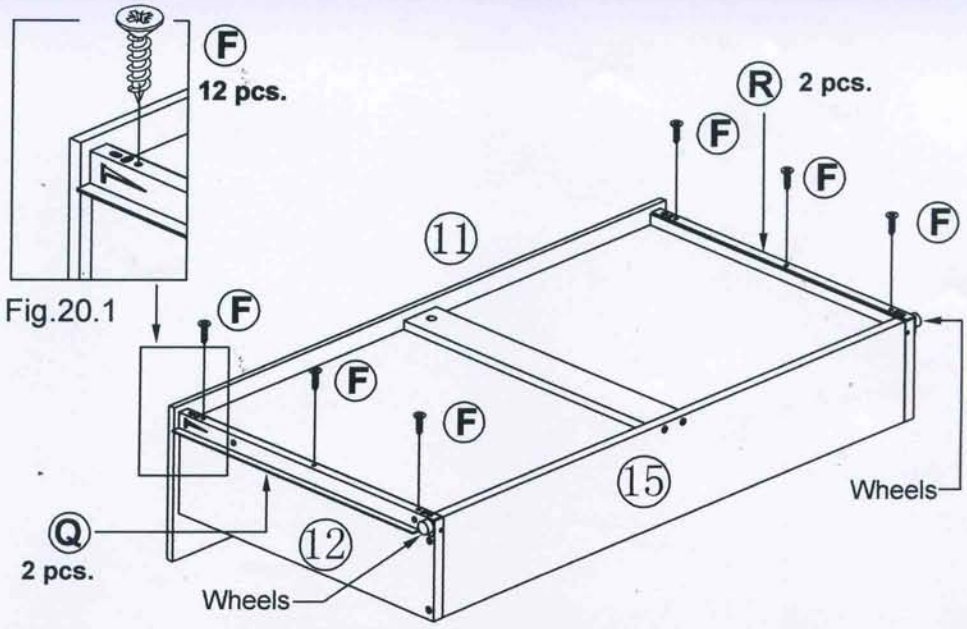

# 21.Adding the drawers to the bed.

Side the drawers into the bed frame.

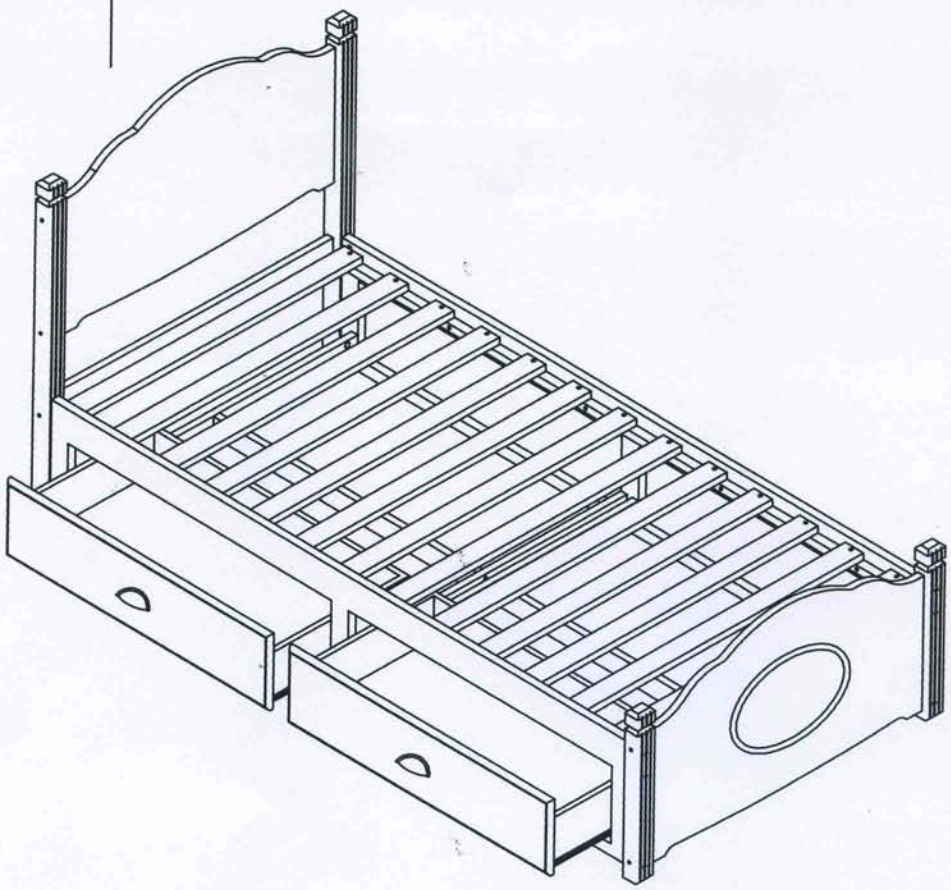

## Dear Customer.

Please note that the product you have purchased is a natural living timber.

Just like nature itself,wood varies in shape and colour.Knots,vein patterns,resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried,it is still alive and therefore will react to high and low temperatures,light,humidity,drought and time.

In cold and dry periods,the wood contracts which may lead to small cracks in the piece of furniture.The reverse happens in warm and hunid periods where the wood expands and this may result in slight unevenness.


The colour of the wood also changes with time,particulary if the furniture is placed in a light place,This is natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re -correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.Please keep these instructions in a safe place for future use.

# SHERINGTON - 3FT 2DRW FRAME

## Assembly Instructions - Please keep for future reference 658/2766

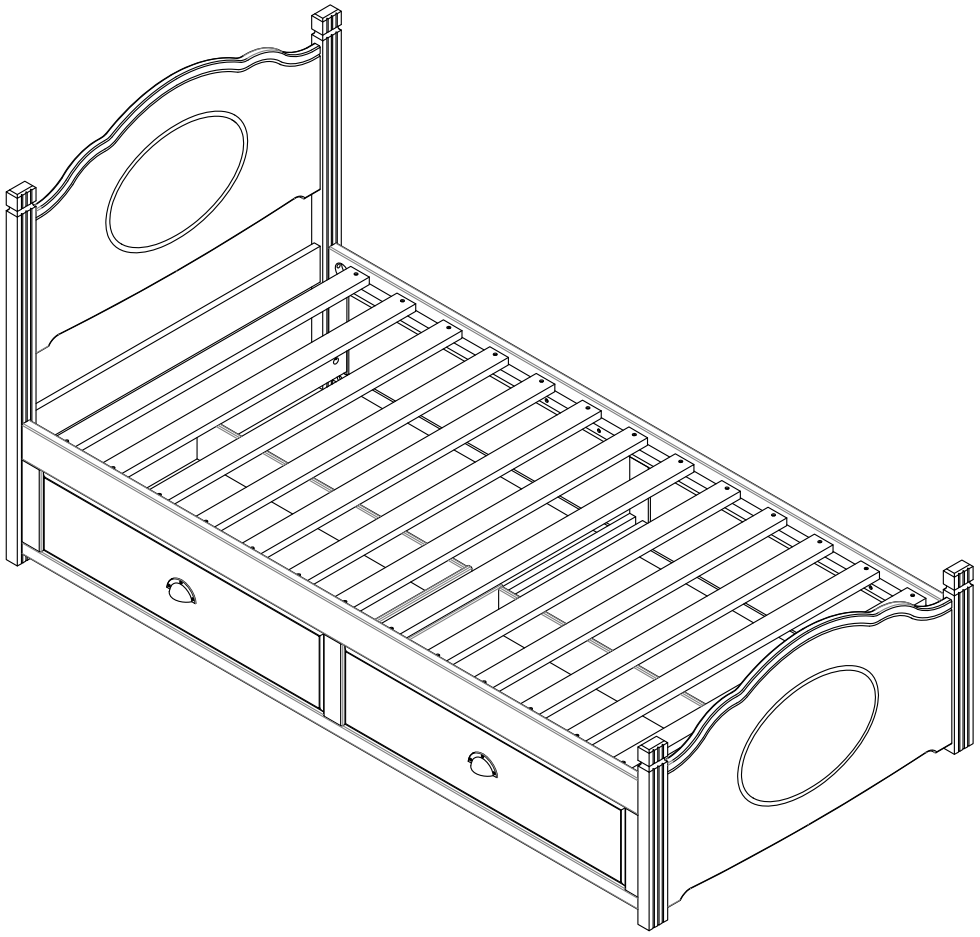

### Dimensions

Width - 196.8cm
Depth - 99.2cm
Height -104.3cm

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the **Customer Helpline:08456 400 800**

Issue 1 - 10/24/13

# Safety and Care Advice

## **Important -** Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

## **Glue safety -** Take care when using glue, please follow the advice below

**Skin contact:** Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

**Eye contact:** Rinse immediately with clean water for 15 minutes and seek medical advice.

**If swallowed:** Seek medical advice immediately.

## Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

***Note:*** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels 1

If you have damaged or missing componets, call the **Customer Helpline:08456 400 800**


## Please check you have all the panels listed below

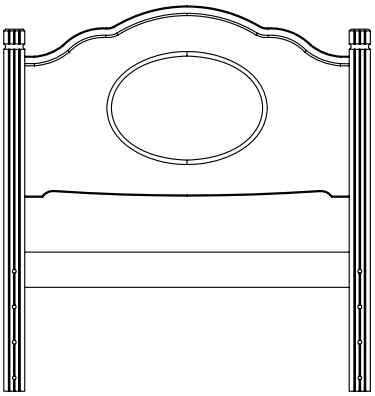


**1** Headboard (104.3 × 99.2cm)

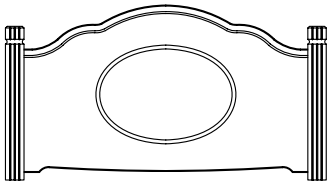


**2** Footboard (99.2 × 55.3cm)

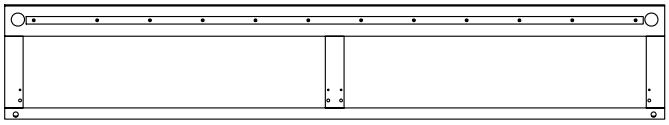


**3** Support,slatholder left (190 × 34.6cm)




**4** Drawer rail left ×2 (91.5 × 5.7cm)




**5** Drawer front ×2 (86.2 × 21.1cm)



**6** Drawer side left ×2 (45 × 14cm)




**7** Drawer side right ×2 (45 × 14cm)




**8** Drawer Back ×2
(81.7× 13.7cm)




**9** Drawer bottom ×2 (82.8× 44.9cm)




**10** Support rail ×2 (43.8× 5.7cm)



**11** Slat ×13 (91× 6cm)

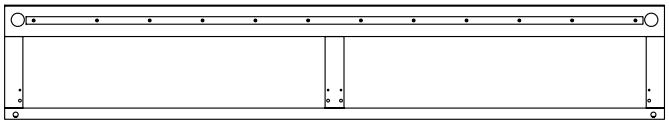

**12** Support,slatholder right (190 × 34.6cm)

















**13** Drawer rail right ×2 (91.5 × 5.7cm)


# Components - Fittings


## Please check you have all tlohe fittings listed below

***Note:*** The quantities below are the correct amount to complete the assembiy. In some cases more fittings may be supplied than are required.
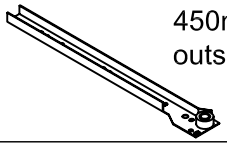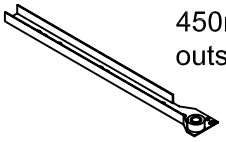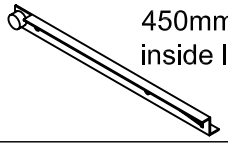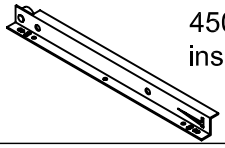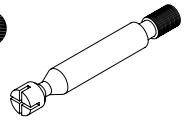
| | | |
|---|---|---|
| **A**  Large locking pin × 8 | **B** Large locking nut × 8  | **C**  Large Wooden dowel × 8 |
| **D**  Φ3.5 × 15mm Screw for Runner × 32 | **E**  Ø3.5×25mm Screw × 12 | **F**  Ø3.5×30mm Screw × 26 |
| **G**  450mm Runner outside left × 2 | **H**  450mm Runner outside right × 2 | **I**  450mm Runner inside left × 2 |
| **J**  450mm Runner inside right × 2 | **K**  Small Wooden dowel × 8 | **L**  Small locking pin × 10 |
| **M**  Small locking nut × 10 | **N**  Spanner × 1 | **O**  Handle × 2 |
| **P**  Screw for handle × 4 | **Q**  Large Locking Pin × 4 | **R**  Locking nuts × 4 |
| **S**  Locking nuts × 4 | **T**  Cap × 4 | **U**  Bolt × 4 |
| **V**  Connector × 4 | **W**  Connector × 4 | |


## Tools required


Phillips screwdriver (medium & large)


Flatblade screwdriver (medium)


Small hammer

## **Ruler** - Use this ruler to help correctly identify the screws



# Assembly Instructions


## Step 1

⚠ Entire assembly will be easier with 2 people.

a:Screw 2 Locking Pins Q & 2 Bolts U into the Headboard 1 .

Repeat above steps to the Footboard 2.


a:

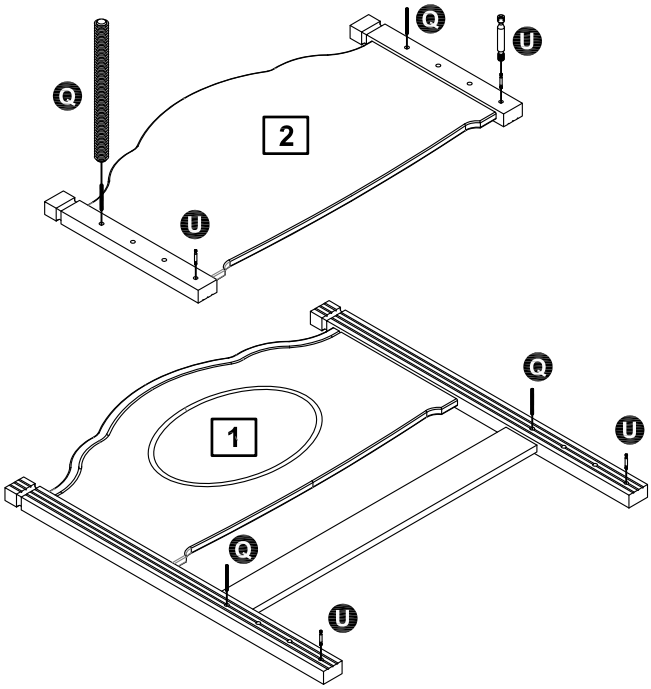


b:Insert 4 Wooden dowels C and 4 Large Locking Pins A into the Support,Slatholder 3 .

Repeat above steps with another Support Slatholder 12.


b:

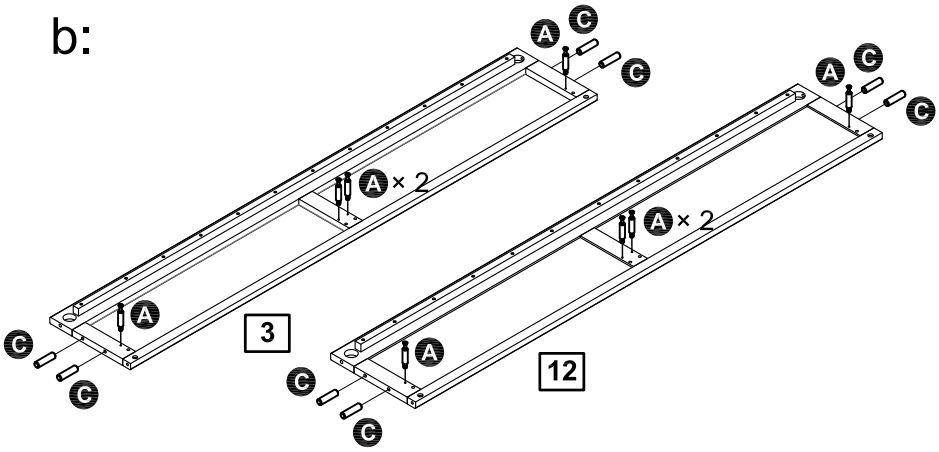


c:Insert 2 Wooden dowels K into the Drawer rail 4 .

Repeat above steps with the other 3 Drawer rails 4 and 13 .

C:

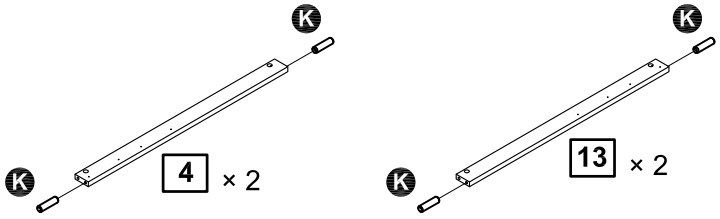


# Assembly Instructions

## Step 2

Fix the Runners G and H onto the Drawer rail 4 and 13 using the Screws D into the pre-drilled holes.

Repeat the above steps to the other 3 Drawer rails 4 and 13.

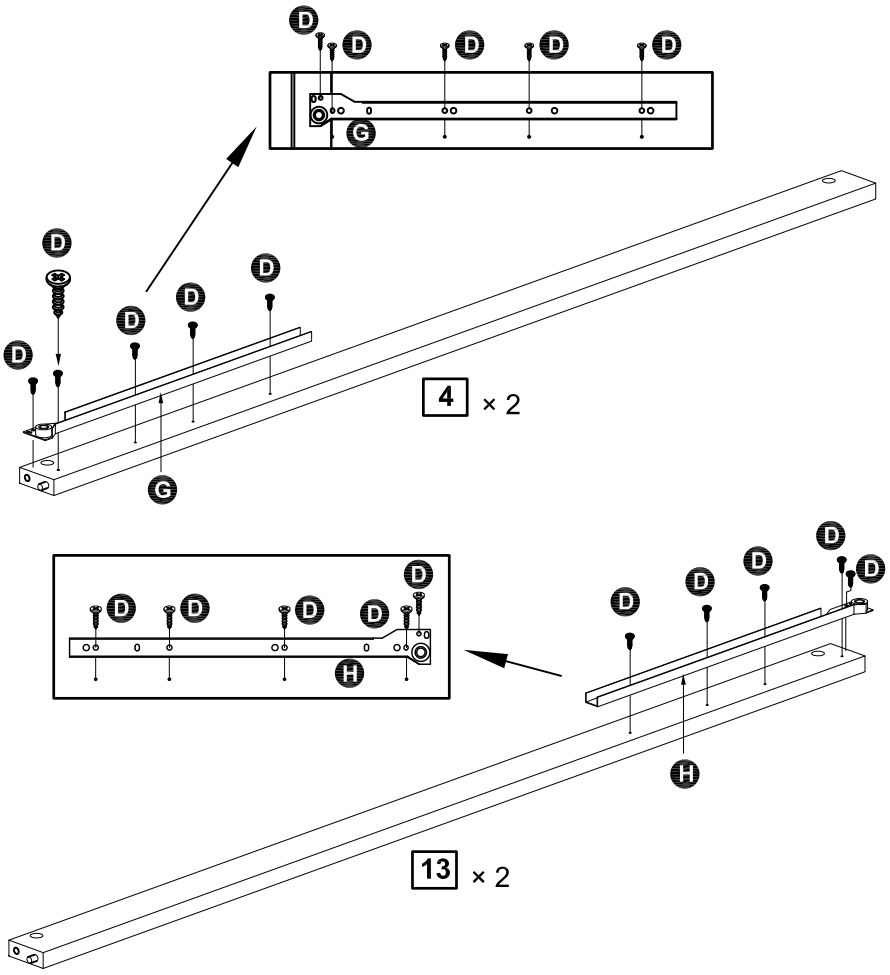



## Step 3


Press the Drawer rails 4 and 13 onto the Support Slatholder 3.

Fix the Drawer rails to the Support Saltholder using the Locking nuts B and screwdriver.

Note:
Place the Locking nuts B into the holes indicated,arrows pointing towards the Support Slatholder,see picture 1,2.

Tighten:
Turn the Locking nuts clockwise,see picture 3.

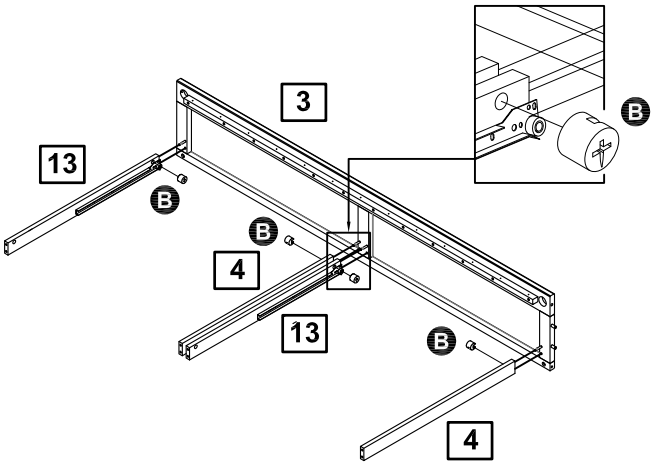

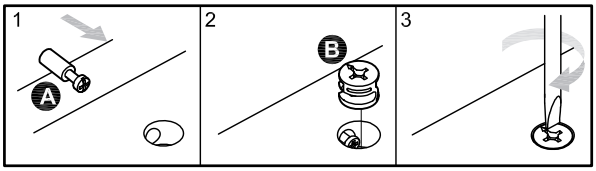
# Assembly Instructions

## Step 4


Repeat the above steps to another Support Slatholder 12 .

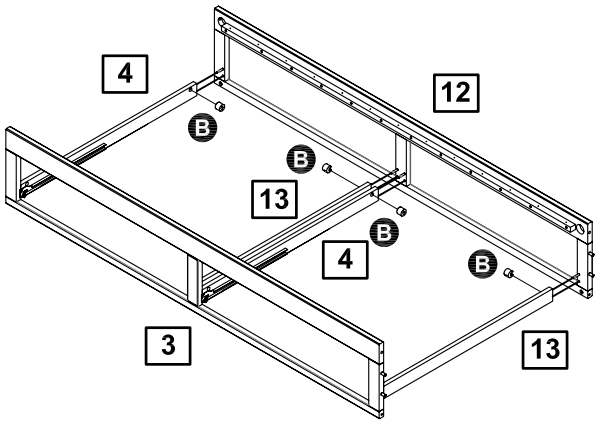


## Step 5


Press the Headboard 1 onto the Support Slatholder 3 and 12 .

Fix the headboard using the Connector W and V and screwdriver, also using the Locking nuts R and S and spanner N , cover the cap T .

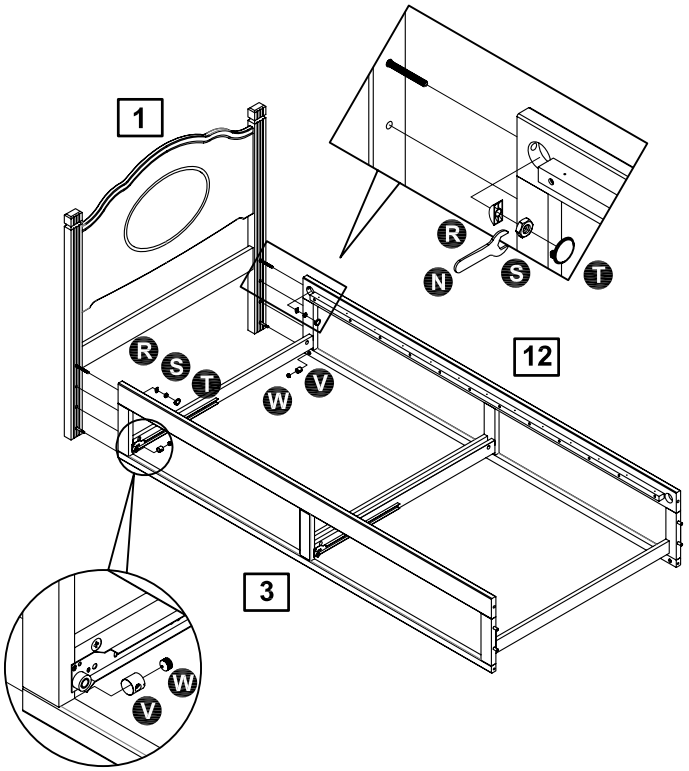

## Step 6


Repeat the above steps to the Footboard 2.

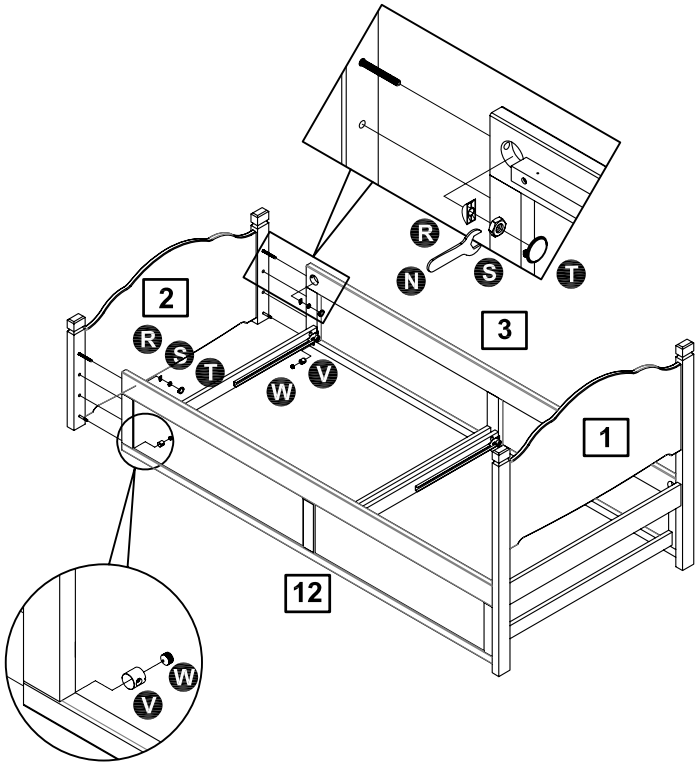


## Step 7

Start spreading the slats 11 evenly in the bed frame.

Fix the Slats 11 to the slatholder side using screw F into the pre-drilled holes.

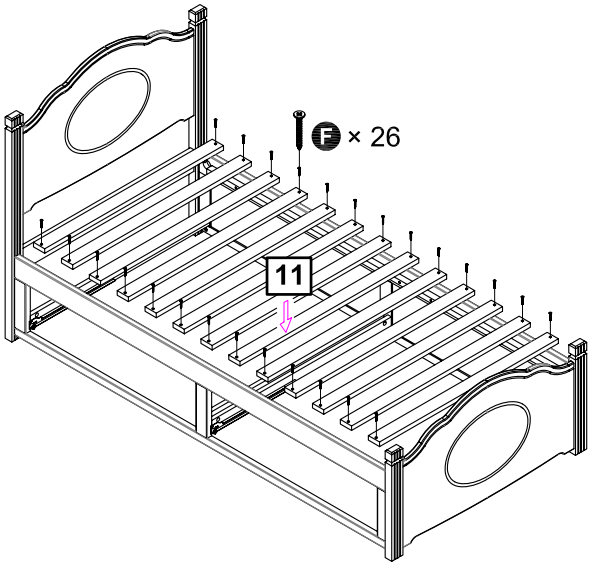


# Assembly Instructions


## Step 8

Screw 5 Locking pins L into the holes indicated on the Drawer front 5 .

Press the Drawer side 6 and 7 the drawer bottom rail 10 onto the drawer front 5 .

Fix it with the Locking nuts M and screwdriver.

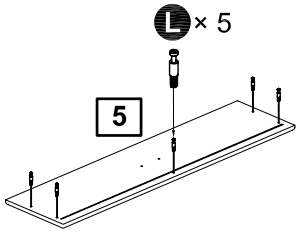

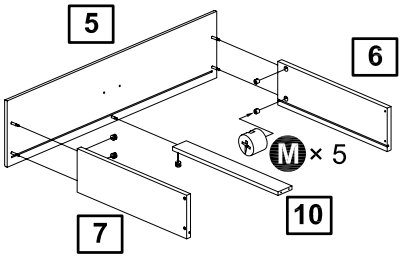

## Step 9


Slide the drawer bottom 9 into the grooves of the drawer frame.


Place the drawer back 8 between the Drawer side 6 and 7 ,fix it using Screw E and screwdriver.


Fix the drawer runners I and J onto the lower edge of the drawer sides using Screw D .

Note the placement of the wheels.

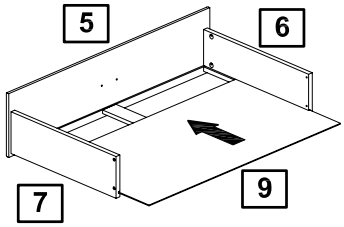

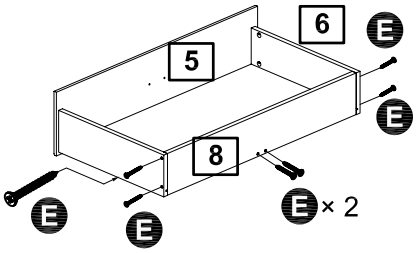


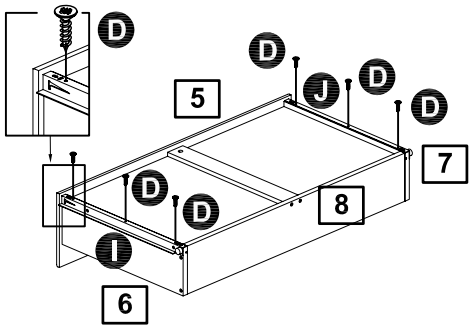

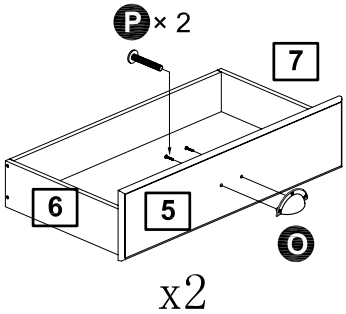x2

## Step 10

Slide the drawers into the bed frame.

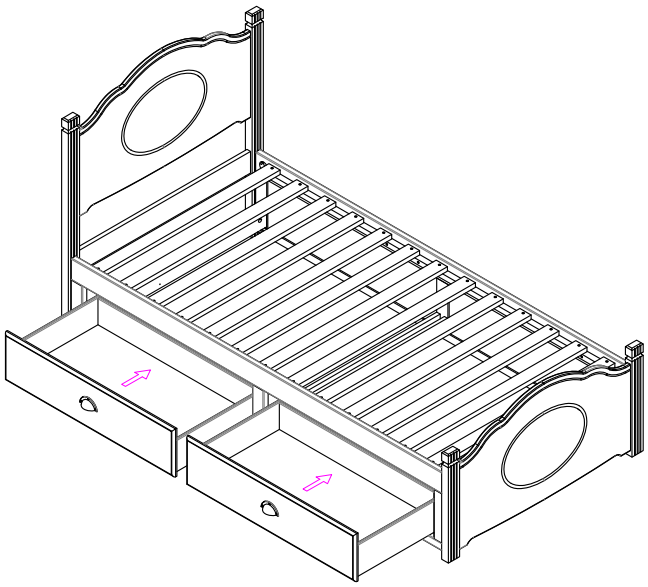

If you need help or have damaged or missing parts,call the **Customer Helpline:08456 400 800**