
Ultimate Storage Bed

Assembly Instructions - Please keep for future reference

656-8821

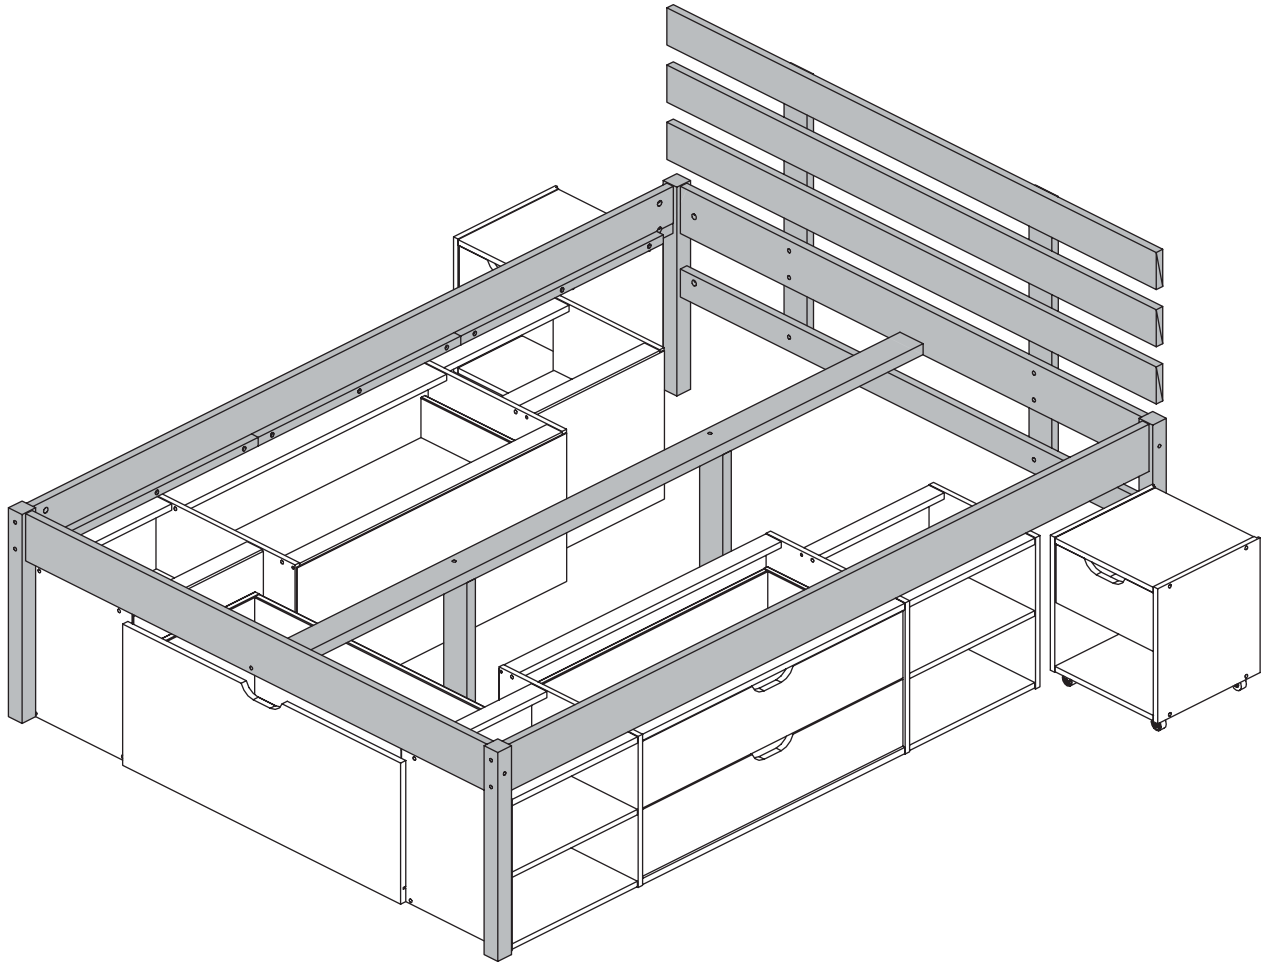

Dimensions

Width - 143,5cm
Depth - 196cm
Height - 91,5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 27/04/10

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

· Check you have all the components and tools listed on pages 2 and 3.

· Remove all fittings from the plastic bags and separate them into their groups.

· Keep children and animals away from the work area, small parts could choke if swallowed.

· Make sure you have enough space to layout the parts before starting.

· Assemble on a soft level surface to avoid damaging the unit or your floor.

· This product contain Natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

· Do not stand or put weight on the product, this could cause damage.

· Assemble the item as close to its final position (in the same room) as possible.



· We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

· Parts of the assembly will be easier with 2 people.

· Dispose of all packaging carefully and responsibly.

care and maintenance

· Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

· Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


· From time to time check that there are no loose screws on this unit.

· This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below



1 Headboard support X2 (66,2 x 6,5cm)




2 Headboard bar X3 (143,5 x 9cm)




3 Headboard rail (135,5 x 11,3cm)




4 Small bar (135,5 x 6,5cm)




5 Side rail X2 (188 x 11,3cm)




6 Footboard rail (135,5 x 11,3cm)




7 Headboard right leg (50 x 4cm)



8 Headboard left leg (50 x 4cm)




9 Footboard right leg (50 x 4cm)



10 Footboard left leg (50 x 4cm)



11 Slat support (190 x 6,5cm)







12 Support legs 2X (39,2 x 6,5cm)

Components - Fittings


If you have damaged or missing components, call the Customer Helpline: 08456 400 800

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  1/4 x 80mm Bolt X 14	B  1/4 x 40mm Bolt X 6	C  7 x 60mm Bolt X 4
D  4,0 x 35mm Screw X 24	E  10 x 40mm wooden dowel X 18	F  8 x 20mm Small wooden dowel X 6
G  Half moon nut X 14	H Washer X 6 	I  Allen Key X 1


Tools required




Phillips screwdriver

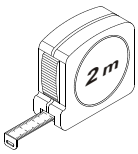

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1


Insert wooden dowels Ⓔ into the parts shown.

Important: Make sure to insert dowels where indicated.

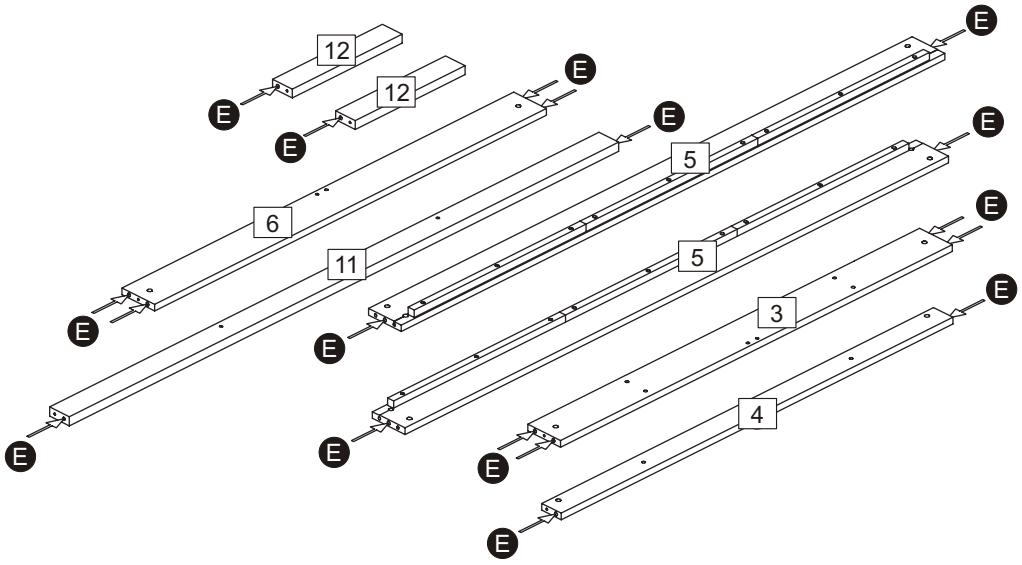


Step 2

Insert washers Ⓗ to parts 01 as shown use a hammer to fully insert them. Make sure to insert washers on the side of parts 01 where there are only 6 holes.

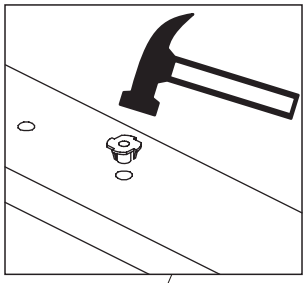

Turn part 01 the other way round and insert wooden dowels Ⓕ to parts 01.

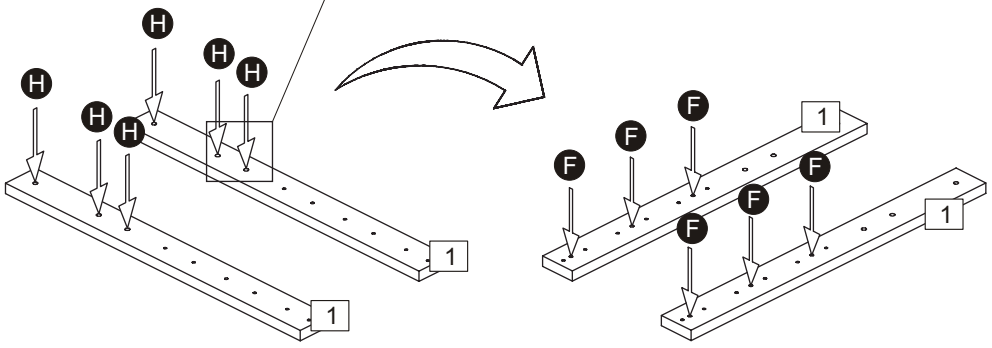


Assembly Instructions

Step 3


Fix parts 03 and 04 to parts 01 using bolts B and allen key I.

Important. Parts must be positioned as shown.

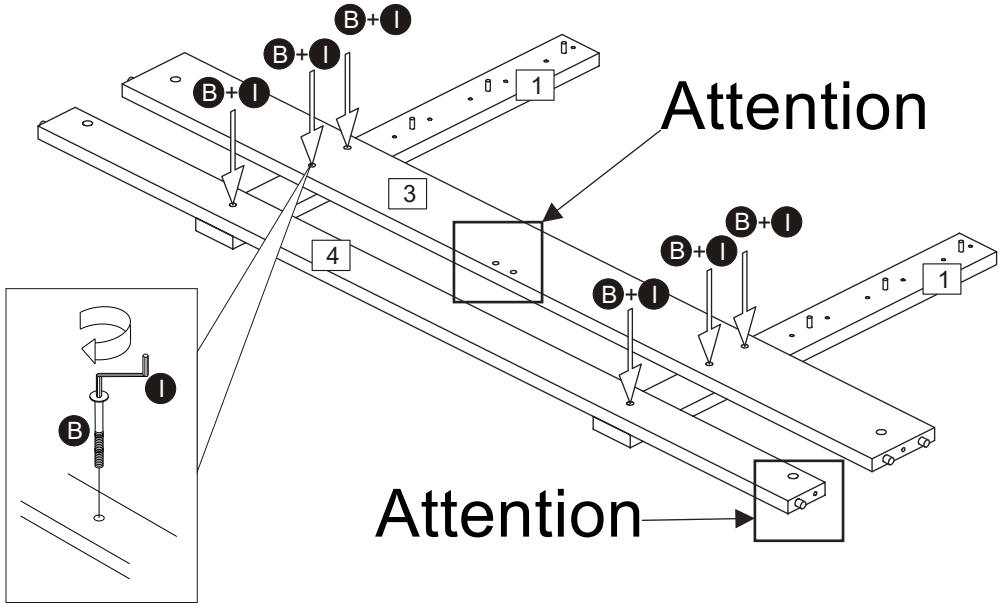

Step 4

Fix parts 02 to the previously assembled part using screws D.

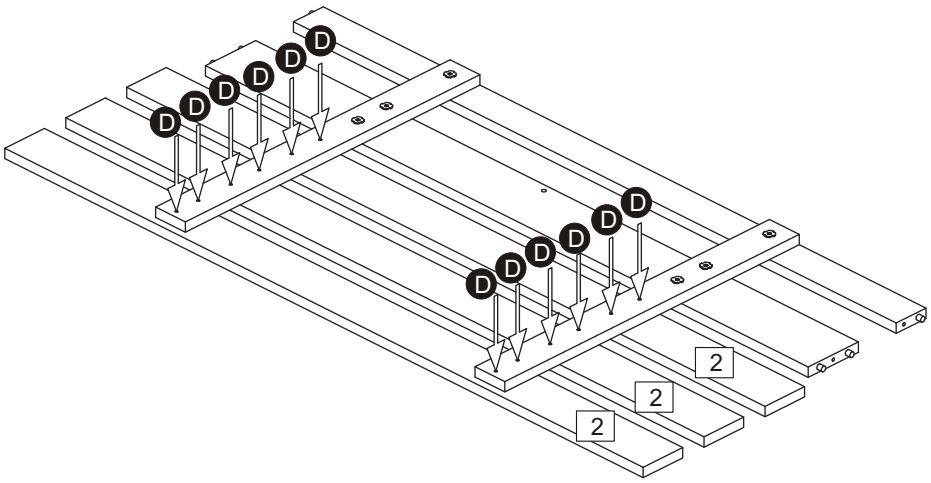


Step 5

Insert half moon nut G where indicated.

Turning the assembled part down, fix legs 07 and 08 using bolts A and allen key I.

Insert half moon nut G where indicated.


Fix legs 09 and 10 to footboard rail 06 using bolts A and allen key I.

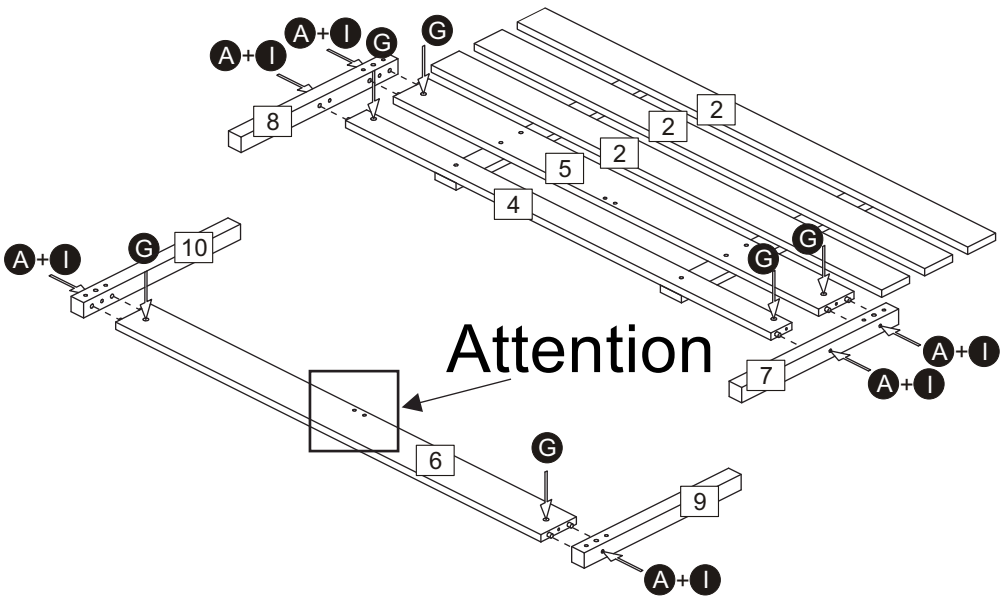

Assembly Instructions

Step 6


Fix slat support 11 to support legs 12 using bolts C and allen key I .

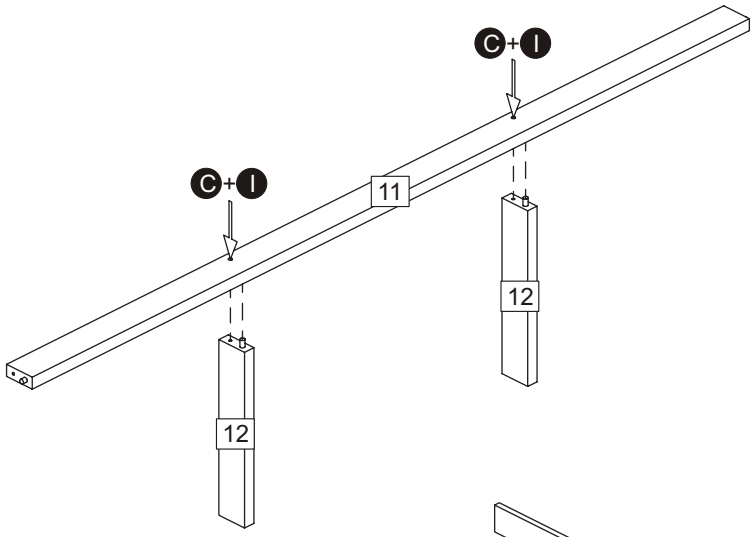

Step 7

Attach side rails 05 and slat support 11 to the headboard and footboard

Fix the parts, first inserting half moon nut G where indicated, then screw bolts A and C using allen key I as shown.

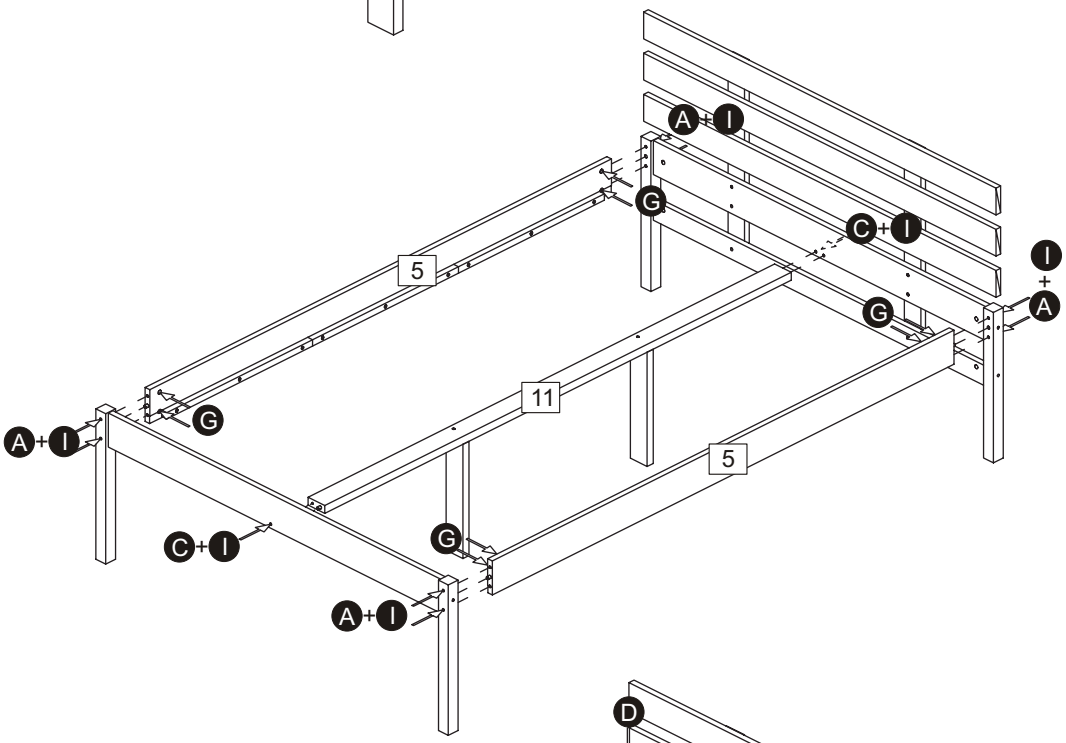

Step 8

Fix the slats to the bed using screw D .

Centralize slats in bed frame prior to fixing.
Periodically check that all screws are tight

Assemble is complete!

