



4'6 BED

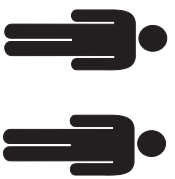

**Before you start
here in some
helpful advise**

**Assembly time:
30 minutes**

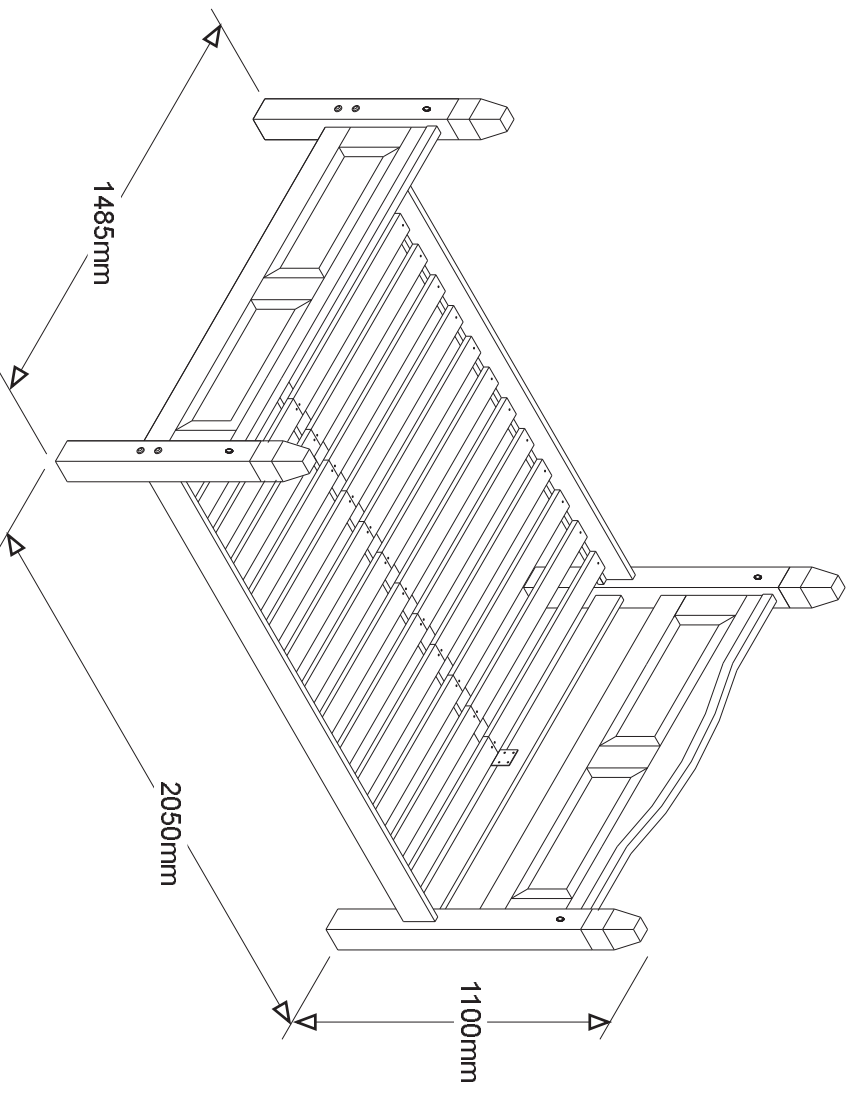

Please spend a short time reading through this leaflet and follow the step-by-step assembly instructions provided.


Customer Advisory Information

- This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.
- The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture. On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.
- This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly
- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age
- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product











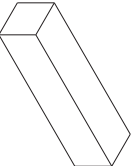
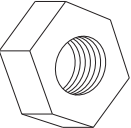

Assembly Advice

Before commencing assembly, we recommend that you familiarise yourself with the component parts and the instructions. We suggest that you lay out the components and check these against the parts list supplied.

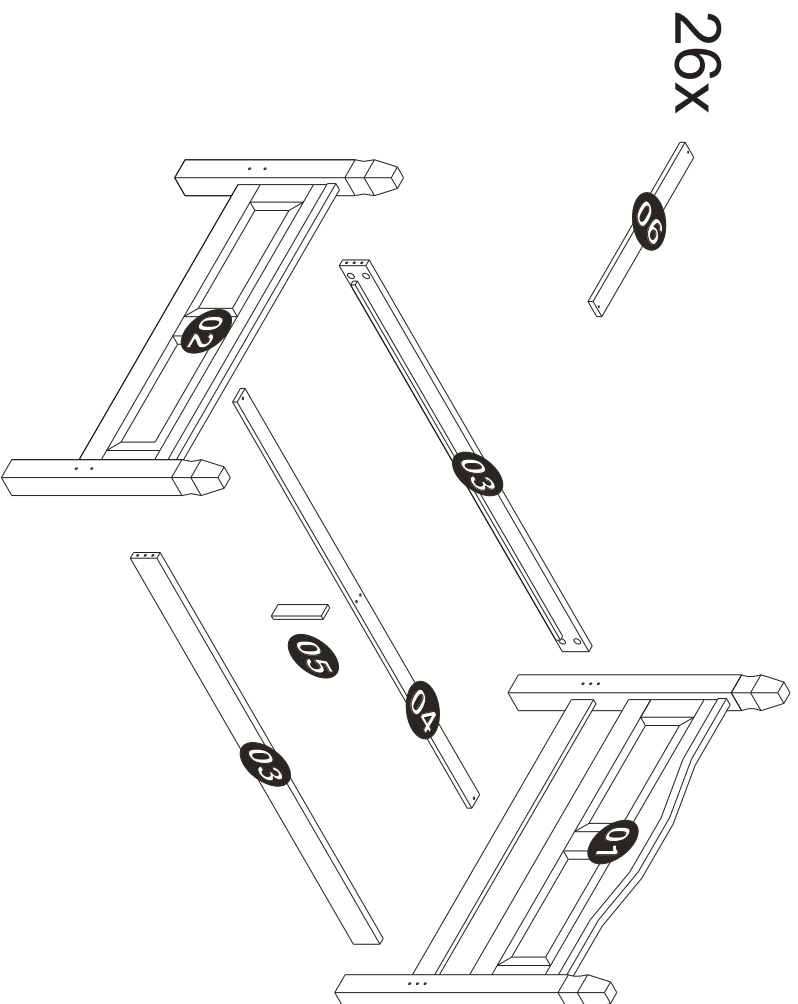
- Please retain packaging materials until assembly is complete; then dispose of packaging materials carefully
- We recommend that you assemble the product on a soft/carpeted surface to prevent any damage to panels during assembly
- Ensure that all fixings are tight and check these periodically for tightness
- **Note: small parts pose a potential safety hazard; ensure that these are securely attached and kept out of reach of children**









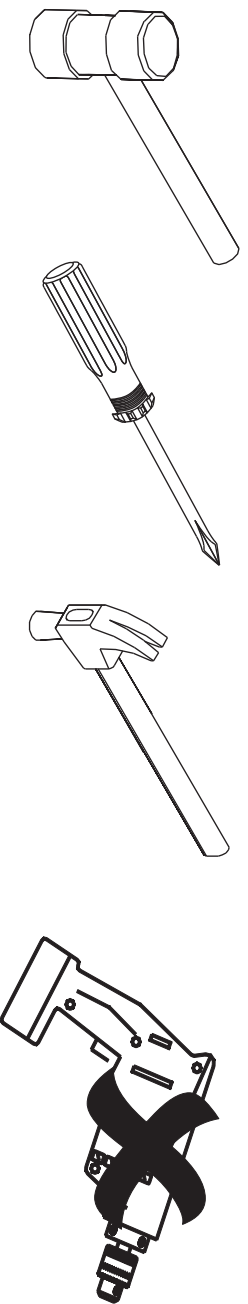


COMPONENT PARTS




A	 X 4 10x40 mm	B	 X 52 3.5x35 mm	C	 X 8 4.0x16 mm
D	 X 2	E	 X 8	F	 X 4
G	 X 1	H	 X 8	J	 X 2 5.0x40 mm
K	 X 2	L	 X 2	M	 X 2
N	 X 8 ø1/4 x 130mm				

TOOLS NEEDED








STEP 1


A  10x40 mm	X 4	D 	X 2	C  3.5x14 mm	X 8
E 	X 8	G 	X 1	J  5.0x40 mm	X 2
K 	X 2	M 	X 2	N  ø1/4 x 130mm	X 8

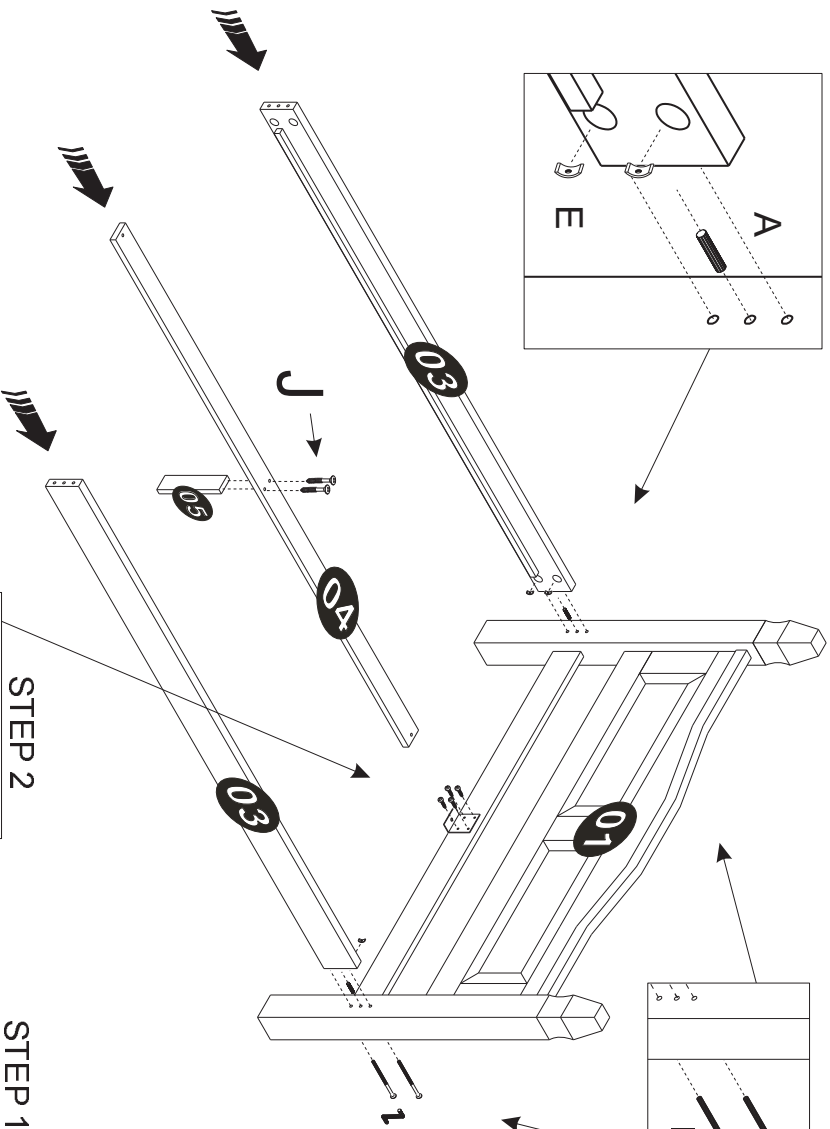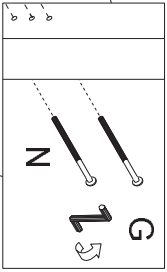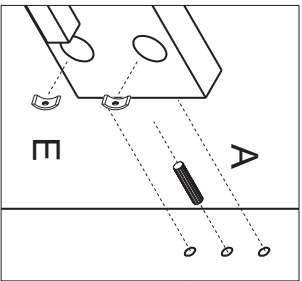

STEP 2

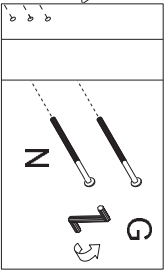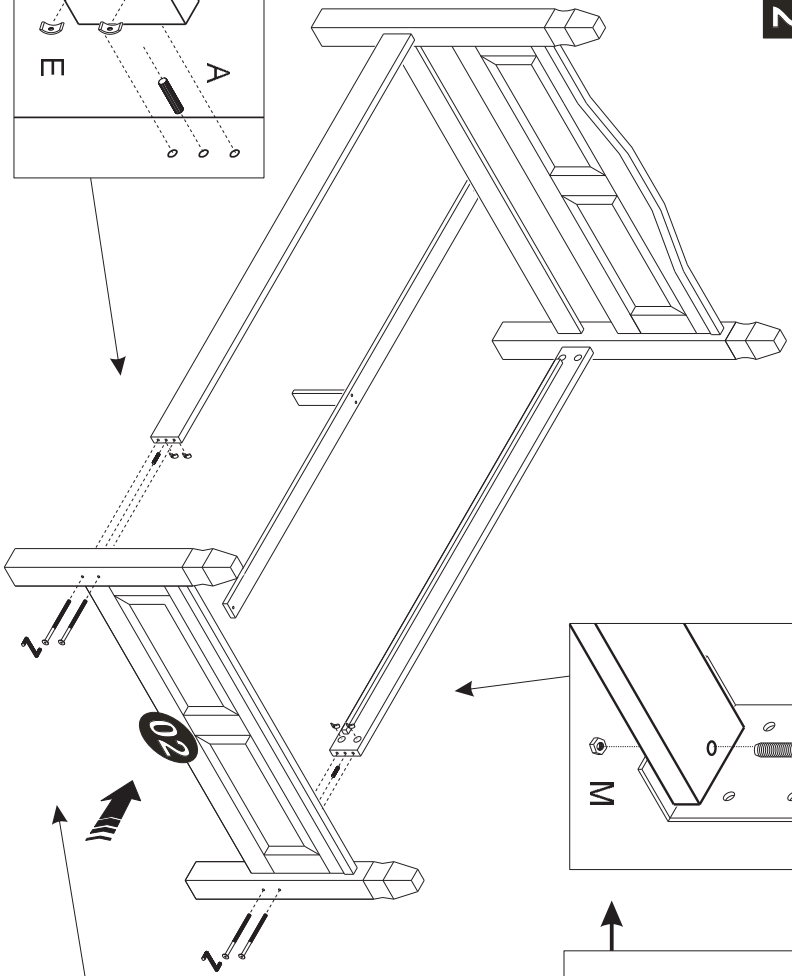
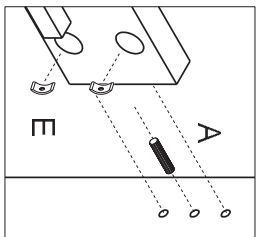
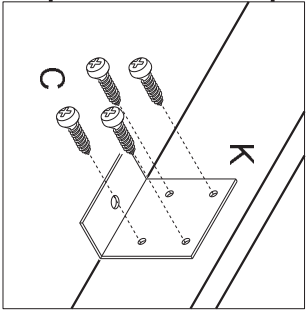
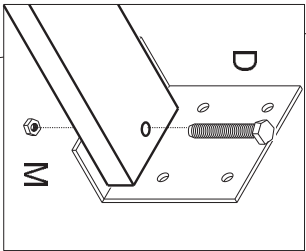


STEP 3

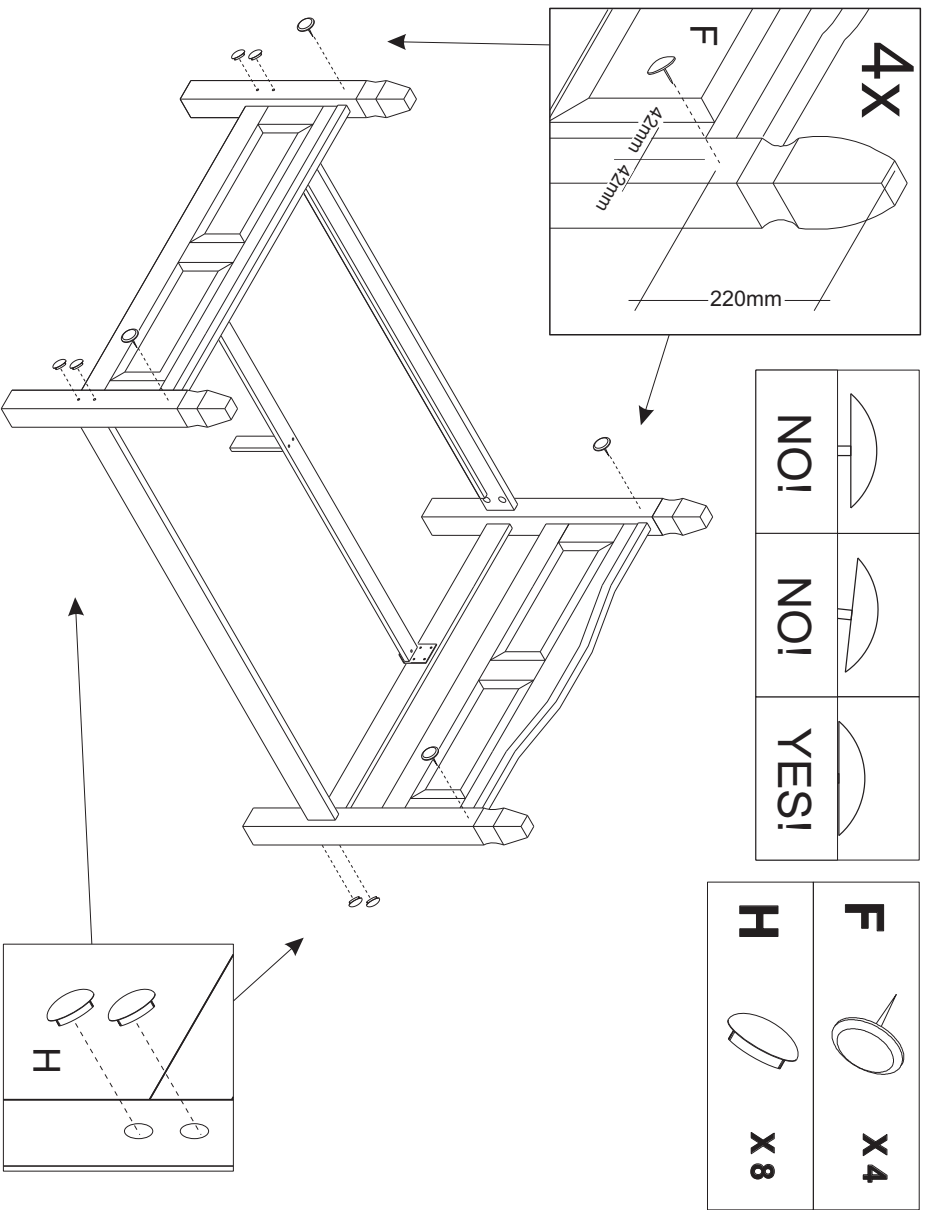

STEP 4

Please fix the first slat adjacent to the headboard and footboard work towards the middle of the bed using the spacer (L) as shown to ensure correct spacing. Fix all the slats to one siderail first, then push the second siderail tight against the slats and fix. Please, retain the allen key (B) and use periodically to check that all bolts are tight.

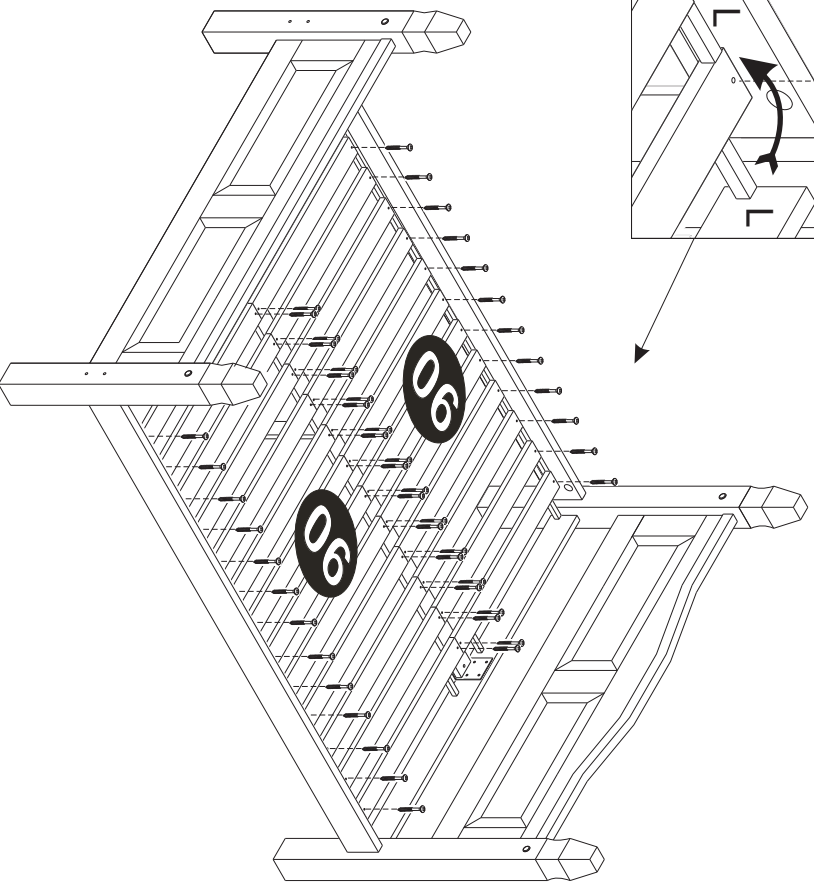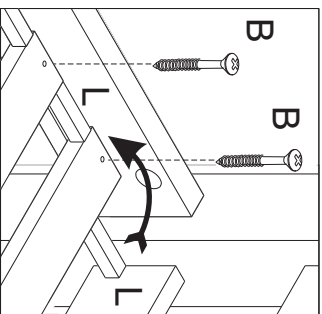


Puerto Rico - Double Bed

Assembly Instructions - Please keep for future reference

658/3129

658/3136

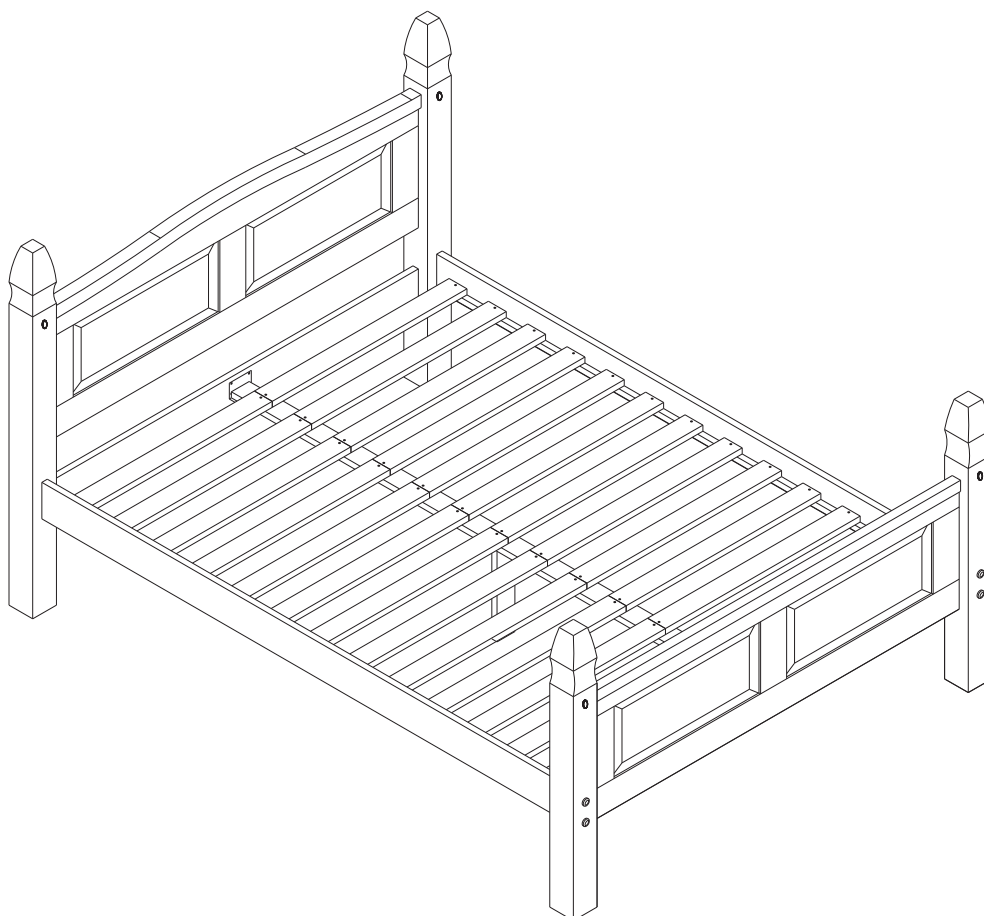

Dimensions

Width - 148.5cm

Depth - 205cm

Height - 110cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**



Safety and Care Advice

Important Please read these instructions fully before starting assembly


- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

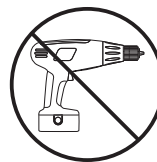

• We do not recommend the use of power drill/drivers **for inserting screws**,

as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.
- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below

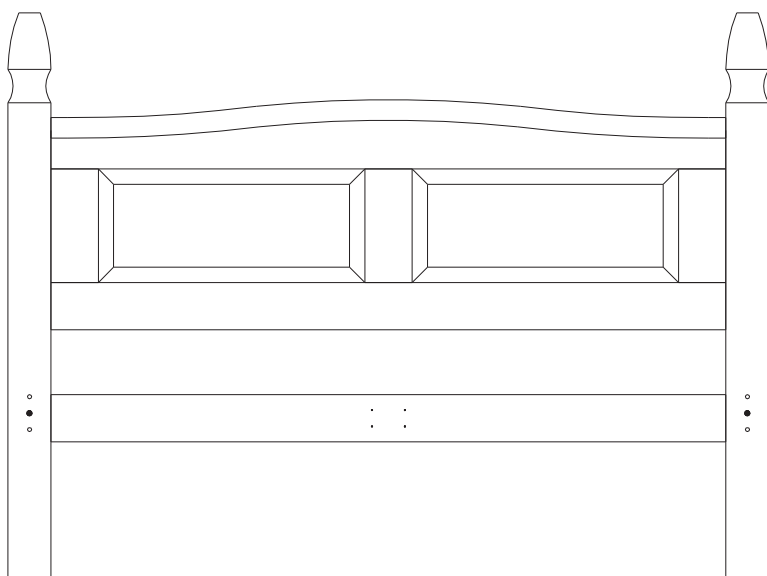

1 Headboard (110 x 148.5cm)

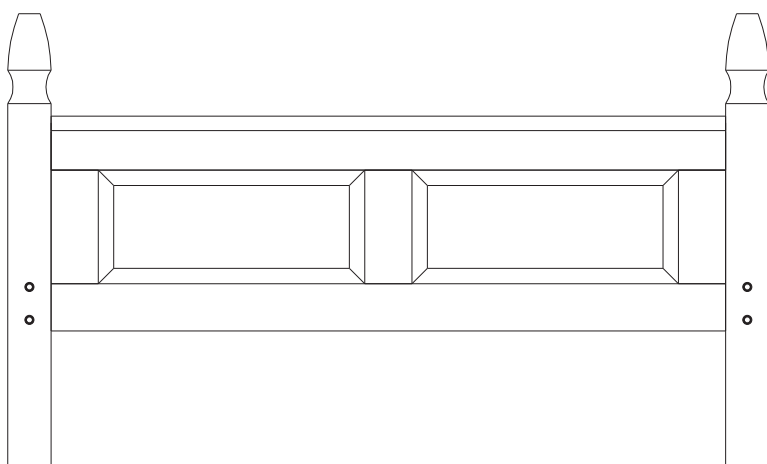

2 Footboard (88 x 148.5cm)



3 Side rail x 2 (188 x 11.2cm)



4 Centre rail (193.5 x 6.5cm)



5 Slats x 26 (68.2 x 6.5cm)











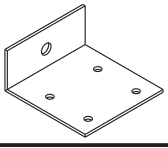




6 Middle support (28.3 x 6.5cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Wooden dowel x 4	B  16mm Screw x 8	C  35mm Screw x 52
D  40mm Screw x 2	E  32mm Bolt x 2	F  130mm Bolt x 8
G  Nut x 8	H  Nut x 2	J  Metal bracket x 2
K  Metal stud x 4	L  Wooden covers x 8	M  Allen key x 1
N  Spacer x 2		

Tools required



Phillips screwdriver
(medium & large)

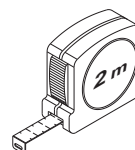

Ruler/tape
measure




Small
hammer



Eye protection
(when using a
hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fixing metal brackets.

Fix metal brackets **J** into the pre drilled holes in the headboard **1** and footboard **2** using screws **B**.

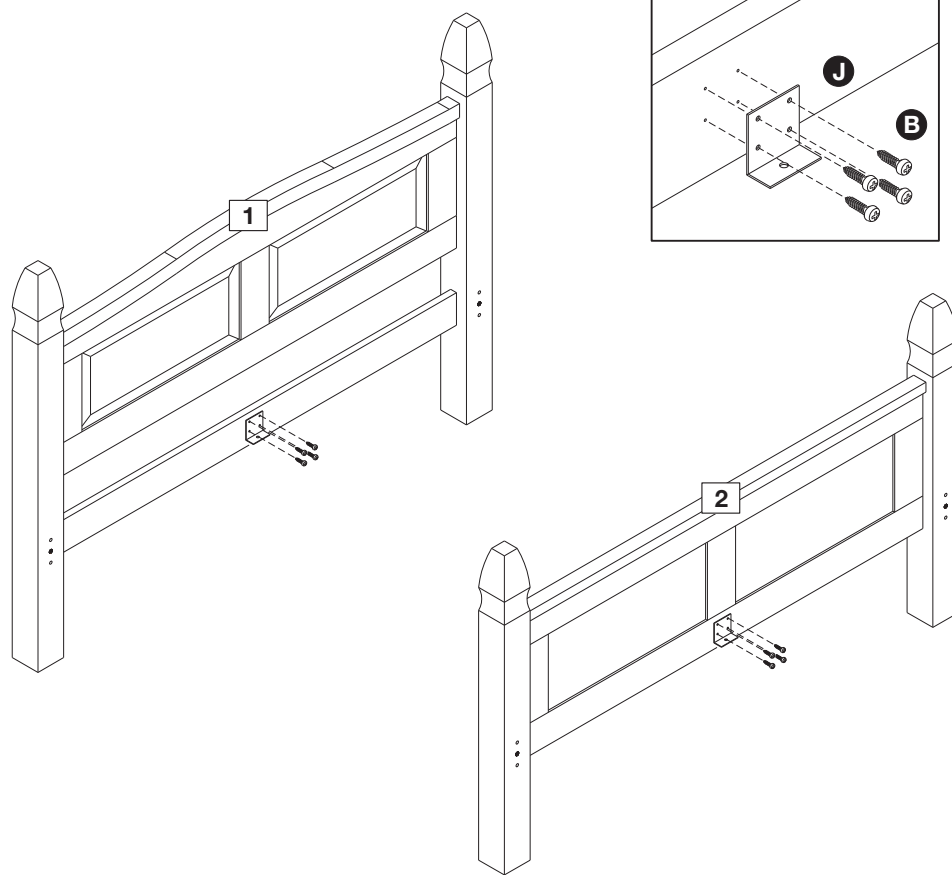


Step 2

Assembling centre rail and inserting dowels.

Attach centre rail **4** into the pre drilled holes in the middle support **6** using screws **D**.

Insert dowels **A** into the side rails **3**.

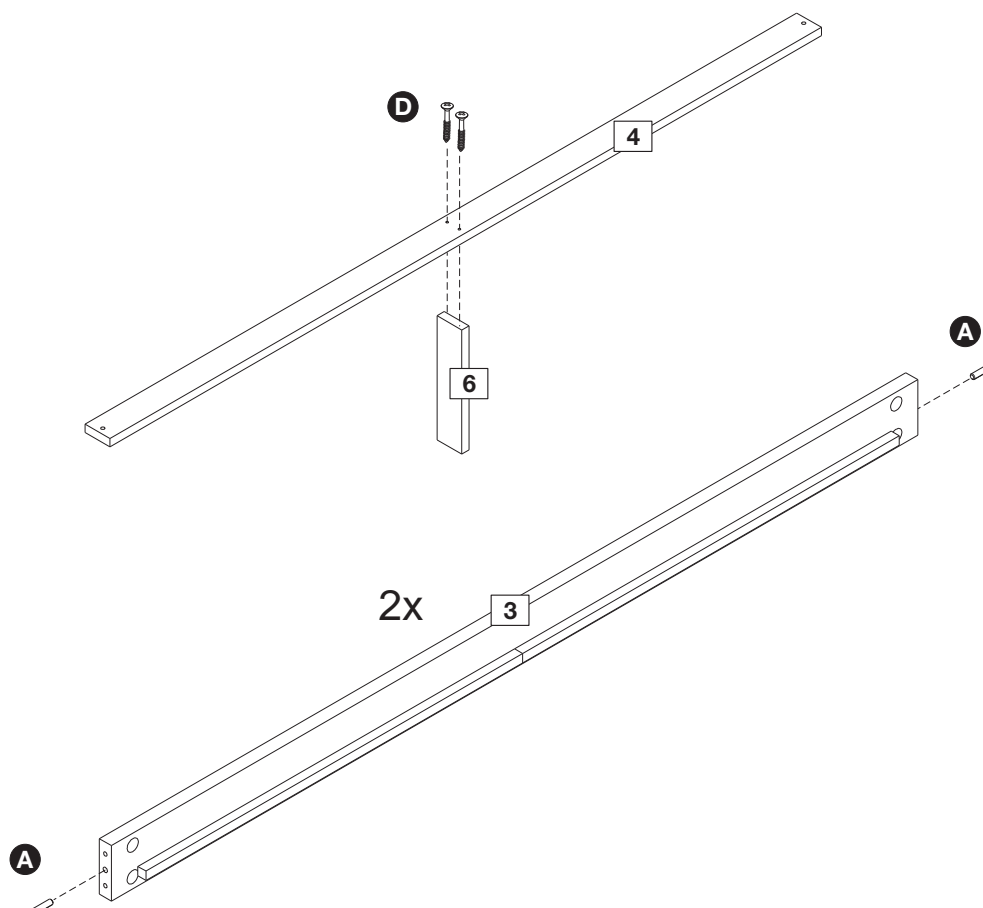

Assembly Instructions

Step 3

Assembling side rails.




Important:

Two people are required for an easier assembly.

a: Attach centre rail **4** to the metal bracket of headboard using bolt **E** and nut **H**.


b: With help, assemble side rails **3** to headboard using fixings **F** **G** with the allen key **M** as shown.

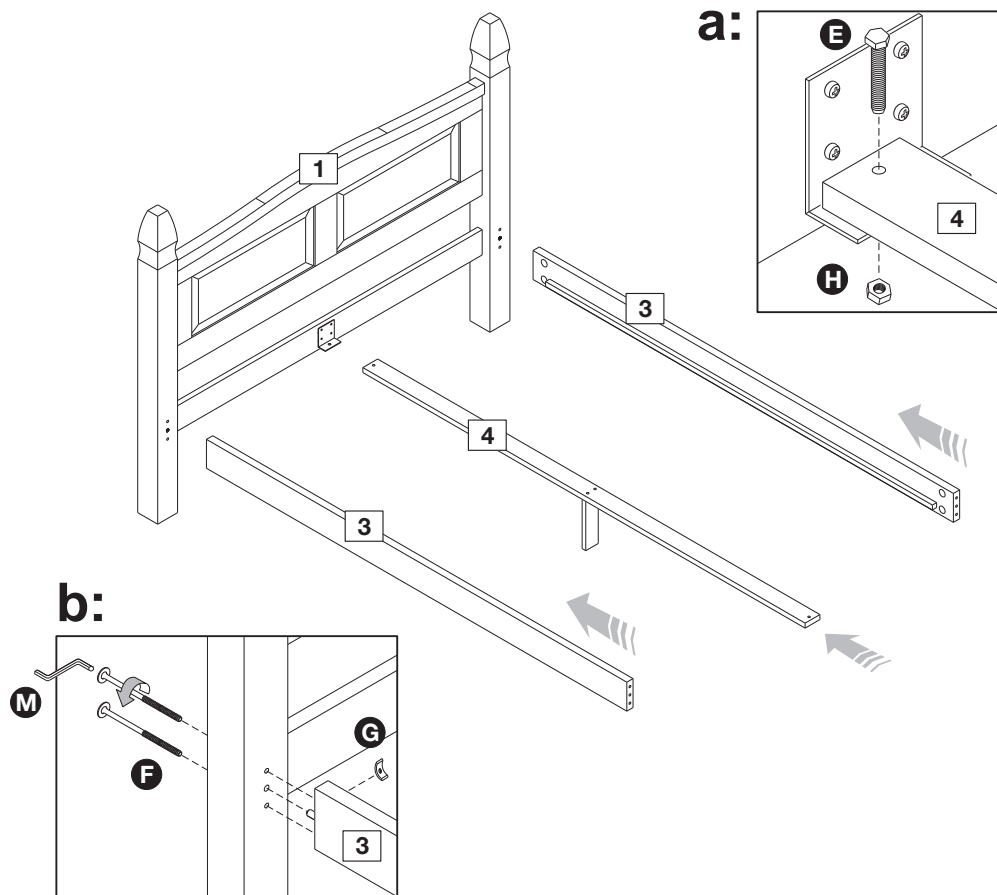

Step 4

a: Attach centre rail **4** to the metal bracket of footboard using bolt **E** and nut **H**.


b: With help, assemble side rails **3** to footboard using fixings **F** **G** with the allen key **M** as shown.

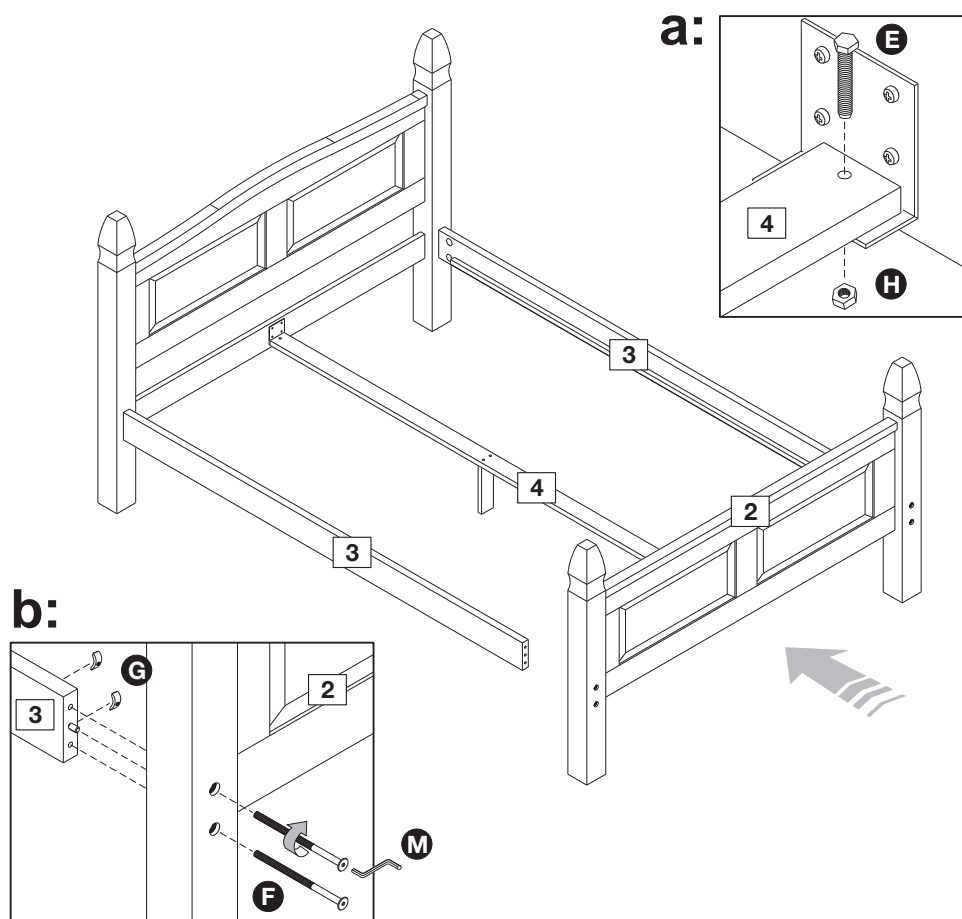


Assembly Instructions

Step 5


a: Fix metal studs **K** into the headboard **1** and footboard **2** at the dimensions shown.

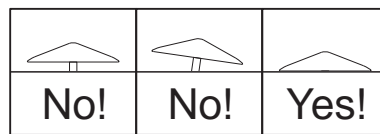

a:

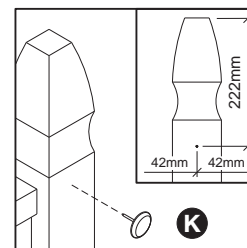

b:

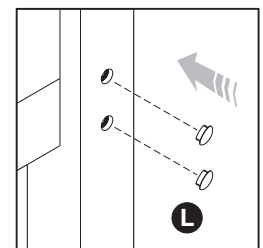


b: Fix wooden covers **L** into the holes in the headboard **1** and footboard **2** as shown.



Warning:

While fixing wooden covers be careful not to damage them.

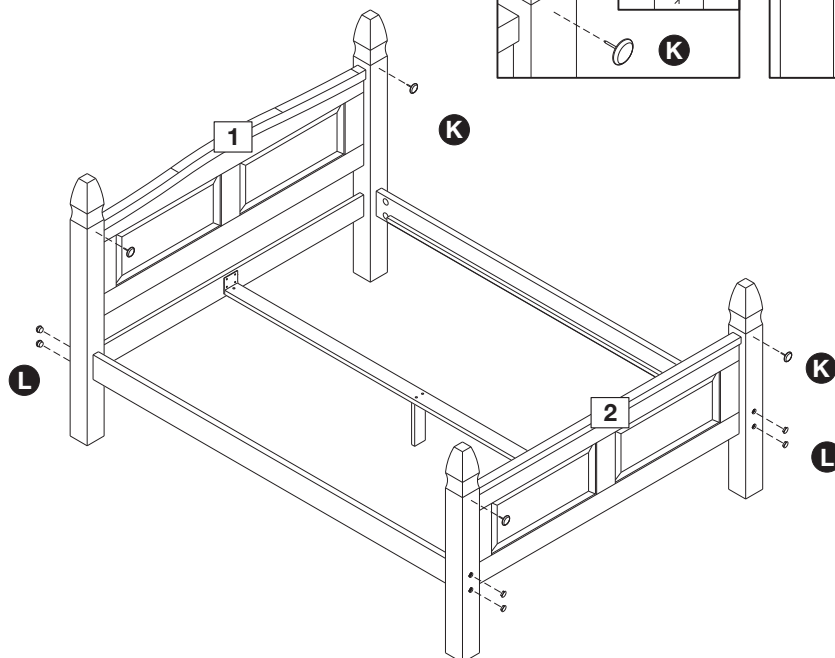


Step 6


Assembling slats.

a: Please fix the first slat **5** at the end of the rail and work towards the middle of the bed using the spacer **N** as shown to ensure correct spacing.


a:

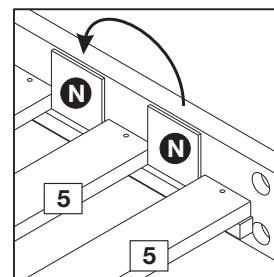

b:

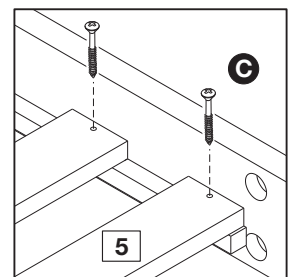

b: Fix all the slats to the side rails first using screws **C**. After, fix all the slats to the centre rail.

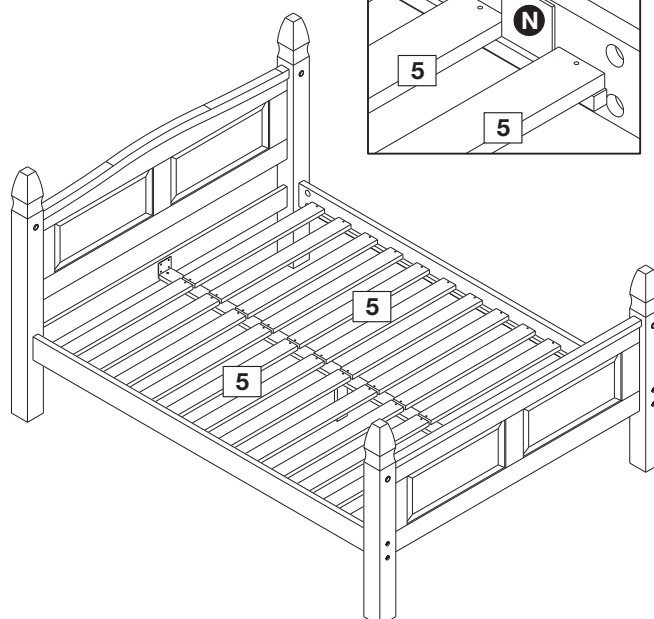

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**