

READ CAREFULLY ASSEMBLY AND CARE

INSTRUCTIONS FOR ASHFORD 3 DOOR SIDEBORD


DESCRIPTION

ITEM NAME: ASHFORD 3 DOOR SIDEBORD


ITEM NO: 31124/31125

90 mins

APPROXIMATE ASSEMBLY TIME

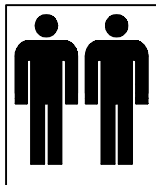


2 PERSONS ASSEMBLY

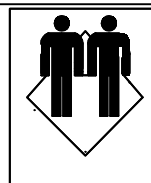


REQUIRED ASSEMBLY SPACE

Floor Area
1770*945mm

REQUIRED ASSEMBLY TOOLS



ASSEMBLED DIMENSIONS
W1270*D445*H870mm

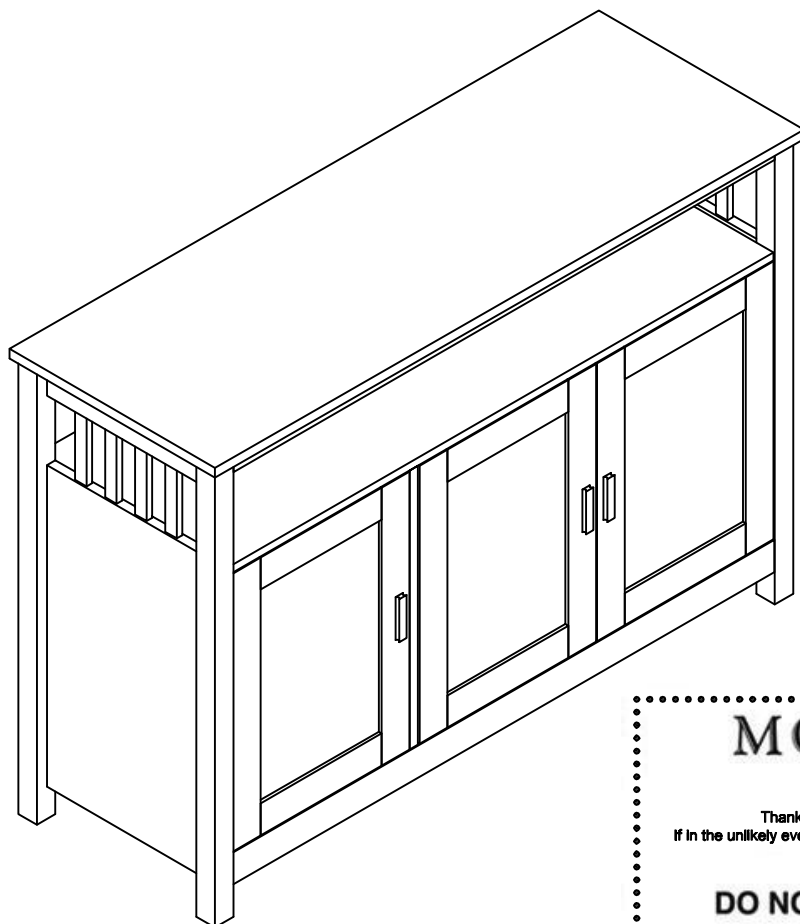

"It is recommend to use a PVA glue bought from a reputable DIY store to secure the components J when assembling the product"

MOUNTROSE

Thank you for purchasing your new Mountrose product.
If in the unlikely event you experience any problems with assembly or require any spare screws/fixings for this product.

DO NOT RETURN THIS ITEM!!!!

Please telephone the Mountrose Customer Helpline


0161 406 5040
or email qc@mountrose.co.uk








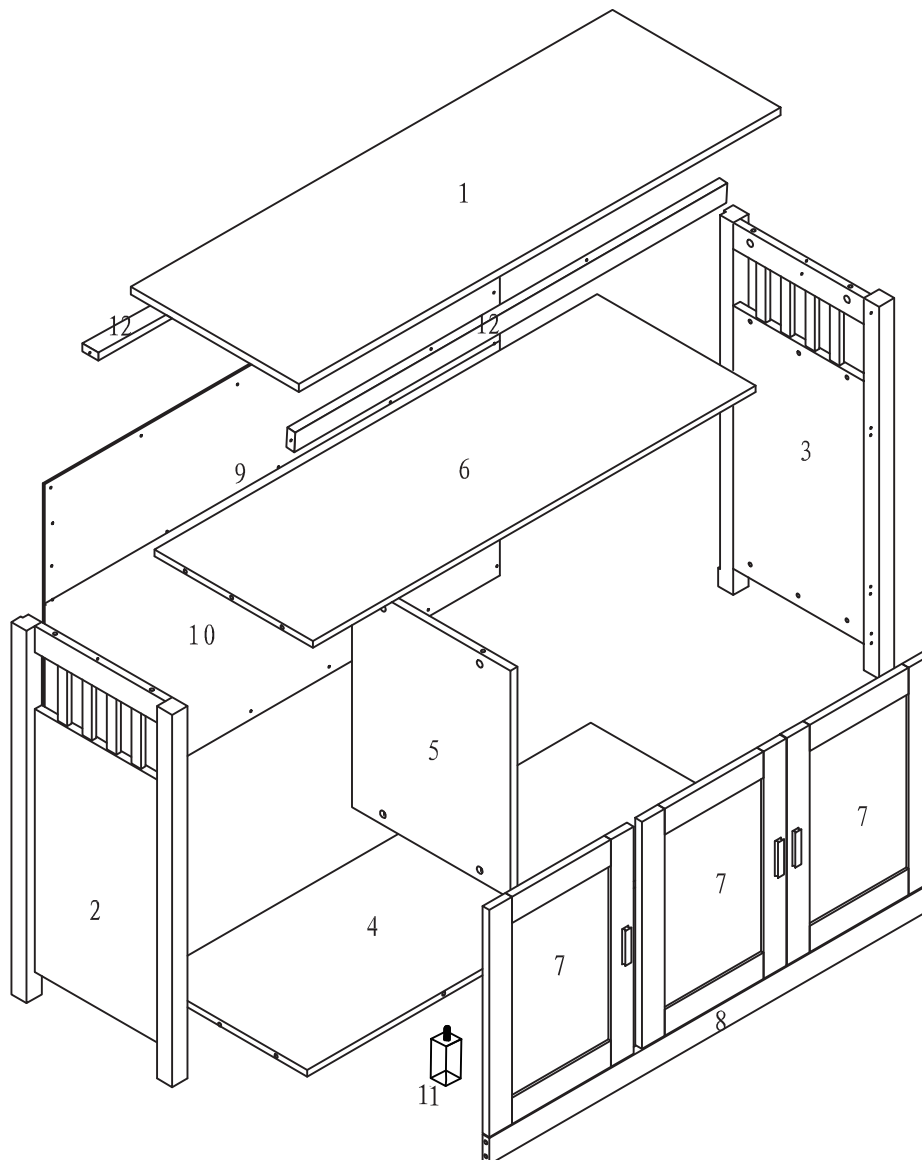





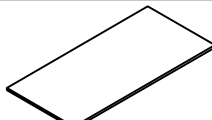

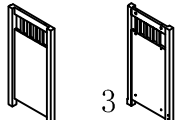
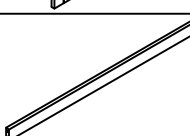




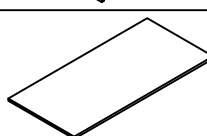
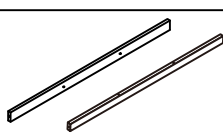
THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS

MOUNTROSE

MOUNTROSE LIMITED. ALAN HOUSE. ASHTON ROAD. BREDBURY. STOCKPORT. SK6 2QN UNITED KINGDOM

Parts List



				DESCRIPTION			
MOUNTROSE				ITEM NAME: ASHFORD 3 DOOR SIDBOARD			
				ITEM NO: 31124/31125			
Hardware List							
Label	Picture	Description	QTY	Label	Picture	Description	QTY
A		Pillar	17	G		Doormagnet 46*14	2
B		Hinge	6	H		Magnet plates 12*10	3
C		Handle	3	I		Screw 2 *10	3
D		Handle Screw 4*16	6	J		Dowels 5.8 x30mm	16
E		Screw 2.2*12	25	K		Screw 3 *25	4
F		Screw 3 *12	28	L		cams	17
Tool List							
Label	Picture			Description			QTY
T-1				Screwdriver(not provided)			2
Parts List							
Label	Picture	Description	QTY	Label	Picture	Description	QTY
1		Top	1	7		Door	3
2		Left & Right Hand Sides	2	8		Front Rail	1
3							
4		Bottom	1	9		Board Back	1
				10			
5		Divider	1	11		Adjustable Foot	1
6		Shelf	1	12		Front & Back Top Rail	2
MOUNTROSE			MOUNTROSE LIMITED. ALAN HOUSE. ASHTON ROAD. BREDBURY. STOCKPORT. SK6 2QN UNITED KINGDOM				

<div data-bbox="134 181 671 248" data-label="Page-Header"> MOUNTROSE </div>	<div data-bbox="823 152 994 192" data-label="Section-Header"> DESCRIPTION </div> <div data-bbox="823 206 1332 239" data-label="Text"> ITEM NAME: ASHFORD 3 DOOR SIDEBORD </div> <div data-bbox="823 268 1080 300" data-label="Text"> ITEM NO: 31124/31125 </div>
<div data-bbox="178 340 628 380" data-label="Section-Header"> <u>Top Tips before you start!</u> </div> <div data-bbox="178 398 1383 974" data-label="List-Group"> <ol style="list-style-type: none"> 1. Please check that all parts are present before you start the assembly of your furniture, as once assembled, the furniture is exempt from our home approval policy. 2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step. 3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely. 4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled. 5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage. 6. During assembly please take care not to over-tighten any fittings, as this may damage the product. <div data-bbox="175 978 857 1019" data-label="Section-Header"> <u>Care and Maintenance of your Furniture</u> </div> <div data-bbox="175 1032 531 1070" data-label="Section-Header"> <u>General for Cabinets</u> </div> <div data-bbox="175 1084 1334 1303" data-label="List-Group"> <ul style="list-style-type: none"> • Please periodically check all fittings and re-tighten as necessary. • To clean your item, please use a damp cloth and wipe clean. • Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate. • Please do not place hot items (e.g .hot drinks) directly on to the wood surface. • Please do not drag and pull your furniture. </div> </div>	
<div data-bbox="118 1998 655 2065" data-label="Page-Footer"> MOUNTROSE </div>	<div data-bbox="686 2022 1426 2054" data-label="Page-Footer"> MOUNTROSE LIMITED, ALAN HOUSE, ASHTON ROAD, BREDBURY, STOCKPORT, SK6 2QN UNITED KINGDOM </div>

MOUNTROSE


DESCRIPTION

ITEM NAME: ASHFORD 3 DOOR SIDEBORD


ITEM NO: 31124/31125

Assembly Steps

Step 1

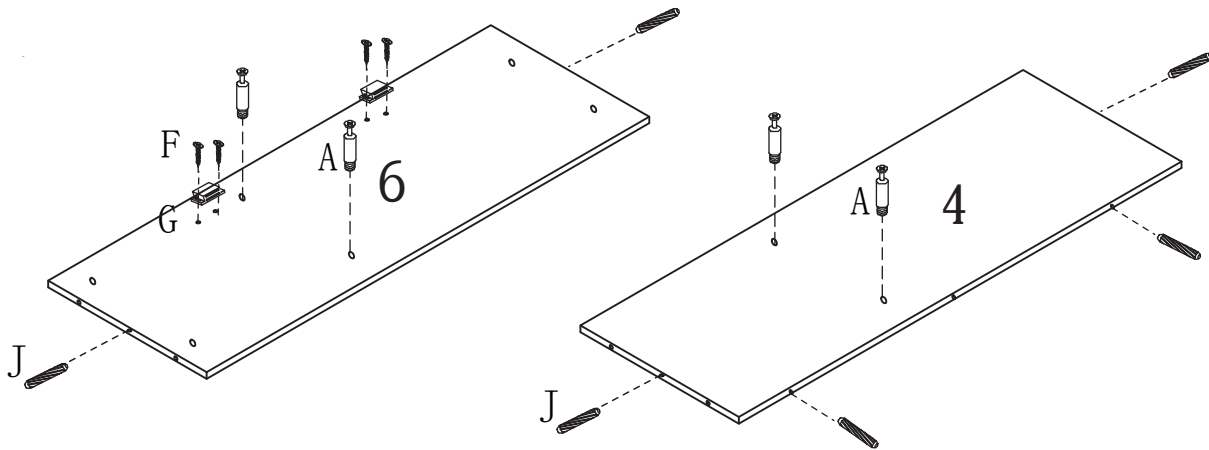



Step 2

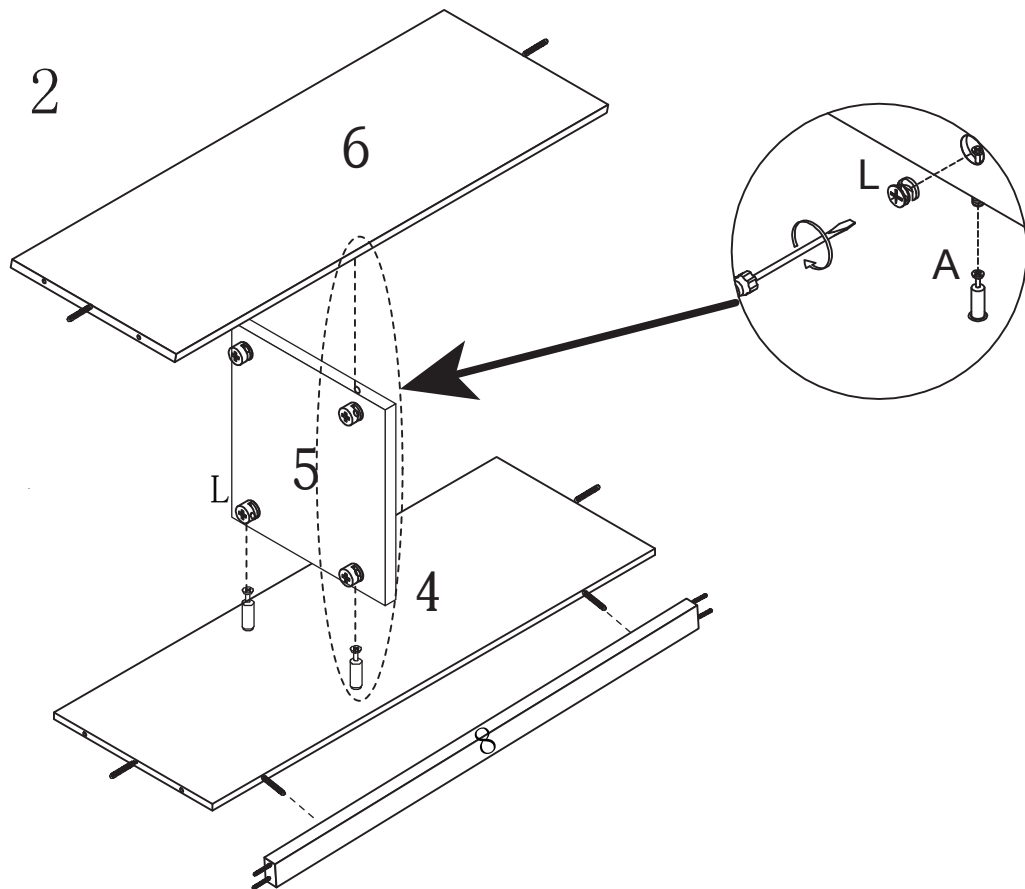




MOUNTROSE

MOUNTROSE LIMITED, ALAN HOUSE, ASHTON ROAD, BREDBURY, STOCKPORT, SK6 2QN UNITED KINGDOM

Step 3

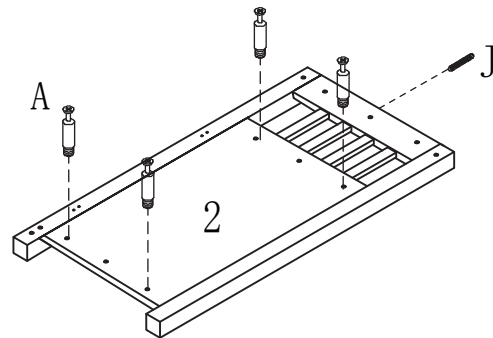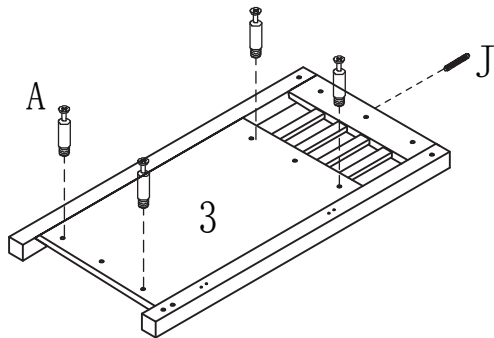

Step 4

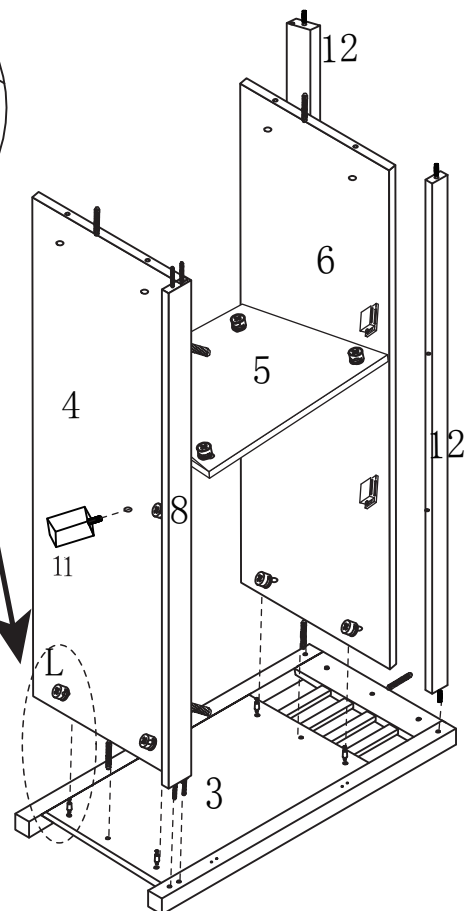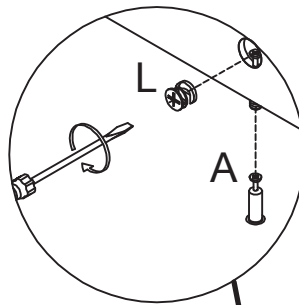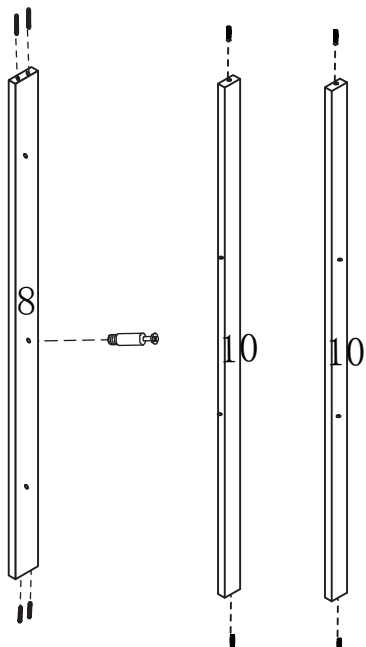


MOUNTROSE

DESCRIPTION

ITEM NAME: ASHFORD 3 DOOR SIDEBORD

ITEM NO: 31124/31125

Step 5

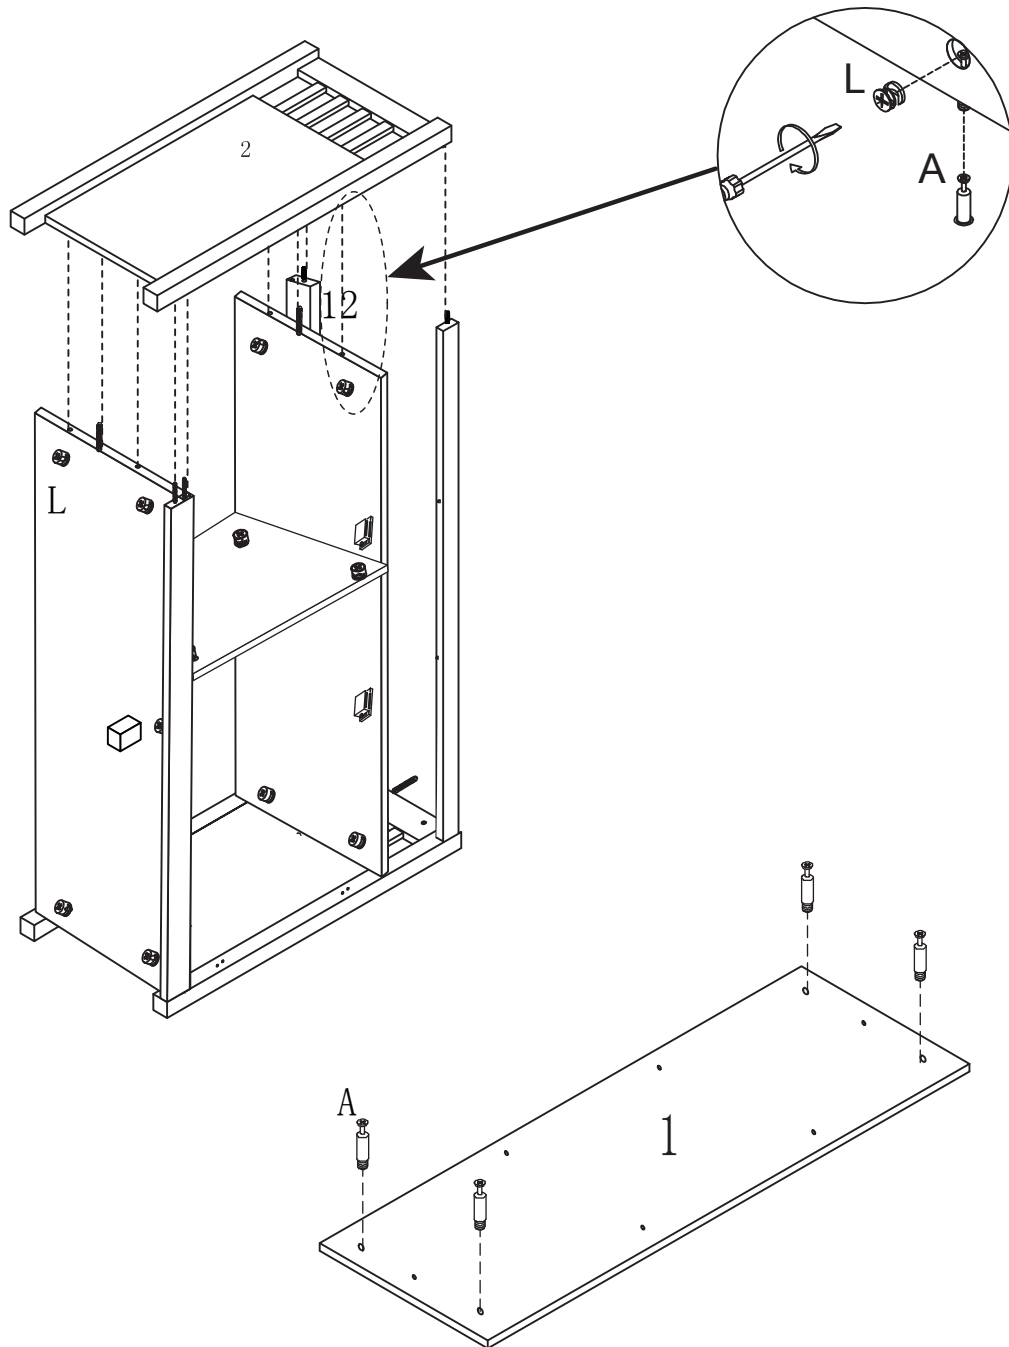

MOUNTROSE

MOUNTROSE LIMITED, ALAN HOUSE, ASHTON ROAD, BREDBURY, STOCKPORT, SK6 2QN UNITED KINGDOM


MOUNTROSE

DESCRIPTION


ITEM NAME: ASHFORD 3 DOOR SIDEBOARD

ITEM NO: 31124/31125

Step 6

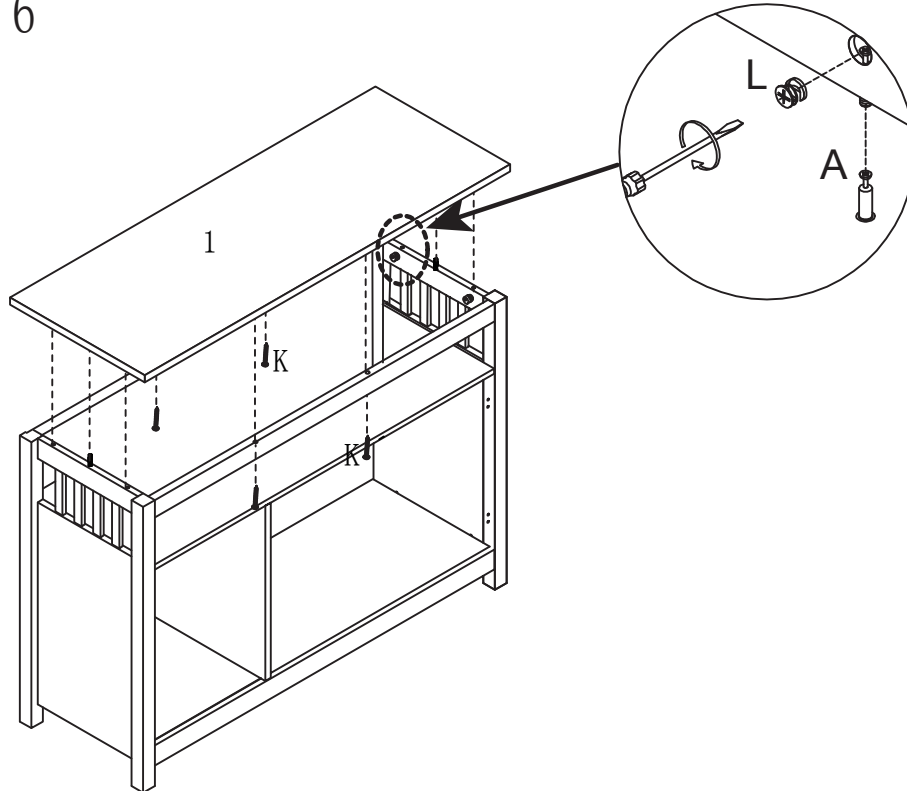

Step 7

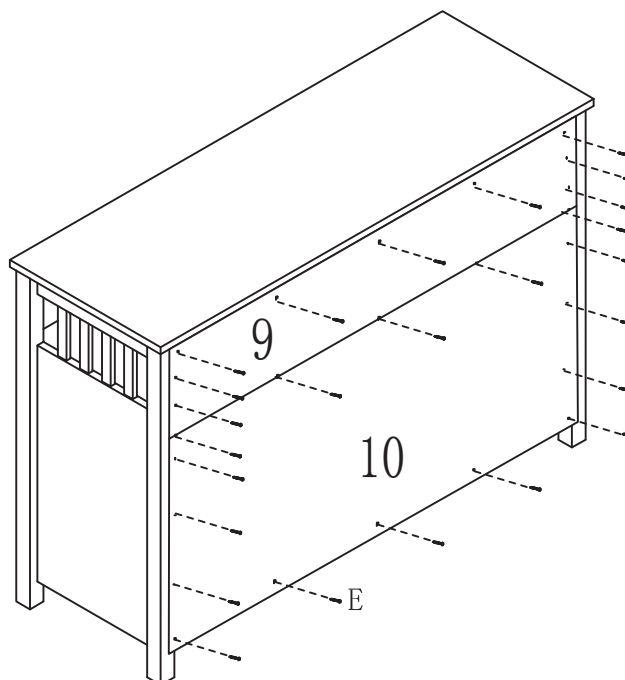

MOUNTROSE

MOUNTROSE LIMITED, ALAN HOUSE, ASHTON ROAD, BREDBURY, STOCKPORT, SK6 2QN UNITED KINGDOM

DESCRIPTION

ITEM NAME: ASHFORD 3 DOOR SIDEBOARD

ITEM NO: 31124/31125

Step 8

