


ASSEMBLING INSTRUCTIONS

CAUTION :


THIS ITEM IS MADE OF LAMINATED PARTICLE BOARD AND MEDIUM DENSITY FIBRE BOARD TO BE ASSEMBLED ON A DRY, SOFT, SMOOTH AND CLEAN SURFACE . DO NOT USE DETERGENT OR CHEMICAL. AVOID DAMP AND DIRECT SUNLIGHT.

STEP 1	CHECK YOUR HARDWARE	H2453
	WOOD DOWEL M6 X 25	5 PCS
	WOOD DOWEL M8 X 25	22 PCS
	SQUARE KNOB	1 PC
	TRUSS HEAD SCREW M4 X 22	1 PC
	SCREW M3.5 X 14	8 PCS
	SCREW M3 X 20	8 PCS
	CORNER BLOCK	8 PCS
	EURO BOLT	30 PCS
	HOUSING D:15/12.5MM	30 PCS
	METAL HINGES	2 PCS


TOOLS REQUIRED:

	HAMMER		SCREW DRIVER
---	--------	---	--------------


STEP 2

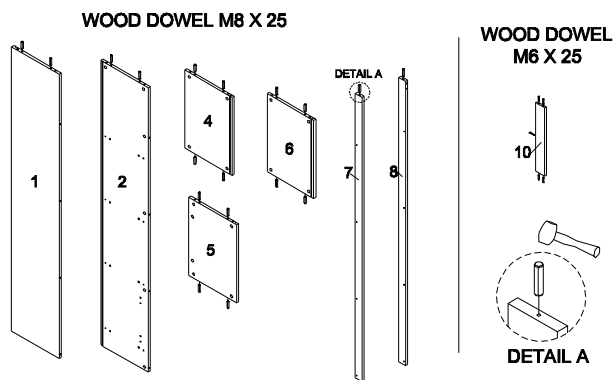


STEP 3

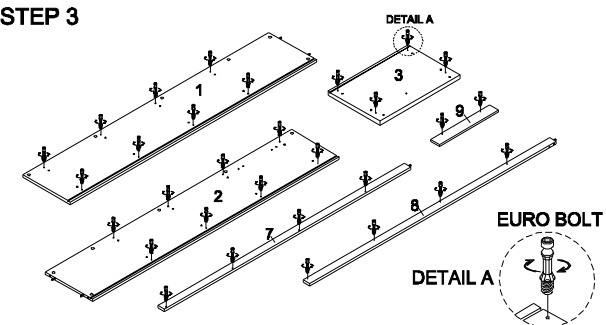


STEP 4

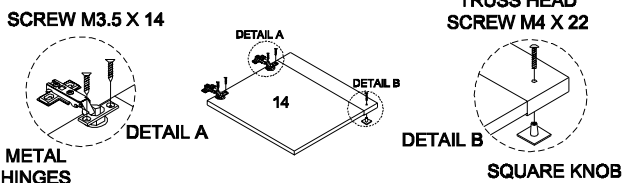


STEP 5

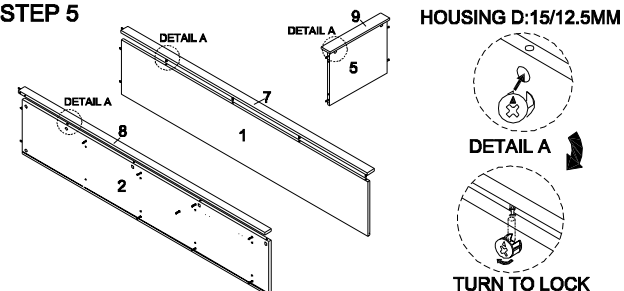


STEP 6

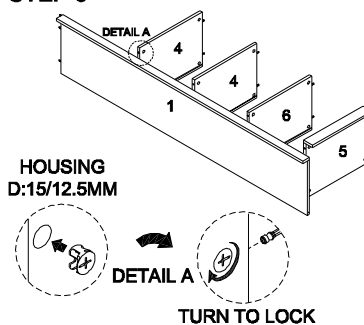


STEP 7

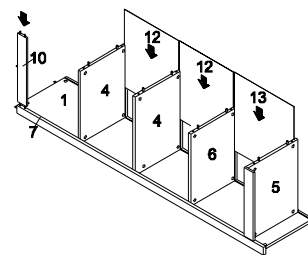


STEP 8

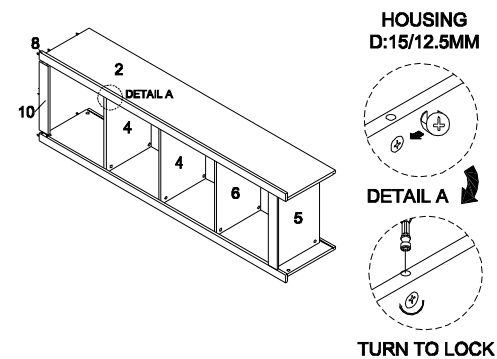


STEP 9

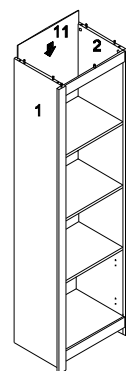


STEP 10

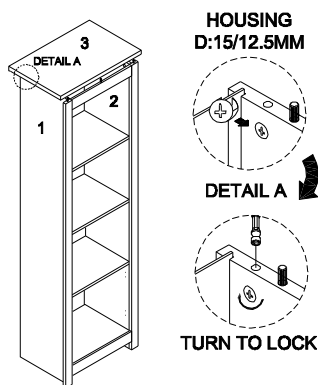

STEP 11

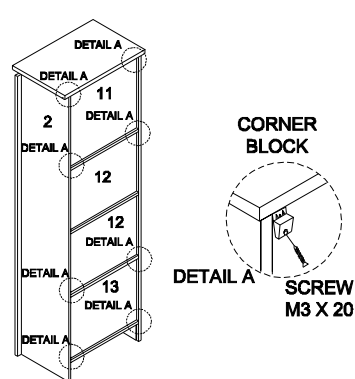

STEP 12

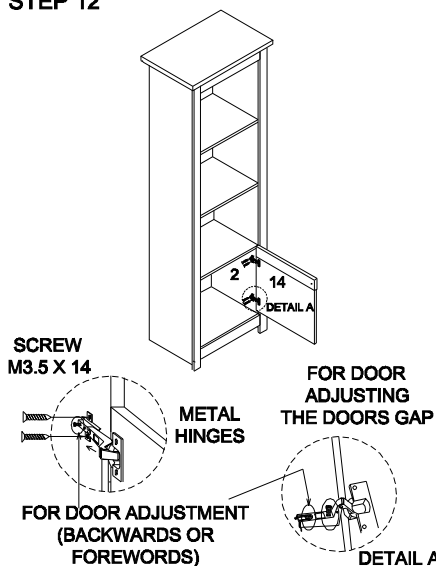

STEP 13

