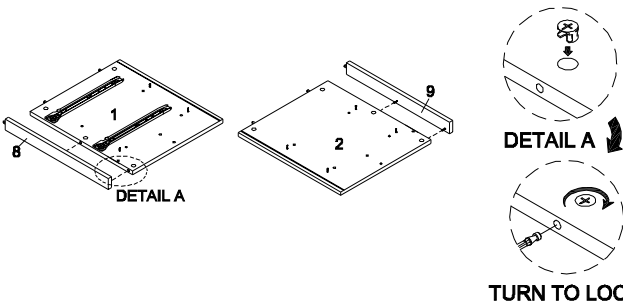
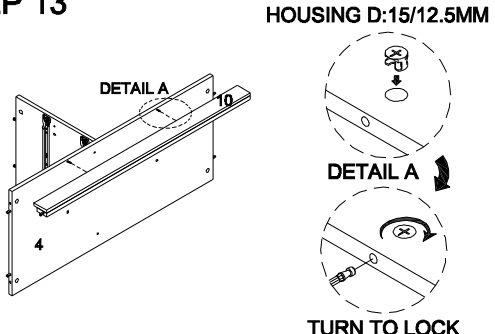


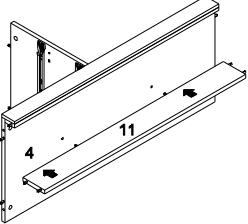
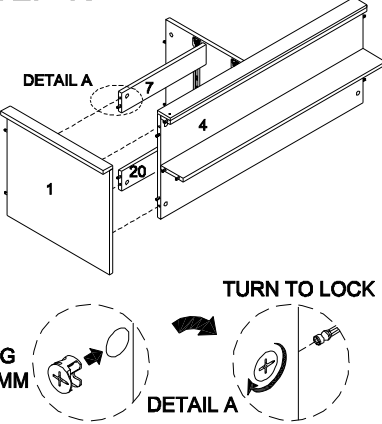
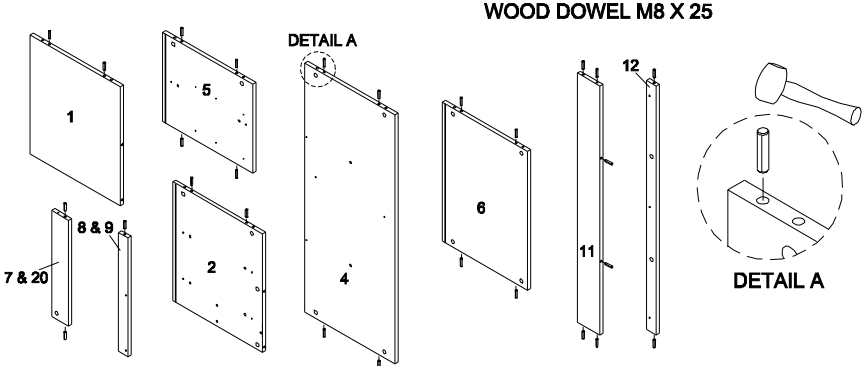
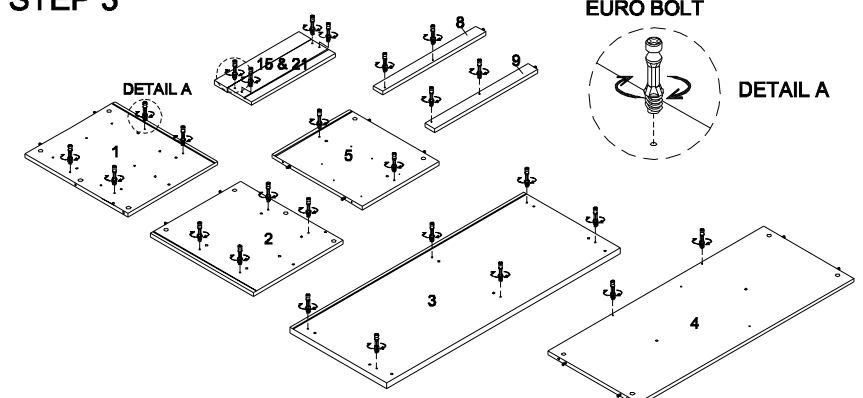
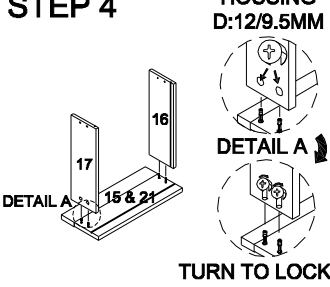
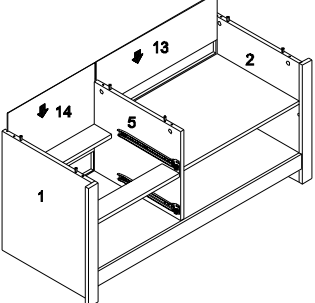
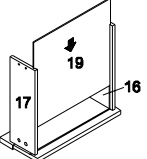
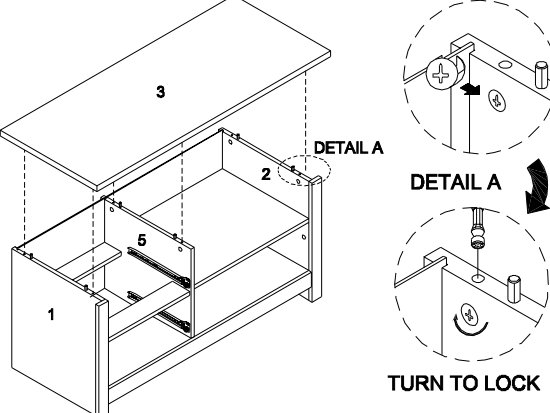
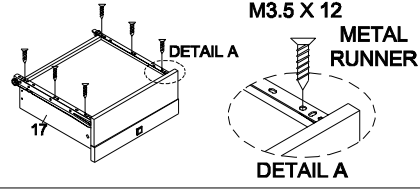
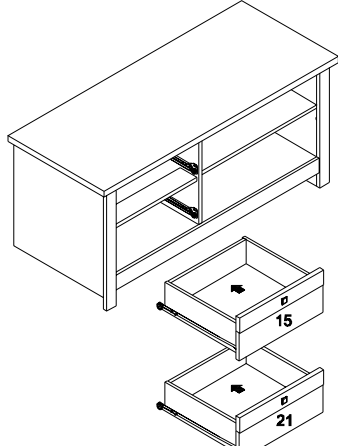
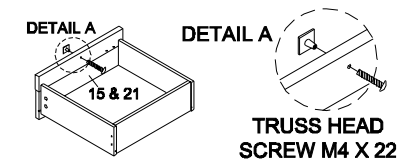
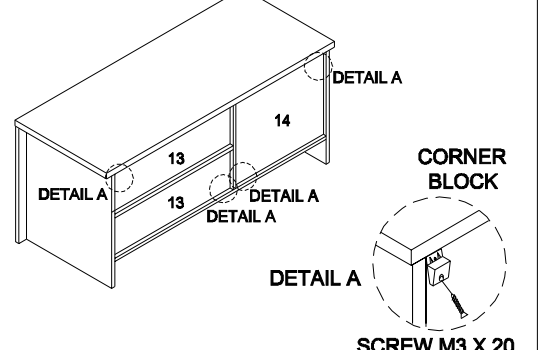


ASSEMBLING INSTRUCTIONS

CAUTION :

THIS ITEM IS MADE OF LAMINATED PARTICLE BOARD AND MEDIUM DENSITY FIBRE BOARD TO BE ASSEMBLED ON A DRY, SOFT, SMOOTH AND CLEAN SURFACE . DO NOT USE DETERGENT OR CHEMICAL. AVOID DAMP AND DIRECT SUNLIGHT.

STEP 1			STEP 10		
CHECK YOUR HARDWARE			HOUSING D:15/12.5MM		
H5556			STEP 11		
 SCREW #9 X 1 1/2"					
 WOOD DOWEL M8 X 25			PAN HEAD SCREW M3.5 X 25		
 SQUARE KNOB					
 TRUSS HEAD SCREW M4 X 22			TURN TO LOCK		
 SCREW M3.5 X 12			STEP 12		
 SCREW M3 X 20			STEP 13		
 CORNER BLOCK			HOUSING D:15/12.5MM		
 PAN HEAD M3.5 X 25					
 15MM HOUSING D:15/12.5MM			TURN TO LOCK		
 12MM HOUSING D:12/9.5MM			STEP 14		
 EURO BOLT			STEP 15		
 METAL RUNNER			SCREW #9 X 1 1/2"		
TOOLS REQUIRED:					
 HAMMER			STEP 16		
STEP 2					
			STEP 17		
STEP 3			HOUSING D:15/12.5MM		
			STEP 18		
STEP 4			HOUSING D:15/12.5MM		
			STEP 19		
STEP 5					
STEP 6			STEP 20		
					
STEP 7			STEP 21		
					
STEP 8			STEP 22		
					
STEP 9			STEP 23		
