
## Dalton Metal 5ft Frame

Assembly Instructions - Please keep for future reference

656/8814

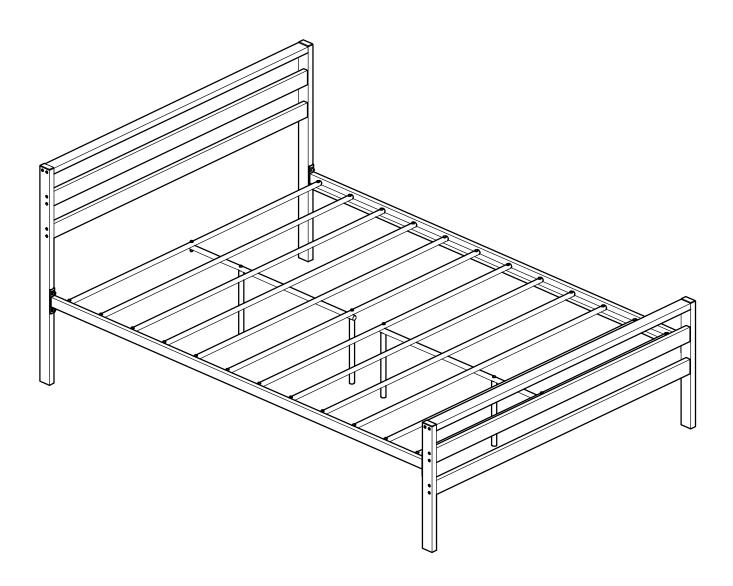

#### **Dimensions**

Width - 158cm

Depth - 212cm

Height - 91cm

### Important – Please read these instructions fully before starting assembly



## Safety and Care Advice

### Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- As you unpack and prepare for assembly, clear an area for assembly. The parts should be placed on a carpeted or padded area to protect them from damage.
- Parts of the assembly will be easier with 2 or 3 people.
- Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.



• We do not recommend the use of power drill/drivers *for inserting screws*,

as this could damage the unit. Only use hand screwdrivers.

 To ensure an easier assembly, we strongly advise that all fittings are only finger tightened druing initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
  Take to your local authority waste disposal centre.

## Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0845 6400800** 

#### Please check you have all the panels listed below



- Left headboard post (90.6 x 5cm)
- Right headboard post (90.6 x 5cm)
- Left footboard post (53.1 x 5cm)

- Right footboard post (53.1 x 5cm)
- Top horizontal bar x 2 (152.9 x 5cm)
- 6 Middle horizontal bar x 4 (152.9 x 6cm)

- **7** Side rail x 2 (201.6 x 10cm)
- 8 Slat x 4 (dia1.9 x 153cm)
- **9** Slat x 8 (dia1.9 x 153cm)

Center support slat x 2 (dia1.9 x 85cm)

**11** Leg x 4 (dia1.9 x 32.5cm)

## Components - Fittings

### Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b> (9) 36mm Bolt x 24	<b>B</b> (2) (35mm Bolt x 2	<b>6</b> (a))))))))))))))))))))))))))))))))))))
<b>(a)</b> (b) (c) (d) (d) (d) (d) (d) (d) (d) (d) (d) (d	<b>5</b> 4mm Bolt x 2	<b>(F)</b> (1) (1) (1) (2) (3) (3) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4
<b>6</b> 0	<b>a</b> ()	•
Small plain washer x 56	Large plain washer x 8	Spring washer x 8
Nut x 26	Small hex key x 1	Large hex key x 1
Wrench x 1		

#### Ruler - Use this ruler to help correctly identify the screws


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

## Step 1

#### Assemble headboard

Assemble top horizontal bar 5 and middle horizontal bars 6 to left headboard post 1 and right headboard post 2 using bolts A as shown in the figure.

Note: Do not fully tighten bolts.

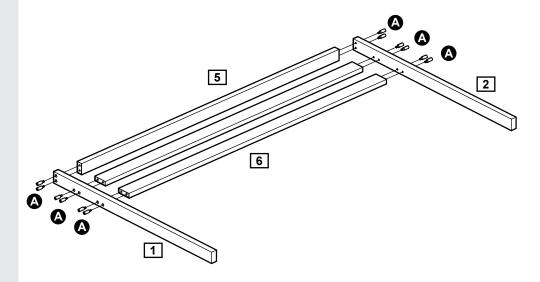


### Step 2

#### **Assemble footboard**

Assemble top horizontal bar 5 and middle horizontal bars 6 to left footboard post 3 and right footboard post 4 using bolts 4 as shown in the figure.

Note: Do not fully tighten bolts.

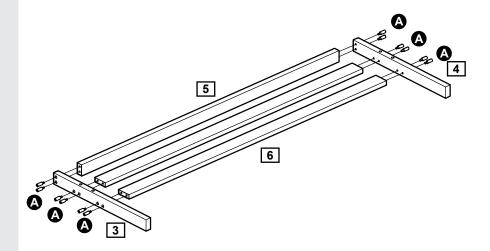


## Step 3

#### Assemble side rails

Three people are needed here.

Assemble side rails 7 to headboard frame and footboard frame using bolts **(5)**, spring washers and large plain washers **(1)**.

Note:Do not fully tighten bolts.

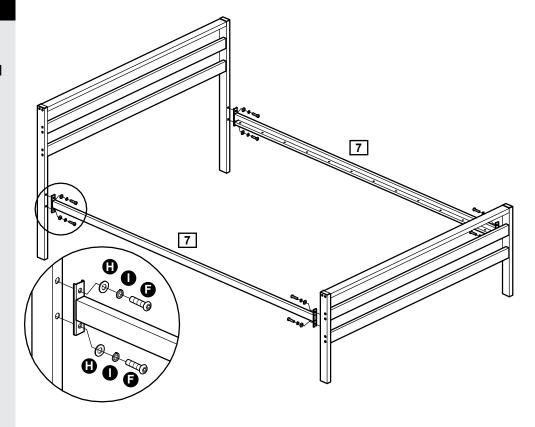


### Step 4

#### Assemble slats

Assemble slats 8 and 9 to the unit using bolts

**G**, small plain washers **G** and nuts **J**.

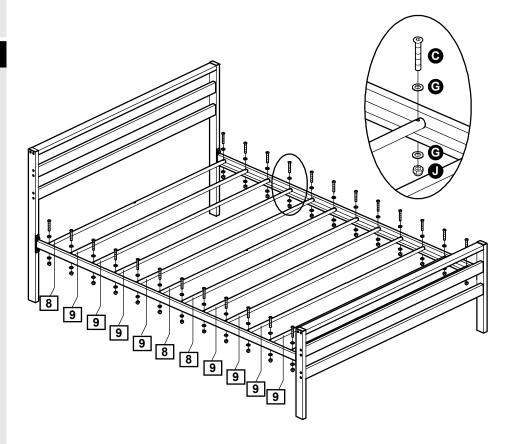


### Step 5

Assemble center support slats and legs.

a: Use bolts **①**, small plain washers **⑥** and nuts **①** to fix center support slats **10** to slats **⑧**.

**Note:** The middle hole on the center support slat should be close to the headboard or footboard.

**b:** Assemble slats 8, center support slats 10 and legs 11 together using bolts **3** and small plain washers **6**.

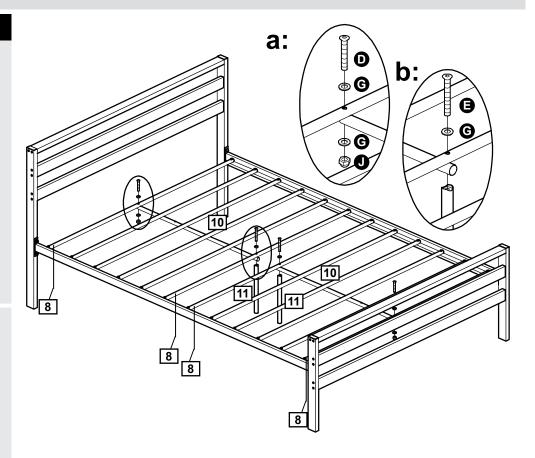


### Step 6

Use bolts **3** and small plain washers **6** to fix legs **11** to center support slats.

*Note:* Re-tighten all the bolts.

Assembly is complete.

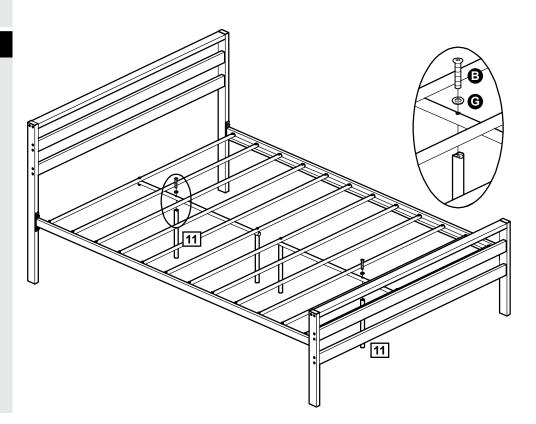


## Dalton 5ft Frame

Assembly Instructions - Please keep for future reference

656/8814

758/4873

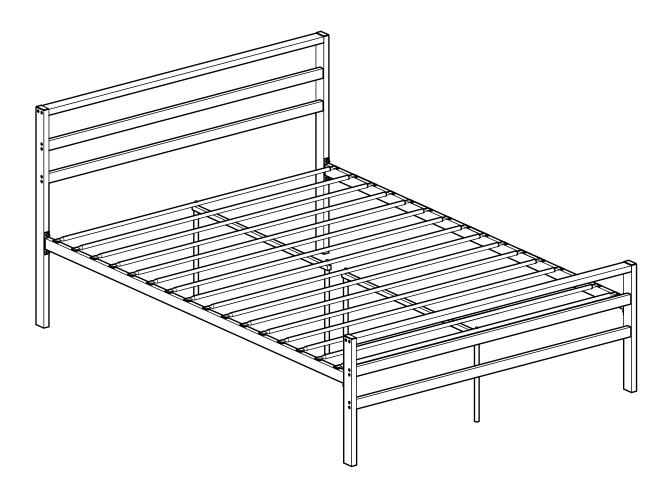

#### **Dimensions**

Width - 155.4cm Depth - 212cm Height - 90.6cm

### Important – Please read these instructions fully before starting assembly



## Safety and Care Advice

#### Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- As you unpack and prepare for assembly, clear an area for assembly. The parts should be placed on a carpeted or padded area to protect them from damage.
- Parts of the assembly will be easier with 2 or 3 people.
- Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.



• We do not recommend the use of power drill/drivers *for inserting screws*,

as this could damage the unit. Only use hand screwdrivers.

 To ensure an easier assembly, we strongly advise that all fittings are only finger tightened druing initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
  Take to your local authority waste disposal centre.

# Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0845 6400800** 

(dia1.8 x 35 cm)

### Please check you have all the panels listed below

0 00 00	00000	0 0000
Left headboard post (90.6 x 5cm)	Right headboard post (90.6 x 5cm)	3 Left footboard post (53.1 x 5cm)
0 0 0 0		
Right footboard post (53.1 x 5cm)	5 Top horizontal bar x 2 (150.4 x 5cm)	6 Middle horizontal bar x 4 (150.4 x 4cm)
<u>.</u>	•	
7 Side rail x 2		8 Slat x 12
(202 x 9cm)		(153.2 x 3.2cm)
•	[ <del>0</del>   6]	
<b>9</b> Slat x 4	10 Center support slat x 2	11 Leg x 4

(86.7 x 1.8cm)

(153.2 x 3.2cm)

## Components - Fittings

### Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>A</b> (1)	<b>B</b> ()))))))))))	
36mm Bolt x 24	49mm Bolt x 4	30mm Bolt x 8
<b>D</b> (1)		
Small plain washer x 4	Large plain washer x 8	Spring washer x 8
<b>G</b>		
Small hex key x 1	Large hex key x 1	

#### Ruler - Use this ruler to help correctly identify the screws


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

## Step 1

#### Assemble headboard

Assemble top horizontal bar 5 and middle horizontal bars 6 to left headboard post 1 and right headboard post 2 using bolts A as shown in the figure.

Note: Do not fully tighten bolts.

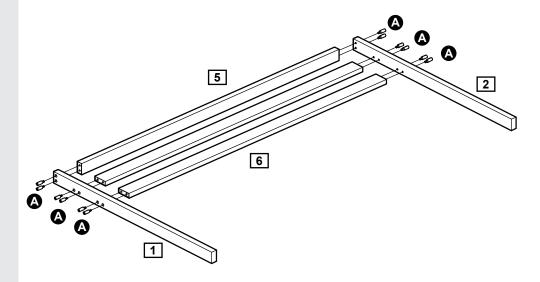


### Step 2

#### **Assemble footboard**

Assemble top horizontal bar 5 and middle horizontal bars 6 to left footboard post 3 and right footboard post 4 using bolts 4 as shown in the figure.

Note: Do not fully tighten bolts.

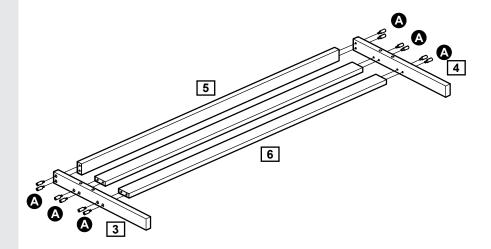


## Step 3

#### Assemble side rails

Three people are needed here.

Assemble side rails 7 to headboard frame and footboard frame using bolts **©**, spring washers **3** and large plain washers **3**.


Note:Do not fully tighten bolts.

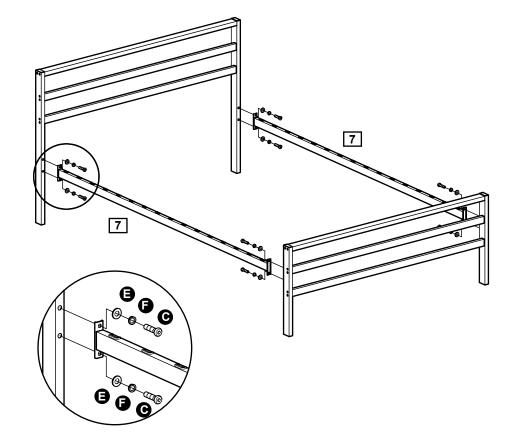

### Step 4

#### **Assemble slats**

Insert slats 8 and 9 to the side rails.

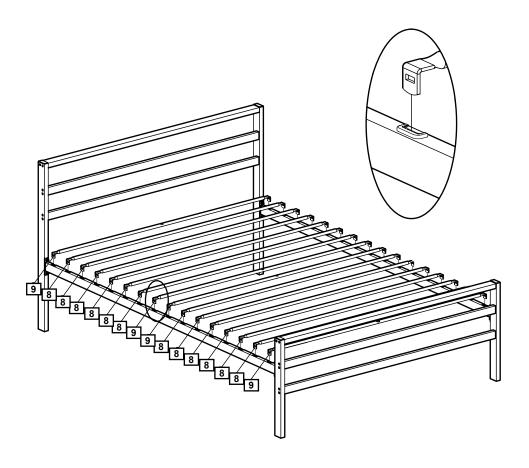

## Step 5

Assemble center support slats and legs.

Use bolts **B**, small plain washers **D** to fix the support slats **10** and legs **11** onto the slats **9** 

Note: Re-tighten all the bolts.

Assembly is complete.

