


AVA 4ft6/5ft Frame

Assembly Instructions - Please keep for future reference

695/3601

695/3618

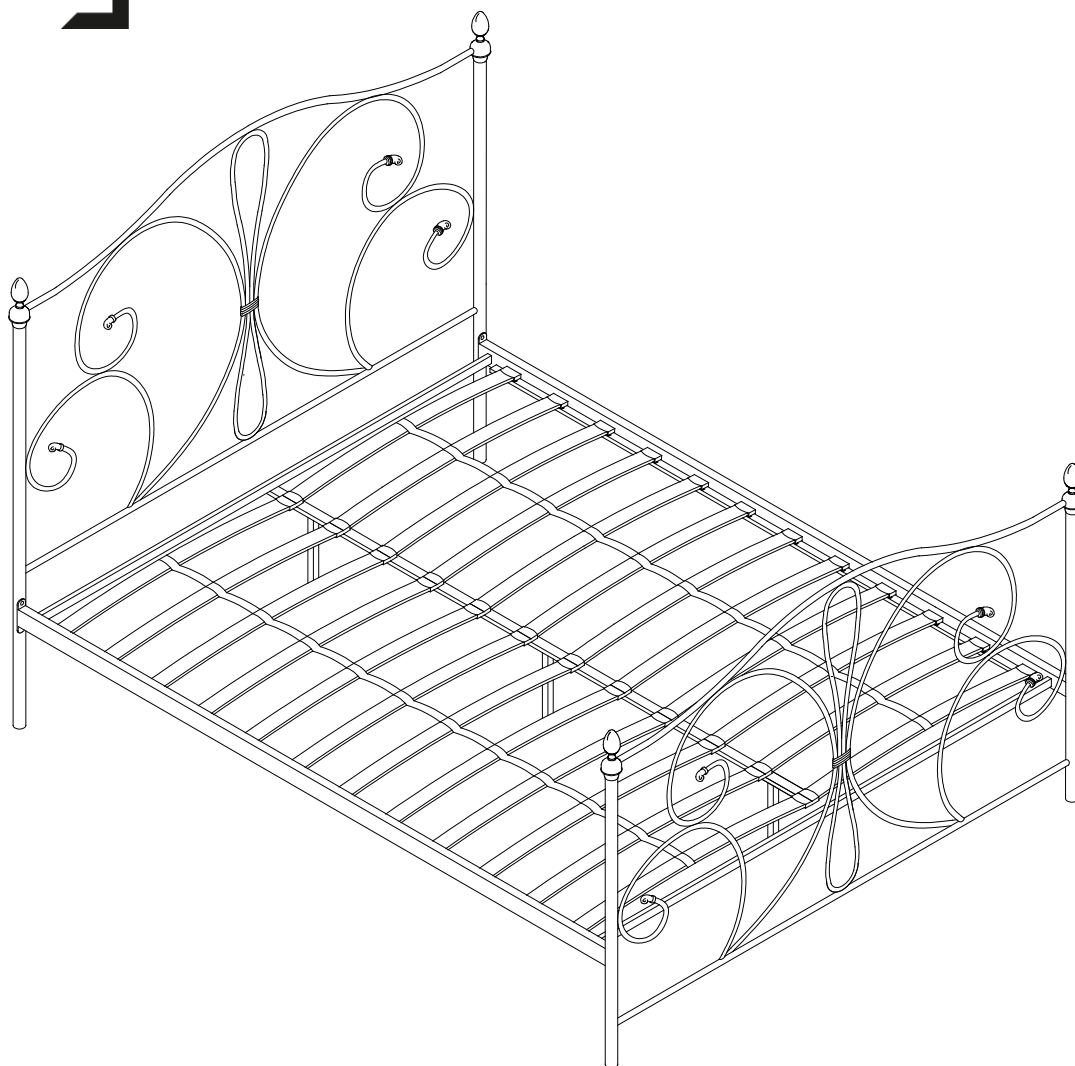

Dimensions

Width - 145/160

Depth - 202/212

Height - 124


Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**



Safety and care advice

Important - Please read these instructions fully before starting assembly


- Check you have all the components and tools listed on page 2 & 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Parts of the assembly will be easier with 2 people.
- Do not stand or put weight on the panels during assembly, this could cause damage.
- Assemble the unit as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Please kindly take account of your floor covering when assembly. If the floor offers little resistance then it is recommended to use a rug, or similar be placed under each leg.
- If using power tools, please follow the safety instructions supplied with the tools.
-  • We do not recommend the use of power drill/ drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Keep the adjustable central legs 10 mm above the ground.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Parts


Please check you have all the parts listed below

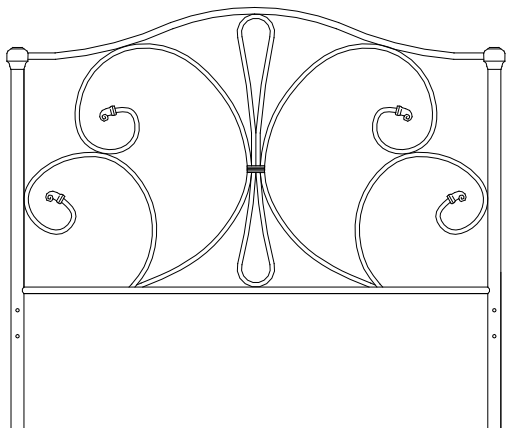

1 Head Board x 1 (146/161 x 122 x 6.5 cm)

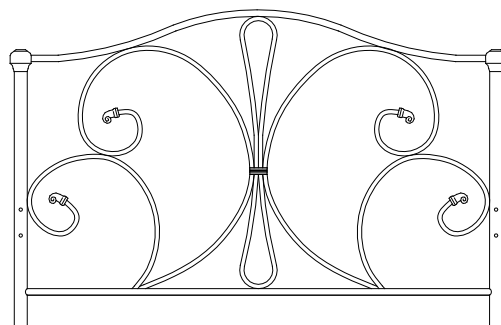


2 Foot Board x 1 (146/161 x 92 x 6.5 cm)



3 Side Frame x 2 (192/202 x 9.6 x 5.5cm)



4 Slats supporter x 1 (180/183 x 4 x 2 cm)




5 Tubing Slats x 2 (137/152 x 3 x 2 cm)



6 Supporting legs x 3 (25.3 x 7.5 x 2.5 cm)



7 Wood Slats x 24 (67.3/74.9 x 5.2 x 3 cm)



8 Finials x 4 (11 x 5 x 5 cm)














9 Fabric Strap x 2 (176/184 x 2.5 cm)

Components - Fittings :


If you have damaged or missing components, call the **Customer Helpline: 03456 400800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

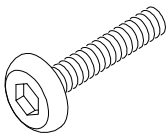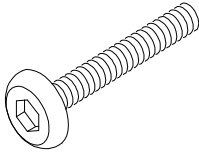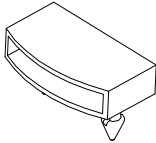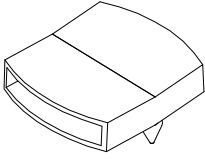A  15 mm 6mm Bolt x 9 (1 pc for spare part)	B  25 mm 6mm Bolt x 4	C  35 mm 6mm Bolt x 7 (1 pc for spare part)
D  45 mm 6mm Bolt x 2	E  15 mm 6mm JCN nut x 7 (1 pc for spare part)	F  6mm Lock nut x 7 (1 pc for spare part)
G  6mm Adjuster x 3	H  Plastic Cap x 28 (4 pc for spare part)	I  2 Ways Plastic Cap x 14 (2 pc for spare part)
J  11mm Wrench x 1	K  4mm Allen Key x 2	

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Attach Headboard to Side Frame

Note: It would be useful to ask someone to help you at this stage.

Important: Because of the size of this unit we recommend that it is built in the room intended for use.

Attach Side Frame **3** to Headboard **1**, by using Bolt **A** and Allen Key **K**.

Note: Do not tighten screws until completely assembled.

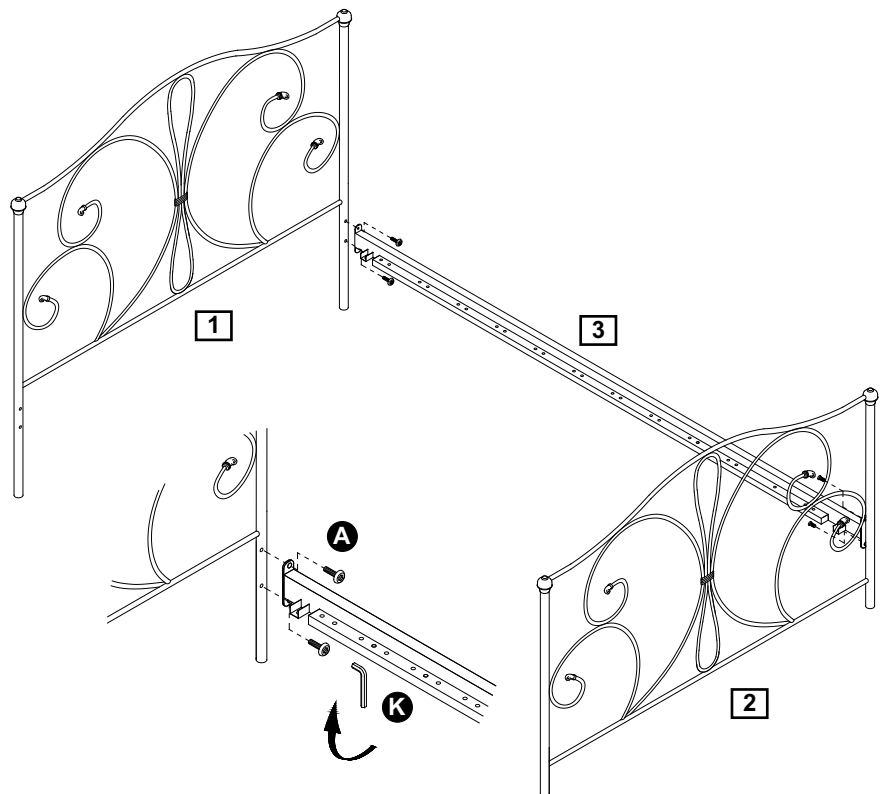


Step 2

Attach Foot Board to Side Frame

Note: It would be useful to ask someone to help you at this stage.

Attach Side Frame **3** to Footboard **2**, by using Bolt **A** and Allen Key **K**.

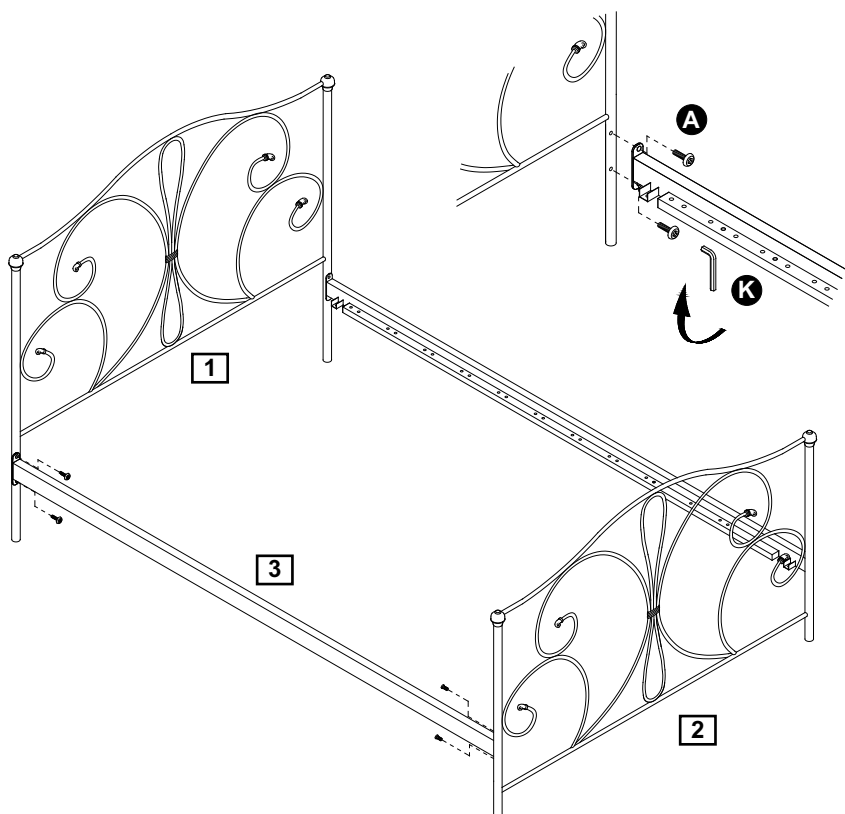

Step 3

Tighten the bolts in above steps


Assembly Instructions

Step 4

Assemble the Tubing Slat

Note: It would be useful to ask someone to help you at this stage.

By using Bolt **B**, JCN Nut **E** and Allen Key **K** to fix Tubing Slat **5** with Side Frame **3**.

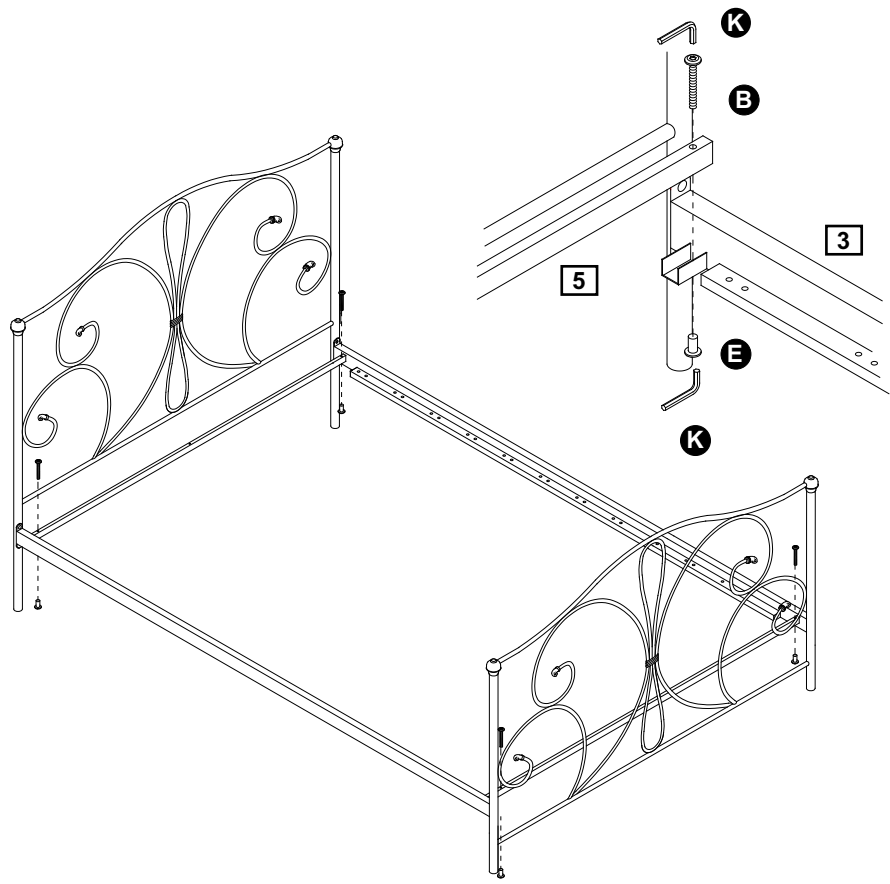

Step 5


Assemble Supporting Legs

Note: It would be useful to ask someone to help you at this stage.

By using Bolt **C**, Lock nut **F**, Allen Key **K**, and Wrench **J** to fix Supporting Legs **6** to Slat Supporter **4**, attach Adjuster **G** to Supporting Leg **6**.

Note: If the screw hole can not match when assemble, need move the base a little to make sure the bed is straight.


Tips : Before the slats are in place, alter the feet adjusters so that there is a 10mm gap between the foot of the leg and the floor.

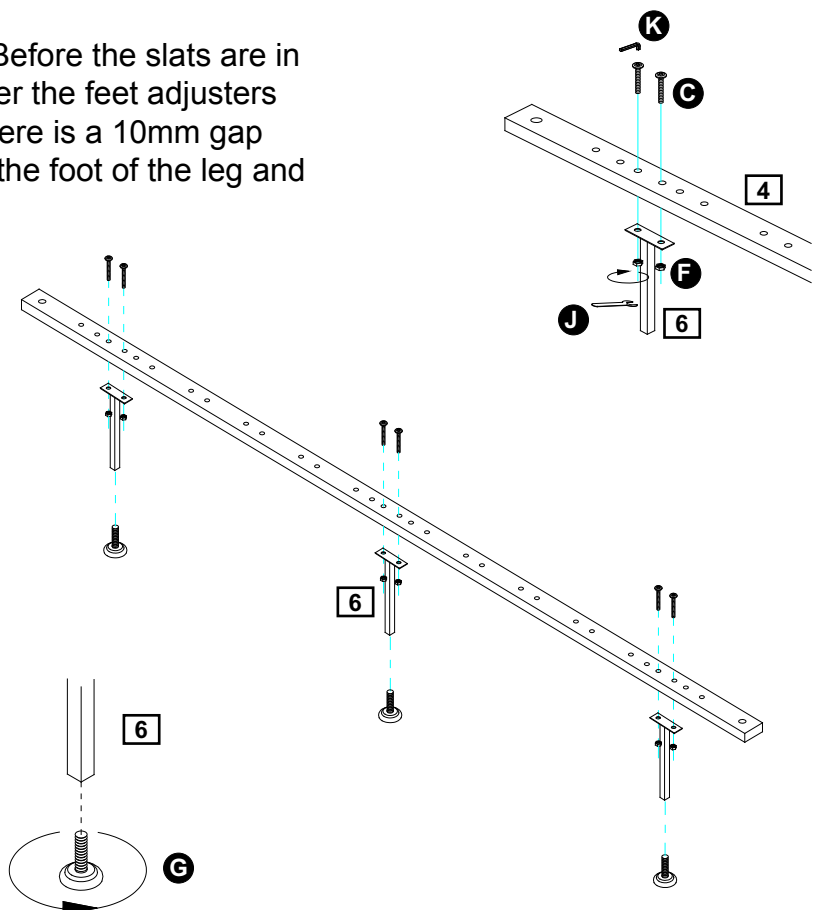

Assembly Instructions

Step 6

Attach Slat Support **4** to Tubing Slat **5** by using Bolt **D**, JCN Nut **E** and Allen Key **K**.

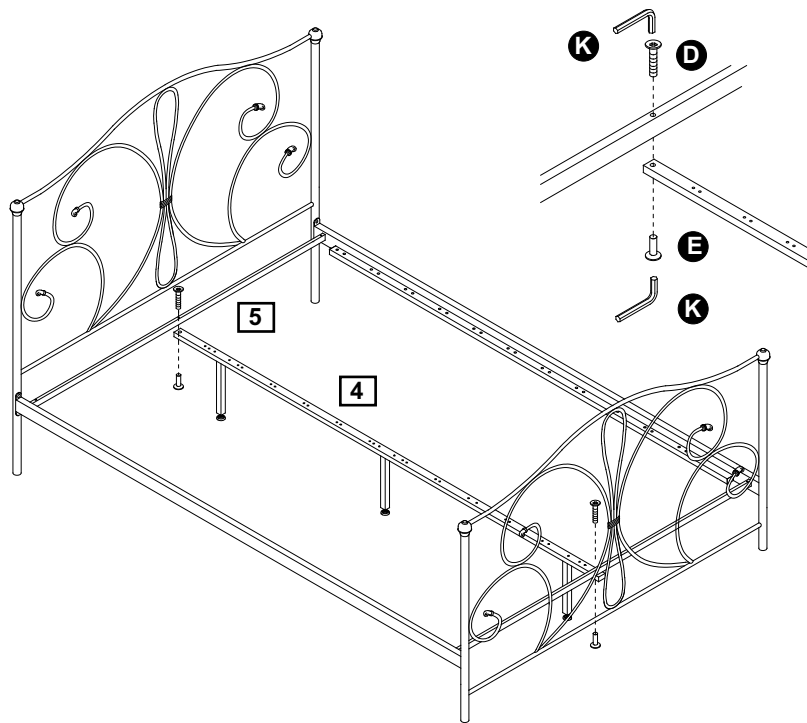

Step 7


Assemble Wood Slats

Note: It would be useful to ask someone to help you at this stage.

1. Insert a Wood Slats **7** through the first hole in Fabric Strap **9**. Repeat using another Wood Slat and the other Fabric strap.

2. Attach Plastic Cap **H** onto one end of the Wood Slat **7**. Attach 2 Ways Plastic Cap **I** onto the other end of wood slat. Repeat.


3. Insert the Caps into the holes in Side Frame **3** and Center Slat Supporter **4**.

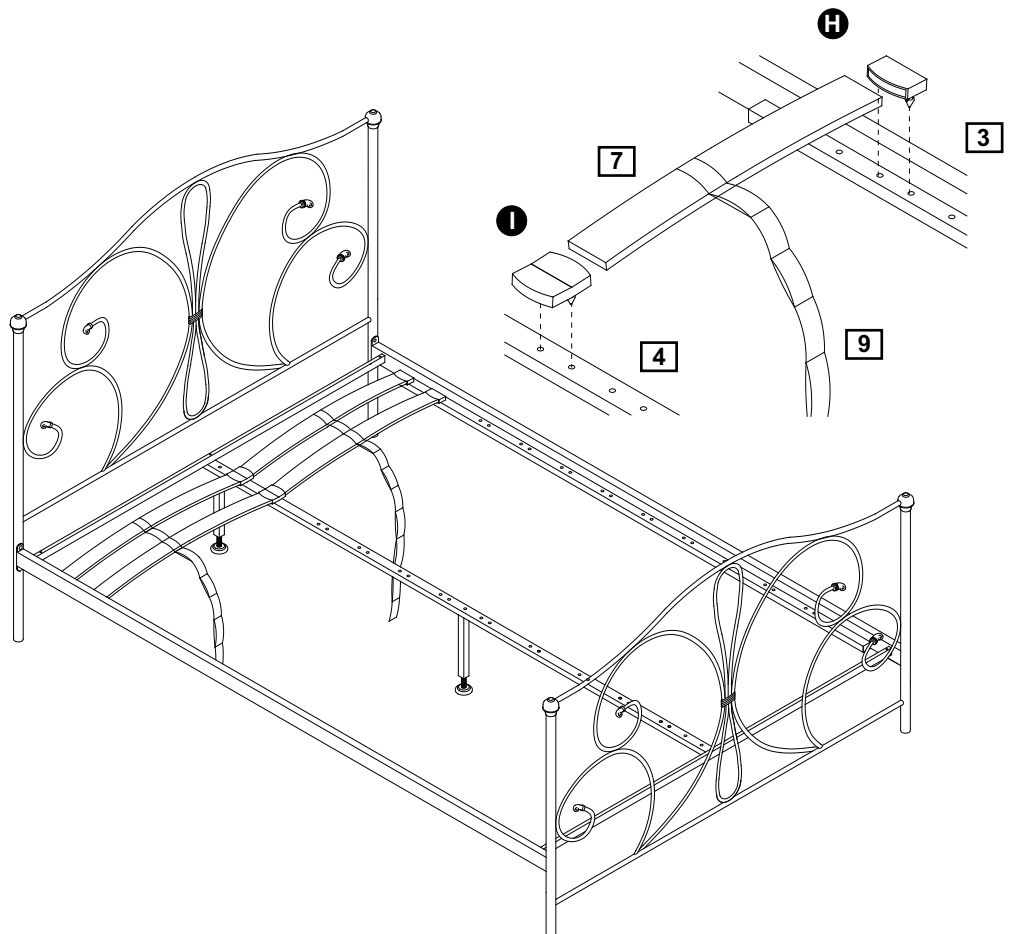

Assembly Instructions

Step 8

Fix the Finials **8** onto HeadBoard **1** and FootBoard **2** by turning clock-wise.

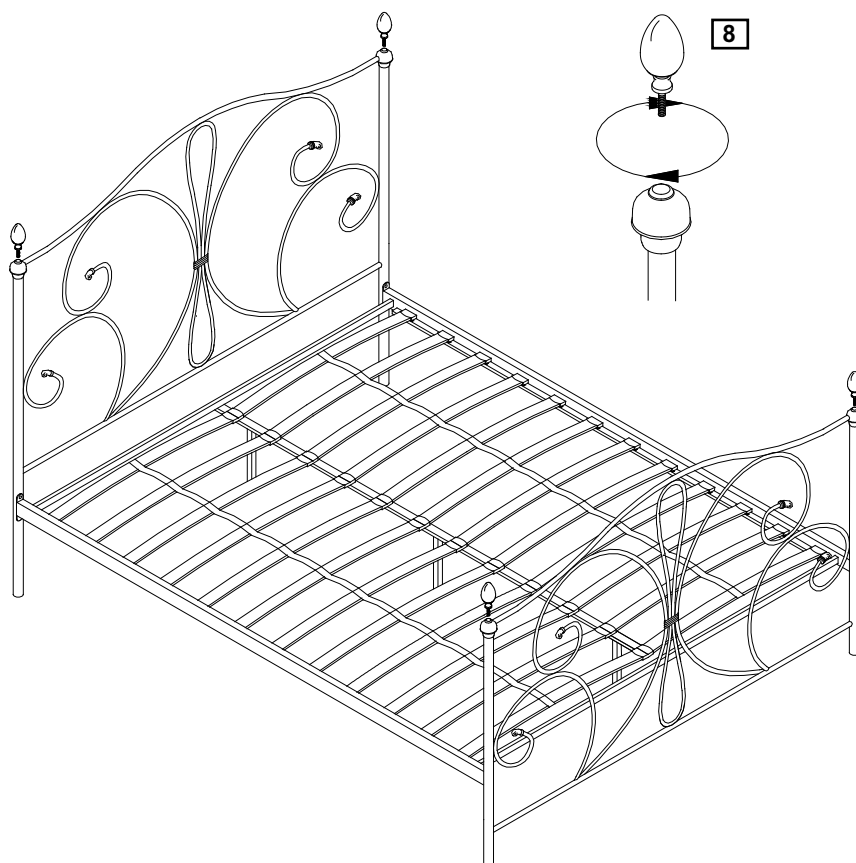

Step 9

Bed Assembly Finished



If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**