
Toronto Double & King

Assembly Instructions - Please keep for future reference

697/0842
697/0756
697/0811
697/0787
697/0794
697/0859
697/0763
697/0828

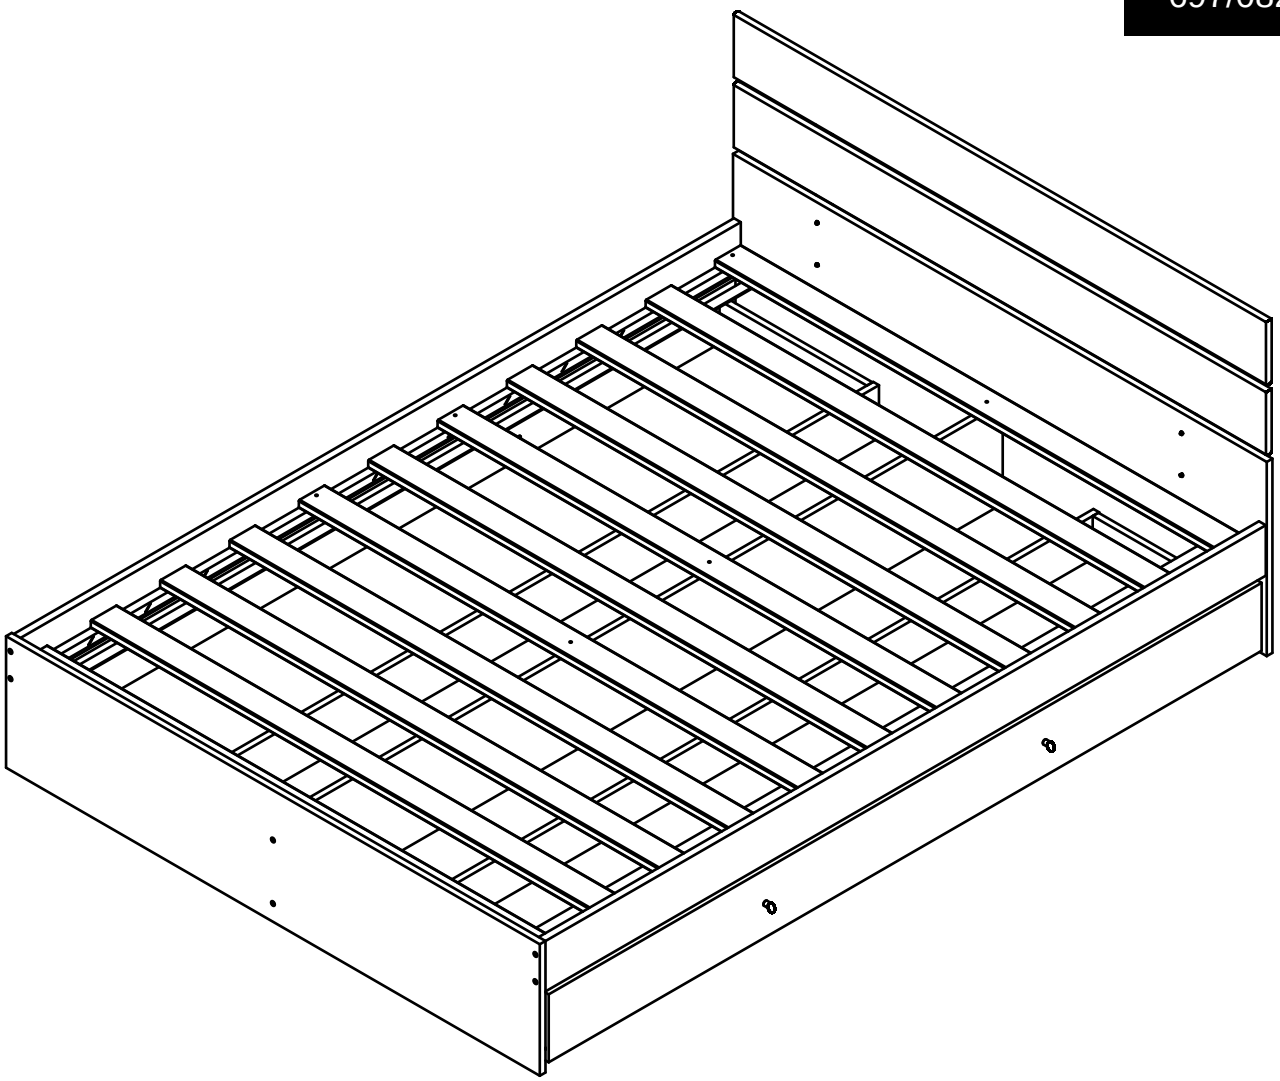

Dimensions
Width - 140.5cm
Length - 190cm
Height - 85cm

Dimensions
Width - 156cm
Length - 205cm
Height - 85cm

Issue 2 - 30/01/2014

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or
missing parts, call the Customer Helpline: **01242 621266**

Safety and Care Advice

Important–Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all ?ttings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its ?nal position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your ?oor.
- Parts of the assembly will be easier with **2 people.**



- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

- **Skin contact:** Remove contamination by washing with soap and water.This procedure should also be followed prior to eating and drinking.
- **Eye contact:** Rinse immediately with clean water for 15minutes and seek medical advice.
- **If swallowed:** Seek medical advice immediately.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screw son this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.








Note: This assembly instruction covers a number of different sizes of bed. Although your bed may appear different to the model shown the assembly procedure remains identical.

Components-Fittings


If you have any damaged or missing parts, call our Customer Helpline: 01242 621266


Please check you have all the ?ttings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more ?ttings may be supplied than are required.

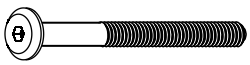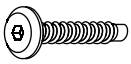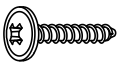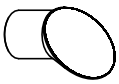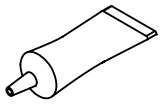
A  60mm Allen Bolt x 8	**B**  35mm CS Screw x 8	**C**  25mm Allen Screw x 4
D  4mm x 25mm Screw x 4	**E**  15mm Round Head screw x 28	**F**  CAM Peg x 20
G  12mm CAM Lock x 20	**H**  M6 Cross dowel x 8	**I**  Castor x 10
J  Silver Handle x 4	**K**  Small Metal Washer x 12	**L**  15ml Glue Tube x 1
M  Allen Key x1	**N**  Wooden dowel x 16	**O**  45mm Confirmat x 4
P  Self Adhesive Cover Cap x 2		

Tools required

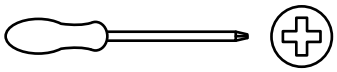
 Cross Headed Screwdriver

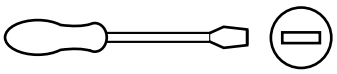 Flat Headed Screwdriver

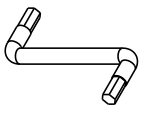
 Allen Key (Supplied)

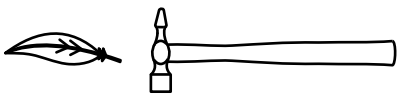 Small hammer

 Ruler/tape measure

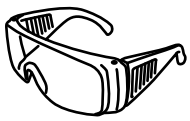 Eye protection (when using a hammer or glue)


Ruler - Use this ruler to help correctly identify the fixings



Components-Panels


Please check you have all the panels listed below

1 Side Rails x 2
2 Toe End Panel x 1
3 Head End Panel x 1
4 Headboard Struts x 2
5 Headboard Rails x 2
6 Centre Rail x 1
7 Roll of Slats x 1

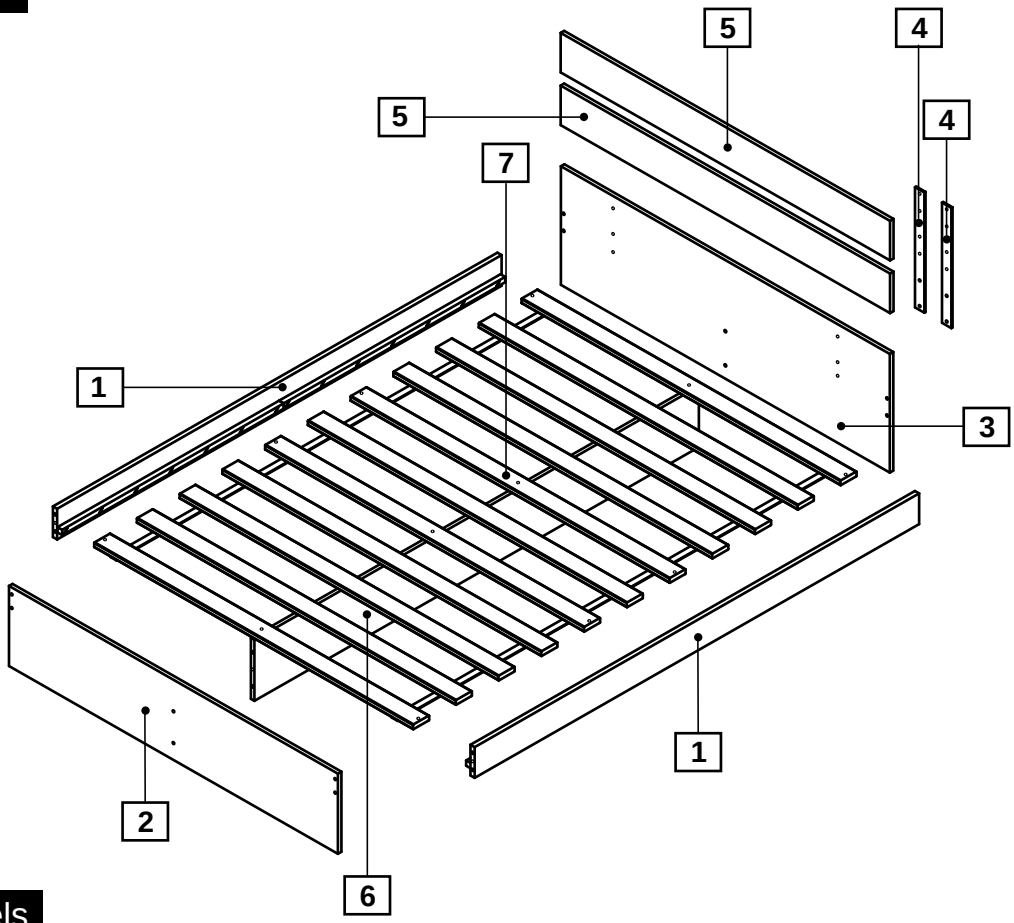

Underbed drawer Panels

8 Drawer Base x4
9 Drawer Side x4
10 Support Rails x4
11 Centre Support Rail x1
12 Drawer Back x2
13 Drawer Front x2

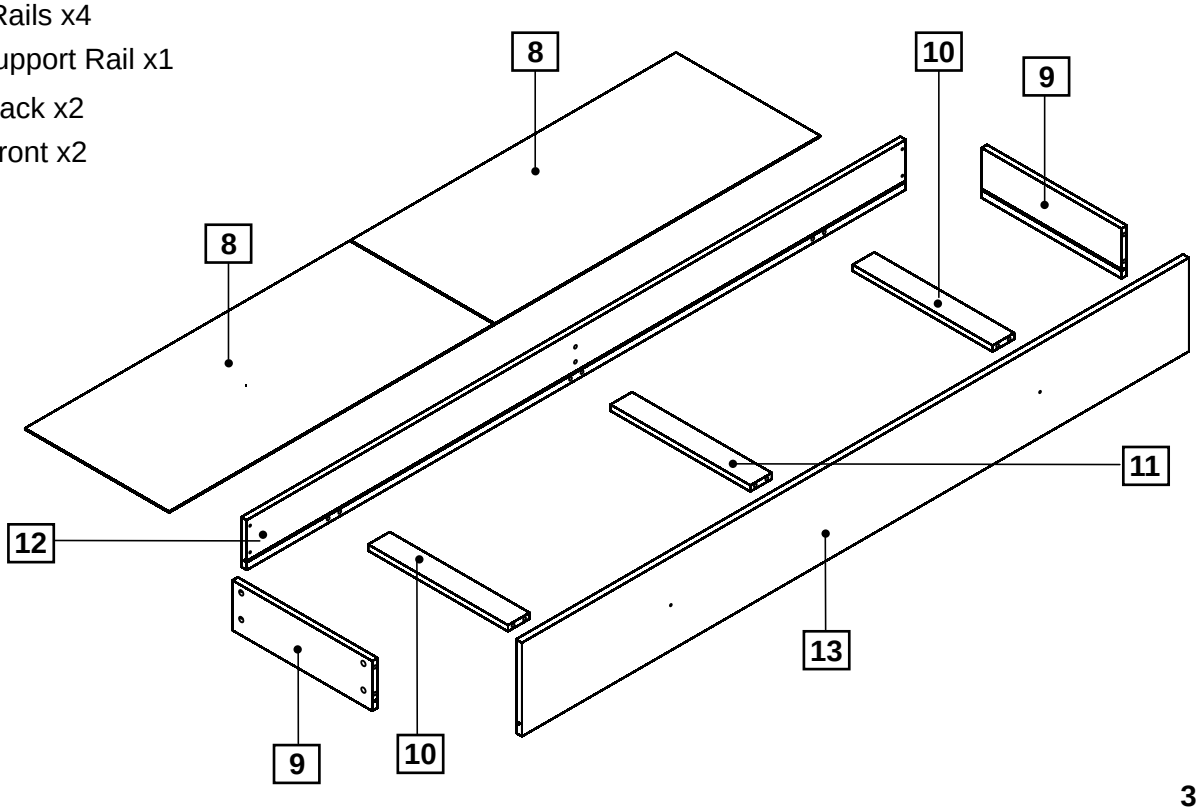



Assembly Instructions

Step **1**


Fitting the side rails 1 and centre rail 6 to the head end panel 3


Position the side rails as shown and fit 4 x M6 Cross dowels (H) in to the side rails. Note that the slot must be aligned as shown in the diagram.
Next fit the M6 x 60 bolts (A) through the head end and in to the ends of the side rails. Use the 4mm Allen key to tighten the bolts in to the cross dowels.
Next position the centre rail 6 as shown and fix to the head end panel using 2 x 45mm Confirmat screws (O)

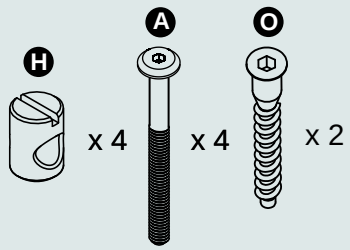

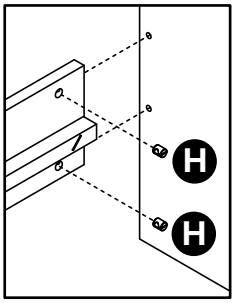

Note the correct alignment of the Cross Dowel slots

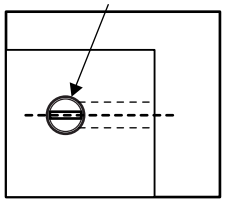

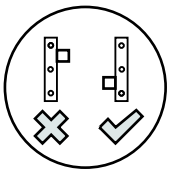

Please note the postition of the battens on the side rails


Step **2**

Fitting the side rails 1 and centre rail 6 to the toe end panel 2

Position the toe end as shown and fit 4 x M6 Cross dowels (H) in to the side rails. Note that the slot must be aligned as shown in the diagram.

Next fit the M6 x 60 bolts (A) through the toe end and in to the ends of the side rails. Use the 4mm Allen key to tighten the bolts in to the cross dowels.

Next fit the centre rail 6 to the toe end panel 2 using 2 x 45mm Confirmat screws

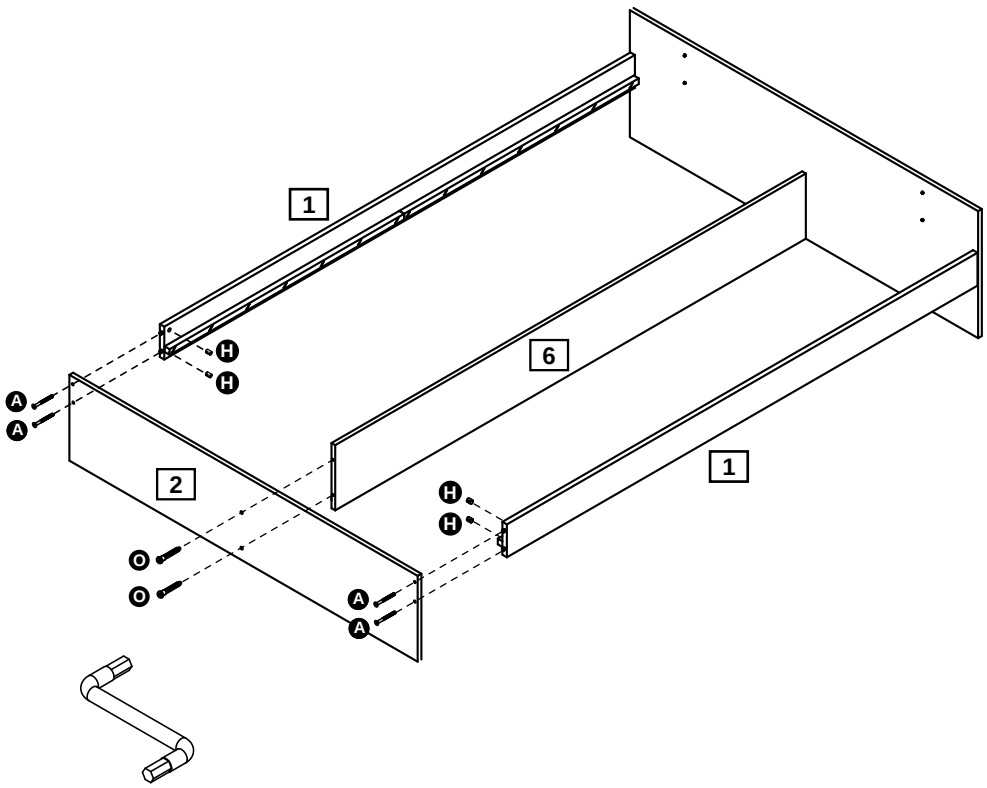


Step **3**

Fitting the headboard struts 4 to the head board rails 5

Position the headboard rails and headboard struts as shown.


Fix the struts to the rails using 8 x 15mm round head screws E

Note that the pilot holes on the headboard rails are offset - see diagram below.

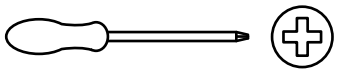



Note offset pilot holes in the headboard rails

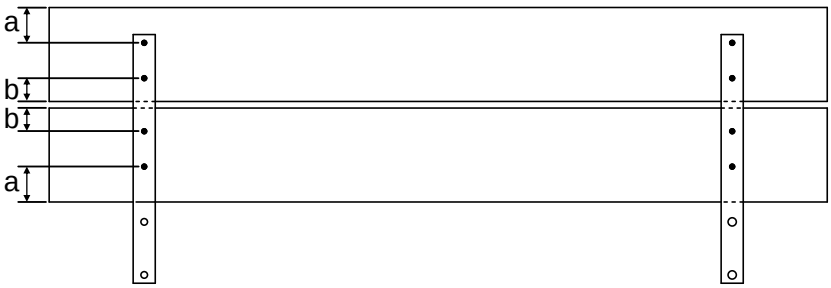



Step **4**

Fitting the headboard assembly to the head end panel 3

Fix the assembled headboard on to the back of the head end panel using 4 x 25mm Allen screws C and 4 x metal washers K

Note that there are 6 holes in the head end panel. Please use the top 4 holes to fit the struts as shown in the detail view.

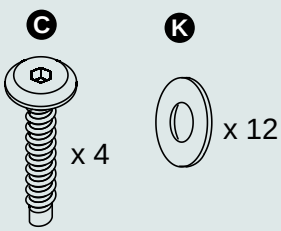

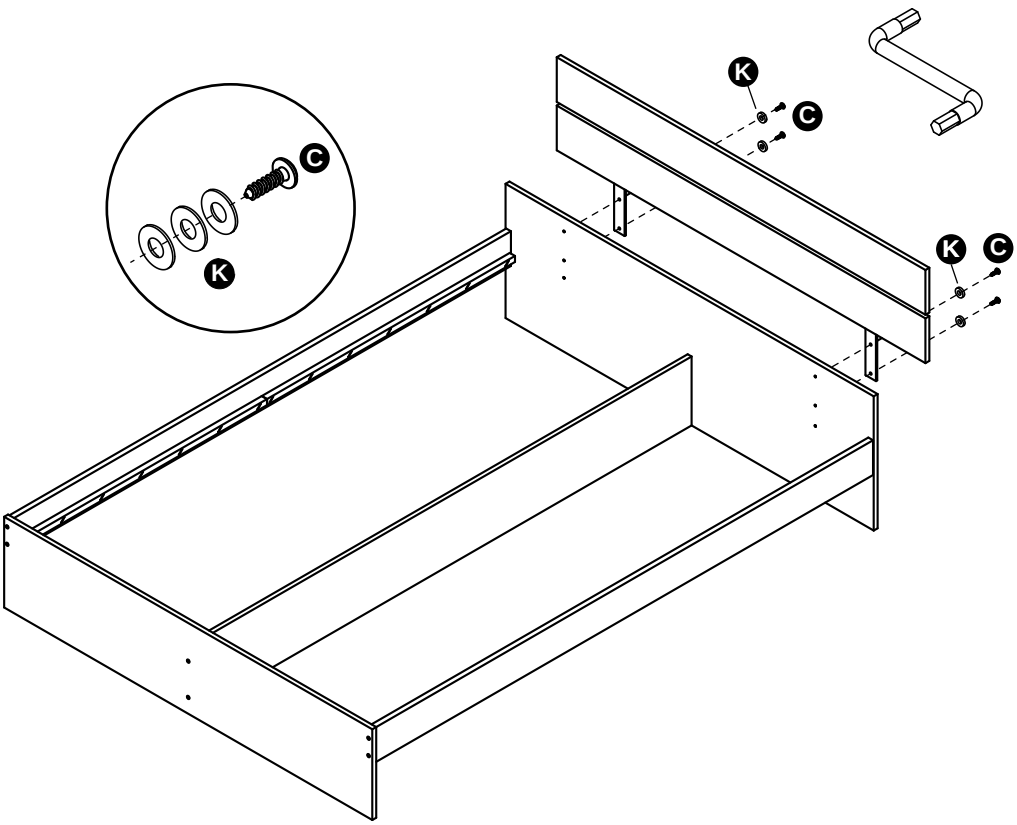

Assembly Instructions


Step **5**


Fitting the roll of slats 7 to the side rails.

Open the roll of slats and lay them on the side rails as shown. Pull the end slats out so that they touch the head end panel and the toe end panel. Secure each corner using 4 x 35mm screw

The side rails may be slightly bowed out. If so push them in on both sides before fitting the last 4 x 35mm screw



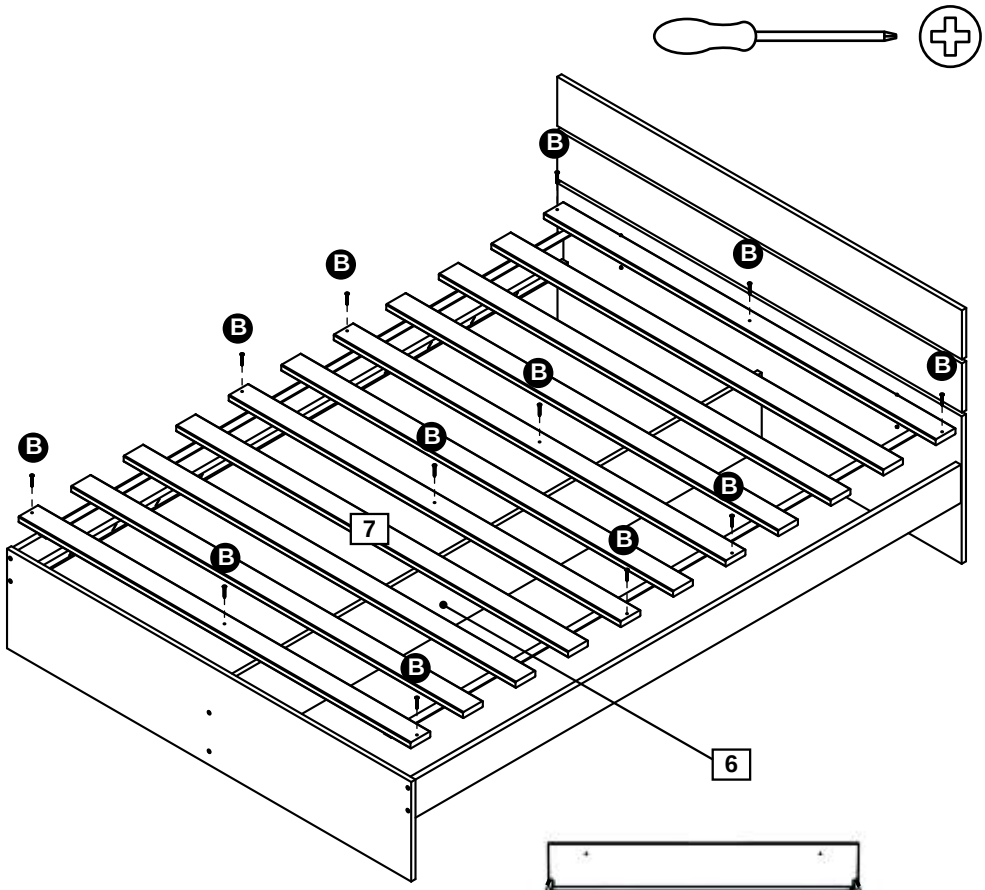

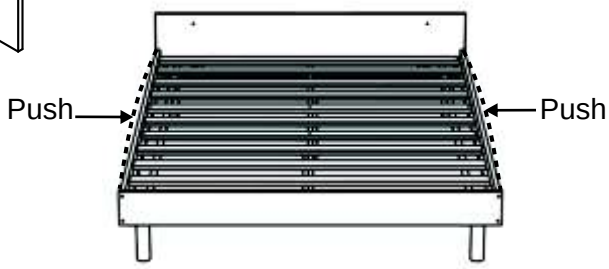



Step **6**


Fitting the wooden dowels N to the support rails 10 and the CAM Lock G to the Centre Support Rail 11 as shown.

Put a small amount of glue in to the holes and gently tap the wooden dowels in to the support rails as shown.


Wipe off any excess glue with a damp cloth

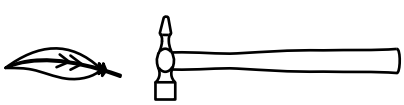


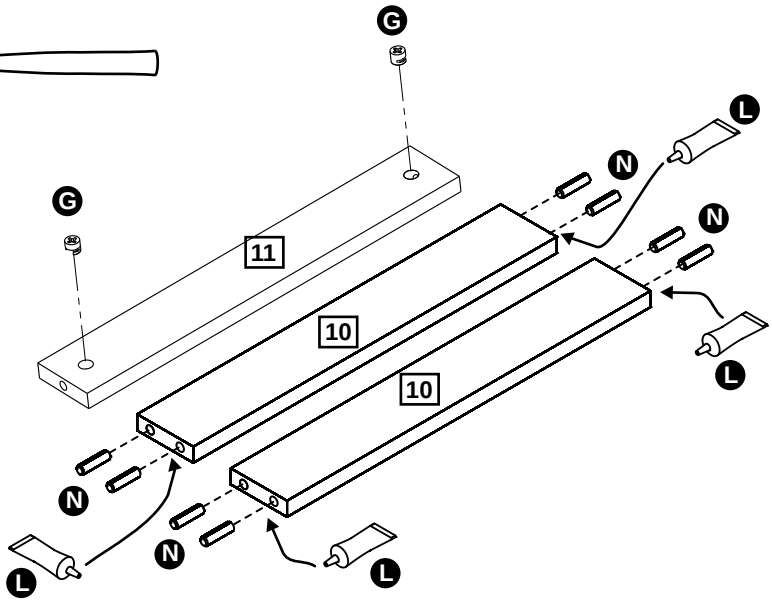

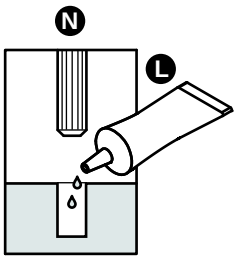

Glue the dowels in place

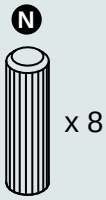

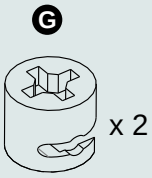


Assembly Instructions


Step 7

Fitting the castors Ⓘ to the support rails 10 and 11

Position the support rails 10 and the castors Ⓘ as shown.

Using the round head screws Ⓔ fix the castors Ⓘ to the support rails 10 as shown.

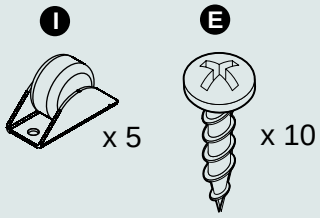


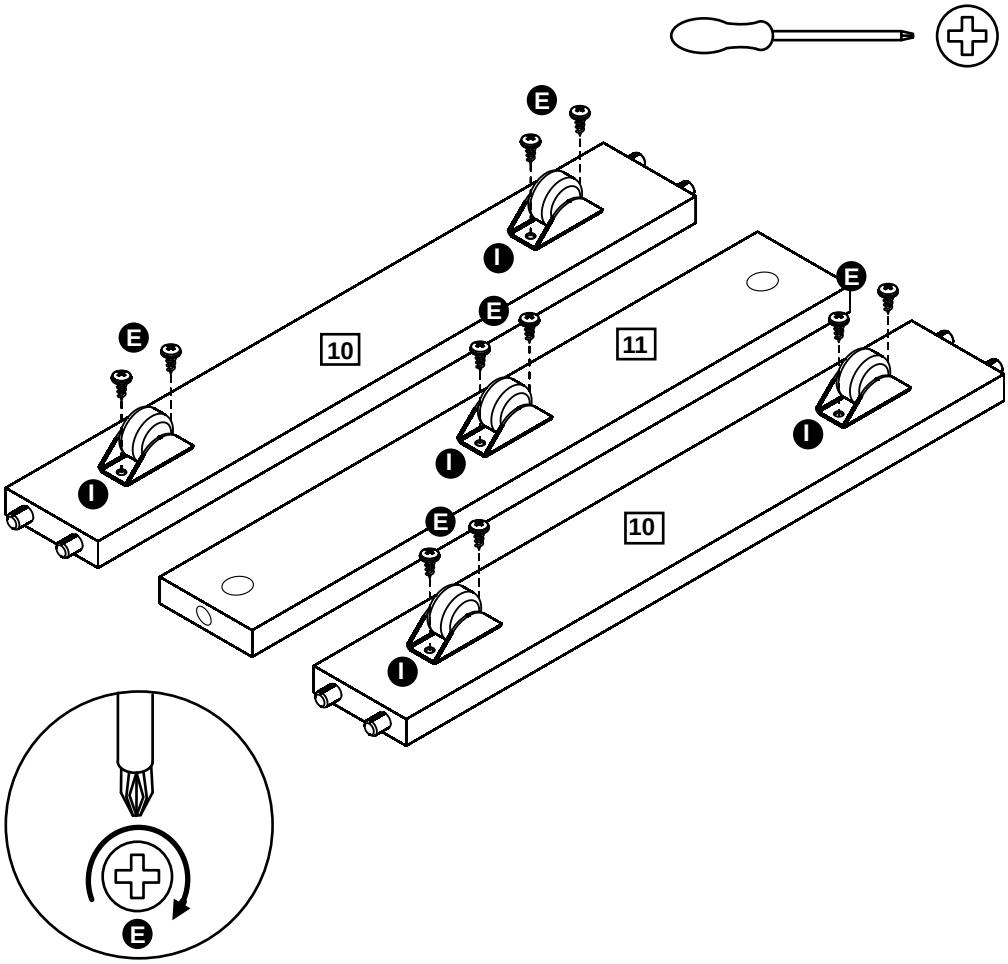


Step 8

Fitting the cam pegs Ⓕ to the drawer back 12 and front. 13

Position the drawer front 13 and back 12 as shown. Attach the cam pegs Ⓕ to the drawer back 12 and drawer front 13

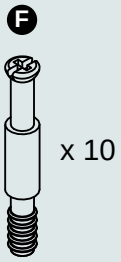

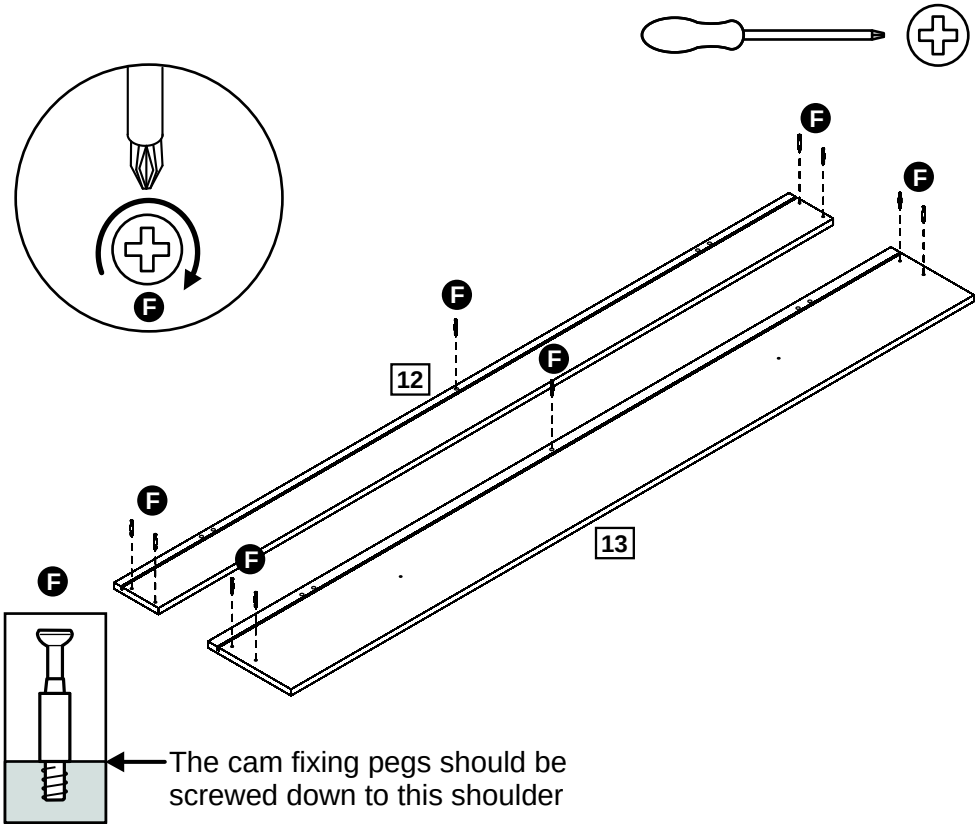

Assembly Instructions

Step **9**


Fitting the support rails 10 + 11 and drawer sides 9 to the drawer front 12

Position the drawer sides 9 and the support rails 10 + 11 as shown. Put a small amount of glue into the holes and gently tap the support rails 10 into the drawer front 12 as shown.


Wipe off any excess glue with damp cloth.

Attach the cam lock G fix the drawer sides 9 to the drawer front 13 and the Centre Support Rail 11 as shown.

Do not assemble the drawers if the dowels are not glued.

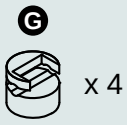

x 4

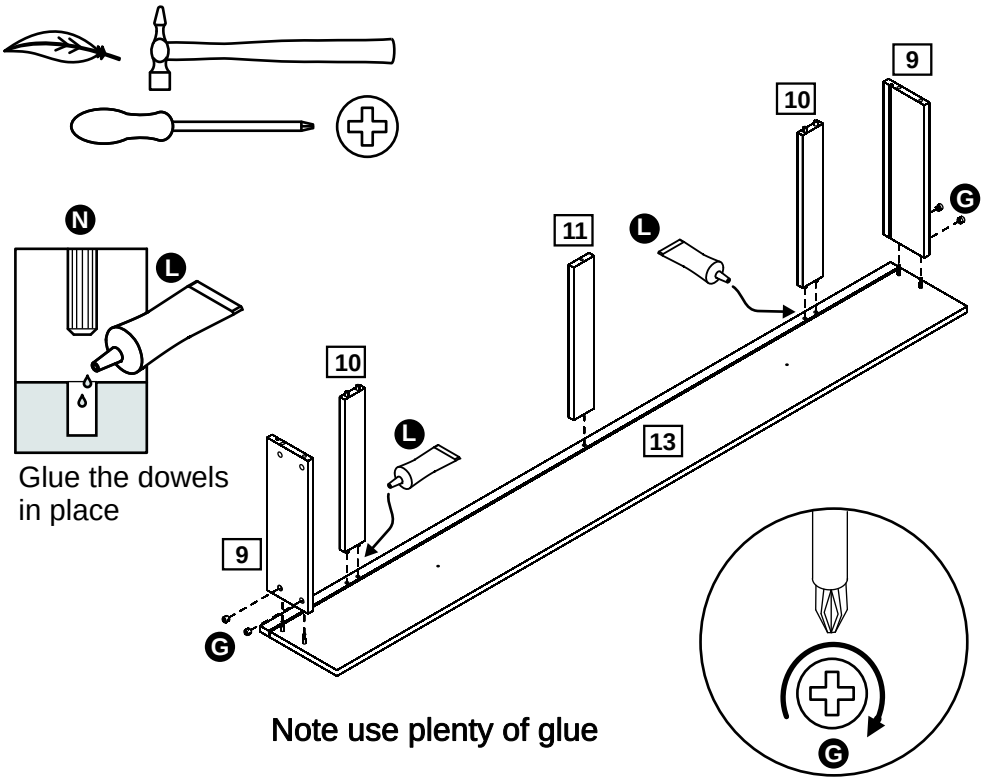

Glue the dowels in place

Note use plenty of glue

Step **10**

Fitting the drawer bases 8 and the drawer back 12

Position the drawers as shown. Put a small amount of glue into the holes and gently tap the drawer back 12 to the support rails as shown.


Wipe off any excess of glue with damp cloth.

Slide the drawer bases in to the drawer sides 9 and drawer front 13

Attach the cam lock G fix the drawer back 12 to the drawer sides. 9




x 4

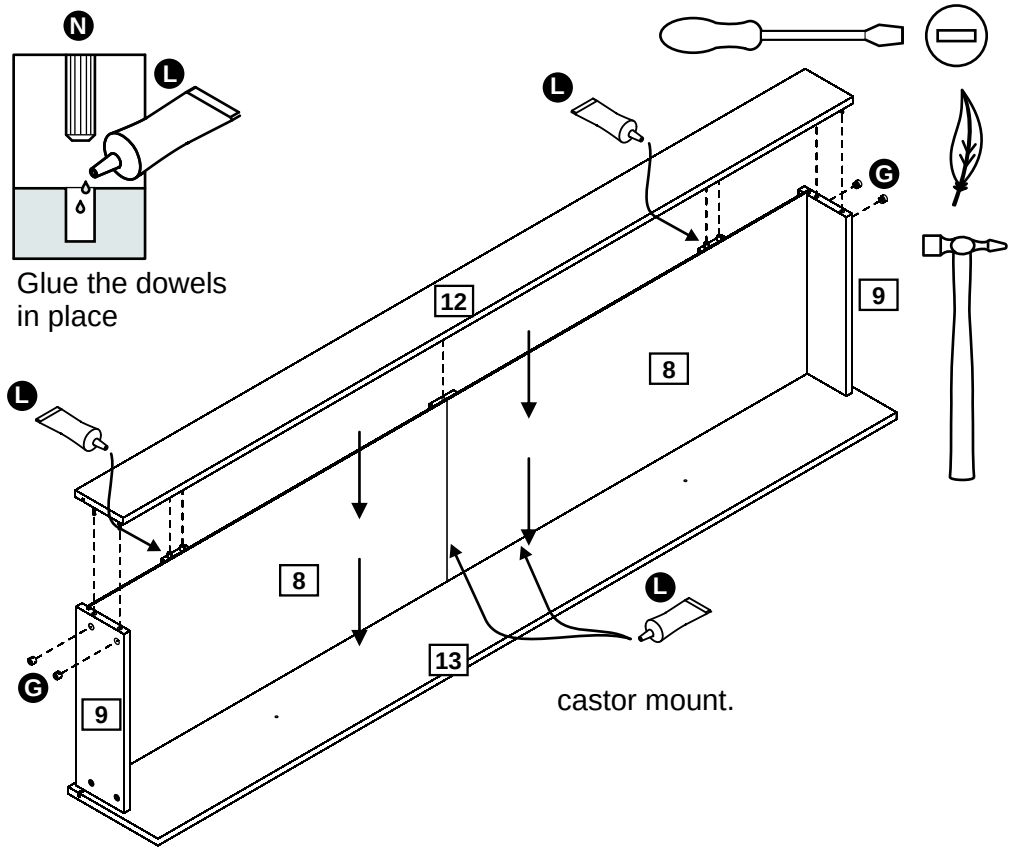

Glue the dowels in place

castor mount.

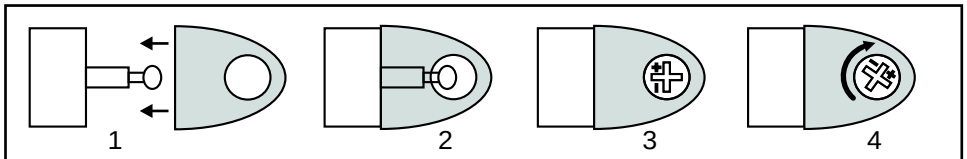


CAM FIXING STEPS


Step **11**

Fitting the handles J to the drawer front 13

Position the drawer as shown. Use 2 x screw D to fix the silver handle J to the drawer front as shown.

Repeat the above for the second drawer unit

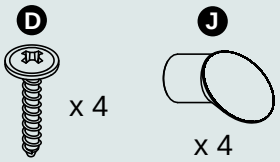

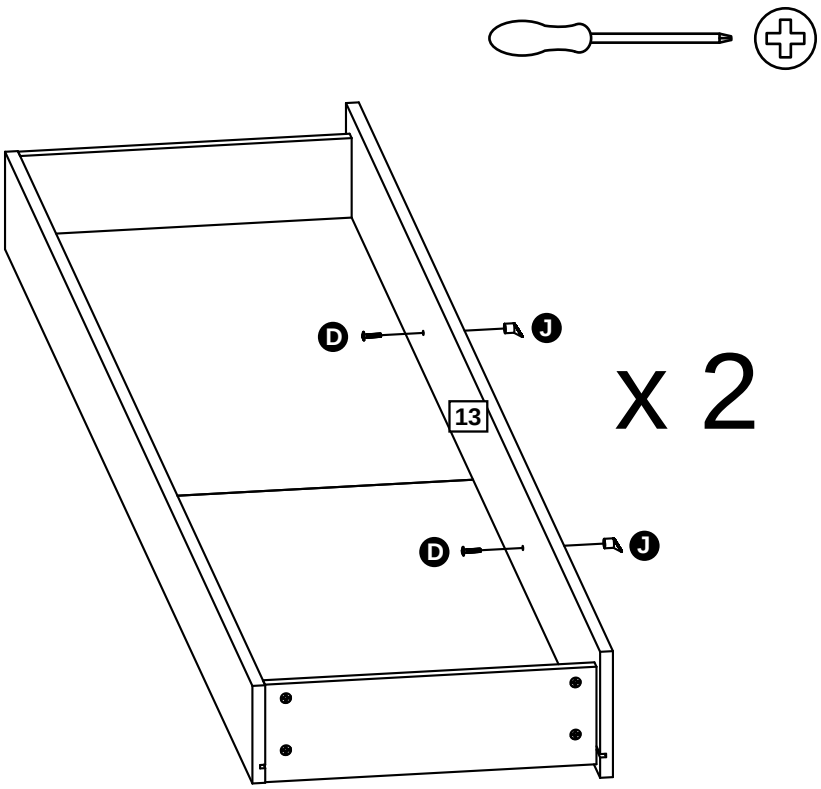


Step **12**


Fitting the screw cover caps and the underbed drawers.

Fit 2 x self adhesive cover caps P to the heads of the centre rail screws as shown.

Finally push the drawer units under the side rails.

The assembly is now complete.

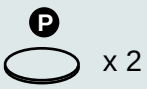

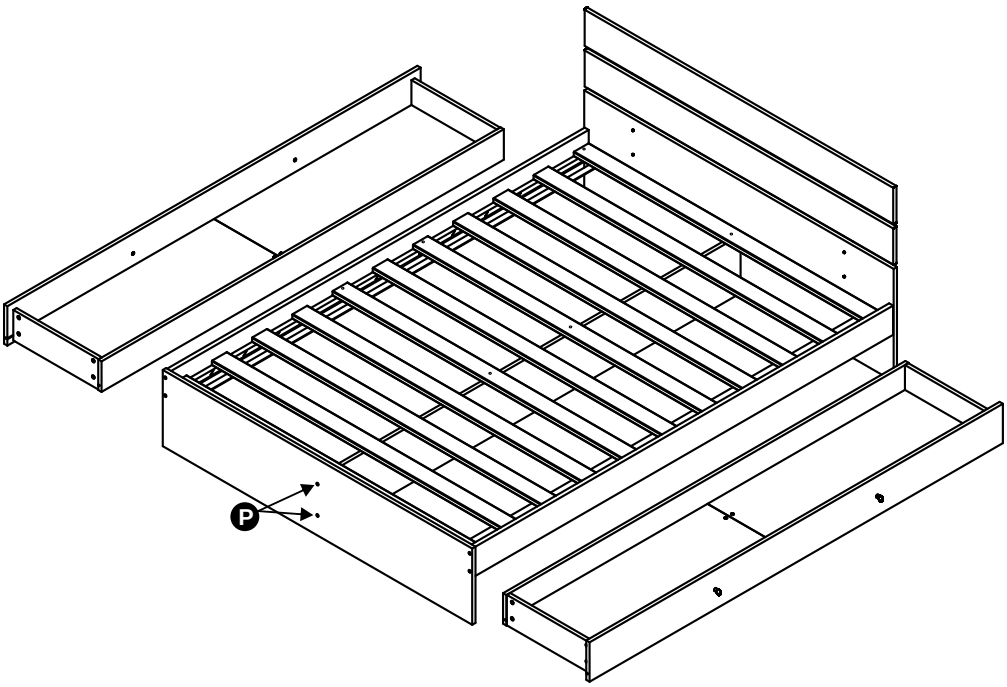

If you need help or have damaged or missing parts, call our Customer Helpline: 01242 621928