# Sparkle - 5 Drawer Chest

## Assembly Instructions - Please keep for future reference

412/1961

395/7655

402/3124



| Dimensions |
| --- |
| Width - 75.1cm |
| Depth - 39.6cm |
| Height - 90.1cm |

MADE IN BRITAIN

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Issue 1 - 03/06/15

# Safety and Care Advice

## **Important -** Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 31kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.

• Dispose of all packaging carefully and responsibly.

## Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

***Note:*** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*


## Please check you have all the panels listed below

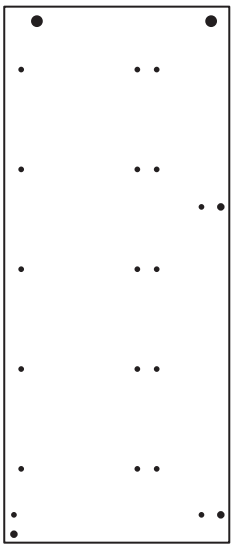

**1** Left Side *(DF3867)*
(88.6 x 37.2cm)

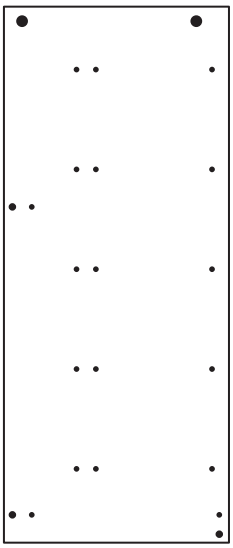


**2** Right Side *(DF3868)*
(88.6 x 37.2cm)

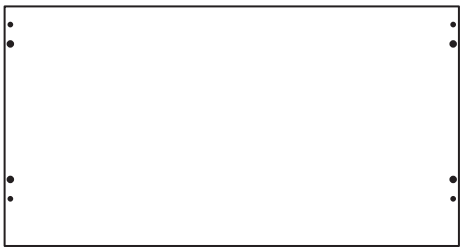

**3** Top *(DF3812)*
(75.1 x 39.6cm)



**4** Rail *(DF3813)*
(71.7 x 6cm) x 3



**5** Drawer Front *(DF3814)*
(73.7 x 16.2cm) x 5



**6** Left Drawer Side *(W370-124LH)*
(37 x 12.4cm) x 5




**7** Right Drawer Side *(W370-124RH)*
(37 x 12.4cm) x 5



**8** Drawer Back *(W684-124)*
(68.4 x 12.4cm) x 5



**9** Drawer Base *(T695-367)*
(69.5 x 36.7cm) x 5




**10** Back *(X861-743)*
(86.1 x 74.3cm)

# Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

## Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

**A** 


Metal dowel *(F901)* x 20

**B** 


Large locking nut *(F900)* x 10

**C** 

Small locking nut *(F3)* x 10

**D** 

Wooden dowel *(F22)* x 10

**E** 

Nail *(F51)* x 25

**F** 

Knock-in Peg *(F171GY)* x 20

**G** 


25mm Screw *(F50)* x 15

**H** 

9mm Screw *(F74)* x 10

**I** 


9mm Screw (*F73)* x 20

**J** 

Plastic Nail *(F91)* x 4

**K** 


Wedgefix *(F639)* x 20

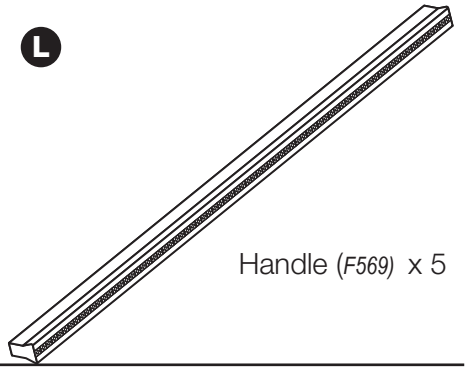**L** 

Handle (*F569)* x 5


**M** 

Drawer runner *(F1004)* x 10

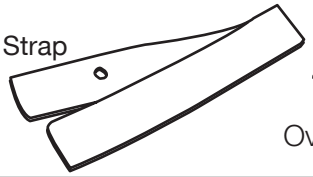**N** Strap  Screw  Washer x 2 

Overbalance protector kit *(F269)* x 1

## Tools required

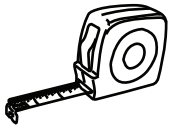

Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection (when using a hammer or drill)



Electric drill (only use when drilling into walls)

## Ruler - Use this ruler to help correctly identify the screws

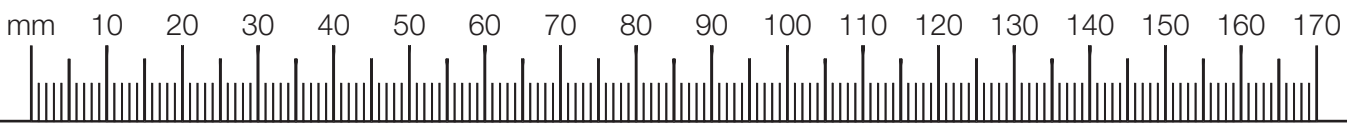

# Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

## Step 1

**Prepare the 5 drawer fronts**

Screw 2 metal dowels A into each of the drawer fronts 5.

***Note:*** Tighten the metal dowels up fully against the panels.

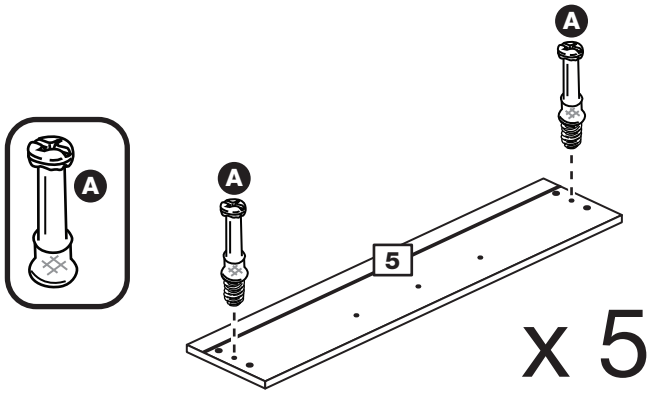



## Step 2

**Prepare the drawer sides**

Insert a small locking nut C into the hole shown on the left drawer side 6 and the right drawer side 7.

***Note:*** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

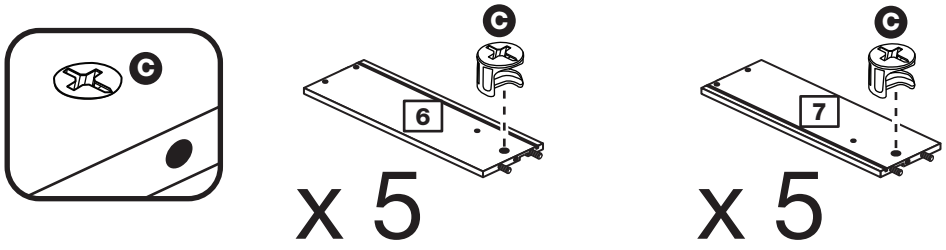



## Step 3

**Attach the drawer sides to the drawer fronts**

Push the left drawer sides 6 and right drawer sides 7 onto the back of the drawer fronts 5.

Turn the small locking nuts C on the left drawer side 6 and right drawer side 7.


***Note:*** Turn the locking nuts C clockwise to secure panels - more than 1/2 a turn.

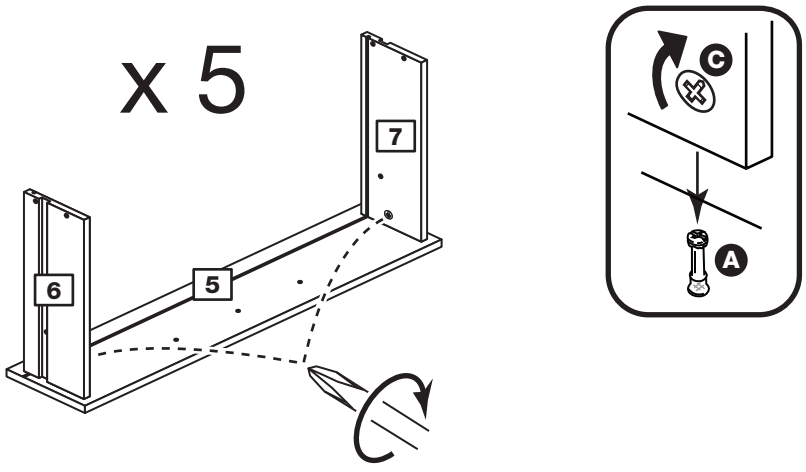

## Step 3

**Fit the drawer base**

Slide the drawer base 9 down the grooves in the drawer sides 6 and 7 and down into the groove in the drawer front 5.

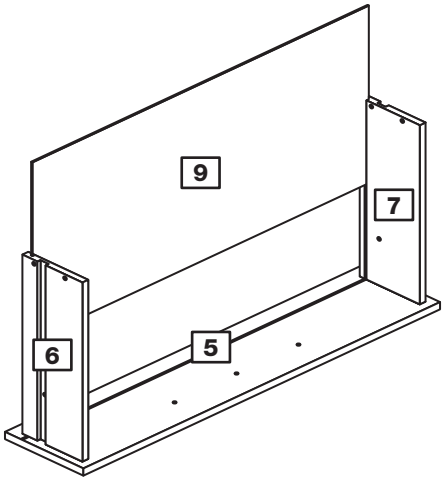



x 5

## Step 5

**Fit the drawer back**

Fit the drawer back 8 between the drawer sides 6 and 7. Make sure that the drawer base 9 fits into the groove in the drawer back 8.

Hold the drawer back 8 in position and tap the knock-in pegs F through the holes in the drawer sides 6 and 7.

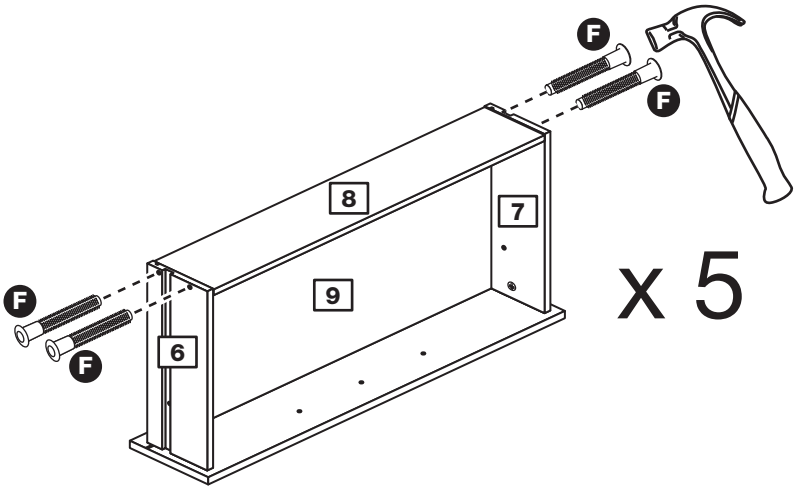



x 5

## Step 6

**Attach the handles**

Attach a handle L to each of the drawer fronts 5 using screws G.

***Note: Do not overtighten the screws.***

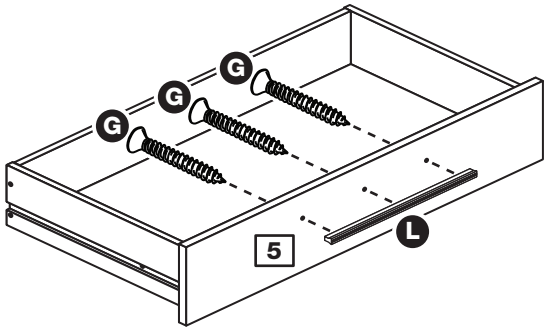



x 5


## Step 7

**Fit the wedgefixes**

Turn the 5 drawer assemblies over and slide 2 wedgefixes K into the front and back grooves, as shown, and tighten up the screws.

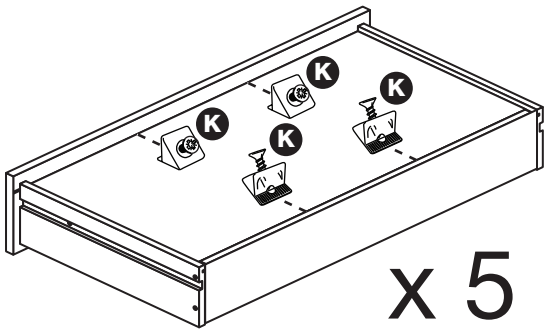


x 5

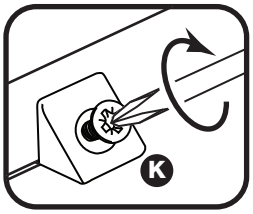

## Step 8

**Prepare the left side**

**a:** Place 5 runners (M) on the left side [1] as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (I).

**b:** Slide the runner (M) back the other way and fit the 2nd screw (I) into the corresponding hole in the left side [1].


**c:** Screw 3 metal dowels (A) into the left side [1].

Insert 2 large locking nuts (B) into the left side [1].


***Note:*** The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

Tap 2 wooden dowels (D) into the left side [1].


***Note:*** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

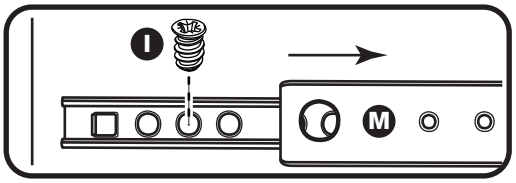



**a:**

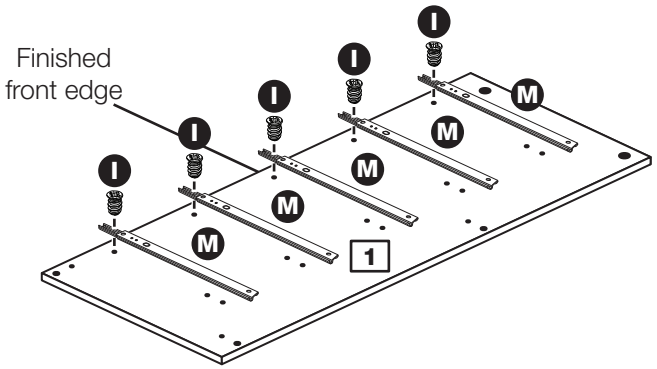


**b:**

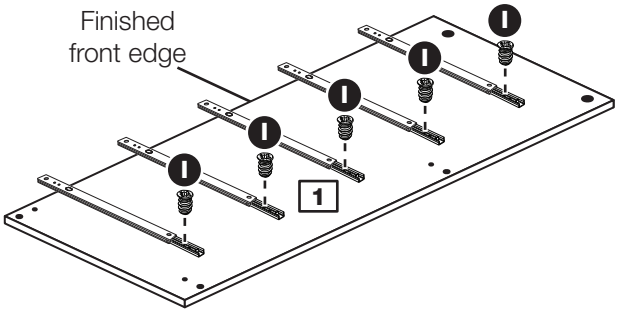


**c:**

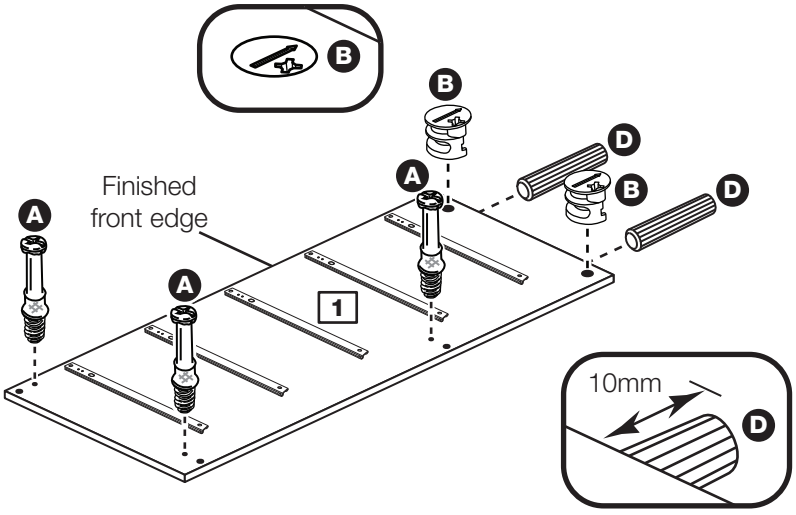

## Step 9

**Prepare the right side**


**a:** Place 5 runners M on the right side 2 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw I.

**b:** Slide the runner M back the other way and fit the 2nd screw I into the corresponding hole in the right side 2.


**c:** Screw 3 metal dowels A into the right side 2.

Insert 2 large locking nuts B into the right side 2.


Tap 2 wooden dowels D into the right side 2.

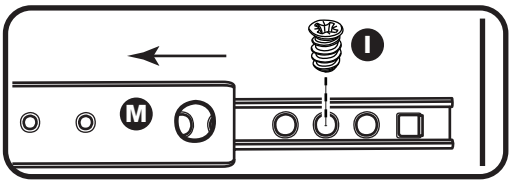



a:

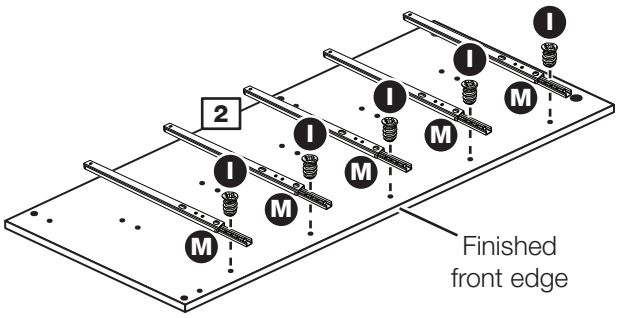


b:

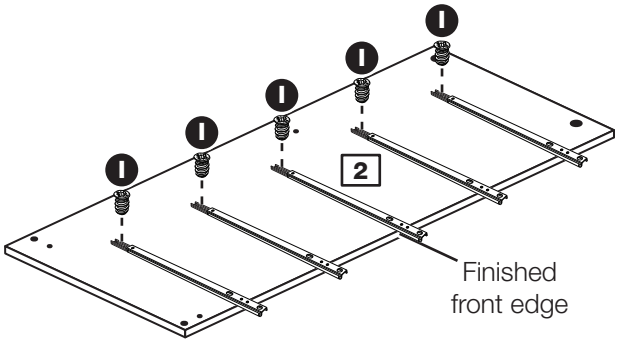


c:

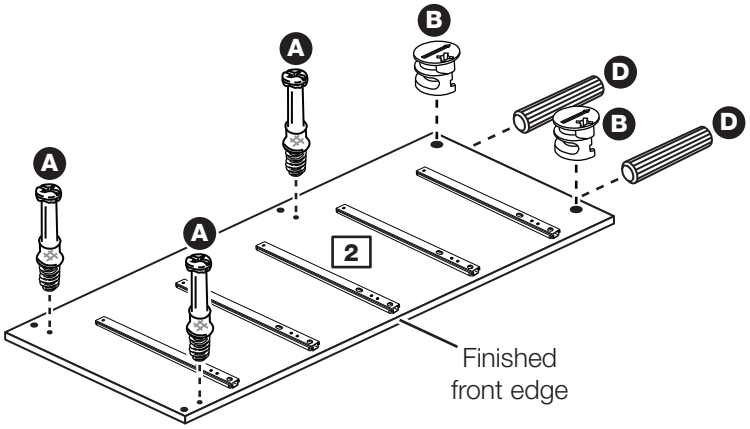


## Step 10

**Prepare the 3 rails**

Insert 2 large locking nuts B into each of 3 the rails 4.

Tap 2 wooden dowels D into each of 3 the rails 4.

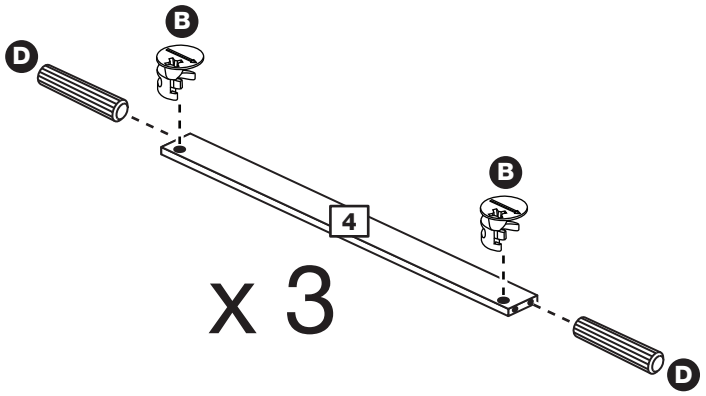



## Step 11

**Fit the the 3 rails to the right side**

Push the 3 rails 4 onto the right side 2.

Use a screwdriver to tighten the large locking nut B fitted to each of the rails 4.

***Note:*** Turn the large locking nuts B as far as they will go - more than 1/2 a turn.

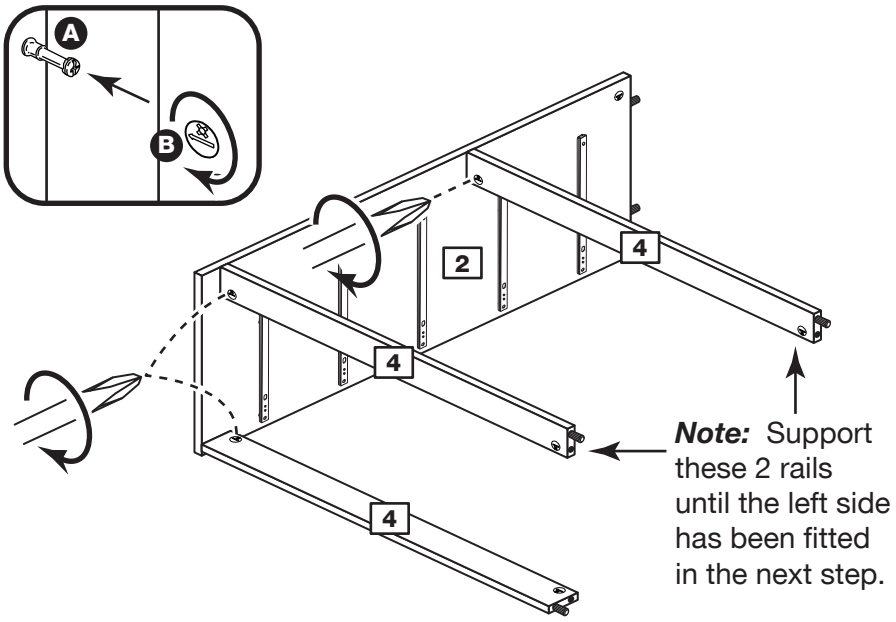



## Step 12

**Fit the left side**

Push the left side 1 onto the rails 4.


Use a screwdriver to tighten the large locking nut B fitted to each of the rails 4.

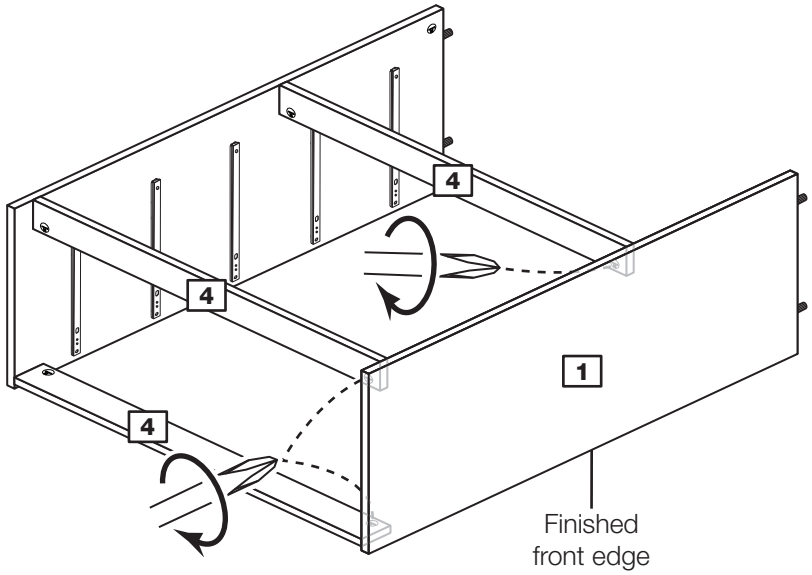

## Step 13

**Prepare the top**

Screw 4 metal dowels (A) into the top [3].

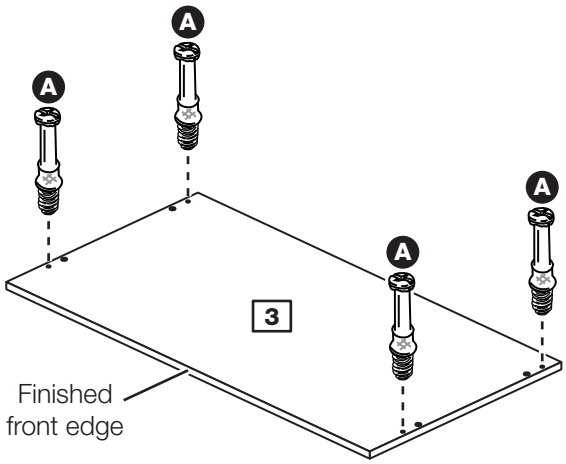



## Step 14

**Fit the top**

Push the top [3] onto the assembly.


Use a screwdriver to tighten the 2 large locking nuts (B) fitted to each of the sides [1] and [2].

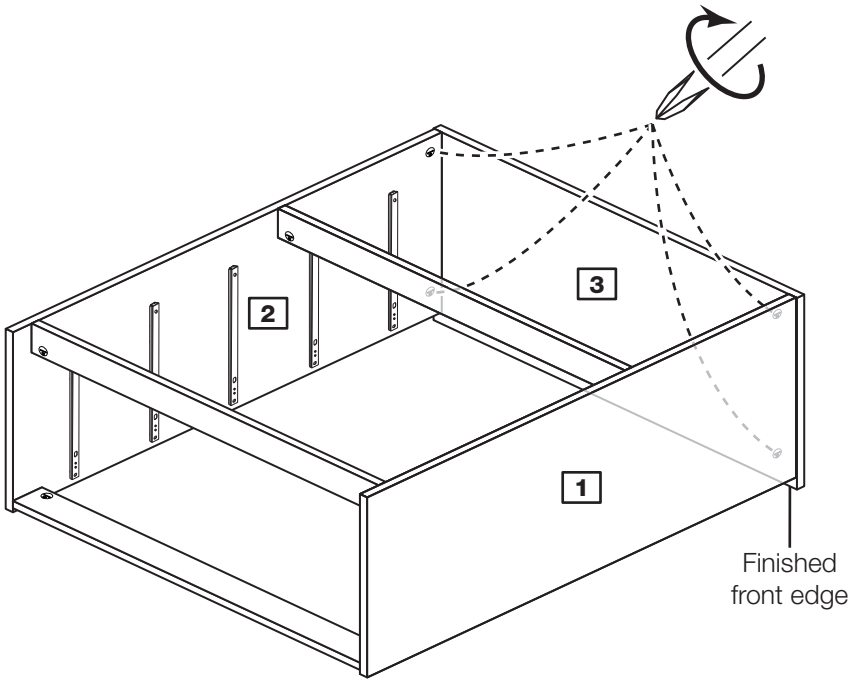


## Step 15

**Fit the 4 plastic nails**

Tap 2 plastic nails (J) into the bottom edge of each of the sides [1] and [2].

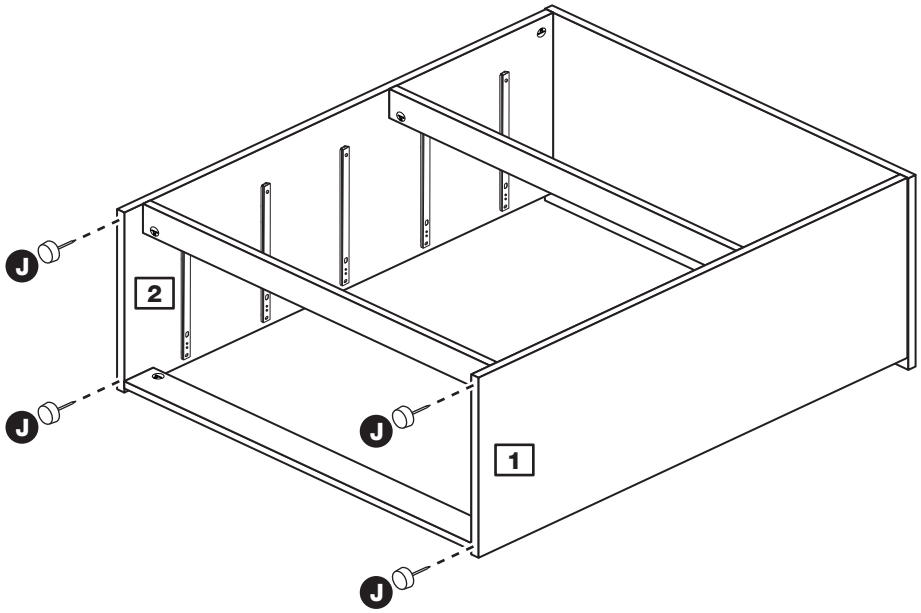

# Assembly Instructions

## Step 16

**Fit the back**

**a:** Square up the unit by making sure that measurement **x to x equals y to y.**


**b:** Place the back 10 onto the unit.

Nail E around the outside edges of the back 10.

***Note:*** Nails should be spaced about 150mm apart.

**Carefully stand the unit up for the next step.**

**a:** The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

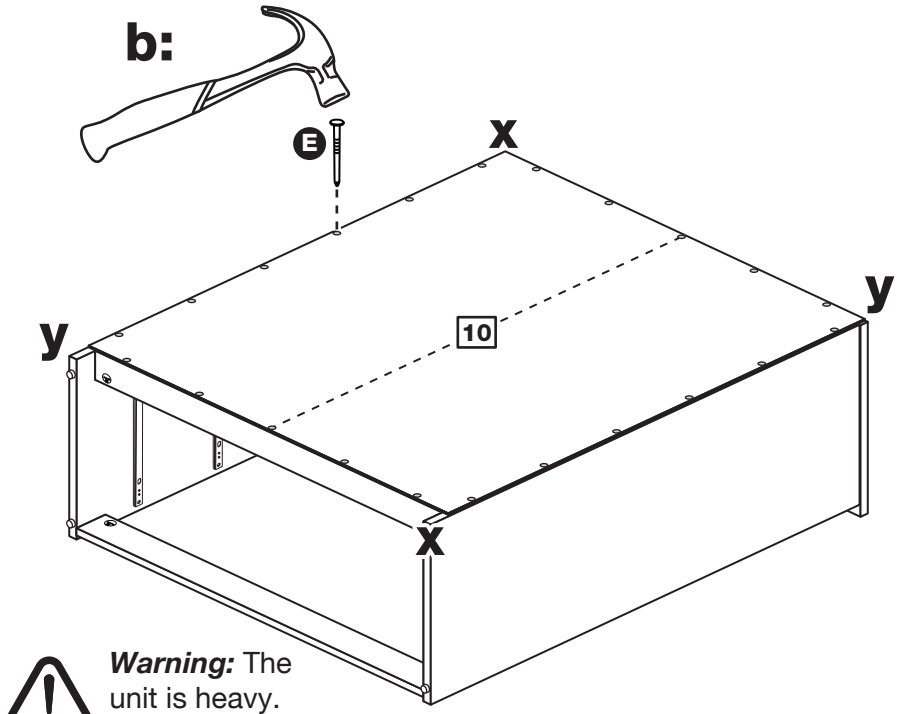


***Warning:*** The unit is heavy. Lift with care.


## Step 17


**Fit the drawers**

Starting with the bottom drawer, slide both the runners M forward and locate the drawer sides 6 and 7 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners M.

Working from the inside of the drawer, insert 2 screws H through the drawer sides and out into the 2nd threaded hole in the runner.

***Note:*** Do not overtighten the screws H.
If they catch on the runner you may need to loosen them slightly.

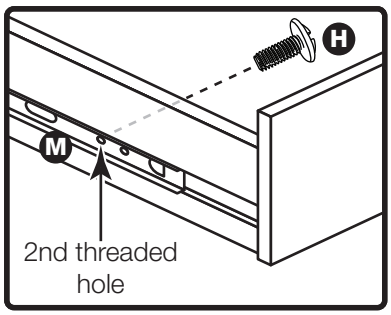
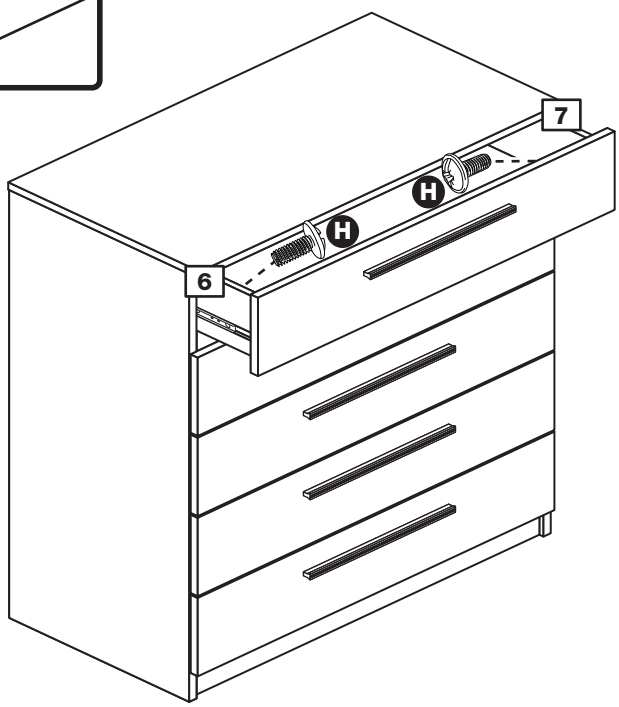
## Step 18


**Fit the overbalance protector kit**


To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit (N) to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

***Note:*** Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

**Assembly is complete**

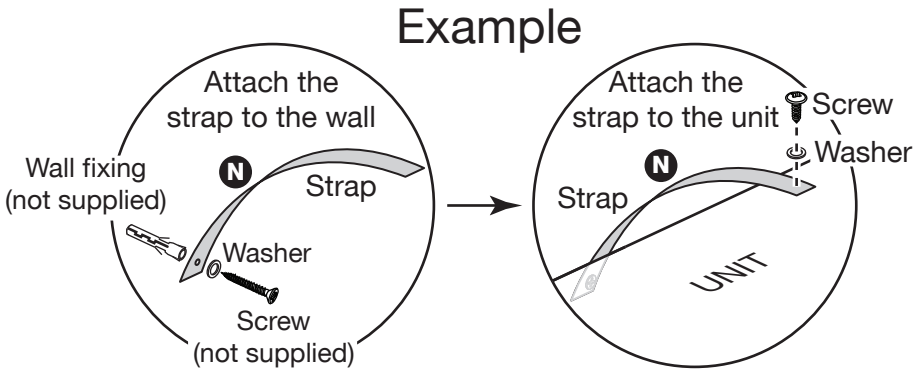

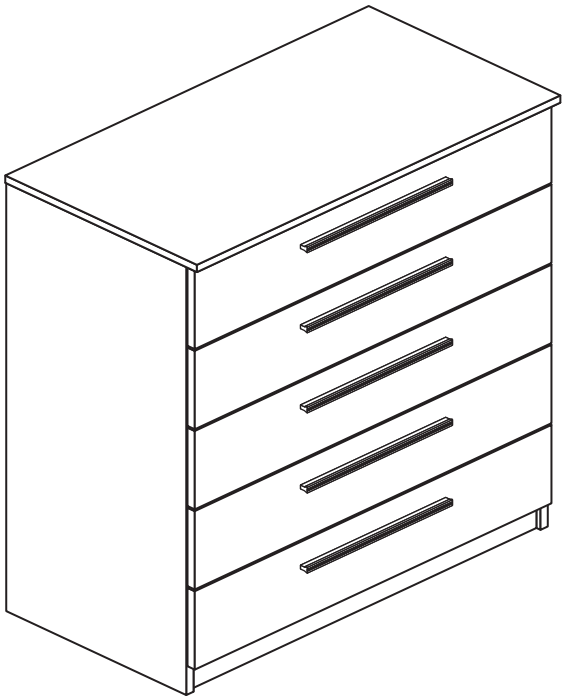If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**
*and quote the reference numbers on the component pages.*
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW