
Canterbury 5+2 CHEST

Assembly Instructions - Please keep for future reference

517/0571

509/4334

476/9086

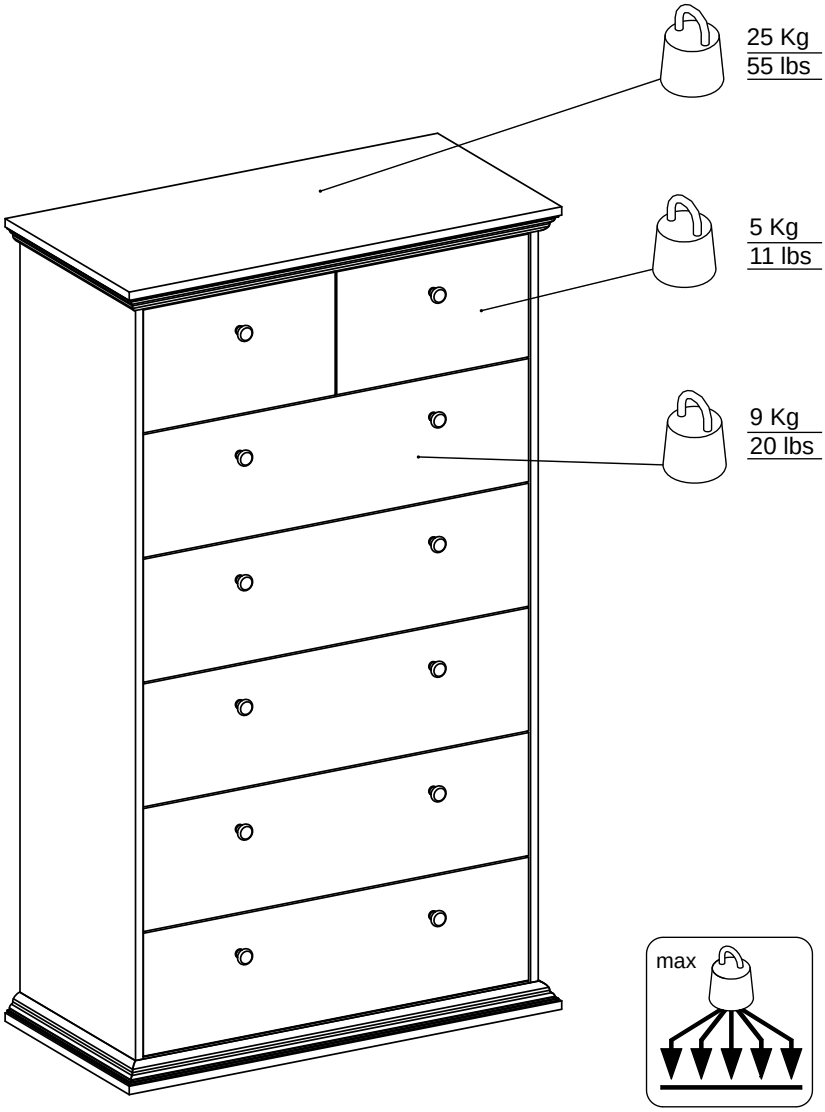

Dimensions

Width - 84.3cm
Depth - 41.9cm
Height - 144.5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**

Argos = 0845 6400800

71932 Version E Date 10/02/2016

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to lay out the parts before starting.

• During assembly, do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drivers for inserting screws, as this could damage the unit. Only use hand screw drivers.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Safety


• The provided tip-over restraint must be installed in order to optimize user safety.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0845 6400800**


Please check you have all the panels listed below




A 00489 Left drawer side
(34.5 x 14cm) x7




B 00488 Right drawer side
(34.5 x 14cm) x7




C 02743 Drawer back
(32.1 x 14cm) x2




D 02744 Drawer back
(70.6 x 14cm) x5

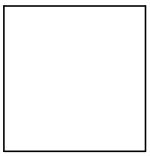

P 06056 Drawer bottom
(33.3 x 34.2cm) x2



R 06057 Drawer bottom
(71.8 x 34.2cm) x5

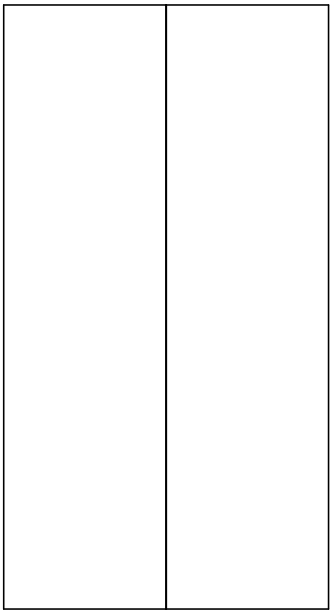

S 09783 Back panel
(142.1 x 76.4cm)




K 76425 Profile side
(41.5 x 2.5cm) x2




M 76426 Profile side
(41.5 x 2.5cm) x2




N 76315 Profile front
(83.5 x 2.5 cm) x2




O 76316 Base rail
(75.4 x 3.1 cm)




EE Drawer front
(75.1 x 22.1cm) x5




EG
Drawer front, left
(37.4 x 22.1cm)




EF
Drawer front, right
(37.4 x 22.1cm)



G Divider panel
(25.6 x 35.2 cm)

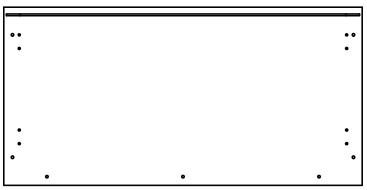

IA Bottom panel (84.3 x 41.9cm)












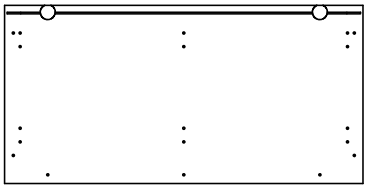


LA Top panel (84.3 x 41.9cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


10401  Panel clips x8	**11011**  Drawer support x14	**17414**  Tape dots x1
20203  Dowel (ø5 x 30mm) x17	**20228**  Drawer fastener x28	**22601**  Glue x1
25233  Flat head screw (ø3,5 x 15mm) x14	**25440**  Screw (ø4 x 13mm) x15	**26020**  Flat head screw (ø5,8 x 9mm) x30
26033  Flat head screw (ø6,3 x 27mm) x7	**26221**  Machine screw (M4 x 15mm) x28	**26232**  Machine screw (M4 x 23mm) x12
31513  Cam bolt x24	**31687**  Cam x24	**33204**  Wedges x4
63008  Floor glider x4	**81040**  Handle x12	**94009**  Strap x2


41435 
Drawer runner x14


10510 
Drawer bottom support x5


94066 
Stabilizer x1


Tools required


Cross head screwdriver (medium & large)



Wooden block


Hammer



Flathead screwdriver (medium)


Eye protection (when using a hammer or glue)


Ruler

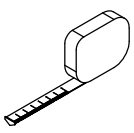
Tape measure

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Insert cam bolts

Insert cam bolts **31513** into the holes on top and bottom panel **LA** and **IA**. Also insert cam bolts in center holes of the top panel **LA**. See detail drawing.

Cam bolt must be screwed flush down.

Fittings you will need for this step:

Cam bolt
 # 31513 X10

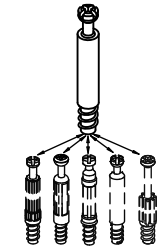

Step 2

Insert dowles

Insert dowels **20203** into outer holes on the ends of side panel **FY** and divider panel **G**.

Place cam **31687** into the holes on top of side panel **FY** and divider panel **G**.
Arrow facing the edge of the panel.


Fittings you will need for this step:



Cam
 # 31687 X10



Dowel
 # 20203 X10

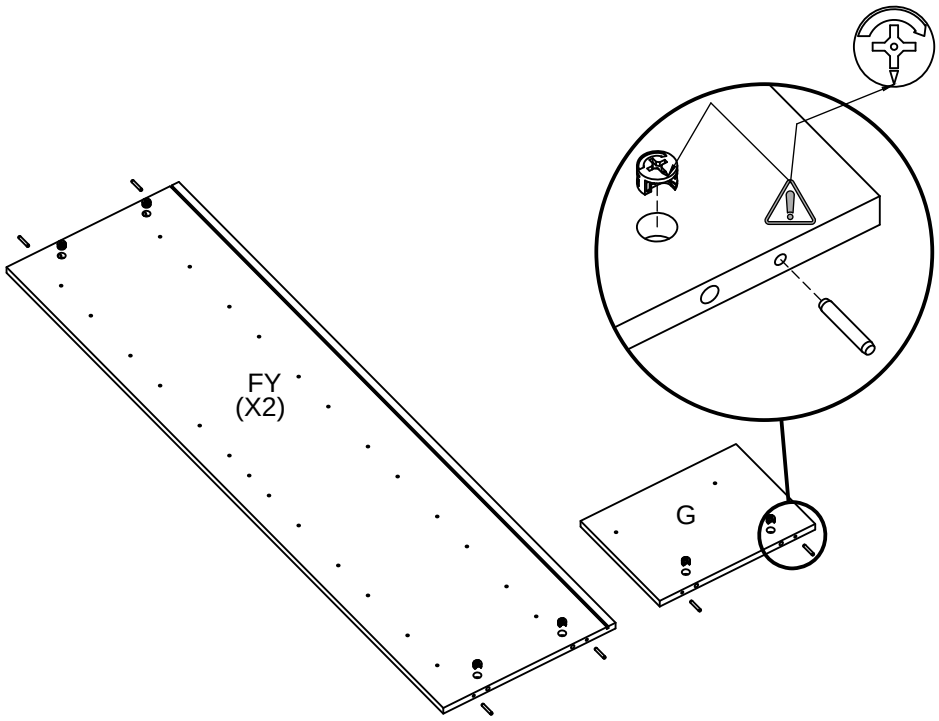

Assembly Instructions

Step 3

Place drawer runners

1.

Extend drawer glide **41435**.

2.

Attach drawer glide at the front of side panel **FY**.

Place screw **26020** through the correct hole at the front of the drawer glide, into the holes on the side panel **FY**.

Tighten screw but do not overtighten.

3.

Open slide until holes are visible at back of drawer glide.

4.

Place screw **26020** through the correct holes at the back of the drawer glide, into the holes on the panel **FY**.

Tighten screw but do not overtighten.


5.


Attach the flat head screw **25233** into the correct holes of the drawer glide, into the side panel **FY**.

Tighten screw but do not overtighten.


Repeat these **5** steps for the remaining runners.

Fittings you will need for this step:

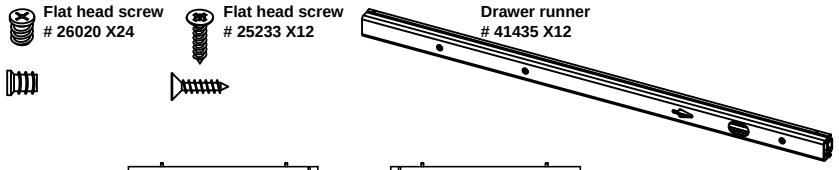

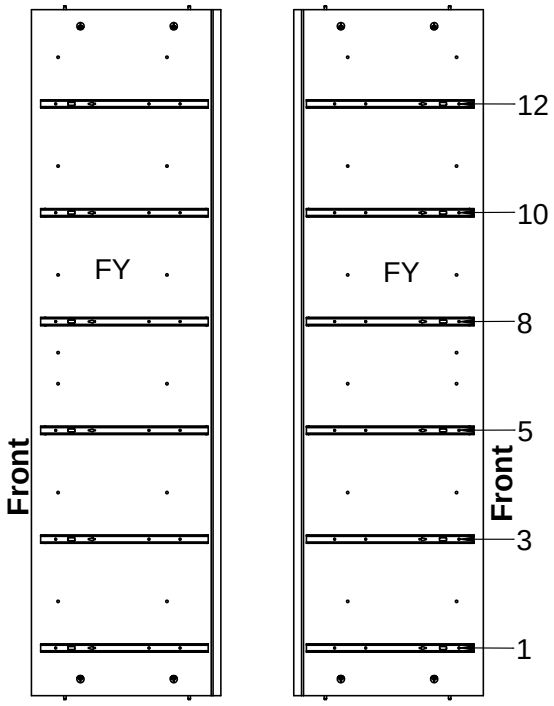


1.

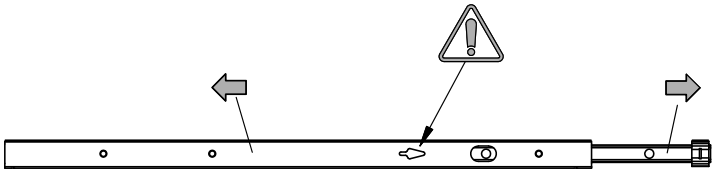


2.

x1

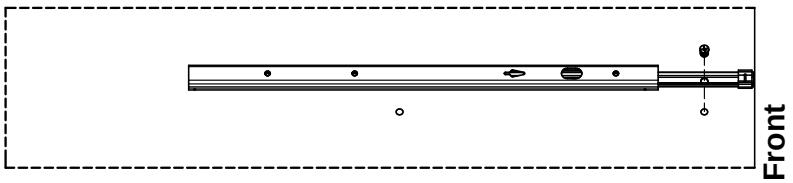


3.

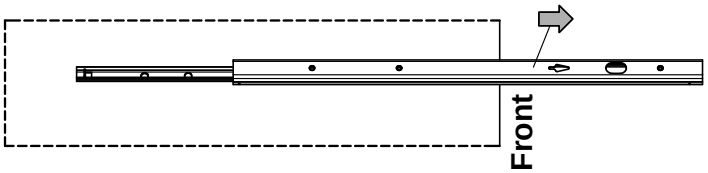


4.

x1

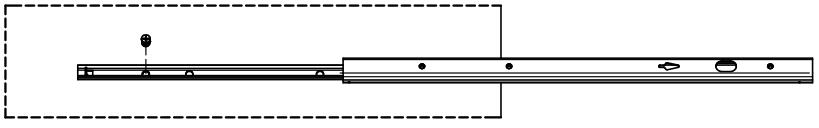

5.

x1

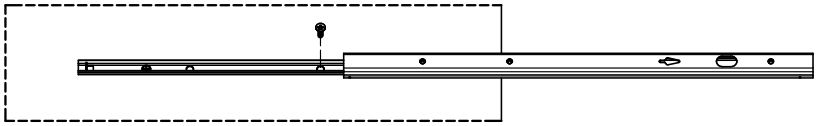

Assembly Instructions

Step 4

Place drawer runners

1.

Extend drawer glide **41435**.

2.

Attach drawer glide at the front of divider panel **G**.

Place screw **26020** through the correct hole at the front of the drawer glide, into the holes on divider panel **G**.

Tighten screw but do not overtighten.

3.

Open slide until holes are visible at back of drawer glide.

4.

Place screw **26020** through the correct holes at the back of the drawer glide, into the holes on divider panel **G**.

Tighten screw but do not overtighten.


5.


Attach the flat head screw **25233** into the correct holes of the drawer glide, into divider panel **G**.

Tighten screw but do not overtighten.

Repeat these **5** steps for the remaining runner on the other side of divider panel **G**.

Fittings you will need for this step:

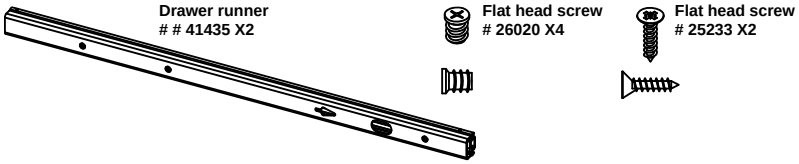

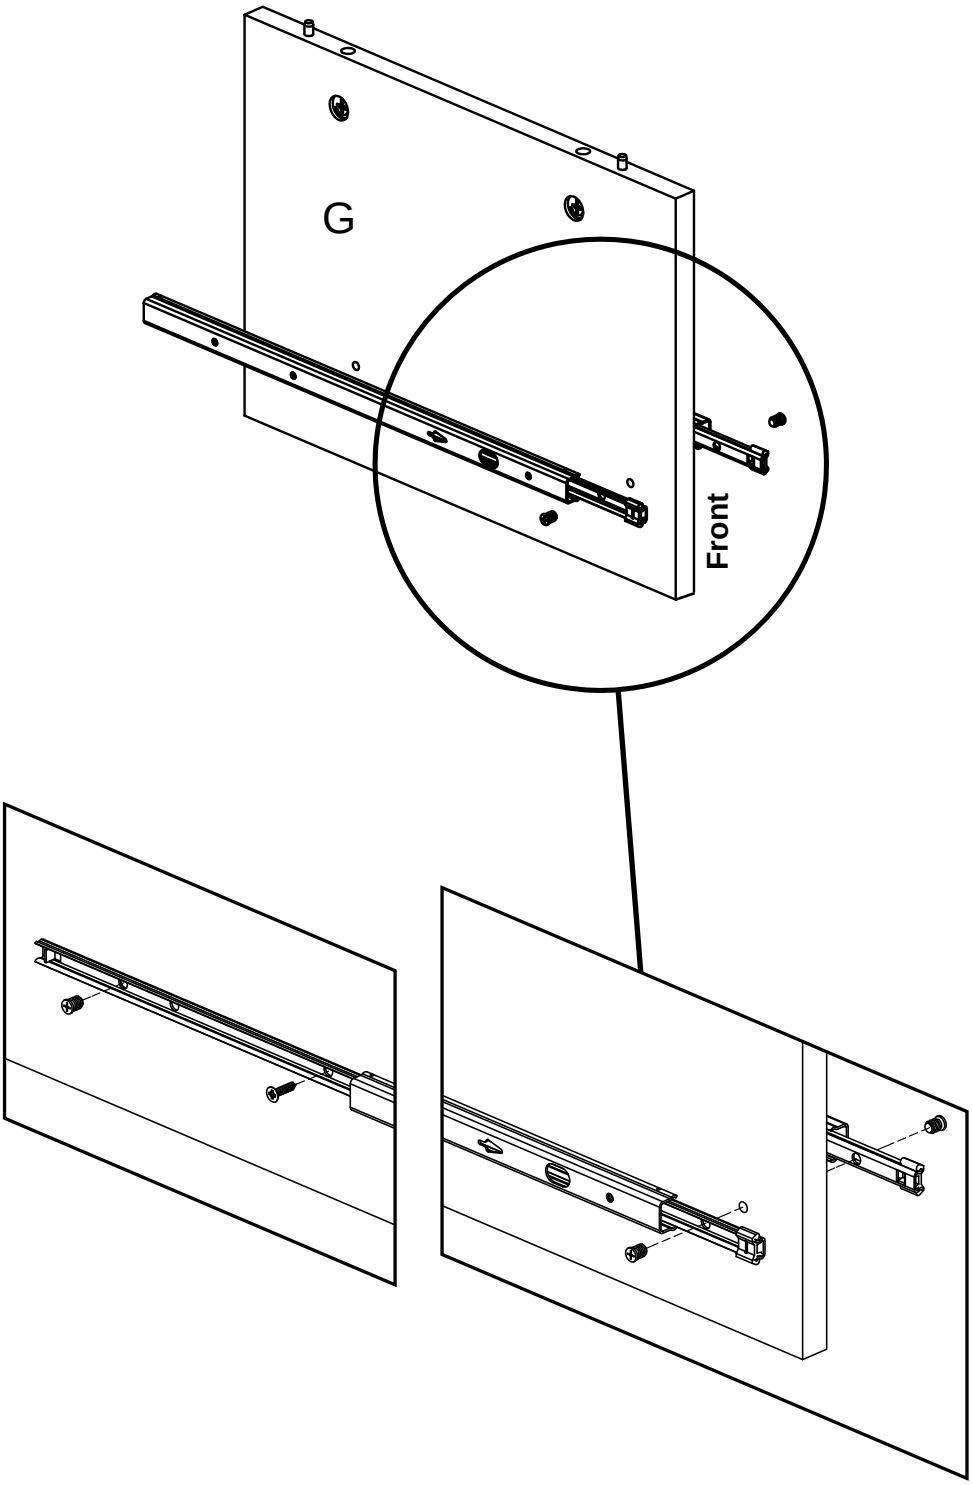

Assembly Instructions


Step 5

Attaching bottom panel

Place cam bolts from the bottom panel **IA** into the holes in the end of side panels **FY**.

Make sure the finished edge is facing toward the front and that the unfinished side is facing toward the bottom of the cabinet.

Tighten the cams.

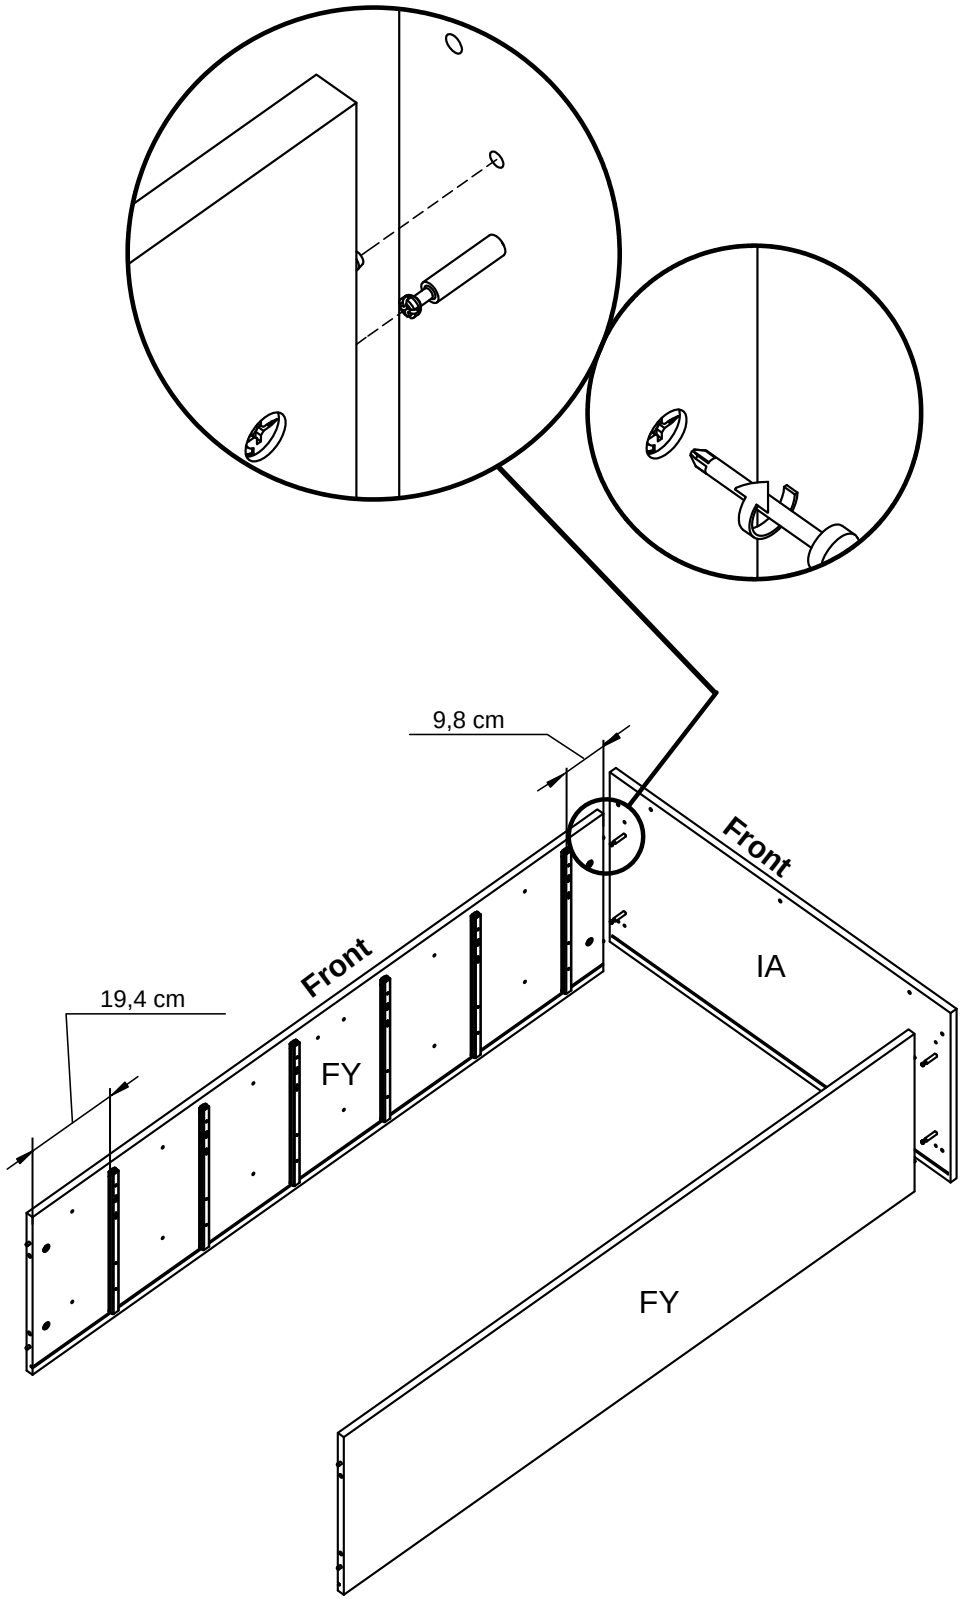


Assembly Instructions

Step 6

Attaching back panel

Slide the back panel **S** smoothly down into the grooves in the side and bottom panel **FY** + **IA**.

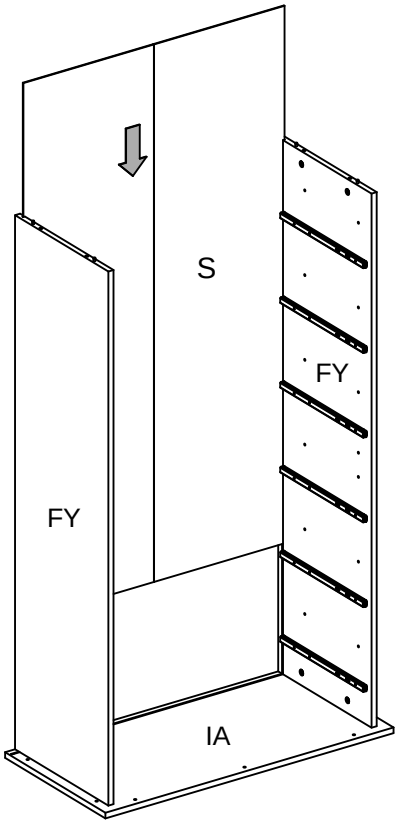


Step 7

Attaching divider panel

Press down divider panel **G** towards the top panel **LA**. Make sure the finished edge is facing toward the front .

Tighten cams with a screwdriver, as shown.

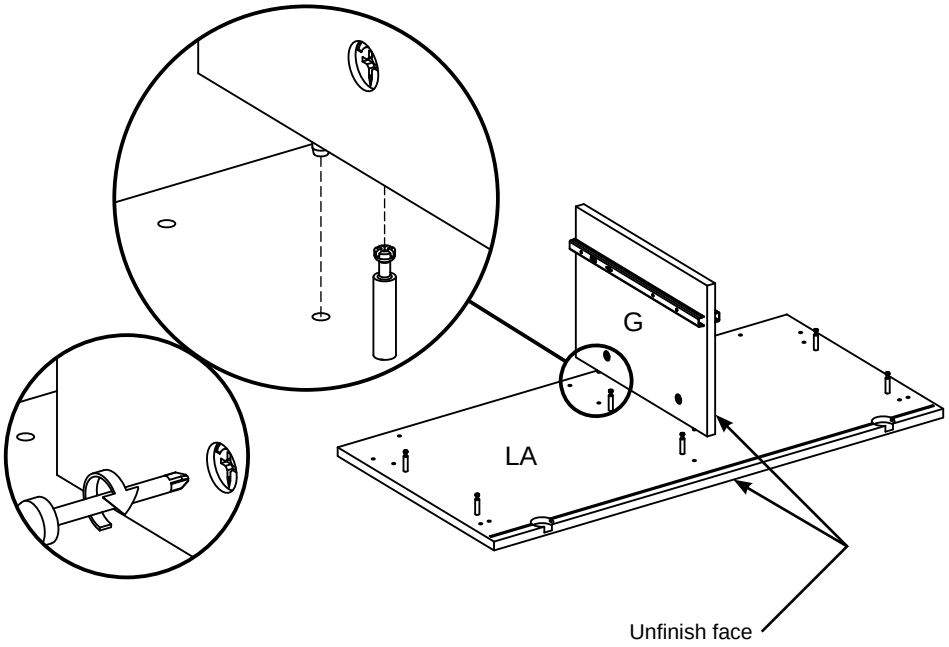


Assembly Instructions

Step 8

Attaching top panel

Place the cam bolts from top panel **LA** into the end holes on side panel **FY** . Tighten cams.

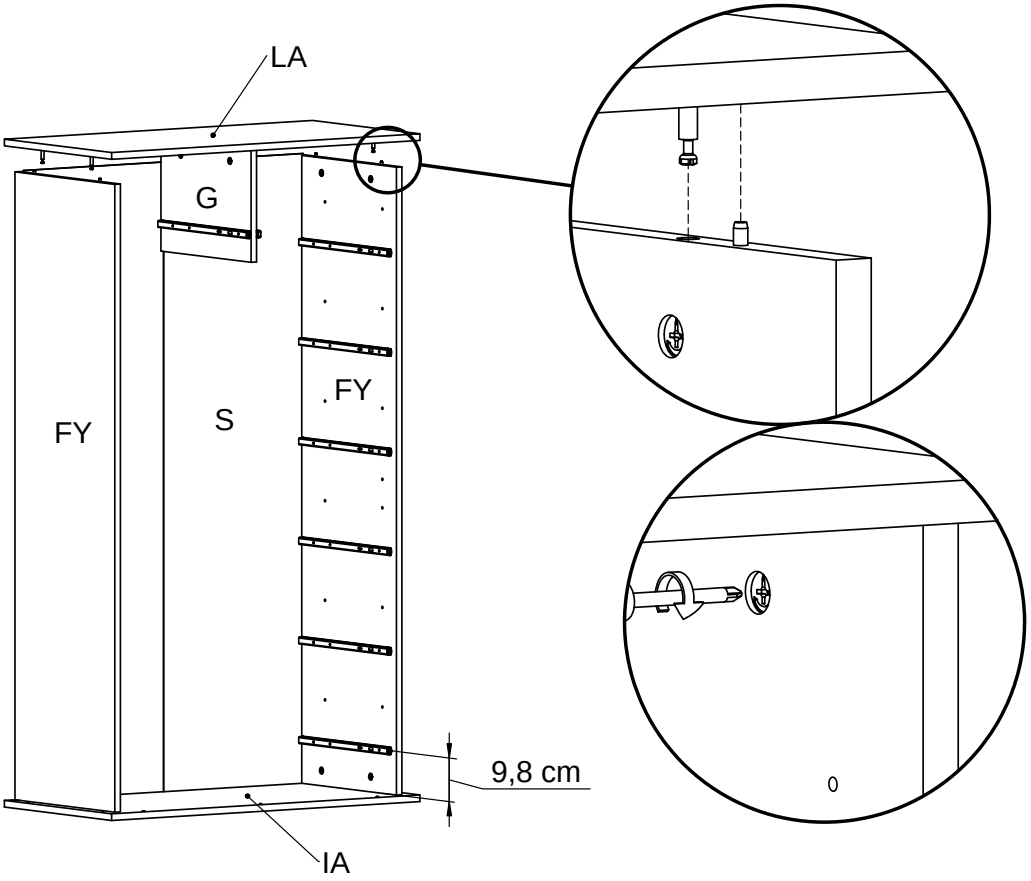

Step 9

Gathering profiles


Insert wedges **33204** into slots on the angle ends of side and front profiles **K** +**N**+ **M**.

Use a hammer.

Fittings you will need for this step:



Wedges
 # 33204 X4

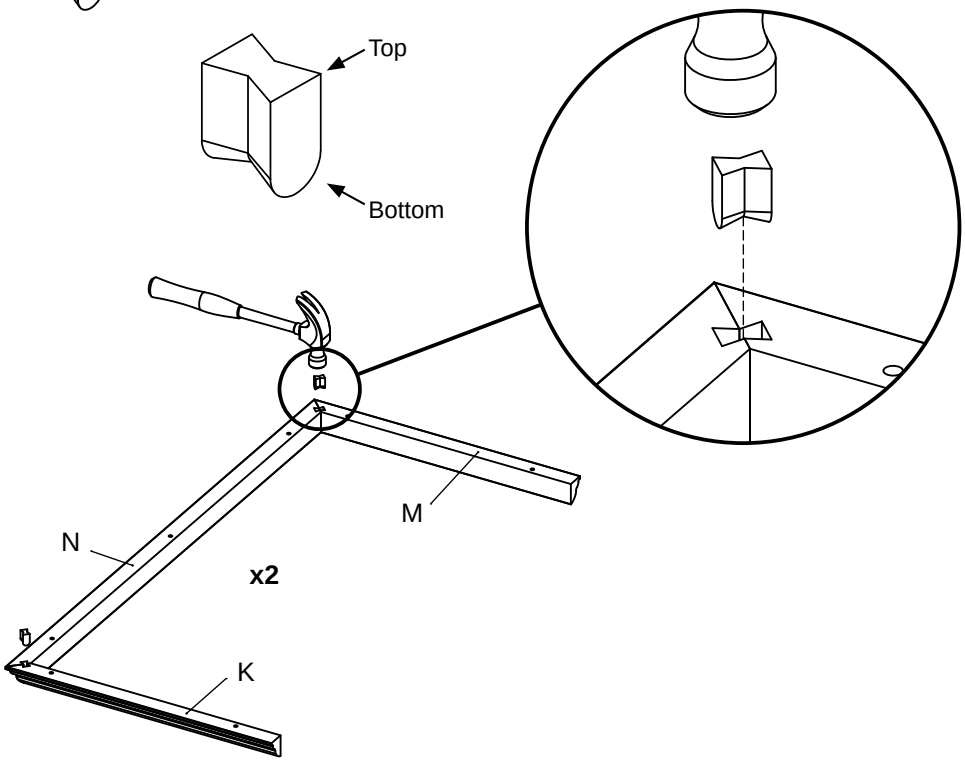


Assembly Instructions

Step 10

Gathering profiles to cabinet

Push the profile down as it reaches the bottom panel **IA**. Use flat head screw **26033** to tighten.

Fittings you will need for this step:

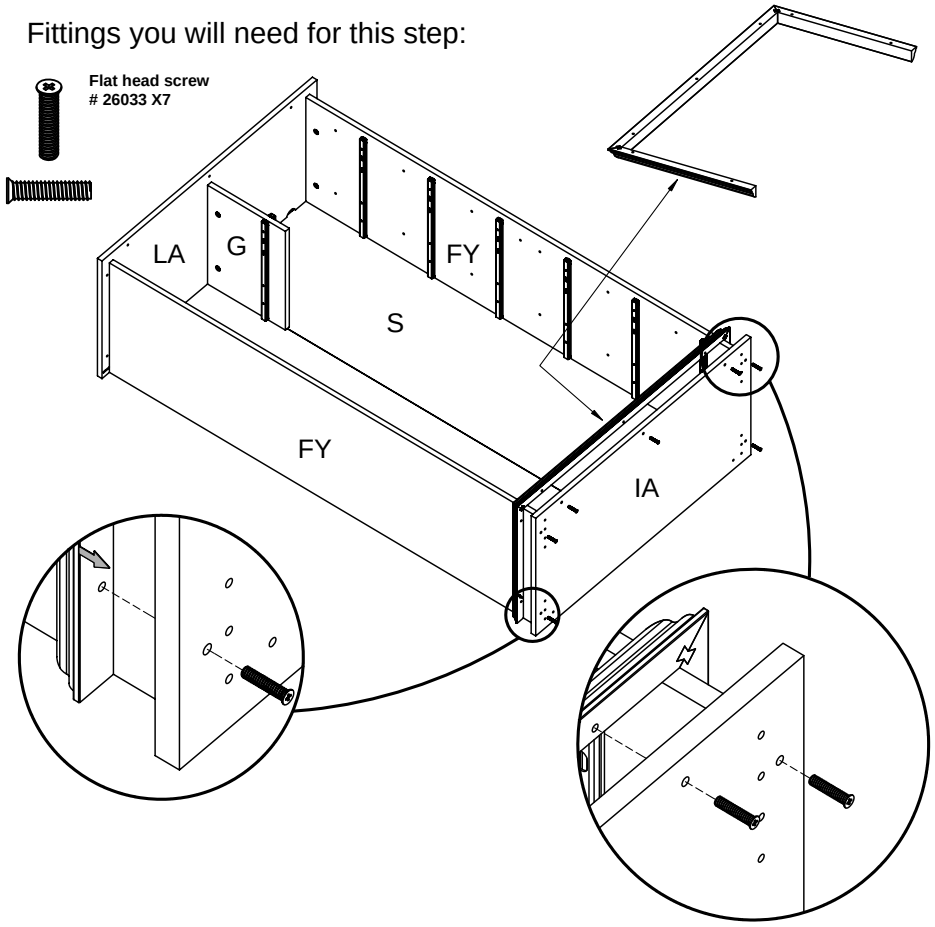

Step 11


Gathering profiles

Insert dowels **20203** into outer holes on the gathering profiles. Use glue **22601** as shown.

⚠

Add one small drop of glue per hole.

Fittings you will need for this step:

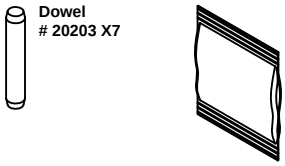

Assembly Instructions

Step 12

Gathering profiles to cabinet

Add glue **22601** in holes of the top panel **LA**.

⚠

Add one small drop of glue per hole.

Place the gathering profile as shown and press down (dowels into holes).

Fittings you will need for this step:




Glue
 # 22601 X1

Step 13

Attaching tape dots

Attack the tape dots **17414** at the base rail **O**.

Fittings you will need for this step:



Tape dots
#17414 X1

Assembly Instructions


Step 14

Attaching base rail

⚠

Turn cabinet around standing on bottom panel **IA** .

Take off paper from tape dots.
Place the base rail **O** behind the gathering profile (push forward as shown with the arrow).

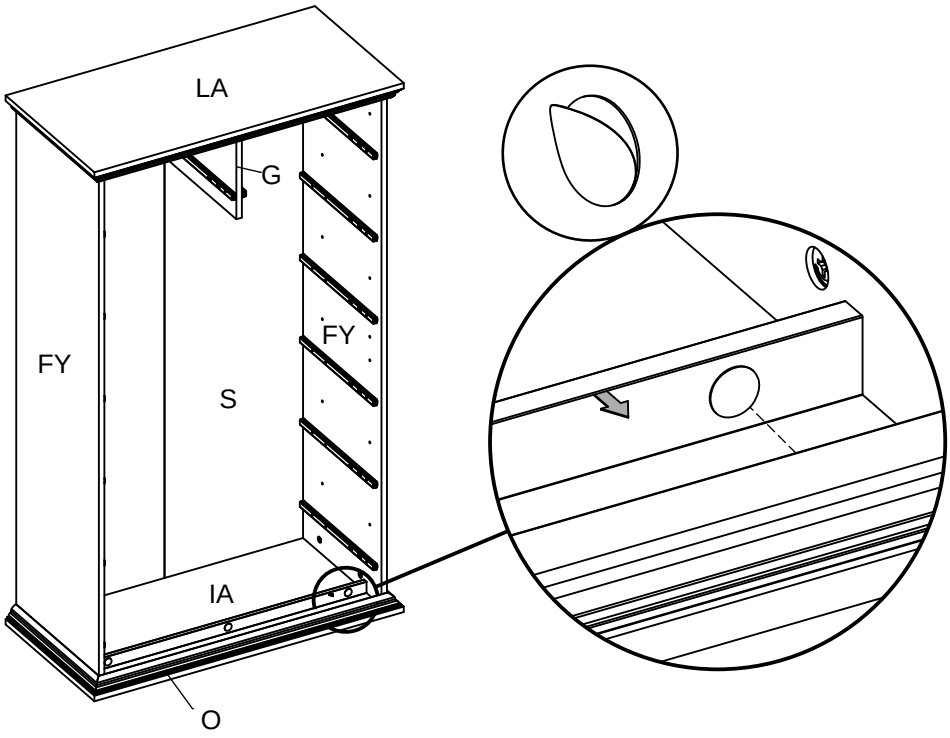


Step 15

Attaching stabilizer

Place the stabilizer **94066** between the two side panels **FY**. See the detail drawing, for correct direction. Use the flat head screw **26020** to tighten the stabilizer.

Fittings you will need for this step:



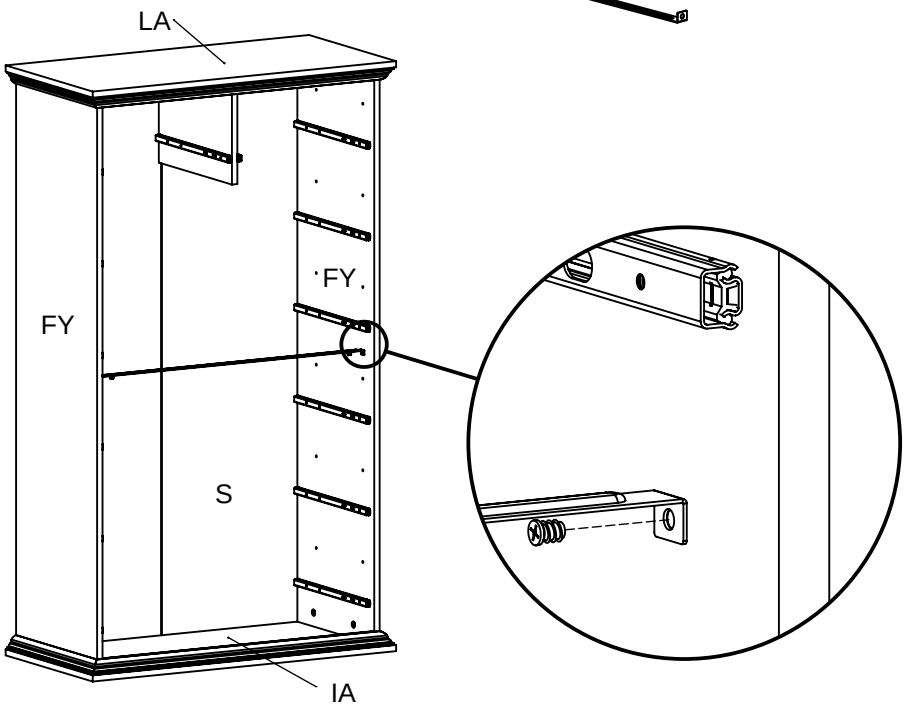

Assembly Instructions

Step 16

Attaching back panels

Important:
The unit **MUST** be square when the panel clips is attached.


Lay face down the cabinet on the floor. To stabilize the back panel, use the panel clips **10401**. Press forward the thin tabs between the back panel and the groove.


Then tighten with a screwdriver.

Fittings you will need for this step:



Panel clips
 # 10401 X8

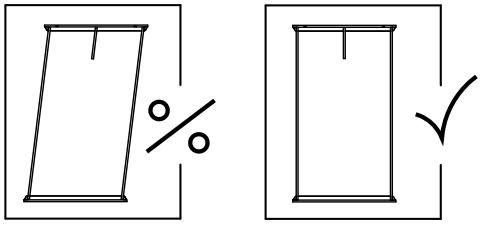

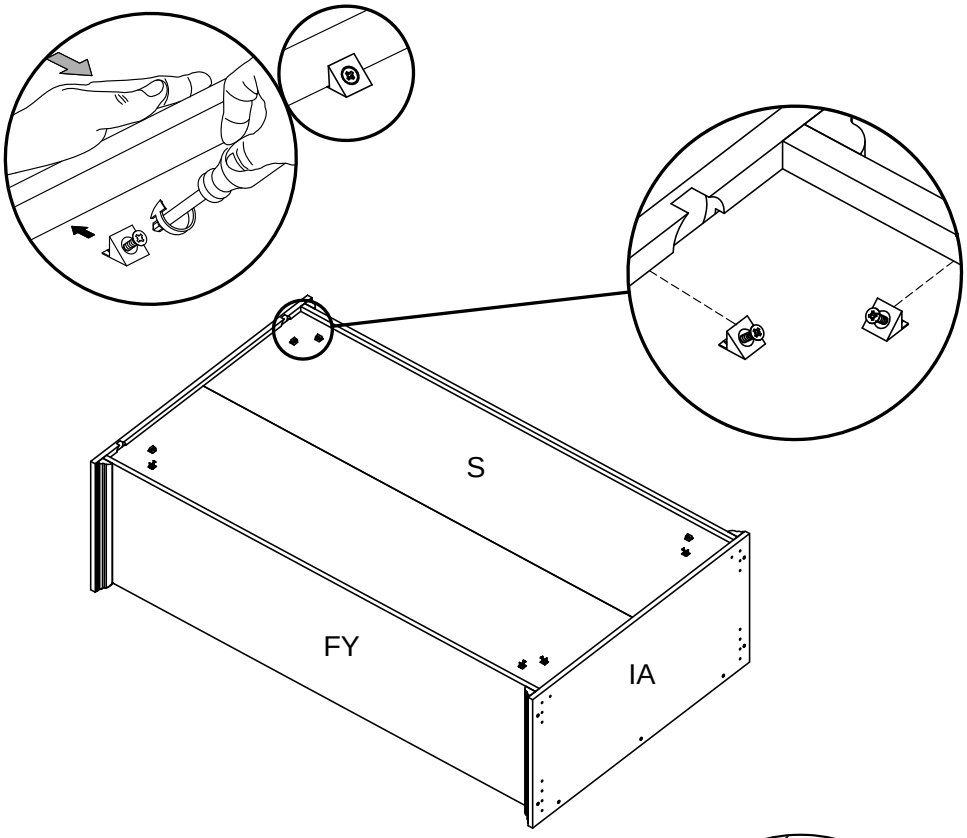


Step 17


Attaching gliders


Place the floor gliders **63008** in the holes of bottom panel **IA**.
Use a wodden block between hammer and floor glider.

Fittings you will need for this step:



Floor Glider
 # 63008 X4

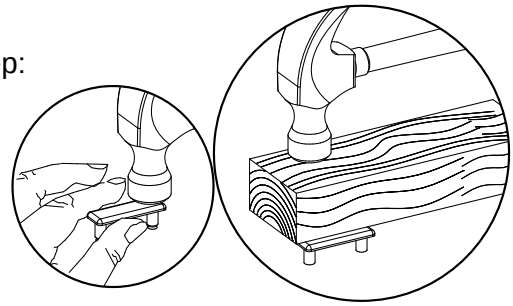

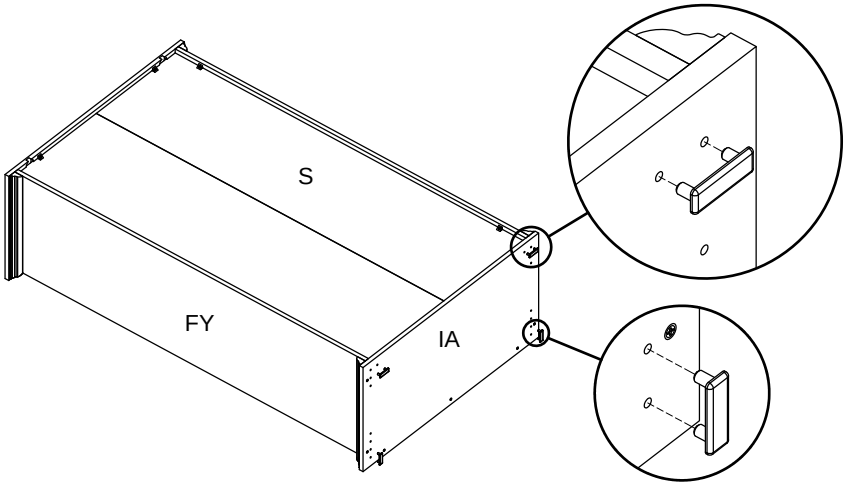


Assembly Instructions


Step 18

Fix unit to wall with strap

⚠ The screw supplied together with the anti-topple bracket is to be used only for fixing the anti-topple bracket to the furniture. In addition to this you will need to choose a screw or fitting which is suitable for securing the bracket to the kind of wall you have. If you are unsure about what type of screw to use contact your local hardware store.

Fittings you will need for this step:

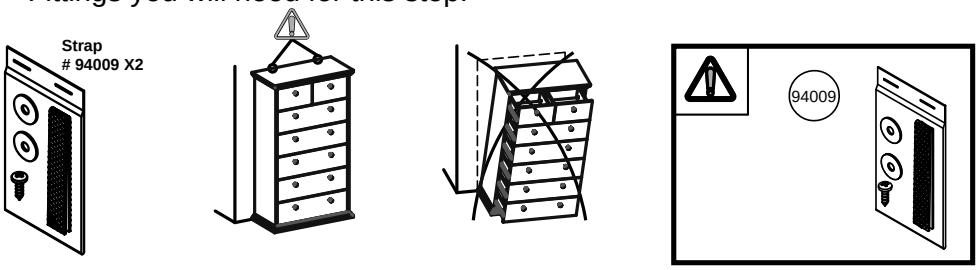

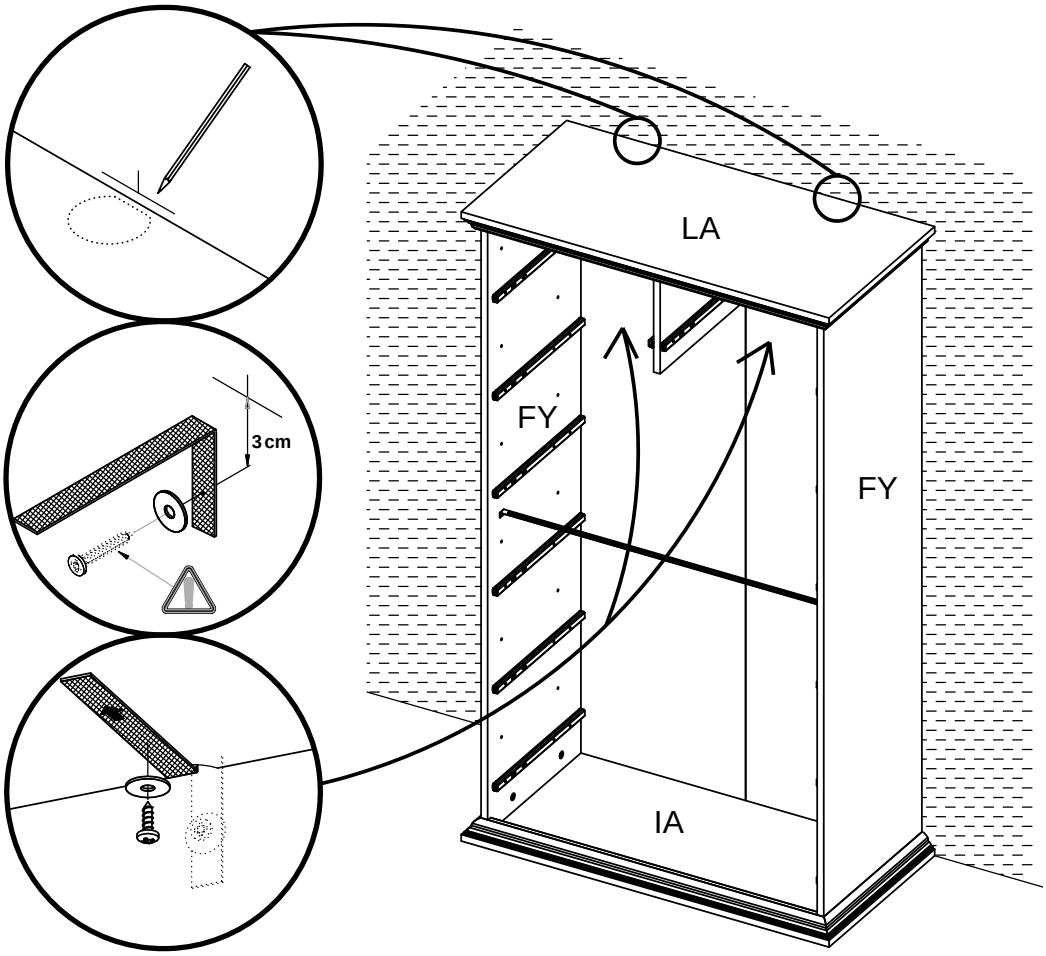

Assembly Instructions

Step 19


Attaching drawers


Attach cam **31687** into the holes in left and right drawer side **A** + **B**. Arrow facing the edge of the panel.

Screw the cam bolt **31513** in the drawer front **EF** + **EG** + **EE**.

Cam bolts must be screwed down flush.

Fittings you will need for this step:

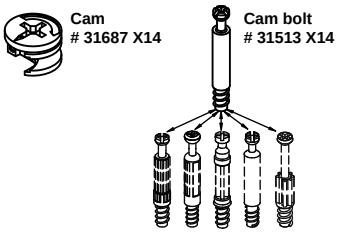

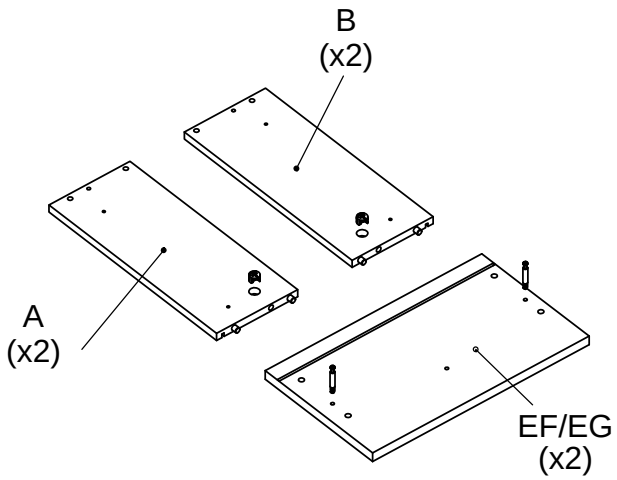

Assembly Instructions

Step 20


Attaching drawer

Align holes at back of the drawer sides **A** + **B** with the holes on the drawer back **D** and **C**.

Make sure the groove is facing inside of the drawer.

Tap drawer fasteners **20228** into place with a hammer.


Fittings you will need for this step:

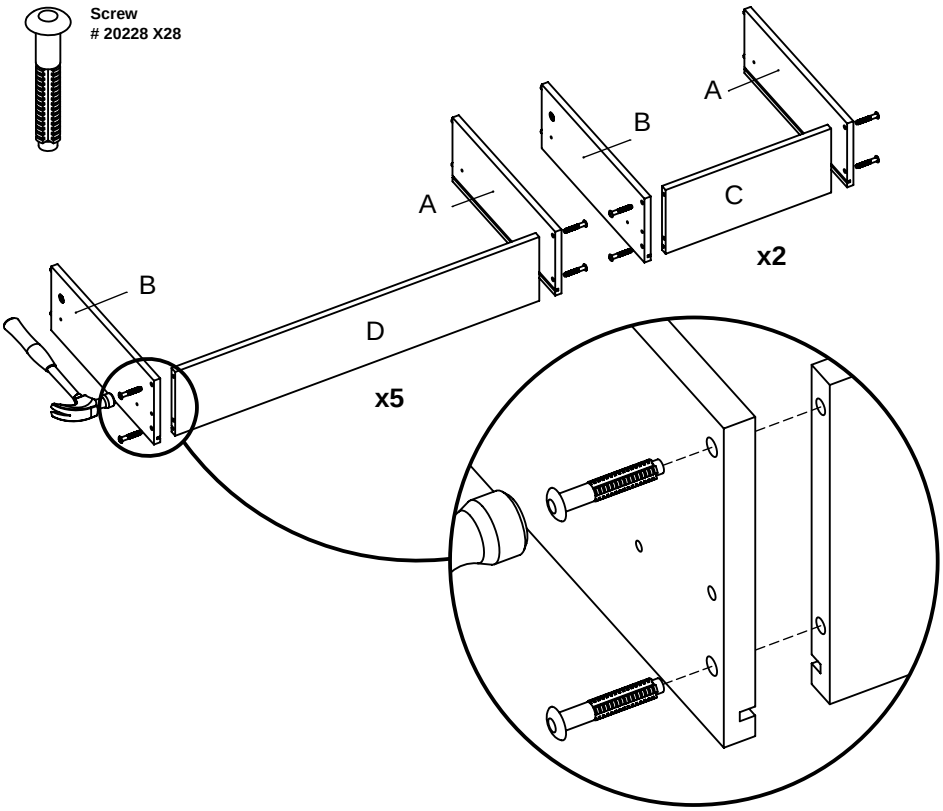

Step 21

Attaching drawer bottom

Press the drawer bottom **R** and **P** smoothly in the grooves (finished side up).

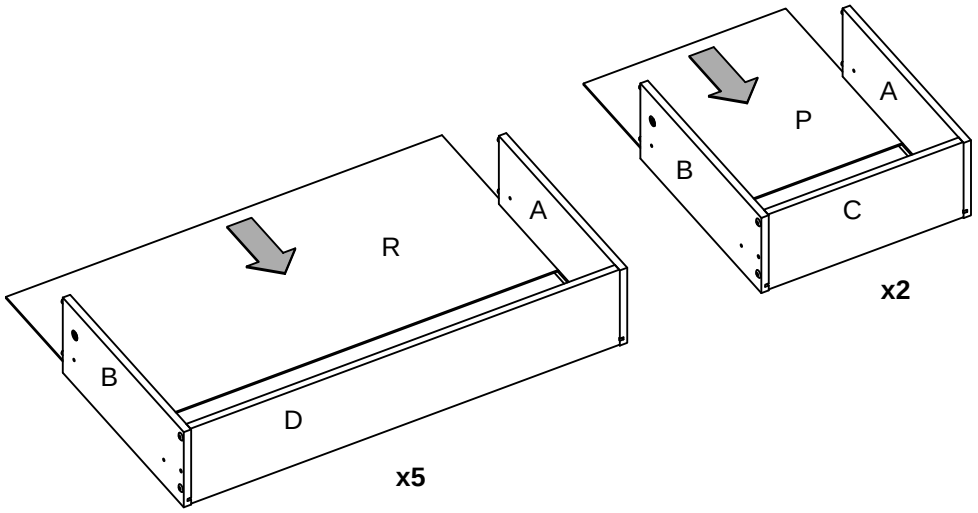


Assembly Instructions

Step 22

Attaching drawer front

Attach the drawer front **EE** and **EF** + **EG** by placing dowels and cam bolt in the correct holes. See the detail drawing.

Tighten the cams.

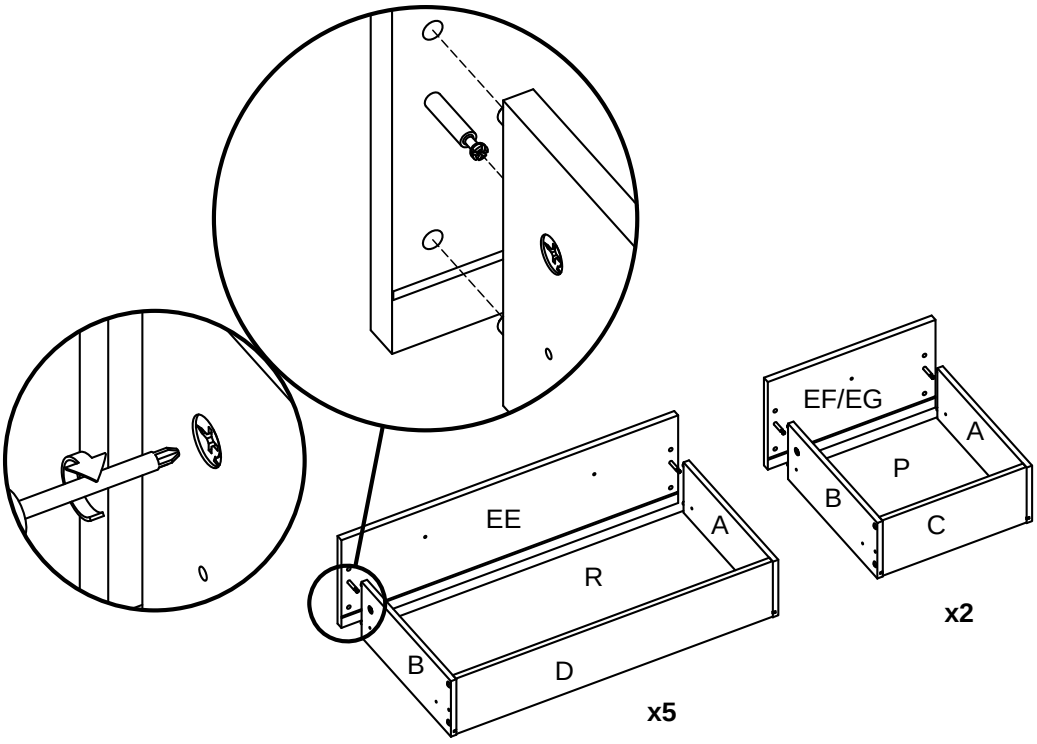


Step 23


Attaching the drawer

Attach the handle **81040** to the drawer front **EE** and **EF** + **EG** . Use machine screw **26232** to tighten the handle.

Attach the drawer support **11011** into holes on left and right drawer side **A** + **B** .

Fittings you will need for this step:

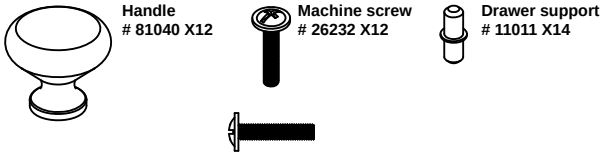

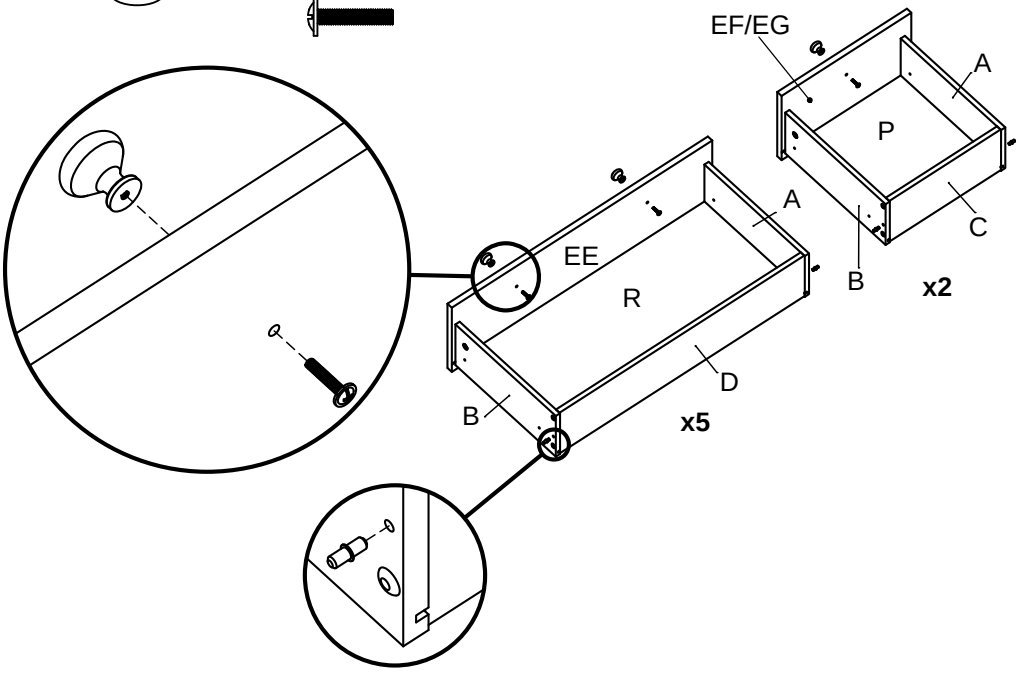


Assembly Instructions

Step 24

Attaching drawer bottom support

Place the drawer bottom support **10510** on back side of the drawers. See the detail drawing, for correct direction. Use the screw **25440** to tighten the drawer bottom support.


Fittings you will need for this step:

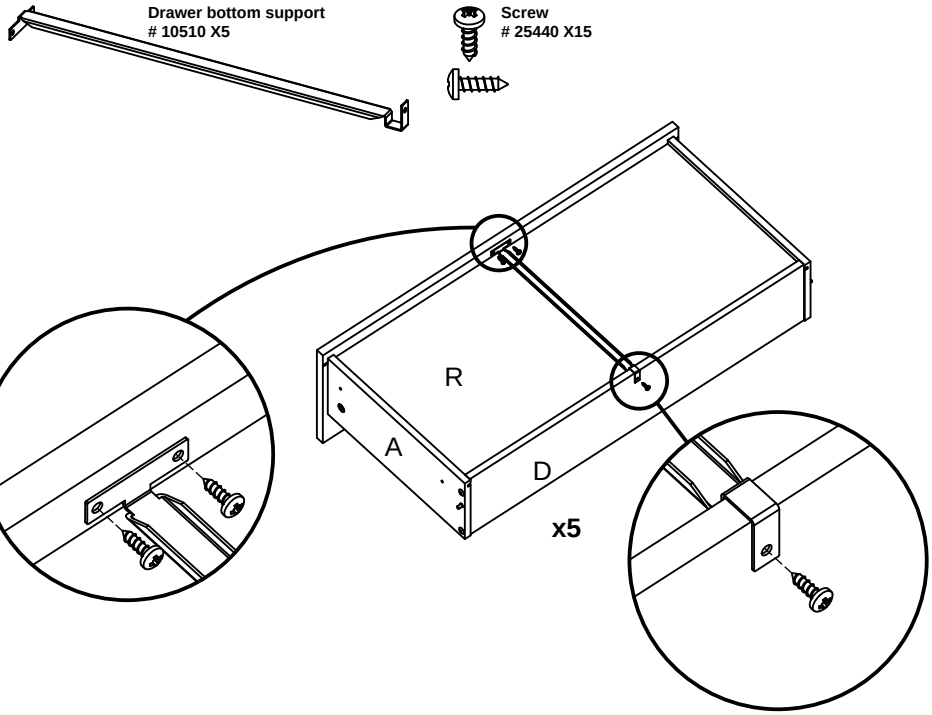

Step 25

Pulling out the rails

Pull out all the runners, before placing drawers.

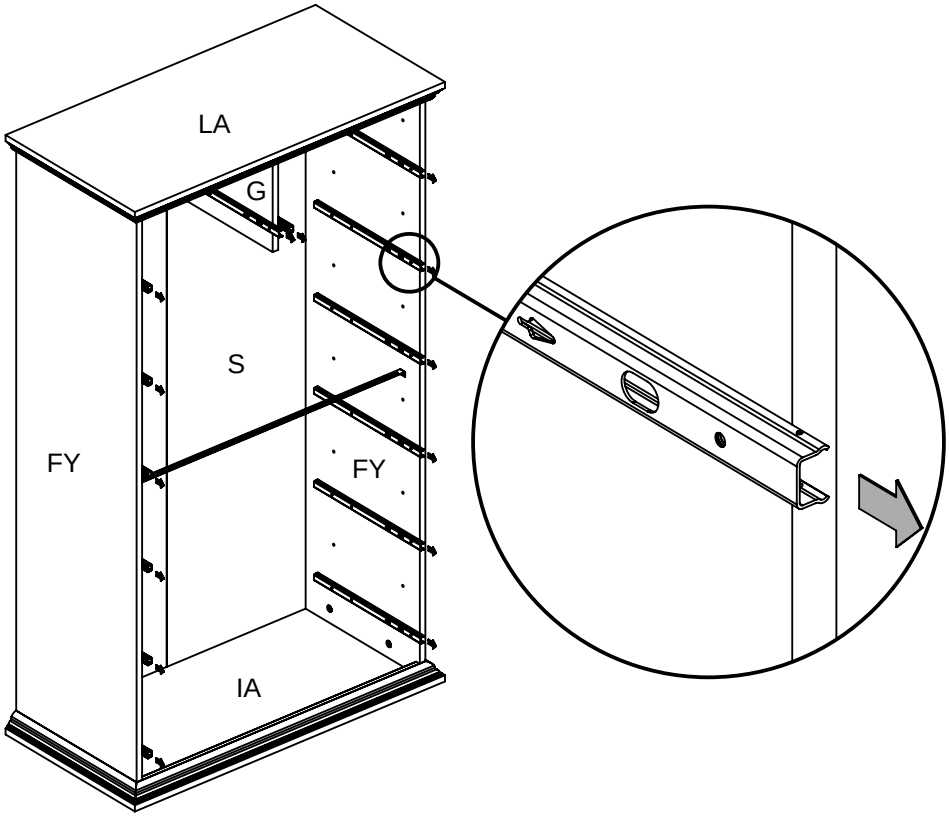

Assembly Instructions

Step 26

Attaching the drawers

1.

Place the drawer between 2 rails.

See picture.

2.

Adjust front of drawer up and down. Tight up and fix drawer to the rail useing machine screw **26221** from inside the drawer in both sides.

3.

Adjust back of drawer up and down. Tight up and fix drawer to the rail useing machine screw **26221** from inside the drawer in both sides.


Repeat these step for each of the remaining drawers.

Assembly is complete.


Fittings you will need for this step:



Machine screw
 # 26221 X28

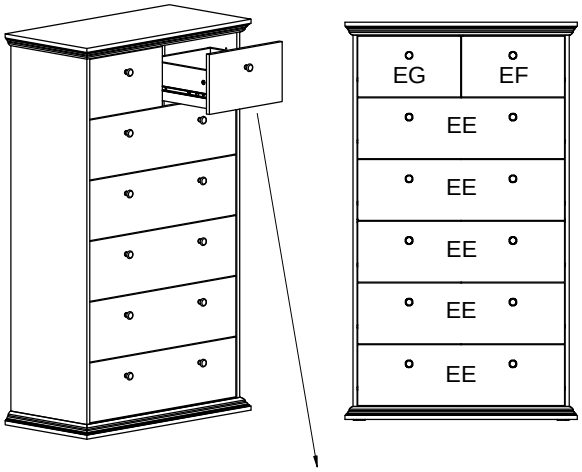

1.

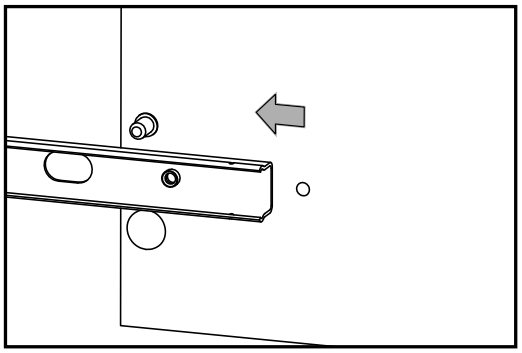


Drawer back

2.



x2

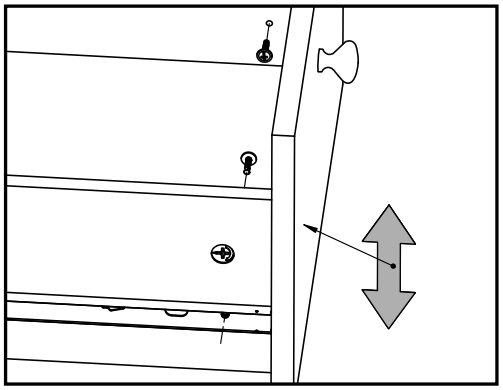


Drawer front

3.



x2

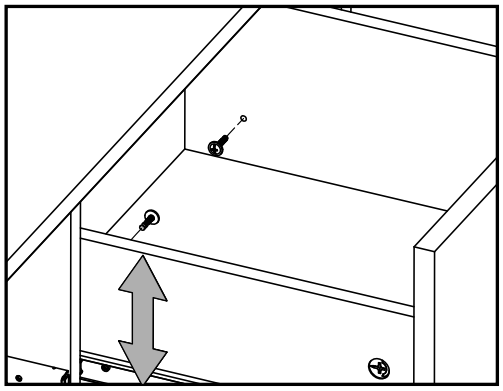

Drawer back

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0845 6400800