
INDUSTRIAL STYLE DESK WITH DRAWER

Assembly Instructions - Please keep for future reference | 797/1699

HOME

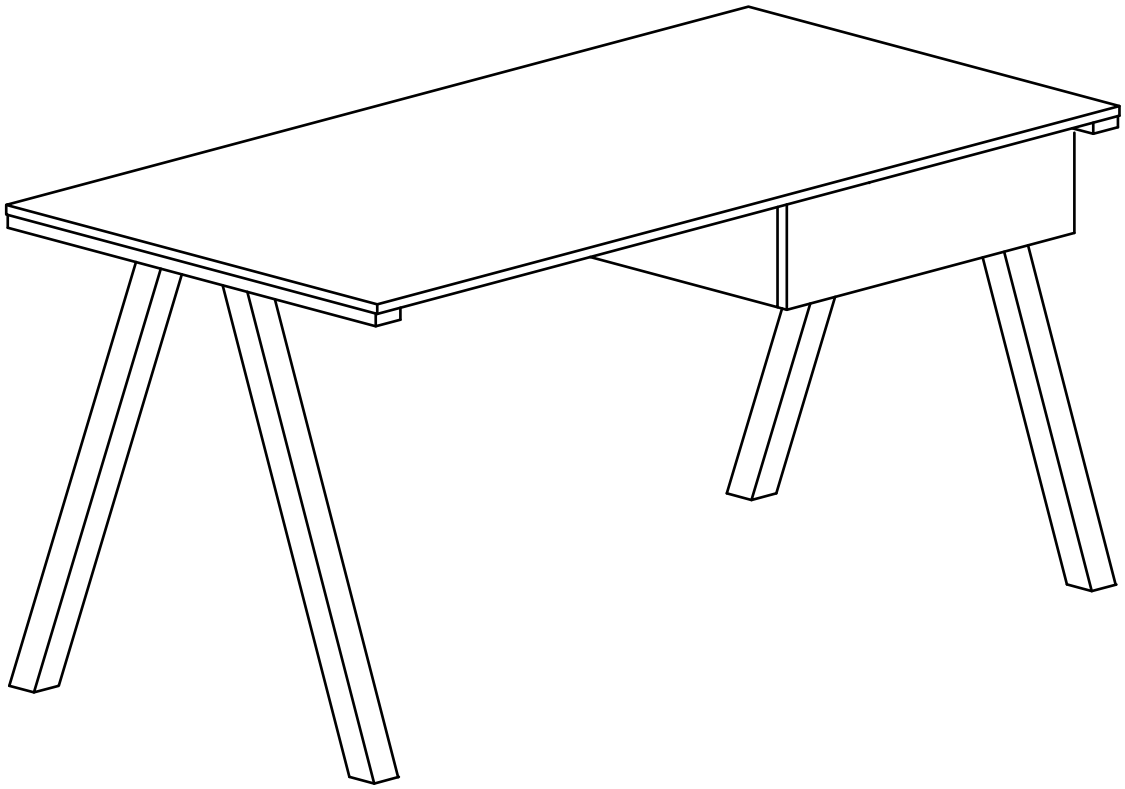

Dimensions

Width - 120cm
Depth - 60cm
Height - 75cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Argos Aftersales Helpline: 0345 640 0800

Issue3 - 20/09/2017

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product, please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure that all bolts and fittings are tightend properly.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below




1 Table Top x 1
(120 x 60cm)

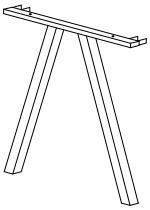


2 Left Leg x 1
(73.5 x 59cm)

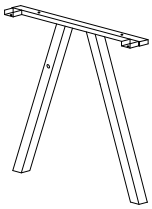


3 Right Leg x 1
(73.5 x 59cm)

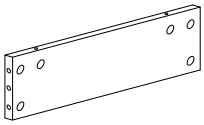


4 Back Board x 1
(37 x 12cm)

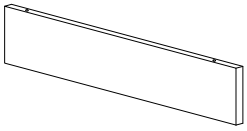

5 Side Board x 1
(50.5 x 12cm)

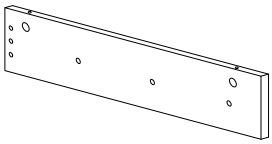


6 Side Board x 1
(50.5 x 12cm)

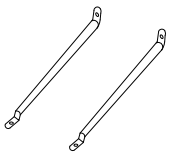


7 Supporting Bar x 2
(25cm)




8 Supporting Bar x 1
(56 x 13.5cm)

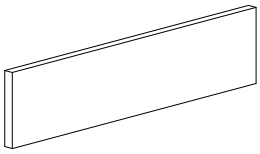


9 Drawer Front x 1
(40 x 10cm)

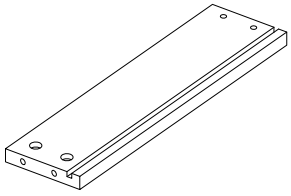


10 Drawer Side Board x 1
(40 x 8cm)

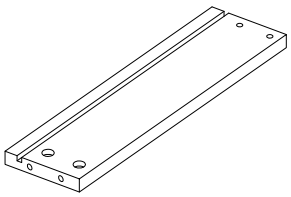


11 Drawer Side Board x 1
(40 x 8cm)

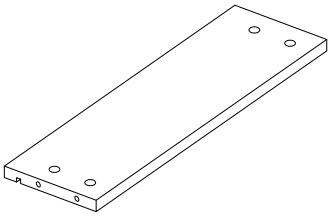

12 Drawer Back Board x 1
(32.1 x 8cm)

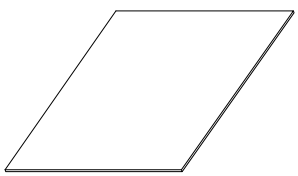

13 Drawer Bottom Board x 1
(33 x 39.5cm)


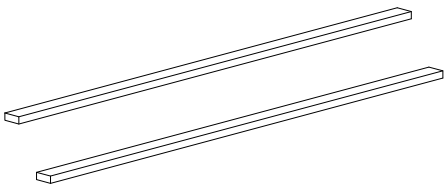


14 Cross Bar x 2
(111cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Camlock Screw(22mm) x 18	**B**  Dowel (Ø8 x 30mm) x 8	**C**  Camlock Nut(Ø15mm) x 18
D  Runner(390mm) x 2	**E**  Screw (Ø3.5 x 14mm) x 12	**F**  Bolt(M6 x 25mm) x 2
G  Bolt (M6 x 12mm) x 13	**H**  Bolt(M6 x 30mm) x 6	**I**  Allen Key(62 x 6mm) x 1

Tools required


Crosshead screwdriver (medium & large)



Flatblade screwdriver (medium)


Small hammer


Ruler/tape measure


Eye protection (when using a hammer or glue)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

a: Insert camlock nut Ⓒ x 6 into back board 4.
b: Insert camlock nut Ⓒ x 2 into side board 6. Insert camlock screw Ⓐ x 2 and dowel Ⓑ x1 into side board 6. Attach runner Ⓓ1 to side board 6 by using screw Ⓔ x 3 .
C: Insert camlock nut Ⓒ x 2 into side board 5. Insert camlock screw Ⓐ x 2 and dowel Ⓑ x1 into side board 5. Attach runner Ⓓ1 to side board 5 by using screw Ⓔ x 3 .

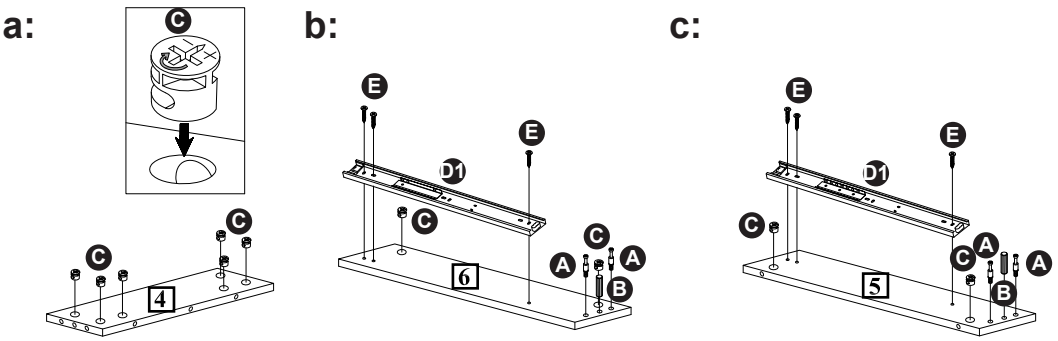


Step 2

a: Attached side board 5 & 6 to back board 4.
b: Use a screwdriver to turn camlock nut clockwise to lock.

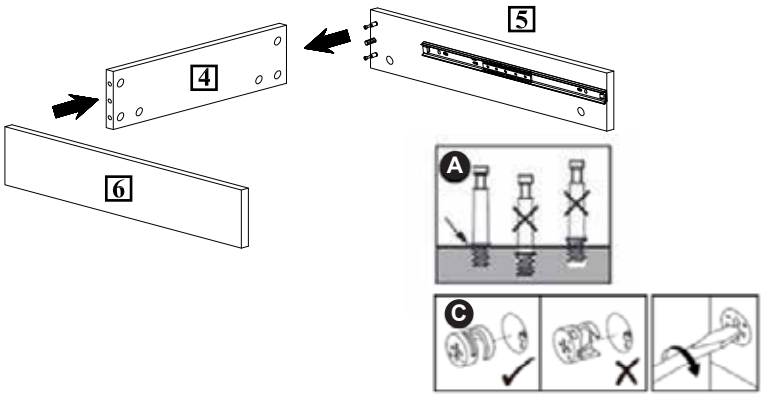


Step 3

a: Insert camlock screw Ⓐ x 6 into table top 1.
b: Insert dowel Ⓑ x 6 into table top 1.

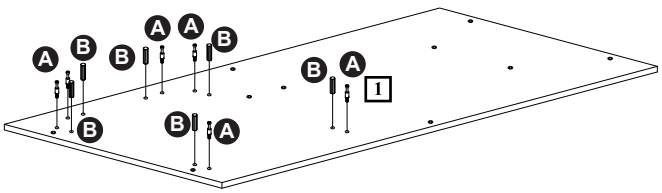

Step 4


a: Attach assembled part to table 1.
b: Use a screwdriver to turn camlock nut clockwise to lock.

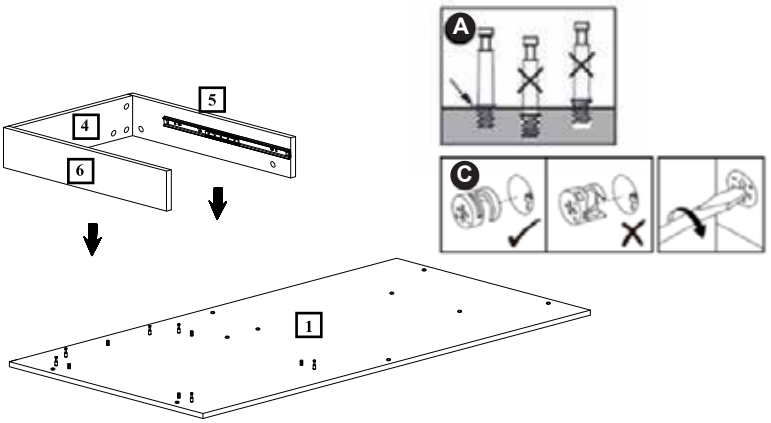

Assembly Instructions


Step 5

Attach supporting bar 8 to the assembled part by using bolt Ⓕ x 2.

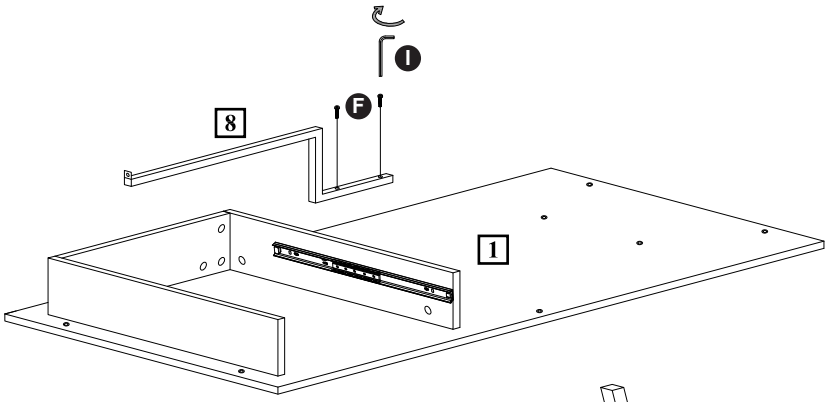


Step 6

Attach cross bar 14 to left leg 2 and right leg 3 by using bolt Ⓖ x 4 for each.

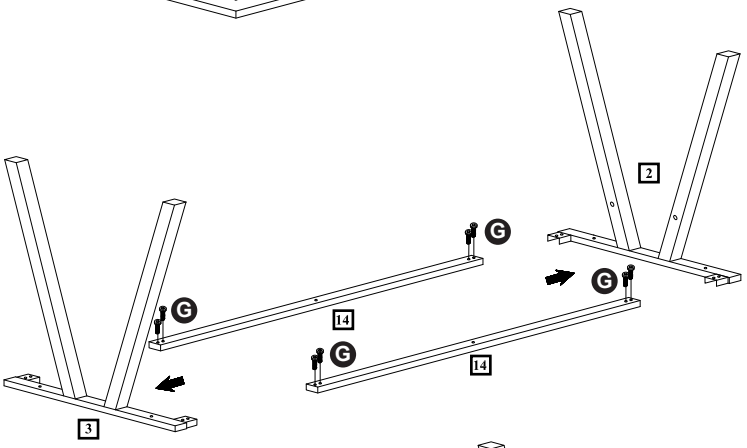


Step 7

Attach the assembled leg to the table top 1 by using bolt Ⓗ x 6.

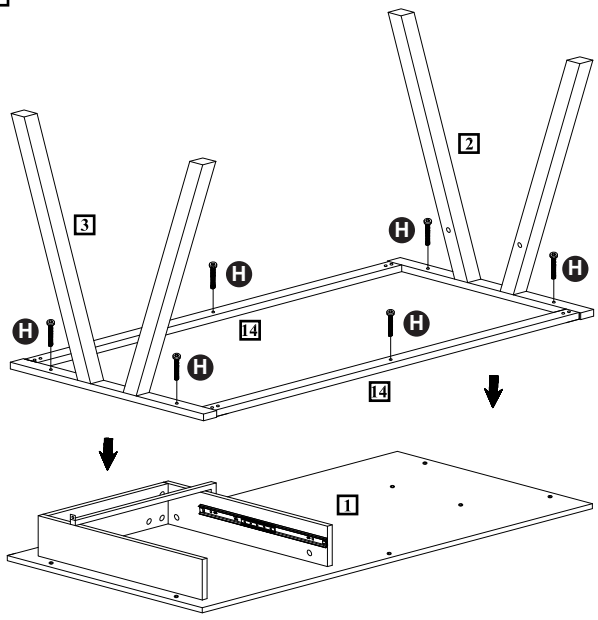

Step 8


Attach supporting bar 7 & 8 to the assembled part by using screw Ⓖ as show.

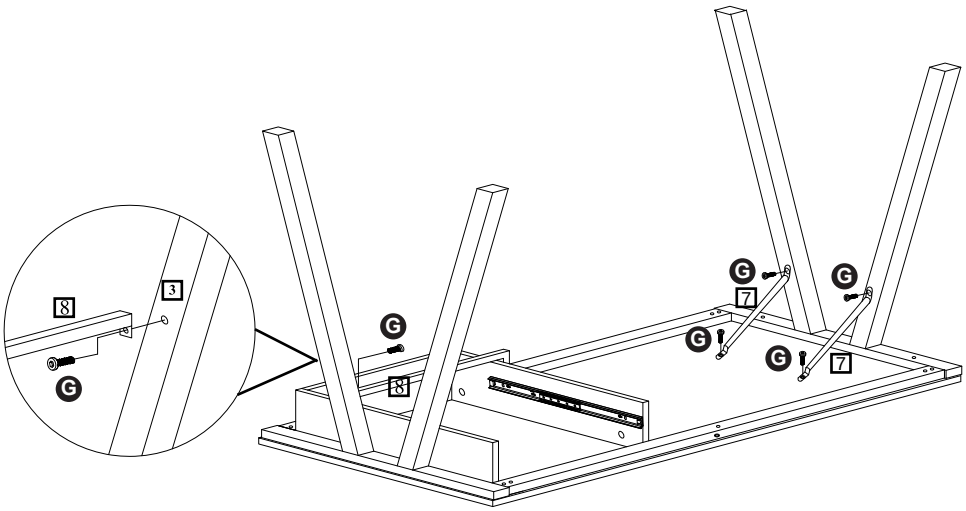

Assembly Instructions


Step 9

a: Insert camlock nut Ⓒ x 2 and camlock screw Ⓐ into drawer side 10
b: Repeat a for drawer side 11
c: Insert camlock nut Ⓒ x 4 into drawer back 12

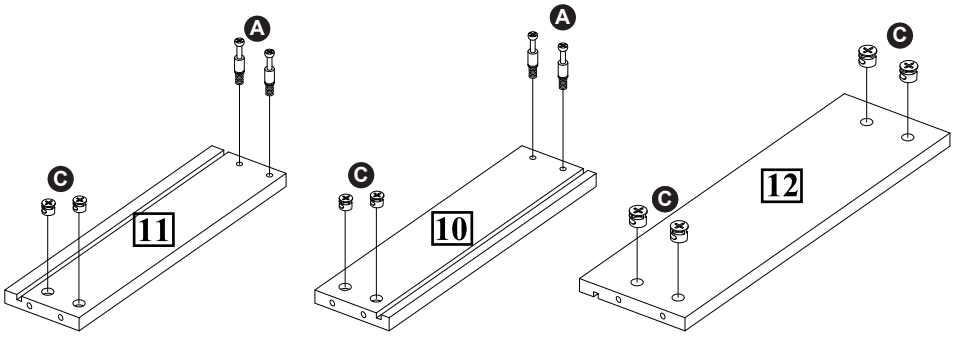


Step 10

a: Attach drawer side 10 & 11 to drawer back 12
b: Use a screw driver to turn camlock nut clockwise to lock

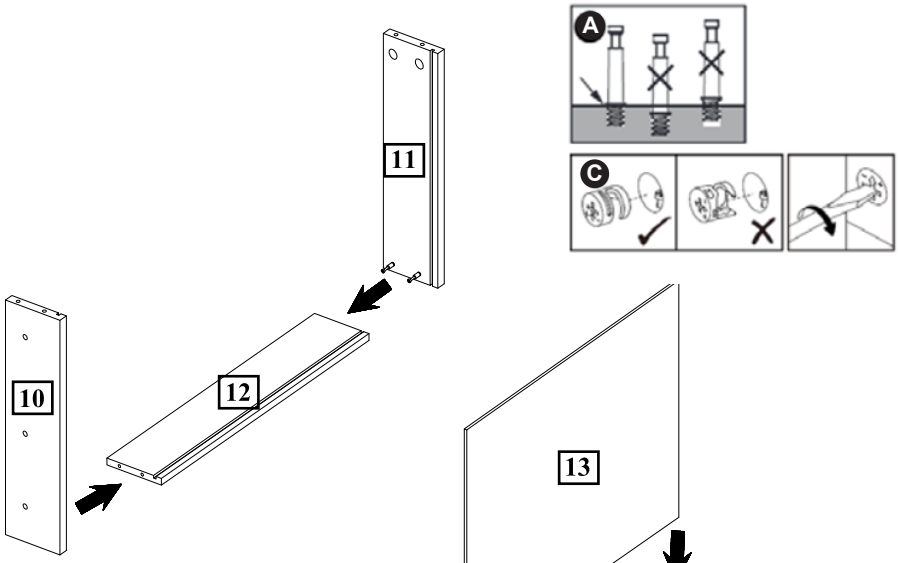


Step 11

a: Insert the drawer bottom 13 to the assembled drawer.

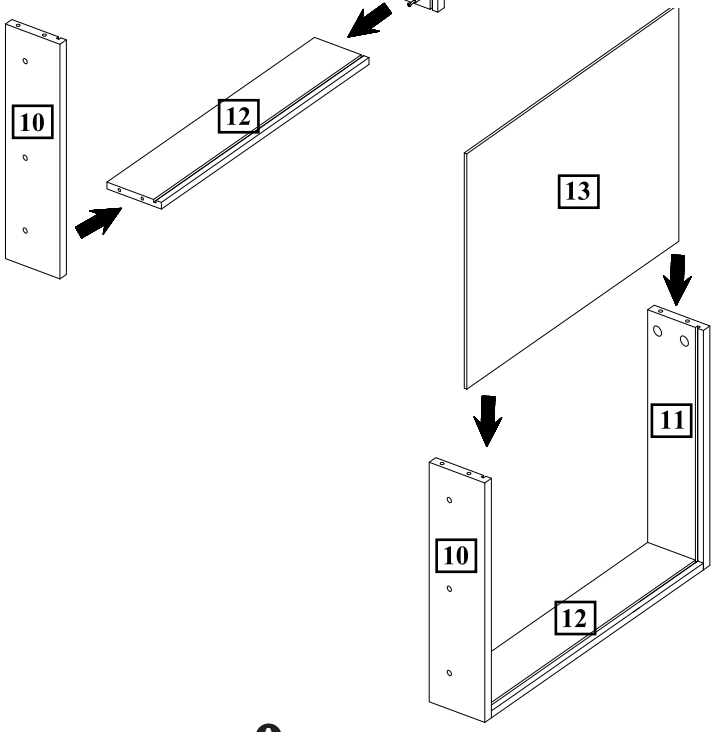

Step 12

a: Insert camlock screw Ⓐ x 4 to drawer front 9.
b: Attach drawer front 9 to assembled part.

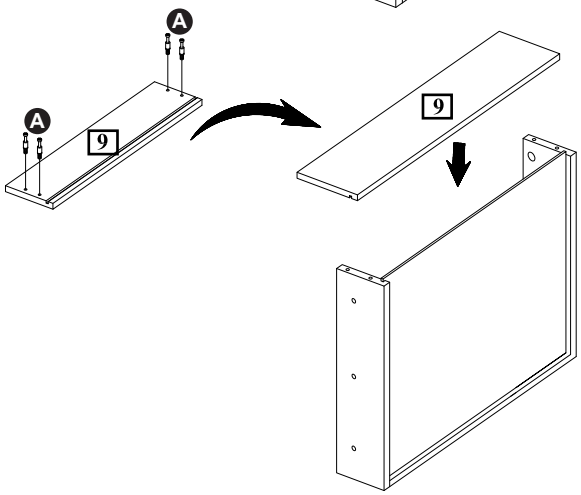


Assembly Instructions

Step 13

a: Attach runner D2 to drawer Side 10 by using screw E x 3

b: Repeat a for drawer side 11

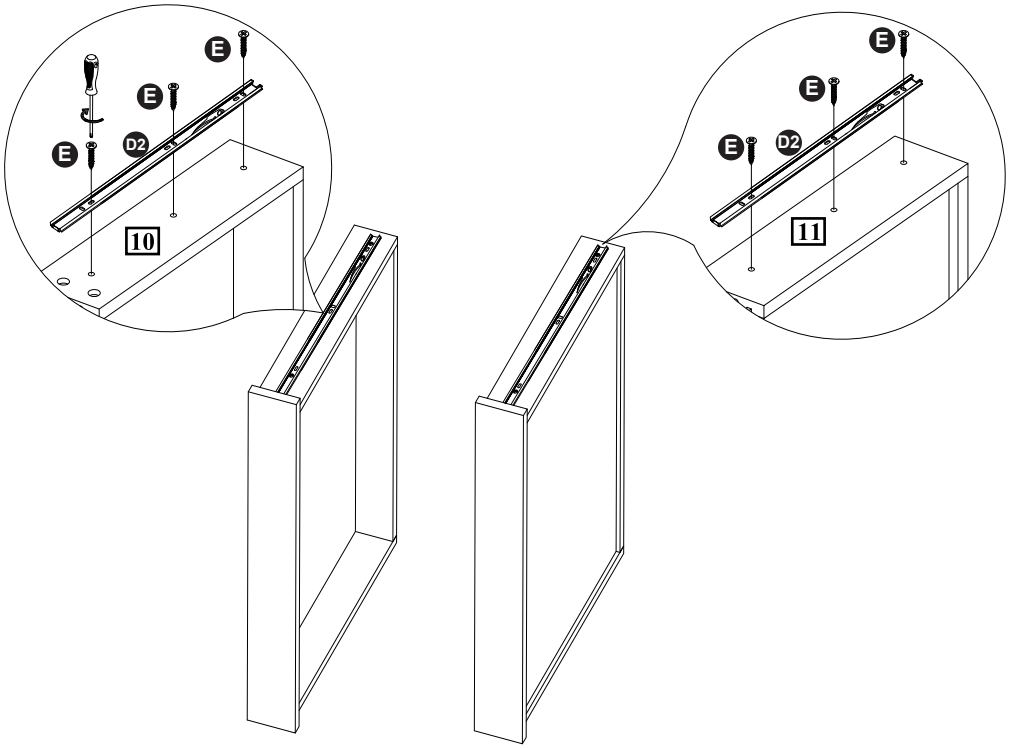

Step 14

a: Insert the drawer

Assemble is complete.

