
Metal Single Bed Silver

Assembly Instructions - Please keep for future reference | 806/5102

HOME BY ARGOS

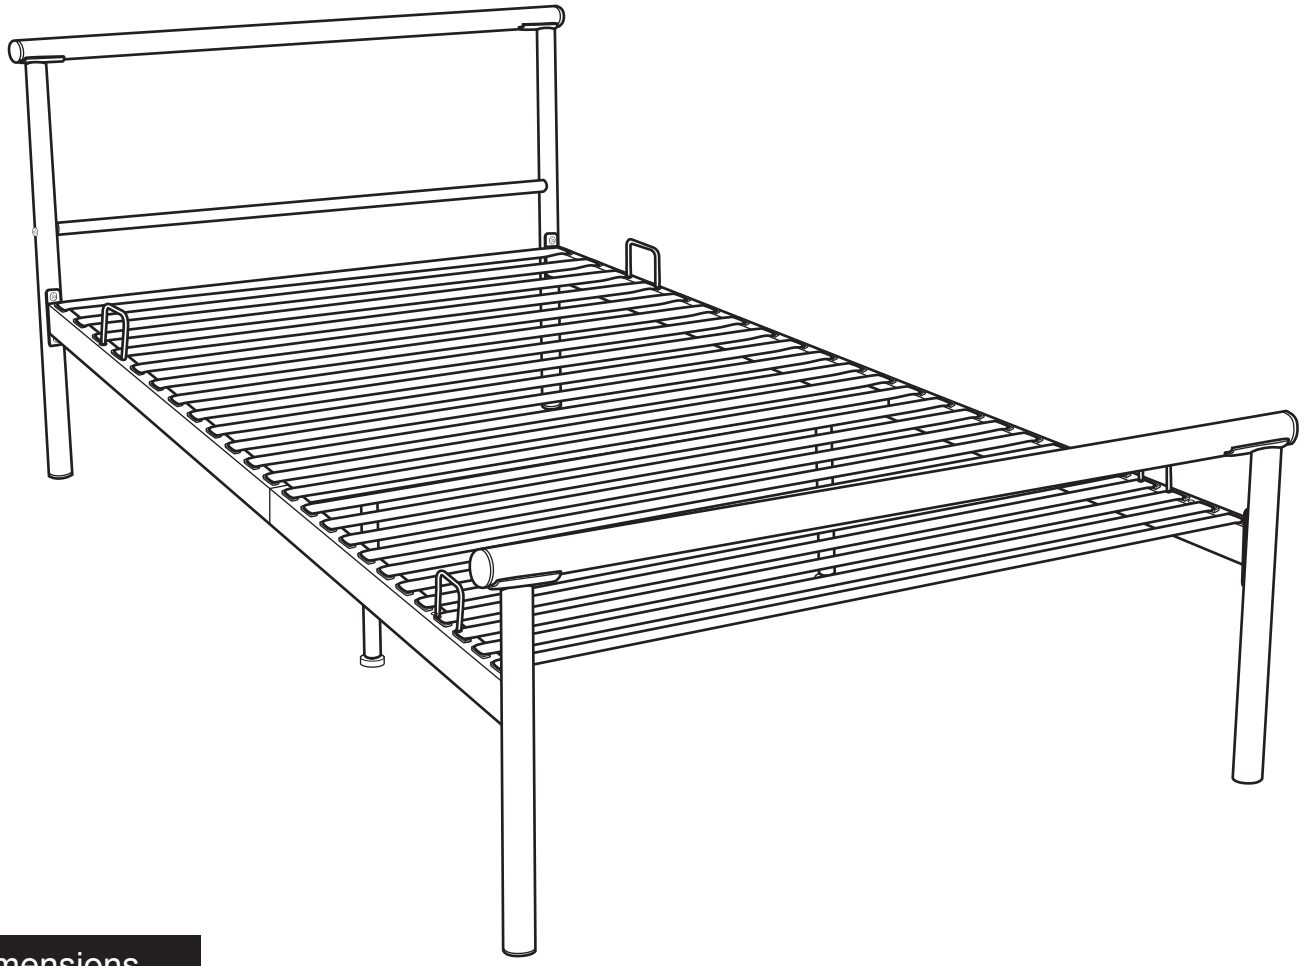

Dimensions

Width - 197cm
Depth - 95cm
Height - 45/69cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800

Issue 1 - 18/10/17

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

• Unit weight: 15.6kgs.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

• Regularly check and ensure that all bolts and fittings are tightend properly.

Components - Parts

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 640 0800**

Please check you have all the parts listed below



1 Left headboard post
(66.5 x 5.5 x 3cm)



2 Right headboard post
(66.5 x 5.5 x 3cm)



3 Left footboard post
(43 x 5.5 x 3cm)



4 Right footboard post
(43 x 5.5 x 3cm)



5 Top rail x 2
(Ø2.8 x 95.5cm)



6 Rail
(Ø1.6 x 89cm)



7 Long side rail x 2
(103.5 x 11 x 2.5cm)




8 Short side rail x 2
(96 x 11 x 2.5cm)



9 Slat x 24
(92 x 3 x 2.5/Ø1.6cm)



10 Centre rail
(90 x 8 x 3cm)




11 Centre leg x 2
(31.5 x 8 x 2.5/Ø1.9cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  M6 x 38mm Bolt x 2	**B**  M6 x 15mm Bolt x 22	**C**  Adjustable footing x 2
D  Mattress stopper x 4	**E**  Allen key x 1	

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Assembling headboard and footboard


a: Position the headboard posts 1 , 2 and rail 6 as shown. Fix through holes using bolts A then tighten with allen key E.

b: Position the top rail 5 on the headboard posts 1 & 2 as shown. Fix through holes using bolts B then tighten with allen key E.


Repeat above steps to assemble the footboard posts 3 & 4 and top rail 5 .


Important:
Do not fully tighten the bolts at this stage.


a:

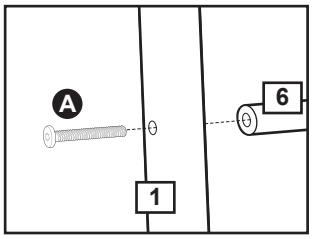

b:

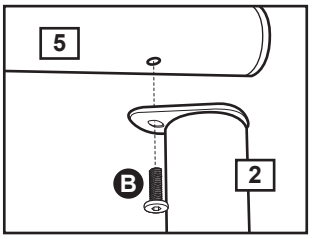

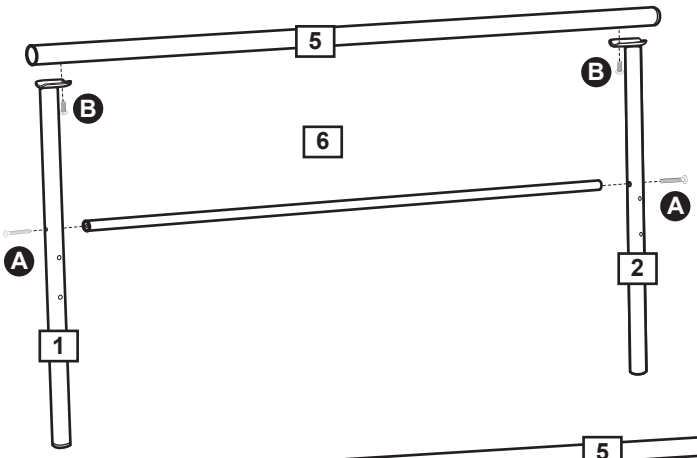


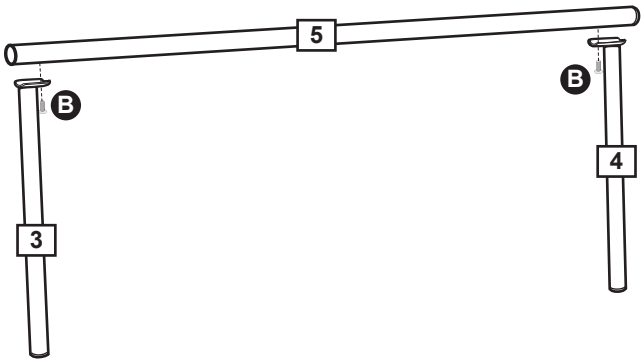


Step 2

Assembling side rails

Insert the long side rail 7 into short side rail 8 as shown. Fix through holes using bolts B then tighten with allen key E.

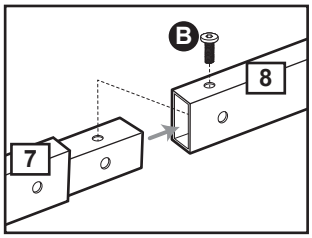

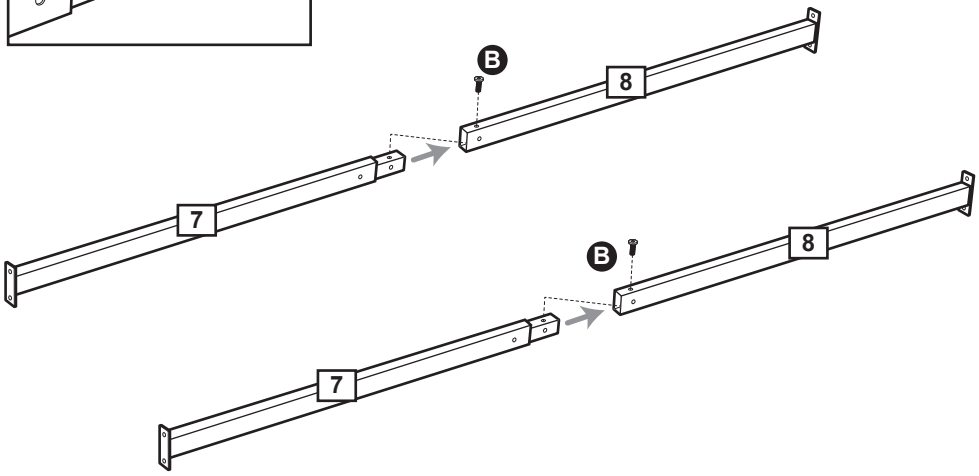

Assembly Instructions

Step 3


Attaching centre legs & centre rail

a: Position the assembled side rails 7 & 8 and centre rail 10 as shown. Fix through holes using bolts B then tighten with allen key E.

b: Position the centre legs 11 on the centre rail 10 as shown. Fix through holes using bolts B and tighten with allen key E.

c: Fix the adjustable footing C to centre legs 11 by turning it clockwise as shown.

Important: Do not fully tighten the bolts at this stage.

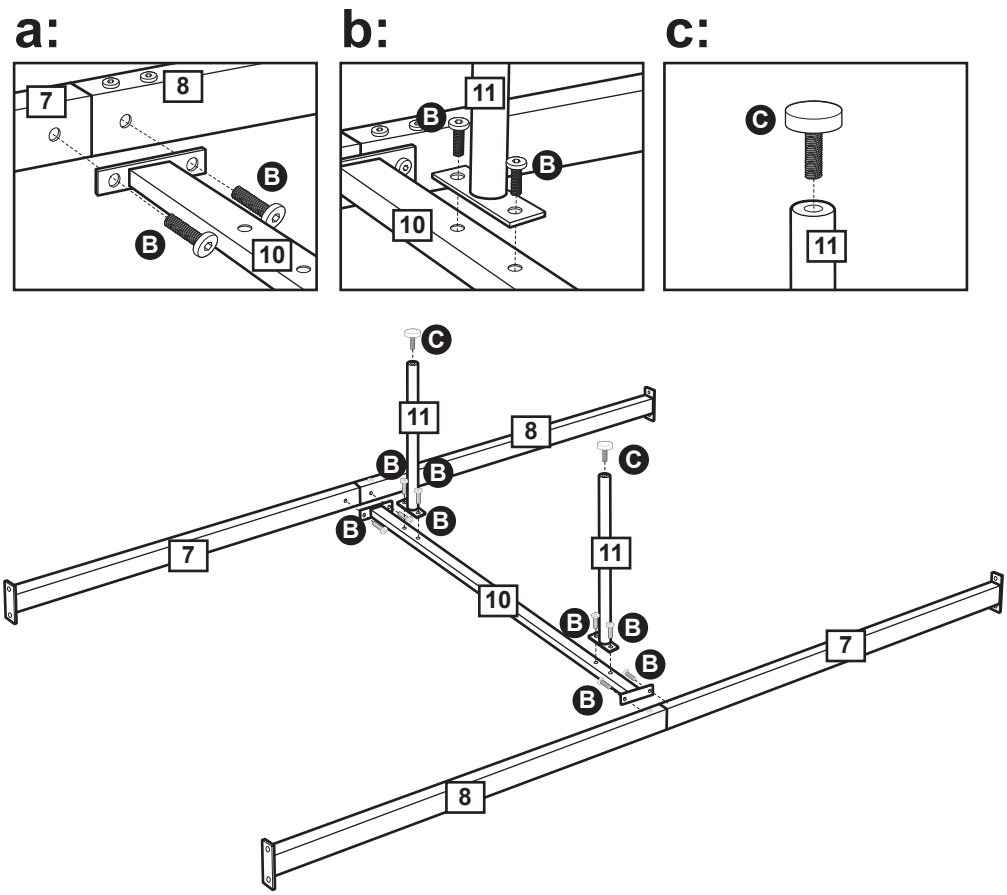


Step 4

Attaching side rails

Position the assembled siderails between the headboard and footboard as shown. Fix through holes using bolts B and tighten with allen key E.

Important: Two persons are required to hold on the frames to assist the assembly.

Important: Do not fully tighten the bolts at this stage.

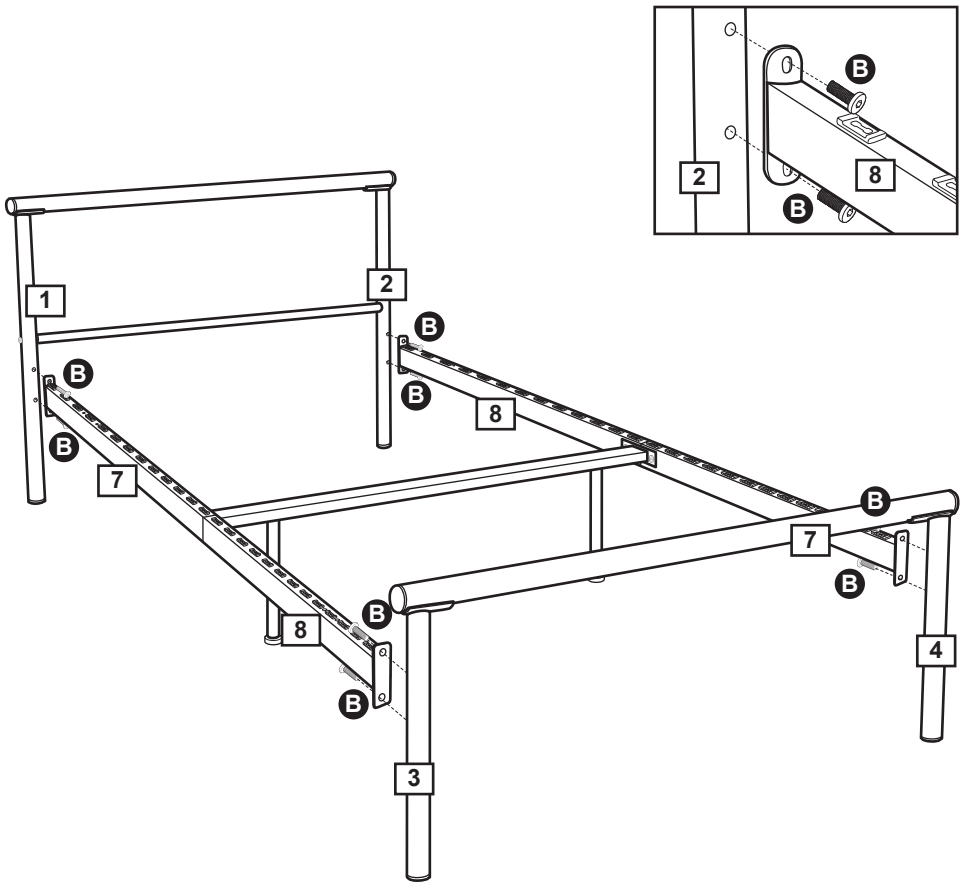


Assembly Instructions

Step 5

Attaching slats

Position the slats 9 as shown and insert into holes on the side rails 7 and 8. Lock the slats into position by pressing down firmly.

Important:
Fully tighten all the bolts assembled in previous steps using the allen key E.

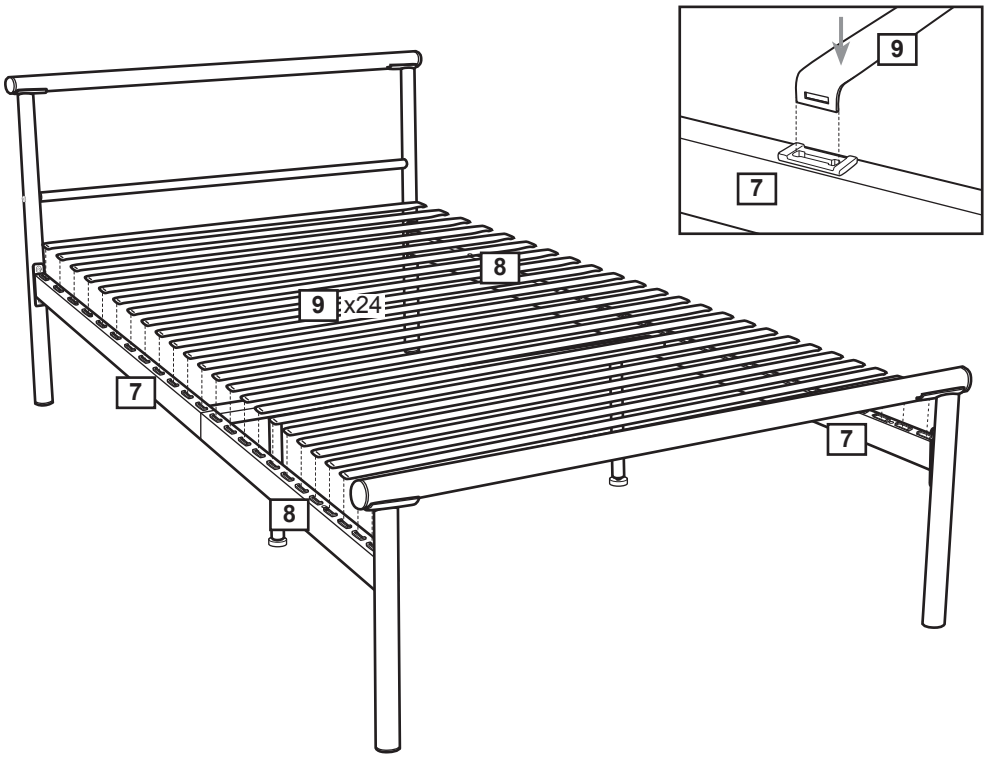

Step 6

a: Attaching mattress stoppers


Insert the mattress stoppers D into holes on the side rails 7 & 8 as shown.

b: Aligning the legs

Tighten all bolts on the unit using allen key E.

Use the adjustable footing C on the bottom of the centre legs 11 to adjust its height making sure it is at an even level on the floor.

Assembly is complete.

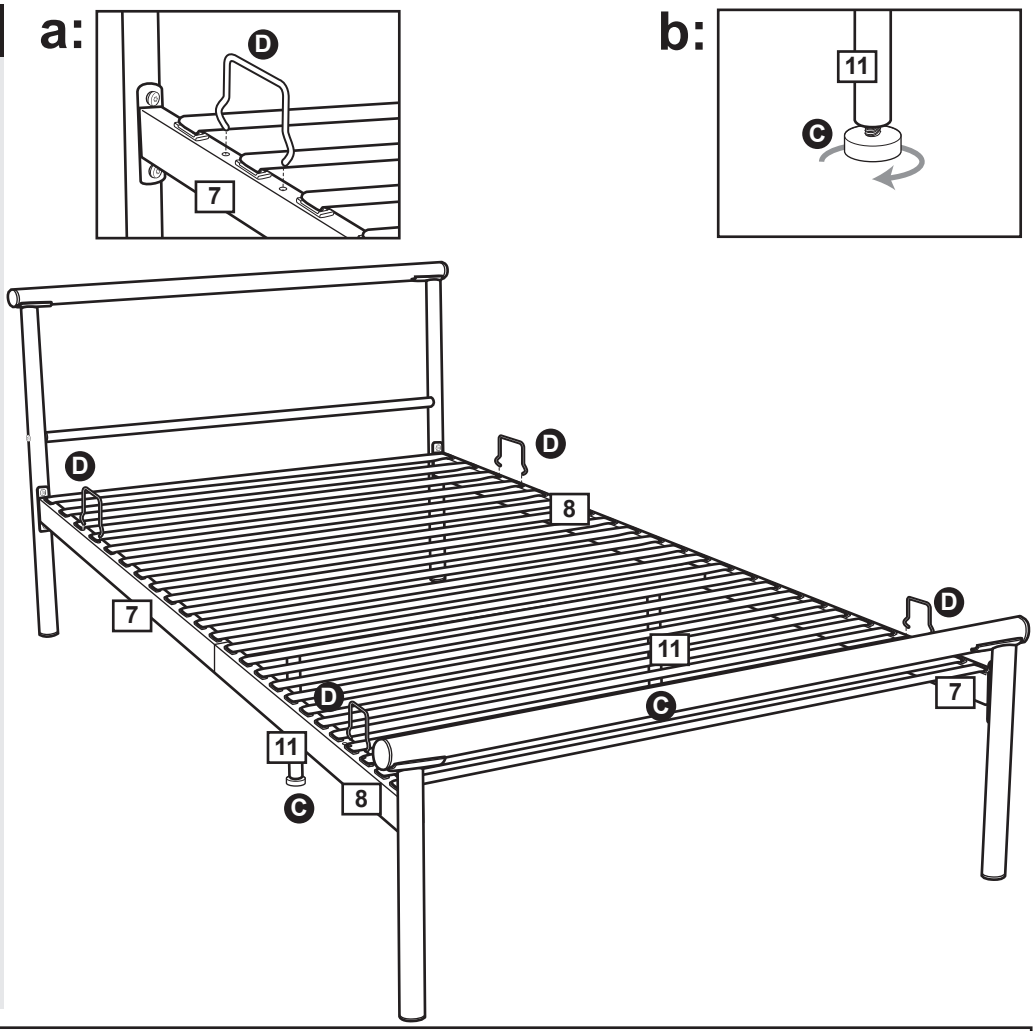

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800