
Padstow Bay Tall Boy

Assembly Instructions- please keep for future reference

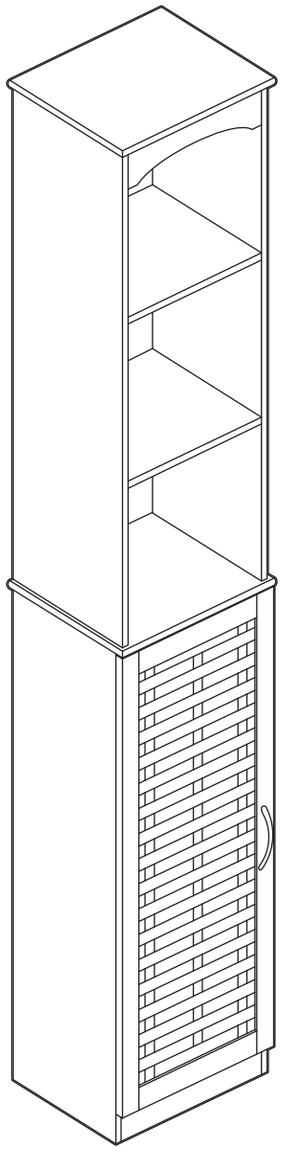

Dimensions

Width - 30cm
Depth - 24cm
Height - 172cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0121 753 7720**

Issue 1 - 07/09/10

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 1 and 2.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance


• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels


Please check you have all the panels listed below

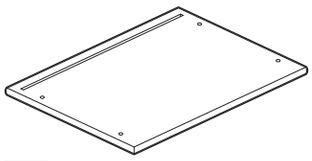


1 Cupboard top x 1
(30(w)cm x 24(d)cm)

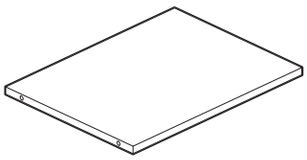


2 Internal shelf x 1
(26(w)cm x 20(d)cm)

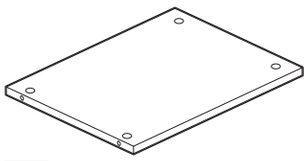


3 Internal shelf x 1
(26(w)cm x 20(d)cm)

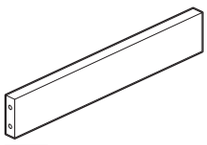


4 Bottom rail x 1
(6(h)cm x 26(w)cm)

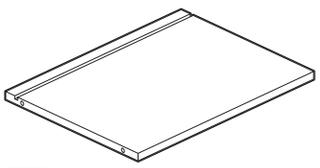


5 Base x 1
(26(w)cm x 20.5(d)cm)

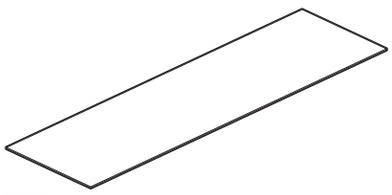


6 Bottom back panel x 1
(79(h)cm x 27(w)cm)

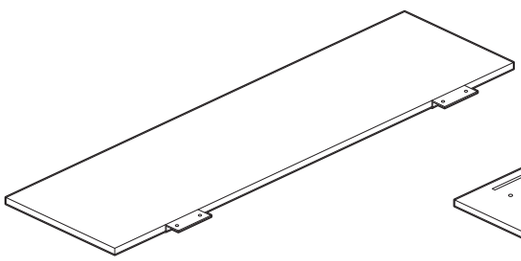


7 Bottom left side x 1
(84.5(h)cm x 22(d)cm)

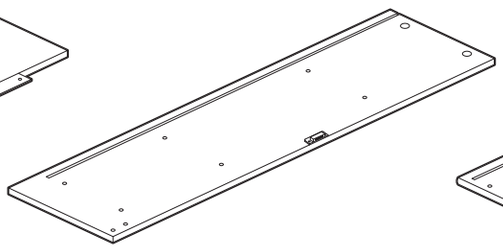


8 Bottom right side x 1
(84.5(h)cm x 22(d)cm)

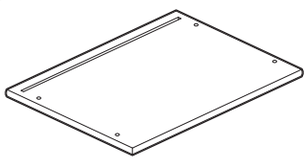


9 Top x 1
(30(w)cm x 24(d)cm)

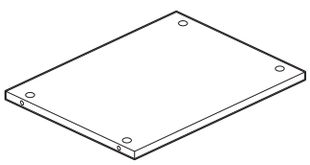


10 Shelf x 1
(26(w)cm x 21.5(d)cm)

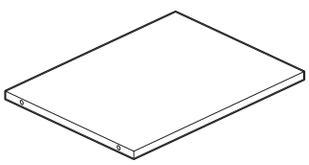


11 Shelf x 1
(26(w)cm x 21.5(d)cm)

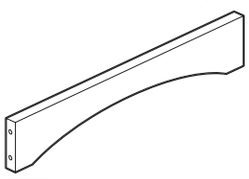


12 Pelmet rail x 1
(6(h)cm x 26(w)cm)

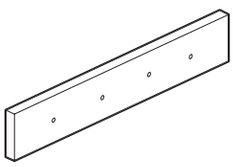


13 Wall support x 1
(5(h)cm x 26(w)cm)

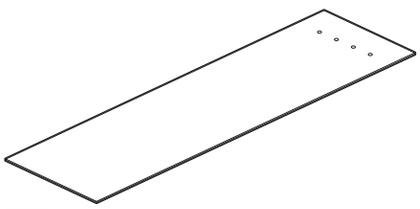


14 Top back panel x 1
(85.5(h)cm x 27(w)cm)

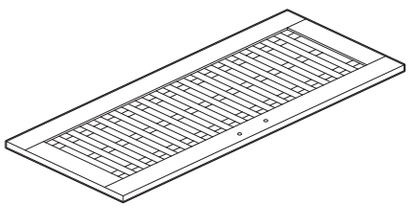

15 Door x 1
(78(h)cm x 29(w)cm)

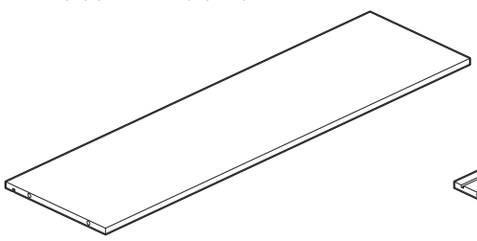

16 Top left side x 1
(84.5(h)cm x 23.5(d)cm)

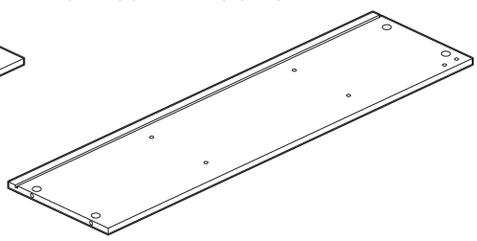









17 Bottom right side x 1
(84.5(h)cm x 23.5(d)cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0121 753 7720**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

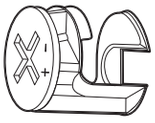A 	**B** 	**C** 	**D** 
28mm Male camlock x 8	12mm Female camlock x 8	30mm Wooden dowel x 16	18mm Screw x 2
E 	**F** 	**G** 	**H** 
Handle x 1	3x12mm Screw x 4	4x12mm Screw x 2	Rawl plug x 2
I 	**J** 	**K** 	
35mm Screw x 2	35mm Male camlock x 16	15mm Female camlock x 16	

Tools required




Phillips screwdriver
(medium & large)

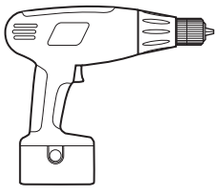

Drill
(for drilling walls only)

Ruler – Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1


Insert 4 x 35mm male camlock **J** into underside of cupboard top **1** as shown.

Tighten with a screwdriver.

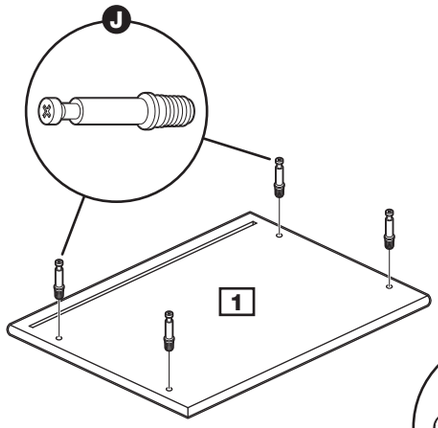


Step 2

Insert 4 x 30mm wooden dowel **C** into ends of internal shelf **2** as shown.

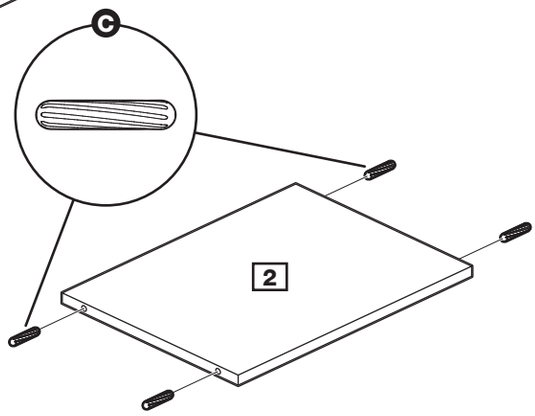


Step 3

Insert 4 x 30mm wooden dowel **C** into ends of bottom rail **4** as shown.

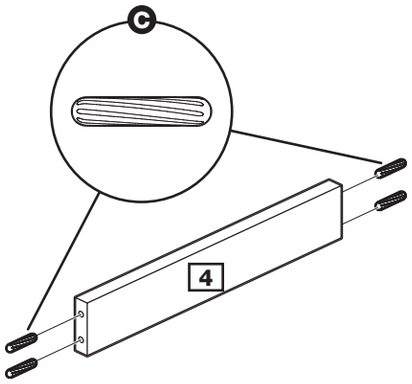


Step 4

Insert 4 x 12mm female camlock **B** into underside of internal shelf **3** as shown.

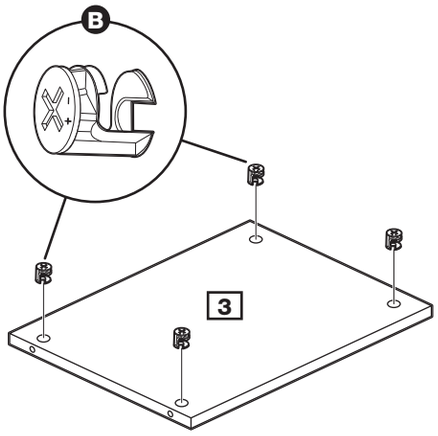

Step 5

Insert 4 x 15mm female camlock **K** into underside of base **5** as shown.

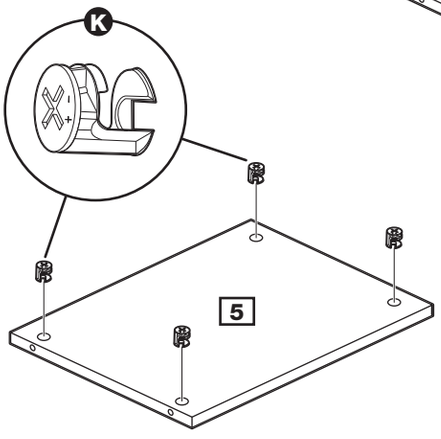


Assembly Instructions

Step 6

Insert 2 x 28mm male camlock **A** and 2 x 35mm male camlock **J** into bottom left side [7] as shown. Tighten with a screwdriver.


Insert 2 x 15mm female camlock **K** into bottom left side [7] as shown.

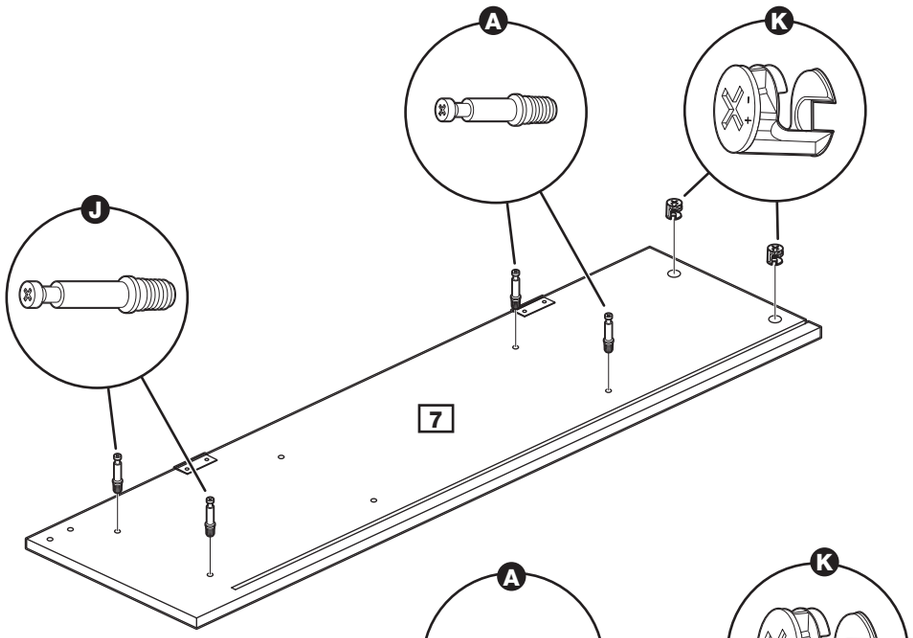

Step 7

Insert 2 x 28mm male camlock **A** and 2 x 35mm male camlock **J** into bottom right side [8] as shown. Tighten with a screwdriver.

Insert 2 x 15mm female camlock **K** into bottom right side [8] as shown.

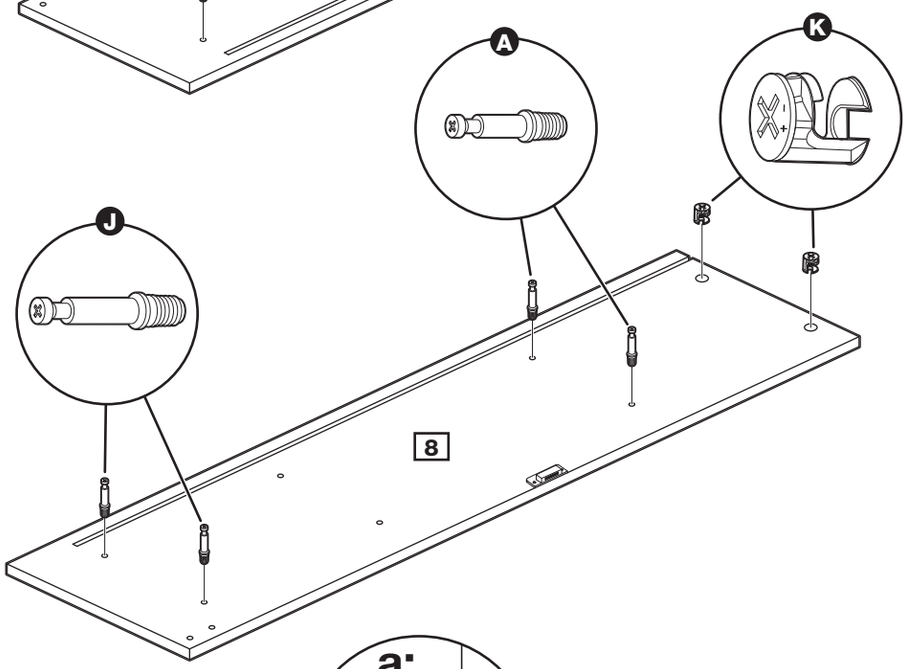


Step 8

Connect base [5], both internal shelves [2] and [3], and bottom rail [4] to bottom right side [8].

Tighten all the female camlocks with a screwdriver as shown (**a:**).

Note: you should feel a click when female camlock is fully locked.

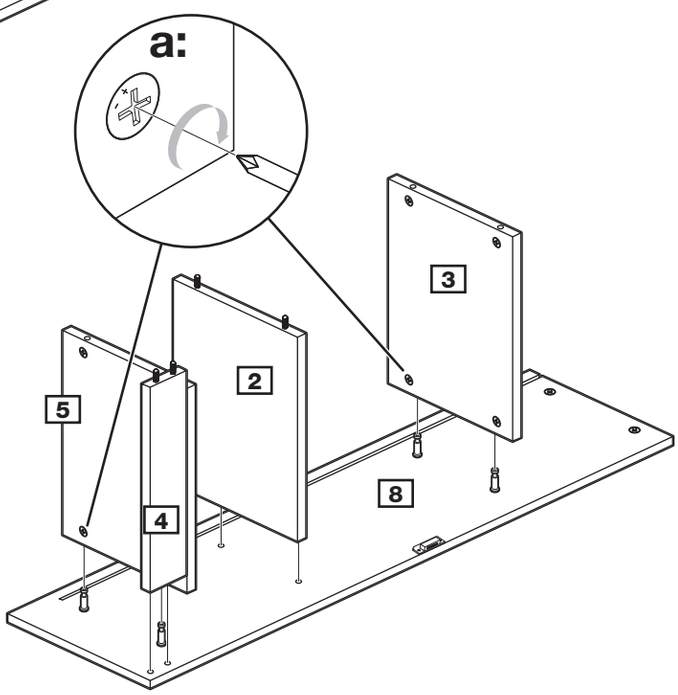


Assembly Instructions

Step 9

Connect bottom left side [7] to base [5], both internal shelves [2] and [3], and bottom rail [4] to bottom right side [8].

Tighten all the female camlocks with a screwdriver as shown (see Step 8 **a:**).

Note: you should feel a click when female camlock is fully locked.

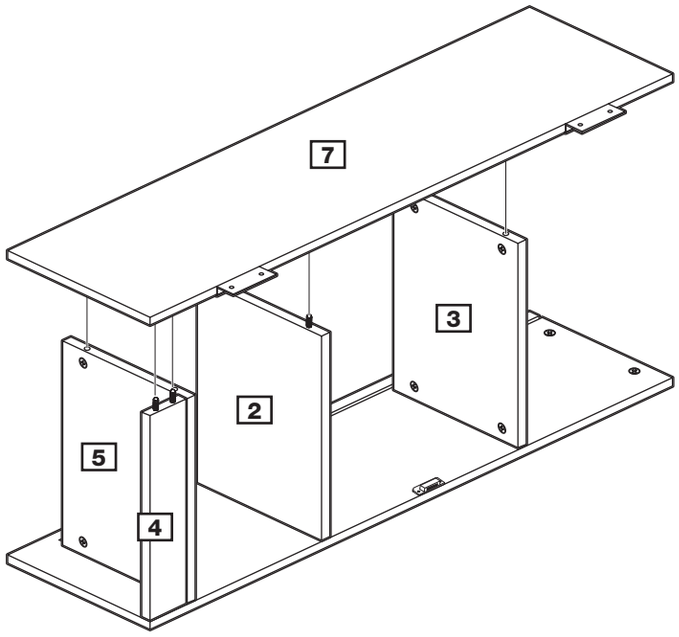


Step 10

Slide bottom back panel [6] into place.

Connect cupboard top [1] as shown and tighten female camlocks with a screwdriver (see Step 8 **a:**).

Note: you should feel a click when the female camlocks are fully locked.

Insert 4 x 35mm male camlock **J** into the top side of cupboard top [1] as shown. Tighten with a screwdriver.

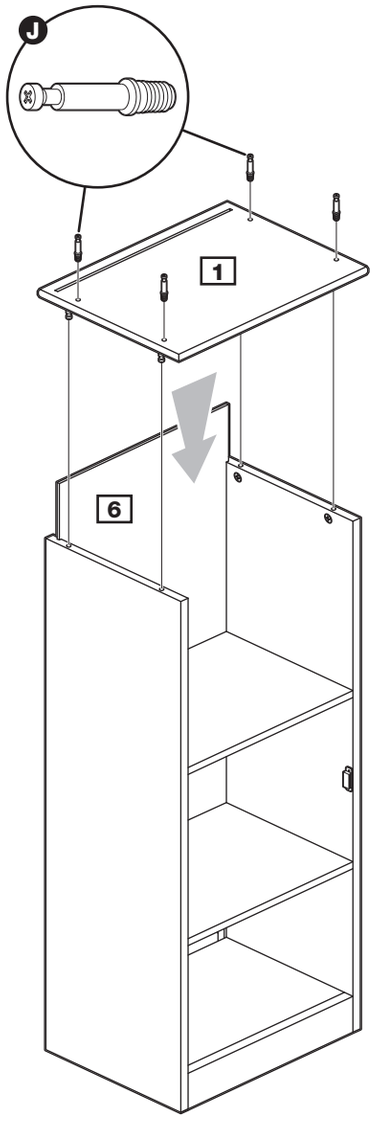


Assembly Instructions

Step 11

Connect door 15 to the unit by fixing door hinges to body using using 4 x 12mm screw F.


Attach handle E to door using 2 x 18mm screw D.

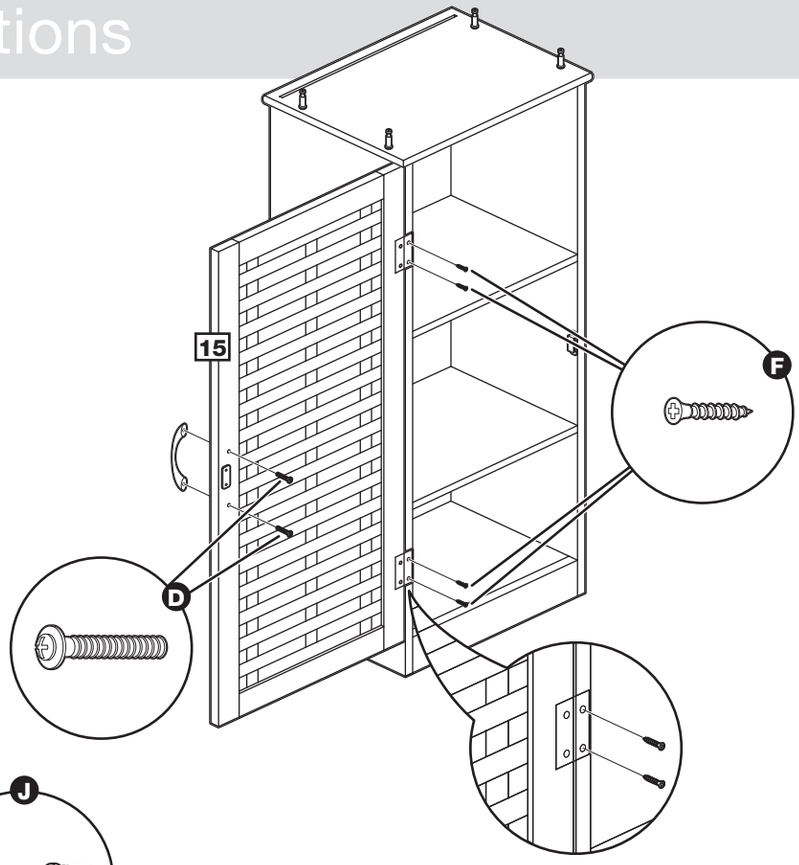

Step 12


Insert 4 x 35mm male camlock J into underside of top 9 as shown.

Tighten with a screwdriver.

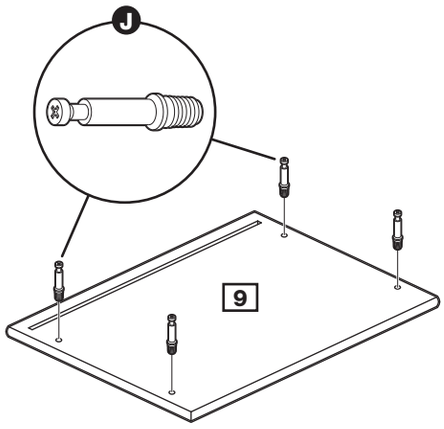


Step 13

Insert 4 x 12mm female camlock B into underside of shelf 10 as shown.

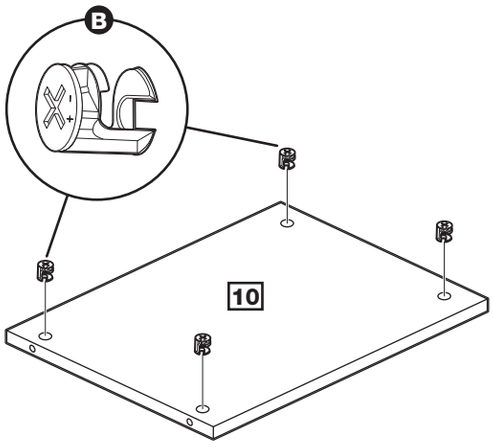


Step 14

Insert 4 x 30mm wooden dowel C into ends of shelf 11 as shown.

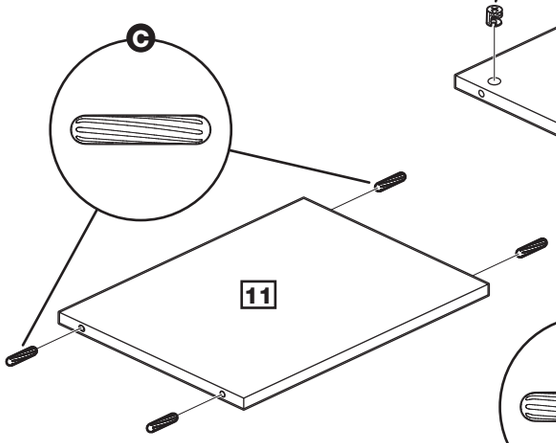

Step 15

Insert 4 x 30mm wooden dowel C into ends of pelmet rail 12 as shown.

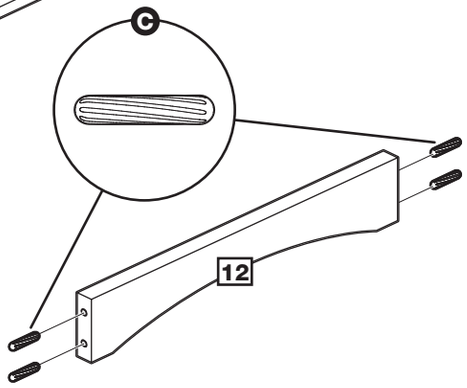

Assembly Instructions

Step 16

Insert 2 x 28mm male camlock Ⓐ into top left and right sides 16 17 as shown. Tighten with a screwdriver.

Insert 4 x 15mm female camlock Ⓚ into top left and right sides 16 17 as shown.

Step 17

Connect shelves 10 and 11, and pelmet rail 12 to top right side 17.

(see Step 8 **a:**).


Note: you should feel a click when female camlock is fully locked.

Step 18

Connect top left side 16 to shelves 10 and 11, and pelmet rail 12.

Tighten all the female camlocks with a screwdriver as shown (see Step 8 **a:**).

Note: you should feel a click when female camlock is fully locked.

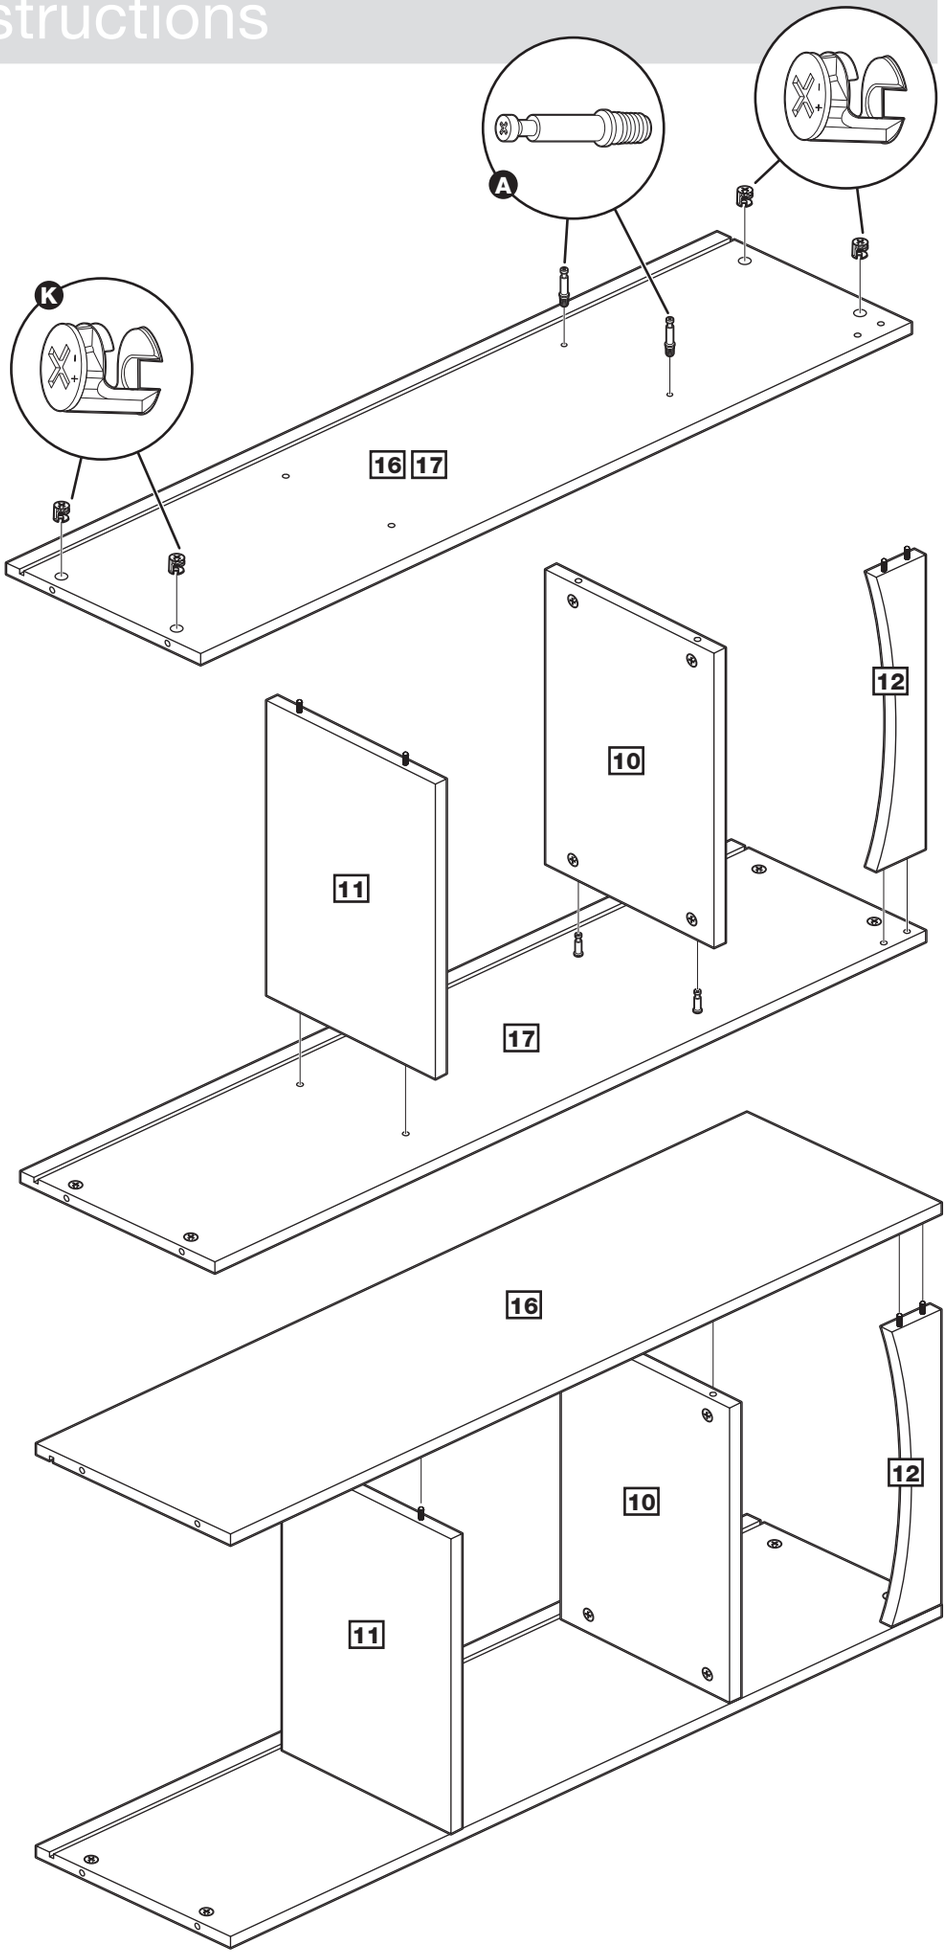

Assembly Instructions

Step 19


Connect the top half of the unit to the bottom half as shown and tighten the femlae camlocks with a screwdriver (see Step 8 **a:**).

Slide the top back panel 14 into place.

Connect top panel 9 and tighten the female camlocks with a screwdriver.

Warning: The unit is heavy. Take care when lifting.

Important: you may find it helpful to have assistance from another person at this stage.

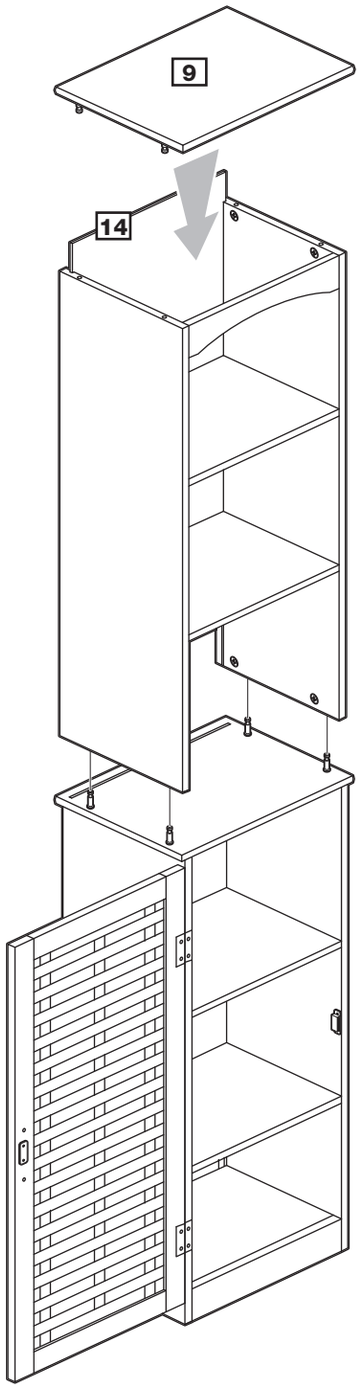


Assembly Instructions

Step 20

To prevent accidental toppling, it is recommended to secure the unit in place by screwing it to a wall as shown using rawl plugs Ⓗ, 35mm screws Ⓘ and 12mm screws Ⓖ, and wall support 13.

Note: see the back cover for more information on wall mounting and the suitable use of the supplied rawl plugs.

Warning:
Before drilling, check wall for hidden pipes and cables.

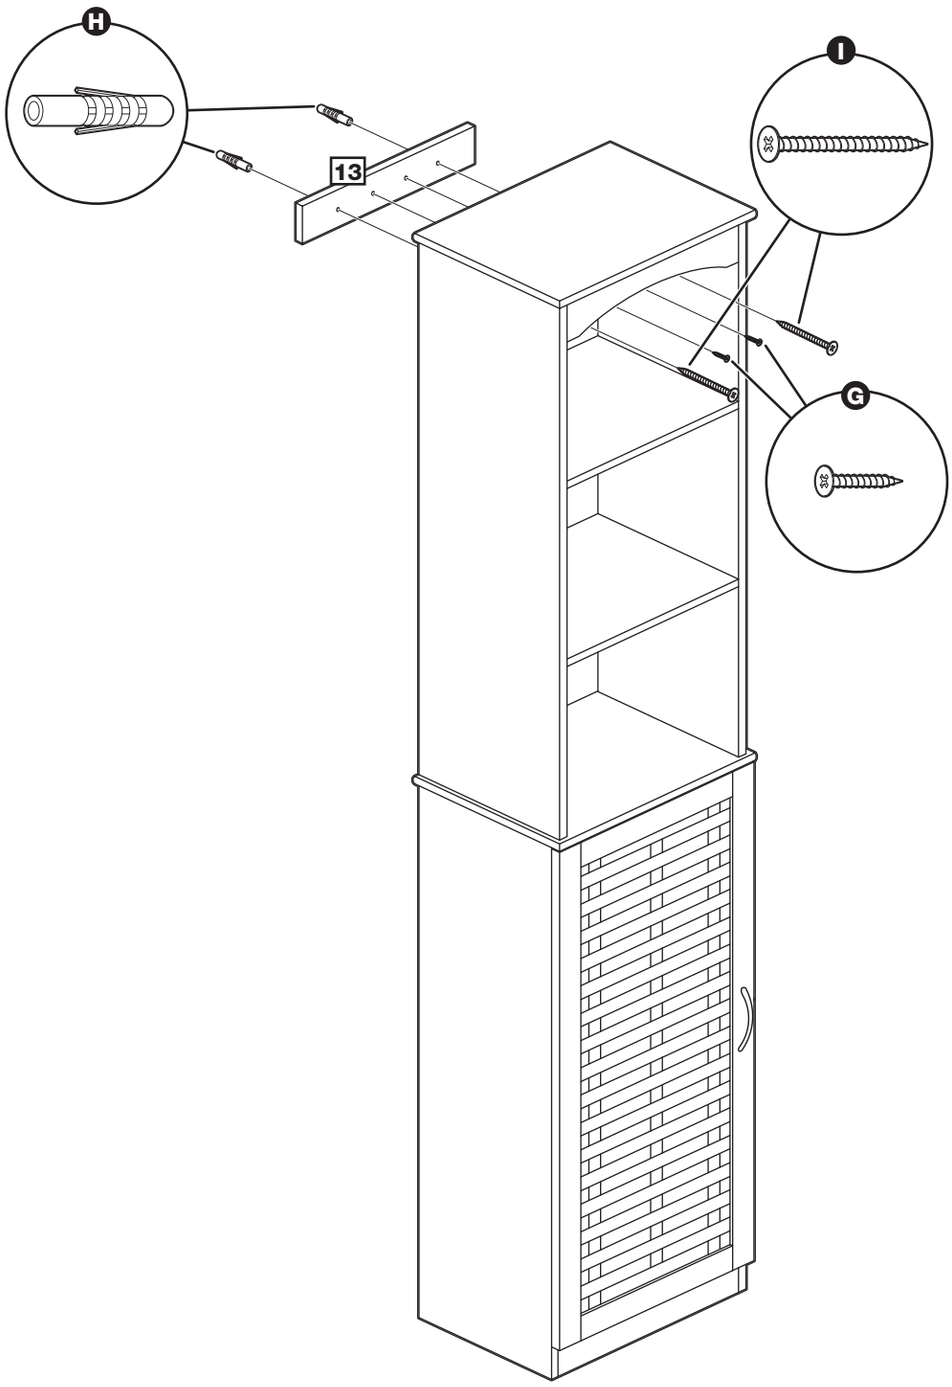

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

⚠ **Important:** when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: ⚠ always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 “General Purpose” wall plug

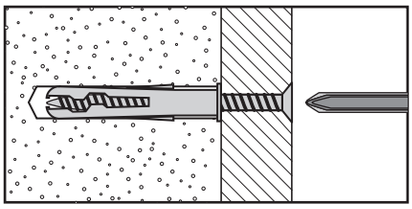


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 “Cavity Fixing” wall plug

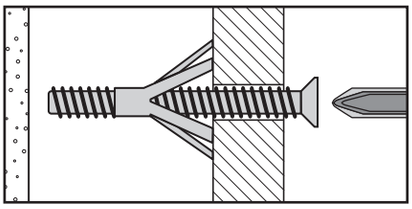


For use with plasterboard partitions or hollow wooden doors.

No.5 “Hammer Fixing” wall plug

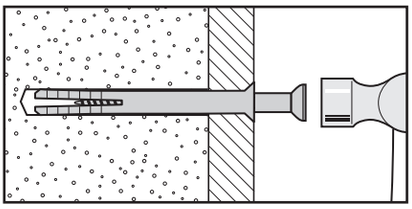


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 “Plasterboard” wall plug

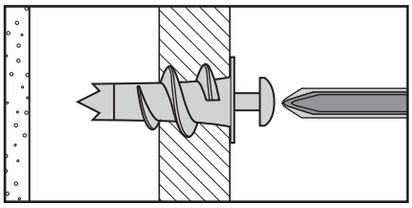


For use when attaching light loads onto plasterboard partitions.

No.4 “Cavity Fixing – Heavy Duty” wall plug

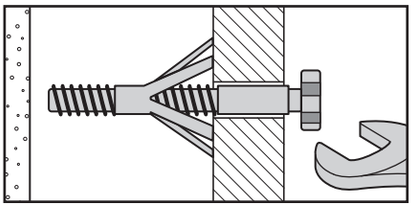

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 “Shield Anchor” wall plug – heavy loads

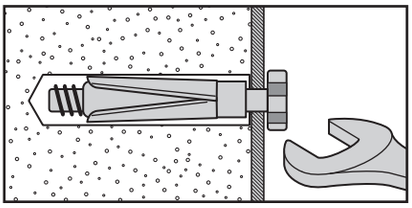

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

⚠ Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0121 753 7720**