
CANVAS SHELF UNIT

Simple Assembly Instructions - Please keep for future reference

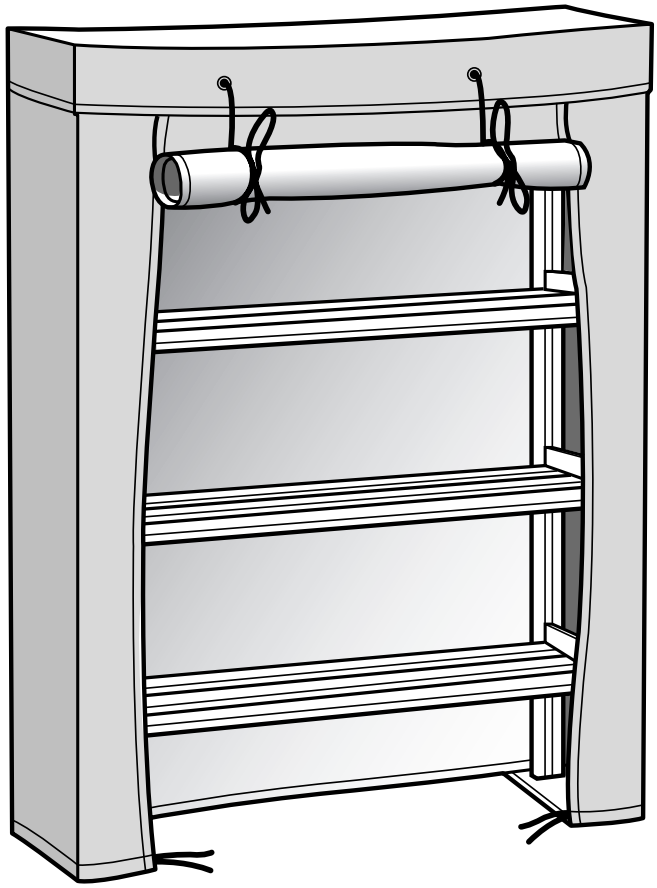

TOOLS NEEDED

All you will need to assemble this Shelf Unit is a cross head screwdriver.



USEFUL TIPS

1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Assemble this product on a carpet.
3. Keep fittings out of children's reach.
4. We suggest you retain these instructions for future reference.


Parts and fittings

TIDY RAIL = 26 parts


❶ Shelf Support x 8



❷ Shelf Slat x 12




❸ Upright x 4



❹ Door Pole x 1

❺ Canvas Cover x 1

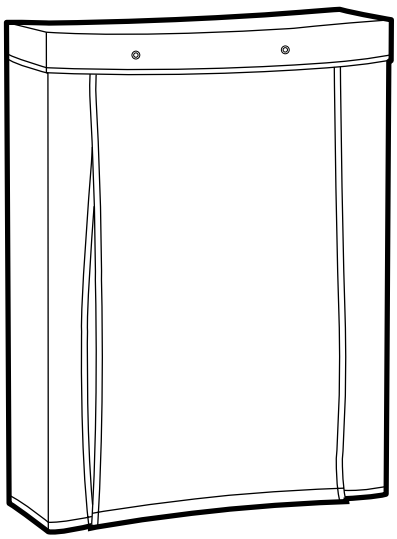


FITTINGS = 50 parts

Ⓐ Tie x 2



Ⓑ Screw 35mm x 48





Screw shown actual size

Assembly Instructions **Canvas Shelf Unit**

Stage One - Assemble Shelves

1. Slot shelf slat ❷ into groove in shelf support ❶ and secure using screws Ⓑ and a crosspoint screwdriver Repeat for other two shelf slats ❷ and opposite shelf support ❶.
2. Follow above procedure to assemble other three shelves. (*see Fig 1*)

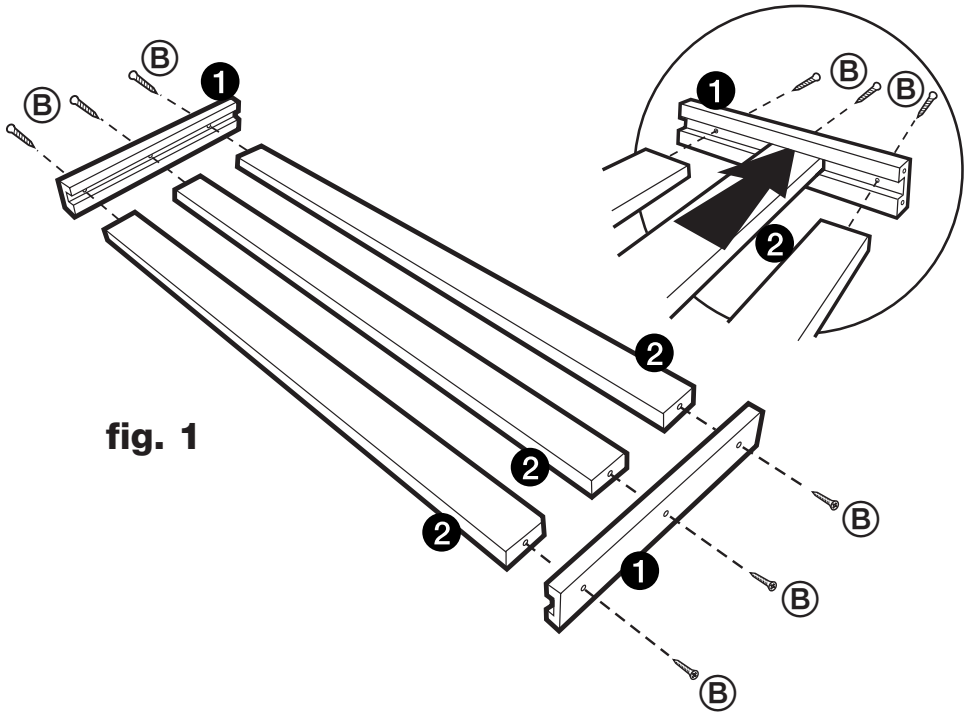


fig. 1

Stage Two - Fit Shelves to Uprights

1. Slot shelf support ❶ into groove in upright ❸. Align with screw guide holes in top of upright ❸ with holes closest to the end. Screw into position using screws Ⓑ and a crosspoint screwdriver.
2. Follow above procedure to fit remaining three shelves to upright ❸.
3. Follow above procedure to fit Remaining three uprights ❸ to shelves.

   Note top and base shelf are secured with two screws at each end of shelf support. Other shelves are secured with one screw. (*see Fig 2*)

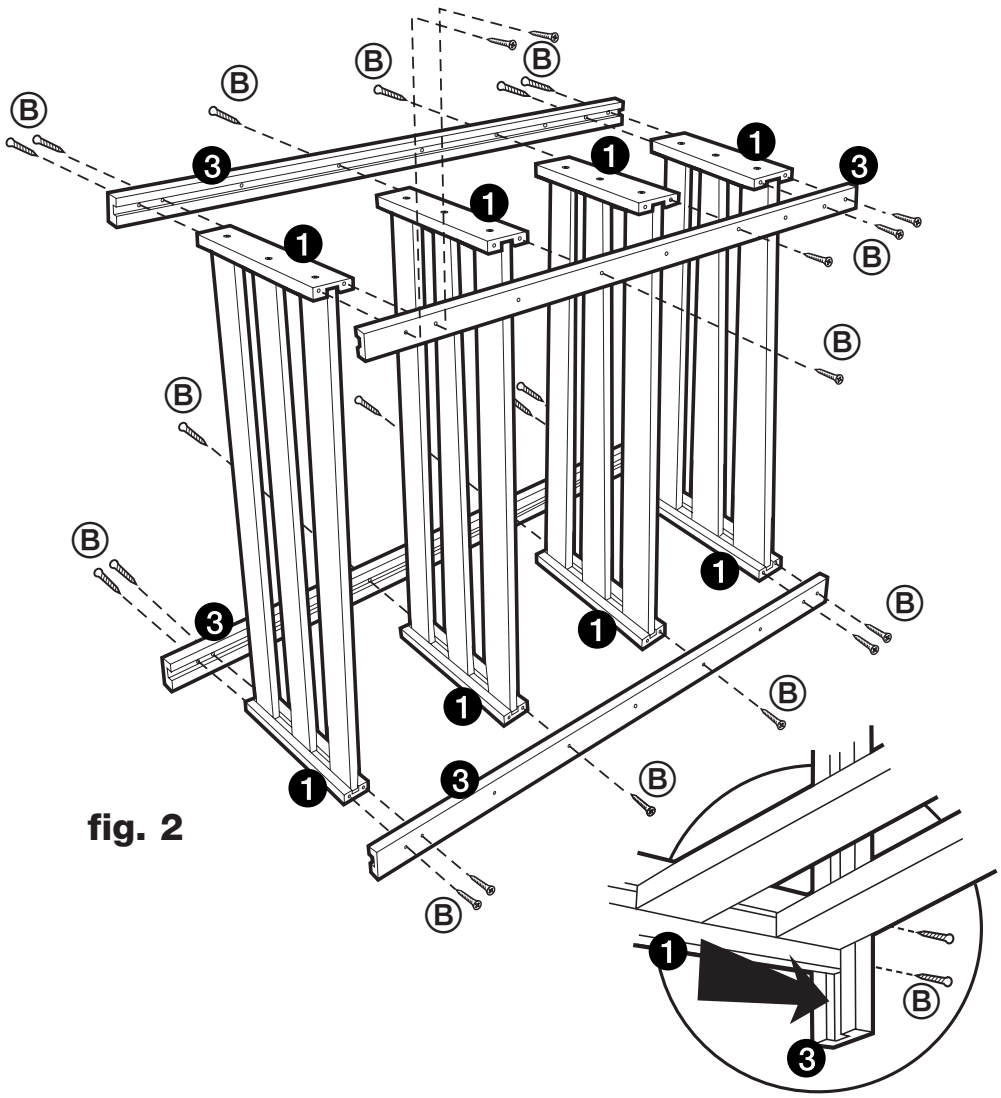


fig. 2

Stage Three - Fitting Canvas Cover and Door Pole

1. Open canvas cover ❺, fit over shelf unit, pull down sides and hook under uprights ❸. Using the ties attached to the canvas cover ❺ secure into position.
2. Locate door pole ❹ into seam of door flap in canvas cover ❺ and push into position. Thread ties Ⓐ through eyes in top of canvas cover ❺. Door can be either left down or rolled up and secured using the ties Ⓐ.
(*see Fig 3 & 4*)


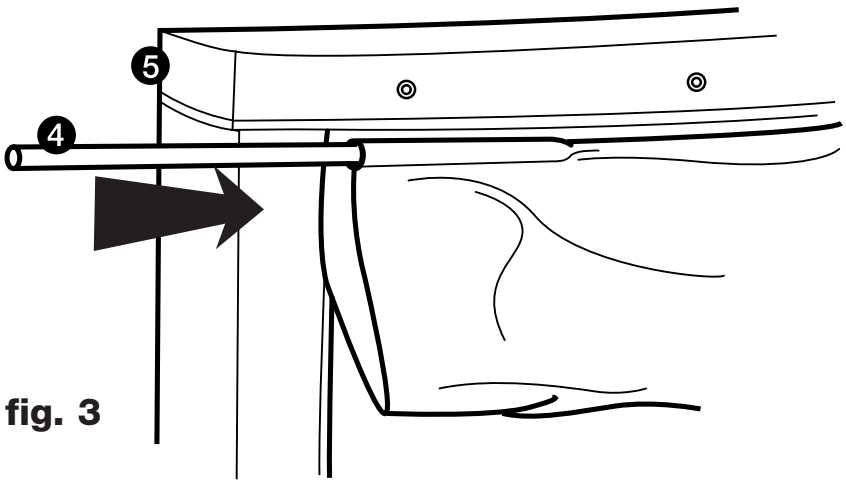



fig. 3

fig. 4

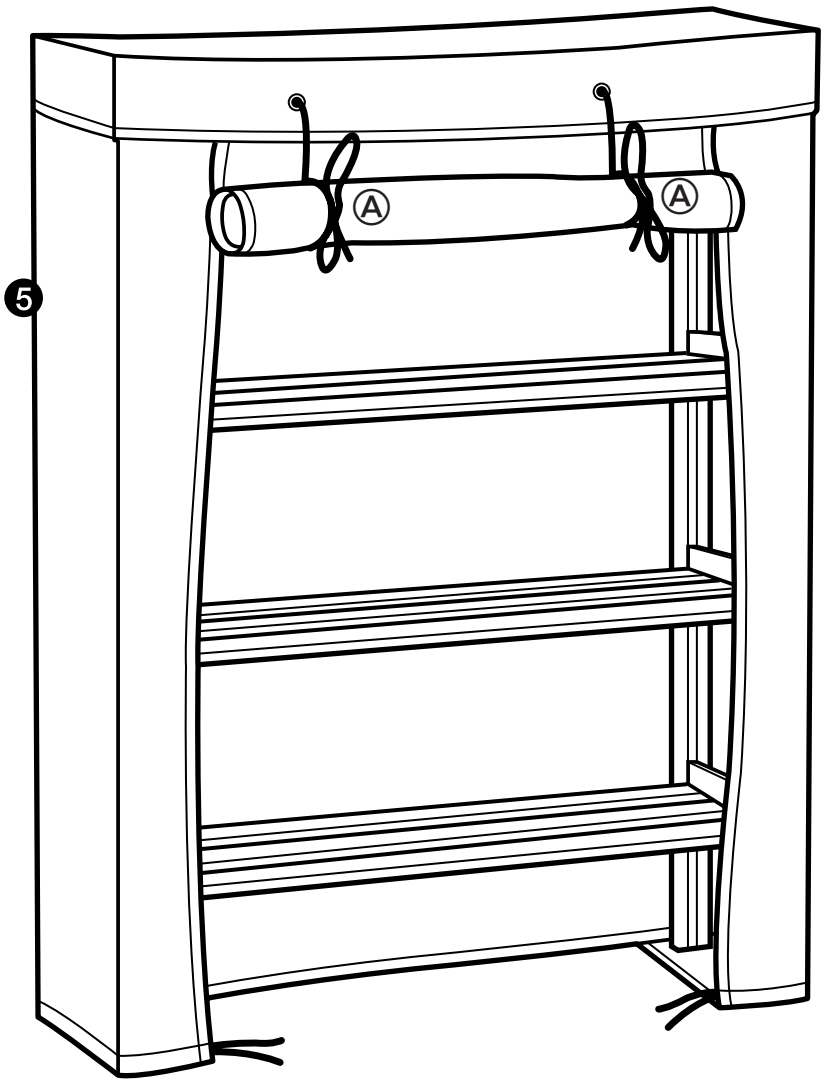

CANVAS COVERED SHELF UNIT

Easy Assembly Instruction

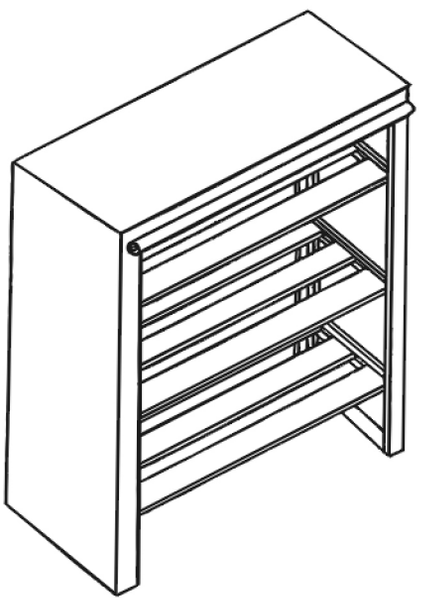

Before you start,here is some helpful advice

1.We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.

2.If you follow the instructions carefully the end result should be worth the effort.

3.Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

4.Assemble this product on a carpet.

5.To ensure an easier assembly,we strongly advise that all fittings are only finger tightened during initial assembly.Only upon completion of the assembly should all fixing points be fully tightened.

6.We recommend a periodic check on all fixing points to make sure they remain fully tightened.

7.Keep glue and fittings out of childrens reach.

After-sales telephone number for spare parts: 08456 400 800
Home Retail Group, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

Component parts and fittings contained in the box

PARTS

PARTS & FIXINGS


IMPORTANT: Please note that all wooden parts are identified with numbers corresponding to those shown in this instruction leaflet. Please also take note of the position of the holes on each part.



① QTY-2




② QTY-2

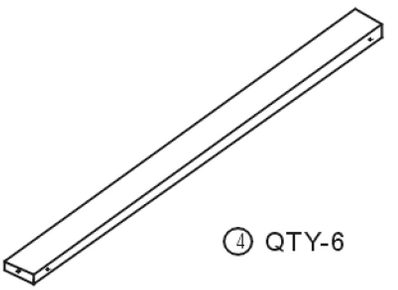


④ QTY-6


NOTE: WITH EXTRA HOLES

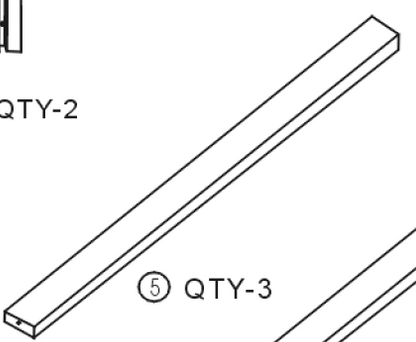


⑤ QTY-3

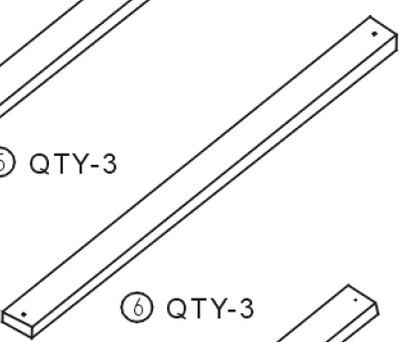


⑥ QTY-3

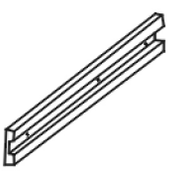


③ QTY-6

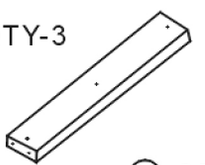

⑦ QTY-2

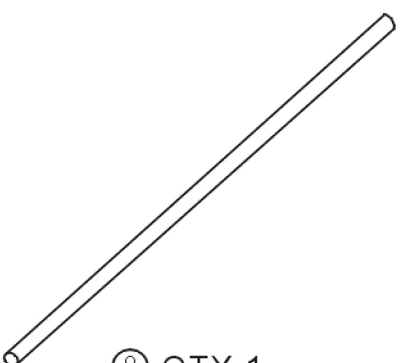

⑧ QTY-1

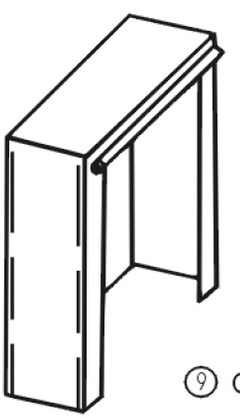

⑨ QTY-1

FITTINGS



Short
25mm

Ⓐ QTY-24




Long
35mm

Ⓑ QTY-32




Ⓒ QTY-2

ASSEMBLY

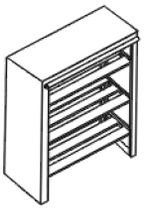


STEP 1

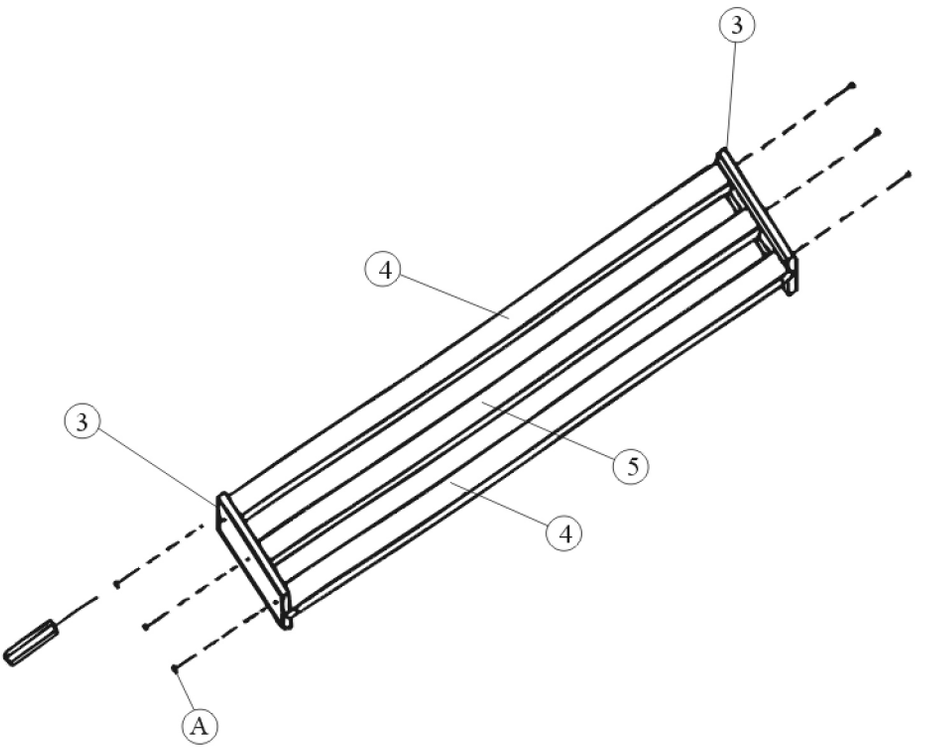


1) Assemble slats (4) and (5) in between supports (3) using fixings (A).

2) Slats (4) have extra holes on 1 side. these extra holes must be on the outside edges.

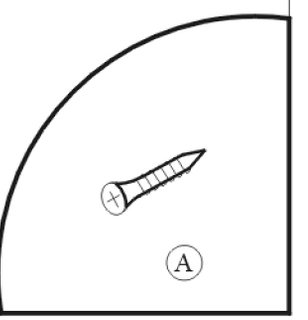

ASSEMBLY

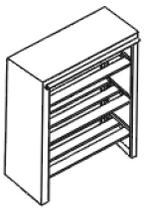



STEP 2

1)Fit slatted shelves in between corner posts (1) and (2) as shown.
Use fixings (B) to secure.

Note:posts (1) should be diagonally opposite each other, and posts (2) should be diagonally opposite each other.

2)Fit top supports (7) using fixings (B) .

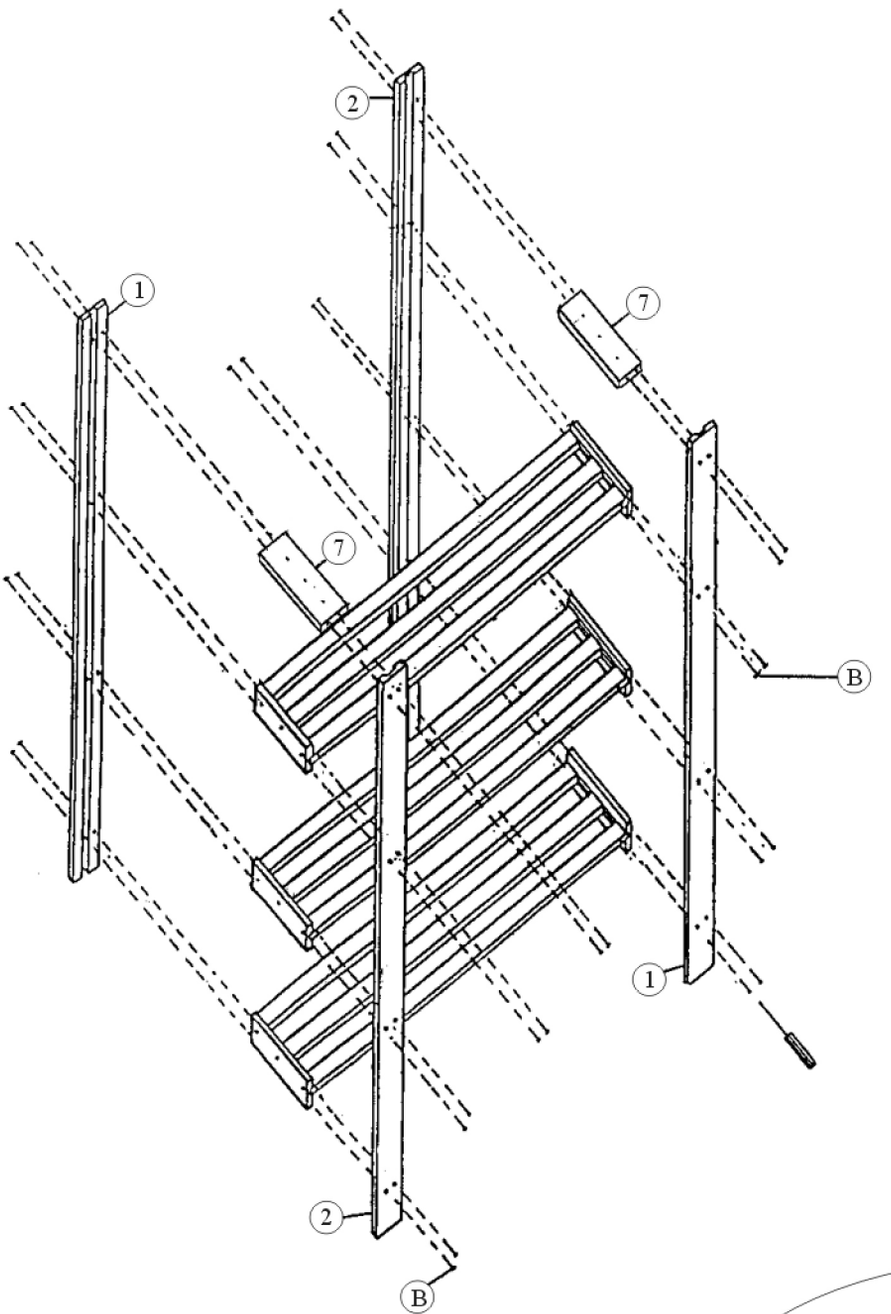

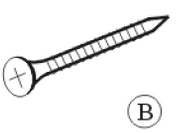


B

ASSEMBLY



STEP 3

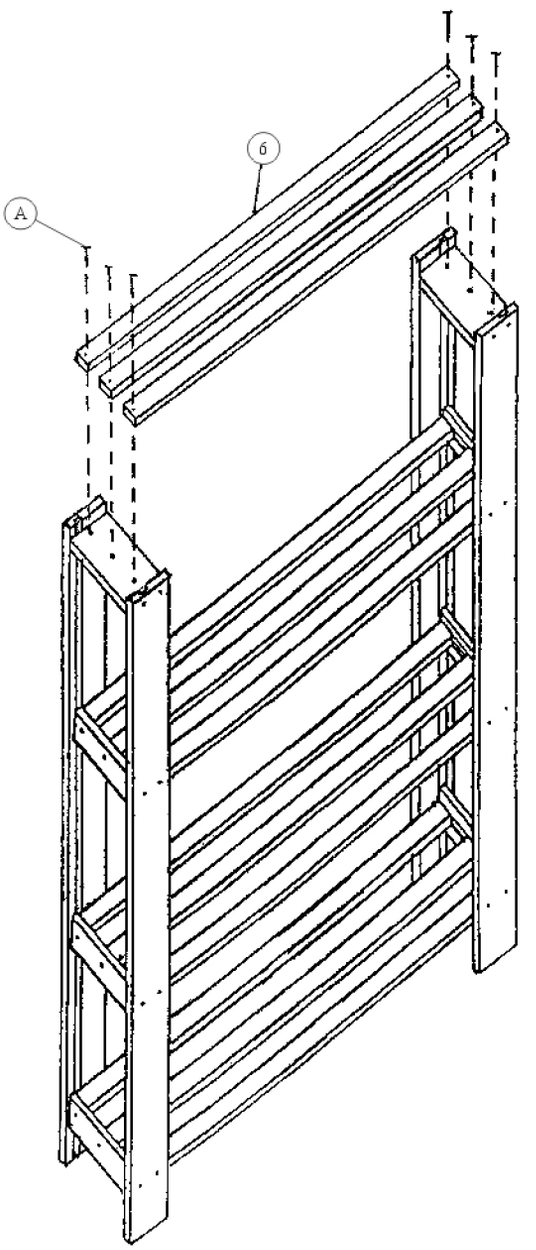

1) Assemble top slats
(6) using fixings
(A) .




(A)

ASSEMBLY



STEP 4

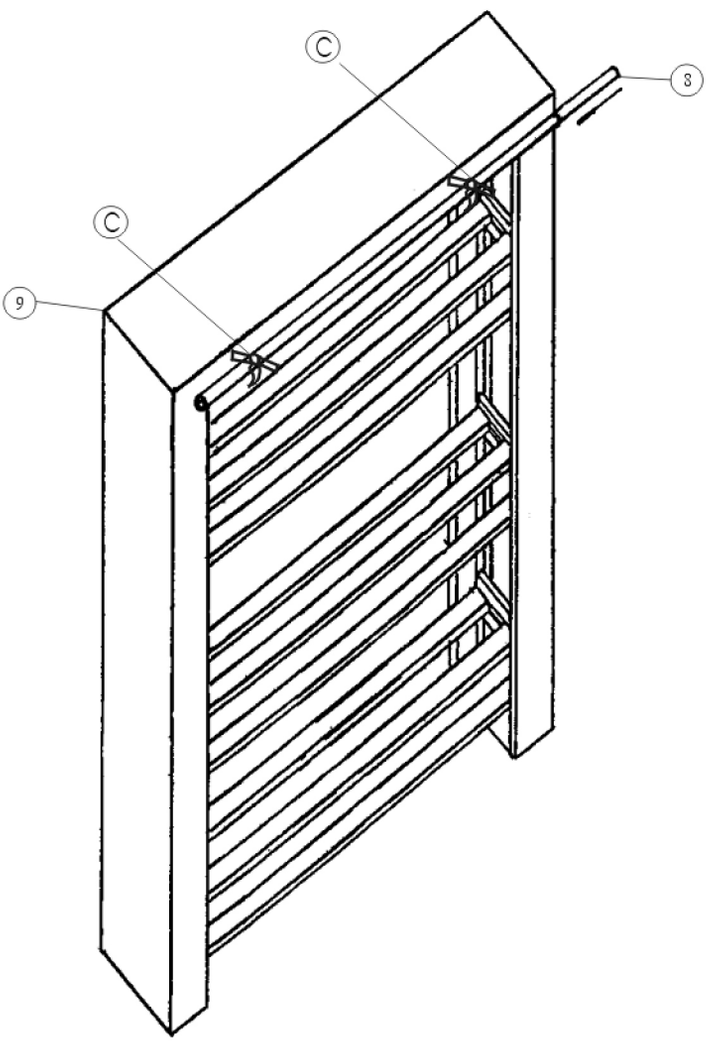

1) Place cover (9) over the assembled frame.

2) Slide cover pole (8) into the seam in the bottom of the front flap.

COVER CLEANING

Minor stains and spillages should be removed immediately using a damp cloth and mild soapy water. Do not soak the fabric or shrinkage may occur! Light marking can also be removed using this method.

To remove stubborn stains or markings, a good quality proprietary 'domestic' fabric cleaner can be used, although it should first be tested on an inconspicuous area of the cover.

Solid wood / Real wood veneers.

This product has been finished using natural materials. As a living material, you may notice some variation in the grain and colour shade between the different component parts.

Unlike a synthetic or man-made material which has a uniform finish, a feature of natural wood is its variation in grain and colour. We wish to reassure you that this is quite normal, and is not the result of any manufacturing fault.


Where sheets of veneer are joined together, a line may be detected. Again, this is normal, and is not an imperfection.

The natural finish should be cared for by the periodic application of a good quality 'wax' based domestic furniture polish (Not silicone!!). Occasional / small spills should be removed immediately using a damp cloth.

Do not allow hot articles to come into contact with the surface, as damage will occur!

3 SHELF UNIT

Easy Assembly Instruction

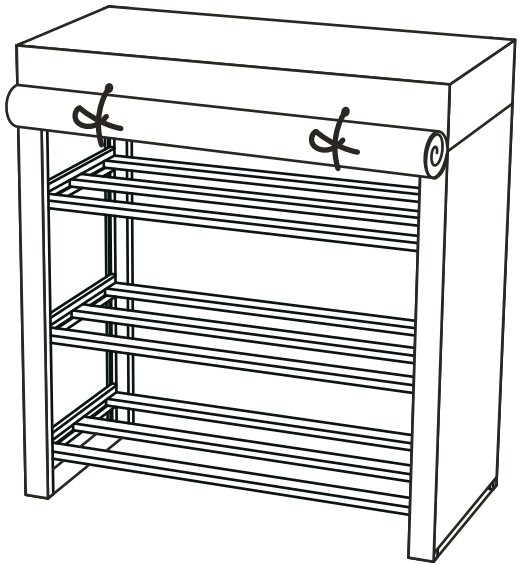

Before you start, here is some helpful advice

1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. If you follow the instructions carefully the end result should be worth the effort.
3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fitting.
4. Assemble this product on a carpet.
5. To ensure an easier assembly, we stongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.
6. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
7. Keep glue and fitting out of children's reach.
8. We do not recommend the use of power drill/drivers for inserting screws,as this could damage the unit. Only use hand screwdrivers.



After-sales telephone number for spare parts : 08456 400 800

Component parts and fittings contained in the box

PARTS

PARTS&FIXINGS


IMPORTANT: Please note that all wooden parts are identifited with numbers corresponding to those shown in this instruction leaflet. Please also take note of the position of the holes on each part.



Ⓐ QTY-2




Ⓑ QTY-2



Ⓒ QTY-8




Ⓓ QTY-4

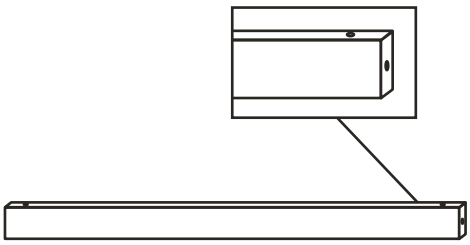

Ⓔ QTY-8



Ⓕ QTY-1

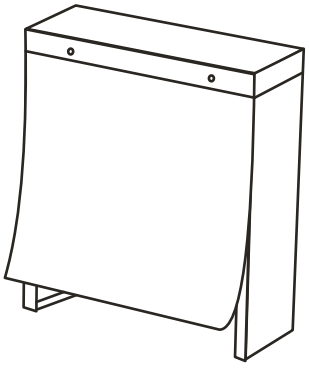

Ⓖ QTY-1

FITTINGS




(5x30mm)


Ⓗ QTY-56



Ⓘ QTY-2

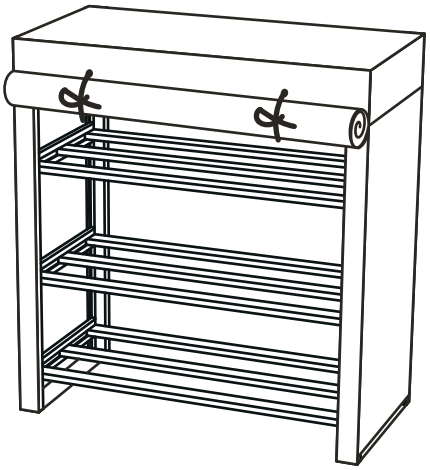


ASSEMBLY

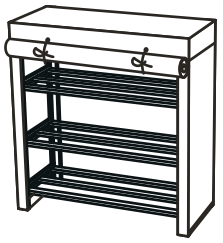


1) Assemble slats Ⓓ and Ⓔ in between supports Ⓒ using fixings Ⓗ.

2) Slats Ⓔ have extra holes on 1 side. These extra holes must be on the outside edges.

STEP1

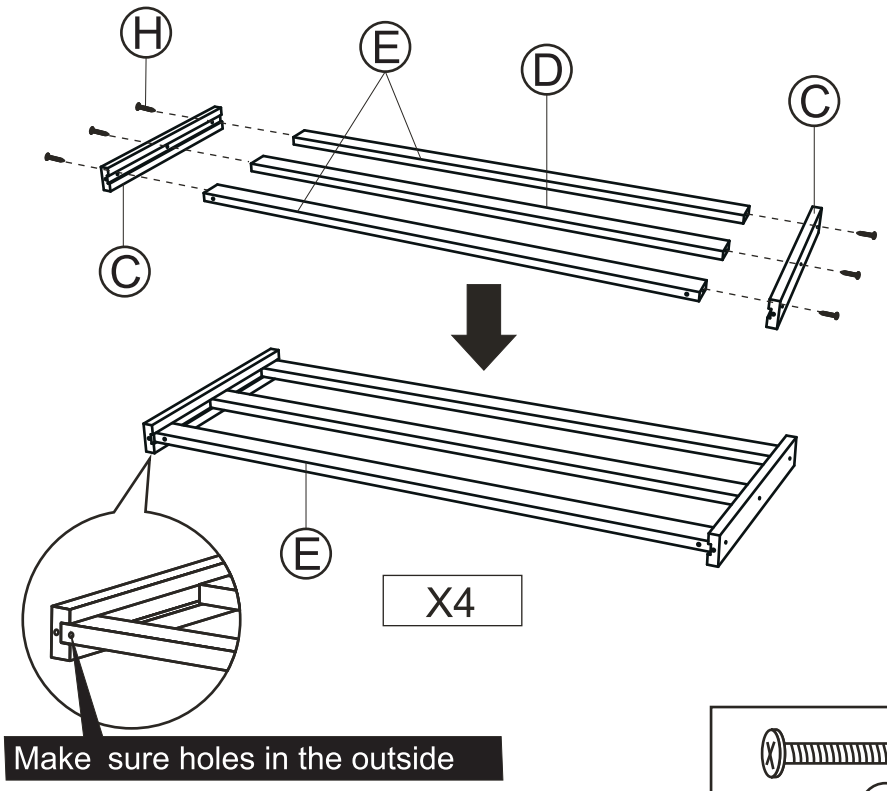





1) Fit slatted shelves in between corner posts Ⓐ and Ⓑ as shown using fixings Ⓗ to secure.

Note: Posts Ⓐ should be diagonally opposite each other and posts Ⓑ should be diagonally opposite each other.

STEP2

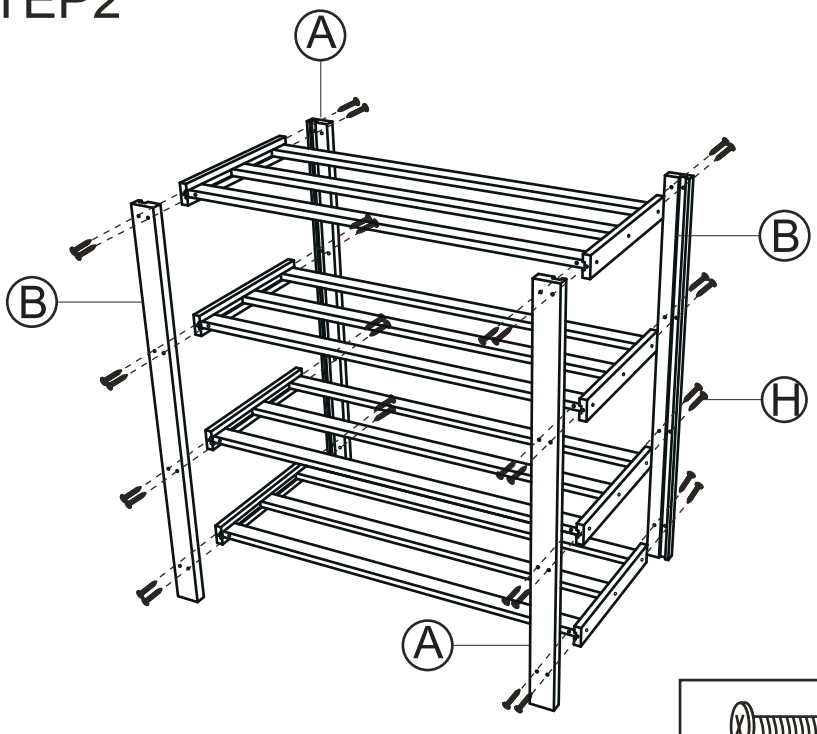

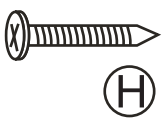


ASSEMBLY



1) Place canvas cover Ⓖ over the assembled frame and secure using velcro strips.

2) Slide cover pole Ⓕ into the seam in the bottom of the front flap.The door can be rolled up and secured using the ties Ⓘ.

STEP3

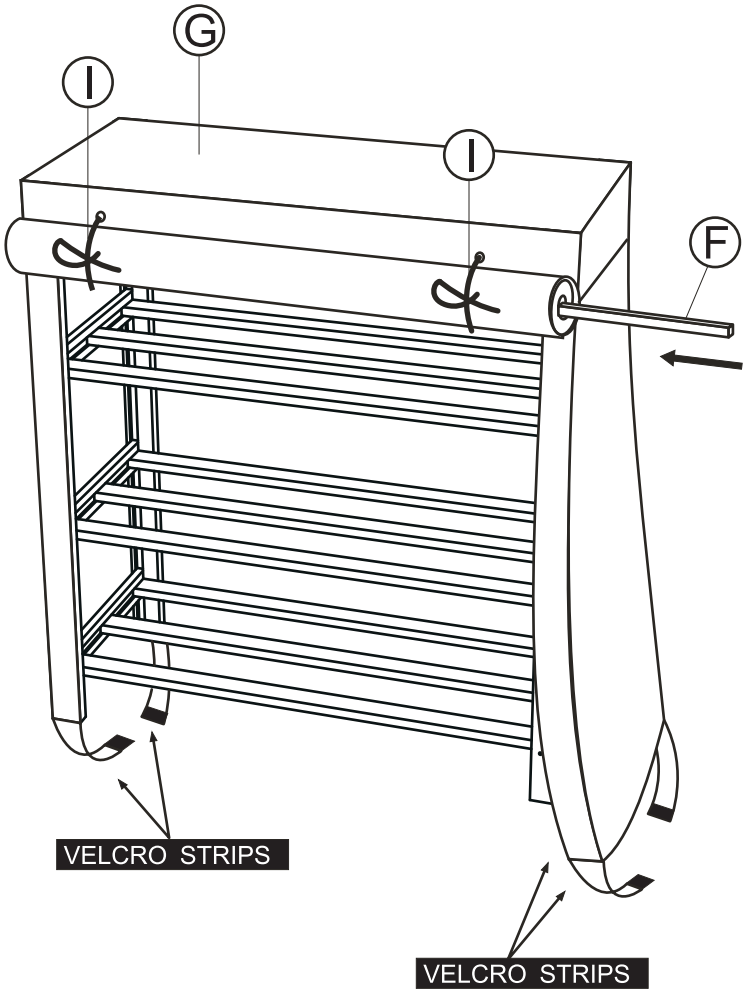

COVER CLEANING

Minor stains and spillages should be removed immediately using a damp cloth and mild soapy water. Do not soak the fabric or shrinkage may occur! Light marking can also be removed using this methed.

To remove stubborn stains or markings, a good quality proprietary domestic fabric cleaner can be used, although it should first be tested on an inconspicuous area of cover.

Solid wood / Real wood veneers.

This product has been finished using natural materials . As a living material, you may notice some variation in the grain and colour shade between the different component parts.

Unlike a synthetic or man-made material which has a uniform finish, a feature of natural wood is its variation in grain and colour. We wish to reassure you that this is quite normal, and is not the result of any manufacturing fault.