
Venetia - Boot Storage

Assembly Instructions - Please keep for future reference

904/2193

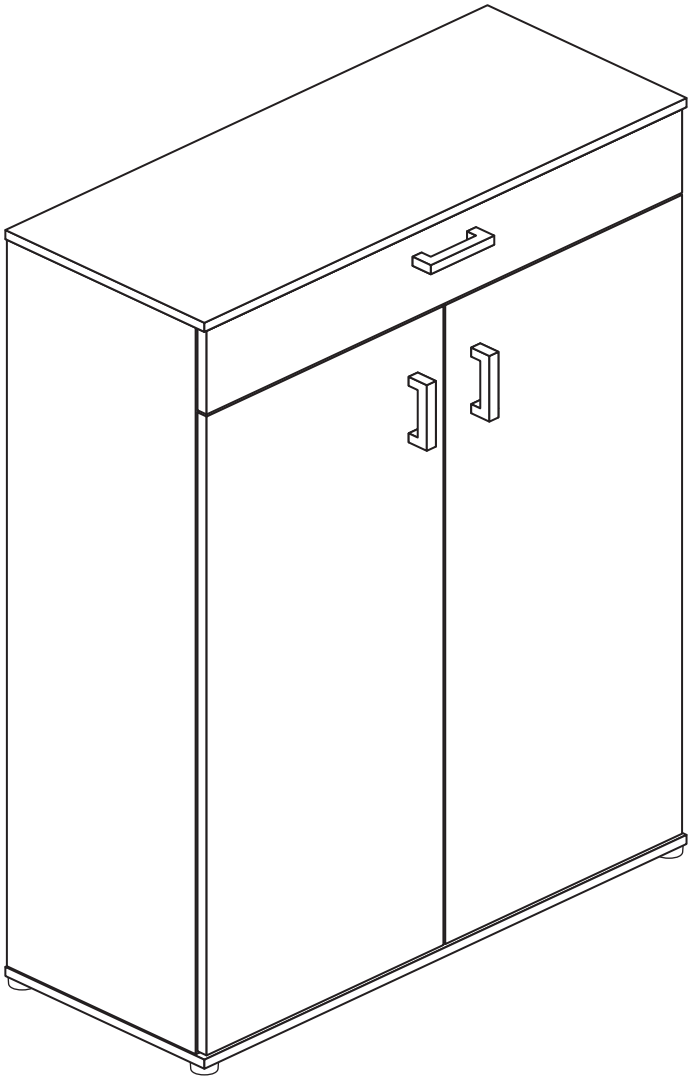

Dimensions
Width - 80cm
Depth - 33cm
Height - 125.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** (quoting your original order number)

Issue 2 - 29/07/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 40kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.


Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

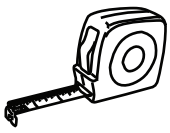


Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection (when using a hammer or drill)




Electric drill (do not use for fitting screws)

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*


Please check you have all the panels listed below

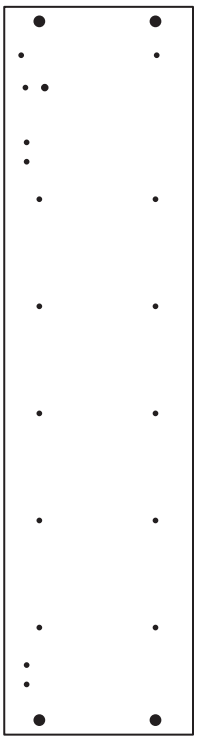


1 Left Side *(D1930A)*
(1203 x 312mm)

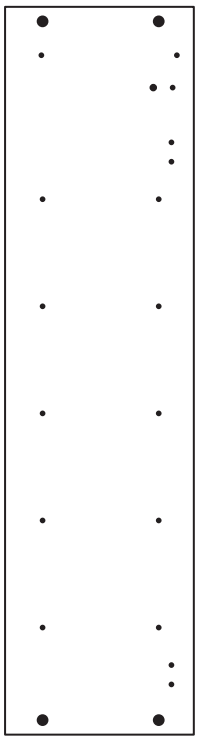

2 Right Side *(D1931A)*
(1203 x 312mm)

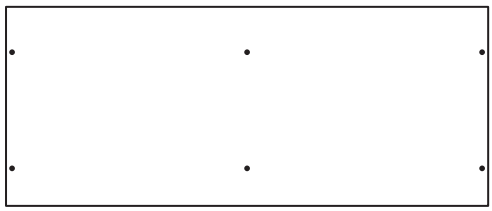


3 Top/Base *(D1929A)*
(797 x 329mm) x 2



4 Rail *(D1934A)*
(762 x 96mm)



5 Shelf *(D1935A)*
(373.5 x 308mm) x 7



6 Drawer Front *(D1936A)*
(786 x 138mm)




9 Drawer Back *(W455)*
(728 x 95mm)




10 Left Drawer Side *(W410LH)*
(300 x 95mm)




11 Right Drawer Side *(W410RH)*
(300 x 95mm)

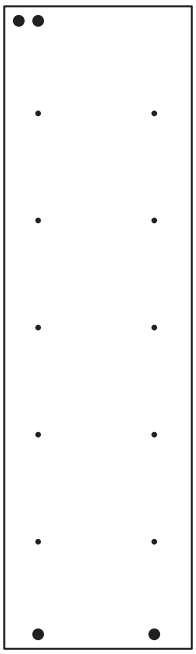


7 Divider *(D1933A)*
(1062 x 310mm)

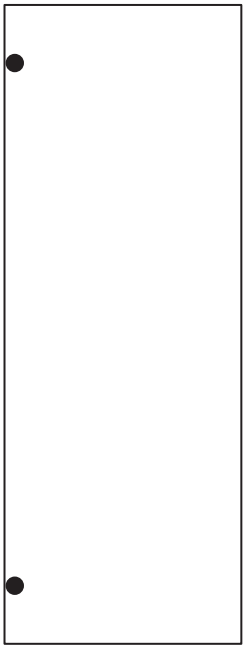

8 Door *(D1937A)*
(1056 x 391.5mm) x 2



12 Drawer Base *(T457)*
(739 x 297mm)



13 Back *(X933)*
(1225 x 784mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 


Wooden dowel *(F22)* x 2

B 

Metal dowel *(F901)* x 16

C 

Large locking nut *(F900)* x 14

D 

Nail *(F51)* x 27

E 

Knock-in Peg *(F171)* x 4

F 

Small locking nut *(F3)* x 2

G 

25mm Screw (*F50)* x 10

H 

13mm Screw *(F79)* x 1

I 


13mm Screw *(F63)* x 8

J 


9mm Screw *(F74)* x 2

K 


9mm Screw (*F73)* x 4

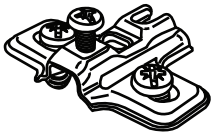L 


Hinge plate (*F523)* x 4

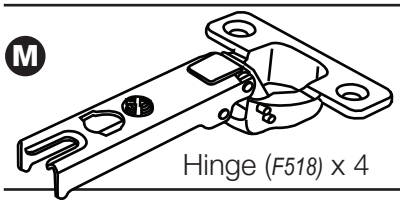M 

Hinge (*F518)* x 4

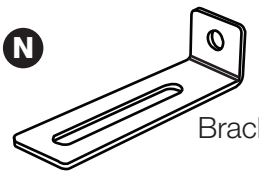N 


Bracket (*F327)* x 1

O 


Shelf support *(F121)* x 28

P 

Drawer runner *(F1004)* x 2

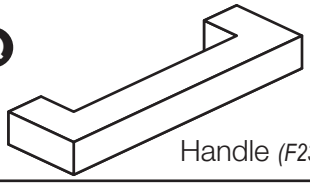Q 

Handle *(F236)* x 3

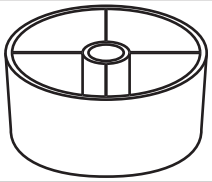
R 

Feet *(F854)* x 4

S 

Door Buffer *(F137)* x 2

Ruler - Use this ruler to help correctly identify the screws

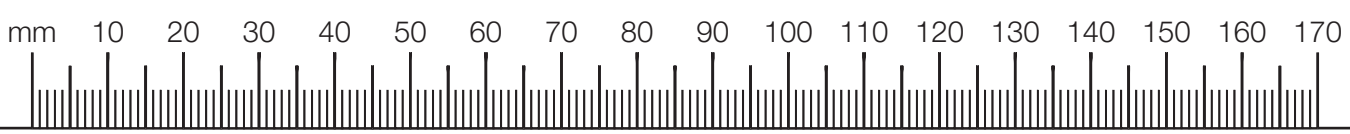

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*

Step 1

Prepare the drawer front

Screw 2 metal dowels (B) into the back of the drawer front [6].

Note: Tighten metal dowels up fully against the panels.

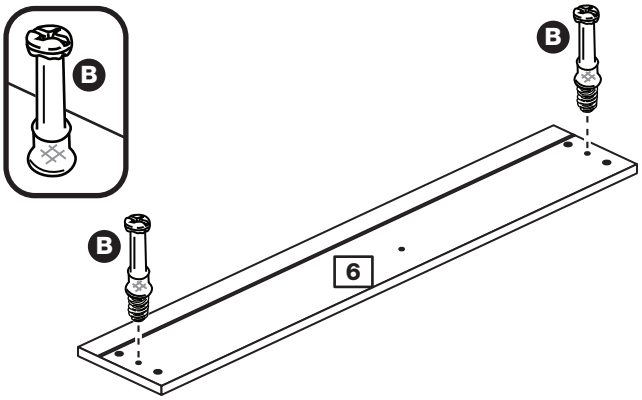


Step 2


Prepare the drawer sides

Insert a small locking nut (F) into the hole shown on the left drawer side [10] and right drawer side [11].

Note: Arrow on locking nut **must** point towards hole in edge of panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

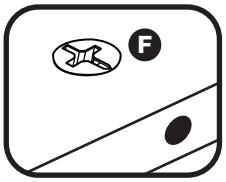

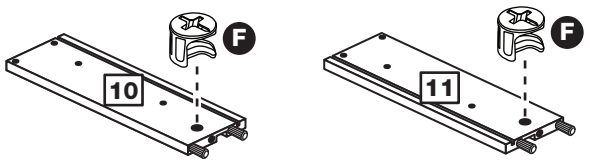


Step 3


Attach the drawer sides to the drawer front

Push the left drawer side [10] and right drawer side [11] onto the back of the drawer front [6].

Turn the small locking nuts (F) on the left drawer side [10] and right drawer side [11].

Note: Turn the locking nuts (F) clockwise to secure panels - more than 1/2 a turn.

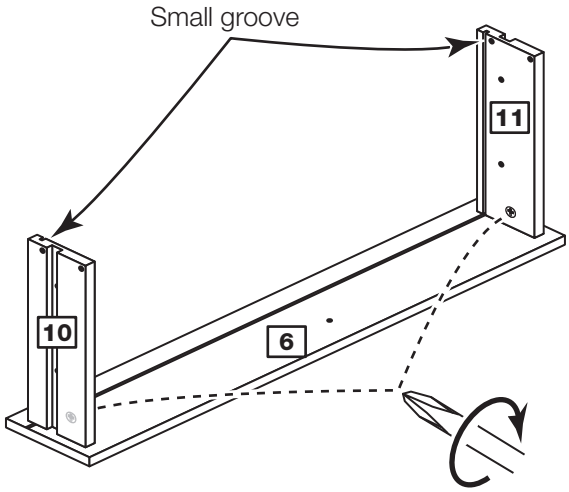

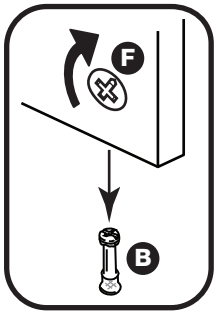


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Step 4

Fit the drawer base

Slide the drawer base 12 down the grooves in the drawer sides 10 and 11 and down into the groove in the drawer front 6.

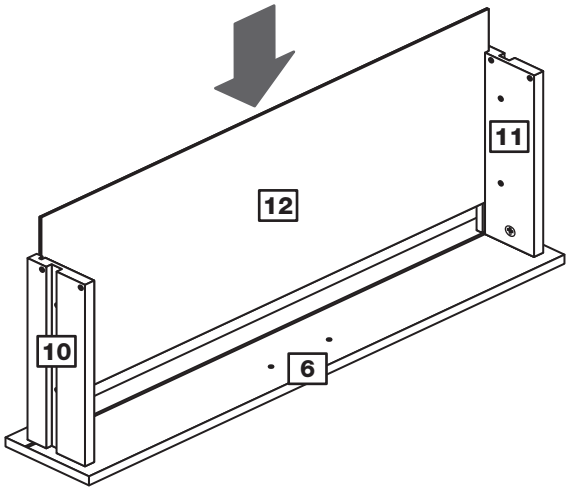


Step 5

Fit the drawer back

Fit the drawer back 9 between the drawer sides 10 and 11.

Make sure that the drawer base 12 fits into the groove in the drawer back 9.


Hold the drawer back 9 in position and tap the knock-in pegs E through the holes in the drawer sides 10 and 11.

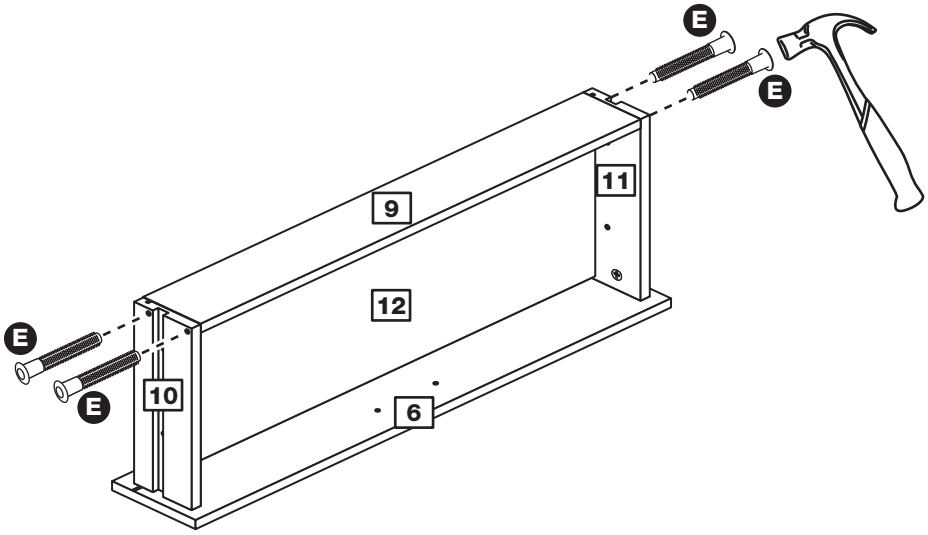

Step 6

Attach the handle

Attach a handle Q to the drawer front 6 using 2 screws G.

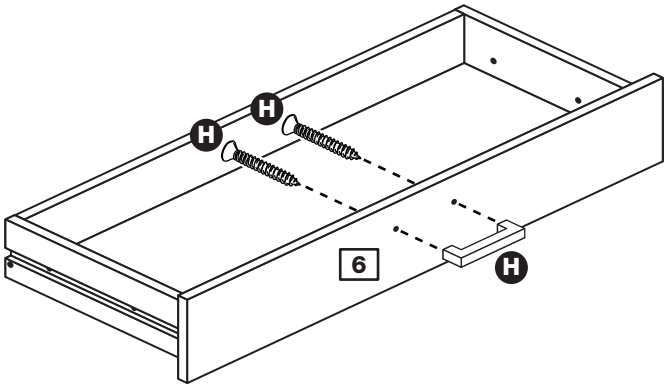

Step 7

Prepare the left side

a: Place a runner (P) on the left side [1].
Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (K).


b: Slide the runner (P) back the other way and fit the 2nd screw (K) into the corresponding hole in the left side [1].


c: Fit 2 hinge plates (L) onto the left side [1], making sure that the slot is facing towards the finished front edge.


Screw a metal dowel (B) into the left side [1].

Insert 4 large locking nuts (C) into the left side [1].

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

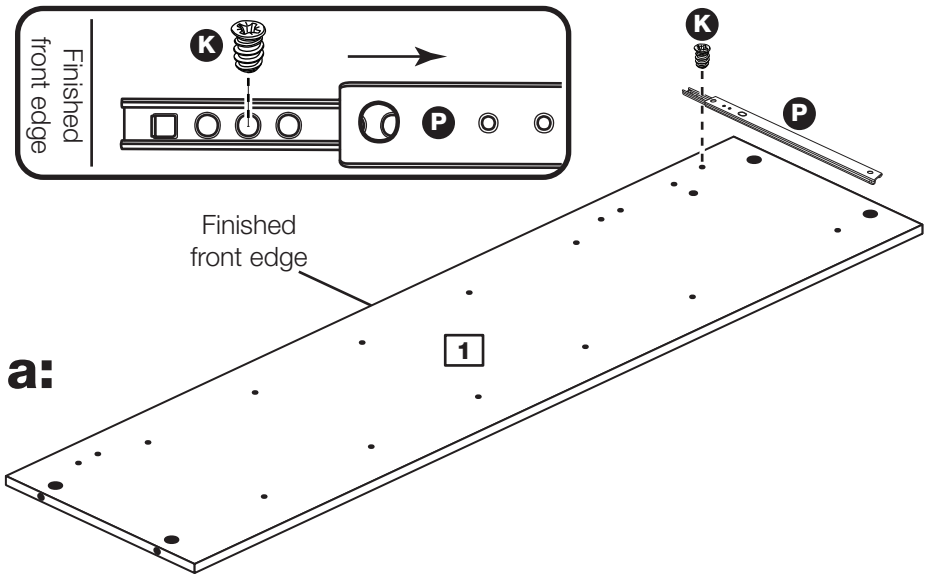

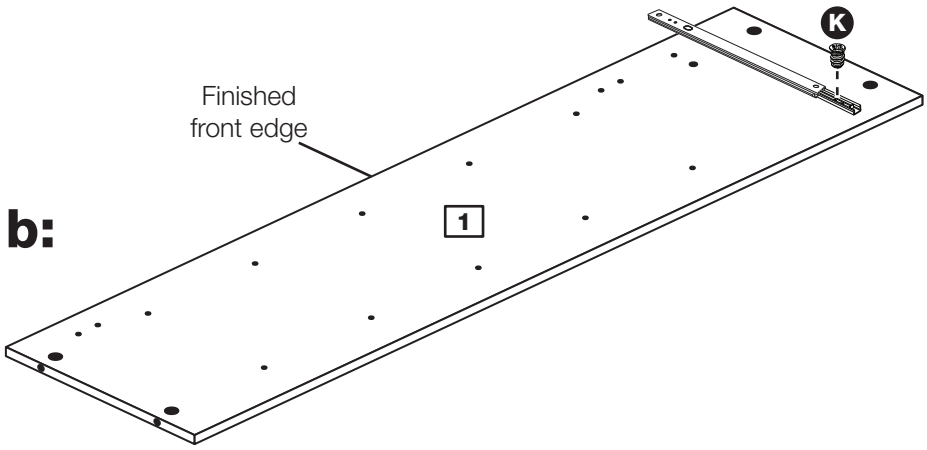

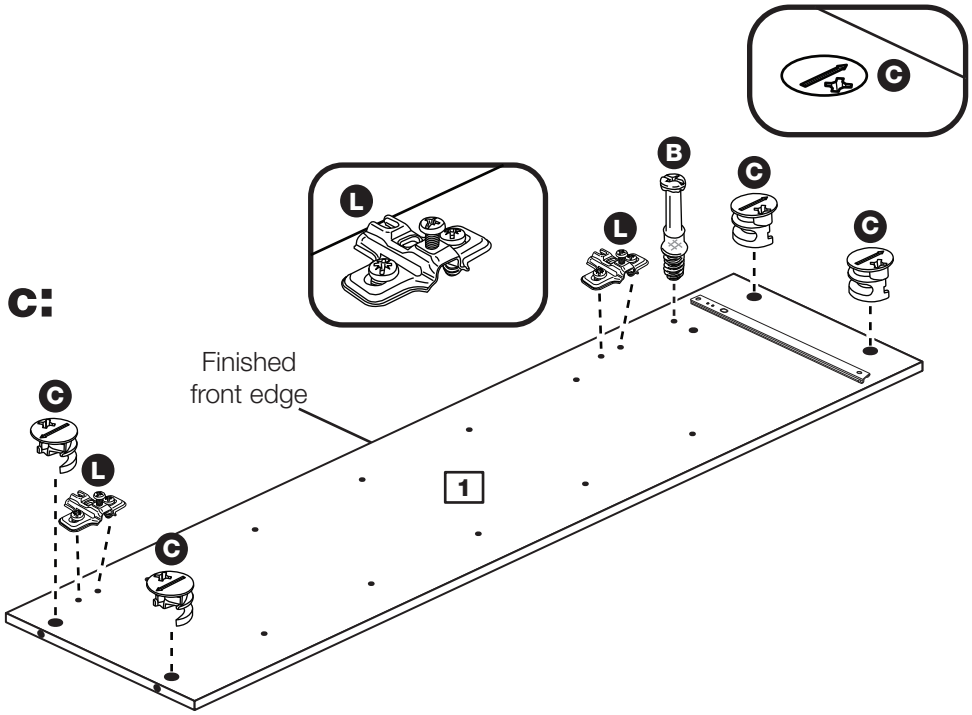

Step 8

Prepare the right side


a: Place a runner P on the right side 2. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw K.


b: Slide the runner P back the other way and fit the 2nd screw K into the corresponding hole in the right side 2.


c: Fit 2 hinge plates L onto the right side 2, making sure that the slot is facing towards the finished front edge.


Screw a metal dowel B into the right side 2.

Insert 4 large locking nuts C into the right side 2.

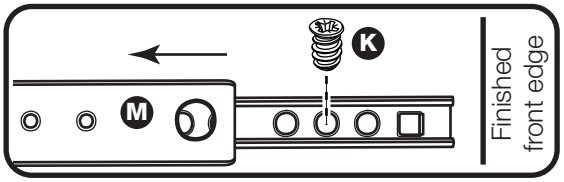

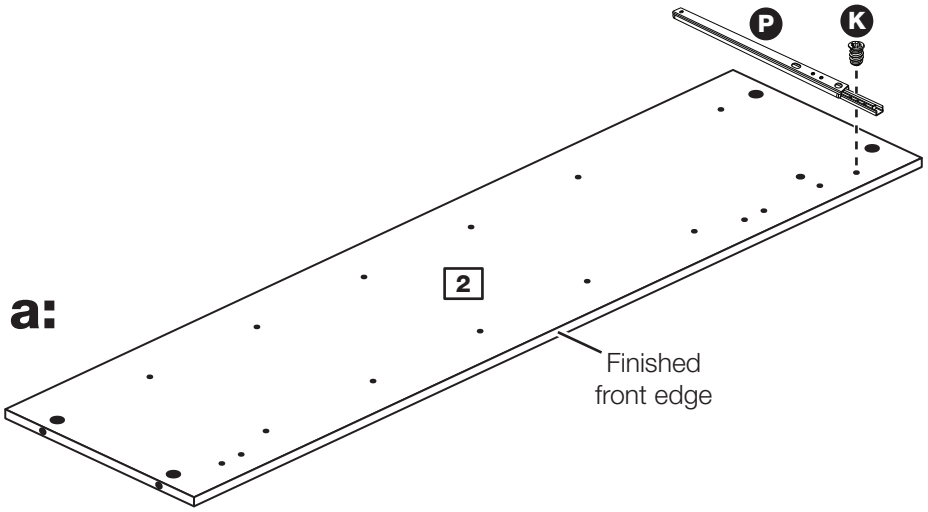

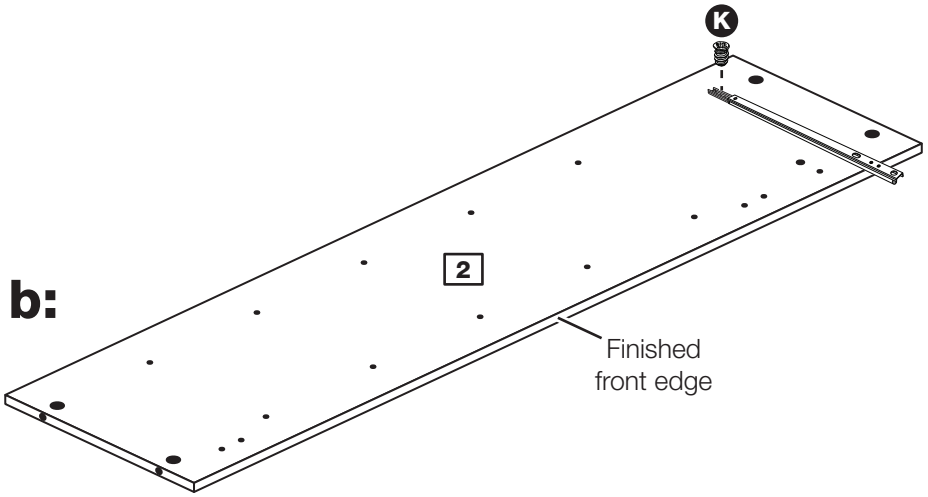

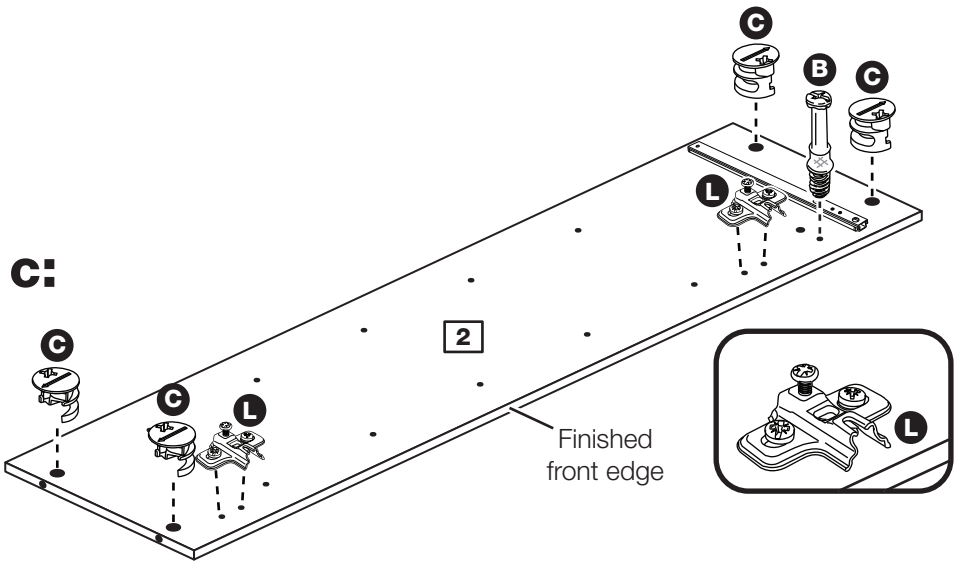

Step 9


Prepare the rail

Screw 2 metal dowels B into the rail 4.

Insert 2 large locking nuts C into the rail 4.

Tap 2 wooden dowels A into the rail 4.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

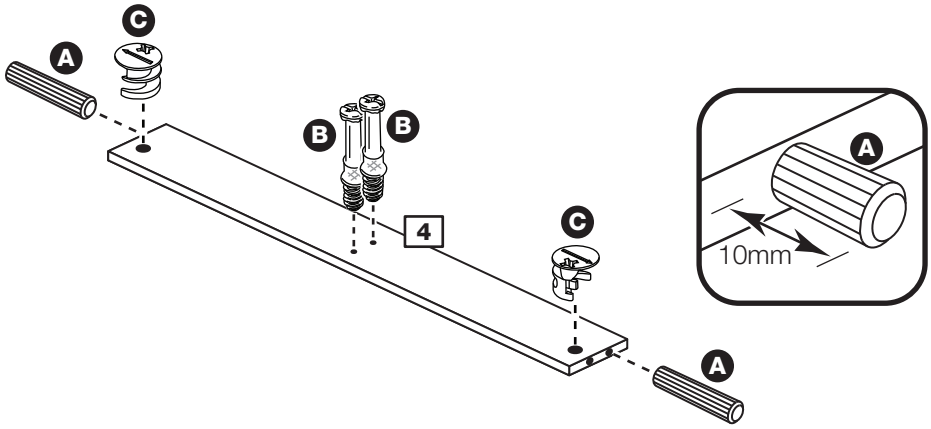


Step 10

Join the right side and rail

Push the rail 4 onto the right side 2.

Use a screwdriver to tighten the large locking nut C fitted to the rail 4.

Note: Turn the large locking nut C as far as it will go - more than 1/2 a turn.

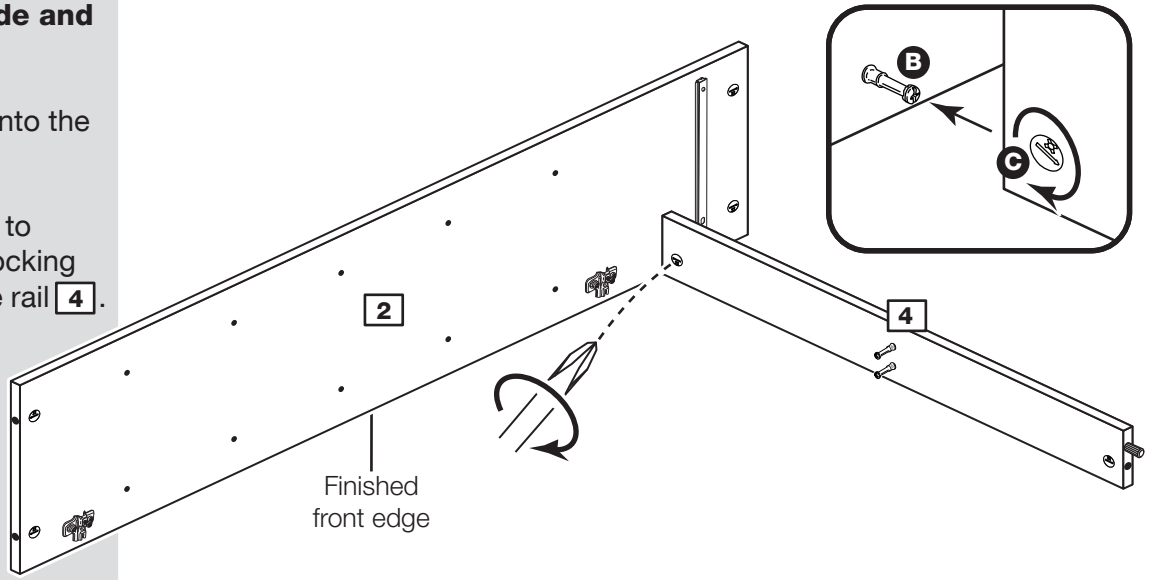


Step 11

Fit the left side

Push the left side 1 onto the rail 4.


Use a screwdriver to tighten the large locking nut C fitted to the rail 4.

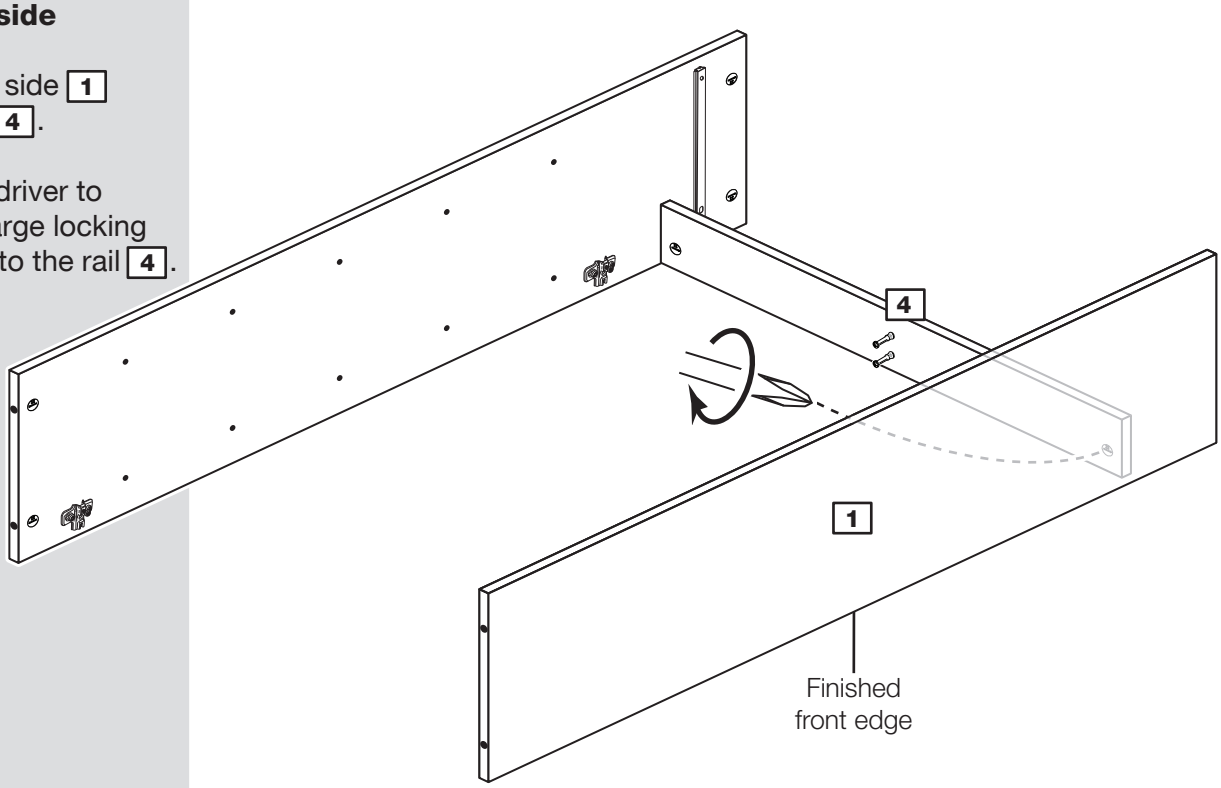

Step 12

Prepare the divider

Insert 4 large locking nuts C into the divider 7.

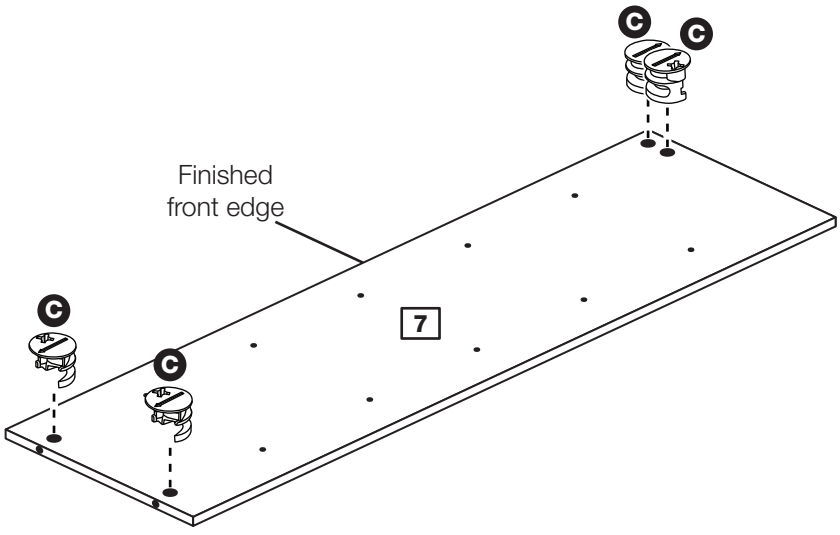


Step 13

Fit the divider

Push the divider 7 onto the rail 4.


Use a screwdriver to tighten the 2 large locking nuts C fitted to the divider 7.

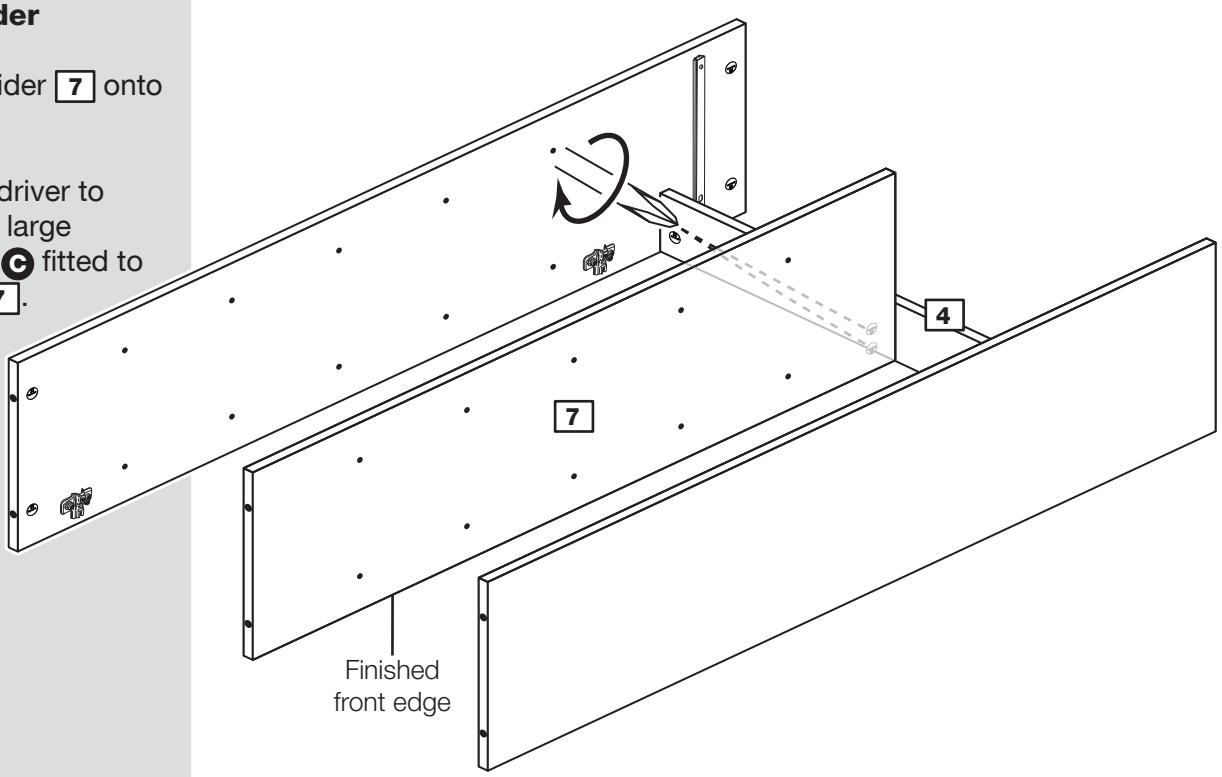

Step 14

Prepare the base

Screw 6 metal dowels B into the base 3.

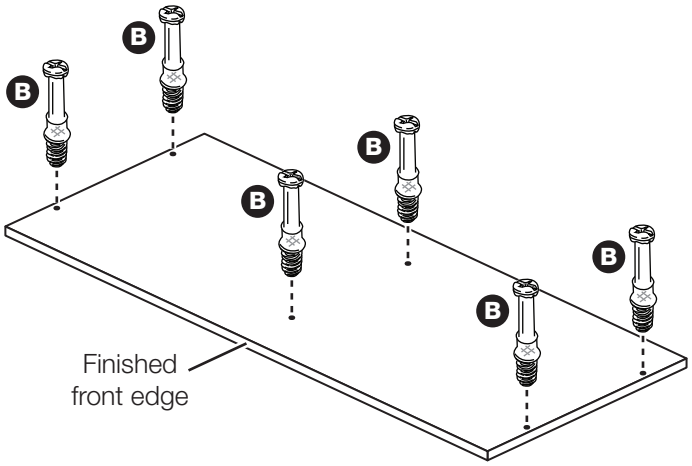


Step 15

Fit the base

Push the base [3] onto the assembly.

Use a screwdriver to tighten the 6 large locking nuts (C) fitted to the left side [1], right side [2] and divider [7].

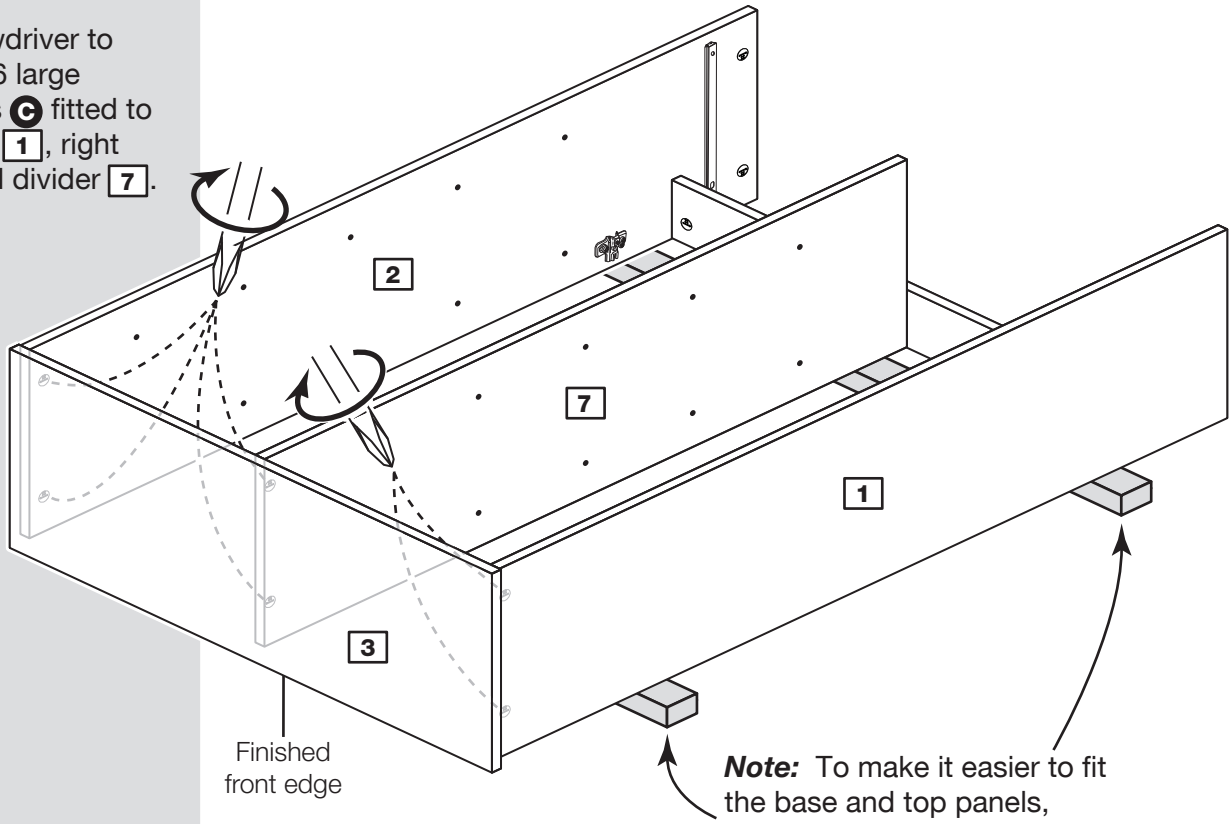


Note: To make it easier to fit the base and top panels, place polystyrene blocks from the packaging underneath the sides and divider.

Step 16

Prepare the top

Screw 4 metal dowels (B) into the top [3].

Fix the bracket (N) in the middle of the top [3] flush to the back edge, using screw (H).

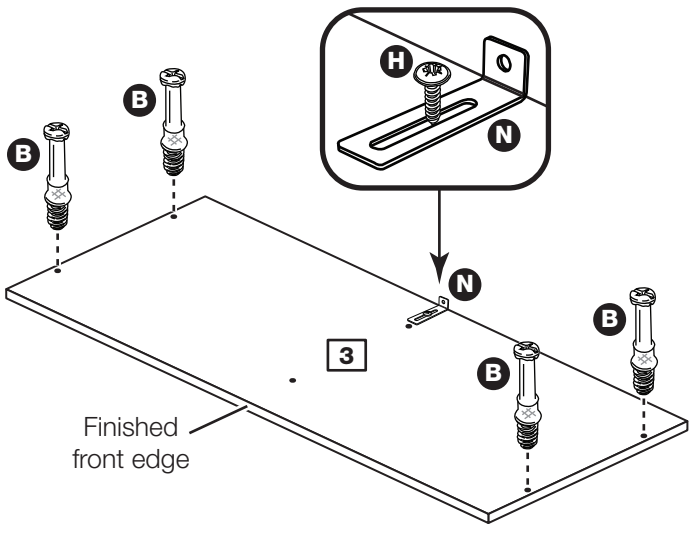


Step 17

Fit the top

Push the top 3 onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts C fitted to the left side 1 and right side 2.

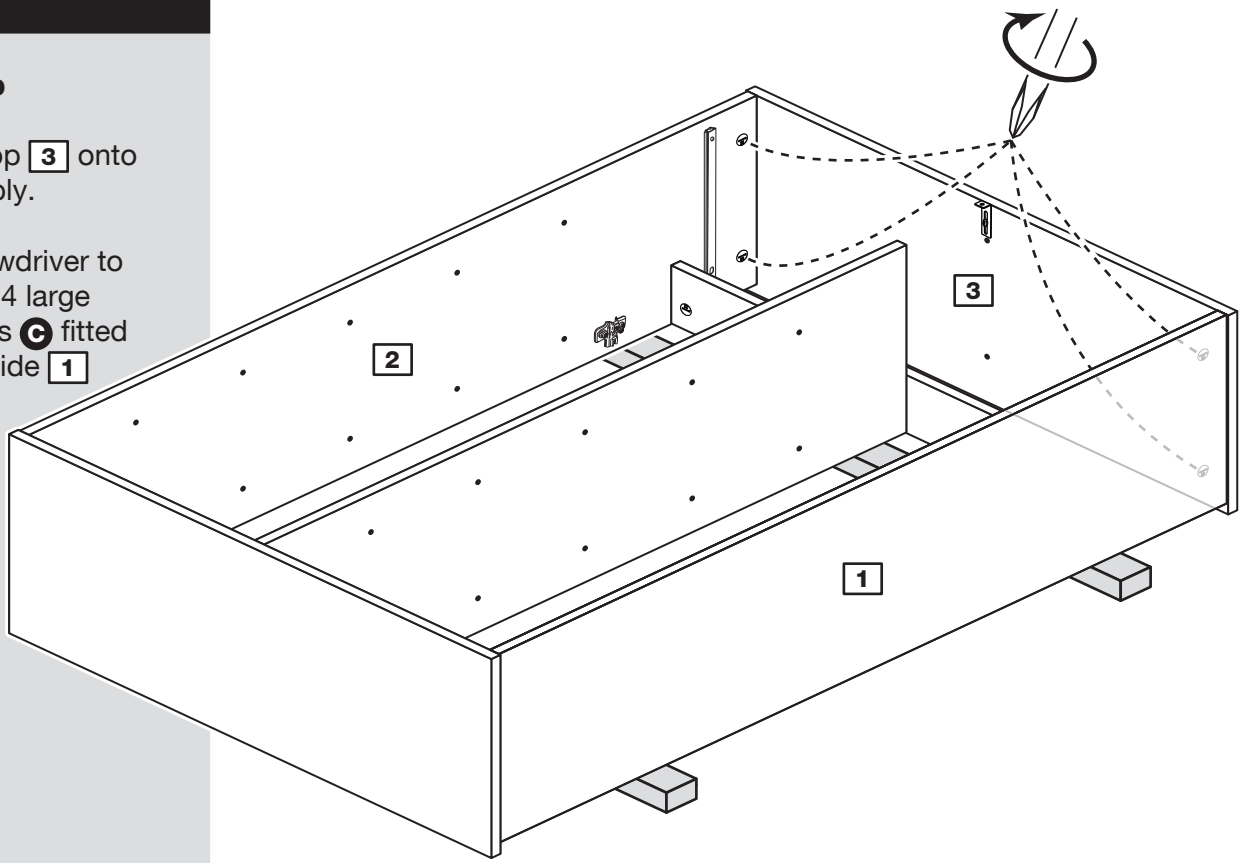


Step 18

Fit the feet

Screw the 4 feet R onto the base 3 using screws G.

Note: Position the feet approximately 10mm in from the edges of the base.

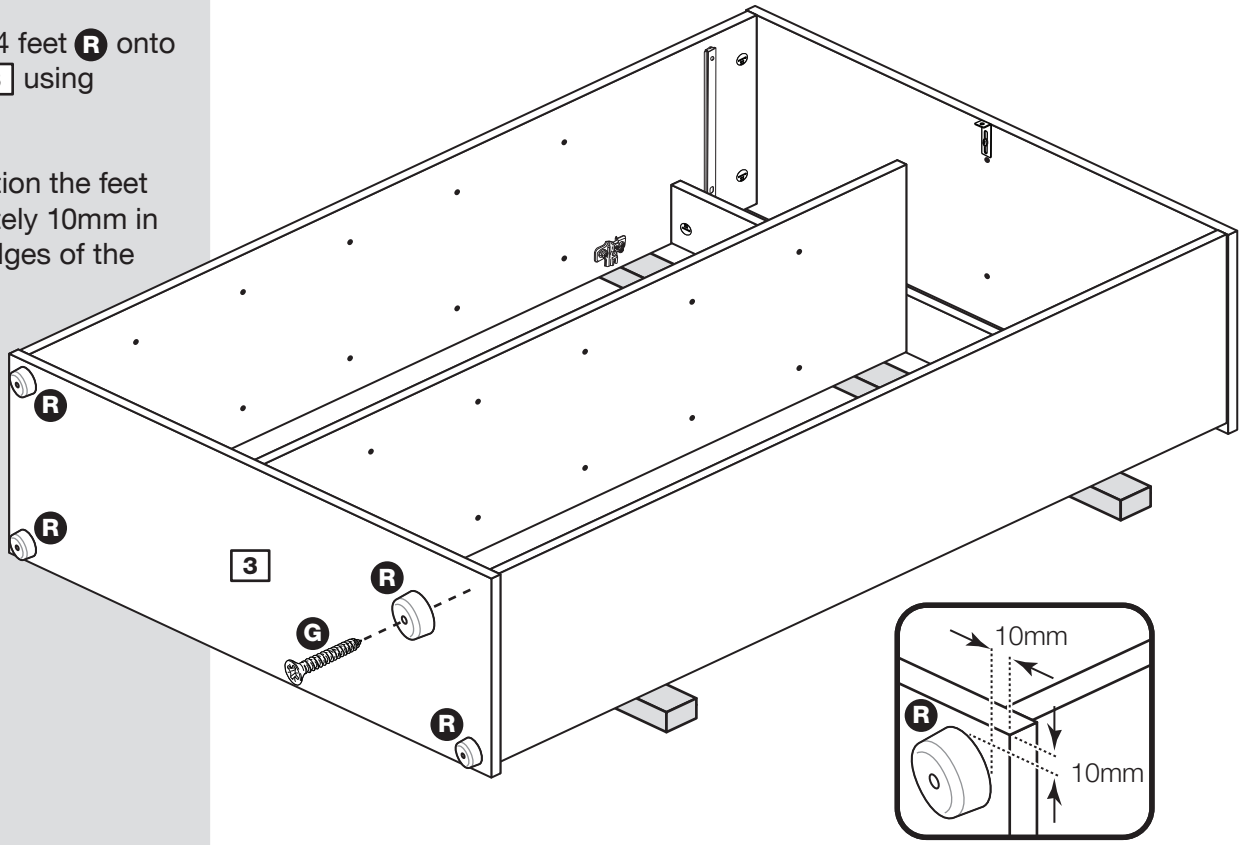

Step 19

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 13 onto the unit.


Nail D around the outside edges of the back 13.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

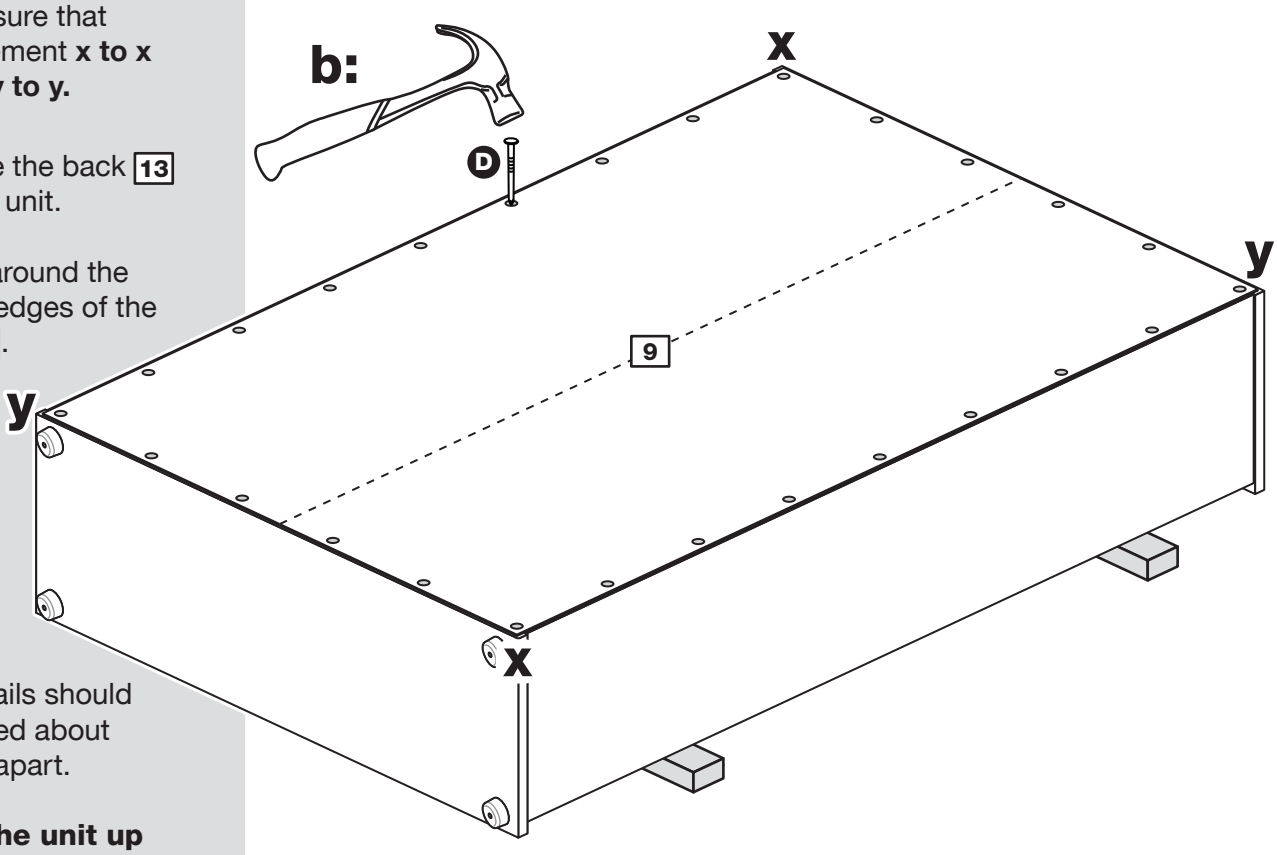


Step 20

Secure unit to a wall

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by use of the metal bracket (N) fitted under the top [3] of the unit.

Fixings are not supplied as they will need to suit the wall type, and the length of screw will depend on the distance of the back of the unit to the wall.

Warning: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

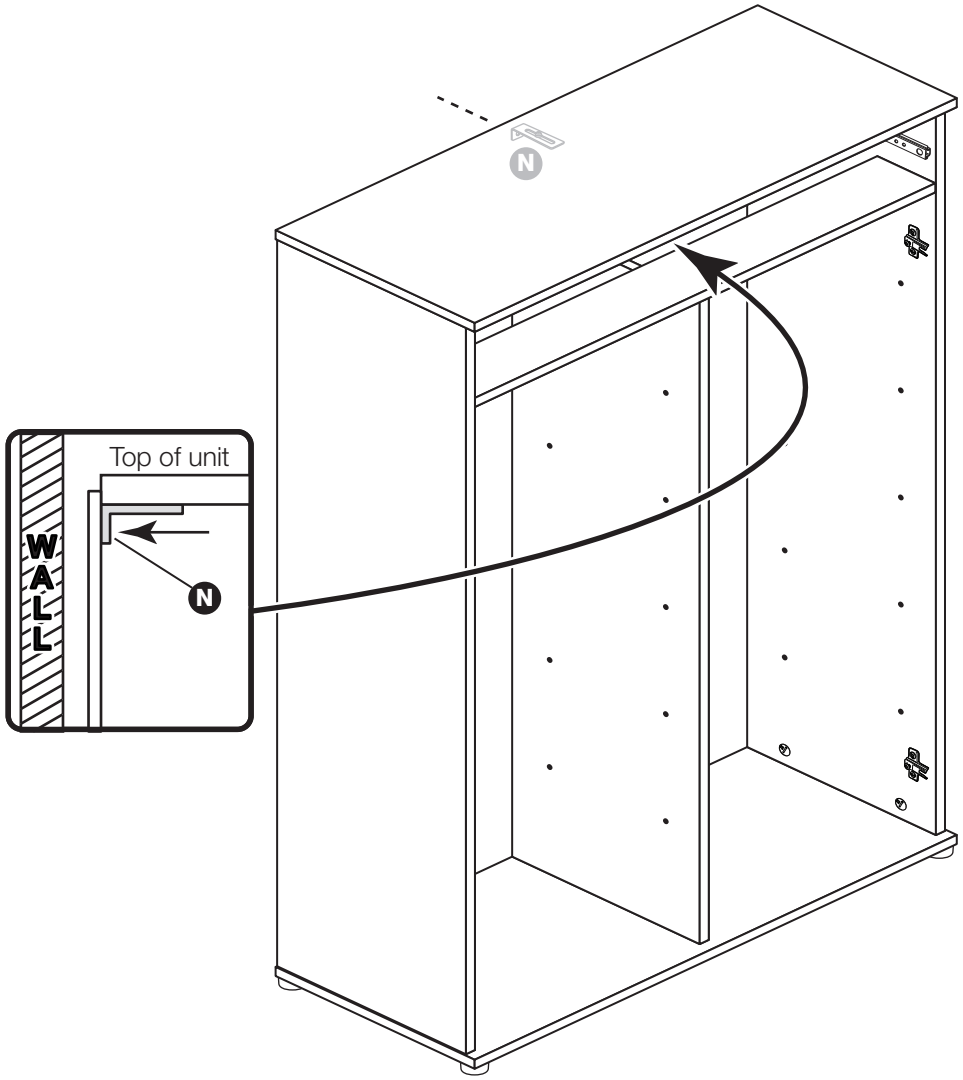


Step 21


Fit the drawer

Slide both the runners P forward and locate the drawer sides 10 and 11 between them, lining up the holes in the drawer sides with the 2nd 'threaded' holes in the runners P.

Working from the inside of the drawer, insert 2 screws J through the drawer sides and out into the 2nd threaded hole in the runners.

Note: Do not overtighten the screws J.
If they catch on the runner you may need to loosen them slightly.

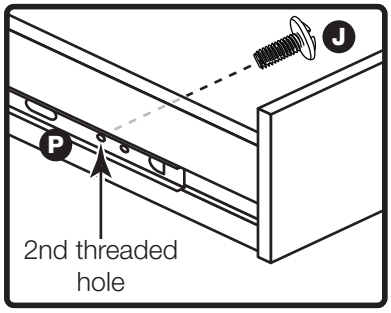

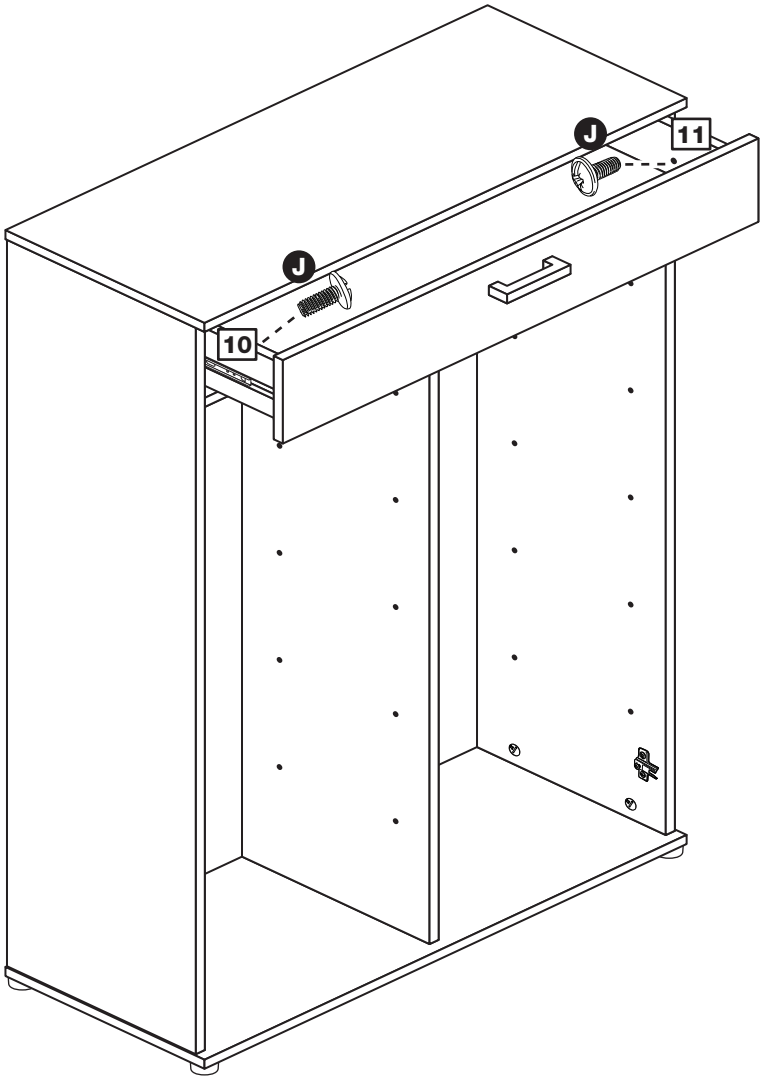


Step 22

Fit the shelves

For each of the 7 shelves [5], insert 4 shelf studs (O) at the required height on either side of the unit.

Lower the 7 shelves [5] down onto the shelf studs (O).

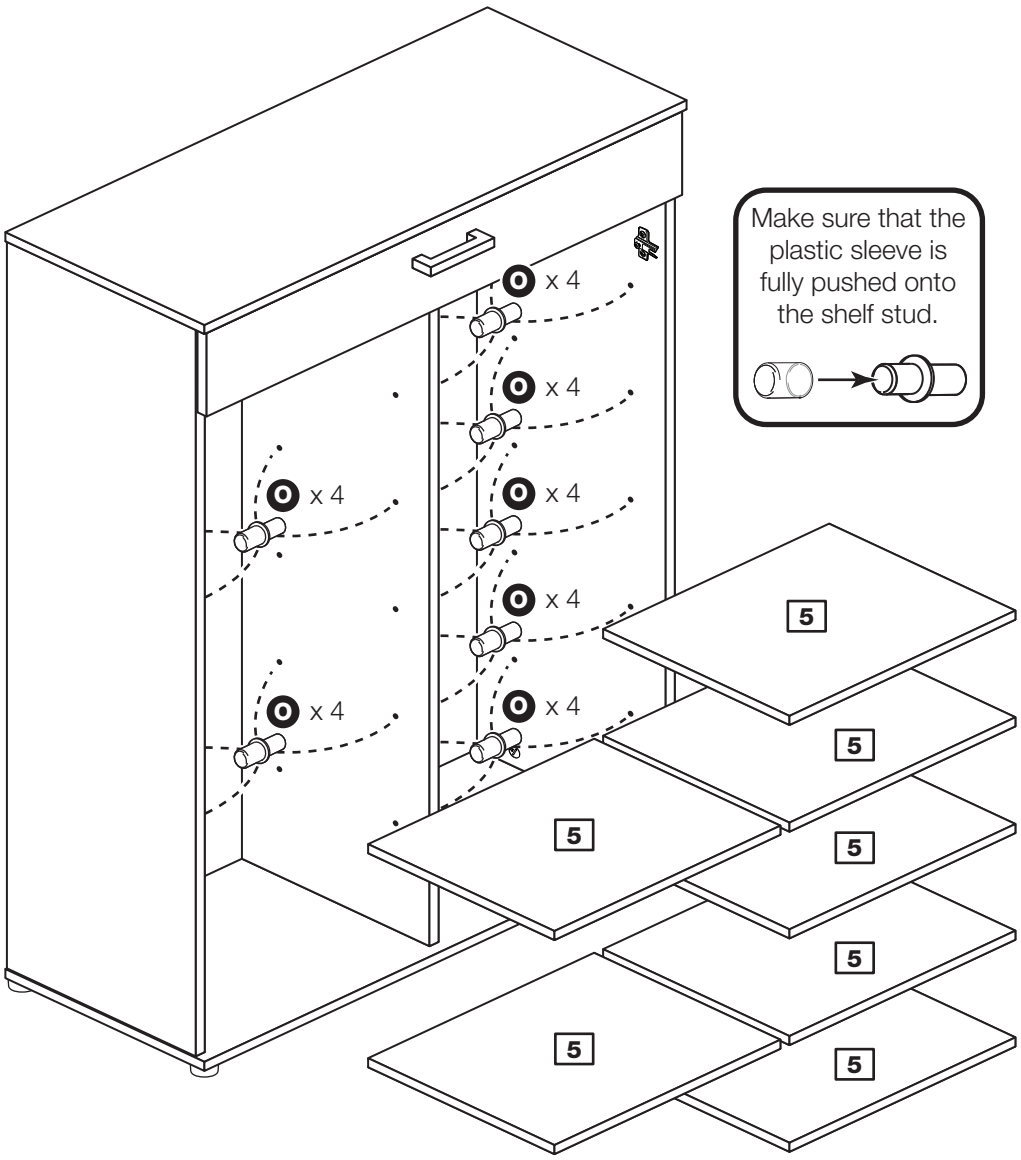


Step 23

Prepare the 2 doors

Push fit 2 hinges (M) into each of the doors [8].

Secure each hinge with 2 screws (I).

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

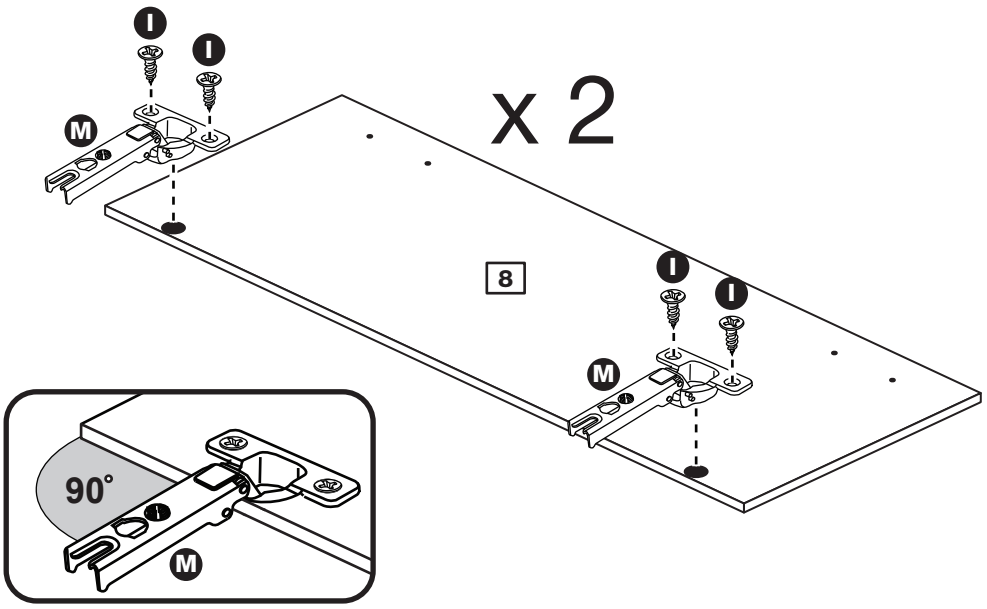

Step 24

Drill 2 handle holes in each of the doors

Important: Please follow these instructions carefully.

Lay the 2 doors [8] down onto a smooth surface.

Check that the hinges and holes are in the same place as the diagrams.


Note: We recommend the use of a small piece of waste wood, placed behind the holes while drilling, to reduce the possibility of any breakout.


Using the pilot holes in the rear face of the door, drill through the 2 holes indicated opposite, using a 2.5mm diameter drill.

Turn the door over and open out the 2.5mm holes that you have just drilled by drilling back through them with a 5mm drill.

IMPORTANT

Carefully choose which 2 holes you need to drill in each door

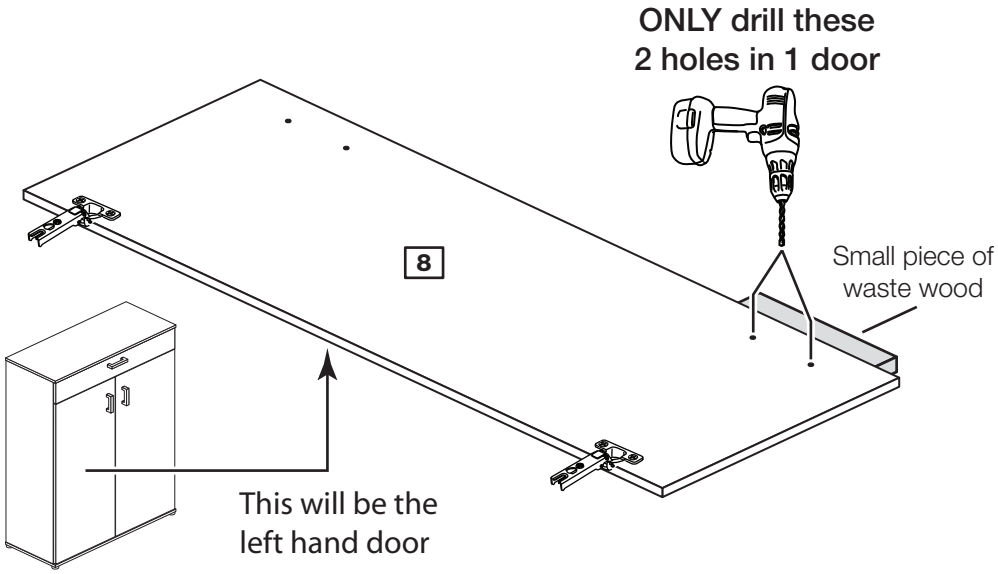

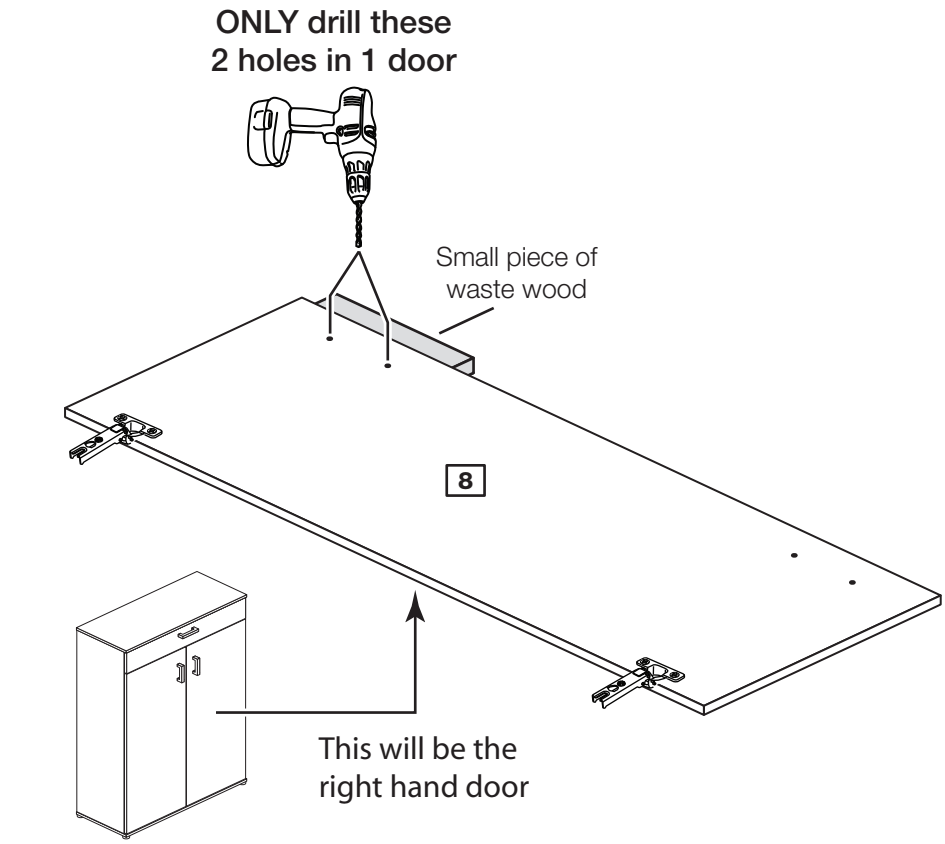

Step 25

Fit doors, handles and door buffers

a: Push the hinge M onto the front part of the hinge plate L.
The recess at the bottom of screw B goes into the slot in the hinge plate.


b: Keep the hinge M FLAT against the hinge plate L as you slide it across as far as it will go. Tighten screw A.

c: The hinge M must be flat against the hinge plate L prior to any adjustment.


d: The hinge M must NOT be AT AN ANGLE to the hinge plate L when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle Q to each door 8 using 2 screws G.

Stick a door buffer S into the top corner of each door 8 so that they hit the front edge of the divider when the door is closed.

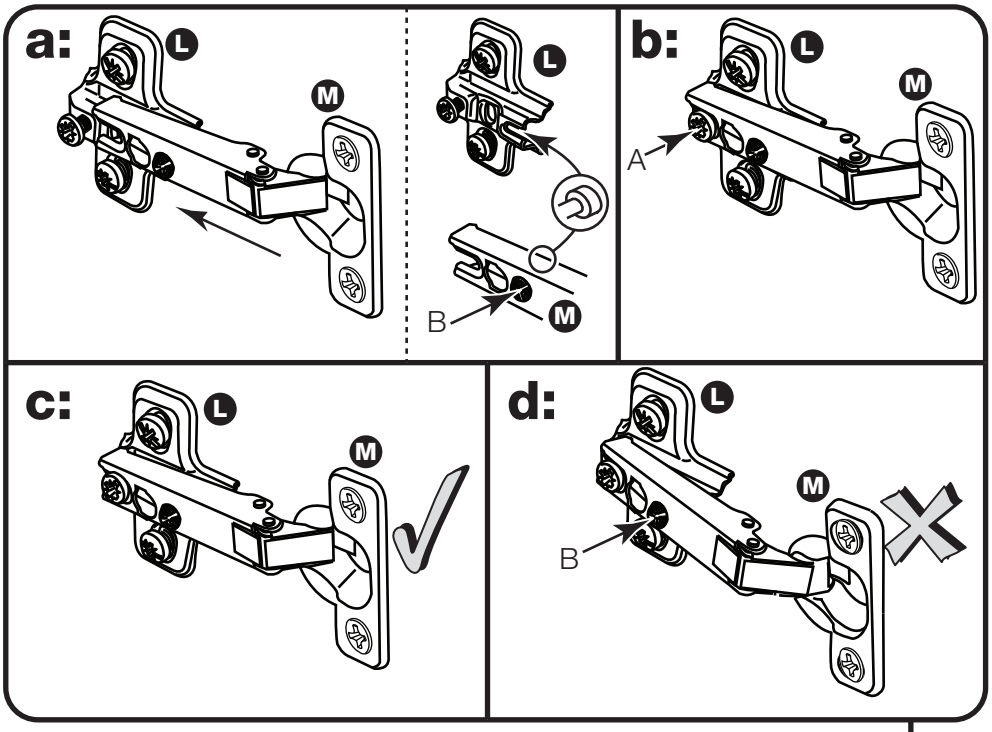

Note: The easiest way to attach each door is to fit the top hinge first, then align and fit the other hinge.

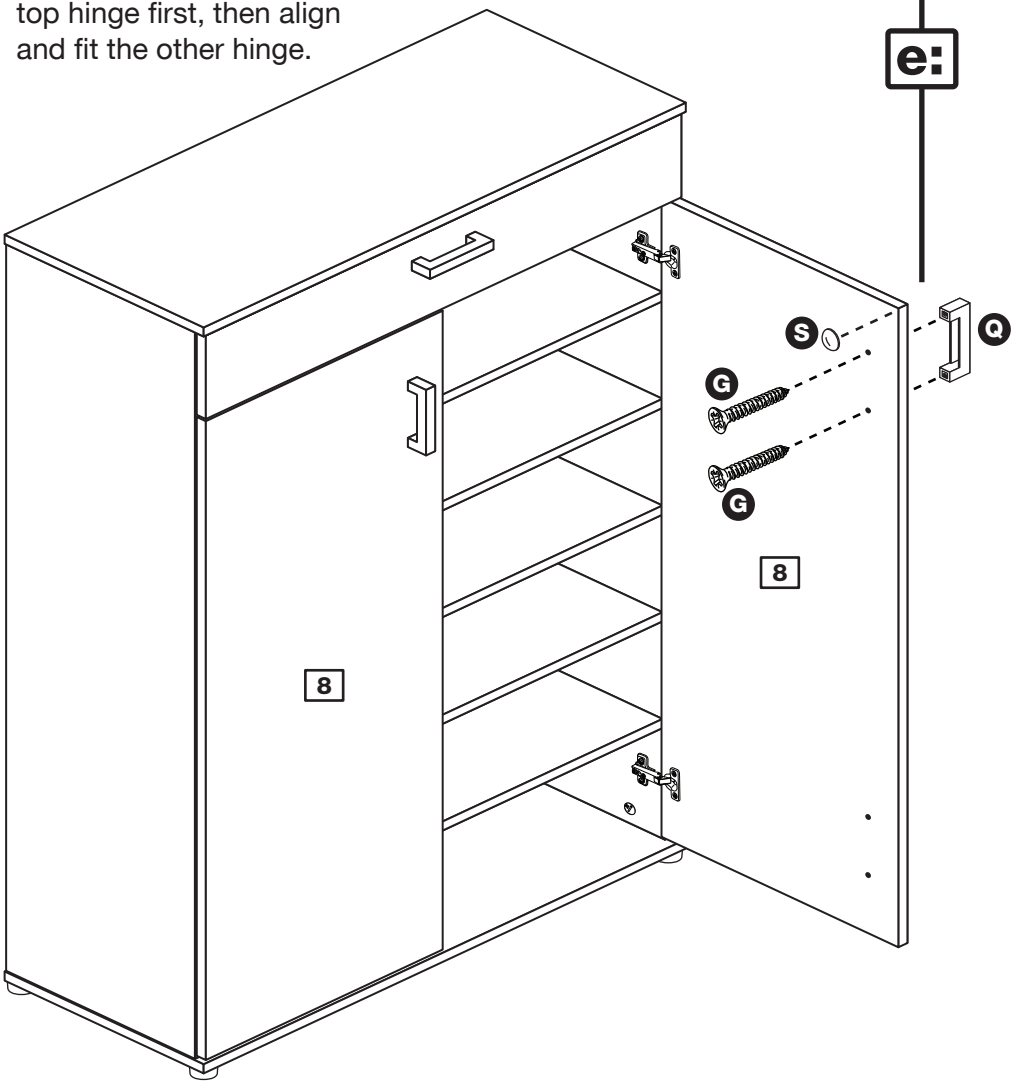

Step 26

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.


b: Height adjustment.
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

c: Forward and Back adjustment.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

d: Sideways adjustment.
To move door 'out' loosen screw C.
To move door 'in' tighten screw C.


Assembly is complete

Warning: The unit is heavy. Lift with care.

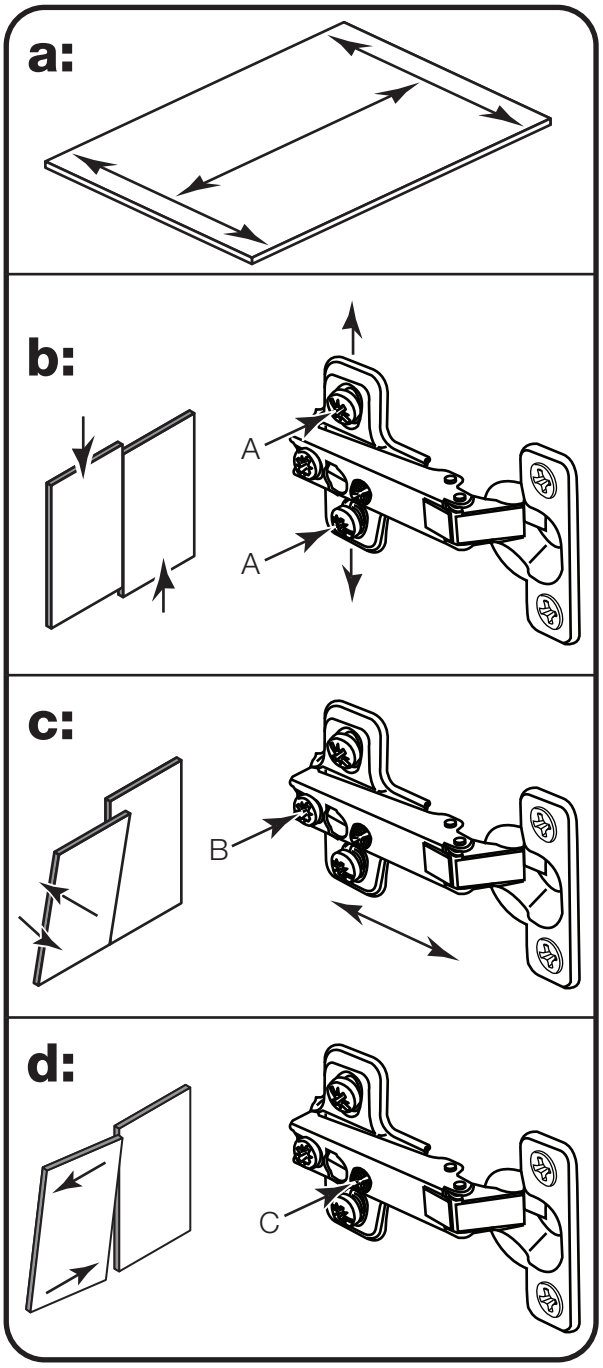

Venetia - Boot Storage

Assembly Instructions - Please keep for future reference | 904/2193

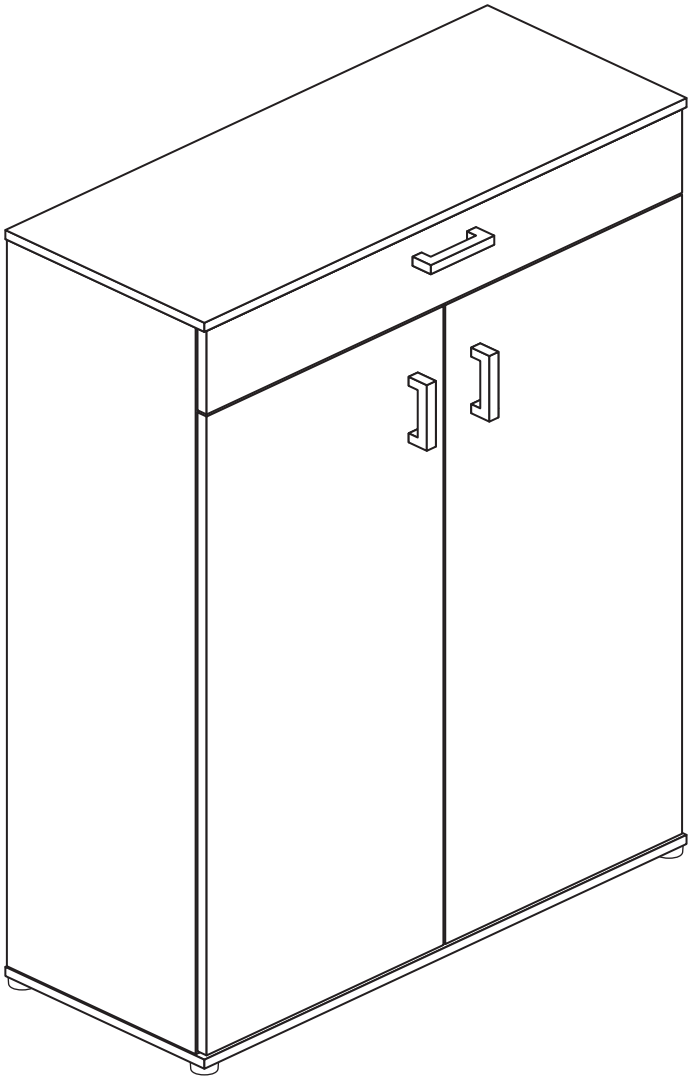

Dimensions
Width - 80cm
Depth - 33cm
Height - 125.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** (quoting your original order number)

Issue 3 - 14/01/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 40kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.

• Dispose of all packaging carefully and responsibly.


Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

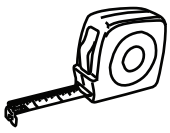


Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection (when using a hammer or drill)




Electric drill (do not use for fitting screws)

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*


Please check you have all the panels listed below

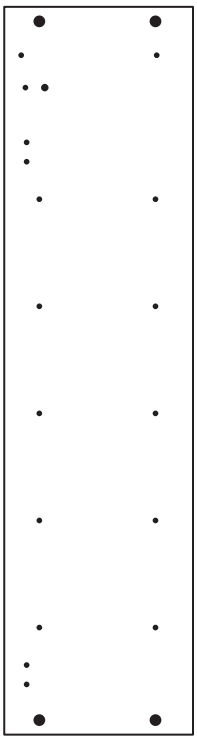


1 Left Side *(D1930A)*
(1203 x 312mm)

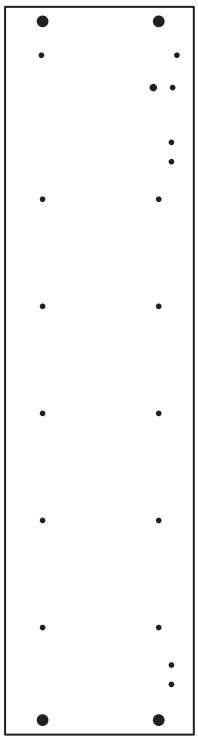

2 Right Side *(D1931A)*
(1203 x 312mm)

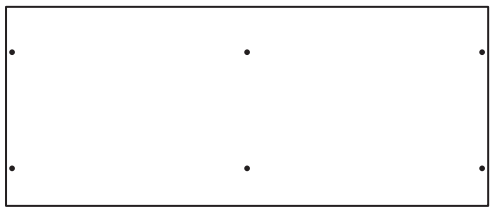


3 Top/Base *(D1929A)*
(797 x 329mm) x 2



4 Rail *(D1934A)*
(762 x 96mm)



5 Shelf *(D1935A)*
(373.5 x 308mm) x 7



6 Drawer Front *(D1936A)*
(786 x 138mm)




9 Drawer Back *(W455)*
(728 x 95mm)




10 Left Drawer Side *(W410LH)*
(300 x 95mm)




11 Right Drawer Side *(W410RH)*
(300 x 95mm)

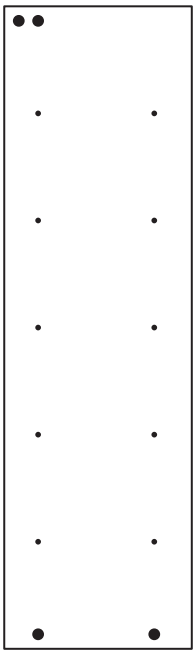


7 Divider *(D1933A)*
(1062 x 310mm)

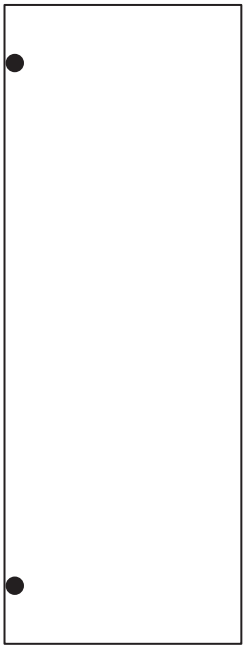

8 Door *(D1937A)*
(1056 x 391.5mm) x 2



12 Drawer Base *(T457)*
(739 x 297mm)



13 Back *(X933)*
(1225 x 784mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 


Wooden dowel *(F22)* x 2

B 

Metal dowel *(F901)* x 16

C 

Large locking nut *(F900)* x 14

D 

Nail *(F51)* x 27

E 

Knock-in Peg *(F171)* x 4

F 

Small locking nut *(F3)* x 2

G 

25mm Screw (*F50)* x 10

H 

Door Buffer *(F137)* x 2

I 


13mm Screw *(F63)* x 8

J 


9mm Screw *(F74)* x 2

K 


9mm Screw (*F73)* x 4

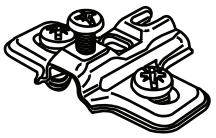L 


Hinge plate (*F523)* x 4

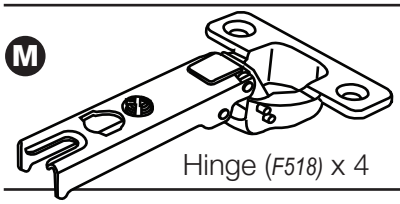M 

Hinge (*F518)* x 4

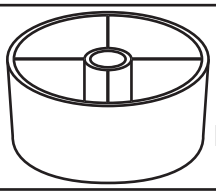N 


Feet *(F854)* x 4

O 


Shelf support *(F121)* x 28

P 

Drawer runner *(F1004)* x 2

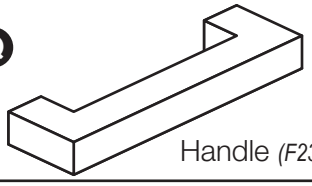
Q 

Handle *(F236)* x 3

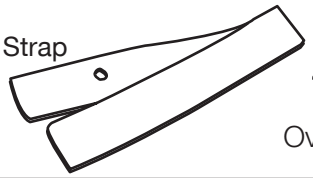R Strap   Screw  Washer x 2

Overbalance protector kit *(F269)* x 1

Ruler - Use this ruler to help correctly identify the screws

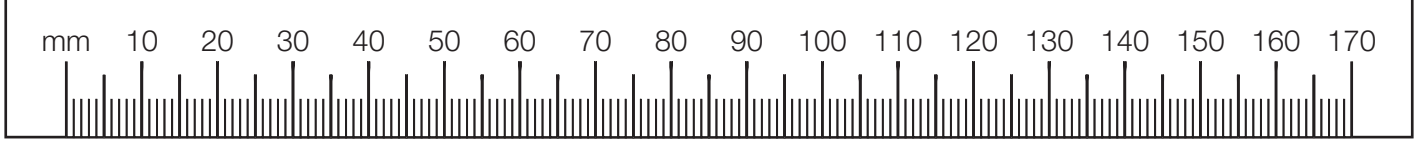

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*

Step 1

Prepare the drawer front

Screw 2 metal dowels (B) into the back of the drawer front [6].

Note: Tighten metal dowels up fully against the panels.

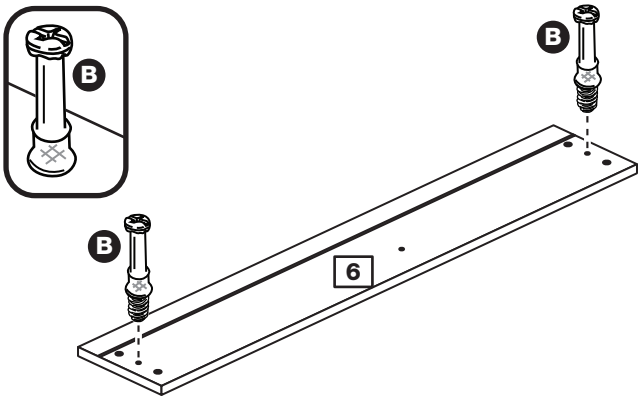


Step 2

Prepare the drawer sides

Insert a small locking nut (F) into the hole shown on the left drawer side [10] and right drawer side [11].

Note: Arrow on locking nut **must** point towards hole in edge of panel.

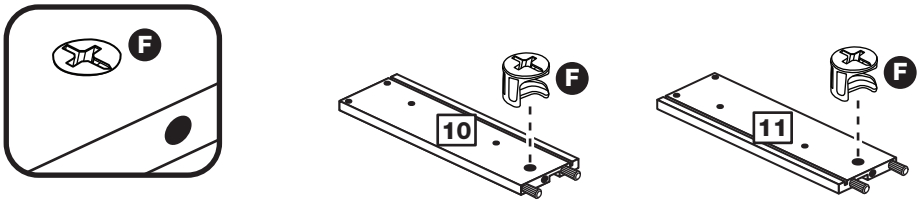


Step 3

Attach the drawer sides to the drawer front

Push the left drawer side [10] and right drawer side [11] onto the back of the drawer front [6].

Turn the small locking nuts (F) on the left drawer side [10] and right drawer side [11].


Note: Turn the locking nuts (F) clockwise to secure panels - more than 1/2 a turn.

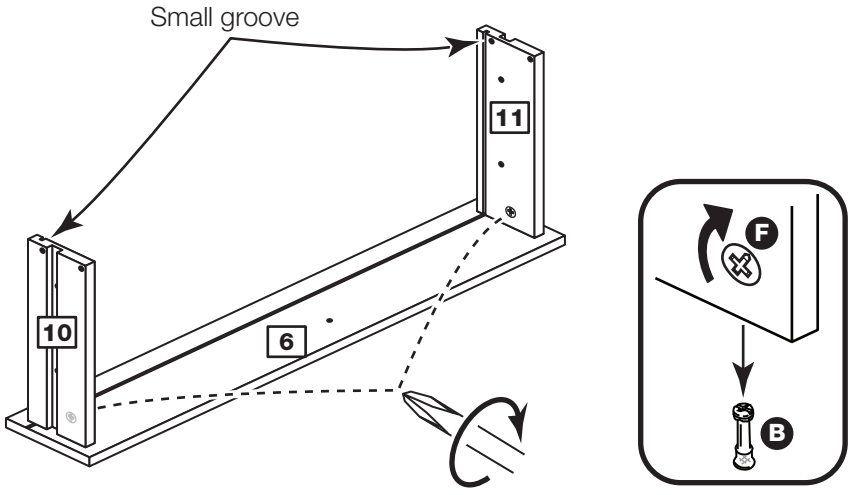

Step 4

Fit the drawer base

Slide the drawer base 12 down the grooves in the drawer sides 10 and 11 and down into the groove in the drawer front 6.

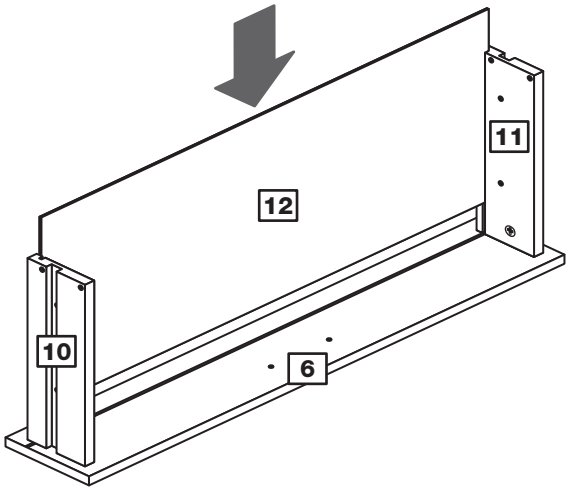


Step 5

Fit the drawer back

Fit the drawer back 9 between the drawer sides 10 and 11.

Make sure that the drawer base 12 fits into the groove in the drawer back 9.


Hold the drawer back 9 in position and tap the knock-in pegs E through the holes in the drawer sides 10 and 11.

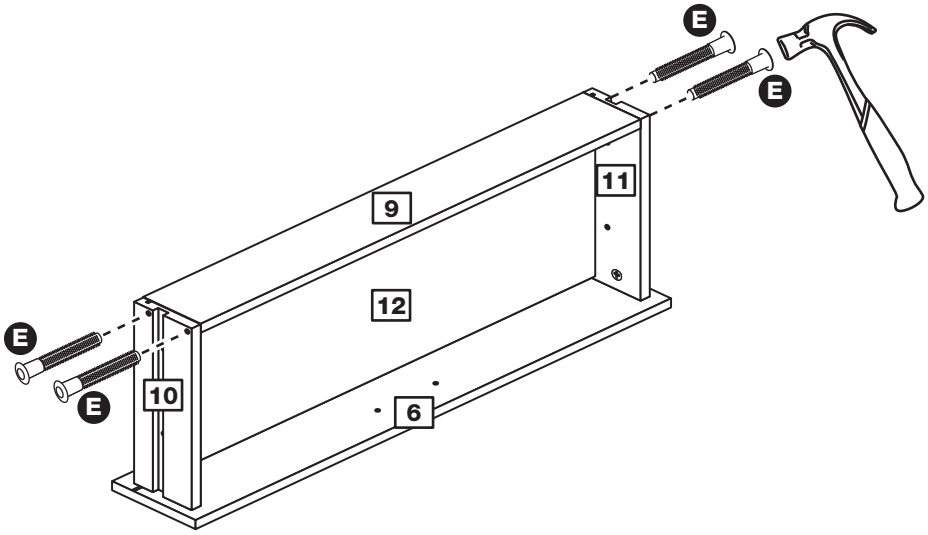

Step 6

Attach the handle

Attach a handle Q to the drawer front 6 using 2 screws G.

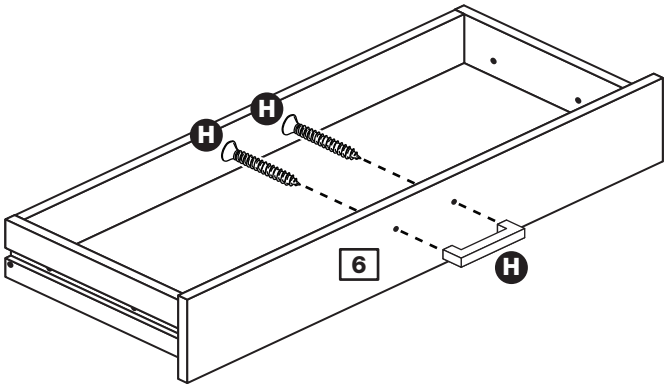

Step 7

Prepare the left side

a: Place a runner (P) on the left side [1].
Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (K).


b: Slide the runner (P) back the other way and fit the 2nd screw (K) into the corresponding hole in the left side [1].


c: Fit 2 hinge plates (L) onto the left side [1], making sure that the slot is facing towards the finished front edge.


Screw a metal dowel (B) into the left side [1].

Insert 4 large locking nuts (C) into the left side [1].

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

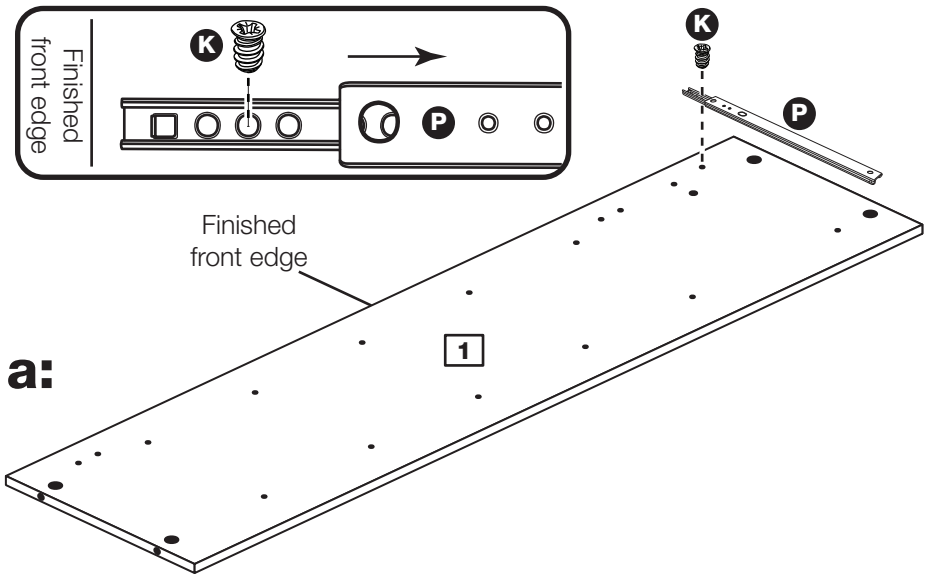

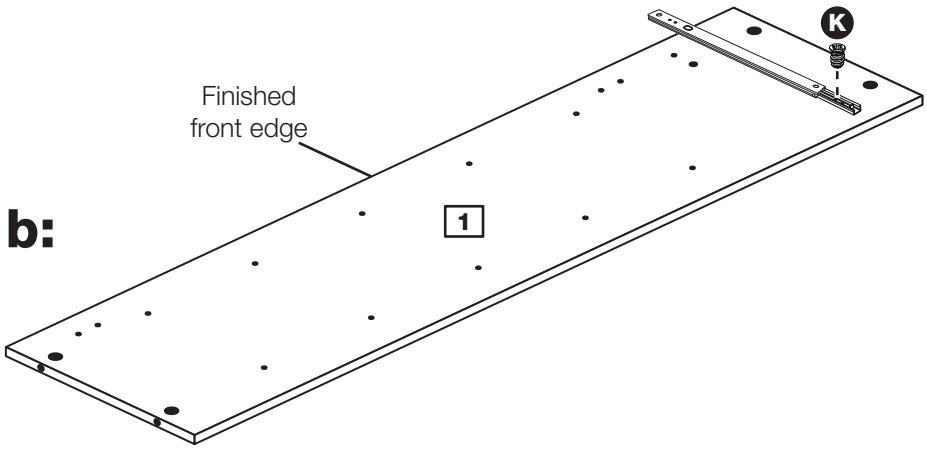

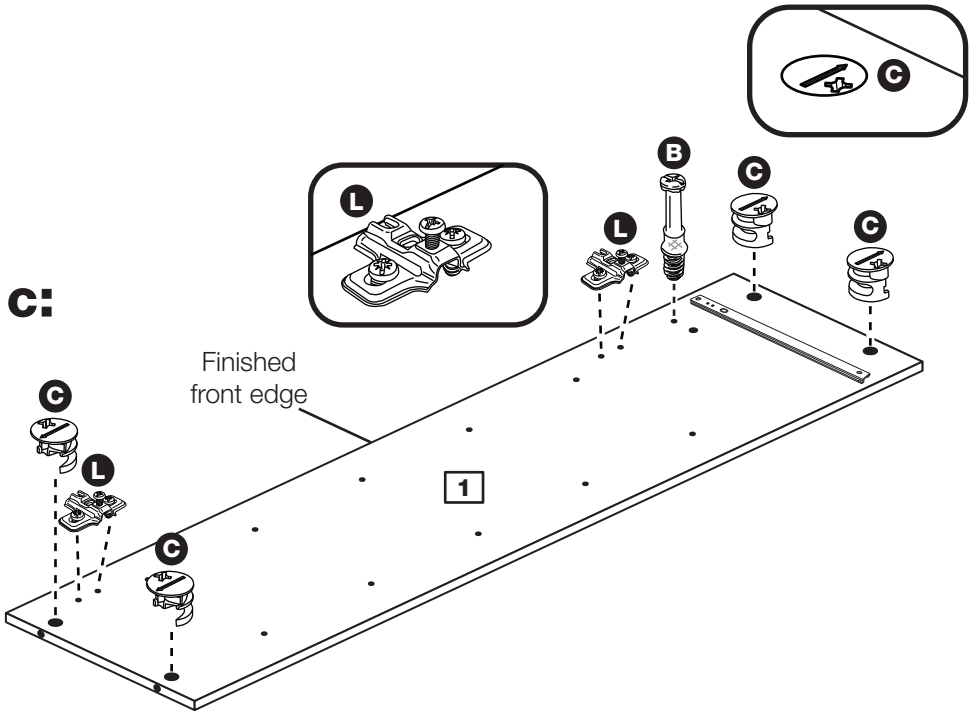

Step 8

Prepare the right side


a: Place a runner P on the right side 2. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw K.


b: Slide the runner P back the other way and fit the 2nd screw K into the corresponding hole in the right side 2.


c: Fit 2 hinge plates L onto the right side 2, making sure that the slot is facing towards the finished front edge.


Screw a metal dowel B into the right side 2.

Insert 4 large locking nuts C into the right side 2.

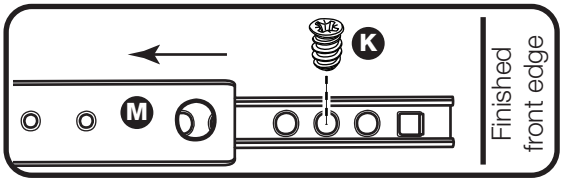

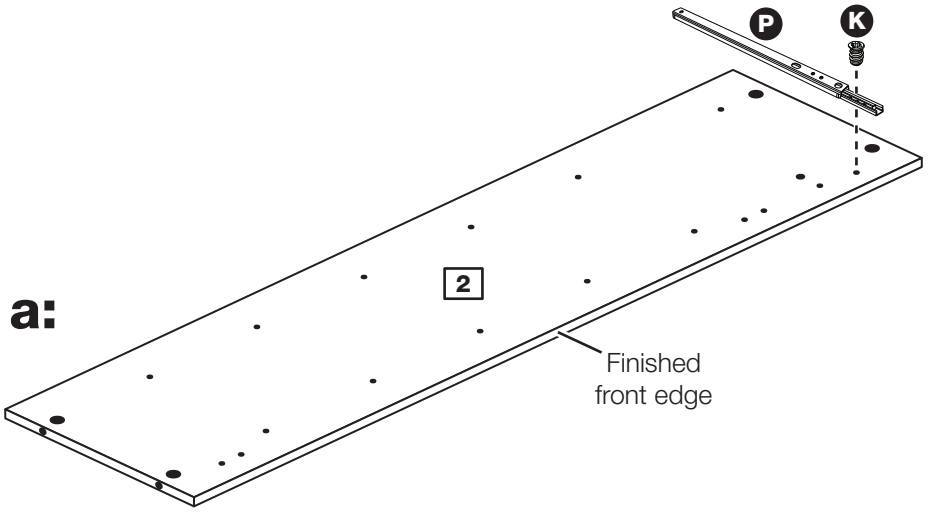

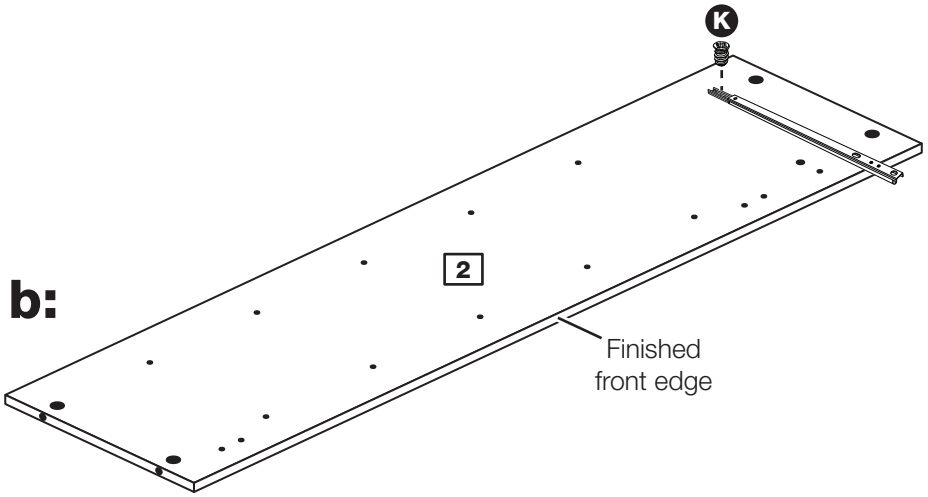

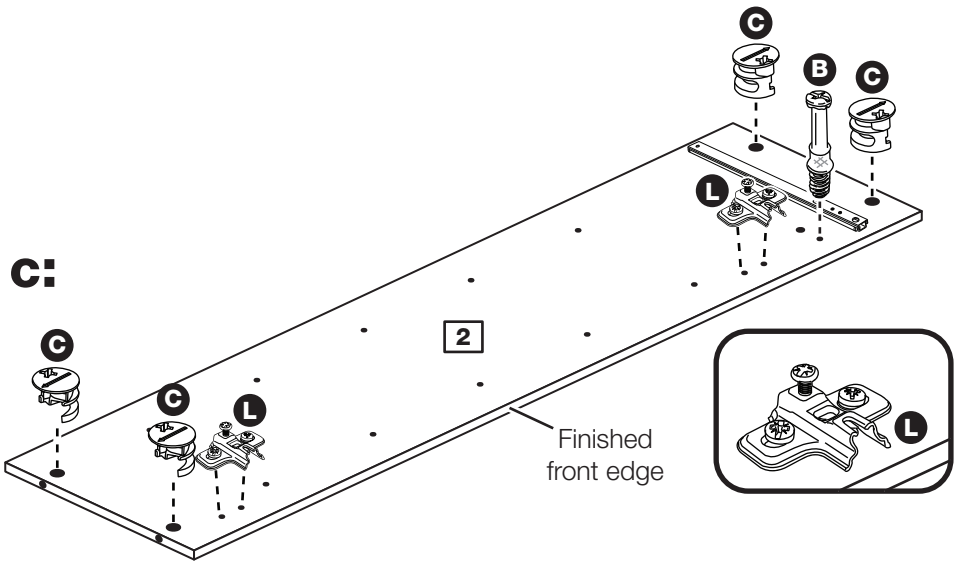

Step 9


Prepare the rail

Screw 2 metal dowels B into the rail 4.

Insert 2 large locking nuts C into the rail 4.

Tap 2 wooden dowels A into the rail 4.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

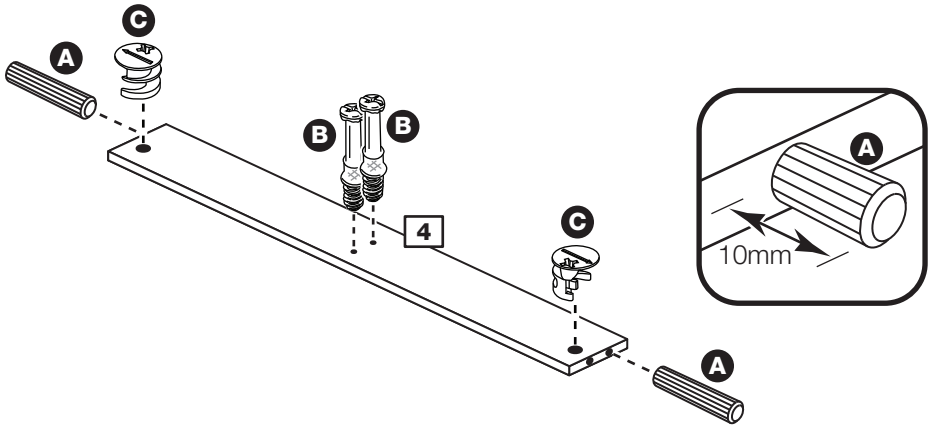


Step 10

Join the right side and rail

Push the rail 4 onto the right side 2.

Use a screwdriver to tighten the large locking nut C fitted to the rail 4.

Note: Turn the large locking nut C as far as it will go - more than 1/2 a turn.

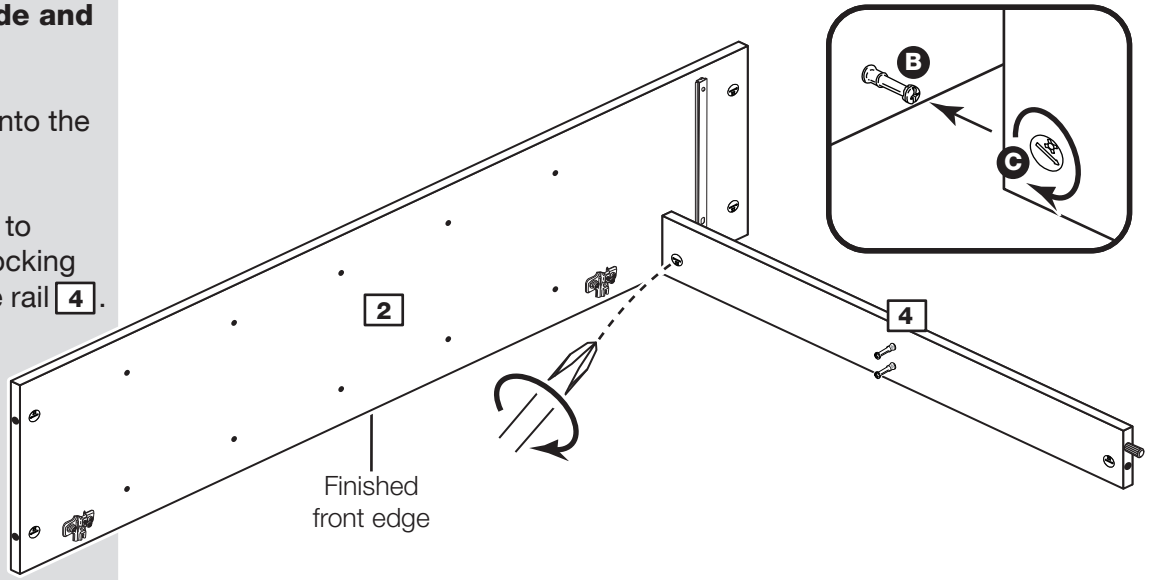


Step 11

Fit the left side

Push the left side 1 onto the rail 4.


Use a screwdriver to tighten the large locking nut C fitted to the rail 4.

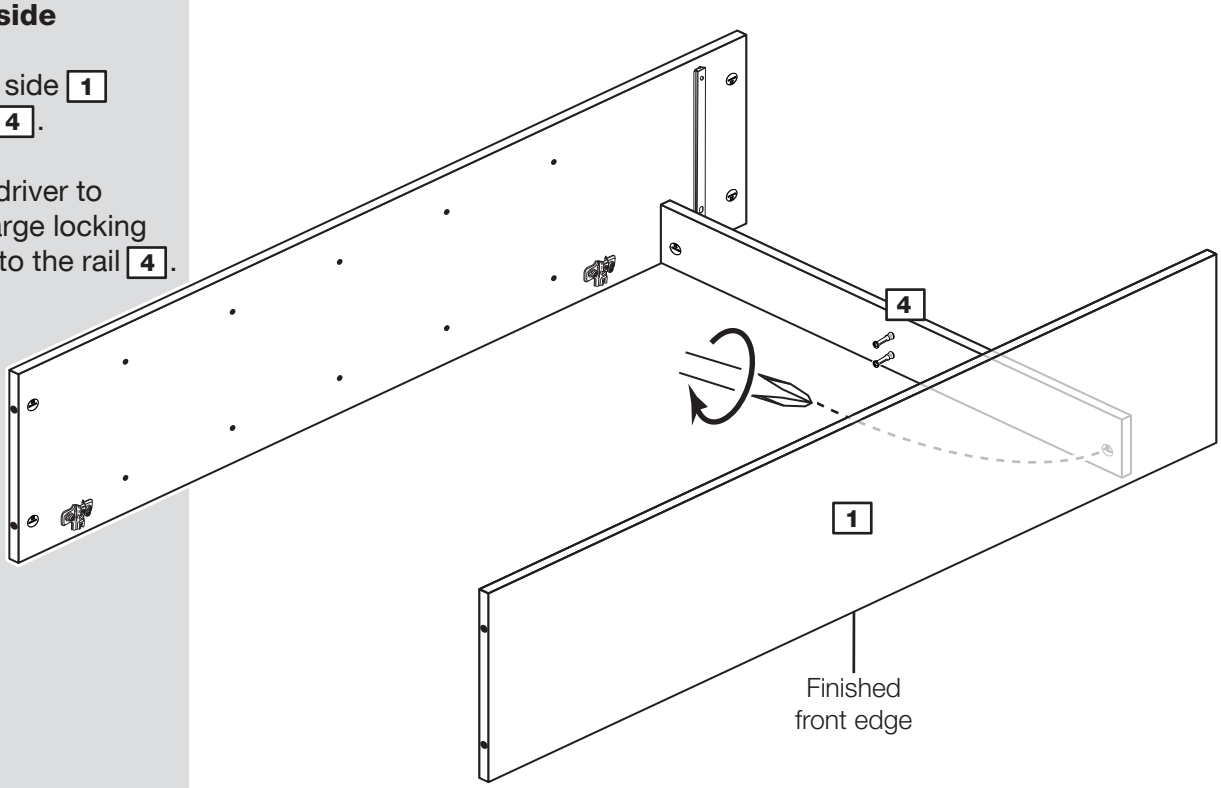

Step 12

Prepare the divider

Insert 4 large locking nuts C into the divider 7.

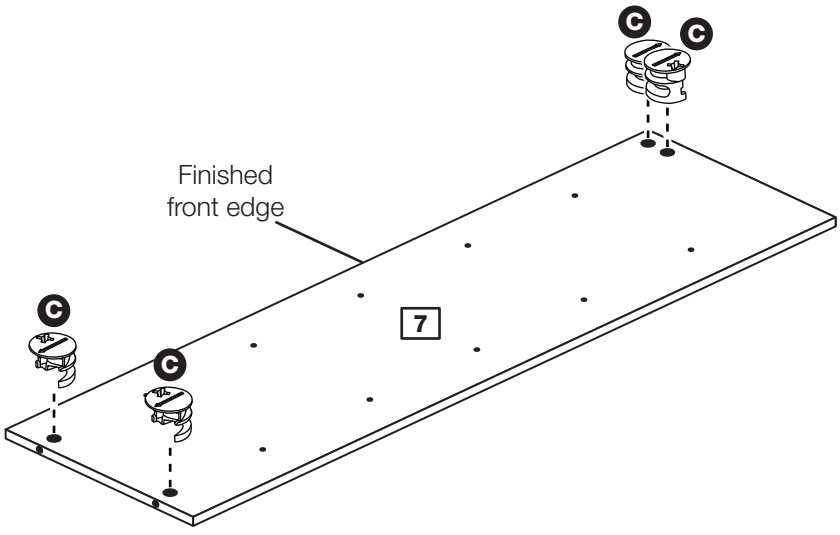


Step 13

Fit the divider

Push the divider 7 onto the rail 4.


Use a screwdriver to tighten the 2 large locking nuts C fitted to the divider 7.

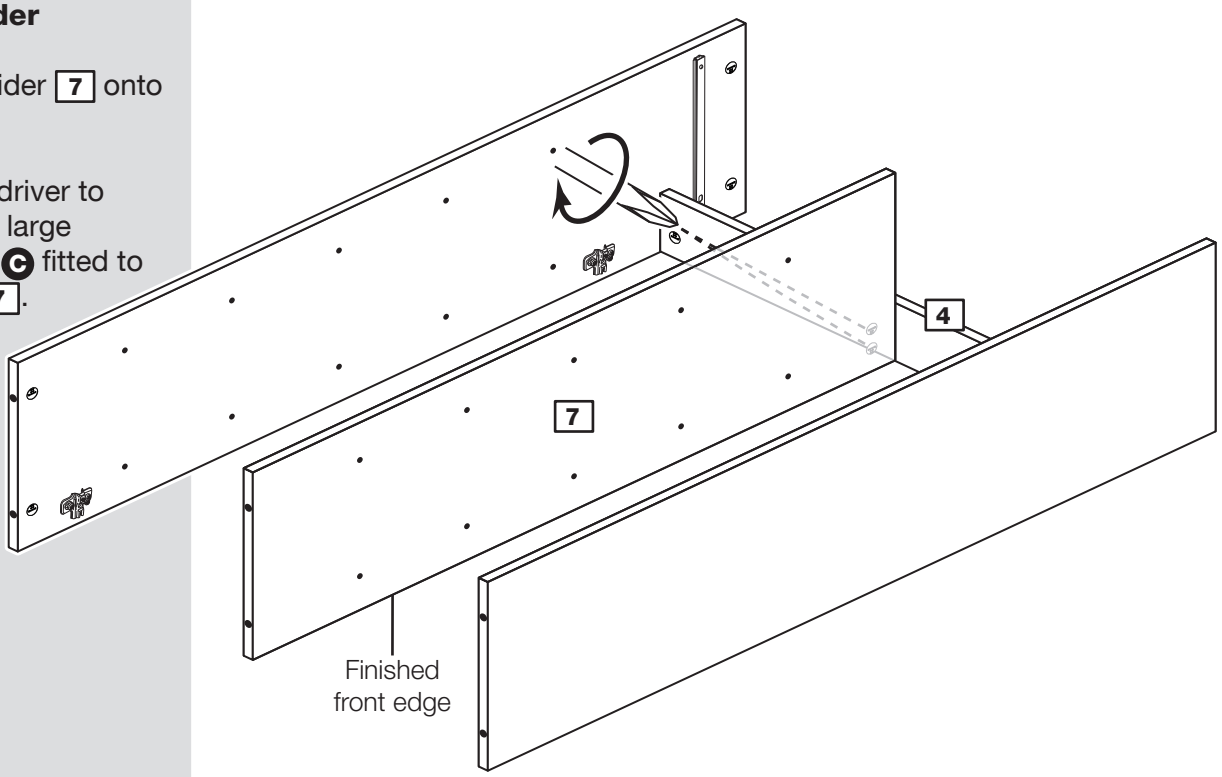

Step 14

Prepare the base

Screw 6 metal dowels B into the base 3.

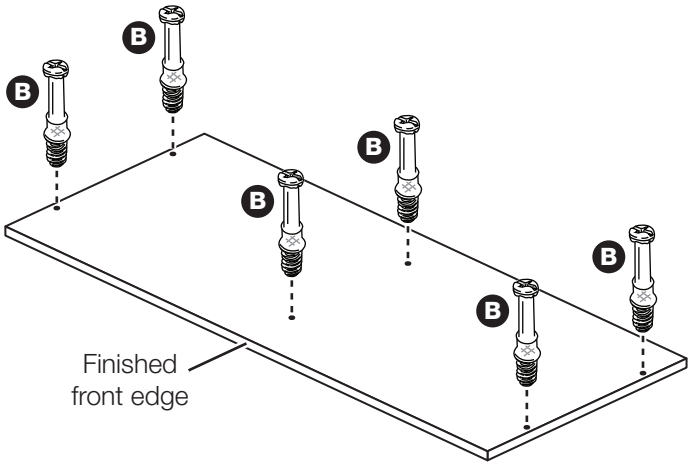


Step 15

Fit the base

Push the base [3] onto the assembly.

Use a screwdriver to tighten the 6 large locking nuts (C) fitted to the left side [1], right side [2] and divider [7].

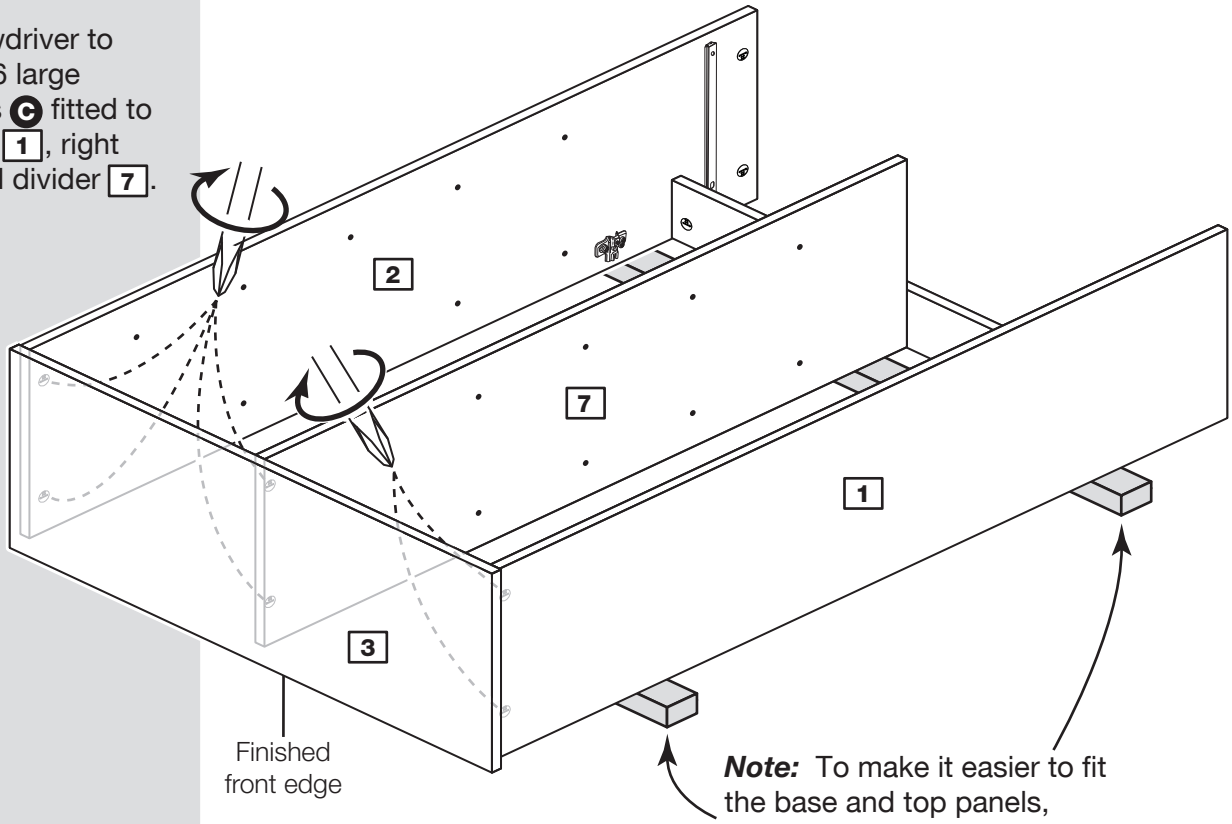


Note: To make it easier to fit the base and top panels, place polystyrene blocks from the packaging underneath the sides and divider.

Step 16

Prepare the top

Screw 4 metal dowels (B) into the top [3].

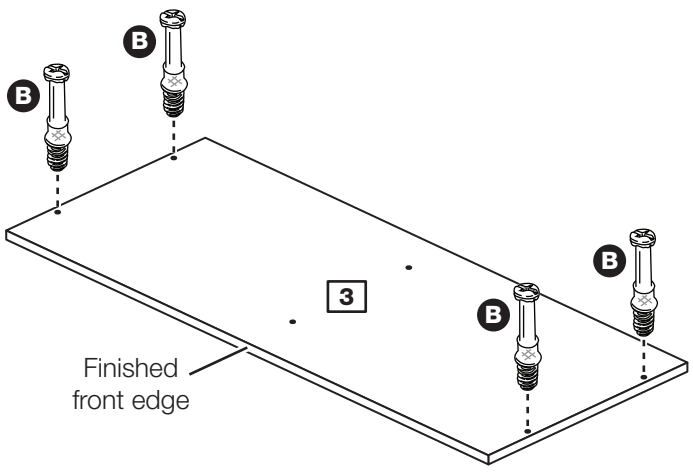


Step 17

Fit the top

Push the top 3 onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts C fitted to the left side 1 and right side 2.

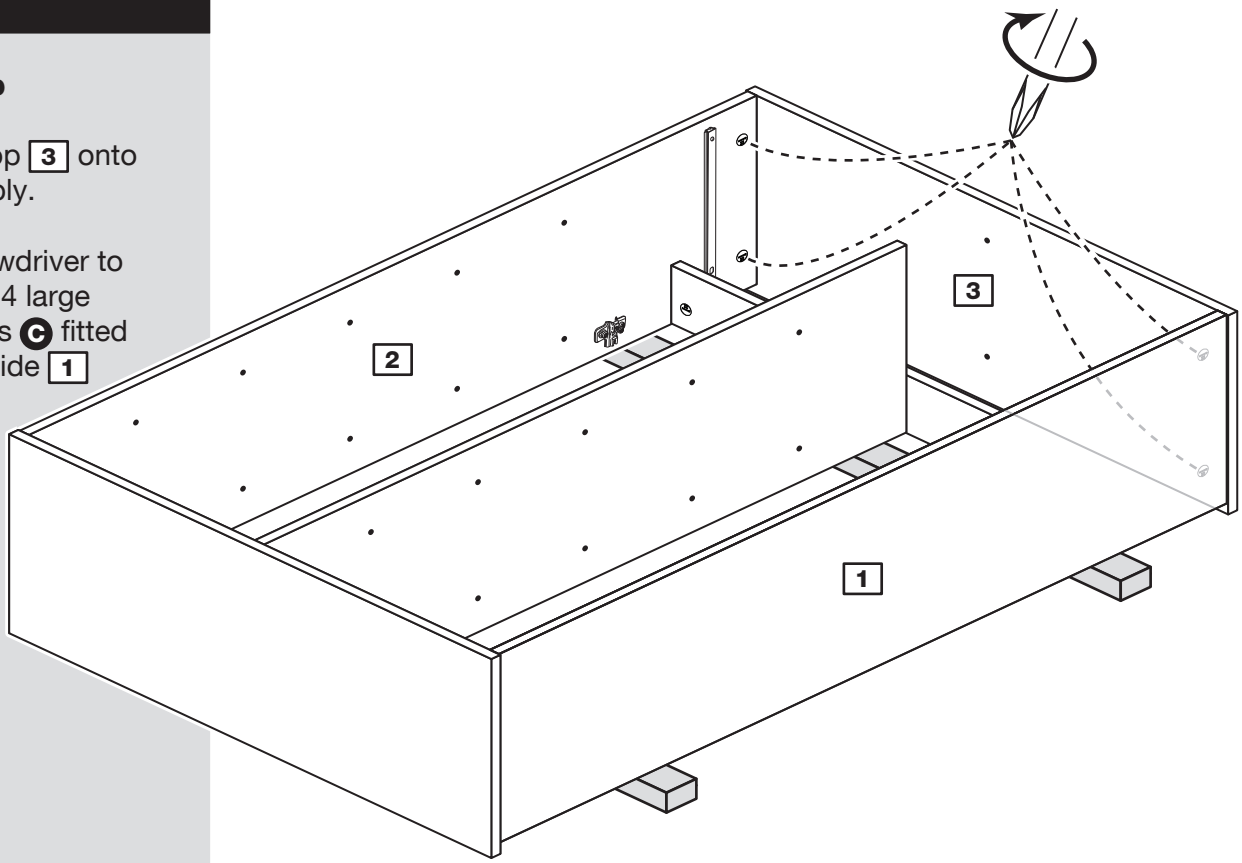


Step 18

Fit the feet

Screw the 4 feet N onto the base 3 using screws G.

Note: Position the feet approximately 10mm in from the edges of the base.

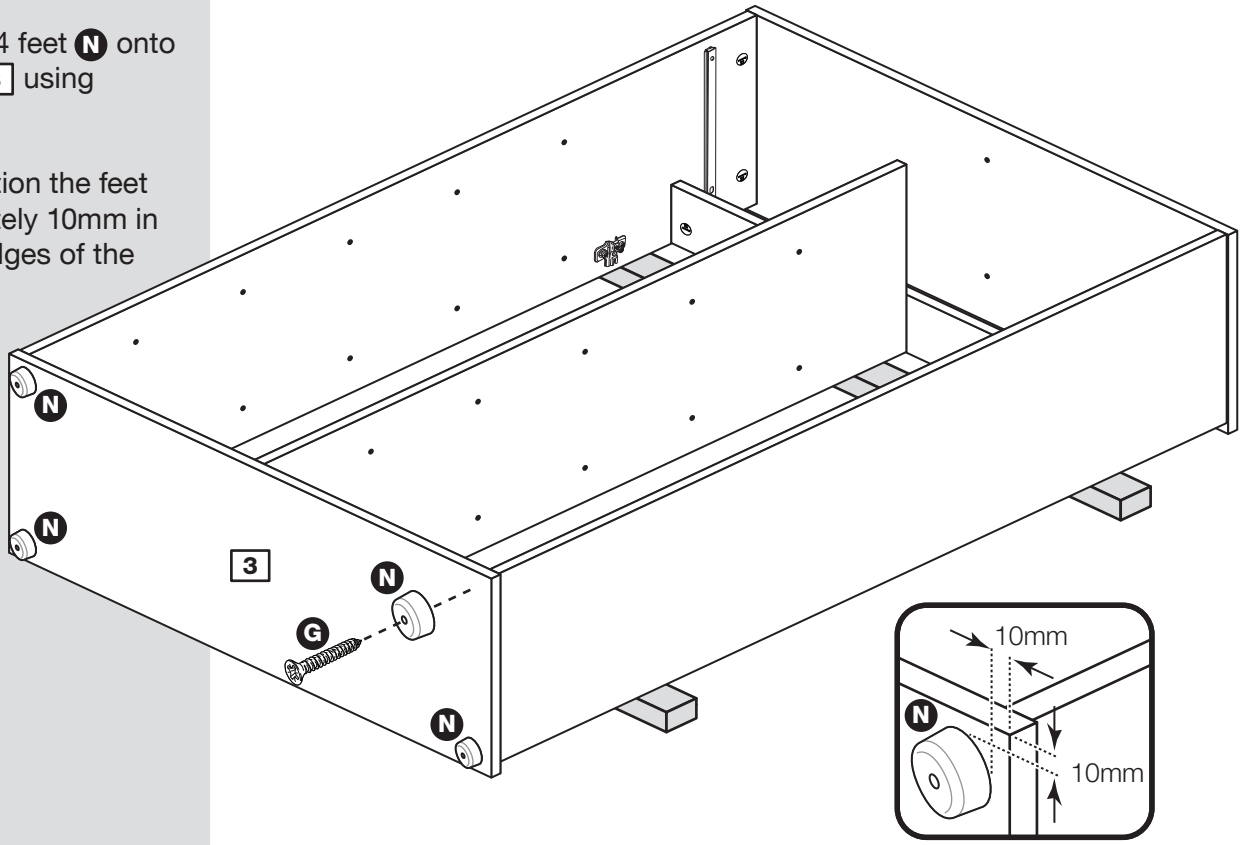

Step 19

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 13 onto the unit.


Nail D around the outside edges of the back 13.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

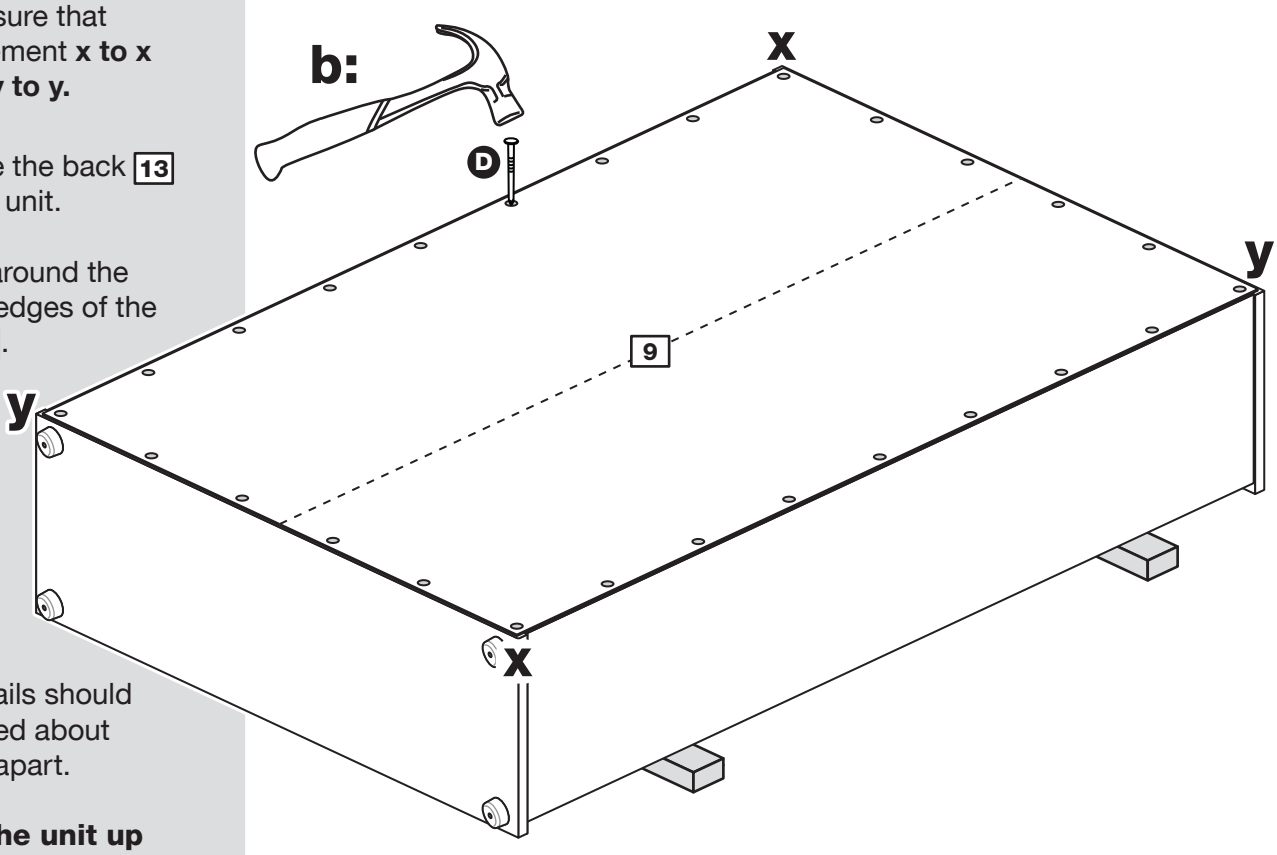


Step 20


Fit the drawer

Slide both the runners P forward and locate the drawer sides 10 and 11 between them, lining up the holes in the drawer sides with the 2nd 'threaded' holes in the runners P.

Working from the inside of the drawer, insert 2 screws J through the drawer sides and out into the 2nd threaded hole in the runners.

Note: Do not overtighten the screws J.
If they catch on the runner you may need to loosen them slightly.

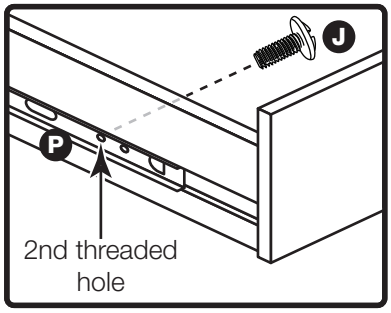

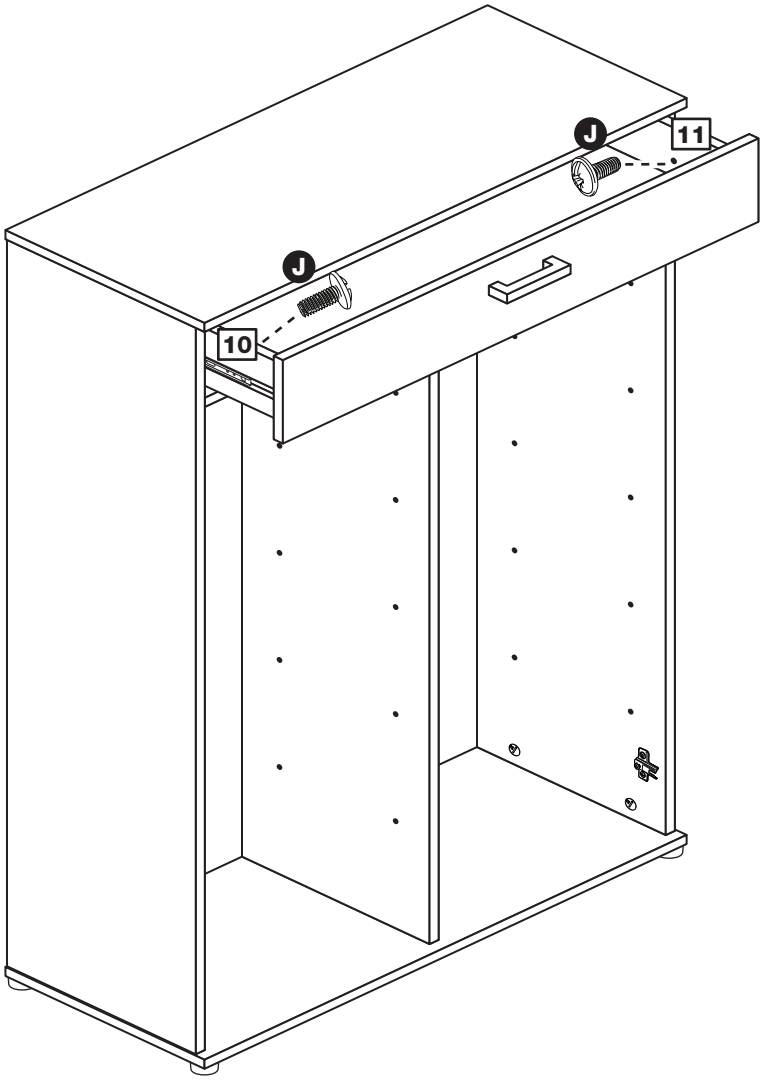


Step 21

Fit the shelves

For each of the 7 shelves [5], insert 4 shelf studs (O) at the required height on either side of the unit.

Lower the 7 shelves [5] down onto the shelf studs (O).

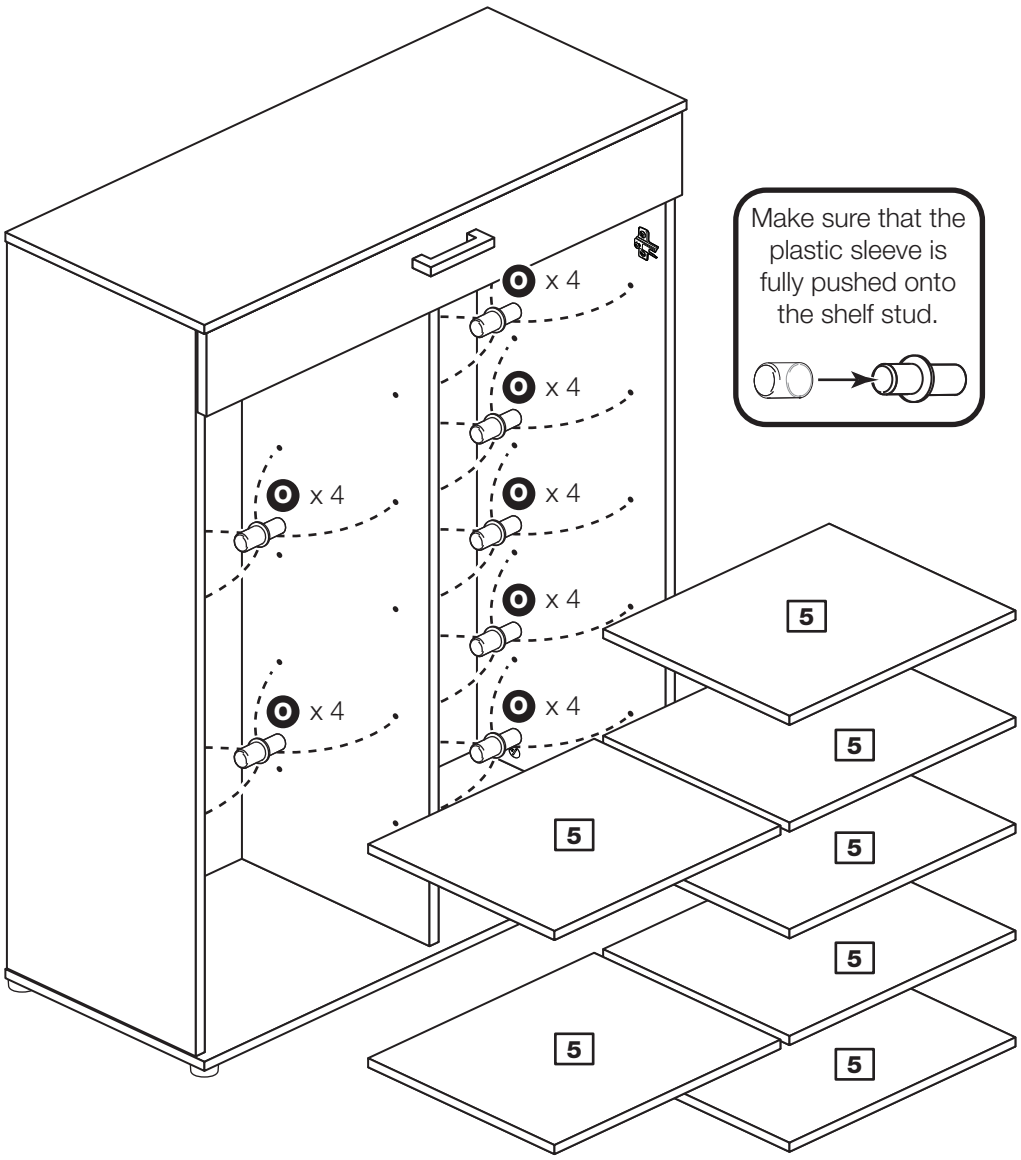


Step 22

Prepare the 2 doors

Push fit 2 hinges (M) into each of the doors [8].

Secure each hinge with 2 screws (I).

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

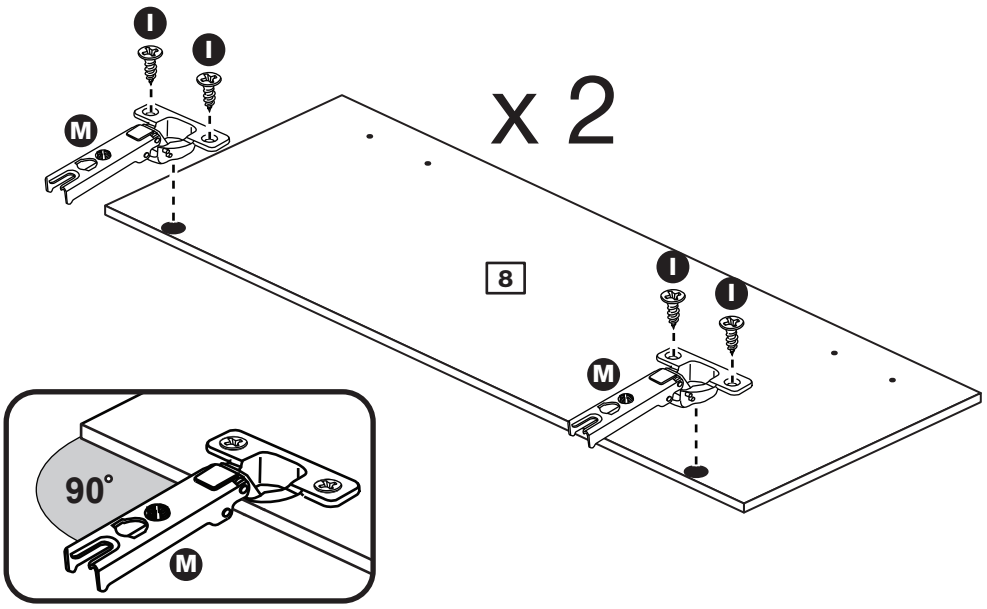

Step 23

Drill 2 handle holes in each of the doors

Important: Please follow these instructions carefully.

Lay the 2 doors [8] down onto a smooth surface.


Check that the hinges and holes are in the same place as the diagrams.


Note: We recommend the use of a small piece of waste wood, placed behind the holes while drilling, to reduce the possibility of any breakout.

Using the pilot holes in the rear face of the door, drill through the 2 holes indicated opposite, using a 2.5mm diameter drill.

Turn the door over and open out the 2.5mm holes that you have just drilled by drilling back through them with a 5mm drill.

IMPORTANT
Carefully choose which 2 holes you need to drill in each door

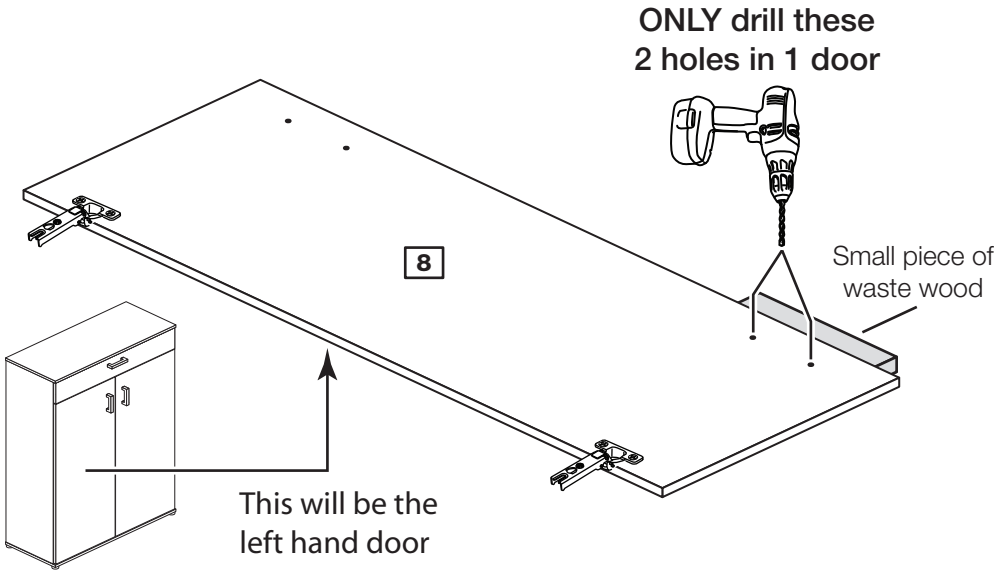

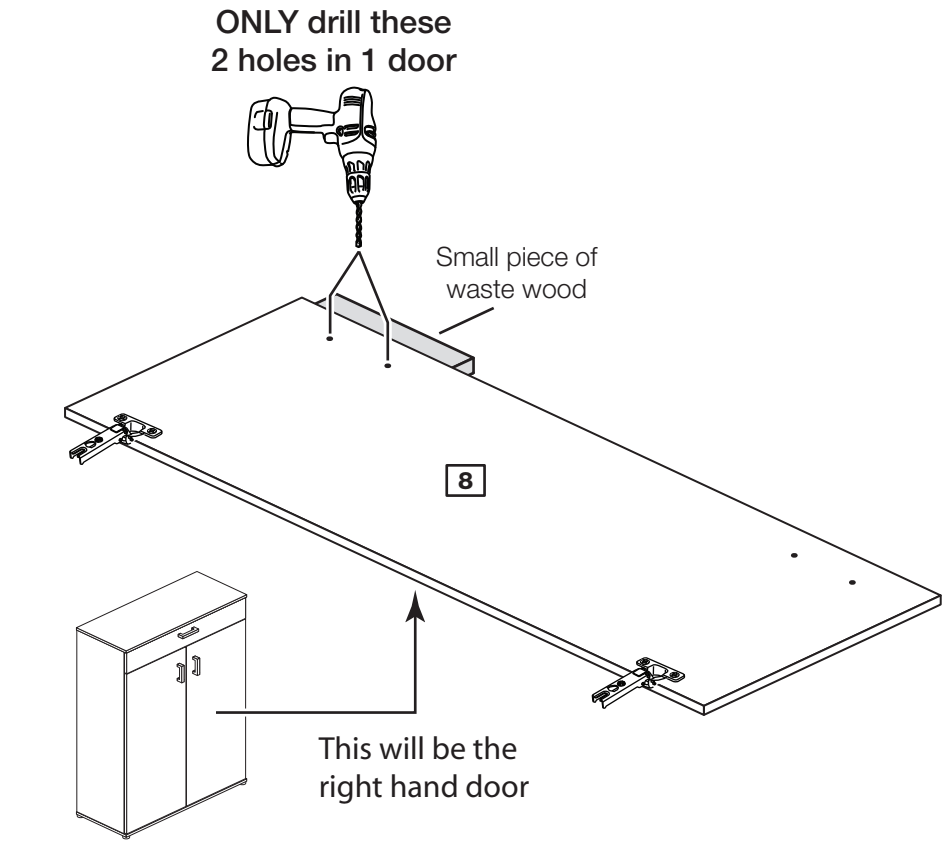

Step 24

Fit doors, handles and door buffers

a: Push the hinge M onto the front part of the hinge plate L.
The recess at the bottom of screw B goes into the slot in the hinge plate.


b: Keep the hinge M FLAT against the hinge plate L as you slide it across as far as it will go. Tighten screw A.

c: The hinge M must be flat against the hinge plate L prior to any adjustment.


d: The hinge M must NOT be AT AN ANGLE to the hinge plate L when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle Q to each door 8 using 2 screws G.

Stick a door buffer H into the top corner of each door 8 so that they hit the front edge of the divider when the door is closed.

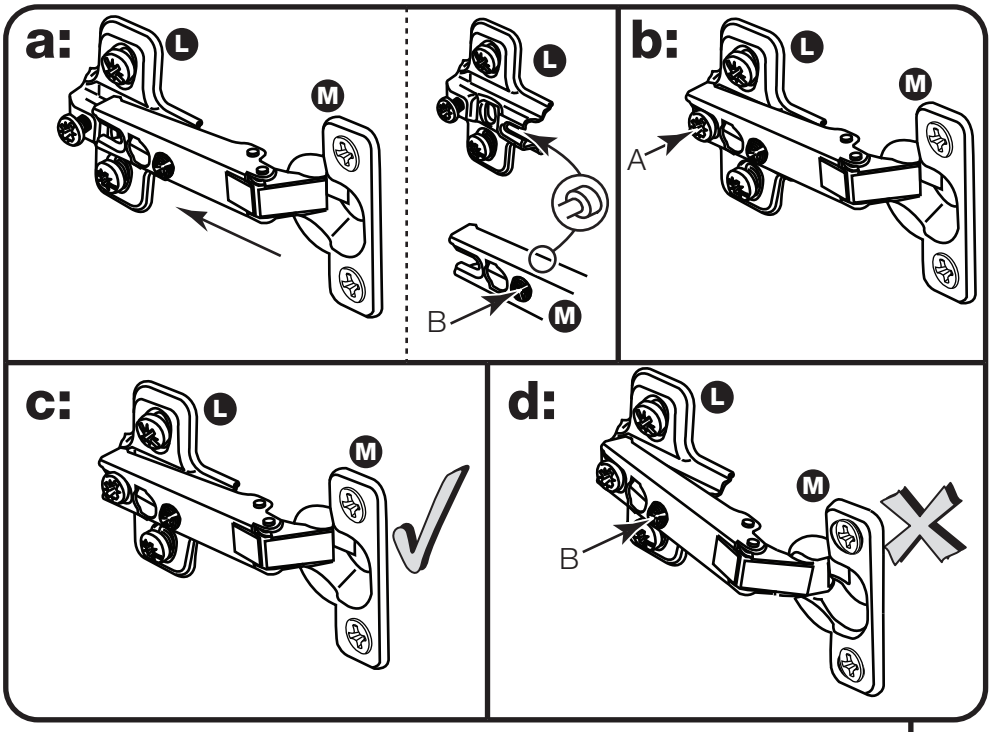

Note: The easiest way to attach each door is to fit the top hinge first, then align and fit the other hinge.

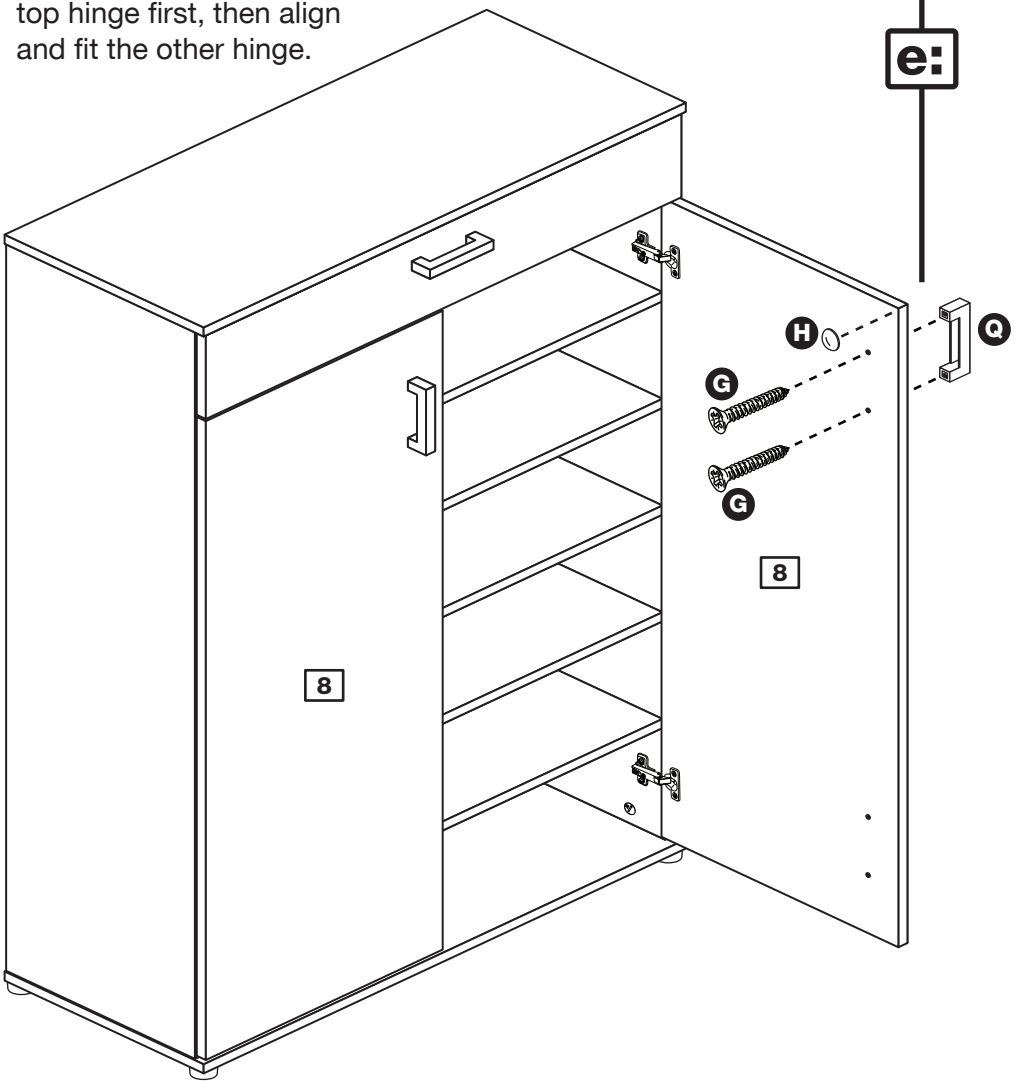

Step 25


Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

c: Forward and Back adjustment.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

d: Sideways adjustment.
To move door ‘out’ loosen screw C.
To move door ‘in’ tighten screw C.

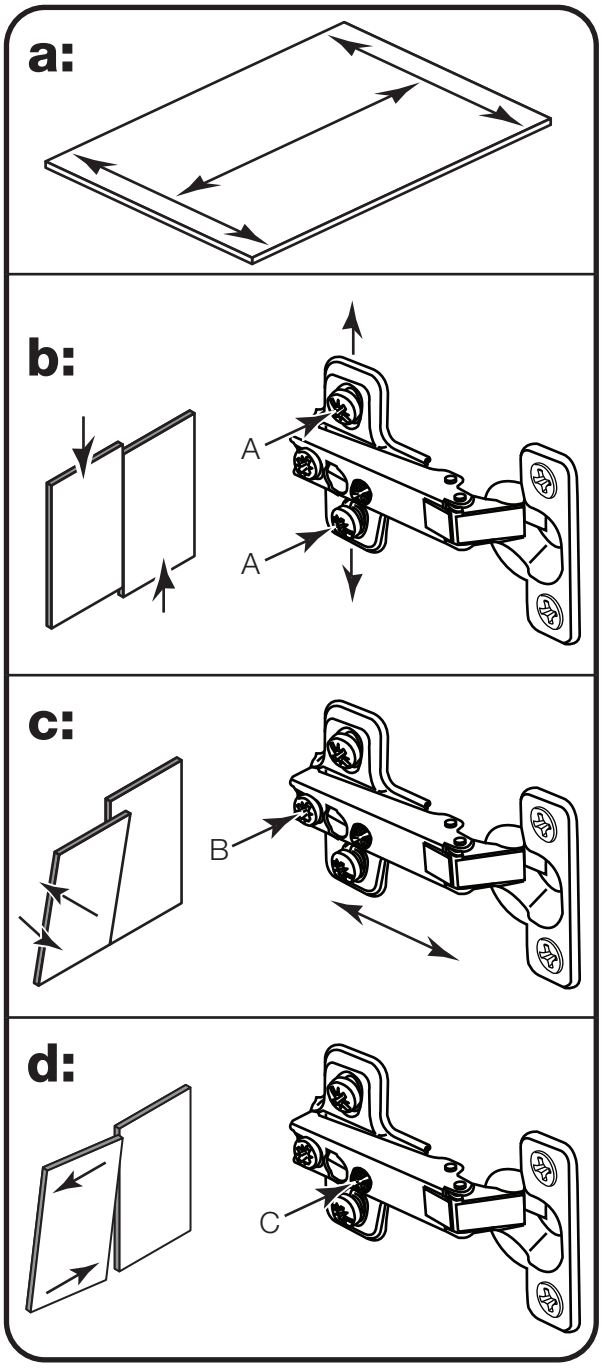

Step 26


Fit the overbalance protector kit


To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit Ⓡ to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

Assembly is complete

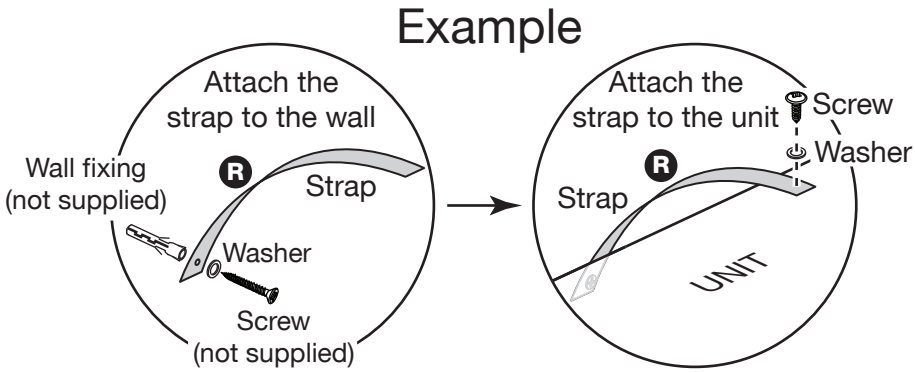

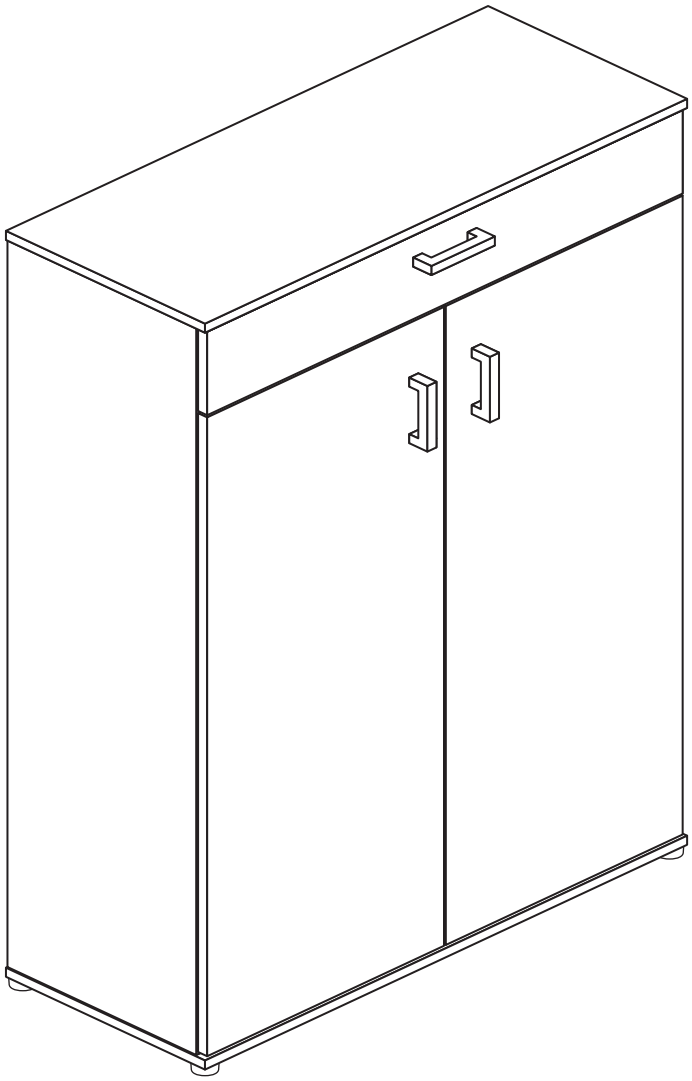

If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers on the component pages)*
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW