


Triple Modular Metal Frame Wardrobe

Assembly Instructions - Please keep for future reference

9049646

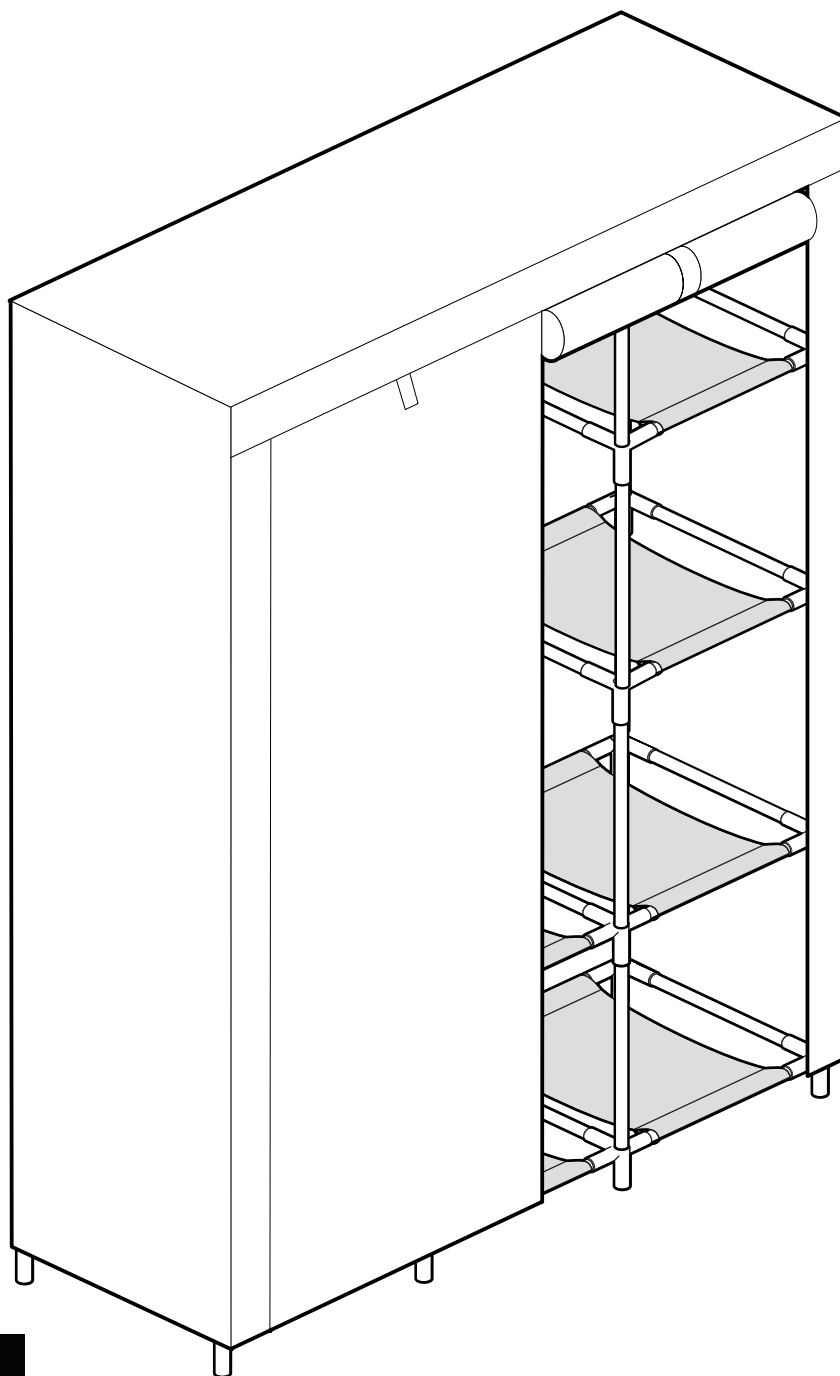

Dimensions

Width - 132cm

Depth - 46cm

Height - 169cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 1 and 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product as this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

If you have damaged or missing components,
call the **Customer Helpline: 0845 640 0800**

Please check you have all the panels listed below




1 Corner joint x 28




2 Middle joint x 16




3 Straight joint x 4

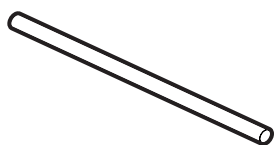


4 Metal tube x 78

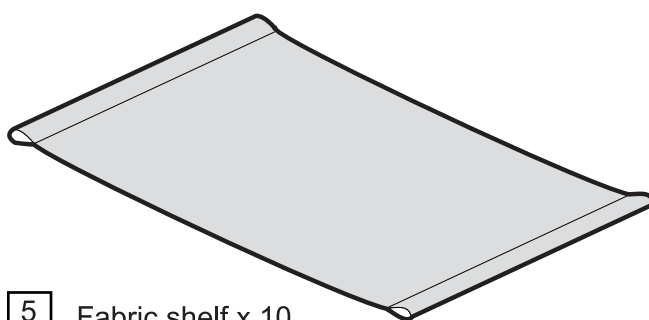

5 Fabric shelf x 10

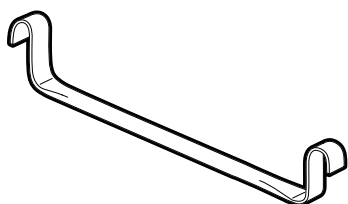

2 Clothes rail x 6

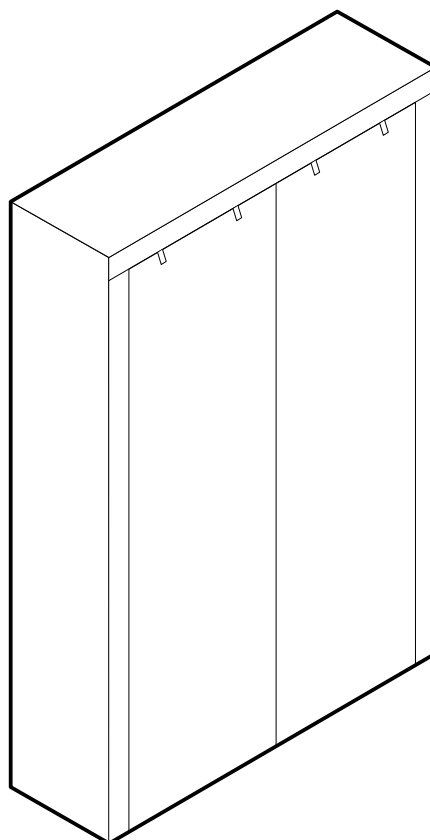


7 Wardrobe cover x1

Assembly Instructions


Step 1

Push in 3x **4** Metal tubes into 2x **1** Corner joints as shown.

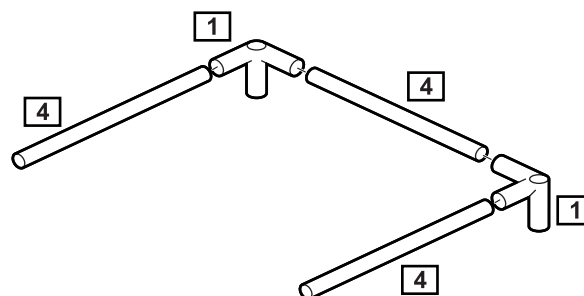


Step 2

Slide on 1x **5** Fabric shelf as shown.

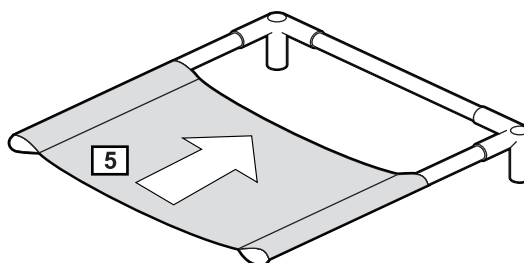

Step 3


Using 2x **1** Corner joints, 4x **2** Middle joints and 7x **4** Metal tubes pushed through 2x **5** Fabric shelves add on to the shelf section already constructed in **Step 1 & 2**

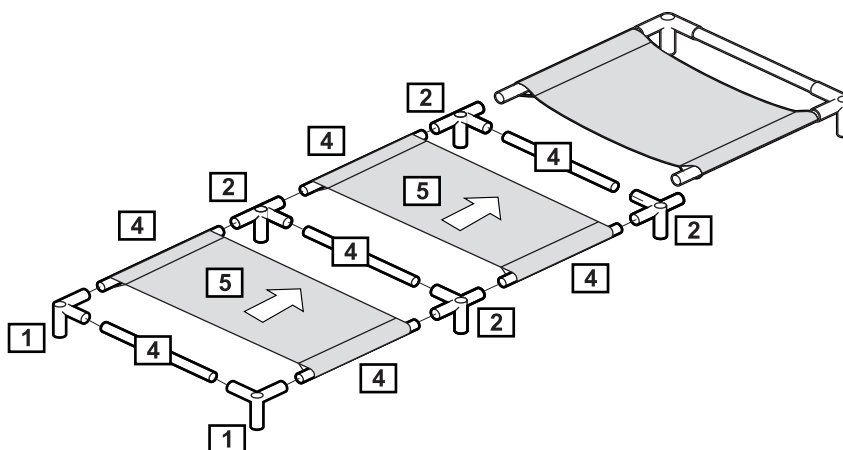


Step 4

Repeat **Steps 1-3** so you have 2 complete identical shelf sections as shown.

section 1

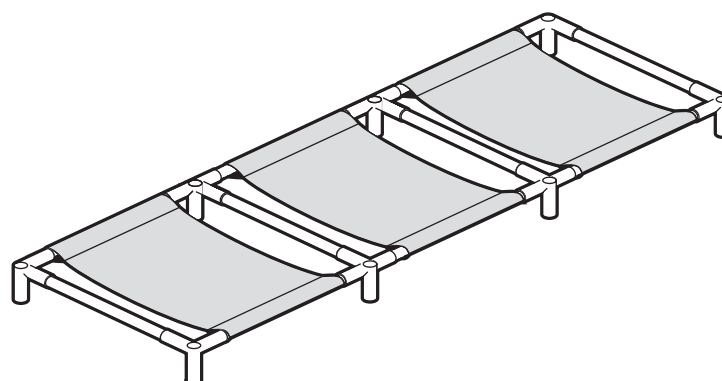


section 2

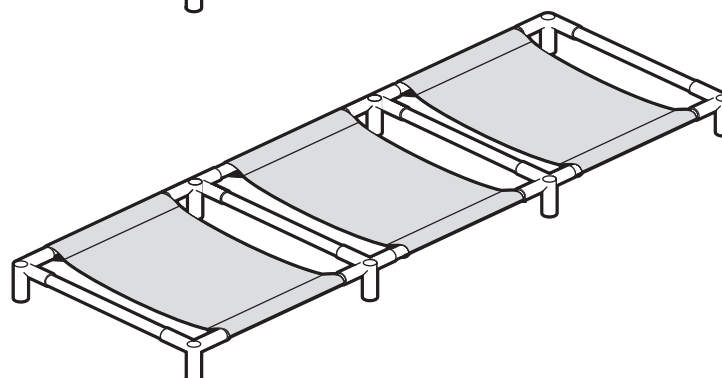

Assembly Instructions


Step 5

Taking the two sections already completed connect using 8 x **4** Metal tubes.

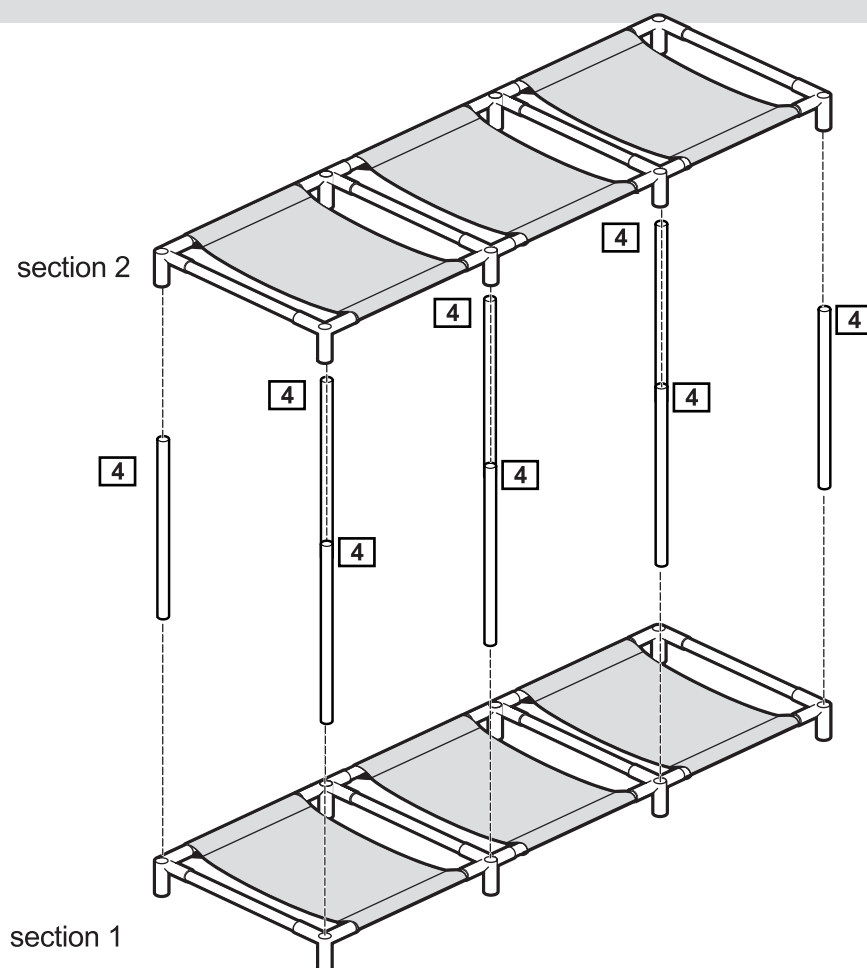

Step 6

Push in 8 x **4** Metal tubes into the assembly as shown.

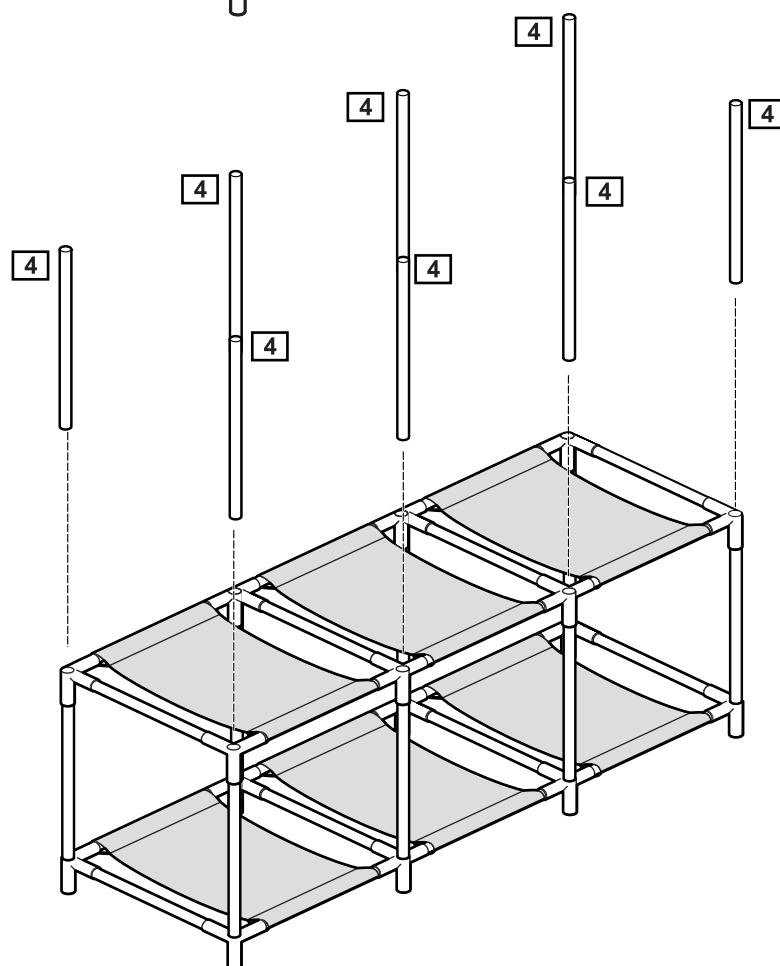


Assembly Instructions


Step 7

Leave the built assembly to one side.

Assembly so far

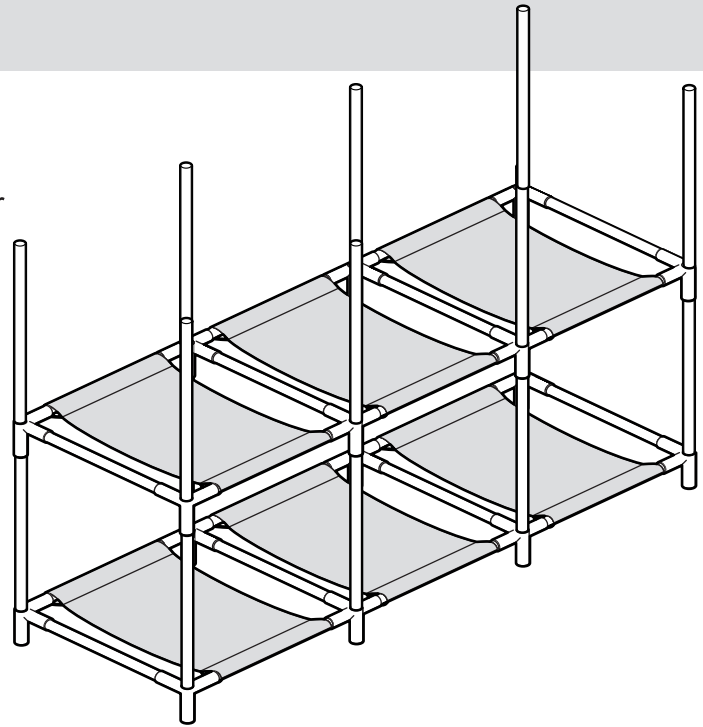


Using 4x **1** Corner joints
4x **4** Metal tubes pushed
through 1x **5** Fabric shelf,
push all components together
as shown.

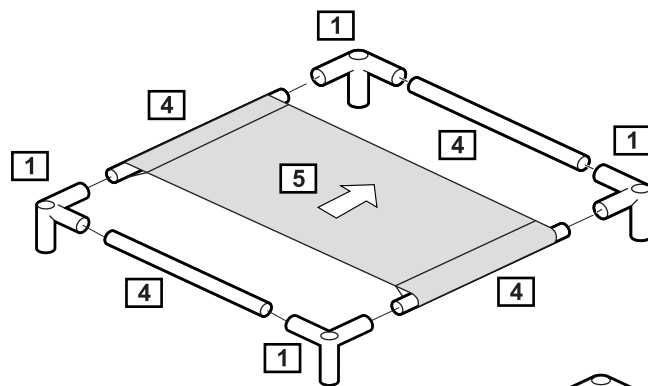


Repeat **Step 7** until
you have a total of 4
shelf sections.


Section 1

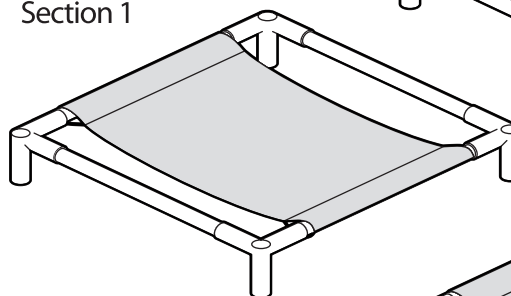


Section 2

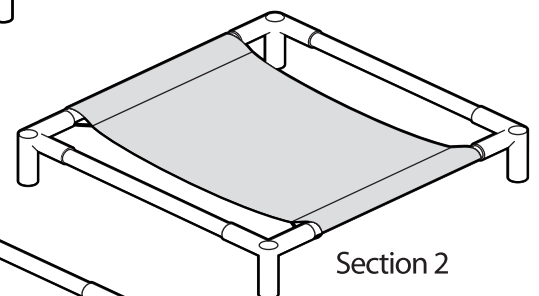

Section 4

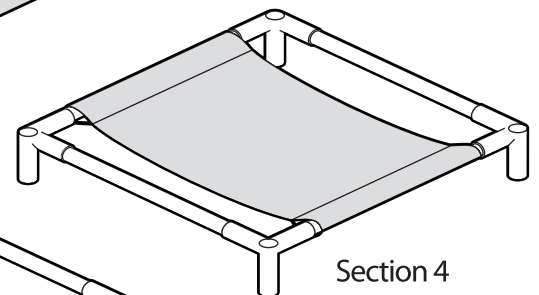


Section 3

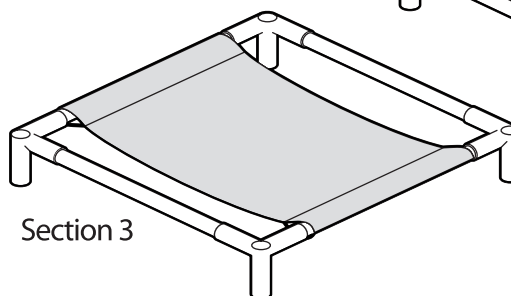

Assembly Instructions


Step 8

Push two of the shelf sections onto the assembly already built as shown.

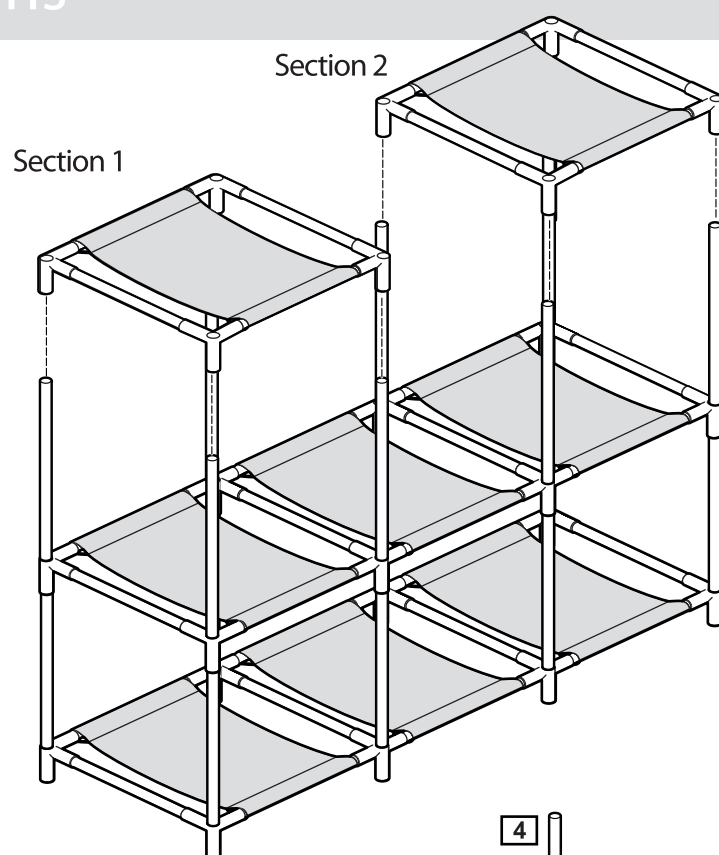

Step 9

Push in 8x 4 Metal tubes into position as shown

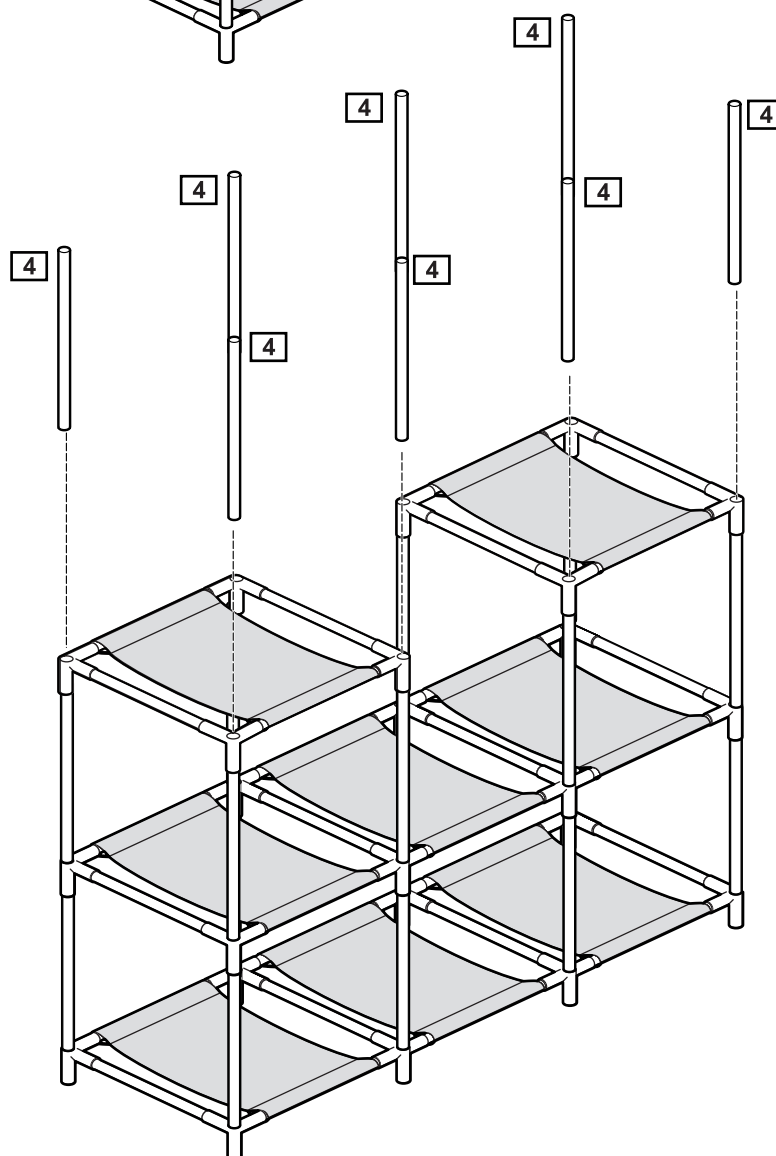


Assembly Instructions

Step 10


Push the last two of the shelf sections onto the assembly already built as shown.

Assembly so far

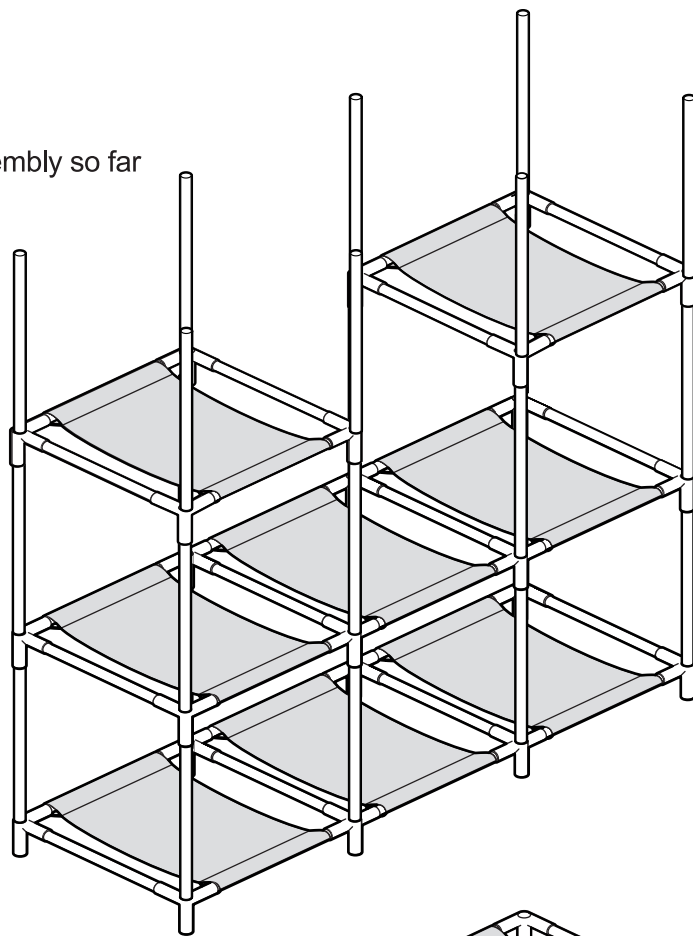


Section 4

Section 3

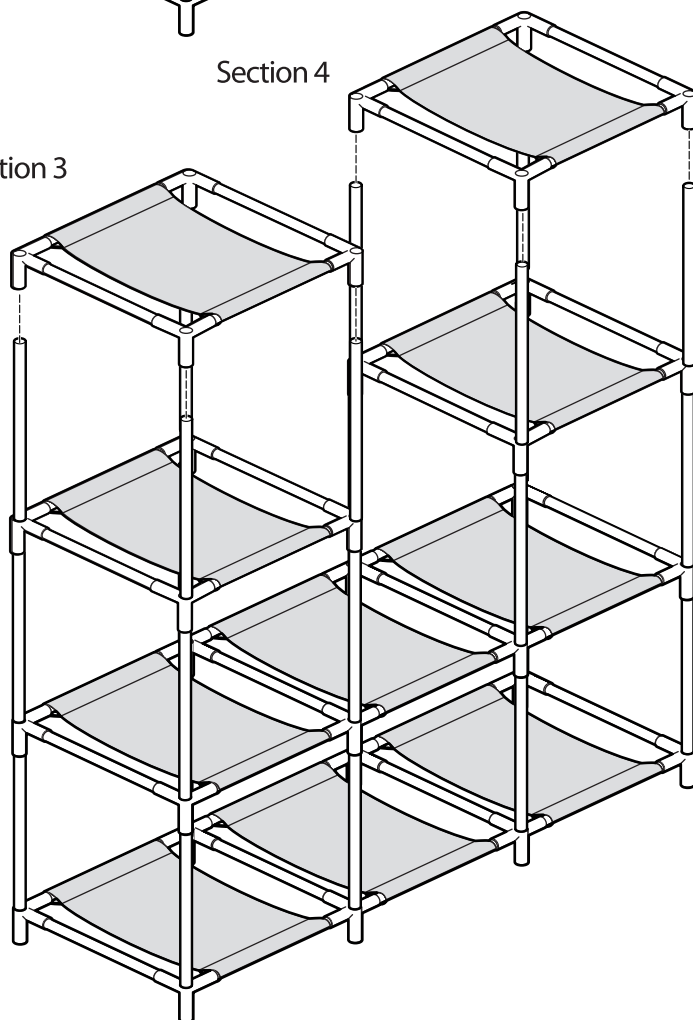


Assembly Instructions

Step 11

Push in 8 x 
Metal tubes into the
assembly as shown.


Assembly so far

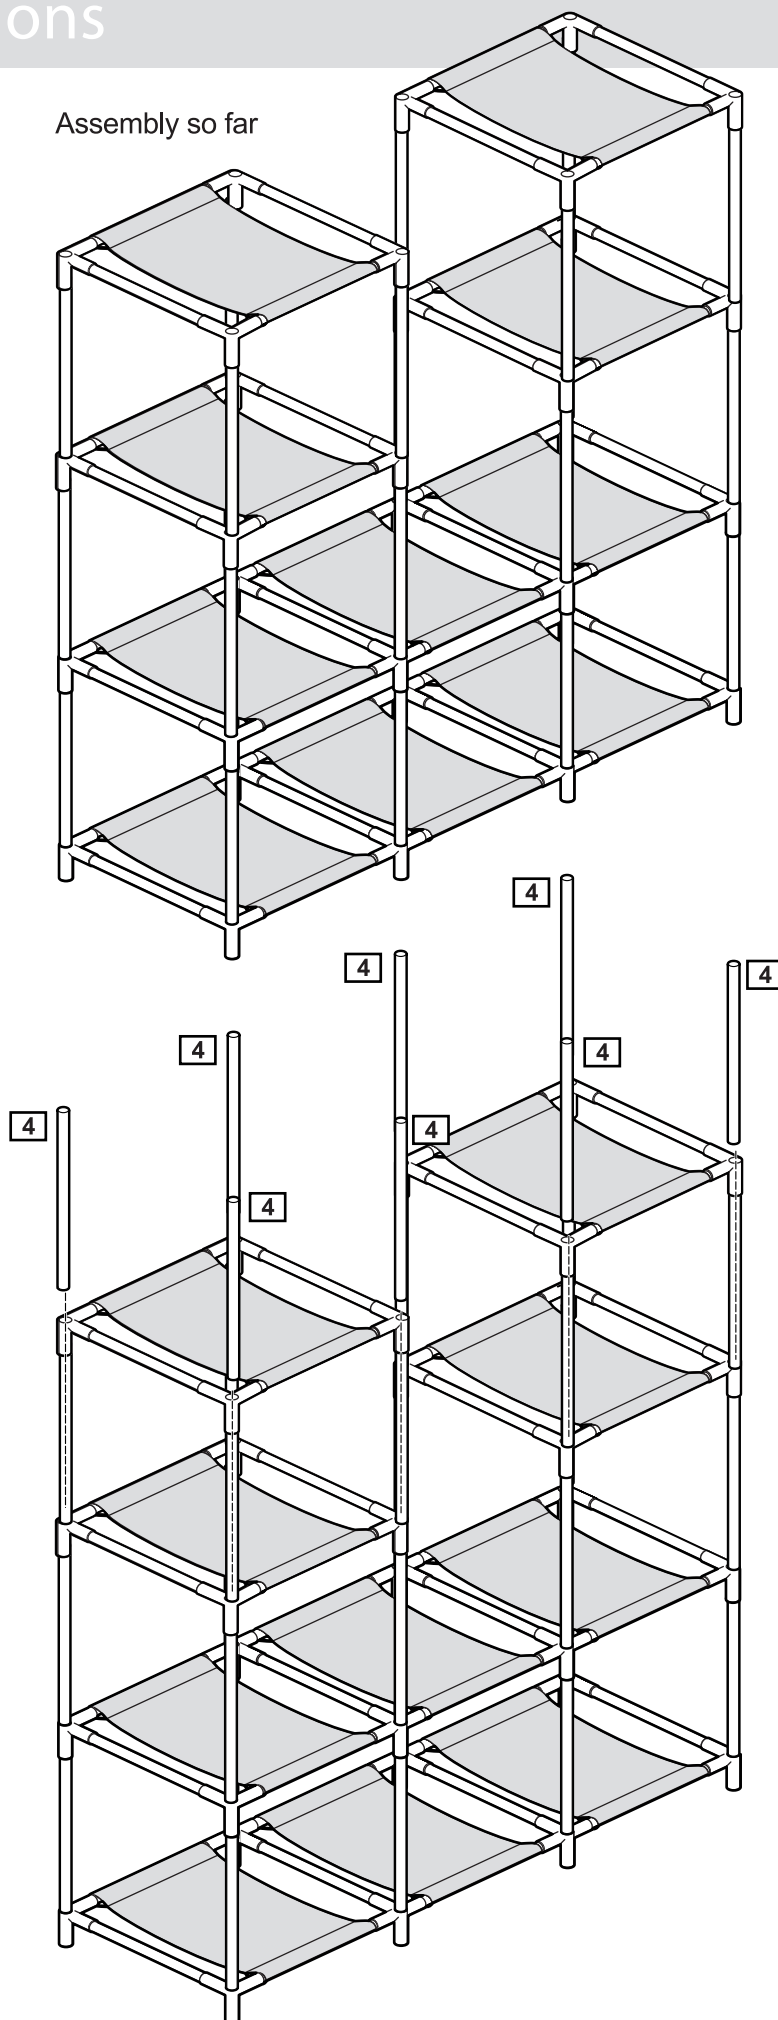

Assembly Instructions

Step 12

Using 4x **1** Corner joints
4x **2** Middle joints
10x **4** Metal tubes
push all components together
and add to top of assembly
as shown.

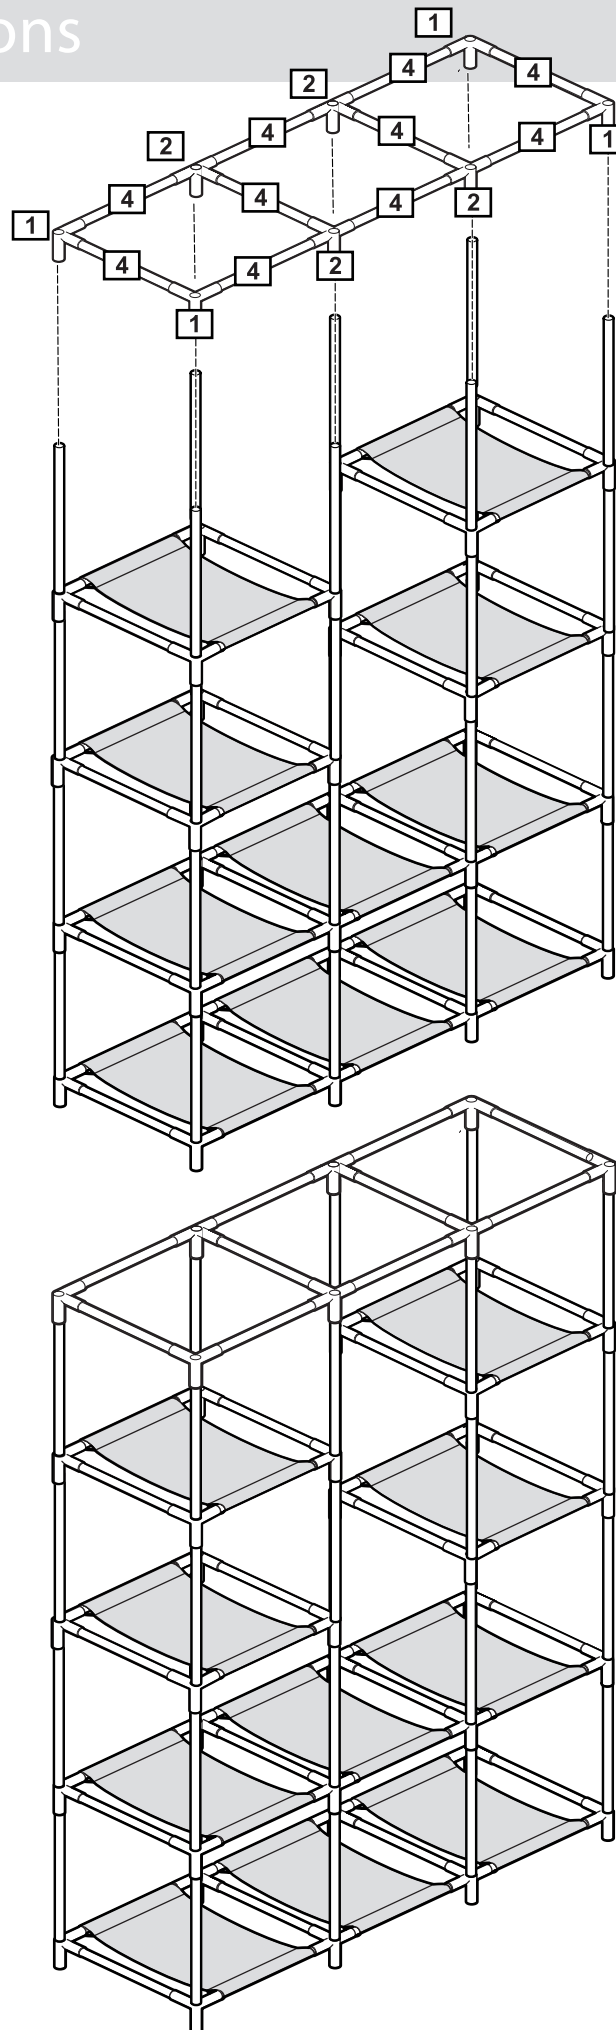


Assembly Instructions

Step 13

Using 1x **6** Clothes rail position as shown


Note: This assembly is adjustable using the components supplied and can be erected in different ways to meet storage needs.

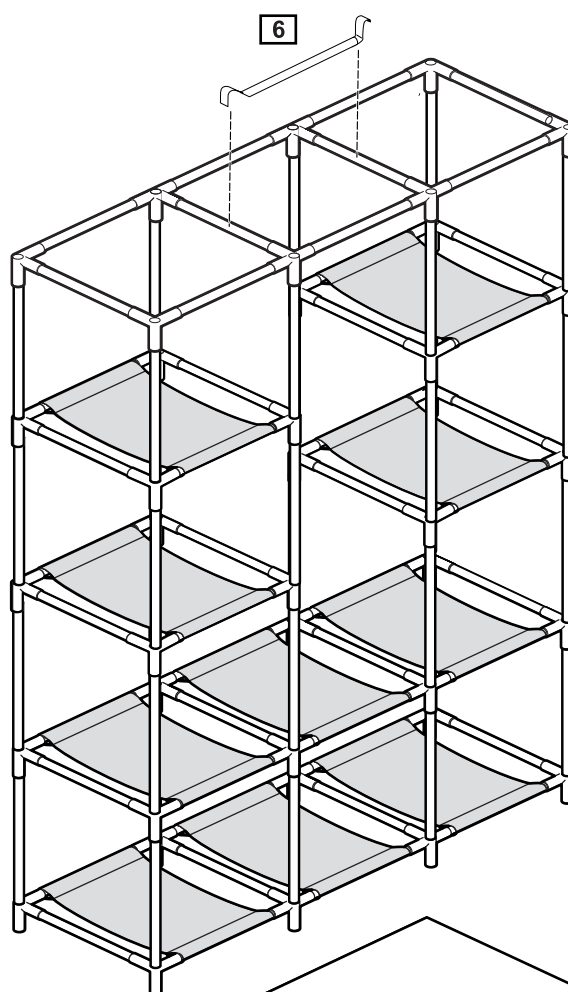

Step 14

Using 1x **7** Wardrobe cover, drape the cover over the assembly and pull it downwards as shown.

Note: Take care not to tear the fabric when covering the frame.

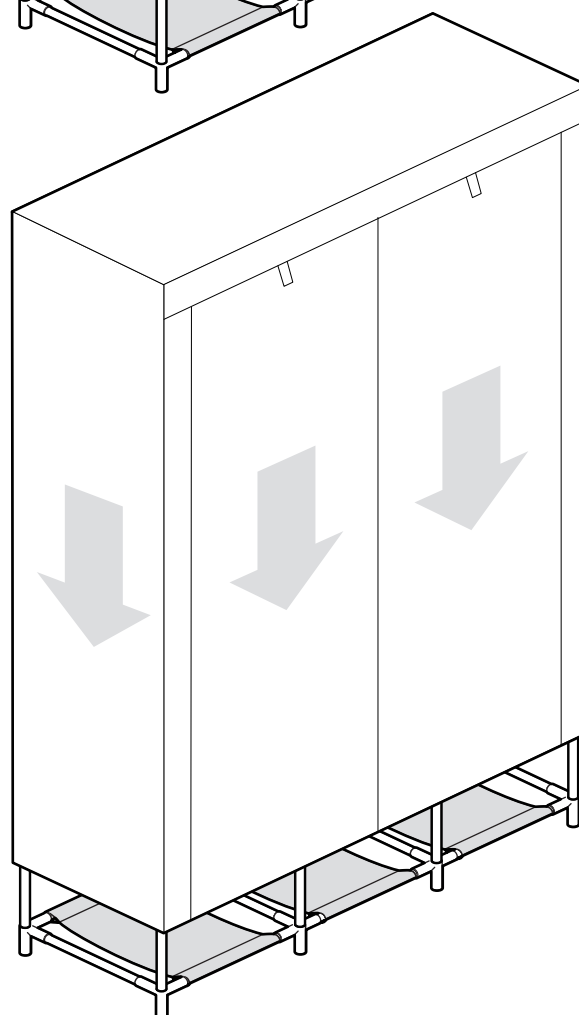

ASSEMBLY COMPLETE

LP 210.68.114