


# Triple Modular Metal Frame Wardrobe

Assembly Instructions - Please keep for future reference

9049691

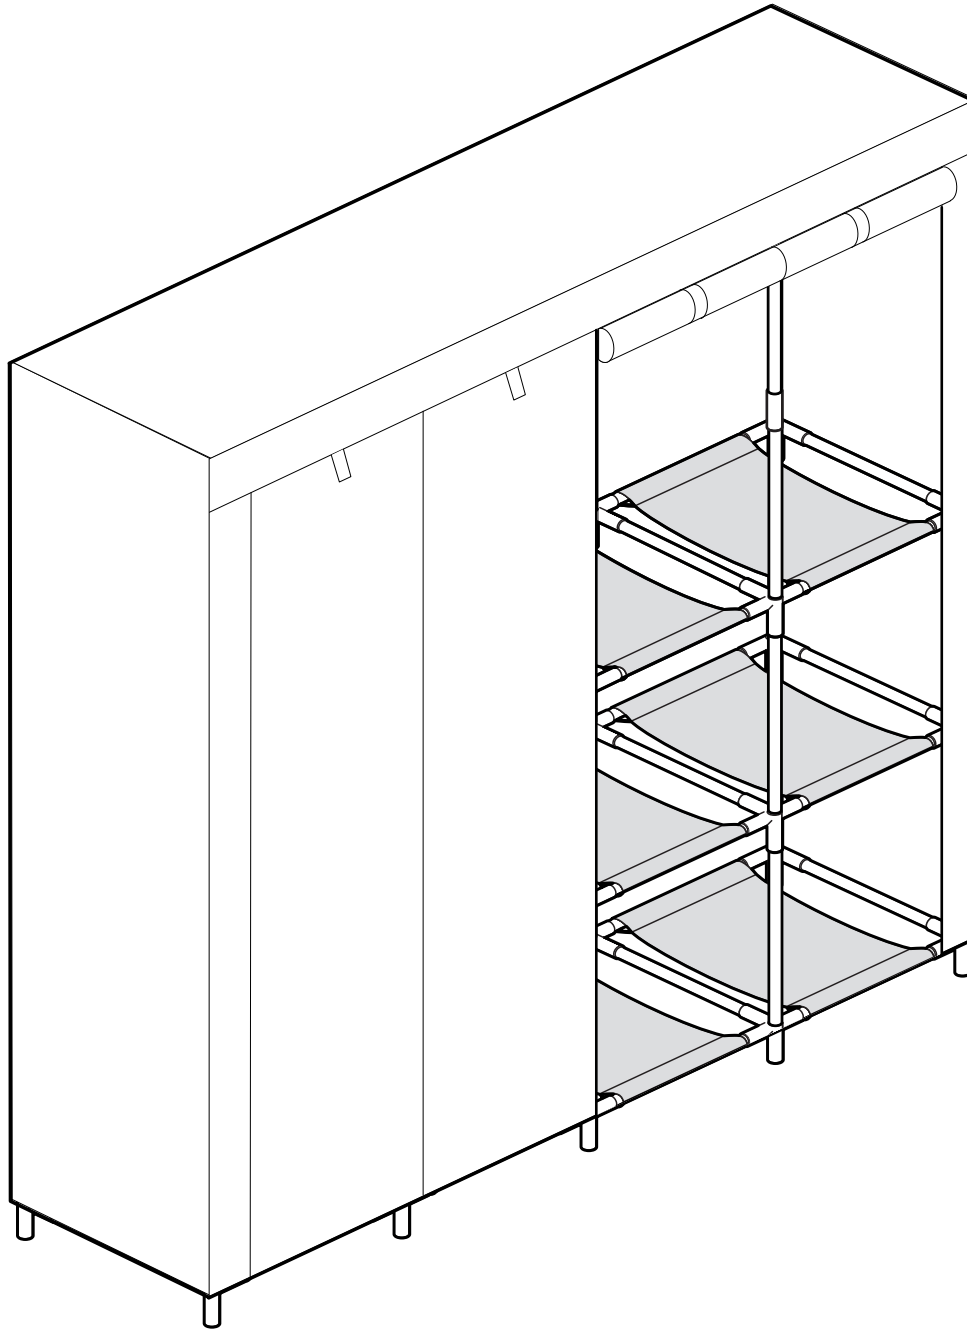

## Dimensions

Width - 174cm

Depth - 46cm

Height - 169cm

**Important – Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**



## Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on pages 1 and 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product as this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


# Components - Panels

If you have damaged or missing components,  
call the **Customer Helpline: 0845 640 0800**

Please check you have all the panels listed below




**1** Corner joint x 20




**2** Middle joint x 20




**3** Straight joint x 14

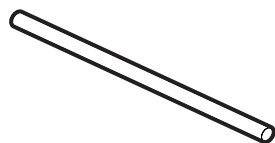


**4** Metal tube x 87

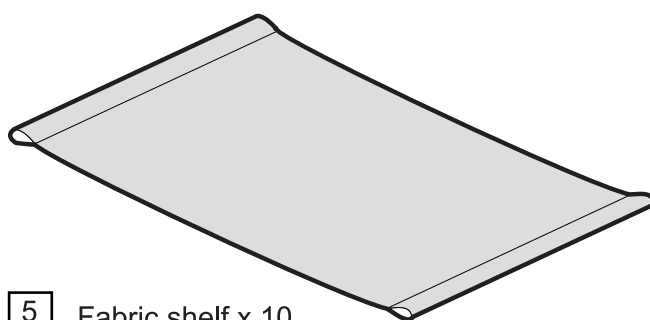

**5** Fabric shelf x 10

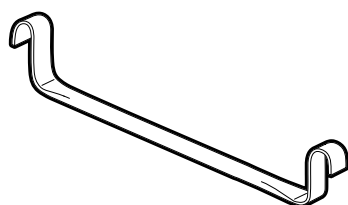

**6** Clothes rail x 6

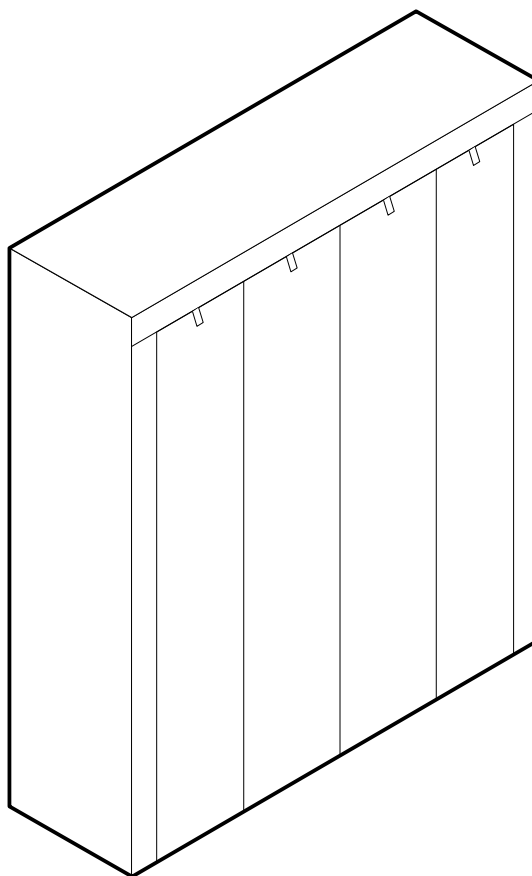


**7** Wardrobe cover x1

# Assembly Instructions


## Step 1

Push in 3x **4** Metal tubes into 2x **1** Corner joints as shown.

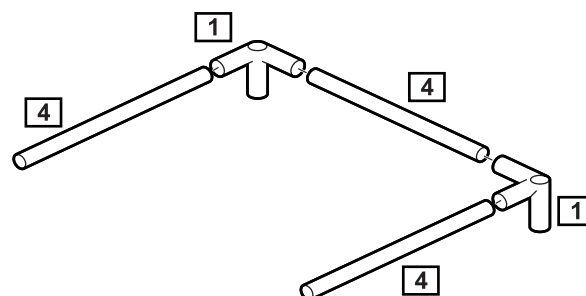


## Step 2

Slide on 1x **5** Fabric shelf as shown.

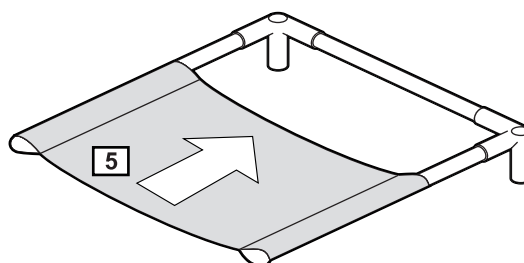

## Step 3


Using 2x **1** Corner joints, 6x **2** Middle joints and 6x **10** Metal tubes pushed through 3x **5** Fabric shelves, add on to the shelf section already constructed in **Step 1 & 2**

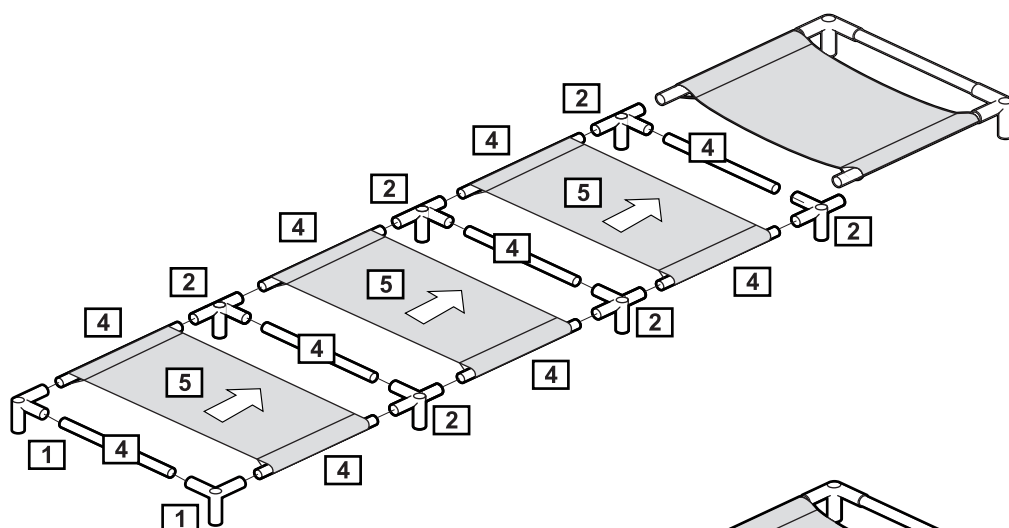


## Step 4

Repeat **Steps 1-3** so you have 2 complete identical shelf sections as shown.

section 1

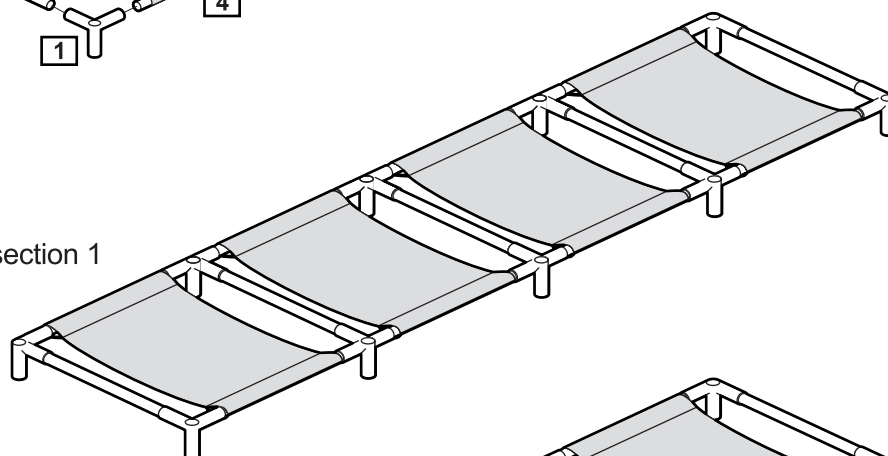


section 2

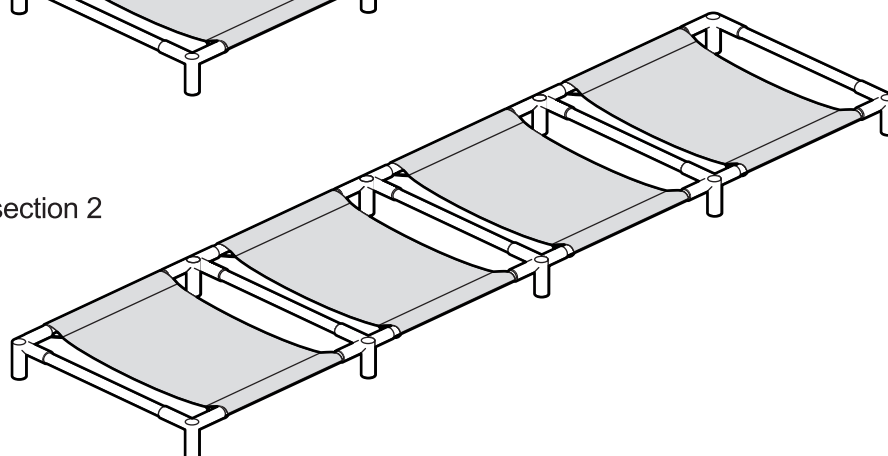

# Assembly Instructions


## Step 5

Taking the two sections already completed connect using 10x **4** Metal tubes.

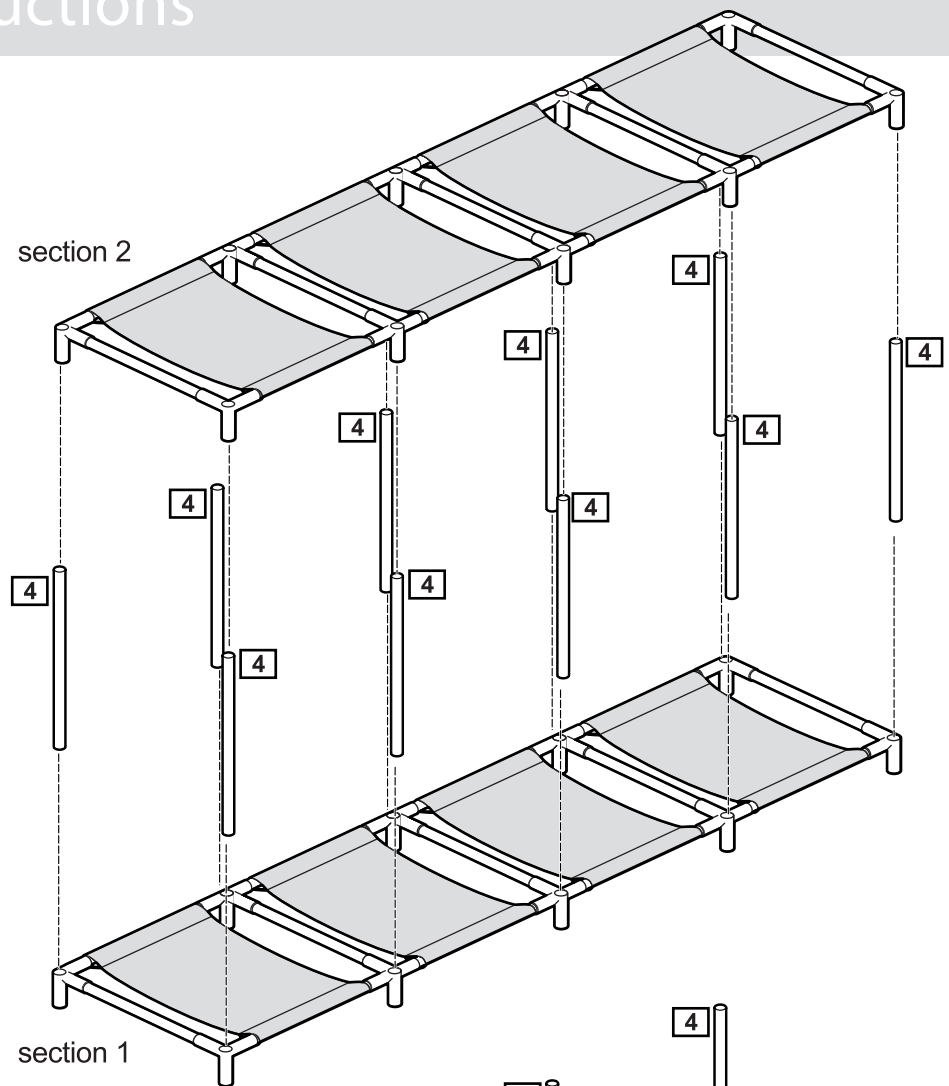

## Step 6

Push in 10 x **4** Metal tubes into the assembly as shown.


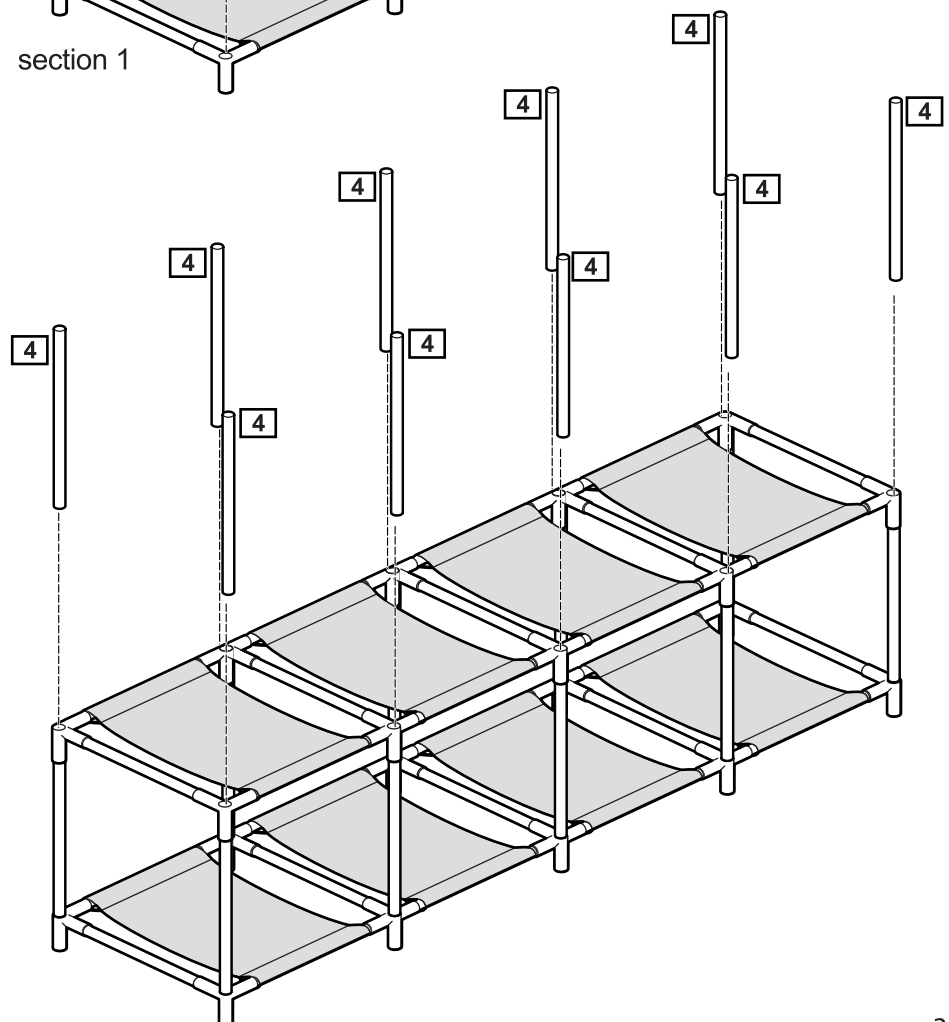


# Assembly Instructions


## Step 7

Leave the built assembly to one side.

Assembly so far

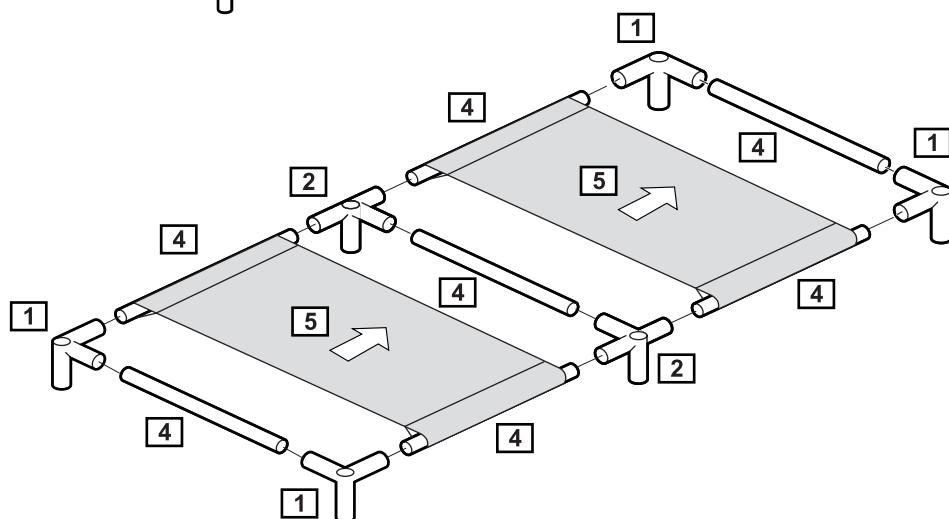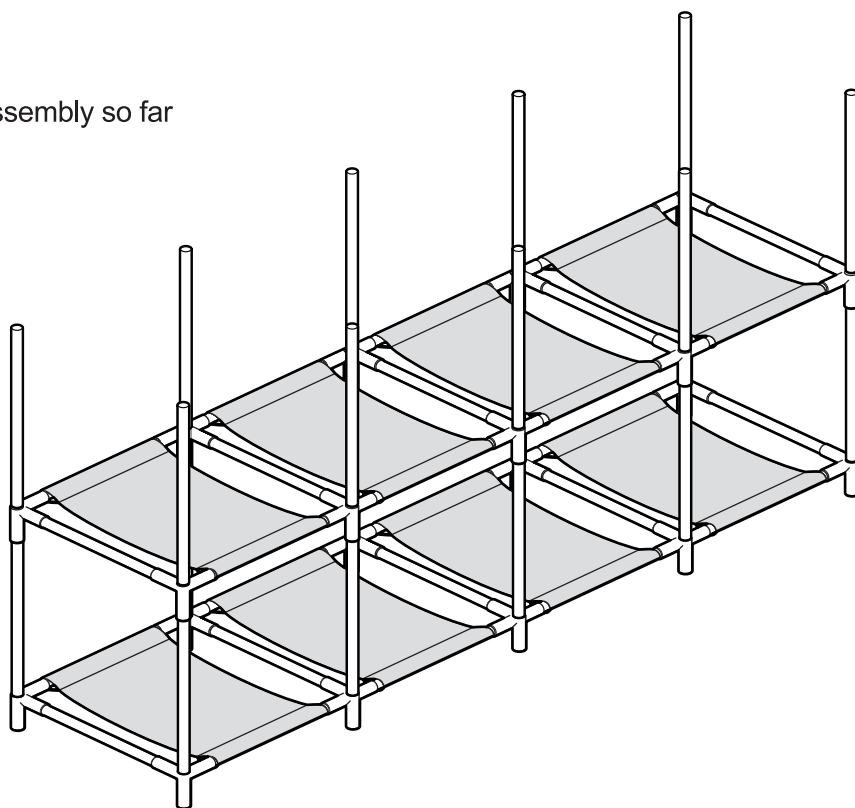


Using 4x **1** Corner joints  
2x **2** Middle joints and  
7x **4** Metal tubes pushed  
through 2x **5** Fabric shelves,  
push all components together  
as shown.

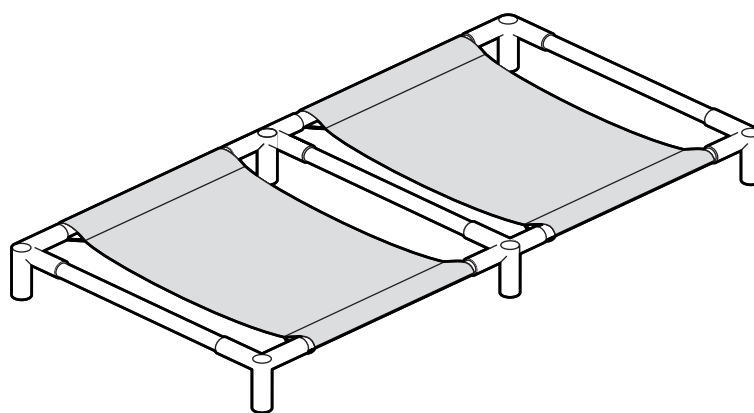


# Assembly Instructions

## Step 8

Push the new shelf section onto the assembly already built as shown.

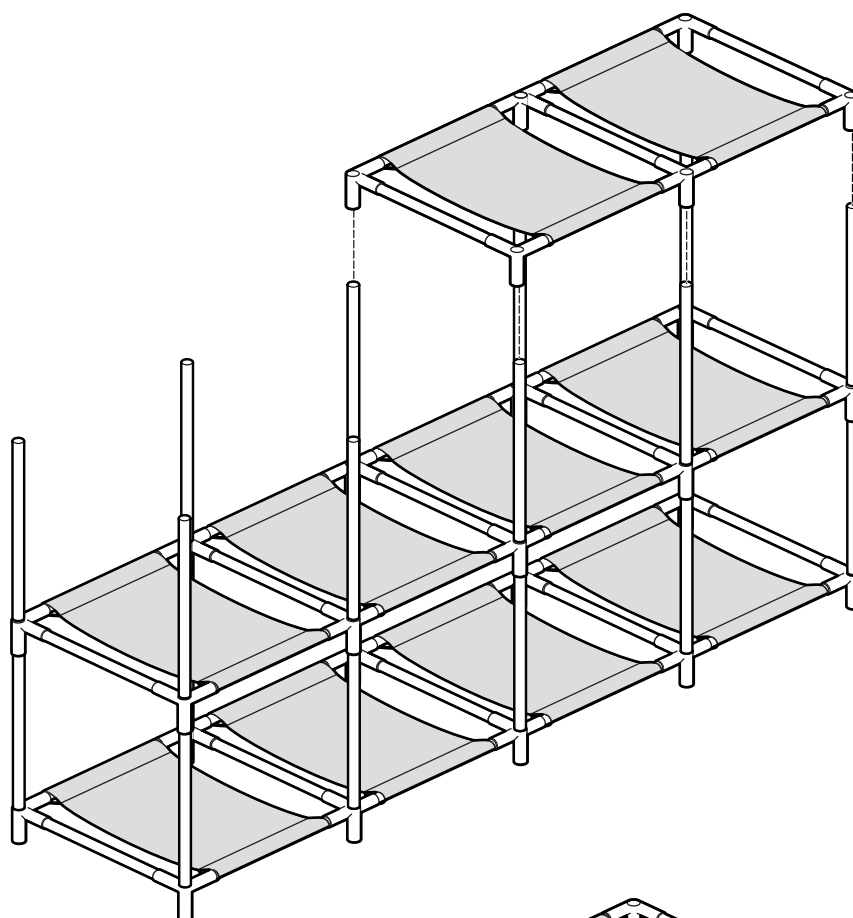


Assembly so far

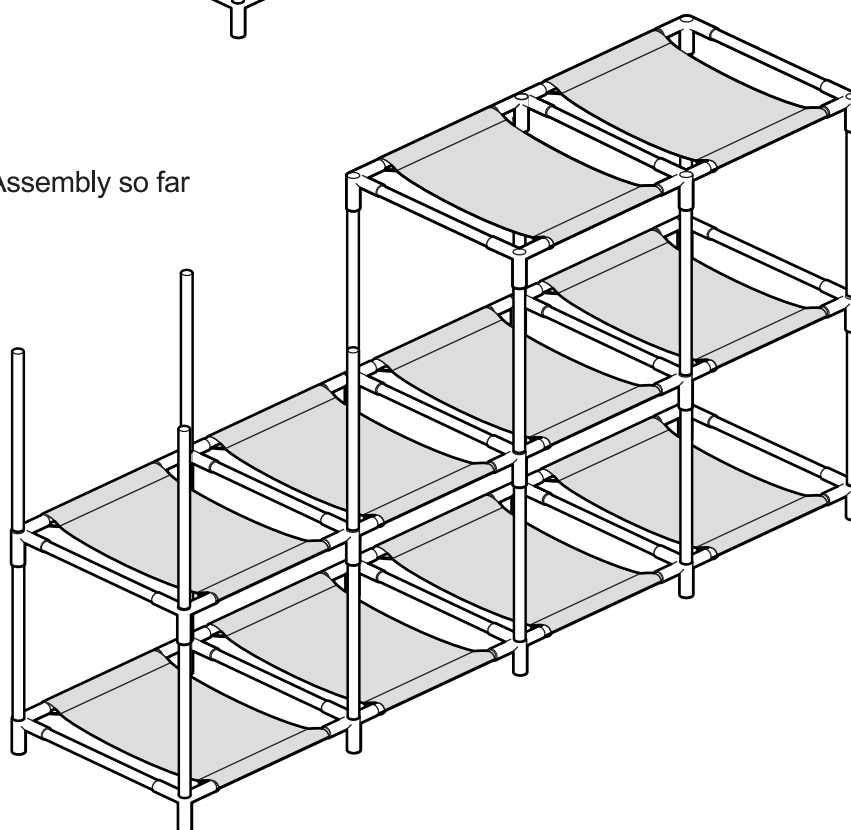


# Assembly Instructions

## Step 9

Using 4x **3** Straight joints  
10x **4** Metal tubes  
push all components together  
as shown.

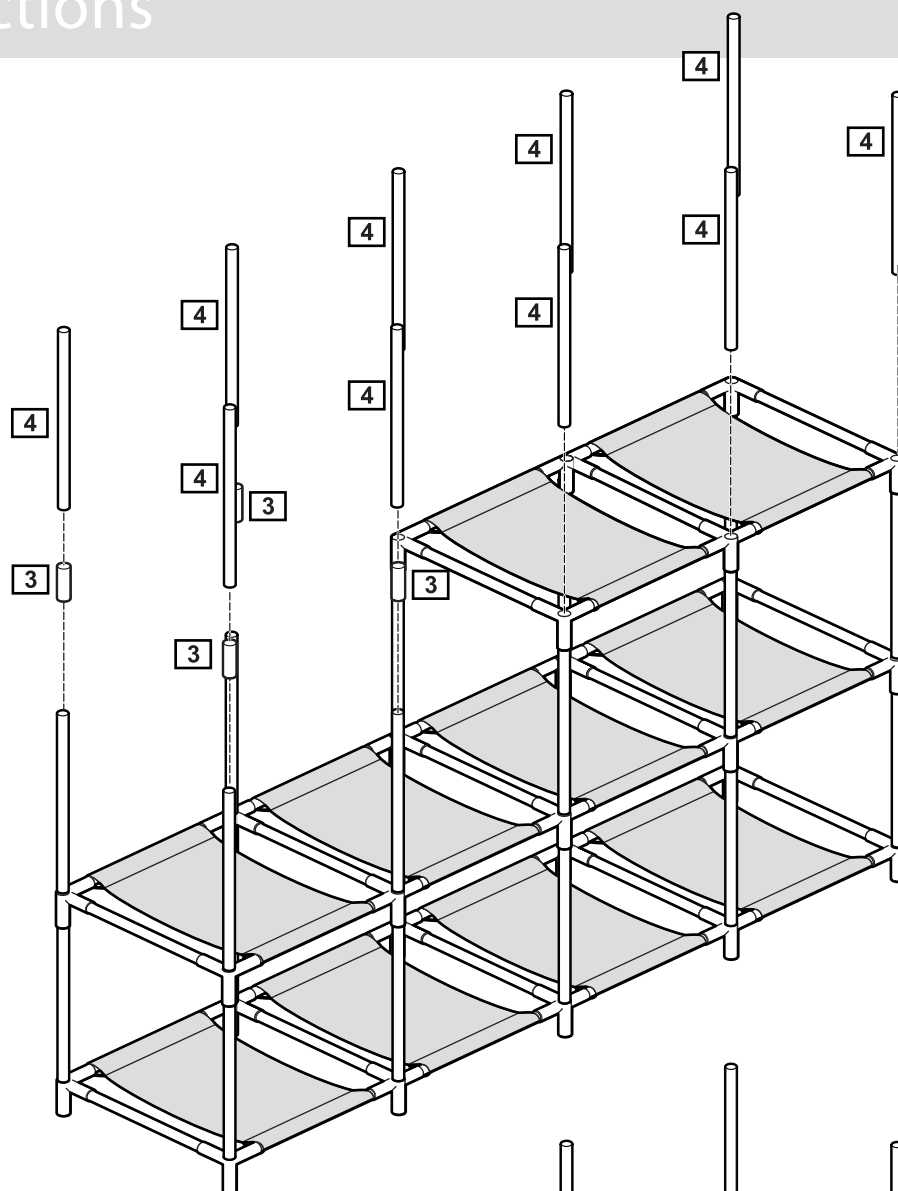

Assembly so far

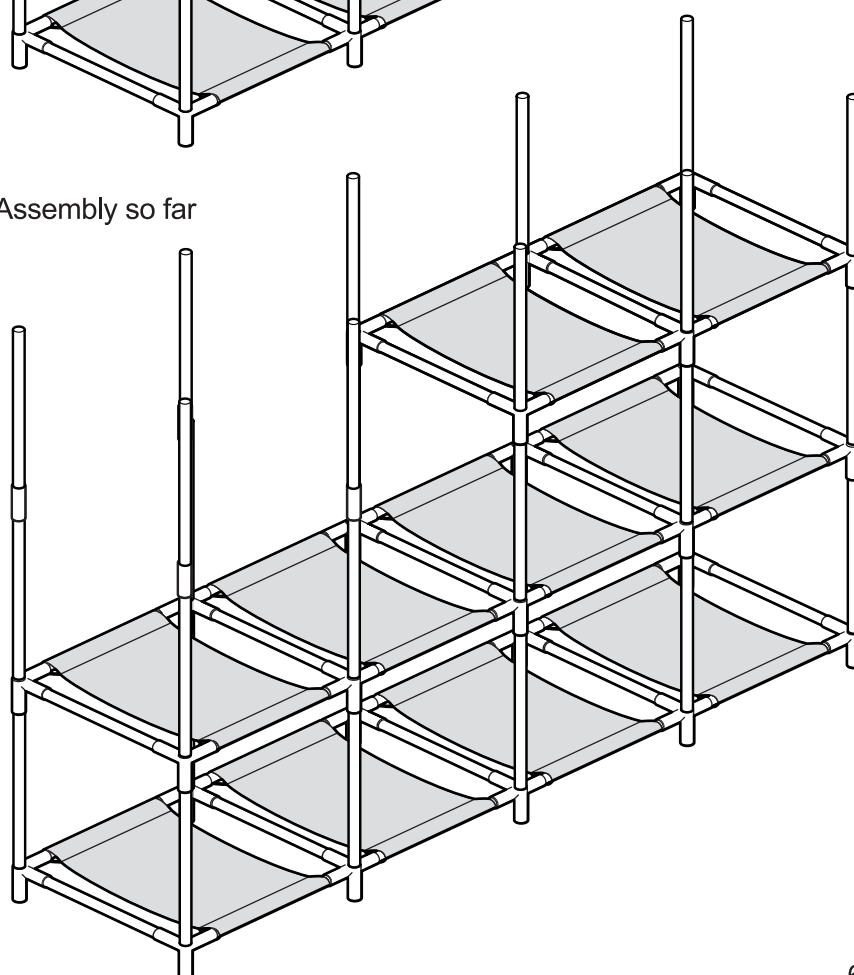





# Assembly Instructions

## Step 10

Using 10x **3** Straight joints  
10x **4** Metal tubes  
push all components together  
as shown.

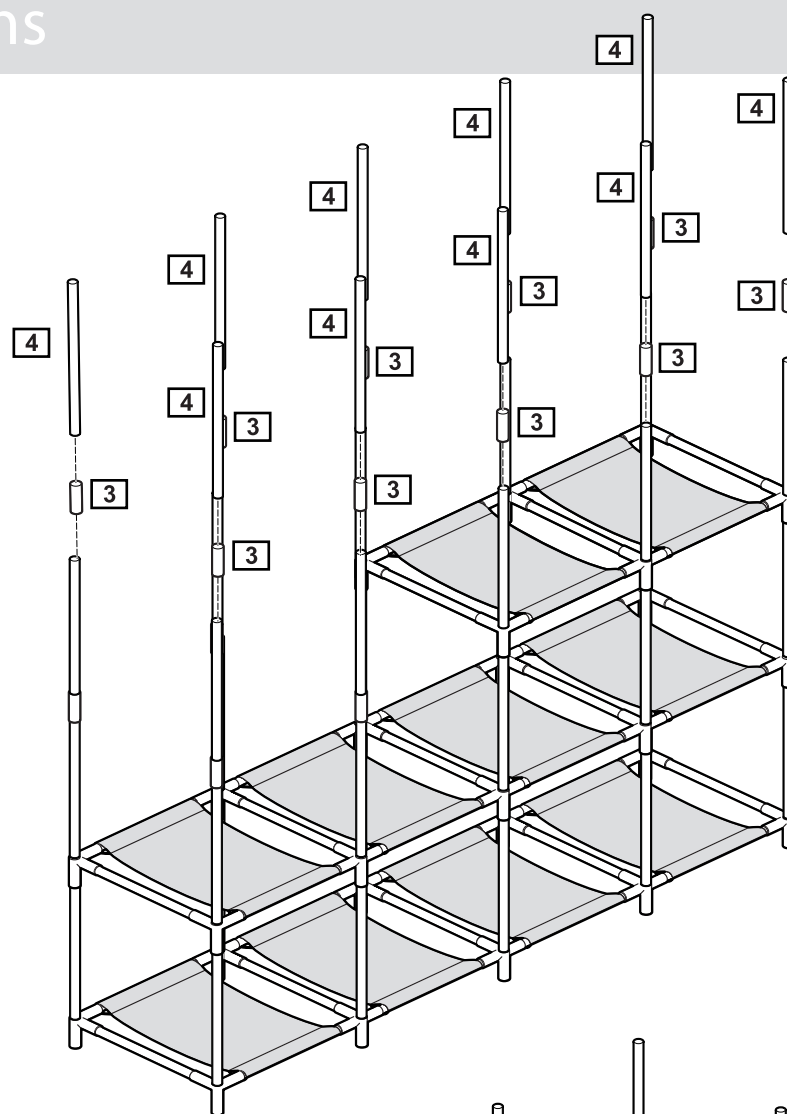


Assembly so far

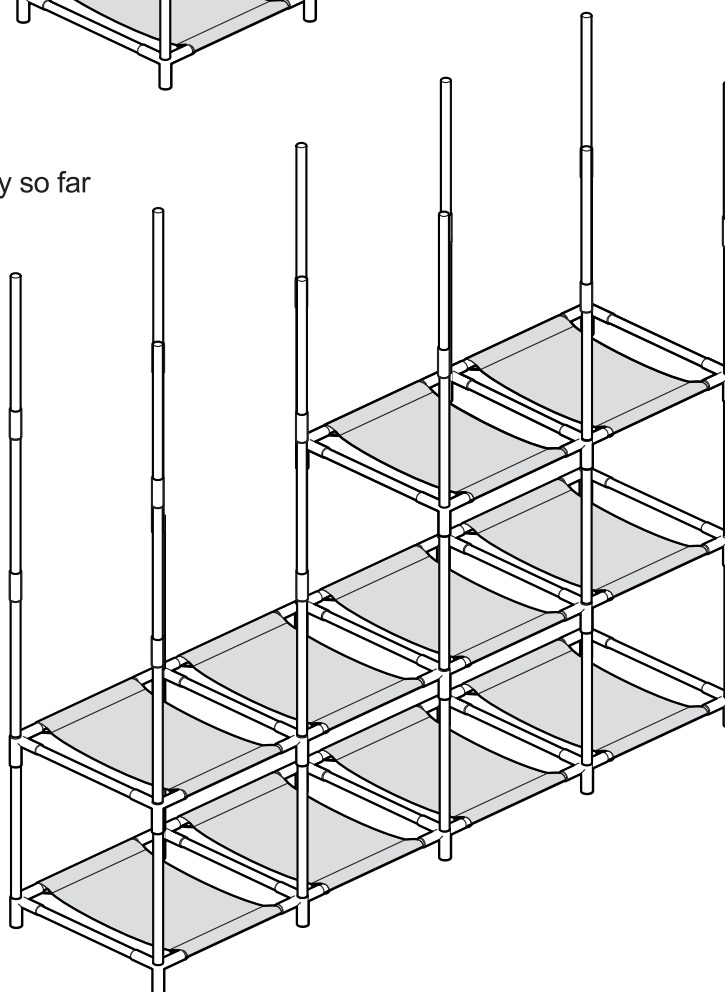

# Assembly Instructions

## Step 11

Using 4x **1** Corner joints  
6x **2** Middle joints  
13x **4** Metal tubes  
push all components together  
and add to top of assembly  
as shown.

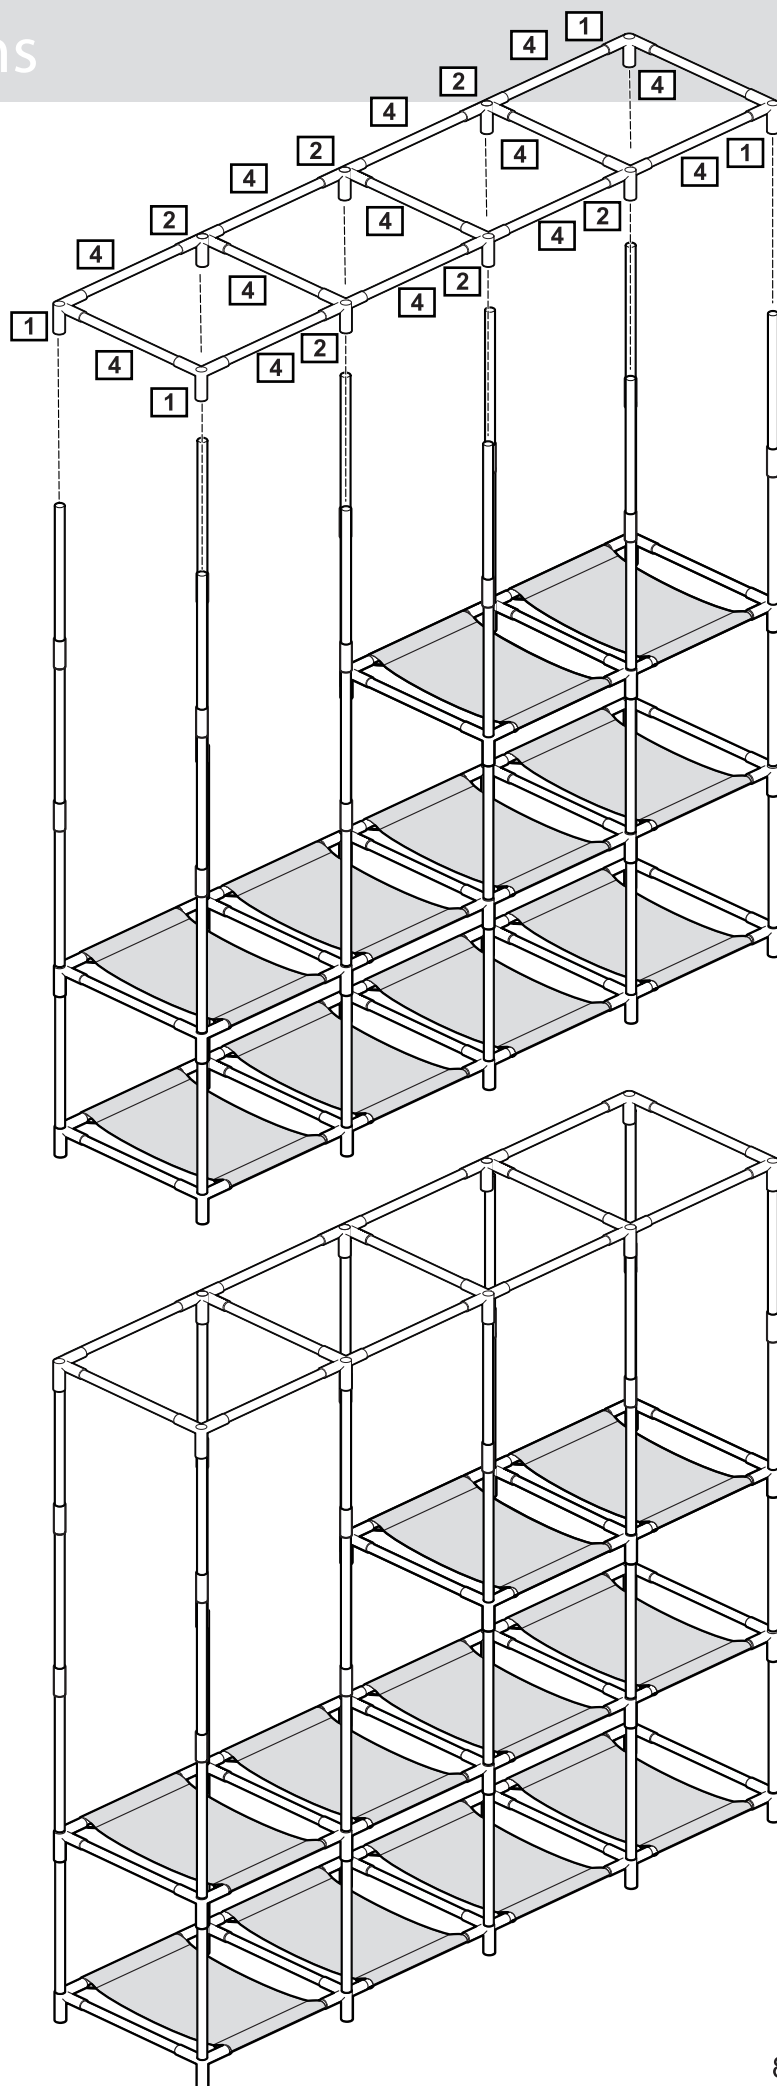


# Assembly Instructions

## Step 12

Using 4x **6** Clothes rail position as shown


**Note:** This assembly is adjustable using the components supplied and can be erected in different ways to meet storage needs.

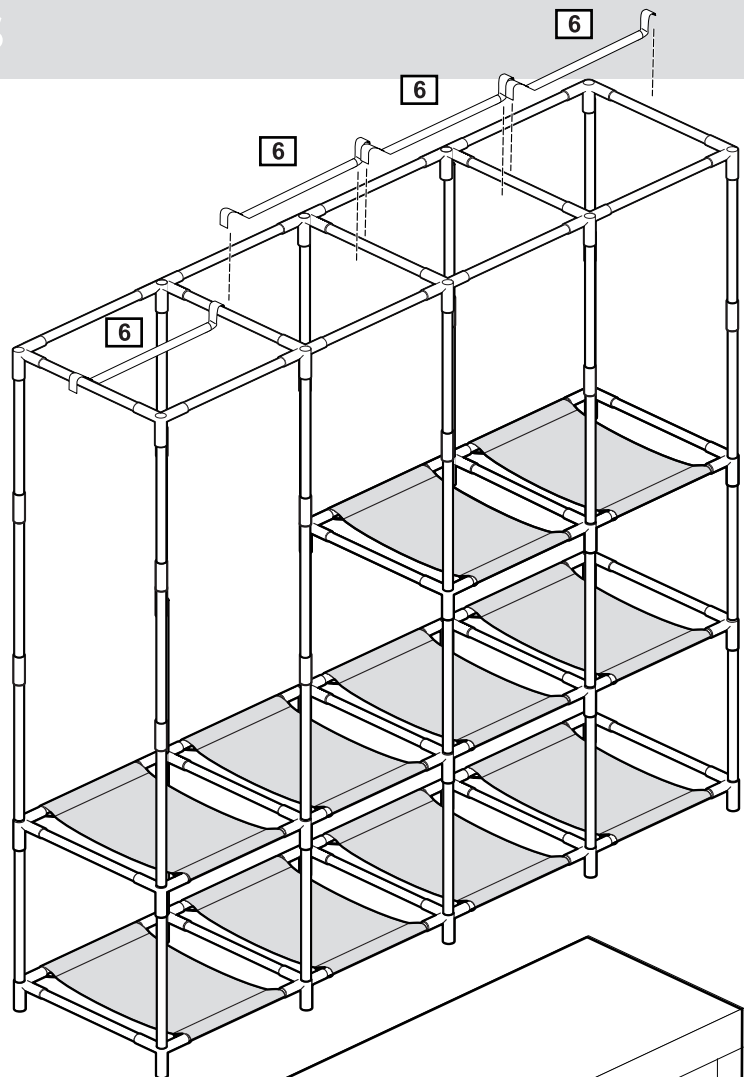

## Step 13

Using 1x **7** Wardrobe cover, drape the cover over the assembly and pull it downwards as shown.

**Note:** Take care not to tear the fabric when covering the frame.

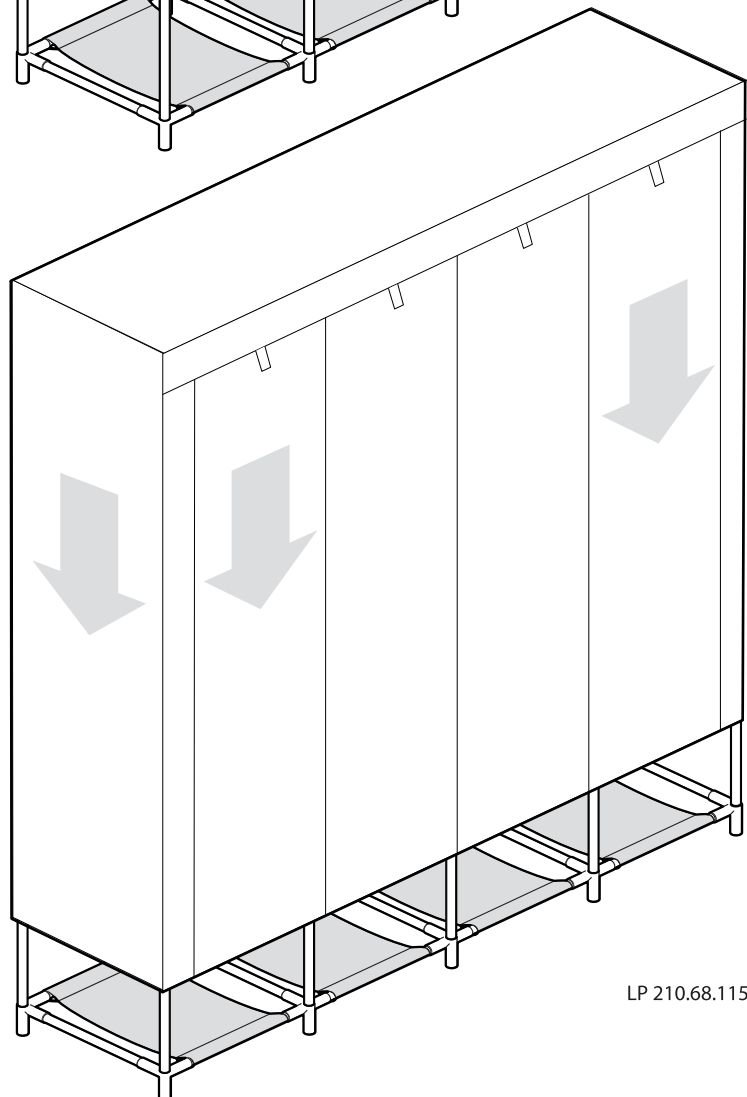

**ASSEMBLY COMPLETE**

LP 210.68.115