
Contemporary Shoe Cabinet

Assembly Instructions – Please keep for future reference

928/8902D

928/3907D

875/6071D

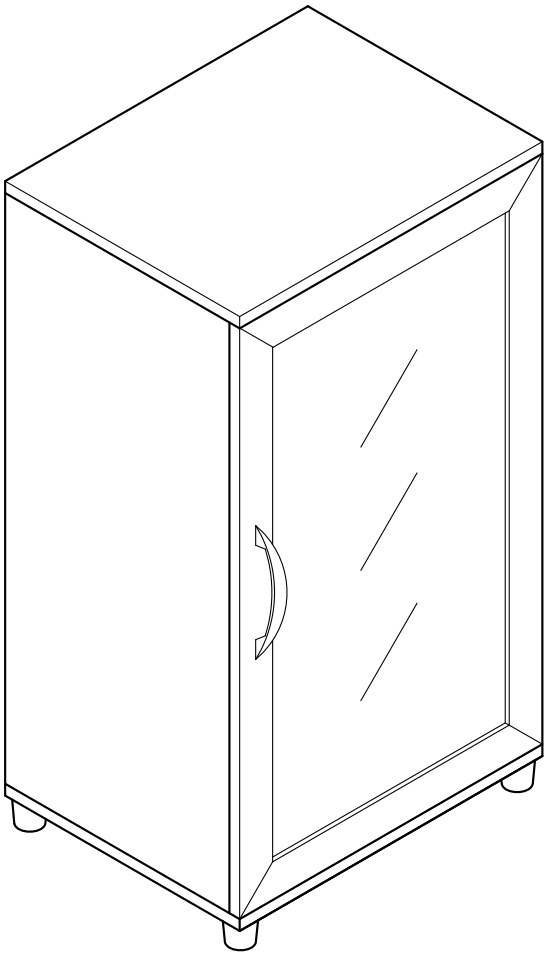

Dimensions

Width – 44.5 cm
Depth – 34.5 cm
Height – 81.5 cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 – 08/11/2010

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.


Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: if require the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below

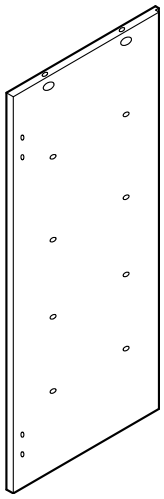


1 Left side panel
(750 x 327mm)

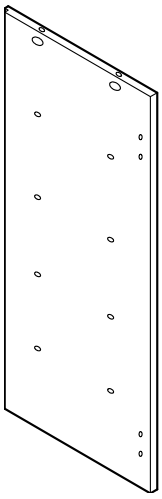


2 Right side panel
(750 x 327mm)

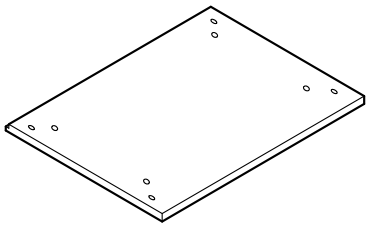


5 Base panel
(445 x 345mm)

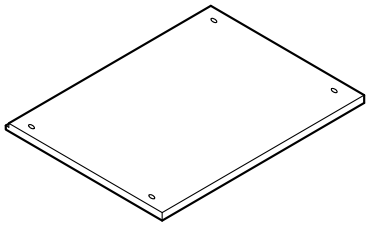


6 Top panel
(445 x 345mm)

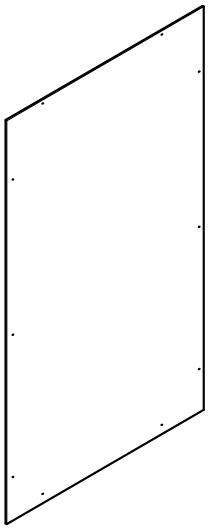

3 Back panel
(774 x 438mm)

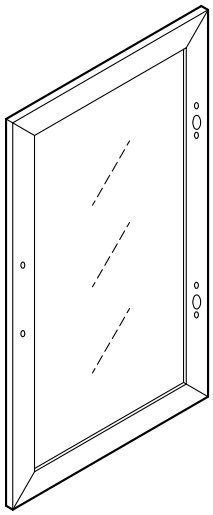

4 Door
(743 x 434mm)

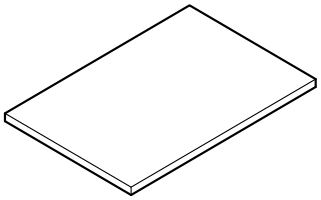









7 Shelf x 4
(411 x 281mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

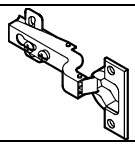
A  40mm Screw x 4	**B**  Metal bolt x 4	**C**  Metal cam x 4
D  Foot x 4	**E**  Φ2.5 x14mm Screw x 8	**F**  Hinge x 2
G  Φ4 x14mm Screw x 8	**H**  Handle x 1	**I**  Bolt x 2
J  Shelf bracket x 16	**K**  Webbing and screw x 2	

Tools required

 Philips screwdriver

 Flatblade screwdriver

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Attaching Base Panel


Place the Side Panels [1] & [2] on a flat surface, as shown.

Screw Base Panel [5] onto the ends of Side Panel [1] & [2], using 4 Screws Ⓐ.

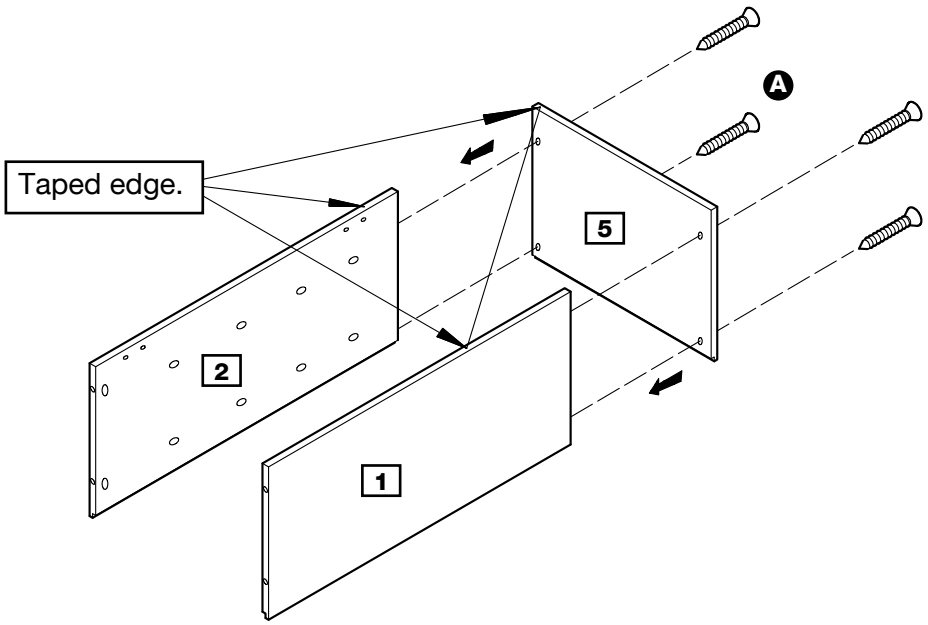


Step 2

Screw 4 Metal Dowels Ⓑ into Top Panel [6], as shown.

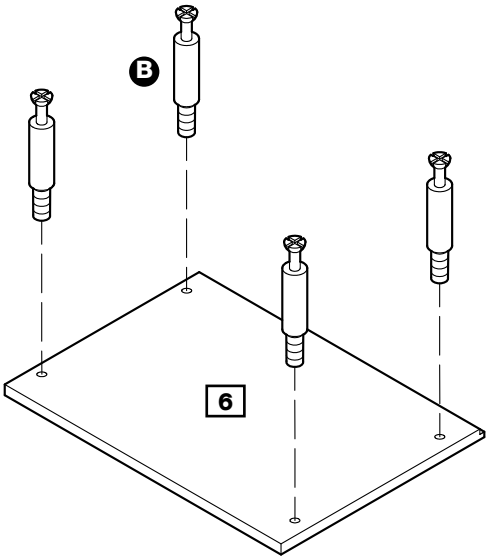

Step 3

Firmly push the Top Panel [6] onto the ends of Side panels [1] and [2].

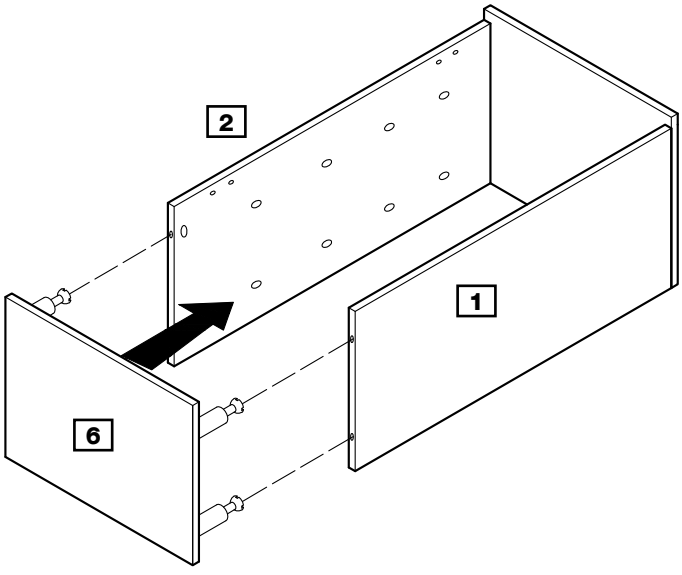


Step 4

Insert the 4 Metal Cams Ⓒ into the 4 holes on Side Panels [1] & [2] so that they are flush.


Note: Longer leg of the cross on the Metal Cams must face towards end of panel (as shown).

Then, using a Philips Screwdriver, screw all 4 Metal Cams Ⓒ clockwise until they are 'hand tight'.

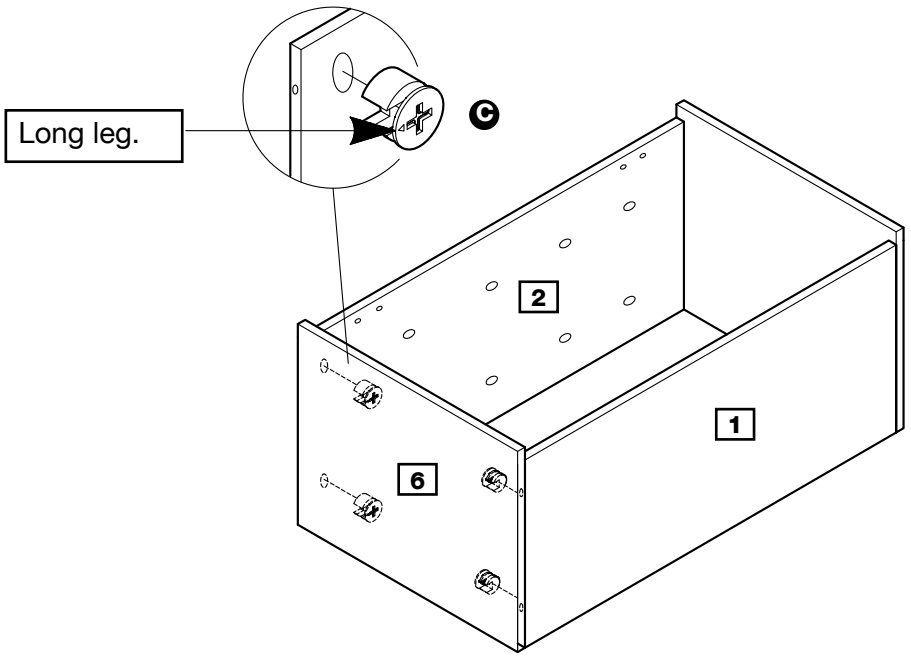

Step 5


Firmly push the 4 Feet Ⓓ to the underside of Base Panel [5].

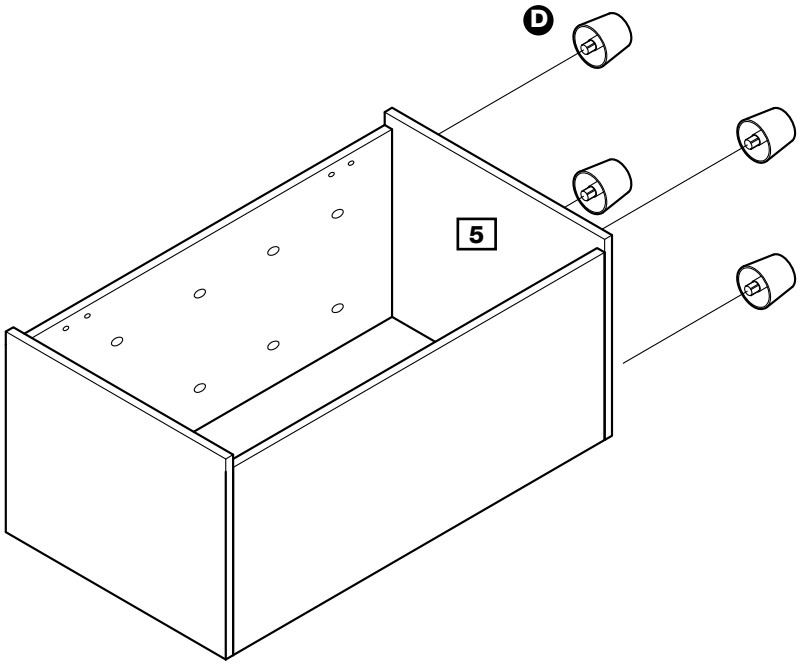

Step 6

Turn the Cabinet so that it is now upright and the back is facing you.


Screw the Back Panel 3 into the recess on the rear edges of Panels 1, 2 & 5 using 8 Screws E.

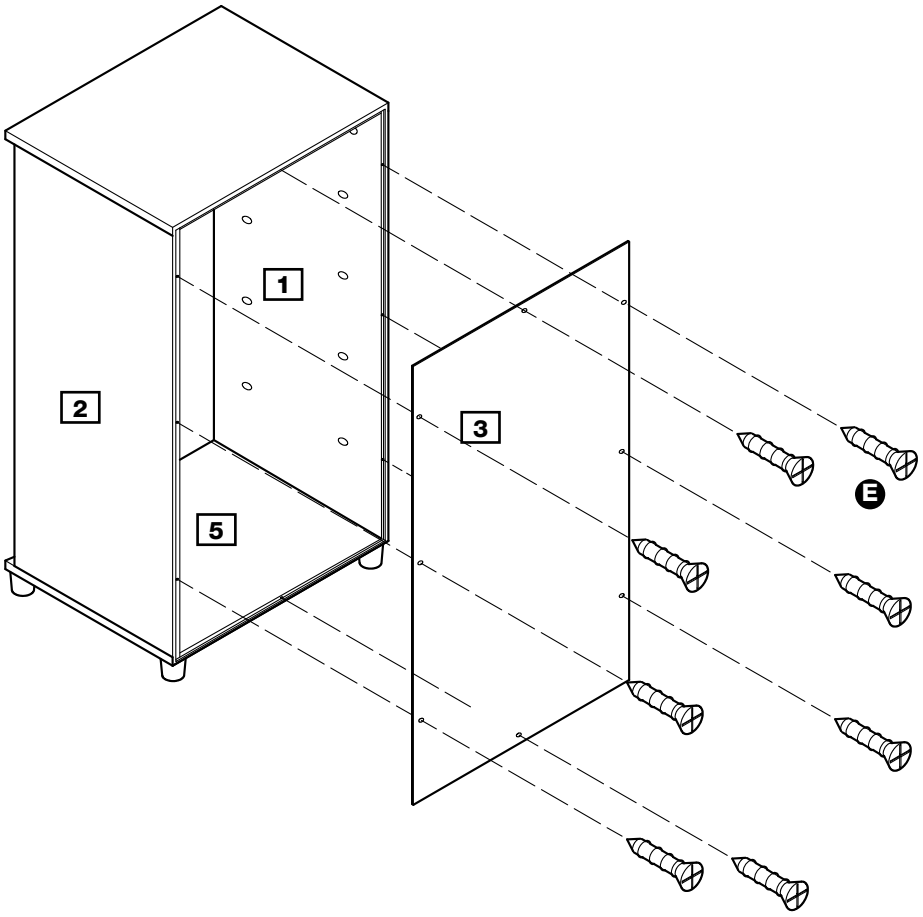

Step 7

Push the 2 Door Hinges F into the holes on the side of the Door Panel 4 as shown.

Screw the 2 Door Hinges F onto the Door Panel 4, using 4 Screws G.

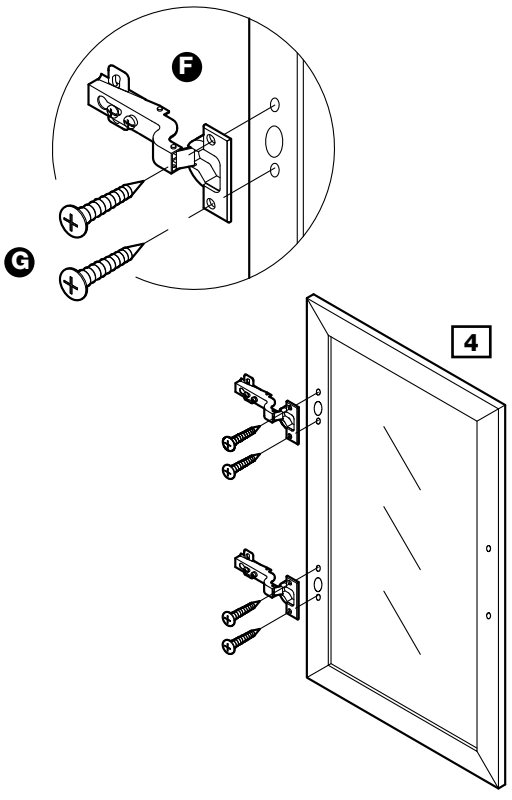


Step 8

Attach the Door Panel [4] to either the left or right Side Panels [1] or [2], as follows:


Note: In these instructions we are attaching the Door Panel [4] to Side Panel [2].

Screw the 2 Door Hinges Ⓕ (which is now attached to the Door Panel) onto Side Panel [2], using 4 Screws Ⓖ.

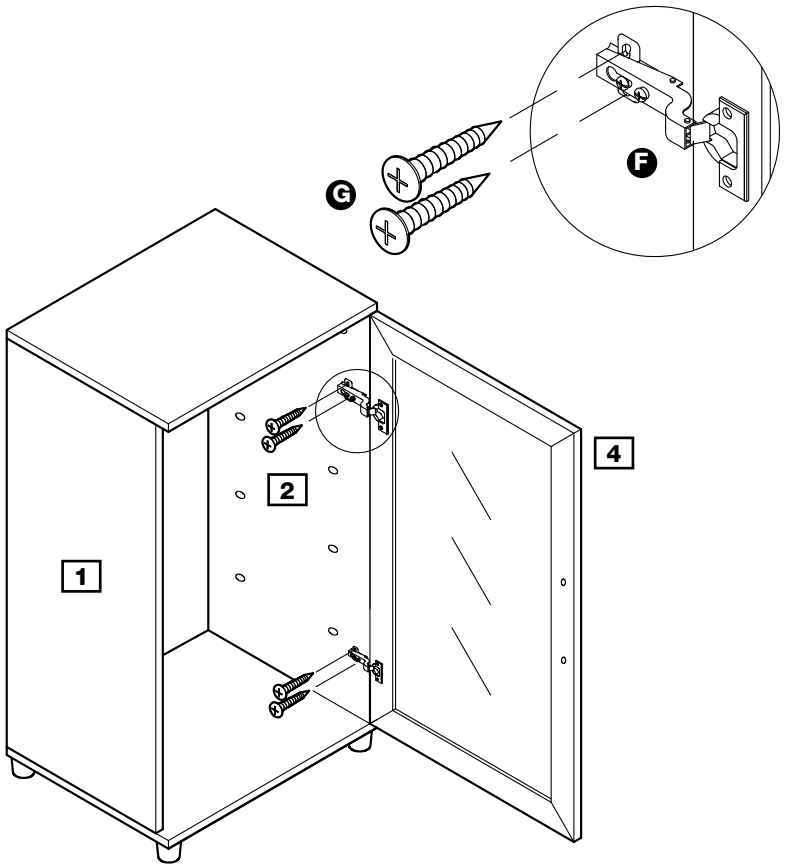

Step 9


Screw the Door Handle Ⓗ to the Door Panel [4], using 2 Bolts Ⓘ.

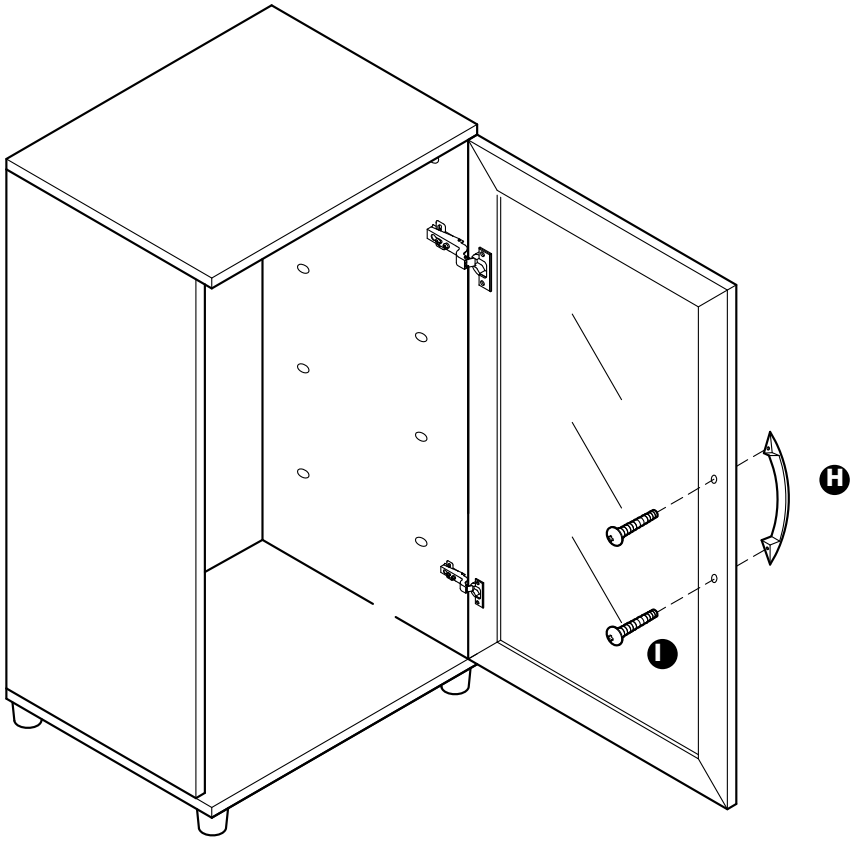

Step 10


Push 8 Shelf Brackets **J** into Side Panel **1**.

Push 8 Shelf Brackets **J** into Side Panel **2**.

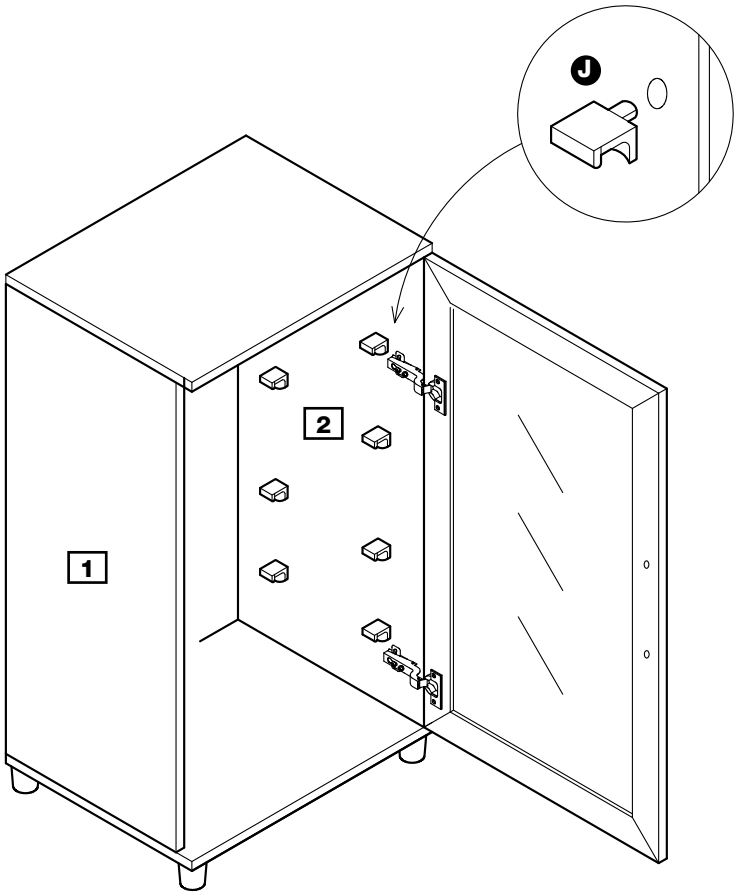

Step 11

Slide the 4 Shelf Panels **7** onto the Shelf Brackets **J**.

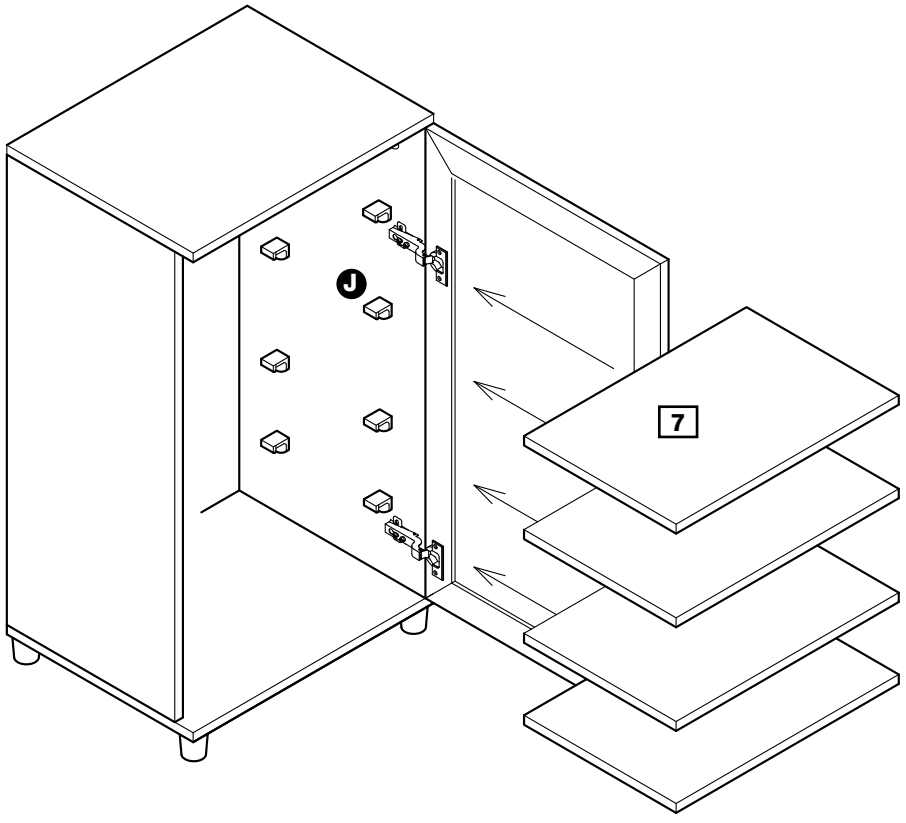

Step 12

Note: This Step is for securing the Cabinet to a wall and should only be attempted by experienced persons.


You will Need the Following:

- Another person to assist you
- Electric Drill (& Drill Bits)
- Screwdriver

Fixings Supplied:

- 2 Webbings
- 2 Small Wood Screws
- 2 Large Wall Screws
- 2 Wall Plugs

Note: The fixings described are for use with solid masonry walls only. Alternative fixings should be purchased if you have a different wall construction.

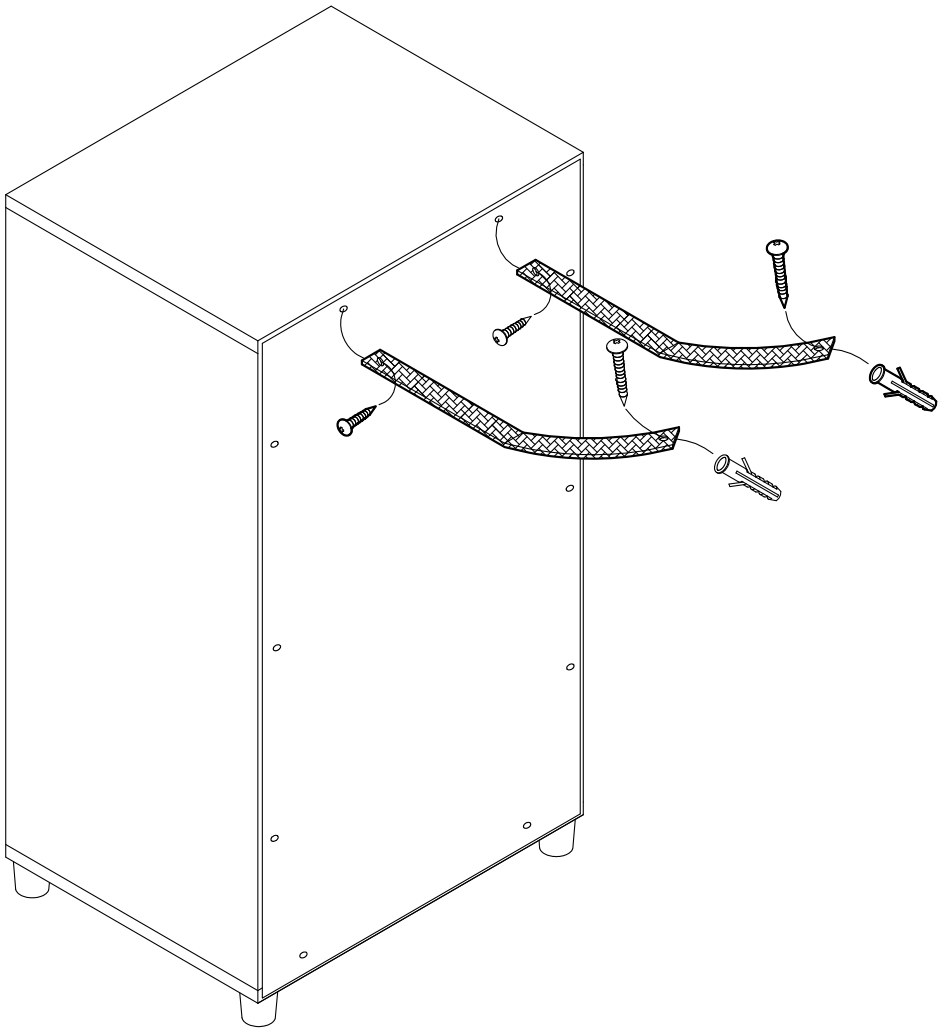

Assembly is complete.