


# Arlo 3 Drawer Wardrobe White-Pine

Assembly Instructions - Please keep for future reference

8791335

HOME

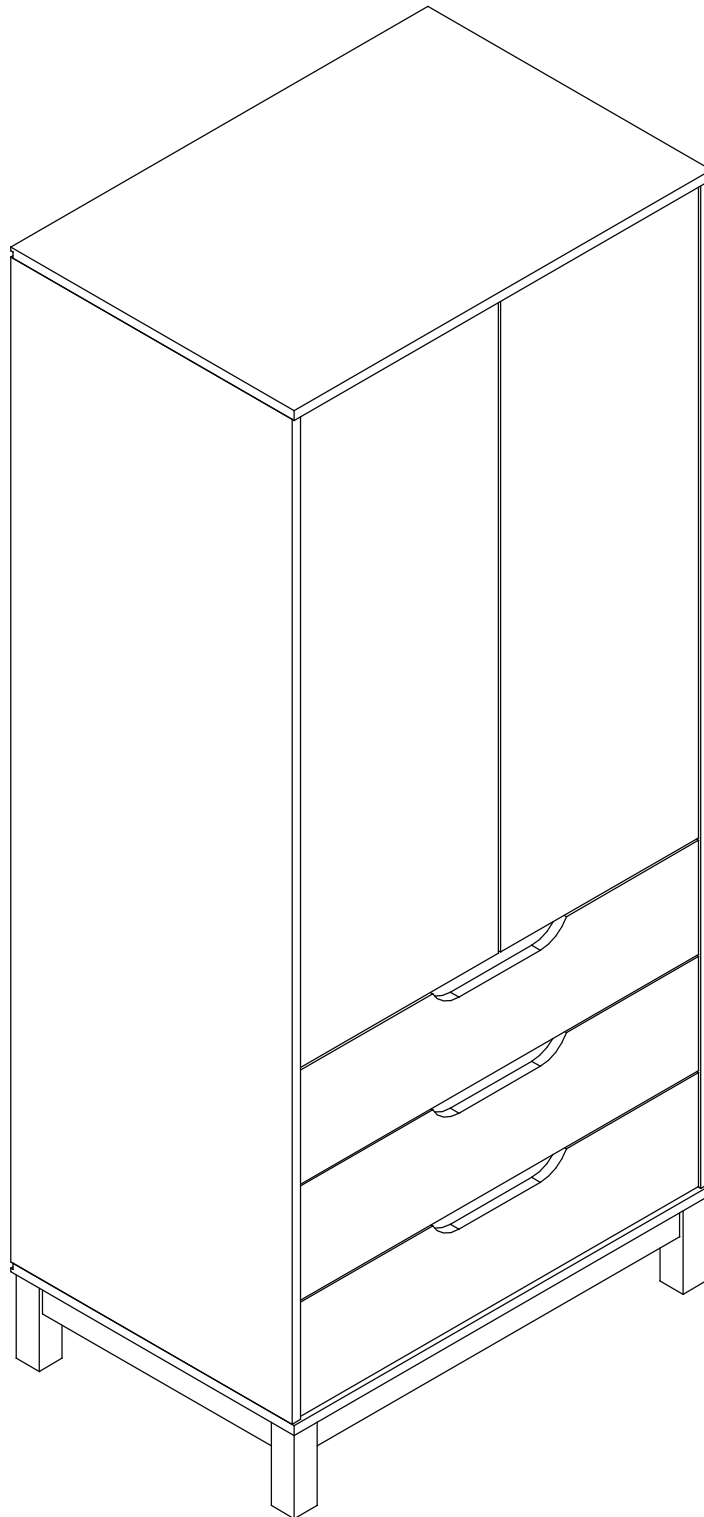

## Dimensions

Length - 78cm

Depth - 53cm

Height - 180cm

Weight - 67kg

**Important – Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the **Customer Helpline:**

**0045 7668 8055** or e-mail: [order@flexa.dk](mailto:order@flexa.dk)

# Safety and Care Advice

## Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2, 3 and 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- During assembly children should be kept away from the product due to possible risk of injury.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Do not use this item if any components are missing or damaged



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Assembly to be carried out by a competent adult only.


## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Regularly check all fastenings to ensure that they properly tightened.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.
- This product is suitable for children in the age 4-12 years. Maximum load in each drawer 7 kg.


# Components - Parts

If you have damaged or missing components,  
call the **Customer Helpline: 0045 7668 8055**


Please check you have all the parts listed below

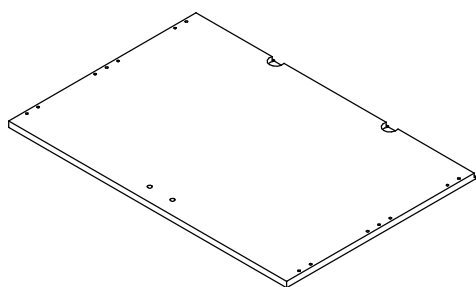


**1** Top x1  
(78.0x53.0x1.6cm)  
No. 4301-1607803-40

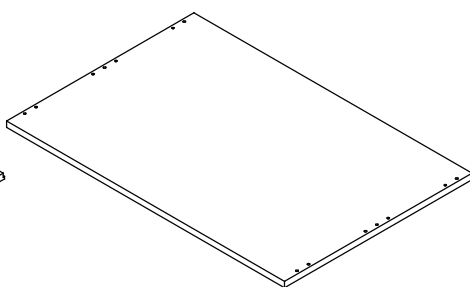


**2** Base x1  
(78.0x53.0x1.6cm)  
No. 4301-1607804-40

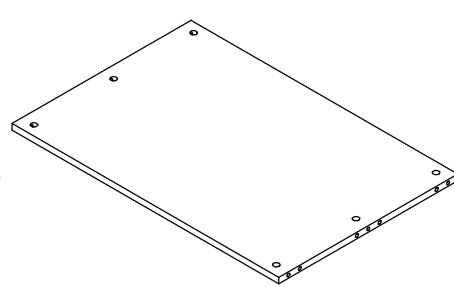


**3** Shelf x2  
(74.8x50.2x1.6cm)  
No. 4301-1607486-40

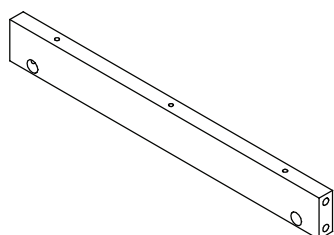


**4** Plinth side x2  
(43.4x5.0x1.9cm)  
No. 12-01904341

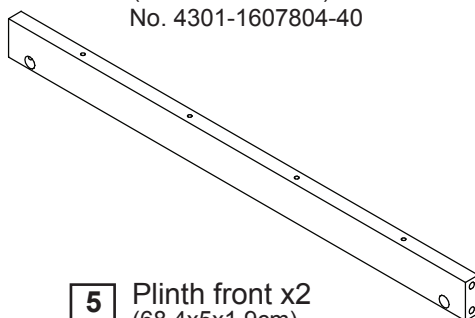


**5** Plinth front x2  
(68.4x5x1.9cm)  
No. 12-01906841




**6** Leg x4  
(14x4.3x4.3cm)  
No. 12-04301401

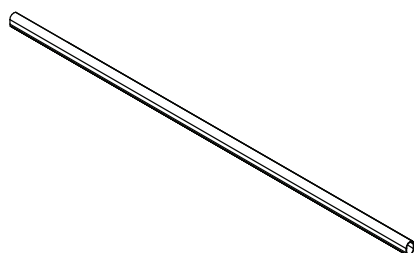


**7** Hanging rail x1  
(74.1x2.2x1.5cm)  
No. 3946-0741-2

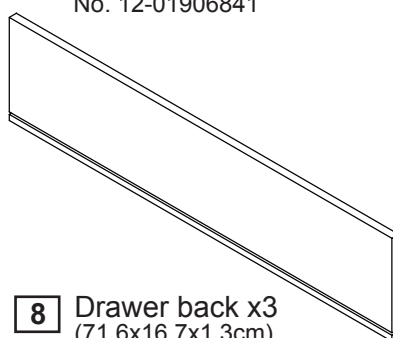


**8** Drawer back x3  
(71.6x16.7x1.3cm)  
No. 15-01307161

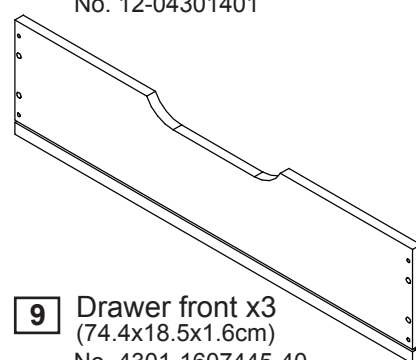


**9** Drawer front x3  
(74.4x18.5x1.6cm)  
No. 4301-1607445-40

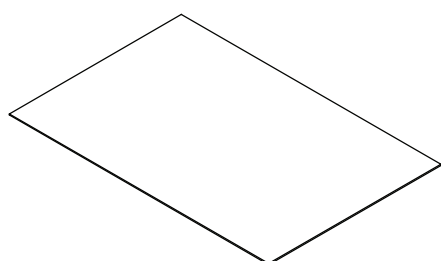

**10** Drawer base x3  
(72.8x48.3x0.3cm)  
No. 4309-0307282

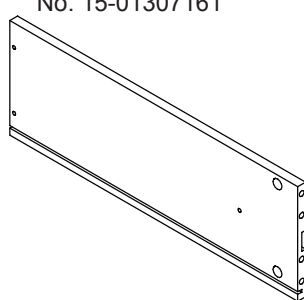

**11** Drawer side Right x3  
(48.8x16.7x1.3cm)  
No. 15-01304881

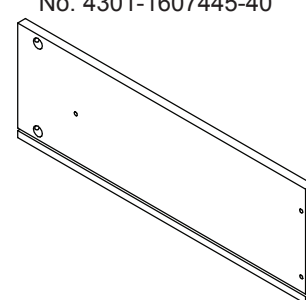


**12** Drawer side Left x3  
(48.8x16.7x1.3cm)  
No. 15-01304882


# Components - Parts

If you have damaged or missing components,  
call the **Customer Helpline: 0045 7668 8055**


Please check you have all the parts listed below

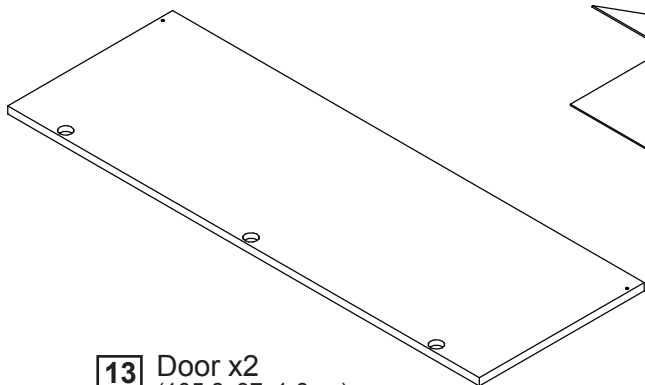


**13** Door x2  
(105.8x37x1.6cm)  
No. 4301-1610581-40

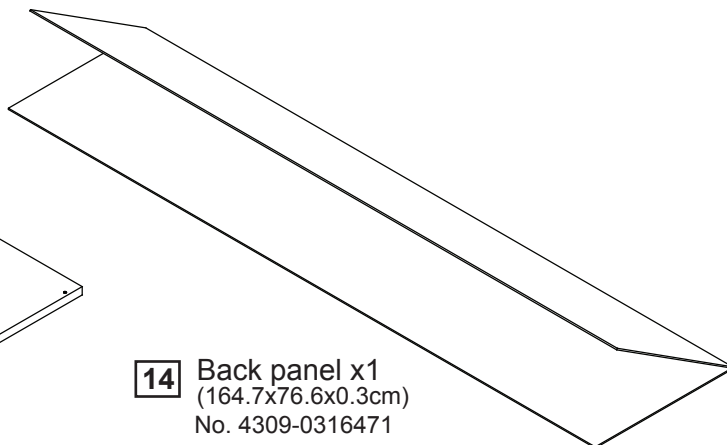

**14** Back panel x1  
(164.7x76.6x0.3cm)  
No. 4309-0316471

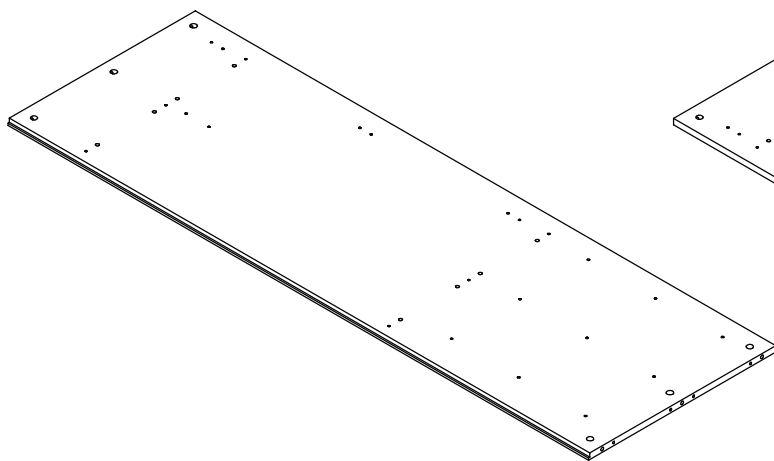

**15** Side panel Right x1  
(162.8x52.6x1.6cm)  
No. 4301-1616281-40

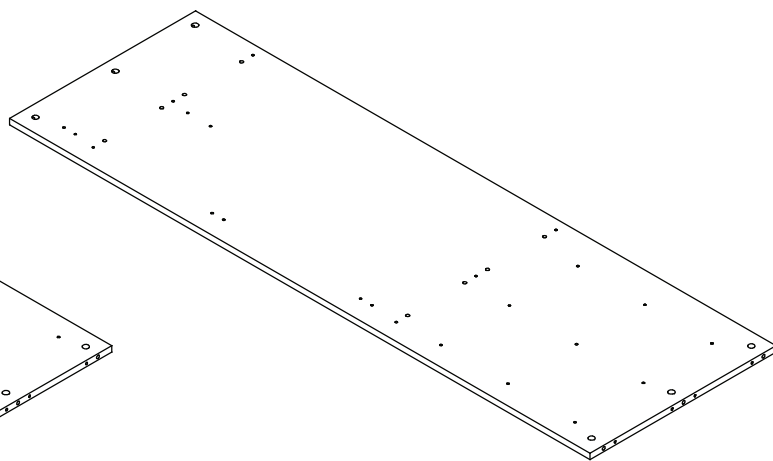
























**16** Side panel Left x1  
(162.8x52.6x1.6cm)  
No. 4301-1616282-40

# Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

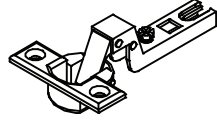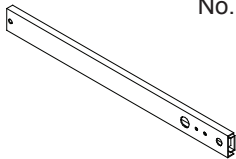
<b>A</b>  No. 4020-005 7x34mm for ø5 Minifix bolt x36	<b>B</b>  No. 3933-15010 ø15x9.5mm Minifix cam x36	<b>C</b>  No. 3901-40060 4.0x60mm Chipboard screw x14
<b>D</b>  No. 3901-30012 3.0x12mm Chipboard screw x4	<b>E</b>  No. 41-00179 Overbalance protector x2	<b>F</b>  No. 4022-004 1.6x16mm Nail square x48
<b>G</b>  No. 3930-08030 8x30mm Dowel x36	<b>H</b>  No. 3930-05030 5x30 mm Dowel x16	<b>I</b>  No. 3901-35015 3.5x15mm Chipboard screw x12
<b>J</b>  No. 3901-35035 3.5x35mm Chipboard screw x12	<b>K</b>  No. 4026-022 Door bumper x2	<b>L</b>  No. 3907-58011 ø5.8x11mm Euro screw x18
<b>M</b>  No. 4015-007 Ø26 mm Cup hinge x6	<b>N</b>  No. 4038-003-2 Hanging rail fitting x2	<b>O</b>  No. 4015-008 Mounting plate x6
<b>P</b>  No. 4012-012 Magnetic catch x2	<b>Q</b>  No. 4012-010 Counter plate x2	<b>R</b>  No. 4010-028 438x27x10mm Drawer slide x6
<b>S</b>  No. 3912-04009 Ø9.5/M4x9mm Machine screw x6	<b>T</b>  No. 4028-021 M6/Ø12x20mm Threaded bush x8	<b>U</b>  No. 4020-022 Ø7x45mm Connecting bolt x8
<b>V</b>  No. 3933-14015 Ø14x14,5mm Threaded bush x8	<b>W</b>  No. 3917-08009 M8x8,5mm Grub screw x8	

## Tools required



Phillips  
screwdriver  
(medium)




Flatblade  
screwdriver  
(medium)



Allen key  
6mm incl.  
No. 4033-010

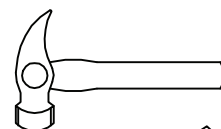

Small  
hammer



Ruler/tape  
measure



Eye protection  
(when using a  
hammer or glue)


# Assembly Instructions

## Step 1

Screw the threaded bushes **T** into the leg **6** using 6mm allen key so that they are flush with the leg.

Screw the connecting bolts **U** into the threaded bushes **T**.


Repeat for 4 legs.

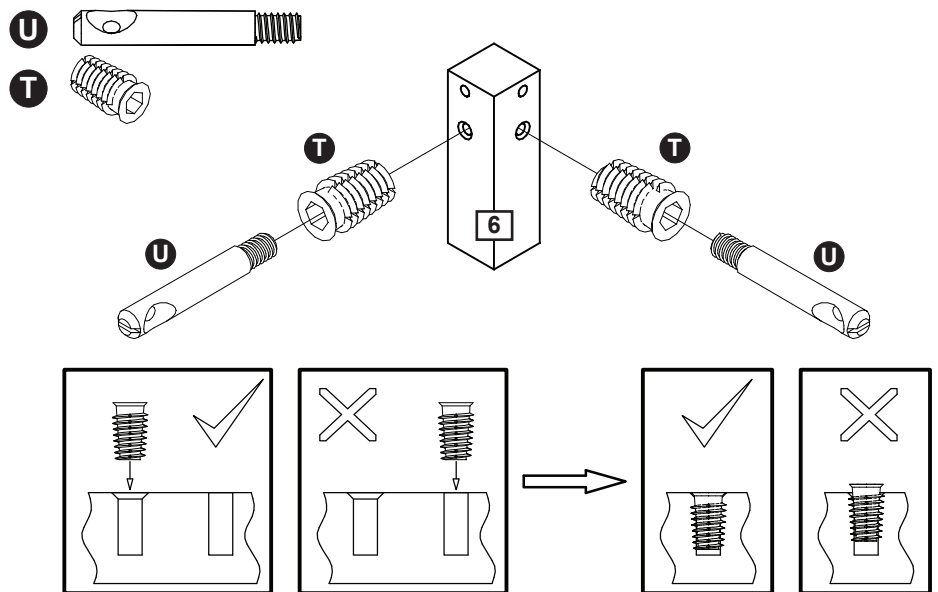

## Step 2

Insert the dowels **G** into the holes in the plinth fronts **5** and the plinth sides **4**.

It may be necessary to tap the dowels in very gently with a small hammer.

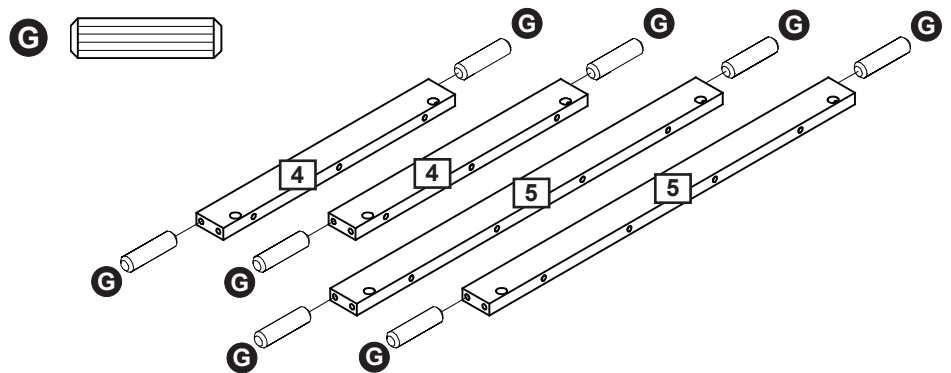

## Step 3


Assemble the plinth.

Push threaded bushes **V** into the holes in the plinth fronts **5** and the plinth sides **4**.

Attach the plinth fronts **5** and the plinth sides **4** to the legs **6** by placing the dowels into the holes in legs **6** and connecting bolts into the holes in the plinth fronts **5** and the plinth sides **4**.

Fasten the legs **6** and the plinth fronts **5** and the plinth sides **4** by tightening the grub screws **W** in the threaded bushes **V**.

**Don't overtighten.**

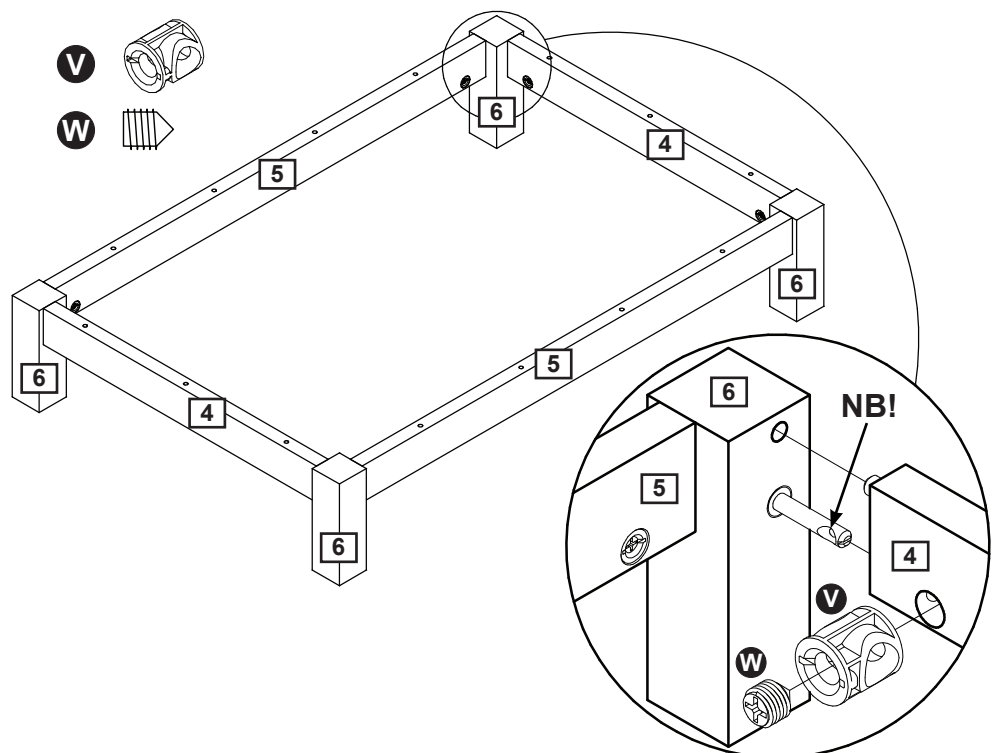


# Assembly Instructions

## Step 4

Attach the assembled plinth to the base **2** with the chipboard screws **C**.

**NB!** Align the holes in plinth sides **4** with the small holes in base **2**.

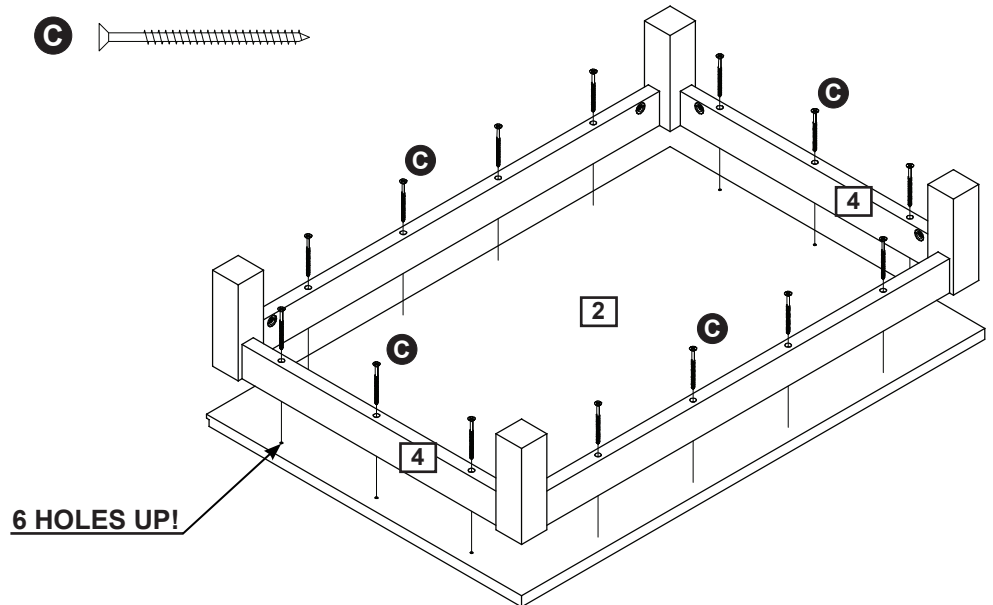


## Step 5

Attach minifix bolts **A** to the top **1** and to the base **2**.

Attach magnetic catches **P** to the top **1**.


It may be necessary to tap the magnetic catches **P** in very gently with small hammer.

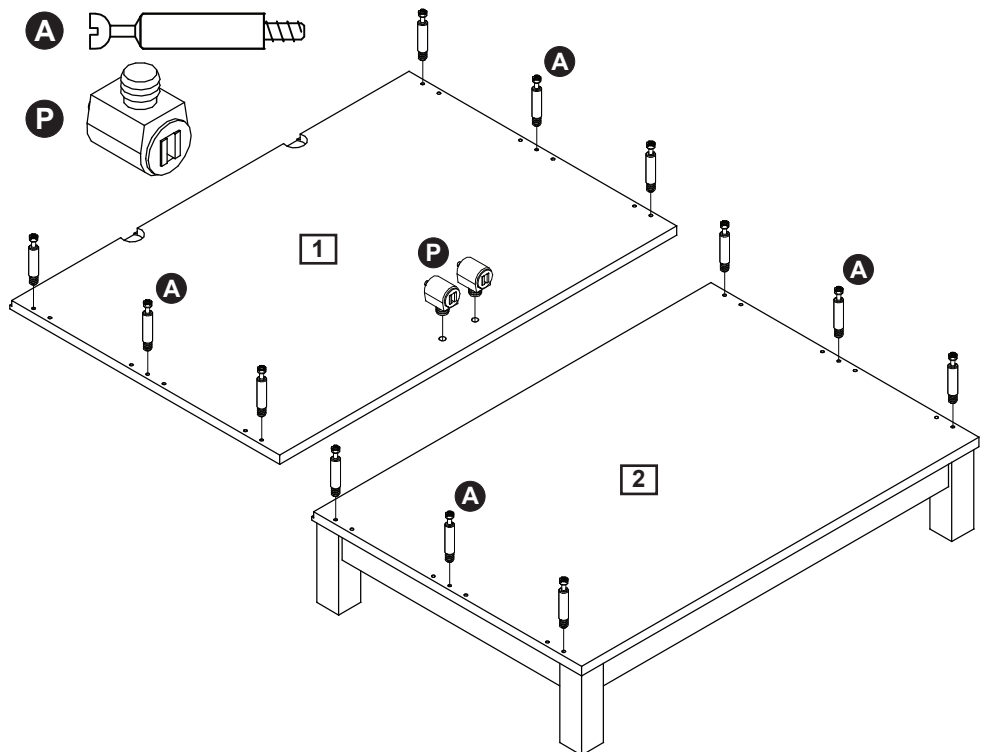

## Step 6

Insert the dowels **G** into the holes in the shelves **3**.

It may be necessary to tap the dowels in very gently with a small hammer.

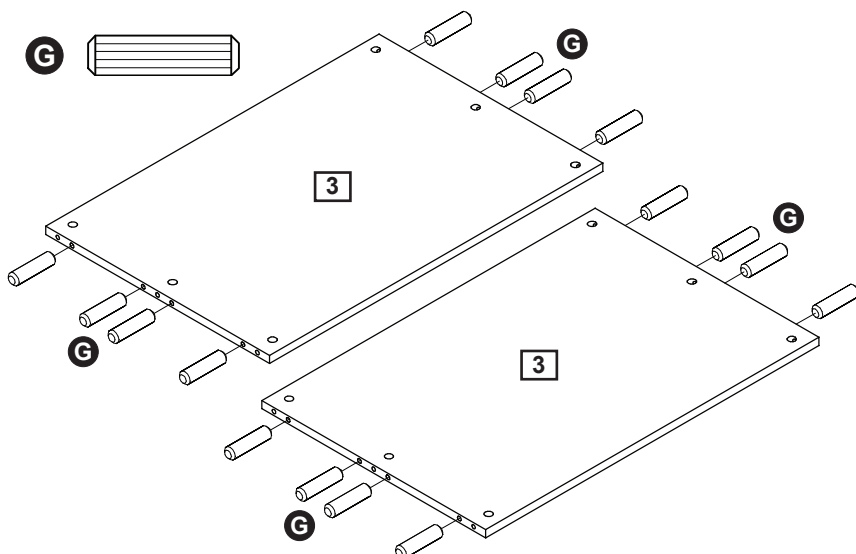

# Assembly Instructions

## Step 7

Insert the dowels **H** to the holes in the side panels **15** and **16**.



Attach minifix bolts **A** to the side panels **15** and **16**.

Attach the hanging rail fittings **N** to the side panels **15** and **16** with screws **D**.

Attach the hinge mounting plates **O** to the side panels **15** and **16**.

Attach the drawer runners **R** to the side panels **15** and **16** with euro screws **L**.

**Be aware of the front edge!**

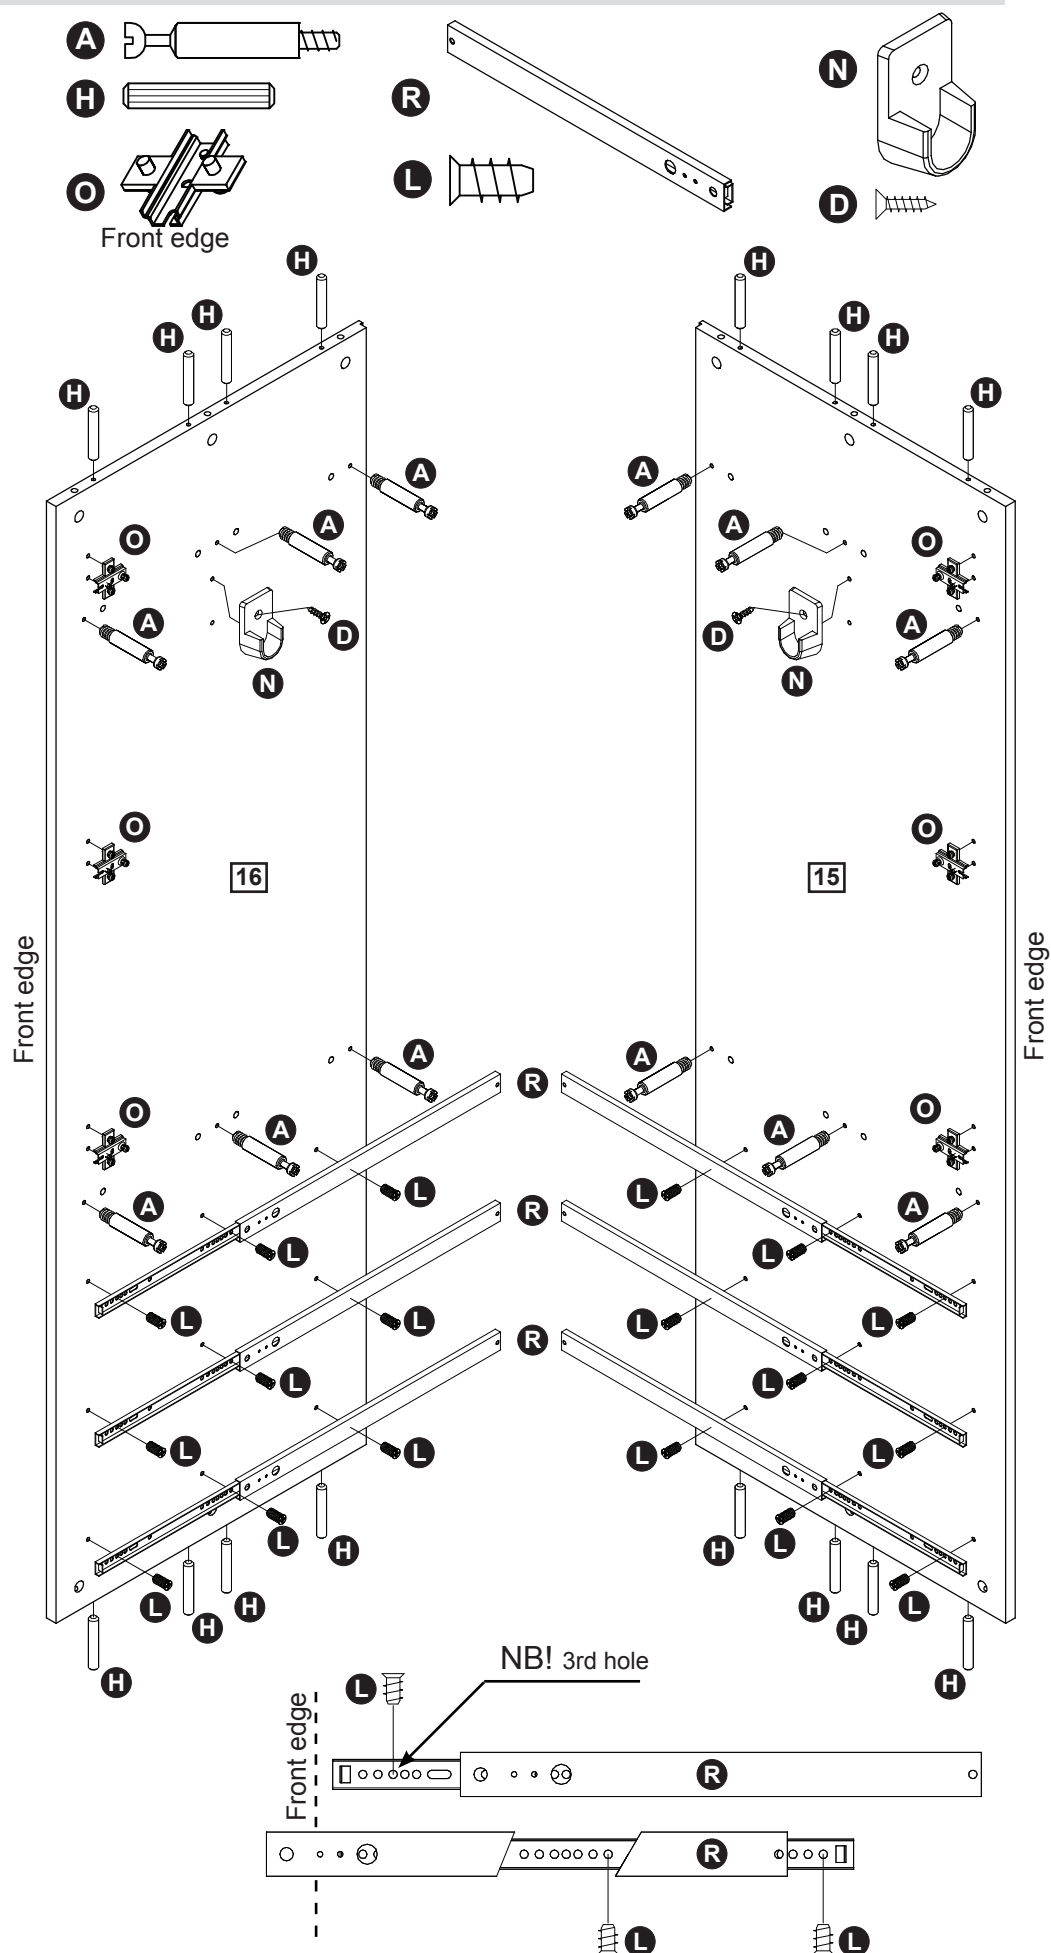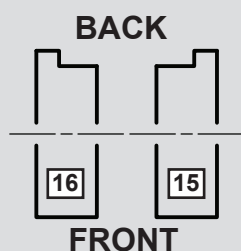




# Assembly Instructions

## Step 8

Attach the side panels **15** and **16** to the shelves **3** with the minifix cams **B**.


**Be aware of the front edges!**

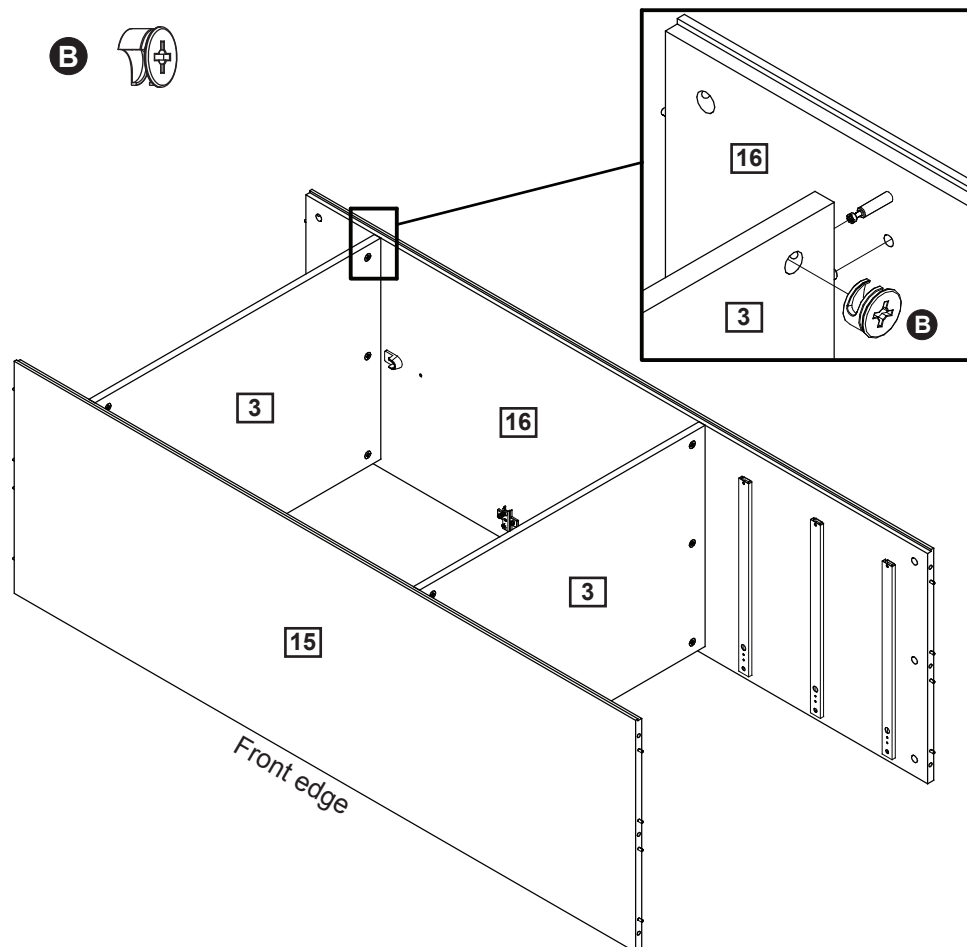

## Step 9

Attach the top **1** and the base **2** to the side panels **15** and **16** with the minifix cams **B**.

**Be aware of the front edges!**

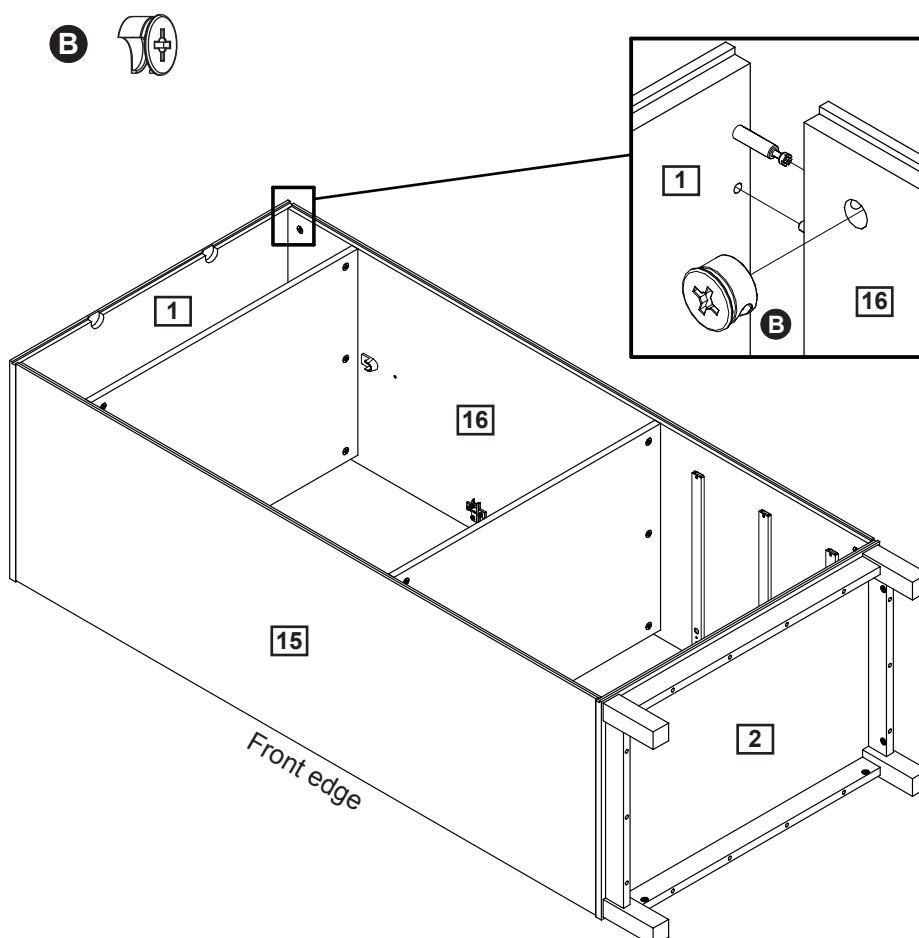

# Assembly Instructions


## Step 10

Attach the back panel **14** with nails **F** to the back side of the wardrobe.

Nail the back panel **14** to the carcass around the edge ensuring that there are NO GAPS between the top **1** and the back panel **14**. Follow the measurements.


Nail the back panel **14** to the bottom shelf **3**. Follow the measurement 606 mm from the underside of the base **2**.

**Be careful.**

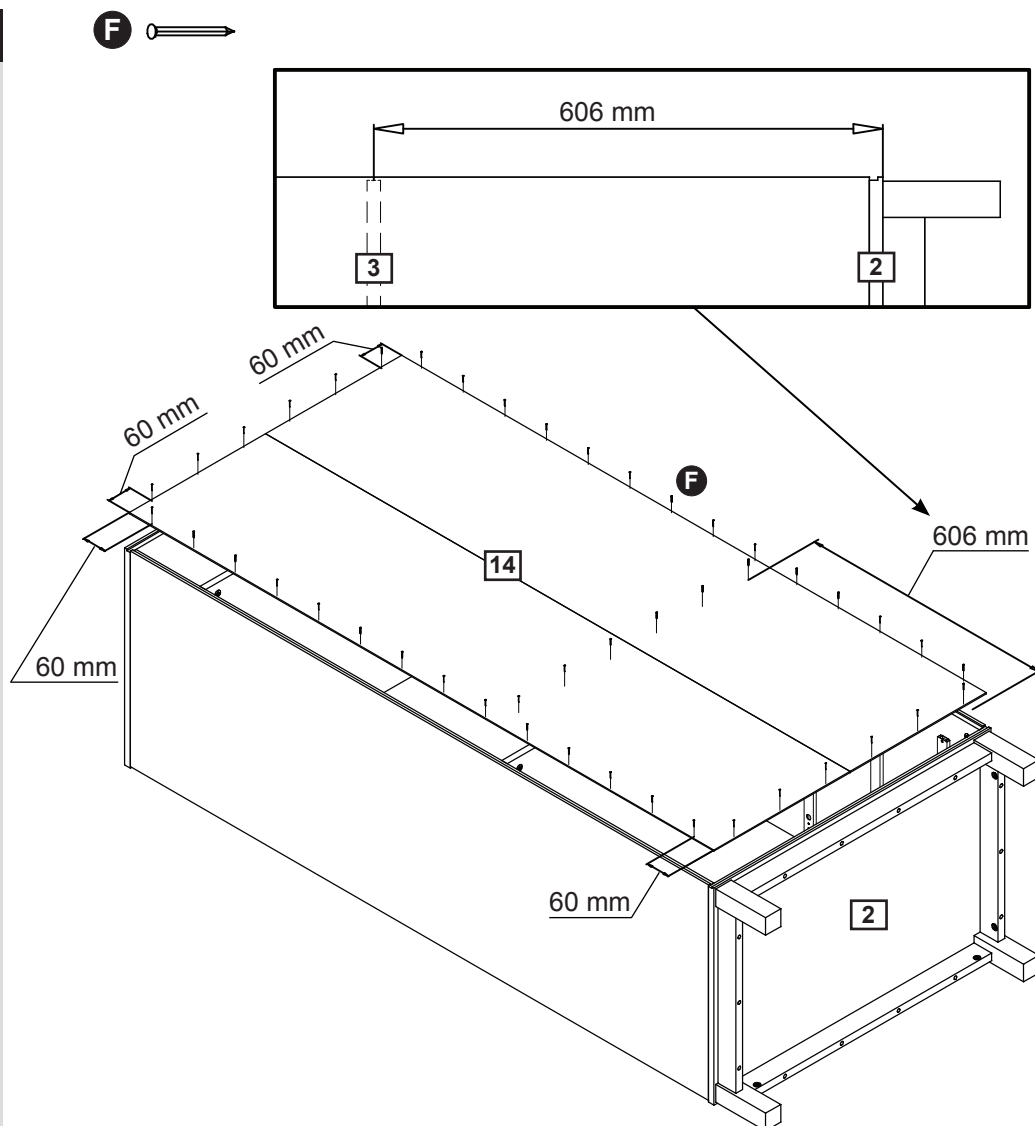

## Step 11

Attach the hinges **M** to both doors **13** using screws **I**.

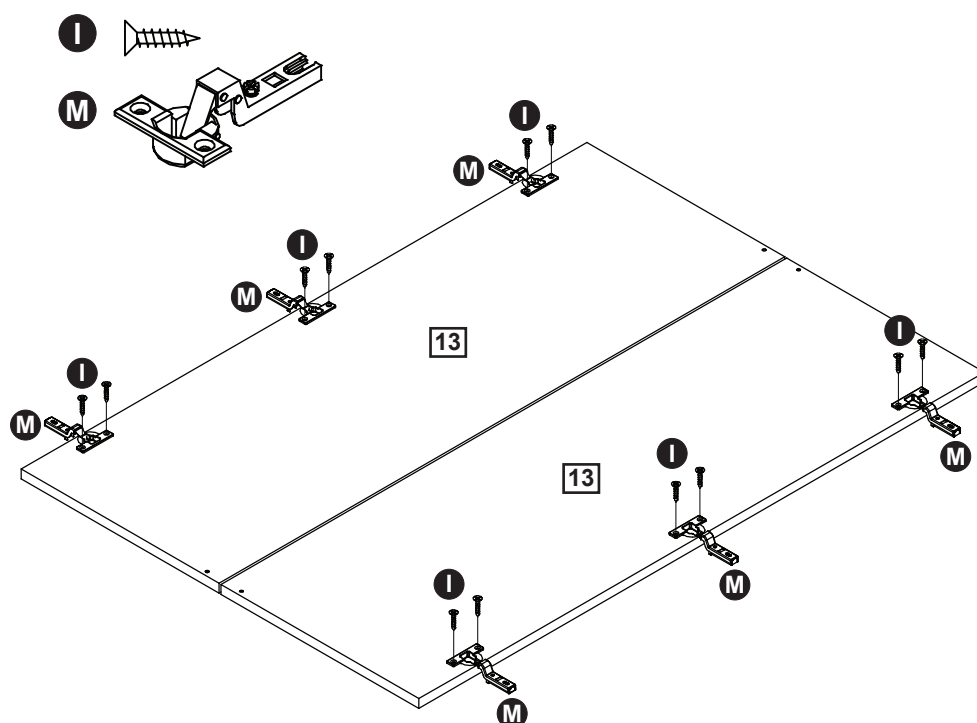


# Assembly Instructions

## Step 12

Insert the dowels **G** into the holes in the drawer sides **11** and **12**.

Attach the minifix bolts **A** to the drawer front **9**.


Repeat for all drawer sides and drawer fronts.

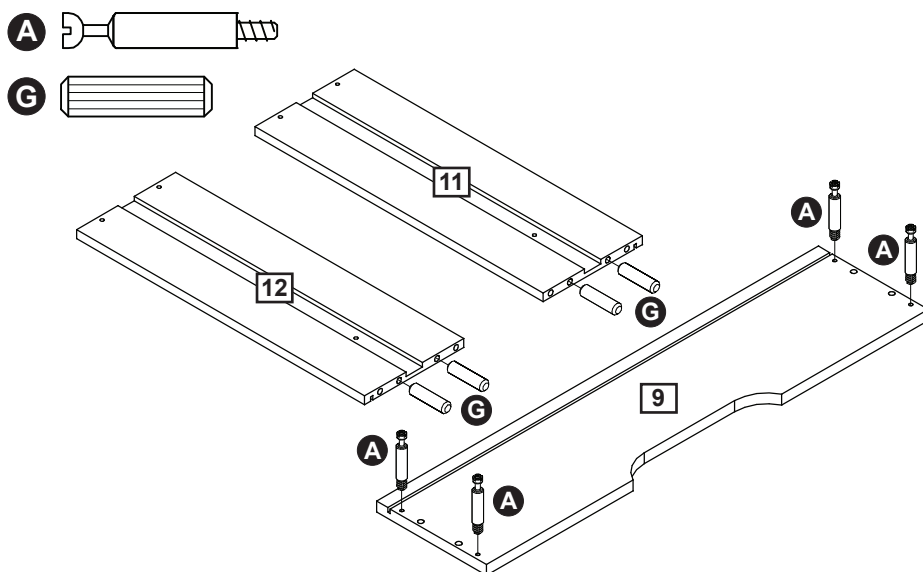

## Step 13

Attach the drawer sides **11** and **12** to the drawer front **9** with the minifix cams **B**.

Repeat for all drawers.

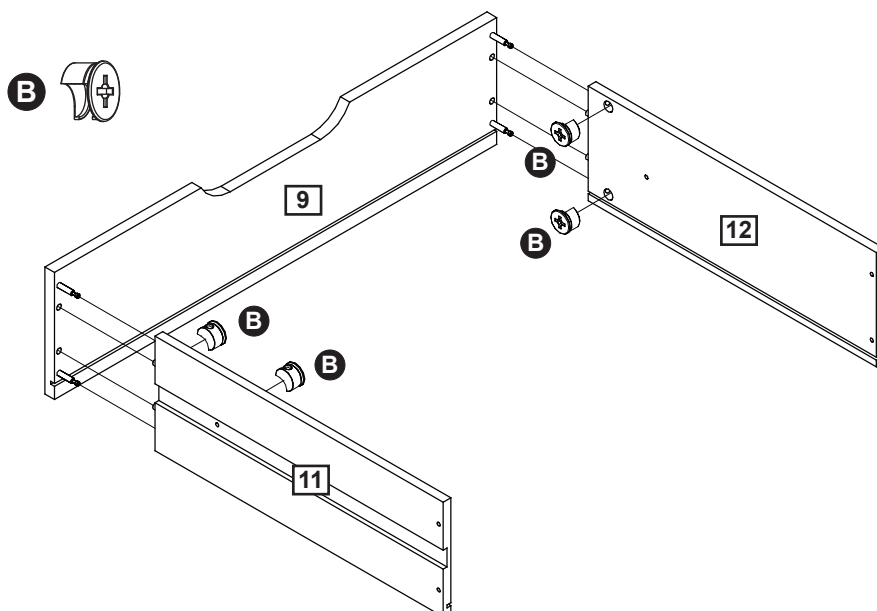


## Step 14

Push the drawer base **10** carefully into the drawer.

Attach the drawer back **8** to the drawer sides **11** and **12** with the screws **J**.

Repeat for all drawers.

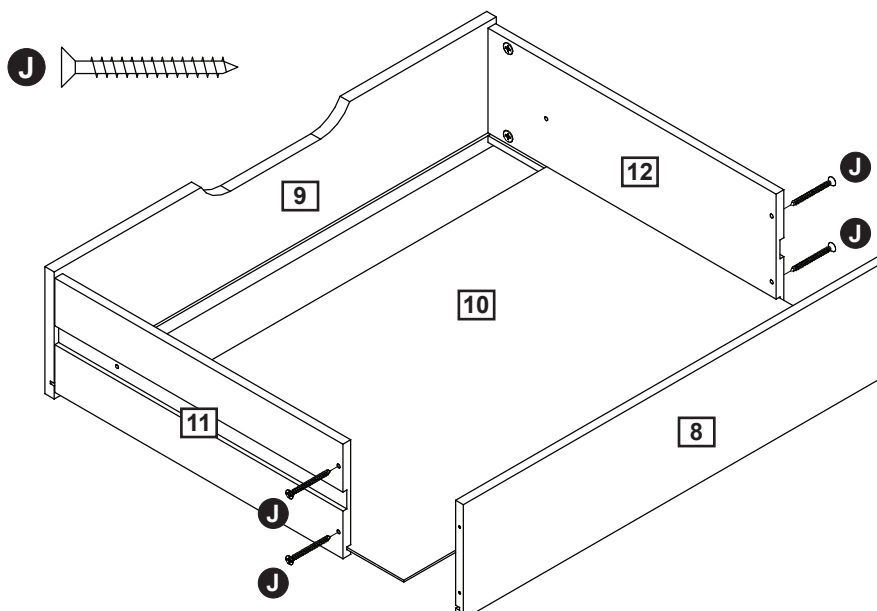


# Assembly Instructions

## Step 15

Measure out the positions for the wall attachment straps. Drill two holes spaced as illustrated with the appropriate size for the wall attachment fitting (see next step).


Pull the two straps through the gaps in top plate **1**. Push the furniture against the wall and secure the strap under the top plate with washer and screw.

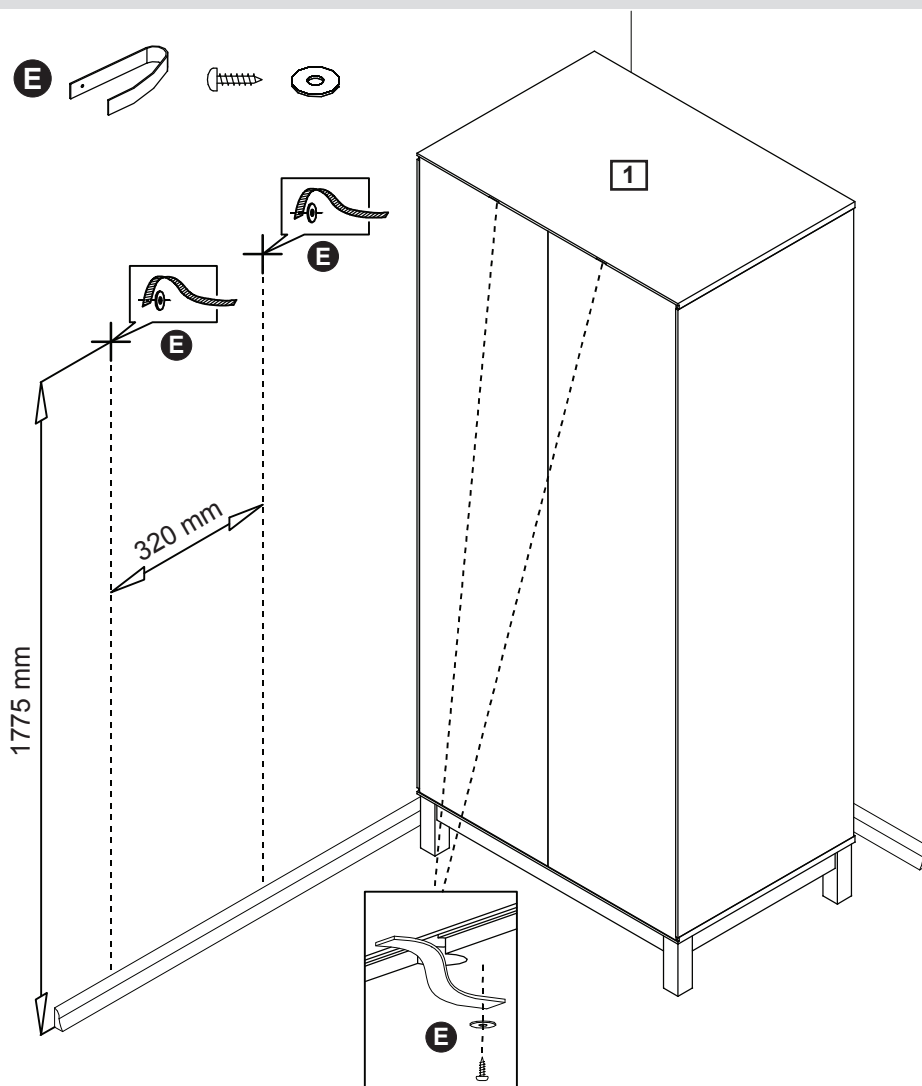


## Step 16

Different types of wall fittings. Contact your local DIY or hardware store for the wall plugs and screws.


**Concrete/Brick wall**

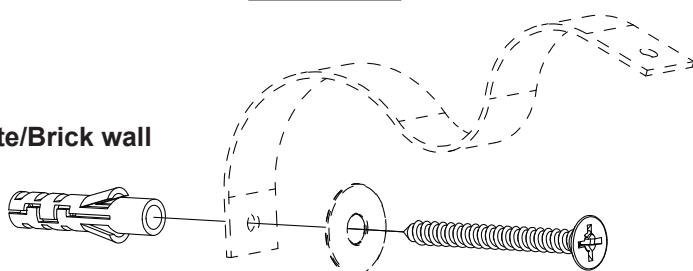

**Plaster wall**

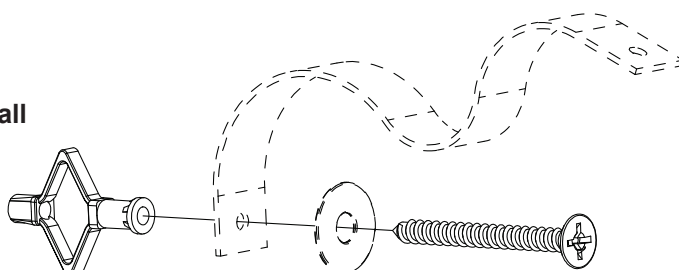

**Wooden wall**

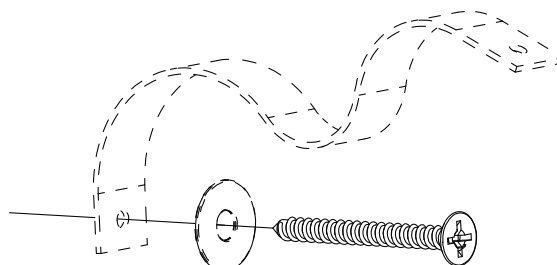

# Assembly Instructions

## Step 17

Place the assembled drawer between the drawer runners **R**. Attach the drawer sides **11** and **12** to the runners using the screws **S**.

Repeat for all drawers.



Place the hanging rail **7** into the hanging rail fittings **N**.

Attach the doors with the hinges **M** to the mounting plates **O**.

Attach counterplates **Q** to both doors **13** using screws **D**.

Put the door bumpers **K** on the edge of the lower shelf **3**.

**Assembly is complete.**

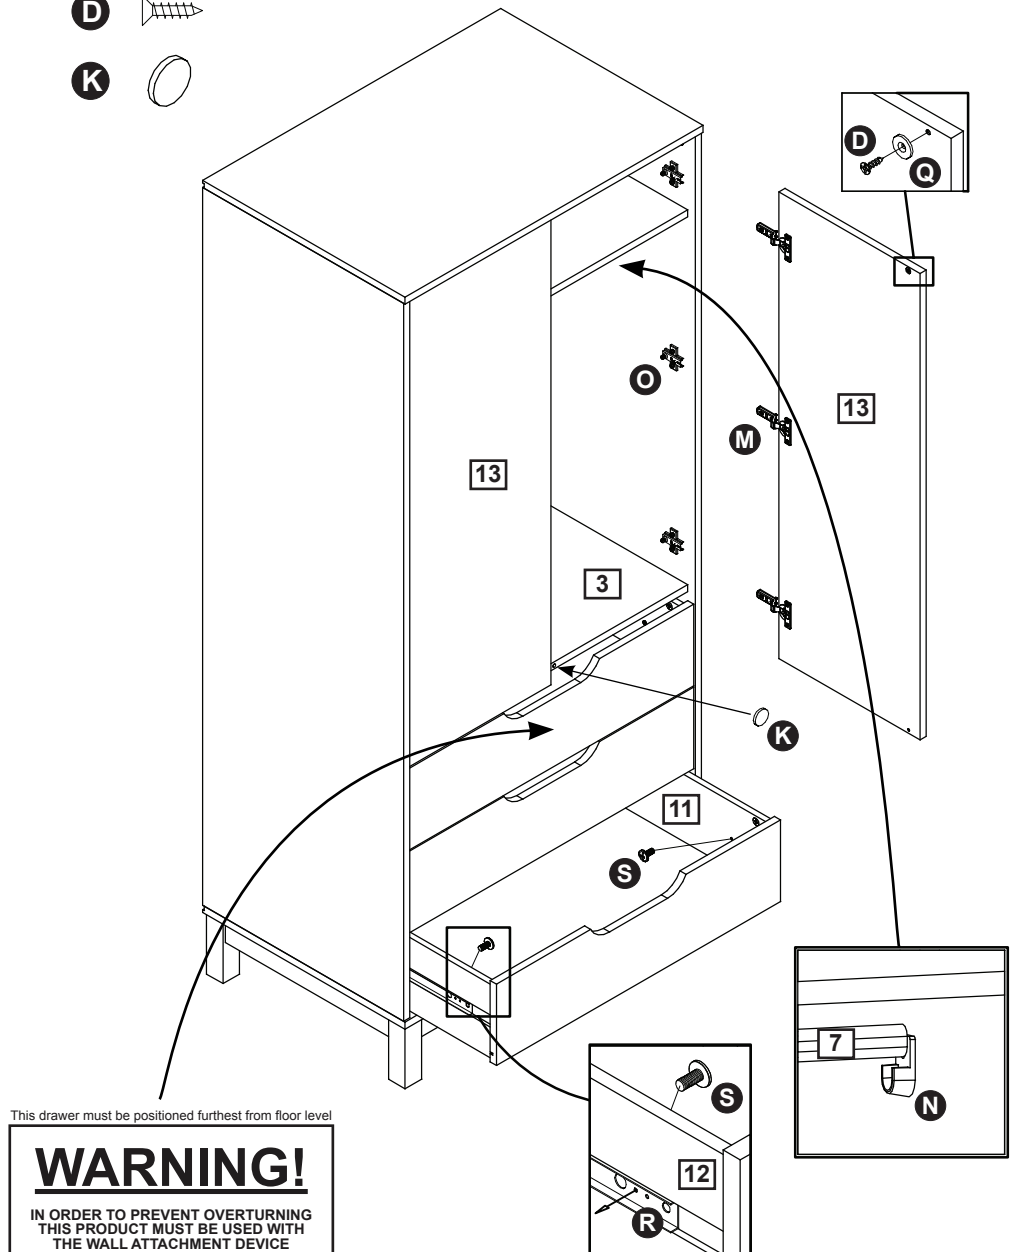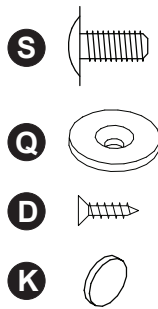

This drawer must be positioned furthest from floor level

### **WARNING!**

**IN ORDER TO PREVENT OVERTURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED**

Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent topple over:

- Use the wall attachment device provided
- Never allow children to climb or hang on drawers, doors or shelves
- Place heaviest items in the lower drawers or shelves
- Unless specifically designed to accommodate, do not set TV's or other heavy objects on top of this product
- Never open more than one drawer at a time

An attachment device is provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified trades person.

Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

Permanent safety label. Please do not remove

If you need help or have damaged or missing parts, call the **Customer Helpline: 0045 7668 8055**  
E-mail: [order@flexa.dk](mailto:order@flexa.dk)

# Your 2 Year Guarantee

## Peace Of Mind

### Knowing Your Furniture Is Protected

Protection received within the Manufacturer's Guarantee	Optional Added Protection with Furniture Care
Covers you for manufacturing defects for 2 years.	Covers you for <b>accidental damage</b> up to 3 years for incidents such as household spills, rips, tears and burns. Accidental damage cover begins from the moment your plan starts.
In the event of a problem within this time please call <b>0345 640 0800</b> , or visit an Argos store. Please retain your receipt and order number as proof of purchase.	If you want to purchase Furniture Care visit <b><a href="https://argos.productaftercare.co.uk">https://argos.productaftercare.co.uk</a></b> or go into an Argos store.
Key exclusions applying to both the Manufacturer's Guarantee and Furniture Care include where the fault is due to misuse, abuse, deliberate damage, wear and tear, neglect, use in contravention with the instructions, or if the product has been the subject of unauthorised alterations or commercial use (for full list of exclusions please visit <b><a href="https://argos.productaftercare.co.uk">https://argos.productaftercare.co.uk</a></b> or visit an Argos store for more information). You have up to 45 days post purchase to take out Furniture Care. Terms and conditions apply. Your statutory rights remain unaffected.	

## Register

### For Your Manufacturer's Guarantee

Thank you for choosing Argos Home.  
We hope you love your shiny new things!

To provide you with the best possible after sales service, don't forget to visit **<https://argos.productaftercare.co.uk>** where you can **register** for your guarantee.

Once you've registered, you can upload your receipt to store safely online, alongside details of our after sales support service, ready at hand should you need it.

You can also take out Furniture Care which protects you against accidental damage, from the moment you take the plan out, to keep your new furniture looking newer for longer.

### Register Today

<https://argos.productaftercare.co.uk>