VERTUO UP



NESPRESSO

EN


SAFETY


DISCOVER MY MACHINE


FIRST USE


CUSTOMISE MY COFFEE MOMENTS


MAINTENANCE


MACHINE SETTINGS


UNDERSTANDING MY MACHINE'S BLINKING


TROUBLESHOOTING


TECHNICAL SPECIFICATIONS

SAFETY

CAUTION: Before operating your coffee machine, please refer to the **safety instructions leaflet** to avoid any possible harm and damage.
First read the safety precautions to avoid risks of fatal electrical shock and fire. Please ensure ground continuity when plugging the machine in the power outlet.

When unpacking the machine, remove the plastic film covering the machine.

DISPOSAL AND ENVIRONMENTAL PROTECTION


This appliance complies with the EU Directive 2012/19/EC. Packaging materials and appliance contain recyclable materials. Your appliance contains valuable materials that can be recovered or can be recycled. Separation of the remaining waste materials into different types facilitates the recycling of valuable raw materials. Leave the appliance at a collection point. You can obtain information on disposal from your local authorities.



DISCOVER MY MACHINE





MACHINE OVERVIEW

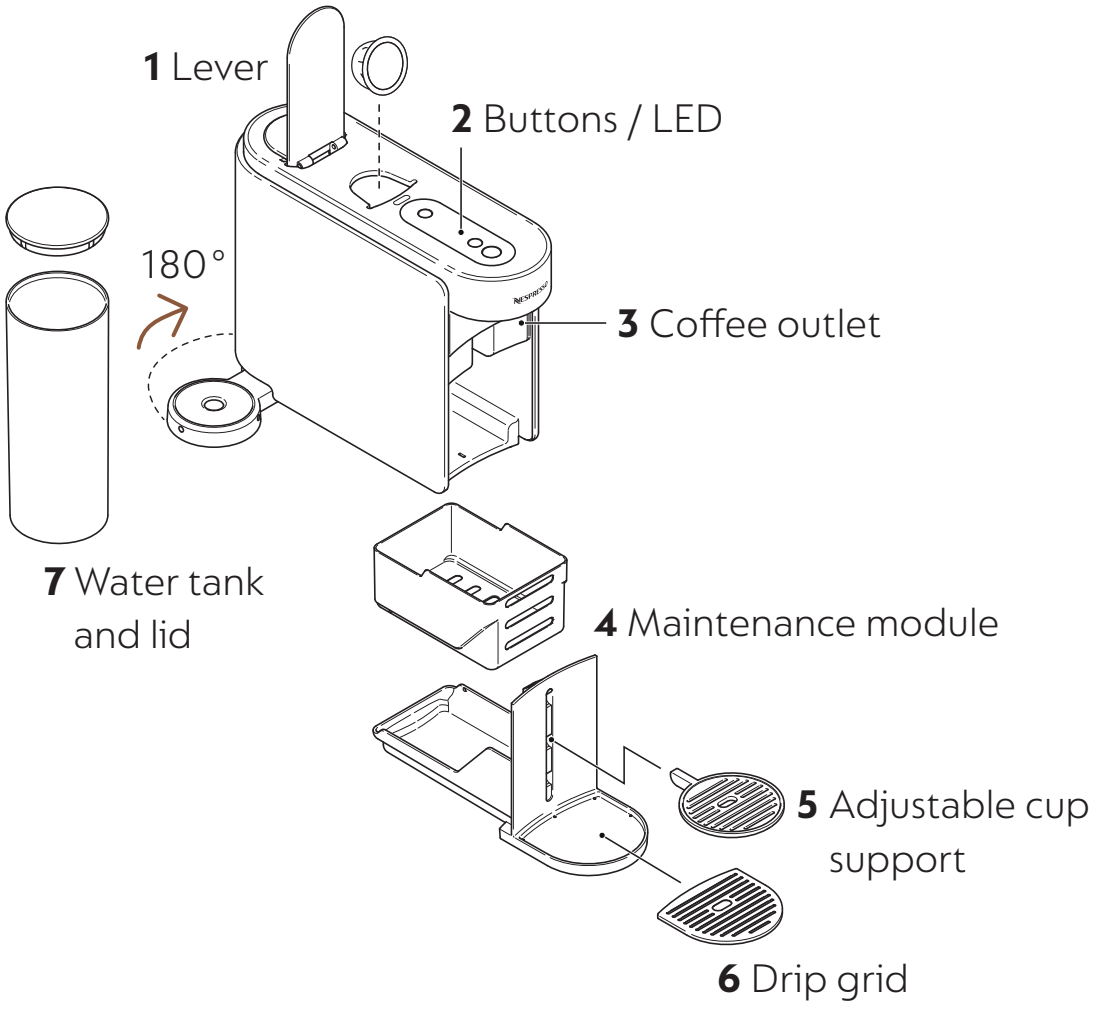

Please refrain from placing removable parts in the dishwasher.

BUTTONS / LED

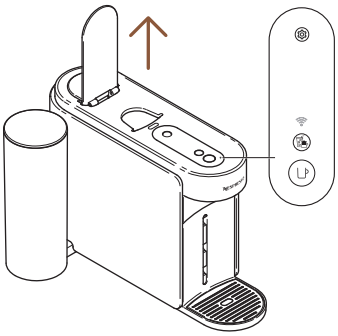

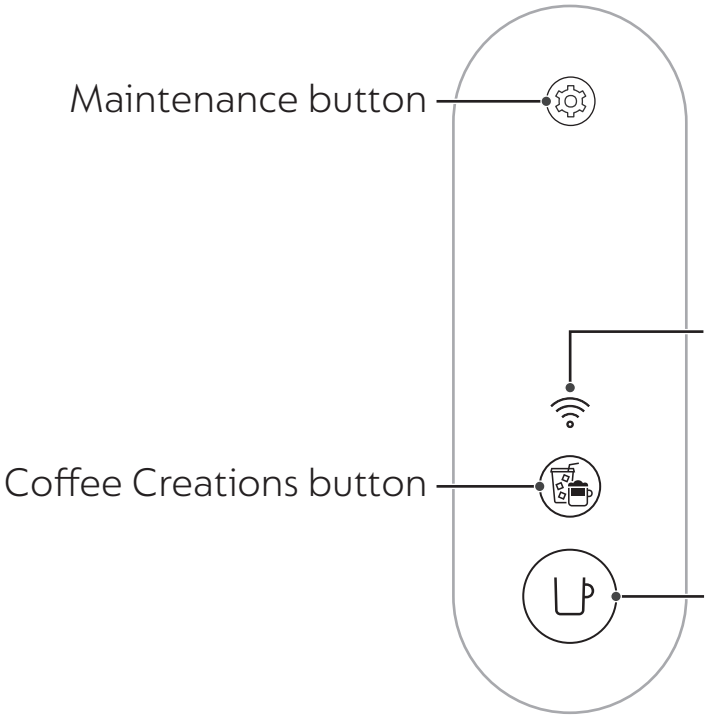

PACKAGING CONTENT




1 Vertuo Up Coffee machine
2 **Nespresso** capsules set (12 capsules)
3 Quick Start Guide
4 Safety instructions and Warranty
5 Connectivity sticker
6 Rinsing sticker

Unboxing: Some dust may be present on the surface of the machine due to the recycled materials used in the packaging. This is not dangerous, simply clean with a soft tissue.

OPEN / CLOSE


OPEN

Open the lever

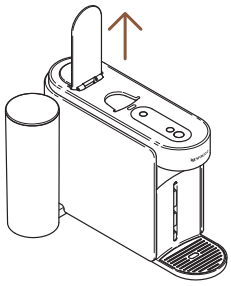


CLOSE

Close the lever

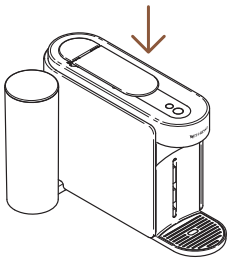

Opening or closing the lever will not turn on the machine.
You will not be able to launch a coffee without properly closing the lever. For the proper usage of your machine, we recommend opening the lever once the brewing is fully completed (coffee button steady white). Opening the lever will remove any capsule after extraction.


REMOVING AND CLEANING THE MAINTENANCE MODULE

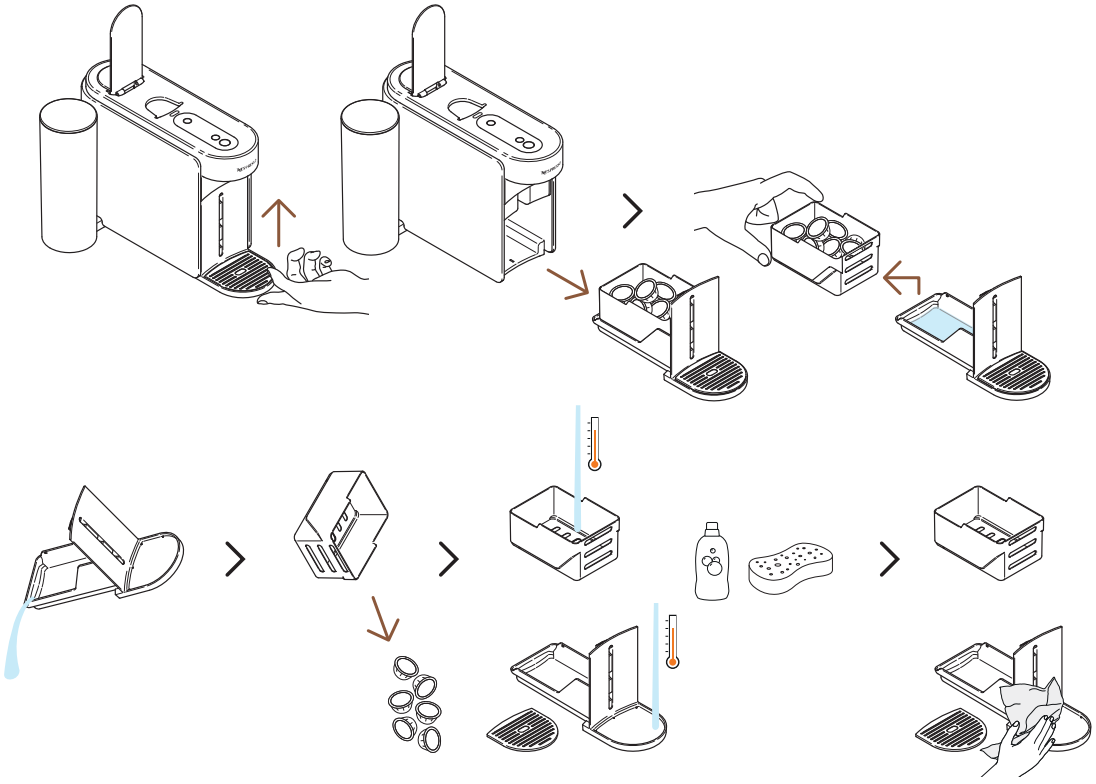

To remove the maintenance module, gently lift it upwards. Carefully separate the used capsule basket from the rest, recycle the capsules and empty any remaining coffee/water residue. Wash the parts with hot water and mild odourless detergent then dry them, gently assemble and place them back in the machine.

MAINTENANCE MODE LOOP




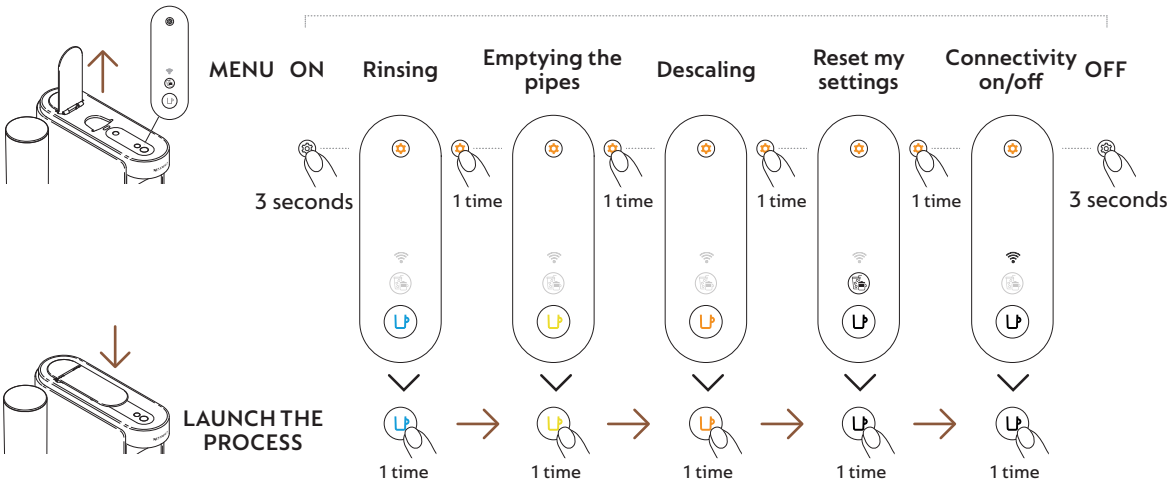

FIRST USE

ON / OFF

ON

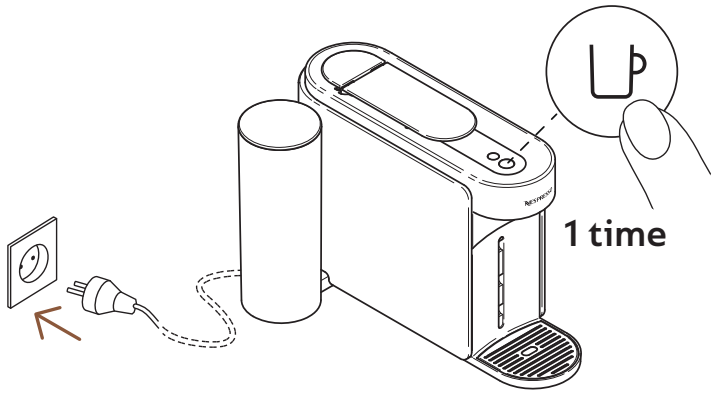

Once the machine is plugged in, turn on by pressing the coffee button once.

The coffee button will glow for 3 seconds while the machine is heating up. When it is steady, the machine is ready to be used.


OFF

Automatic OFF



2 minutes

Manual OFF

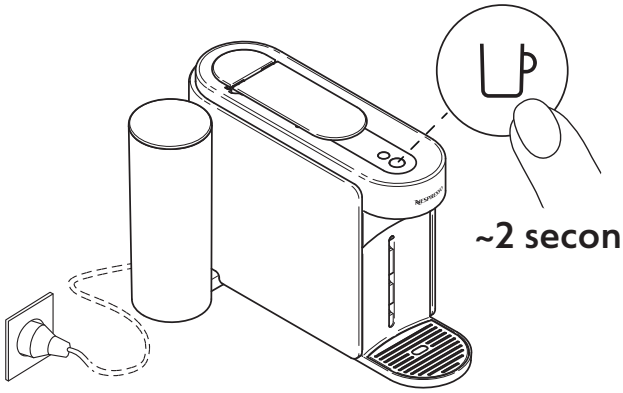

To save energy, the machine will turn off automatically after ~2 minutes of non-use.


The machine can be turned off manually at any time (when not in use) by pressing and holding the button for ~2 seconds. The machine will be powered off after all the buttons and LED will be dimmed down.

If you have paired your machine, please note that a final batch of data can be sent to the **Nespresso** Smart App once your machine is turned off. It can take a few seconds.

CONNECT YOUR MACHINE




WHY SHOULD YOU PAIR YOUR MACHINE?

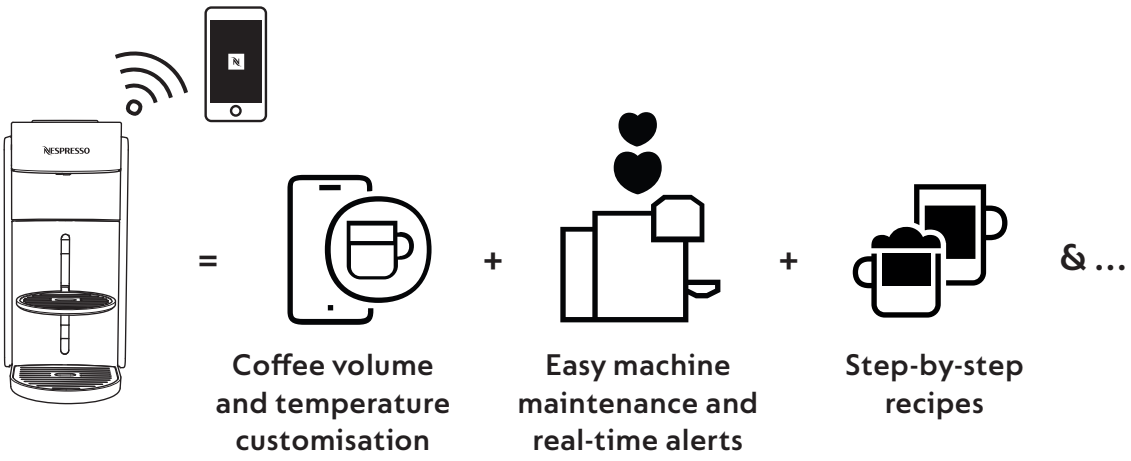


- **Coffee volume and temperature customisation:** Adjust the cup length and customise the temperature of your coffee, with exclusive temperature control available only through the App.
- **Easy machine maintenance and real-time alerts:** Experience effortless cleaning and descaling directly through the App. Enjoy the benefits of upgrading your machine with the latest features for a seamless experience.
- **Step-by-step recipes:** Discover the classic coffee recipes to the trendiest creations.

HOW TO CONNECT YOUR MACHINE?

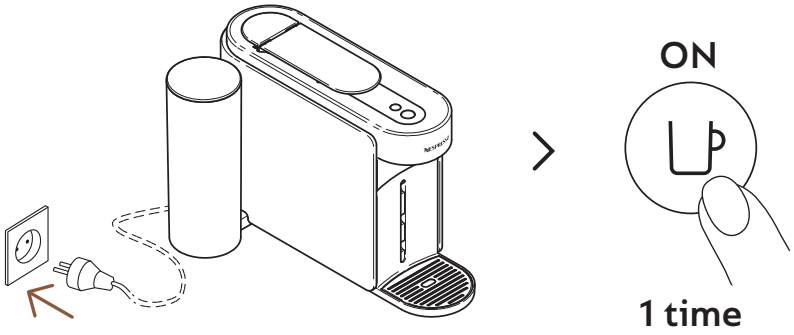

1 To connect your machine, plug it, turn it on by pressing the coffee button once.

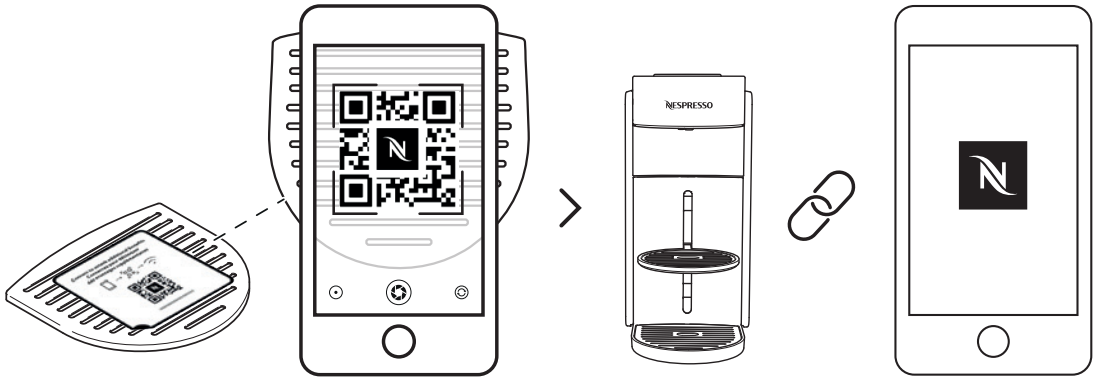


2 Scan the QR Code available on your machine drip grid or open the **Nespresso** Smart App to pair your machine.

- If you have already downloaded the **Nespresso** Smart App, it will be opened. If you don't have the **Nespresso** Smart App, you will be able to download it.
- If you do not connect your machine, the Connectivity LED will blink each time you will turn on the machine.
- If you wish to disable the connectivity module or if your country does not support connection to the **Nespresso** Smart App, please refer to the following "Disable / Re-enable the connectivity module" section.


DISABLE / RE-ENABLE THE CONNECTIVITY MODULE




The machine comes with a connectivity module, enabled by default. It gives access to additional features, enhancing your coffee experience. To disable the connectivity module, follow these steps:

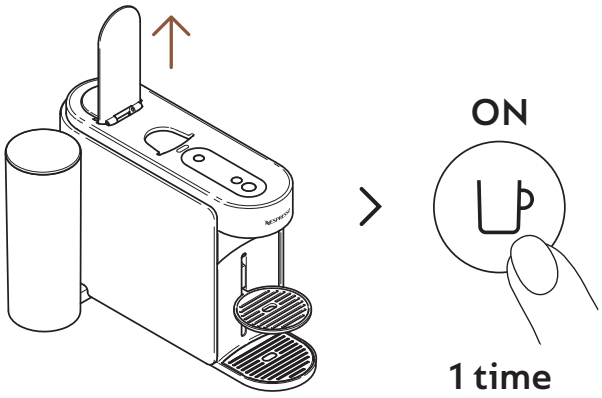

1 Open the lever and turn on the machine by pressing the coffee button once.

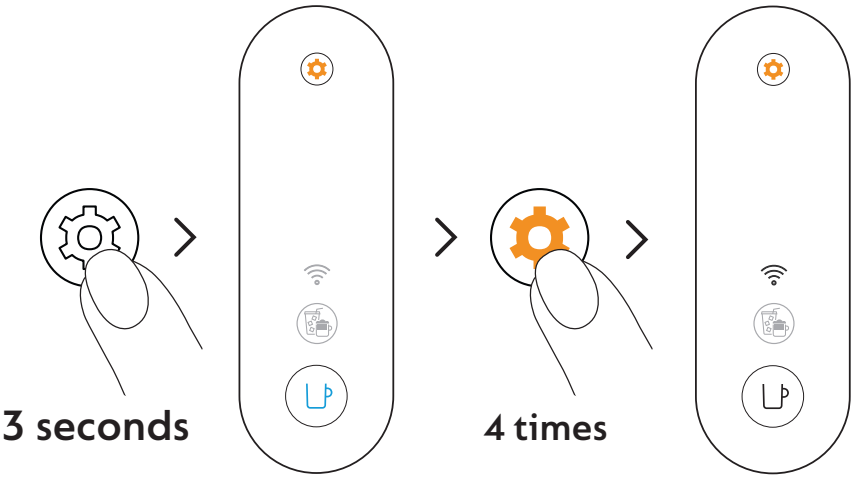

2 Press and hold the maintenance button for at least 3 seconds. Once the coffee button is steady blue, release it and press the maintenance button 4 times again. The coffee button and the Connectivity LED should appear steady white.

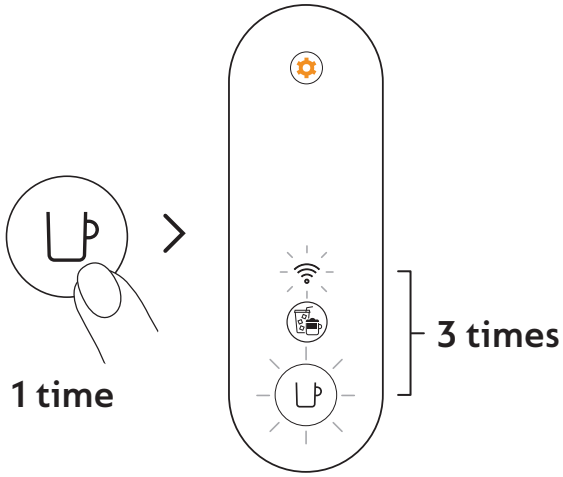


3 Press the coffee button once to confirm. The coffee button and the Connectivity LED will blink 3 times to confirm the connectivity module has now been disabled. Once the procedure is completed, the machine turns off.

If you want to re-enable the connectivity module, you can follow the same steps.


FIRST RINSING / CLEANING




We recommend you clean your machine before its first use. All the procedures could be easily guided through the **Nespresso** Smart App once your machine is connected.

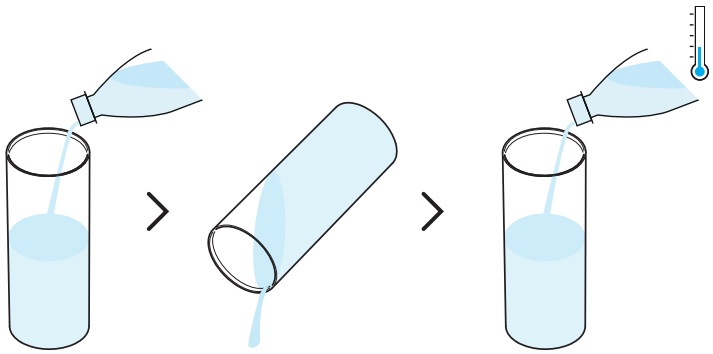


1 Rinse the water tank before filling it with only fresh drinking water (0.5 L / 17 fl oz).

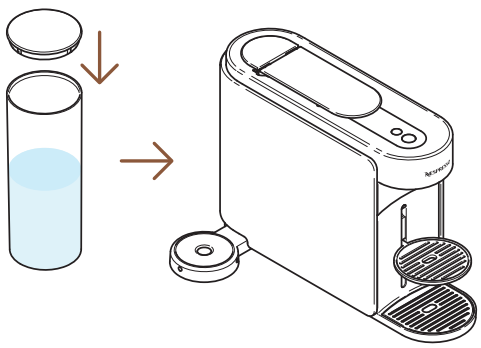


2 Close the water tank with the lid and put it back in position on the machine.

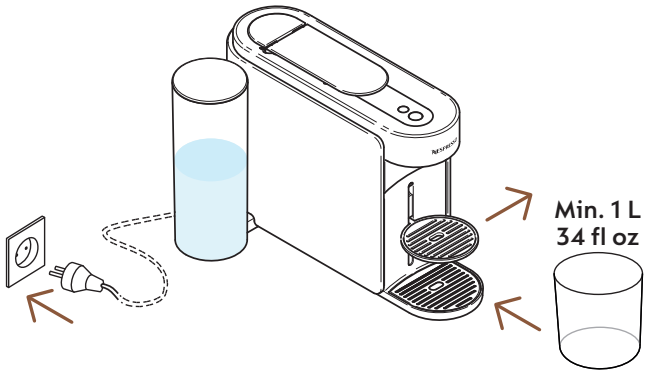

3 Plug in the machine, remove the cup support and place an empty container (at least 1 L / 34 fl oz) under the coffee outlet.

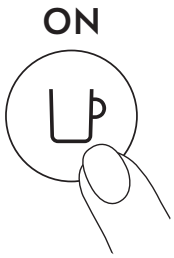


4 Turn on the machine by pressing the coffee button once.

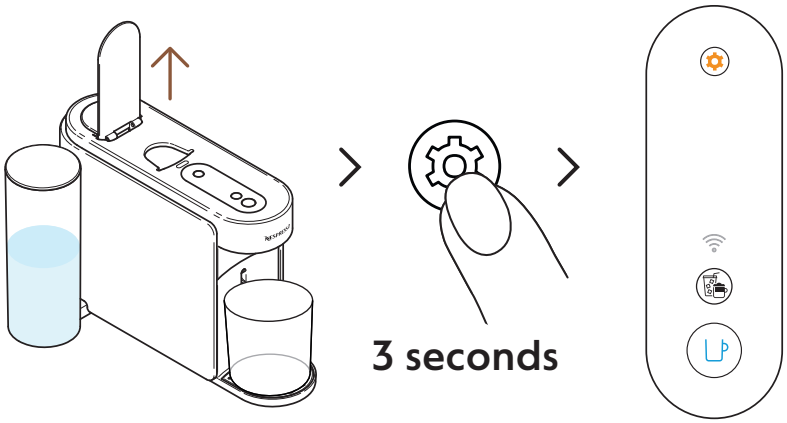

5 Open the machine lever. Press and hold the maintenance button for at least 3 seconds. Release it when the coffee button appears steady **blue**.


To leave the maintenance mode before launching any procedure, please hold again the maintenance button for at least 3 seconds.

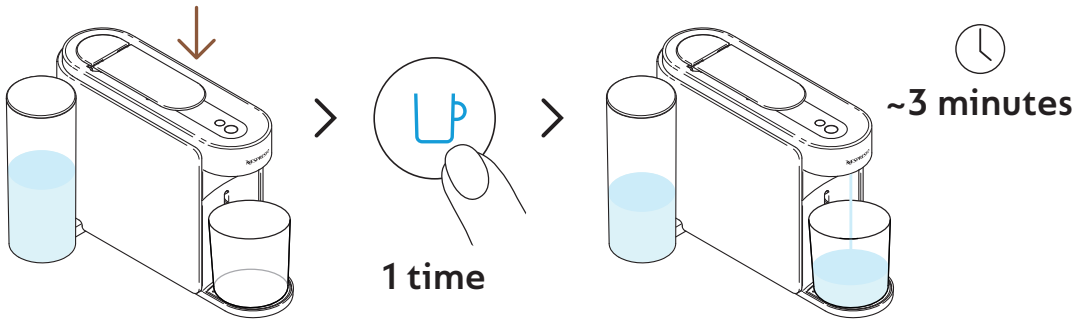

6 Close the lever and press the blue coffee button once to launch the first rinsing process.


The machine will start rinsing and the procedure may take up to 3 minutes.

Water may accumulate in the maintenance module during rinsing.

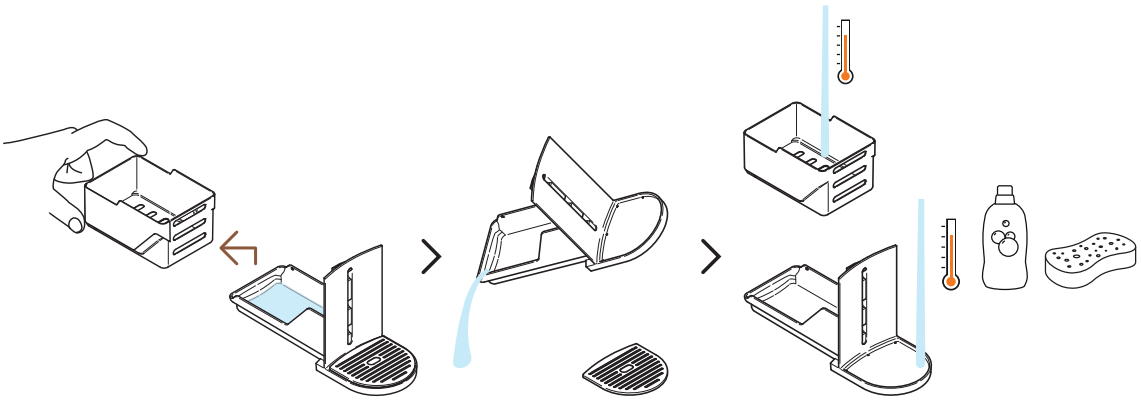

7 Separate the capsule basket from the rest and empty any remaining water. Wash the maintenance module with hot water and mild odourless detergent.

CAUTION: Do not use any strong or abrasive cleaning agent or solvent cleaner. Do not put the machine in a dishwasher. Never immerse the appliance or part of it in water.

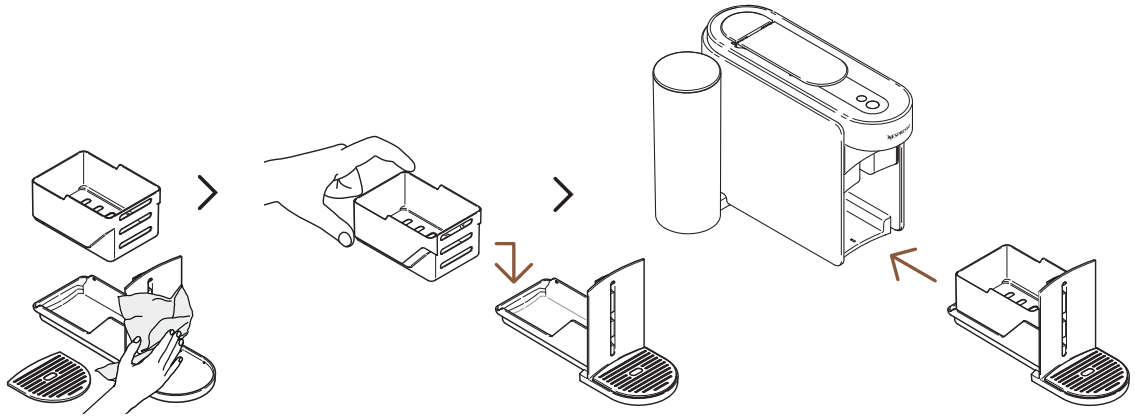


8 Dry the maintenance module with a clean and fresh cloth and place it back on the machine.

The machine will go back to ready mode when the procedure will be completed (coffee button steady white).

CAUTION: Always use soft cloths to clean the machine.

THE VERTUO SYSTEM

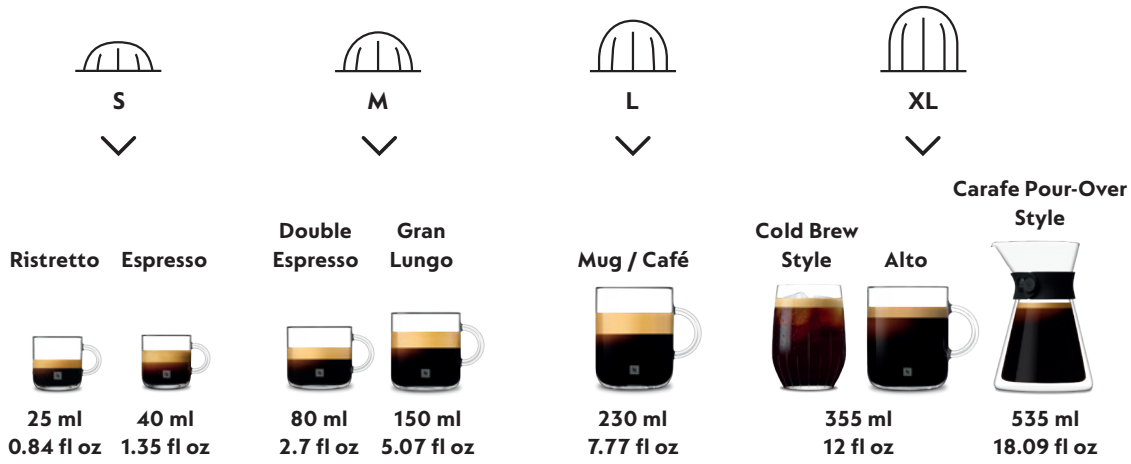

Discover our full collection of accessories on www.nespresso.com