



USER'S GUIDE

2.8" Video Baby Monitor with Night Light

Nursery View Glow

The features described in this user's guide are subject to modifications without prior notice.

Welcome...

to your new Hubble Video Baby Monitor!

Thank you for purchasing your new Hubble Smart Nursery product. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom.

Please retain your original dated sales receipt for your records. For warranty service of your Hubble product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please contact:

+44 (0) 844 557 9677 (UK only)*

(*Calls cost 7p per minute plus your telephone company's access charge) https://support.hubbleconnected.com

Visit **support.hubbleconnected.com** to download the User Guide with instructions, answers to frequently asked questions, and more to help you get the most from your product.


Got everything?

- 1 x Parent Unit
- 1 x Baby Unit (Camera Unit)
- 1 x Rechargeable Ni-MH battery pack for the Parent Unit
- 1 x Battery door for Parent Unit
- 2 x Power adapters for the Parent and Baby units


In multi-Baby Unit packs, you will find one or more additional Baby Unit units with power adapter units.

Overview of Your Baby Unit



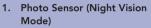

- 2. Camera Lens
- Infrared LEDs (x8, for night vision)
- 4. Power/Link indicatior

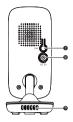


- 5. High Sense Microphone
- 6. Night Light
- 7. PAIR button
- 8. Power Socket
- 9. Temperature Sensor

Important guidelines for installing your Baby Monitor

- To use your Video Monitor Baby and the Parent Unit together, you must be able to establish a radio link between them, and the range may be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the Baby and Parent Units may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls or electrical equipment, such as radios, TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth® systems, or microwave ovens, may cause interference with this product, so keep the Baby Monitor at least 1.5 metres (5 feet) from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or the Baby Unit to different positions in the rooms.

Overview of the Parent Unit

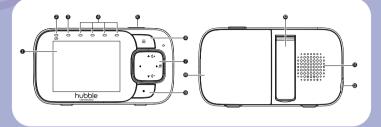

1. Display (LCD screen)

2. Charging LED

Red when mains power connected. Off when the Parent Unit battery is fully charge.

3. Parent Unit ON/OFF Indicator

Green when the Parent Unit is turned on.

Flashes green when the Parent Unit is searching for the Baby Unit, or is in the pairing process.

4. Sound Level indicators

The sound level indicators show the sound level as detected by the Baby Unit - the louder the sound detected, the more LEDs turn on.

5. Power button

Press and Hold to turn the Parent Unit ON/OFF.

6. MENU button

Control key panel UP / Volume Up ▲ C+

Press to increase the speaker volume. While in the menu, press to scroll up. While viewing a zoomed image, press and hold to move up the image.

DOWN / Volume Down ▼ Ц-

Press to decrease the speaker volume. While in the menu, press to scroll down.

While viewing a zoomed image, press and hold to move down the image.

While in the menu, press to choose the option on the left.

While viewing a zoomed image, press and hold to move left within the image.

RIGHT / Zoom 🕨 🗩

While in a menu, press to choose the option on the right side.

While viewing an image, press to zoom in.

While viewing a zoomed image, press to zoom out or press and hold to move right within the image.

8. Battery Door

9. OK button

While in a menu, press to choose an item, or save a setting.

- 10. Stand
- 11. Speaker
- 12. Power Socket

Overview of the Parent Unit

۳	Signal Level (4 Levels)
)	Night Vision Mode (Video also changes to Black/White).
Ŷ	Indicates the screen off timer is set.
4)	Volume Level Control (5 Levels).
@x	No Baby Unit detected.
m	Battery Level Indication (4 Levels).
Æ	Zoom Level Control (1X, 2X).
-` <u>`</u>	Night Light
☆	LCD Brightness Level Control (5 Levels).
Û	Alarm Setting (2h, 3h, 4h, 5h or 6h) On status bar, indicates alarm set, and when flashing, that alarm time has been reached or missed.
Į.	Temperature scale select (°C/°F) Readings display in BLUE, but turn RED if > 29 °C / 84 °F or < 14 °C / 57 °F. Displays HH °C / °F if >36 °C / 97 °F. Displays LL °C / °F if < 1 °C / 34 °F.
Ŷ	Set Screen Off Timer (Off 🛛 , 5 mins, 30 mins, 60 mins).
Ð	Add Camera
Q	Delete Camera
	View multiple cameras on screen. Available when you have more than 1 Baby Unit (Camera).

Important guidelines for installing your Digital Video Baby Monitor

- To use your Baby Unit and Parent Unit together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, a metallic door or reinforced concrete, between the Baby Unit and Parent Unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- If the signal is poor, try moving the Parent Unit and/or the Baby Unit to different positions in the rooms.



Table of contents

1.	Safety Instructions	7
2.	Getting Started	10
	2.1 Connecting the power supply for the Baby Unit	10
	2.2 Installing battery and connecting Parent Unit to power	10
	2.3 Connecting the Power Supply for the Parent Unit	11
	2.4 Desktop Stand of the Parent Unit	12
3.	Using the Baby Monitor	13
	3.1 Power on or off the Parent Unit	13
	3.2 Turn off the Parent Unit screen	13
	3.3 Night Vision Mode	13
	3.4 Adjust the speaker volume for Parent Unit	14
	3.5 Zoom	14
	3.6 Set Night Light	
	3.6.1 Night Light brightness control	14
	3.6.2 Night Light colour control	
	3.6.3 Set timer for Night Light	
	3.7 Adjust the LCD brightness of the Parent Unit	
	3.8 Set the alarm on the Parent Unit	
	3.9 Temperature Setting	
	3.10 Set the screen off time of the Parent Unit	
	3.11 Pair and replace extra new Baby Unit	
	3.12 Delete a Baby Unit	
	3.13 Multi-Camera Use	
4.	Disposal of the Device (environment)	
5.	Cleaning	19
6.	Troubleshooting	20
7.	General Information	22
8.	Technical Specifications	





English

1. Safety Instructions

STRANGULATION HAZARD - Keep the unit and adapter cord more than 1 metre from the cot and out of the baby's reach. NEVER place Baby Unit or cords within the cot. Secure the cords more than 1 metre away from the baby's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.







BABY UNIT SET UP & USE:

- Determine a location for the BABY UNIT that will provide the best view of your baby in his/her cot.
- Place the BABY UNIT on a flat surface, such as a dresser, bureau, or shelf or mount the Unit to a wall securely using the keyhole slots under the stand.
- NEVER place the Baby Unit or cords within the cot.

WARNING

This Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- Keep this user's guide for future reference.
- Keep the cords out of reach of children.
- Do not cover the Baby Monitor with a towel or blanket.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor in damp areas or close to water.
- Do not install the Baby Monitor in extreme cold or heat, direct sunlight, or close to a heat source.





- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Only insert a battery pack of the same type.
- Do not touch the plug contacts with sharp or metal objects.
- Connect the power adapters to easily accessible electrical sockets.

There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to their instructions.

To reduce risk of fire or burns.

- Do not attempt to disassemble, or service the battery pack.
- Do not crush, puncture, short external contacts, or dispose of in fire or water.
- Do not heat above 60°C (140°F).
- Use specific charger only.
- Replace only with the battery pack designated for this product.






English



2. Getting Started

2.1 Connecting the power supply for the Baby Unit

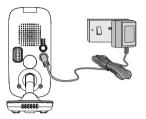


- Insert the DC plug of the power adapter into the DC socket on the back of the Baby Unit.
- Connect the other end of the power adapter to mains power.
- The Green power indicator lights when the baby unit is on.

Note:

Only use the power adapter (5VDC, 600mA) provided.

2.2 Installing battery and connecting Parent Unit to power

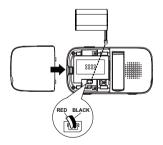





- be installed and charged, so that the Parent Unit can be moved without losing the link and picture from the Baby Unit(s). We recommend charging the parent unit for at least 16 hours before first use, and when the Parent Unit indicates the battery is low.
- Remove the battery compartment cover.
- Insert the plug of the battery pack into the socket inside the battery compartment, and fit the battery pack into the compartment.
- Replace the battery compartment cover, and pull out the desktop stand. (See section 2.4)

2.3 Connecting the Power Supply for the Parent Unit

- Insert the DC plug of the power adapter into the DC socket on the side of the Parent Unit.
 - Connect the other end of the power adapter to mains power.
 - Press and hold the power button **(**) to turn the Parent Unit On.

Note:

Only use the power adapter (5VDC, 600mA) and battery pack provided. The Parent Unit can work with the power adapter connected but without a battery pack installed. When the Baby Unit and Parent Unit are both turned on, the Parent Unit should show the colour image from the Baby Unit camera, but if the room is dark the image will be in black and white and with a) icon showing, due to the infra-red illumination by the Baby Unit.





2.4 Desktop Stand of the Parent Unit

- The parent unit comes with a desktop stand attached to the back of the parent unit.
- To place the parent unit on a desk, simply pull out the stand, as shown.





Place the parent unit on a flat, even surface.





3. Using the Baby Monitor

Please read these instructions carefully, and be aware that this baby monitor is only intended as an aid. It is not a substitute for responsible, correct parental supervision.

Note:

Do not place the Baby Unit within the baby's reach! If there is interference with the picture or sound, try moving the units to different locations, and ensure they are not close to other electrical equipment.

3.1 Power on or off the Parent Unit

Press and hold ${\bf \underline{0}}$ to turn on the Parent Unit. The Power indicator light turns on.

Press and hold ${\bf \Phi}$ again to turn off the Parent Unit. The Power indicator light turns off.

NOTE

If you place the parent and Baby Units too close together, you may hear echoing sounds and interference. This is not a fault. The units are designed to be operated at some distance apart, (e.g. in separate rooms) so move the units further apart.

3.2 Turn off the Parent Unit screen

You can turn on or off the Parent Unit screen without powering off the Parent Unit. You can still hear sound from the Baby Unit.

Short Press 🕐 on the Parent Unit to turn off the screen.

Press any key on the Parent Unit to turn on the screen again.

3.3 Night Vision Mode

The Baby Unit has infra-red LEDs for picking up clear images in the dark. When the built-in light sensor on the front of the unit detects a low level of ambient light, the LEDs will activate automatically and the screen on the Parent Unit will display in black and white. The) icon will be displayed at the top of the screen.





3.4 Adjust the speaker volume for Parent Unit

You can adjust the speaker volume from **Volume 1** to **Volume 5**, or turn it off. Press $\blacktriangle \square +$ or $\blacktriangledown \square +$ on the Parent Unit when it is in camera viewing mode. When the speaker volume is set to off, the screen displays $\square \times$.

3.5 Zoom

You can zoom in or out while viewing the image from Baby Unit.

- 1. Press ▶ 🗩 to zoom in.
- Press and hold ◄, ▶, , or ▲ q + or ▼ q to move the zoomed image left, right, up or down correspondingly.
- 3. Press ◀ to zoom out.

3.6 Set Night Light

- 1. Press \equiv when the Parent Unit is in camera viewing mode.
- 3. Press ▲ ♫+ or ♥ ♫- to choose **On**, then press button.

3.6.1 Night Light brightness control

 When ✓ (On) is selected, you can scroll ▲ □+ or ▼ □- to select ⁻Q⁻ and confirm with ● button. There are 3 brightness levels for selection.

3.6.2 Night Light colour control

- When ✓ (On) is selected, you can scroll ▲ ҵ+ or ▼ ҵ- to select () and confirm with ● button.
- Scroll ▲ Ϥ+ or ▼ Ϥ- to select one of the 7 colours or & auto looping.

3.6.3 Set timer for Night Light

- When the Night Light is On, press ▲ ↓ or ▼ ↓ to selecte ☆ and confirm with button, you can scroll ▲ ↓ or ▼ ↓ to select night light off after 5h~9h and confirm with button.
- Press ≡ to confirm and exit.





3.7 Adjust the LCD brightness of the Parent Unit

You can adjust the brightness of the Parent Unit screen from Level 1 to Level 5.

- 2. Press ▲ ↓ or ▼ ↓ to adjust the brightness.
- 3. Press button to confirm your selection.

3.8 Set the alarm on the Parent Unit

You can use the Parent Unit to set the alarm as a reminder for you to take care of your baby.

Turn on and set the alarm when it is currently off:

- 1. Press \equiv when the Parent Unit is in camera viewing mode.
- 2. Press ◀ or ▶ ⊕ to scroll to 🕥 and press button.
- 3. Press ▲ ↓ + or ▼ ↓ to choose ✓ (On), then press button.
- Press ▲ □+ or ▼ □- to choose 2h, 3h, 4h, 5h or 6h. (The default setting is Alarm OFF.)
- 5. Press button to confirm your selection.
- If an alarm time is selected () will appear on the display and, after the alarm time is reached, the parent unit will beep about every 10 seconds and flash the alarm icon, until any button is pressed.

3.9 Temperature Setting

- 1. Press the \equiv button and the menu bar will pop up.
- 2. Press the \triangleleft or $\blacktriangleright \oplus$ until $\frac{1}{2}$ is highlighted.
- 3. Press the button to show the temperature options.

The temperature setting (1) / (1) = 0 will pop up.

Temperature Format ∬^c - to select either Centigrage °C or Fahrenheit °F.

(25-39°C/7/-102°F) and Low temperature limit (10-24°C/50-76°F).





Temperature Alert () -Turn the temperature alert 🗸 (On) , the Parent

Unit will beep and display Temperature High 📗 or Temperature

Low 100 when the temperature at the Baby Unit is detected above or below the maximum or minimum temperature limits you set.

Press the ▲ □+ or ▼ □- to select your setting and confirm by pressing the
button.

3.10 Set the screen off time of the Parent Unit

You can set the screen off time of the Parent Unit after being in idle mode for a particular time interval.

- 1. Press \equiv when the Parent Unit is in camera viewing mode.
- 2. Press \blacktriangleleft or $\blacktriangleright \mathfrak{P}$ to scroll to \mathfrak{P} and press \bullet button.
- Press ▲ □+ or ▼ □- to select 60m, 30m, 5m or OFF for the parent unit video to turn off after 5 mins, 30 mins or 60 mins if no buttons have been pressed.
- 4. Press button to confirm your selection.
- 5. The audio will remain on, and you can press any button to turn the video screen back on.

Note:

If there are multiple cameras in scan mode, the audio will switch about every 30 seconds.

3.11 Pair and replace extra new Baby Unit

The Baby Units and Parent Unit provided are already paired. You can add or replace a Baby Unit in your video and audio monitoring system.

You can pair a maximum of four Baby Units to your Parent Unit. Each new Baby Unit must be paired to the Parent Unit before use.

To pair and replace a Baby Unit:

- 1. Press \equiv when the Parent Unit is in camera viewing mode.
- 2. Press \blacktriangleleft or $\blacktriangleright \oplus$ to scroll to \oplus and press \bullet button.





- Press ▲ □+ or ▼ □- to choose a desired Baby Unit number, then press button. The pairing mode starts.
- 4. Turn on the new Baby Unit, and then immediately press and hold Pair button until the Power/Link indicator turns on.

Note:

If you choose an occupied Baby Unit slot, the new Baby Unit will replace the existing Baby Unit.

3.12 Delete a Baby Unit

You can choose to remove a paired Baby Unit from the Parent Unit.

- 1. Press \equiv when the Parent Unit is in camera viewing mode.
- 3. Press ▲ I+ or ▼ I- to select the desired Baby Unit (Cam1, 2, 3 or 4).
- 4. Press \bullet button, then \triangleleft or $\blacktriangleright \mathfrak{S}$ to choose YES (\checkmark) or NO (X).
- 5. Press button to confirm your selection.

Note:

You cannot delete a Baby Unit if it is the only one paired.

3.13 Multi-Camera Use

Up to 4 cameras can be paired with the Parent Unit, and if more than one camera is linked to the Parent Unit, you can select which camera to view or set it in Patrol mode @c, where the Parent Unit automatically steps through the paired cameras about every 15 seconds.

Note:

The audio from a camera is only heard at the Parent Unit when that camera is selected.

To change the camera being viewed:

1. Press • button when the Parent Unit is in camera viewing mode to step through the paired cameras, 1, 2, 3, 4, C, with the selected option shown on the screen.





4. Disposal of the Device (environment)

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.

Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

The internal battery should be disposed of with the Parent unit in an environmentally-friendly manner according to your local regulations.





5. Cleaning

Clean the Baby Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals – this may cause permanent damage to the product which is not covered by the warranty.
- Keep the Baby Monitor away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself contact Customer Service for assistance.

IMPORTANT

Always switch off and disconnect the power adapter before cleaning your baby monitor.





6. Troubleshooting

Power Indicator on the Parent Unit does not come on

- Check whether the Parent Unit is powered on.
- Check whether the battery pack supplied is correctly installed and that they are not drained.
- Recharge the Parent Unit by connecting it to the power supply.

Power/Link Indicator on the Baby Unit flashes

- The Baby Unit may not be paired to the Parent Unit. Refer to section 3.10 to pair the Baby Unit.
- The Parent Unit and the Baby Unit may be out of range with each other. Reduce the distance between the units, but not closer than 1 metre.
- The Baby Unit may be switched off. Slide the ON-OFF switch on the Baby Unit to the ON position.

light on the Parent Unit flashes

• Battery pack in the Parent Unit is running low. Connect the Parent Unit to the mains power with the supplied power adapter for recharging.

The Parent Unit beeps

- The Parent Unit may have lost connection with the monitoring Baby Unit. Reduce the distance between the Parent Unit and the Baby Unit, but not closer than 1 metre.
- The Baby Unit may be switched off. Slide the ON-OFF switch on the Baby Unit to the ON position.
- Battery pack in Parent Unit is running low. Connect the Parent Unit to the mains power with the supplied power adapter for recharging.





Cannot hear sound or baby crying from the Parent Unit

- The volume level in the Parent Unit may be set too low. Increase the volume level of the Parent Unit. Refer to section 3.4 for volume level settings.
- The Parent Unit and the monitoring Baby Unit may be out of range with each other. Reduce the distance between the units, but not closer than 1 metre.

The baby monitor system produces a high-pitched noise

- The Parent Unit and the Baby Unit are too close to each other. Make sure the Parent Unit and Baby Unit are at least 1 metre away from each other.
- The speaker volume of the Parent Unit may be set too high. Decrease the volume of the Parent Unit.

Battery pack in the Parent Unit is running low quickly

- The LCD brightness may be set too high. Try to decrease the brightness level. Refer to section 3.5 for details.
- The volume level of the Parent Unit may be set too high which consumes power. Decrease the volume level of the Parent Unit. Refer to section 3.4 for volume level settings.

Parent Unit image is not in colour

 The Baby Unit is in a dark room, which causes the infra-red illumination to turn on and the picture image to change from colour to black and white. When the light increases in the Baby Unit room, the picture will return to colour.





7. General Information

If your product is not working properly, read this User Guide. Contact Customer Service:

+44 (0) 844 557 9677 (UK only)*

(*Calls cost 7p per minute plus your telephone company's access charge) https://support.hubbleconnected.com

Consumer Products and Accessories Limited Warranty ("Warranty") Thank you for purchasing this Hubble Smart Nursery branded product manufactured by Hubble Baby (HK) Limited ("HUBBLE").

What Does this Limited Warranty Cover?

Subject to the items listed below in the section "What is not Covered" HUBBLE warrants that this Hubble connected branded product ("Product") will be free from defects in material and workmanship under normal use for a period of 1 year from the date of purchase and that any certified accessory ("Accessory") sold for use with this product will be free from defects in materials and workmanship under normal use for a period of 90-days from the date of purchase. This Limited Warranty is your exclusive warranty and is not transferable.

What is not covered?

This Limited Warranty excludes and does not cover:

- Normal deterioration or wear resulting from use;
- Damage caused by or resulting from misuse, abuse, or accident;
- Damage caused by or resulting from improper operation or storage;
- Damage caused by or resulting from contact with foreign substances, including, but not limited, to liquid, water, rain, humidity, perspiration, sand, dirt, and/or food;
- Damage caused by or resulting from the use of Non-Hubble Smart Nursery branded or certified Products or Accessories or other peripheral equipment;





- Damage caused by or resulting from modifications, alterations, tampering, improper installation, or repairs by someone other than Hubble connected or their authorized representatives;
- Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories; and,
- Periodic maintenance, repair and replacement of parts due to normal wear and tear.

What Other Limitations Are There?

THIS LIMITED WARRANTY SETS FORTH THE ENTIRE LIABILITY OF HUBBLE AND CONTAINS YOUR SOLE AND EXCLUSIVE REMEDY. OTHER THAN THIS LIMITED WARRANTY, HUBBLE MAKES NO ADDITIONAL REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, JE YOUR STATE DOES NOT PERMIT THE DISCLAIMER OF WARRANTIES, THEN THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS LIMITED WARRANTY REPAIR OR REPLACEMENT IS YOUR SOLE AND EXCLUSIVE REMEDY AGAINST HUBBLE AND Hubble Smart Nursery. IN NO EVENT SHALL HUBBLE OR Hubble Smart Nursery's LIABILITY TO REPAIR OR REPLACE YOUR PRODUCT OR ACCESSORY EXCEED THE ORIGINAL PURCHASE PRICE OF THE PRODUCT AND ACCESSORY AND HUBBLE AND Hubble Smart Nursery's TOTAL LIABILITY FOR DAMAGES ARISING FROM THIS LIMITED WARRANTY SHALL NOT EXCEED THE PRICE YOU PAID FOR THE PRODUCT AND ACCESSORY REGARDLESS OF WHETHER SUCH CLAIM ARISES UNDER CONTRACT, STATUTE, TORT OR OTHERWISE, IN NO EVENT AND UNDER NO CIRCUMSTANCES WILL HUBBLE OR Hubble Smart Nursery BE LIABLE FOR DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND. OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE





THE PRODUCTS OR ACCESSORIES. ALL DISCLAIMERS, LIMITATIONS OF LIABILITY AND MODIFICAITONS OF WARRANTIES STILL APPLY EVEN IF THE LIMITED REMEDY OF REPAIR AND REPLACEMENT FAILS OF ITS ESSENTIAL PURPOSE.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights, and you may have other rights that vary from one jurisdiction to another.

Who is covered?

This Warranty extends only to the first consumer purchaser and is not transferable.

What will HUBBLE do?

HUBBLE or its authorized distributor at its sole discretion will, at no charge, repair or replace any Products or Accessories that do not conform to this Warranty. In the event that replacement is necessary to remedy a defect in material or workmanship, HUBBLE may use new or remanufactured products, accessories or parts of equal quality to the original Product or Accessory.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please contact us by:

+44 (0) 844 557 9677 (UK only)*

(*Calls cost 7p per minute plus your telephone company's access charge) https://support.hubbleconnected.com

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a HUBBLE Authorized Repair Center. You must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, (e) your name, address, email address and telephone number.





These terms and conditions constitute the complete warranty agreement between you and HUBBLE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by HUBBLE or representations made by any agent, employee or staff of HUBBLE, that may have been made in connection with your purchase of any Product and/or Accessory.

UKCA DECLARATION

The product is in conformity with the essential requirements of Article 3.1 (a) the protection of the health, property and safety, 3.1 (b) an adequate level of electromagnetic compatibility and 3.2 effective use of the spectrum of Radio Equipment Directive 2014/53/EU which has been implemented into UK law with effect from 26 December 2017 by way of the Radio Equipment Regulations 2017.

Download User Guide from website: support.hubbleconnected.com





8. Technical Specifications

Baby Unit

Frequency	2400 MHz to 2483.5 MHz
Operating temperature	0°C - 40°C
Image sensor	Colour CMOS 0.3M Pixels
Maximum RF Power	20dBm
Power Adapater	Input 100-240VAC, 50/60Hz, 150mA Output DC5V, 600mA WARNING Use only with supplied power supply.





Parent Unit

Frequency	2400 MHz to 2483.5 MHz	sh sh
Operating temperature	0°C - 40°C	English
Display	2.8" diagonal TFT LCD	
Maximum RF Power	20dBm	
Brightness control	5 steps	
Power Adapter	Input 100-240VAC, 50/60Hz, 150mA Output DC5V, 600mAh WARNING Use only with provided power supply.	
Battery rating	GP80AAAHC3BMXZ (GPI) or JHAAA800P3H (JUSTHIGH) 3.6V 800mAh Ni-MH rechargeable battery pack WARNING Do not use non-rechargeable batteries for the Parent Unit. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.	

Specifications are subject to change without prior notice.





Manufactured, distributed and sold by Hubble Baby (HK) Limited. All rights reserved.

Printed in China CECU UK LEN Version 2.0