

# BUSH

## Customer Service Manual

### Washing Machine

WMSAEINT712W

WMSAEINT812W



# Customer service manual

## BUSH WMSAEINT Series Washing Machine 7,8 Kg

### Contents

<b>1</b>	<b>Precautions</b>	<b>Page 2</b>
<b>2</b>	<b>Tub Bellow Seal</b>	<b>Page 4</b>
<b>3</b>	<b>Detergent Drawer</b>	<b>Page 11</b>
<b>4</b>	<b>Door Lock</b>	<b>Page 12</b>
<b>5</b>	<b>Drain Pump</b>	<b>Page 14</b>
<b>6</b>	<b>Heater</b>	<b>Page 20</b>
<b>7</b>	<b>Door, Hinge, Handle</b>	<b>Page 26</b>
<b>8</b>	<b>Additional Support</b>	<b>Page 29</b>

#### **Precautions:**

Always follow safety advice.


Always switch off and unplug the appliance before attempting to remove any part.

Always wear appropriate protective equipment when carrying out any work.

Always use the correct tools for carrying out any work.

Some repairs may not be suitable for unqualified users to carry out. If in doubt seek the advice of a profession repairer.

## SAFETY PRECAUTIONS



Before any disassembly/repair operation make sure appliance is unplugged, water tap is closed and heating elements are cooled down. There is electrical shock, burning and flood risk.



Please replace whole cable group even in case there is any minor failure with cables / terminals / sockets. Never try to repair nor to solder cable group. It may cause smoke, ignition and there is major risk of electrical shock.



Straightly pull out or insert the terminals.  
Do not twist it. It may be the cause of damage or ignition.



Always use insulator gloves to prevent injury by metal edges or to prevent electrical shock during electrical tests.  
Work with uniforms having long sleeves to protect your arms from metal edges.



Always use original spare parts. You may harm appliance, end user, environment or yourself using untested and unapproved 3rd party spare parts.






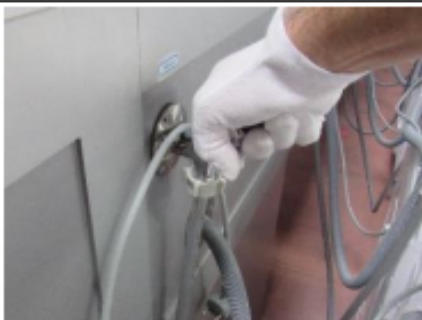

Use right tools to prevent any wear or damage to components during assembly/disassembly.


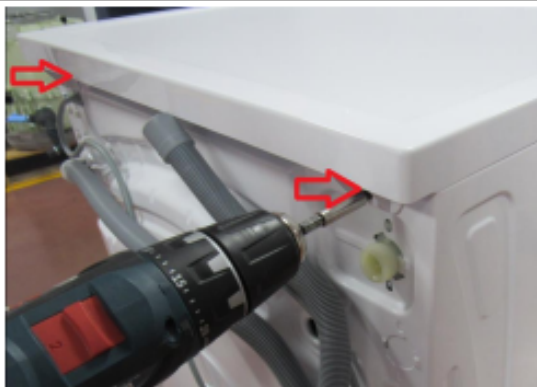

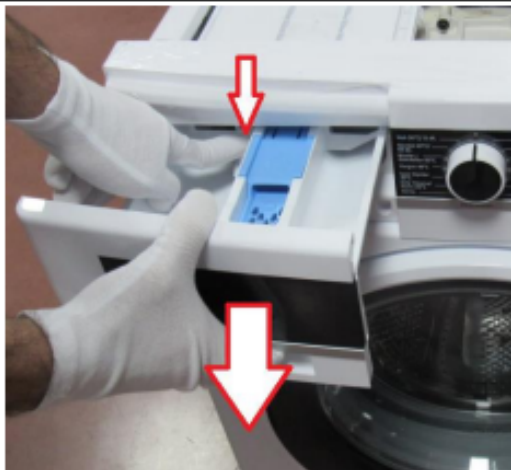



Do not touch any rotating object with hand unless it stops completely. Slow rotation may also roll in your hands and cause injury.





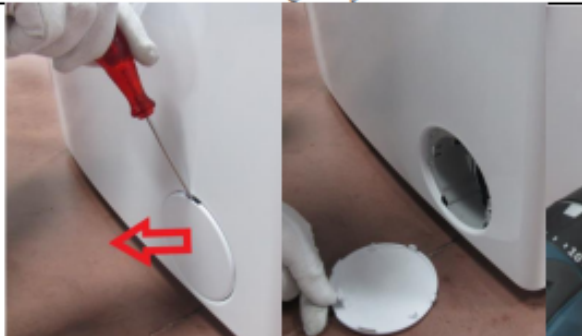







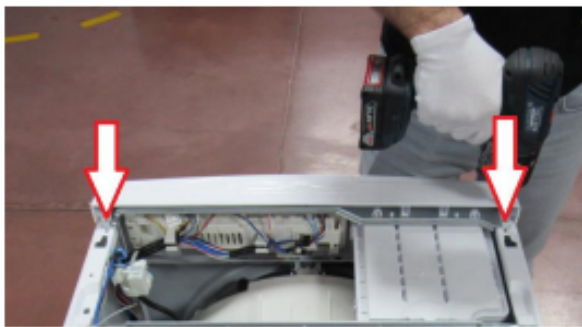


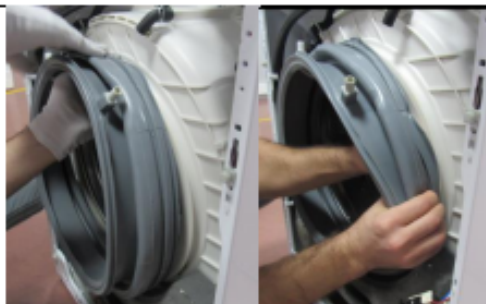
Rebuilding is prohibited. Do not rebuild machine parts and components when repairing service. It may be the cause of damage or ignition.



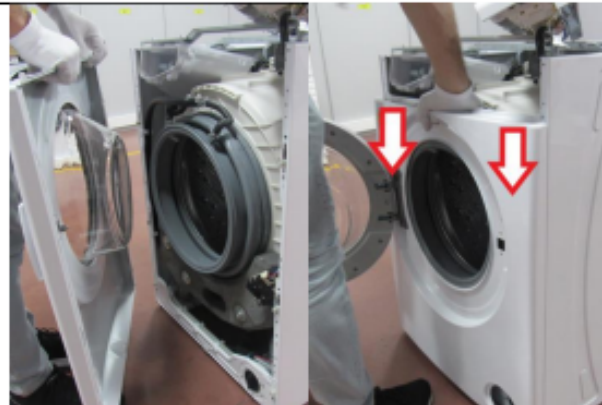


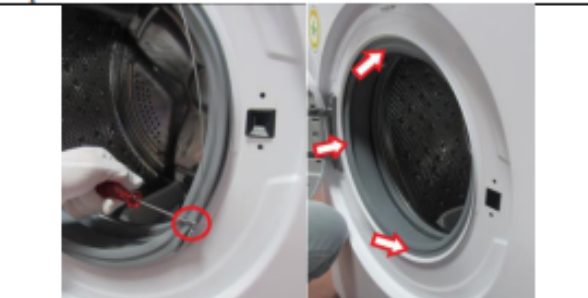
REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Tub Bellow Seal	General	
1. Necessary Tools			
		<div>A. Pliers</div> <div>B. Flat head thin screwdriver</div> <div>C. Cordless screwdriver or classic screwdriver with torx bits (T20)</div>	
2. Disconnection			
			
2.1. Remove the plug			
			
2.2. Turn off the tap and disconnect the hose from the valve			

REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Tub Bellow Seal	General	
			
2.3. Turn off the tap and disconnect the hose from the valve			
3. Disassembly Instructions			
			
3.1. Turn off the tap and disconnect the hose from the valve		3.2. Push the top-plate back and pull it up.	
			
3.3. While pressing siphon cover keep pulling drawer to remove it.		3.4 Remove the screw which fixes the control panel to the front panel.	






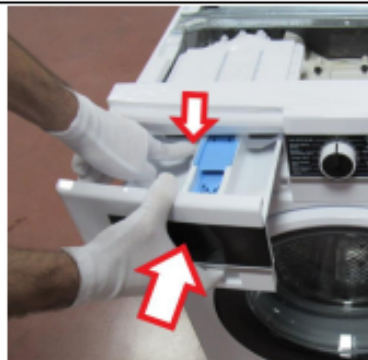


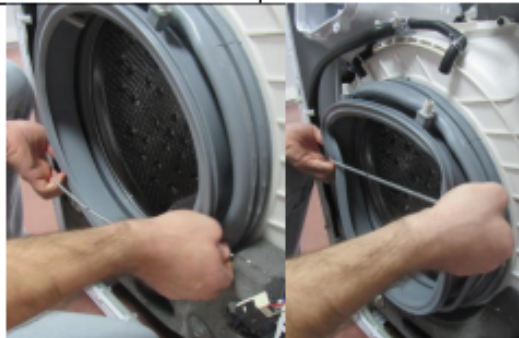
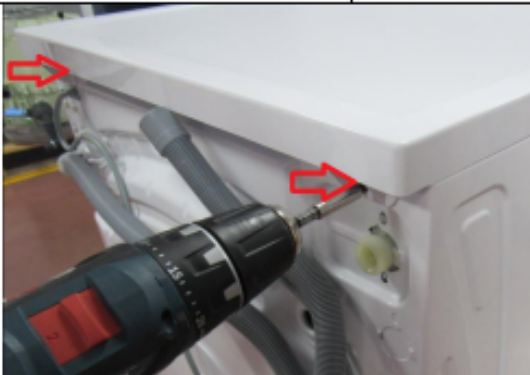
REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Tub Bellow Seal	General	
			
3.5 Remove two screws fixing control panel.		3.6 Remove the screw on support bracket and two screws fixing front panel to body	
			
3.7 Remove the screw fixing twinjet elbow.		3.8 Remove the screws fixing the door lock.	
			
3.9 Remove the screw and plastic part located under the pump cover			
			
3.10 Remove the screw fixing the front panel at the bottom.		3.11 Remove the wire by using small screwdriver and push the seal to the inside	



REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Tub Bellow Seal	General	
			
3.12 Pull up and remove the front panel.		3.13 Remove twinjet hoses from tub bellow seal pulling them up.	
			
3.14 Remove the tub gasket clip by using small screwdriver.			
			
3.15 Hold the gasket bellows and the gasket body pull out in and out at the same time.			
4. Assembly Instructions			
			
4.1. Guides must be matched		4.2. Fit the tub bellow seal to the front tub	



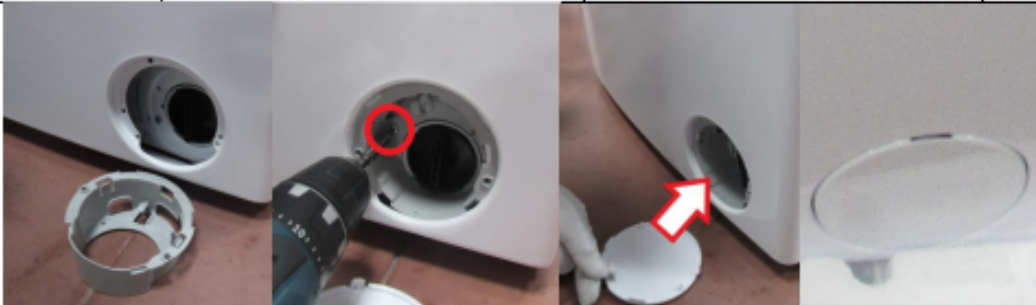

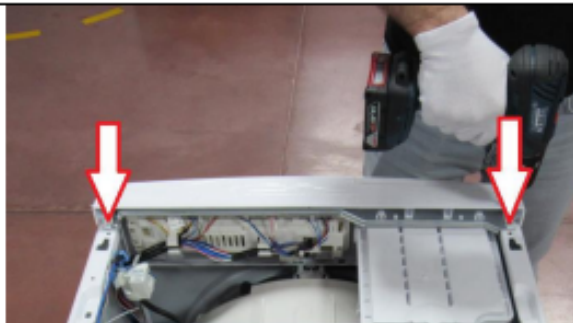
REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Tub Bellow Seal	General	
			
4.3. Pull the tub gasket clip to the up by hand and fit it		4.4. Assemble the twinjet nozes and tighten the clips	
			
4.5. Put the front panel to the cabinet and push down to set it		4.6. Tighten the door lock screw	
			
4.7. Pull the tub bellow seal to the outside and assemble the wire by using small screwdriver		4.8. Tighten the screw fixing the front panel at the bottom	



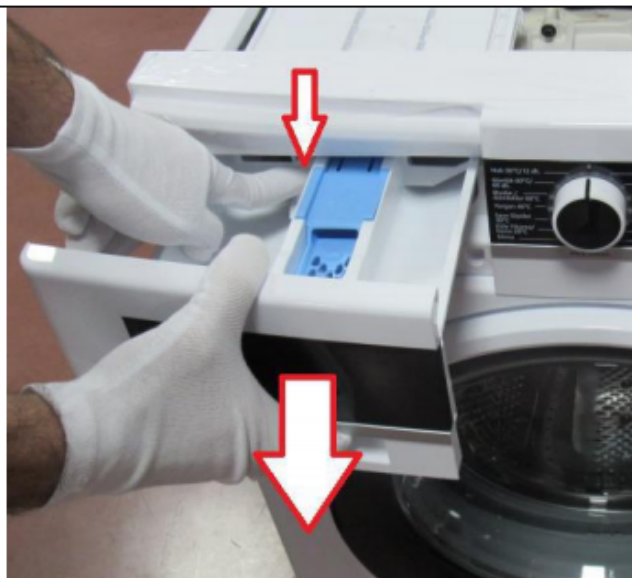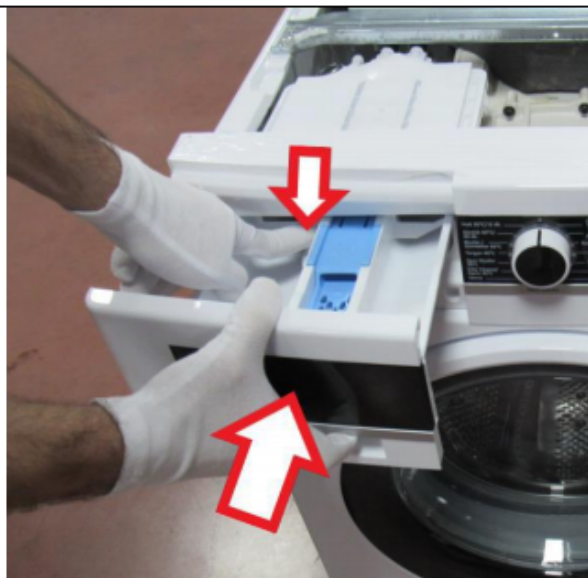



REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Tub Bellow Seal	General	
			
4.9. Fit the screw and plastic part located under the pump cover			
			
4.10. Assemble the twinjet elbow to the front panel		4.11. Tighten the screw on support bracket and two screws fixing front panel to body	
			
4.12. Tighten two screws fixing control panel.		4.13. Tighten the screw which fixes the control panel to the front panel.	
			
4.14. While pressing siphon cover keep pushing drawer to fit		4.15. Fit the upper tray according to movement above	

REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Tub Bellow Seal	General	
			
4.16. Tighten two screws that fix the top-plate at the back.			

REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Detergent Drawer	General	
1. Disassembly Instructions		2. Assembly Instructions	
			
1.1. While pressing siphon cover keep pulling drawer to remove it.		2.1. While pressing siphon cover keep pushing drawer to fit	


REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Door Lock	General	
1. <u>Necessary Tools</u>			
		<p>A) Flat head thin screwdriver B) Torx T20 C) Cordless screwdriver or classic screwdriver to use torx head (T20)</p>	
2. <u>Disconnection</u>			
			
Remove the plug			
3. <u>Disassembly Instructions</u>			
			
3.1. Remove the screws fixing the door lock.		3.2. Remove the wire by using small screwdriver	






REPLACEMENT PROCEDURE		Applicable models	EN
Part name		General	
Door Lock			
			
3.3. Remove the right side of the tub bellows seal and reach to door lock			
4. Assembly Instructions			
			
4.1. Unplug the connector and remove the door lock. Connect the new door lock to connector		4.2. While supporting the door lock by hand, tighten the screws fixing the door lock.	
			
4.3. Fix the tub bellow seal and fix the wire by using the small screwdriver			

REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Pump	General	

#### Necessary Tools



	<p>A) Plier B) Flat head thin screwdriver C) Cordless screwdriver or classic screwdriver with torx head (T20)</p>
---	---

#### 1. Disconnection


	
<p>1.1. Remove the plug</p> 	<p>1.2. Turn off the tap and disconnect the hose from the valve</p>

#### 1.3. Disconnect the drain hose


#### 2) Disassembly Instructions

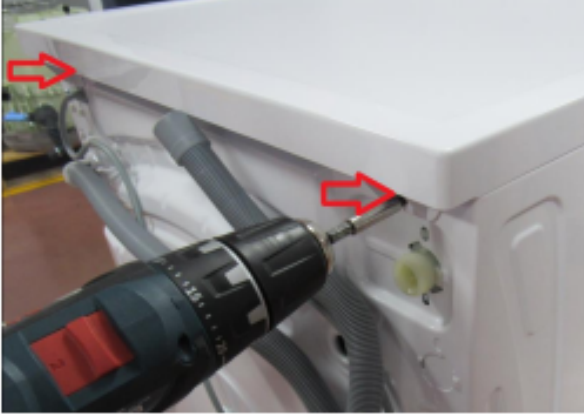	
<p>2.1. Remove two screws that fix the top-plate at the back.</p>	<p>2.2. Push the top-plate back and pull it up.</p>

REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Pump	General	

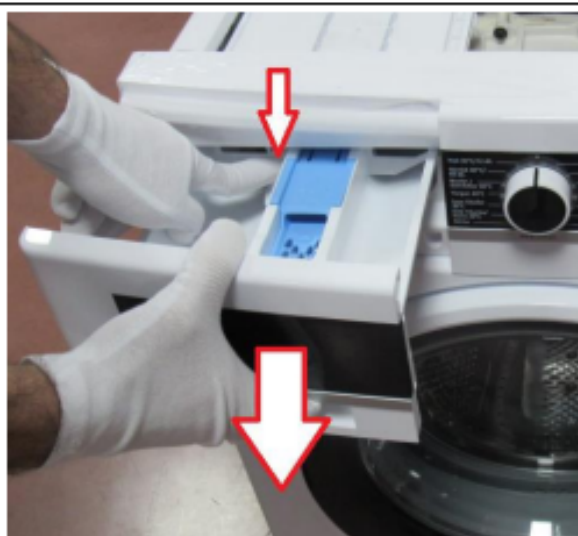

2.3. While pressing siphon cover keep pulling drawer to remove it.

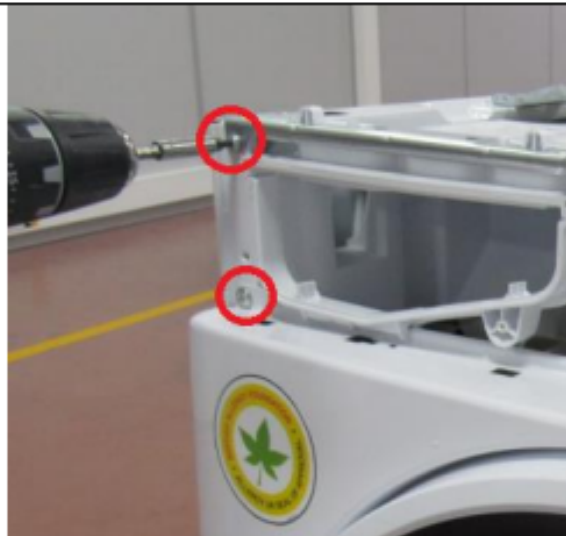

2.4. Remove the screw on support bracket and two screws fixing front panel to body



2.5. Remove the screw fixing twinjet elbow.


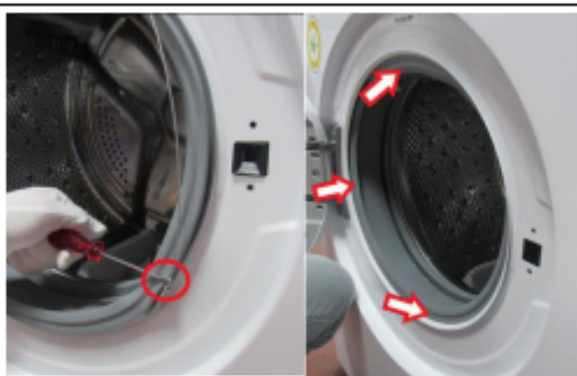

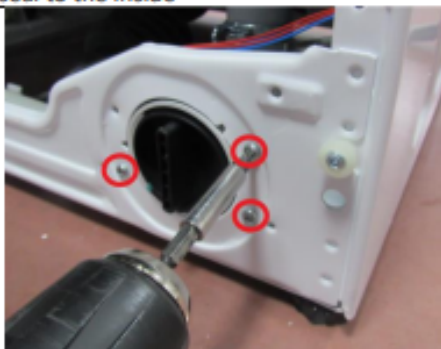
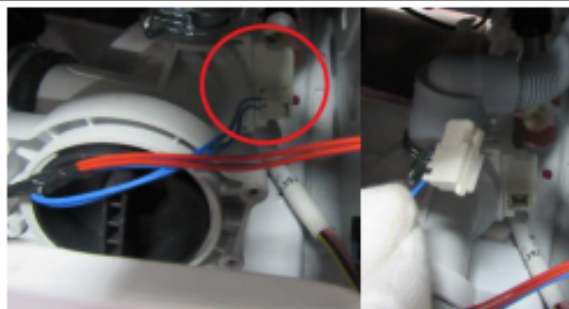





2.6. Remove the screws fixing the door lock.










2.7. Remove the screw and plastic part located under the pump cover




REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Pump	General	
			
2.8. Remove the screw fixing the front panel at the bottom.		2.9. Remove the wire by using small screwdriver and push the seal to the inside	
			
2.10. Pull up and remove the front panel.		2.11. Remove screws holding drain pump	
			
2.12. Remove the drain pump connector		2.13. Remove clamp fixing tub outlet hose by using a plier	
			
2.14. Remove clamp holding drain hose by using a plier.		2.15. Remove clamp holding twinjet hose by using a plier.	

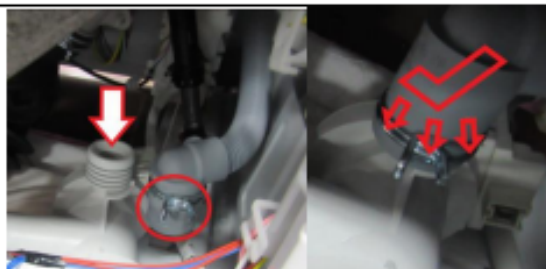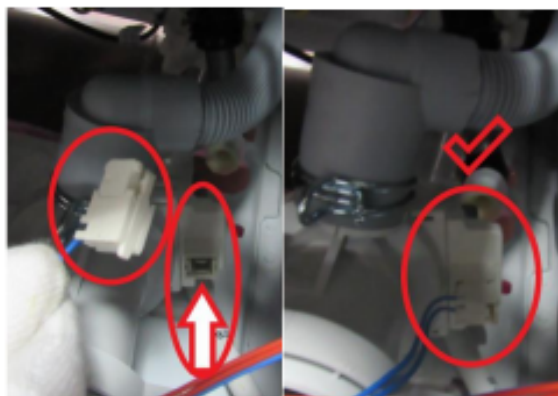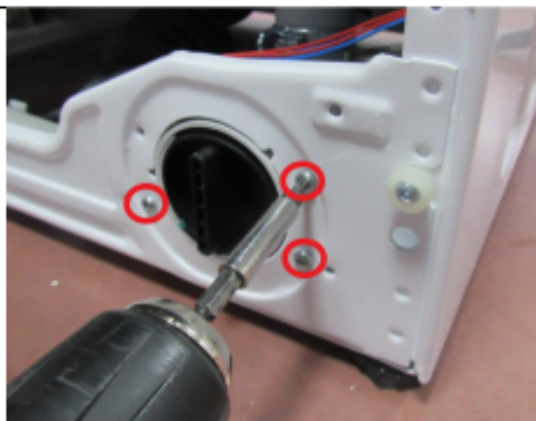


REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Pump	General	
			
2.16. Remove the drain pump and change with the new one			
3. Assembly Instructions			
			
3.1. Connect the twinjet hose by using a plier to fix the clamp		3.2. Connect the drain hose by using a plier to fix the clamp	
			
3.3. Connect the drain pump connector		3.4. Tighten the screws holding drain pump	
			
3.5. Pull the tub bellow seal to the outside and assemble the wire by using small screwdriver		3.6. Tighten the screw fixing the front panel at the bottom	

REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Pump	General	

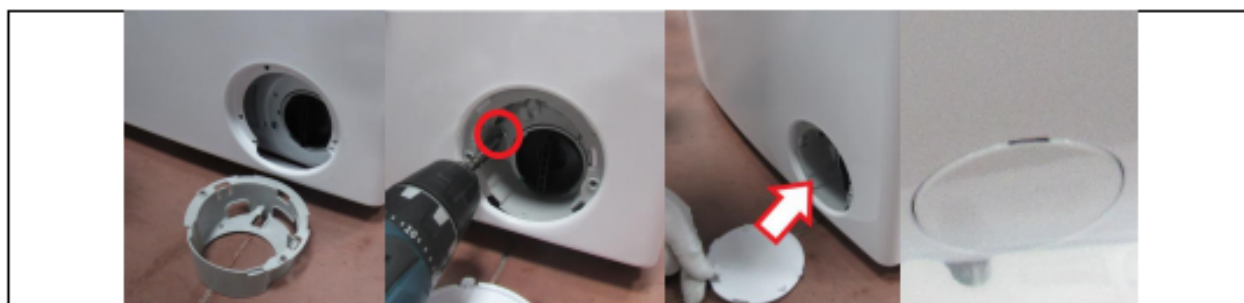

3.7. Tighten the screw and plastic part located under the pump cover

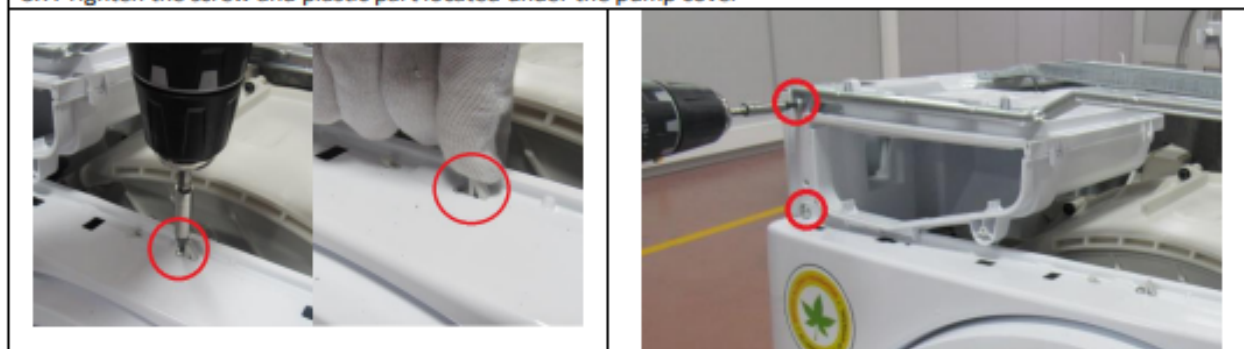

3.8. Assemble the twinjet elbow to the front panel

3.9. Tighten the screw on support bracket and two screws fixing front panel to body



3.10. Tighten two screws fixing control panel.


3.11. Tighten the screw which fixes the control panel to the front panel.



3.12. While pressing siphon cover keep pushing

3.13. Fit the upper tray according to movement above

REPLACEMENT PROCEDURE		Applicable models	EN
Part name	Pump	General	

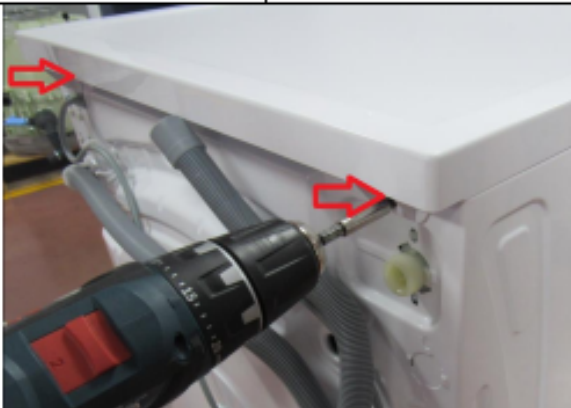drawer to fit it.		
		
3.14. Tighten two screws that fix the top-plate at the back		



REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	HEATER		

### HEATER REPAIR INSTRUCTION

#### 1. Disconnection



*Remove the plug*



*Turn off the tap and disconnect the hose from the valve*



*Disconnect the drain hose*

#### 2. Necessary Tools



A. Plier

B. Flat head screwdriver

C. Ratchet Wrench with 18 head


#### 3. Disassembly Instructions



*Remove two screws that fix the top-plate at the back.*



*Push the top-plate back and pull it up.*

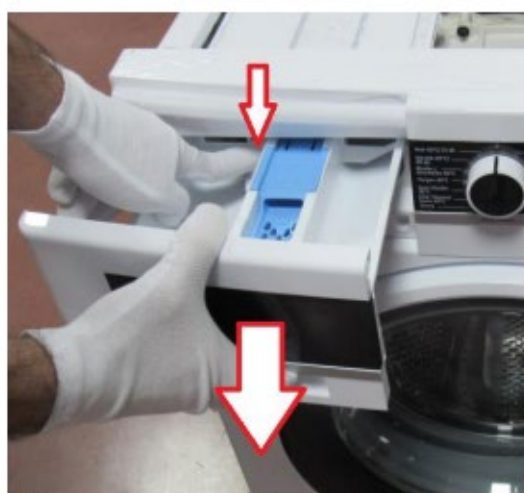

*While pressing siphon cover keep pulling drawer to remove it.*



## HEATER REPAIR INSTRUCTION



*Remove the screw which fixes the control panel to the front panel.*



*Remove two screws fixing control panel.*




*Remove the screw on support bracket and two screws fixing front panel to body*



*Remove the screw fixing twinjet elbow.*



*Remove the screws fixing the door lock.*

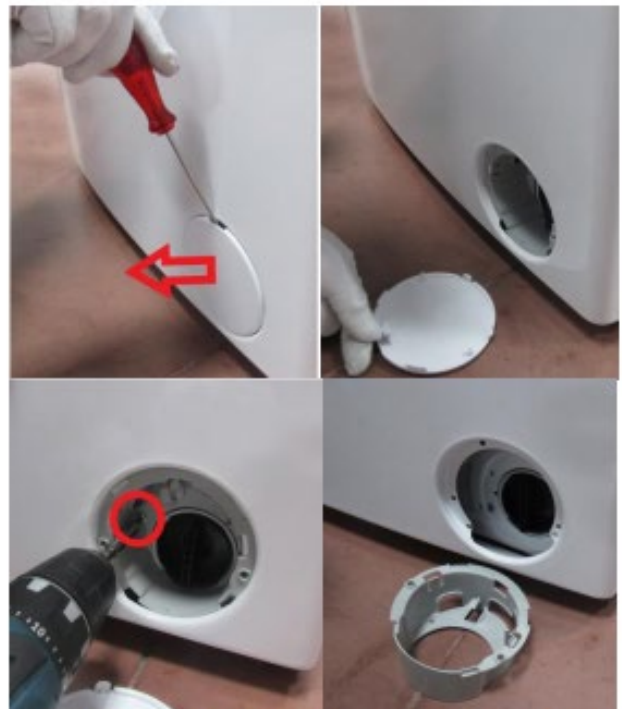


*Remove the screw and plastic part located under the pump cover*

## HEATER REPAIR INSTRUCTION




*Remove the screw fixing the front panel at the bottom.*

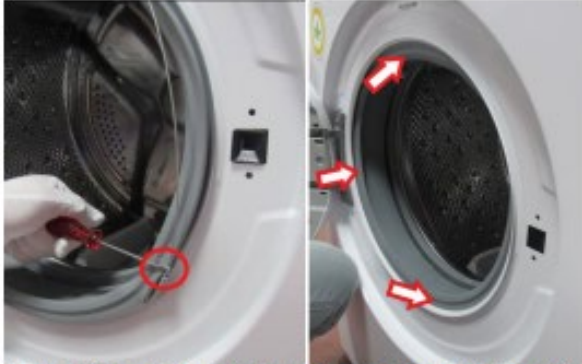

*Remove the wire by using small screwdriver and push the seal to the inside*



*Pull up and remove the front panel.*


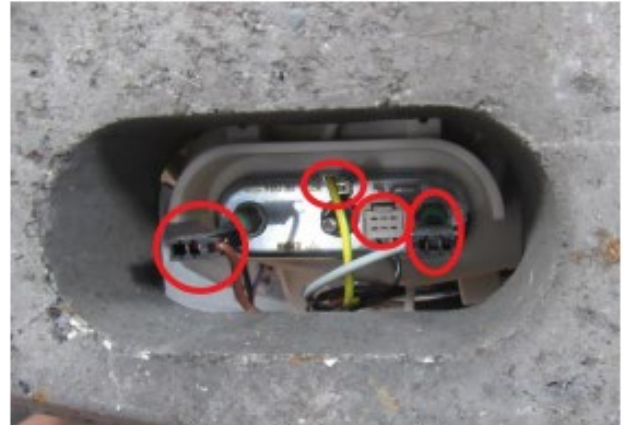


*Remove the heater sockets*






## HEATER REPAIR INSTRUCTION

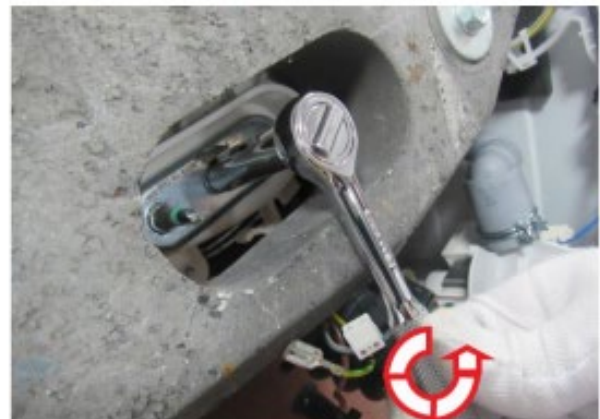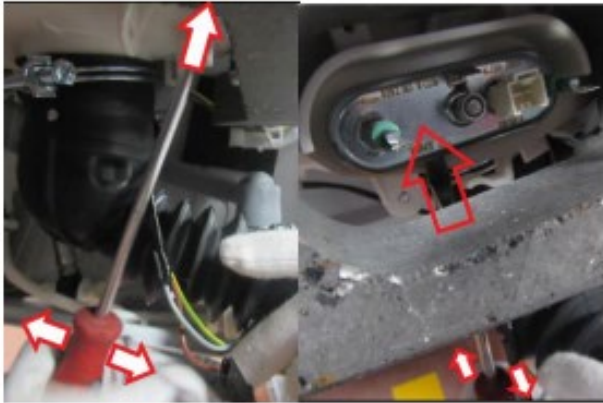

### 4. Assembly Instructions



## HEATER REPAIR INSTRUCTION

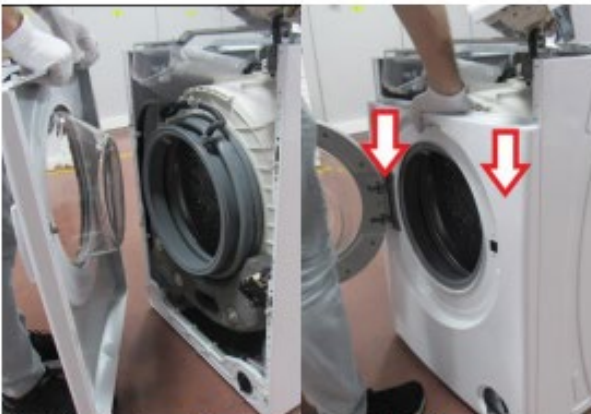

*Put the front panel to the cabinet and push down to set it*



*Tighten the door lock screw*



*Pull the tub bellow seal to the outside and assemble the wire by using small screwdriver*



*Tighten the screw fixing the front panel at the bottom*





## HEATER REPAIR INSTRUCTION

*Tighten the screw and plastic part located under the pump cover*



*Assemble the twinjet elbow to the front panel*




*Tighten the screw on support bracket and two screws fixing front panel to body*



*Tighten two screws fixing control panel.*



*Tighten the screw which fixes the control panel to the front panel.*

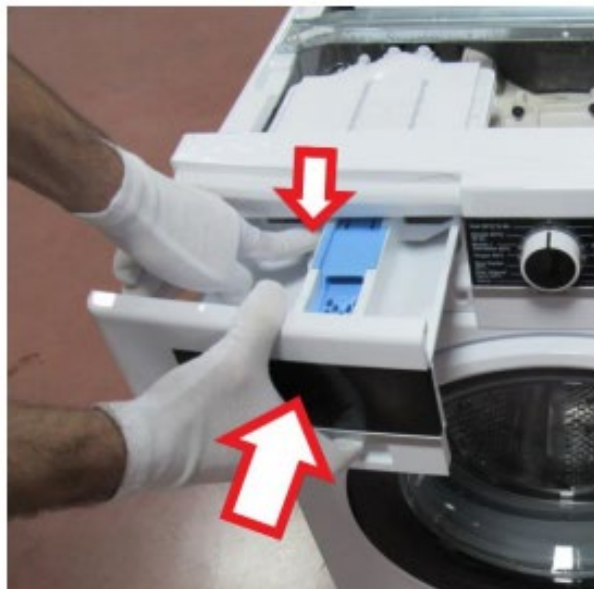

*While pressing siphon cover keep pushing drawer to fit it*



*Fit the upper tray according to movement above*



*Tighten two screws that fix the top-plate at the back.*

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Door, Hinge, Handle		

#### Necessary Tools










- A) Plier
- B) Flat head thin screwdriver
- C) Cordless screwdriver or classic screwdriver with torx head (T25)

#### 1. Disconnection



Remove the plug

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Door, Hinge, Handle		

1. Remove two screws that fix the door. (by using the T25)		
	<p>T 25</p> <div>   </div>	
2. Pull the door up.	3. Remove screws that fix the door group.	
		
4. Put the door outside plastic with helping screwdriver as it is shown in the picture	5. Remove the door inside plastic as it is shown in the picture.	
		

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Door, Hinge, Handle		

6. Remove six screws that fix the door hinge as it is shown in the picture



7. Remove the door handle as it is shown in the picture



8. Remove the door handle pin as it is shown in the picture.





<b>ADDITIONAL SUPPORT</b>	<b>Applicable models</b>	<b>EN</b>
	<b>General</b>	

The following parts are available for the customer to undertake repairs at their own risk.  
Please carefully follow the guidance given in this manual including all safety measures.

- Door
- Door hinge and seals
- Other seals
- Door locking assembly
- Plastic peripherals such as detergent dispensers

Parts can be obtained by calling the support service listed in this section.  
All repairs in this manual can be achieved using commonly available tools.

If you are in any doubt of your ability to carry out a repair, please use a professional repairer, also available through the support service.

Damage sustained to the appliance or future faults arising from poorly carried out repairs will not be covered under warranty.

## Help and assistance

If you require any technical guidance or find that your washing machine is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.bush-support.com](http://www.bush-support.com)

If you still require further assistance, call one of our experts on **0345 257 7271\***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

## Notes on disposal :



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.