# **DOOR GASKET**

B<u>US</u>H



**GENERAL METHOD TO REPLACE GASKET** 



Step 1

Pull gasket out from the corner.



Step 2

Install a new gasket, starting from the corner.




### Step 3

Make sure base of gasket is pressed into trough completely.



### Step 4

Make sure gasket is properly aligned with edges of trough.

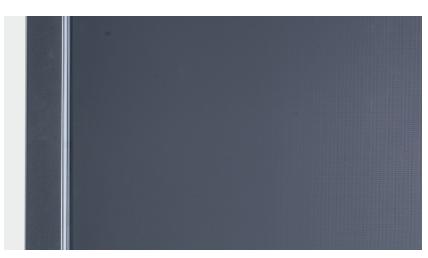

## Step 5


After closing the door, make sure gasket is well attached to door.

Note

# 8.3 RELIABILITY COMPONENTS: **HINGE IS DAMAGED**



**BUSH** 

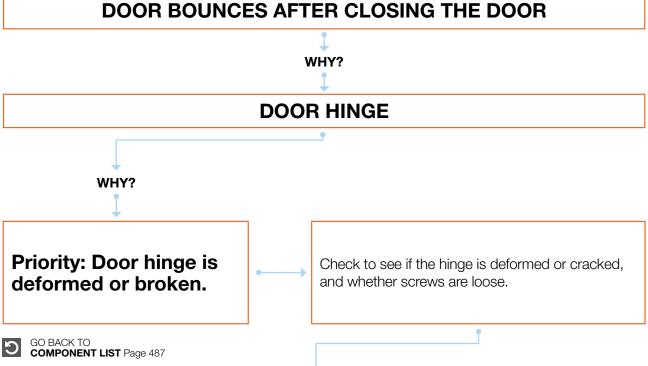

#### Follow technical sheet below to start to check





8mm Inner Hexagon Spanner

10mm Inner Hexagon Spanner



6×300 Slotted Screw Driver



6×300 Cross-head Screw driver



2×100 Slotted Screw Driver





**CHECK TO SEE IF** THE HINGE IS DEFORMED OR CRACKED, AND WHETHER SCREWS ARE LOOSE.



Follow procedures below to replace the hinge and drive the screw in.



**PROCEDURES FOR** REPLACING THE DOOR.

Step 1

Remove the top cover

Step 2

Unscrew









Step 3

Remove top cover.



Step 4

Unscrew 3 bolts and remove the door hinge.



Step 5

Remove upper door.



Step 6

Unscrew 2 bolts and remove the middle hinge



Step 7

Remove bottom door.

Step 8 Tilt cabinet by 10

degrees.



Step 9

Unscrew the adjustable foot.



Step 10

Unscrew 2 bolts and remove bottom hinge.

Reverse procedure above to reinstall or replace hinges and doors, however, please pay attention to points below:



#### Tip 1

Don't forget to add washer onto hinge pin.

Tip 2

When installing door onto hinge, please check the alignment of doorstopper and hinge.




## Tip 3

Make sure gasket is properly attached.



### Tip 4

Make sure gaps between doors are even.

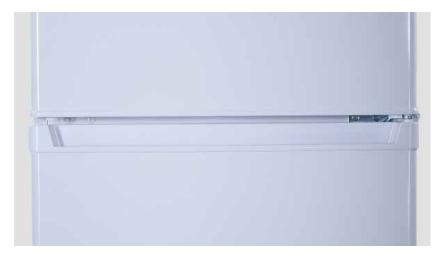


Note	
	······································

# 9.4 APPEARANCE FAULTS: **INTERNAL ACCESSORIES ARE DAMAGED**

APPEARANCE / INTERNAL ACCESSORIES ARE DAMAGED


**BUSH** 



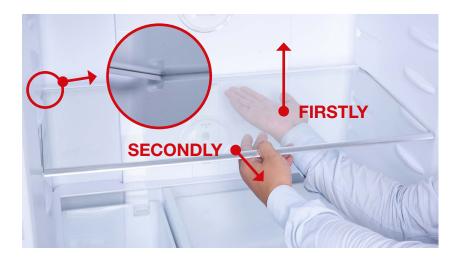

### Step 1

Remove shelves.

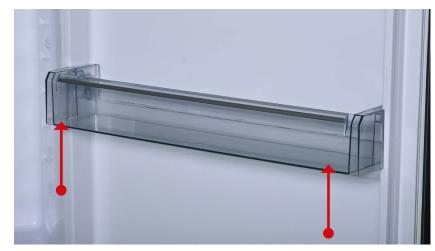

#### Step 2

Repeatedly alternate pushing left and right ends to remove balconies.

Note