
Atlas - Single Robe Carcass

Assembly Instructions - Please keep for future reference

152/9432

157/2537

157/9107

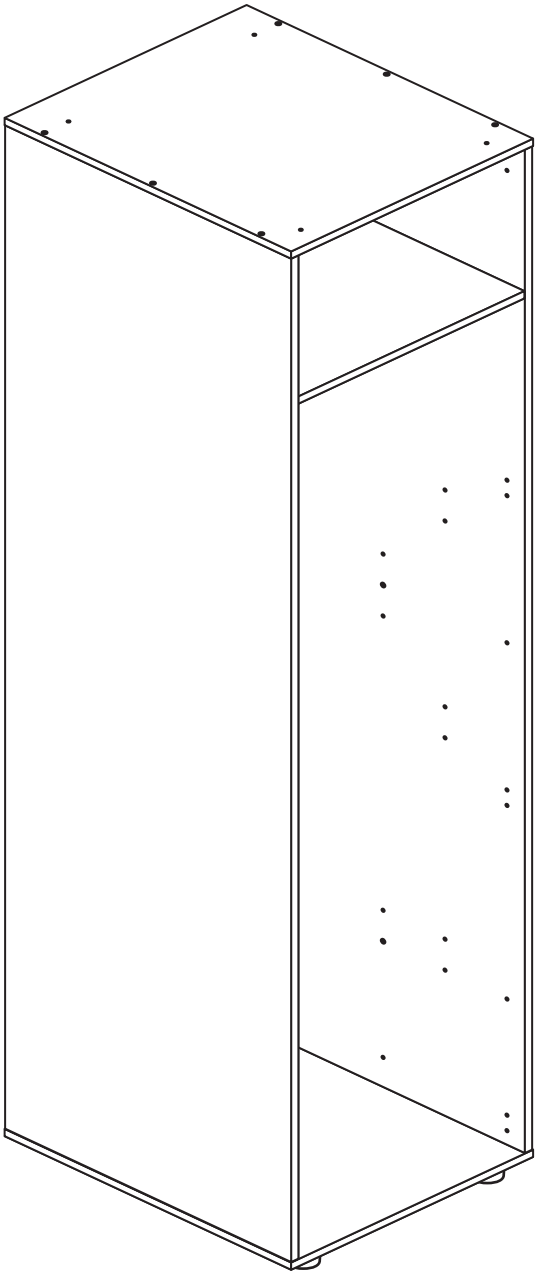

Dimensions
Width - 50cm
Depth - 59.5cm
Height - 212.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 05/02/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 34kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

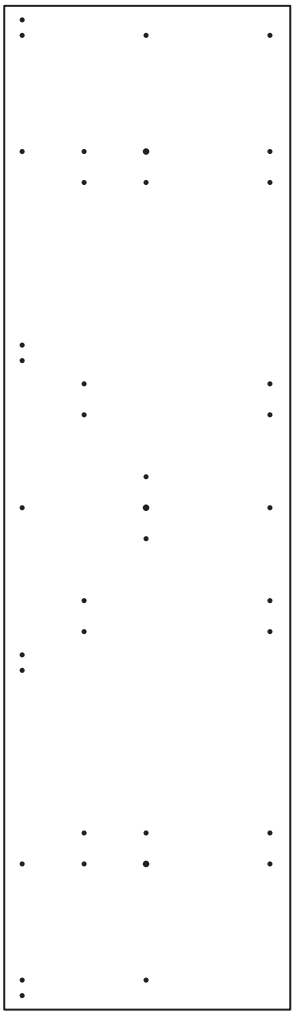

1 Universal End *(D2396A)*
(2074 x 591mm) x 2

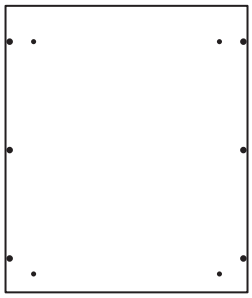


2 Top/Base *(D2399A)*
(500 x 592mm) x 2

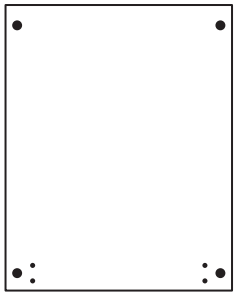

3 Fixed Shelf *(D2401A)*
(468 x 590mm)

4 Hanging Rail *(FHR460)*
(460mm long) x 2




5 Back *(X2100-494)*
(2100 x 494mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 


Wooden dowel *(F22)* x 2

B 

Metal dowel *(F901)* x 4

C 

Large locking nut *(F900)* x 4

D 

Nail *(F51)* x 33

E 

Allen Key *(F36)* x 1

F 

50mm Screw *(F49)* x 12

G 

25mm Screw (*F50)* x 4

H 


19mm Screw (*F461)* x 2

I 


13mm Screw *(F79)* x 1

J 


13mm Screw *(F63)* x 16

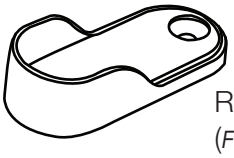K 


Rail Holder (*F891)* x 4

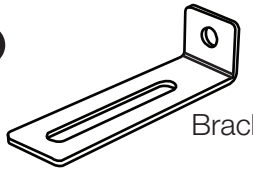L 


Bracket (*F327)* x 1

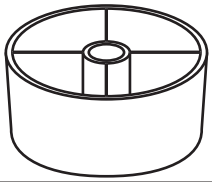M 

Feet *(F854)* x 4

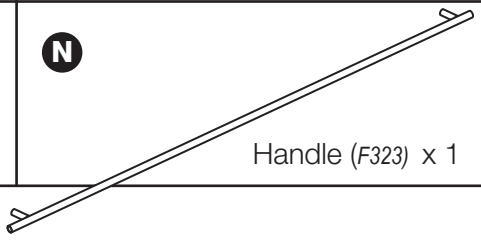
N 

Handle (*F323)* x 1

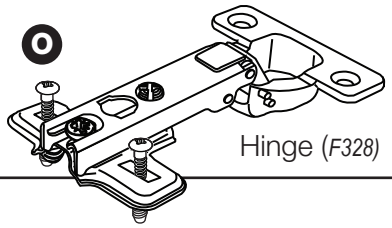
O 

Hinge (*F328)* x 4

Tools required

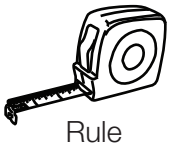


Rule



Spirit level




Eye protection (when using a hammer or drill)




Cross-head screwdriver



Electric drill (only use when drilling into walls)

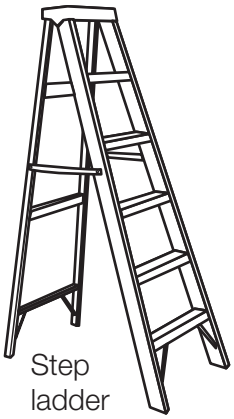

Step ladder




Square



Scissors




Hammer



Bradawl

Ruler - Use this ruler to help correctly identify the screws

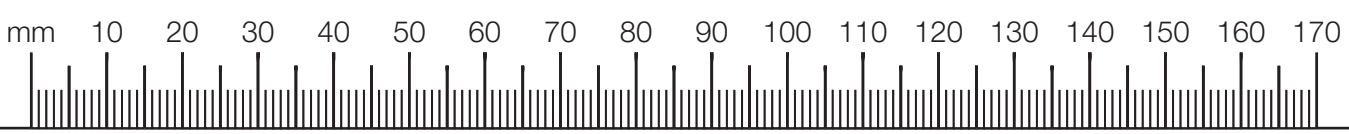


Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1


Are you fitting 1 or 2 Hanging Rails or, an Internal Chest or, a Shelf Pack?

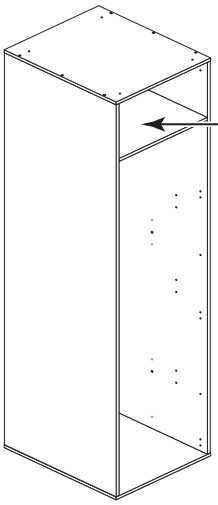

The fixed shelf will need to go here if you are fitting the following:-

Only 1 Hanging Rail
or
An Internal Chest
or
A Shelf Pack

Follow Steps 2 and 3.

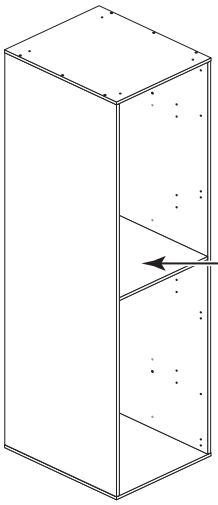

The fixed shelf will need to go here if you are fitting the following:-

2 Hanging Rails

Follow Steps 4 and 5.

Step 2

Only follow Steps 2 and 3 if you are only fitting 1 hanging rail or, an internal chest or, a shelf pack. If you are fitting 2 hanging rails, follow Step 4 and 5.


Prepare the left end


Refer to step 1 and, **if you have chosen to fit 1 hanging rail or, an internal chest or, a shelf pack**, screw 2 metal dowels (B) into the left end [1].


Note: Tighten the metal dowels up fully against the panels.

Note: If you have purchased a shelf pack, do not fit the rail holder.


To fit the rail holder (K), screw through its top hole with screw (J) and into the shallow mark hole drilled in the left end [1]. Make sure that it is fitted straight, in line with the panel edges and then fit another screw (J)

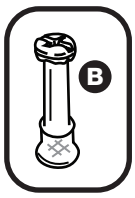

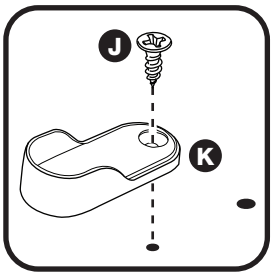

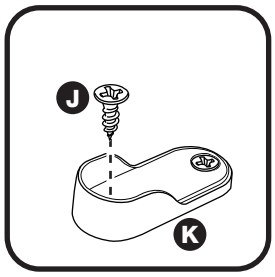

Note: If you have purchased a shelf pack, do not fit the rail holder.

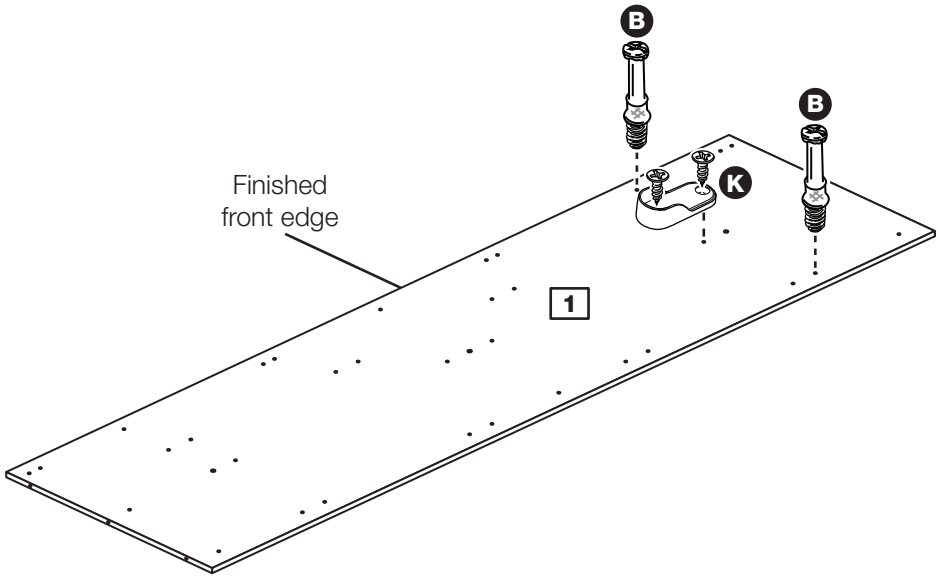

Assembly Instructions

Step 3

Prepare the right end


Refer to step 1 and, **if you have chosen to fit 1 hanging rail or, an internal chest or, a shelf pack**, screw 2 metal dowels (B) into the right end [1].

Note: Tighten the metal dowels up fully against the panels.

To fit the rail holder (K), screw through its top hole with screw (J) and into the shallow mark hole drilled in the right end [1]. Make sure that it is fitted straight, in line with the panel edges and then fit another screw (J) using the lower hole.

Only follow Steps 2 and 3 if you are only fitting 1 hanging rail or, an internal chest or, a shelf pack. If you are fitting 2 hanging rails, follow Step 4 and 5.

Note: If you have purchased a shelf pack, do not fit the rail holder.

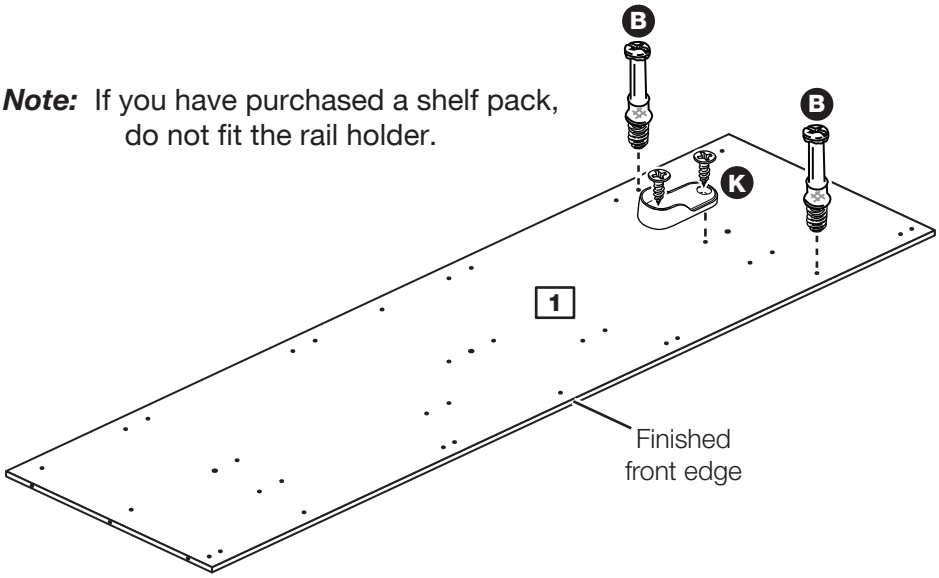

Step 4


Prepare the left end

Refer to step 1 and, **if you have chosen to fit 2 hanging rails**, screw 2 metal dowels (B) into the left end [1].

Note: Tighten the metal dowels up fully against the panels.

To fit the 2 rail holders (K) screw through the top hole with screw (J) and into the shallow mark hole drilled in the left end [1]. Make sure that they are fitted straight, in line with the panel edges and then fit another screw (J) using the lower hole.

Only follow Steps 4 and 5 if you are fitting 2 hanging rails. If you are just fitting 1 rail, follow Step 2 and 3.

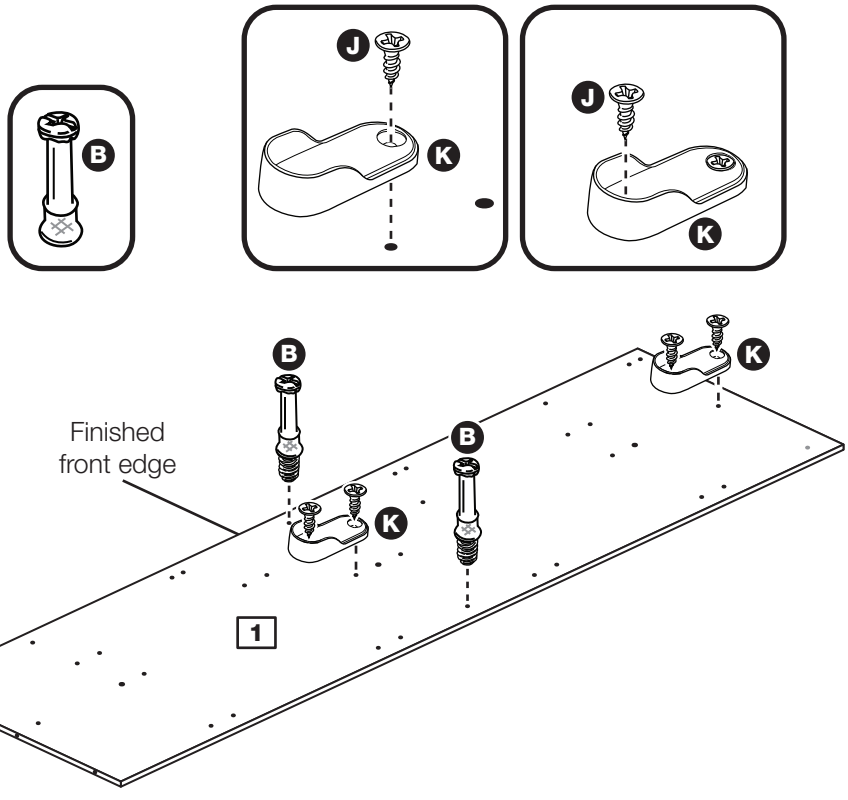

Step 5


Prepare the right end

Refer to step 1 and, **if you have chosen to fit 2 hanging rails**, screw 2 metal dowels B into the right end 1.

Note: Tighten the metal dowels up fully against the panels.

To fit the 2 rail holders K screw through the top hole with screw J and into the shallow mark hole drilled in the right end 1. Make sure that they are fitted straight, in line with the panel edges and then fit another screw J using the lower hole.

Only follow Steps 4 and 5 if you are fitting 2 hanging rails. If you are just fitting 1 rail, follow Step 2 and 3.

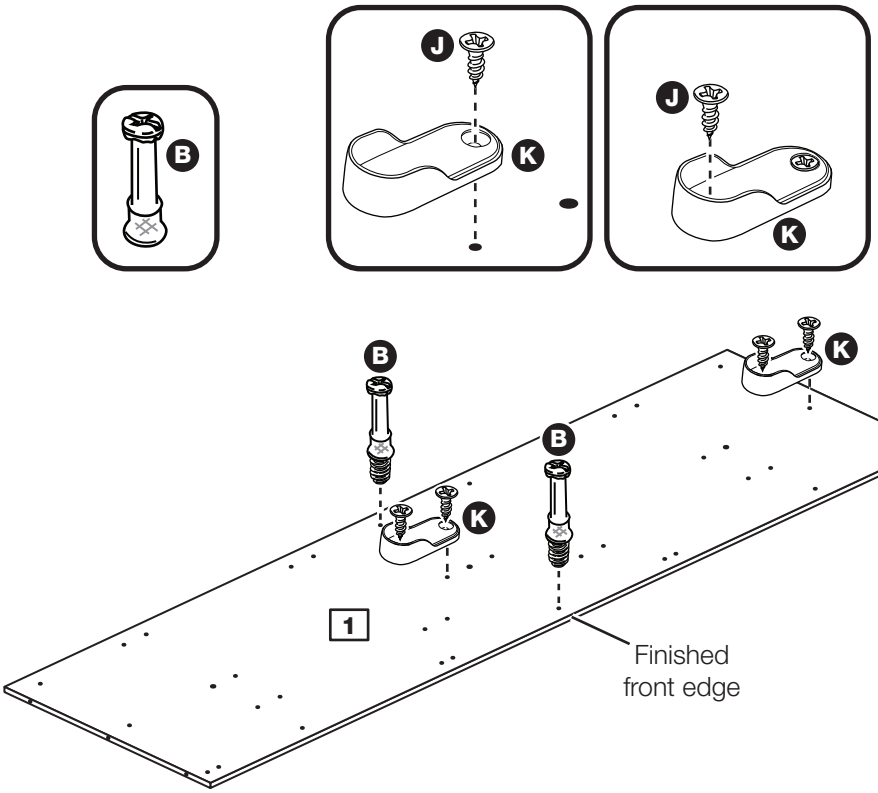

Step 6


Prepare the fixed shelf

Tap 2 wooden dowels A into the fixed shelf 3.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts C into the fixed shelf 3.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

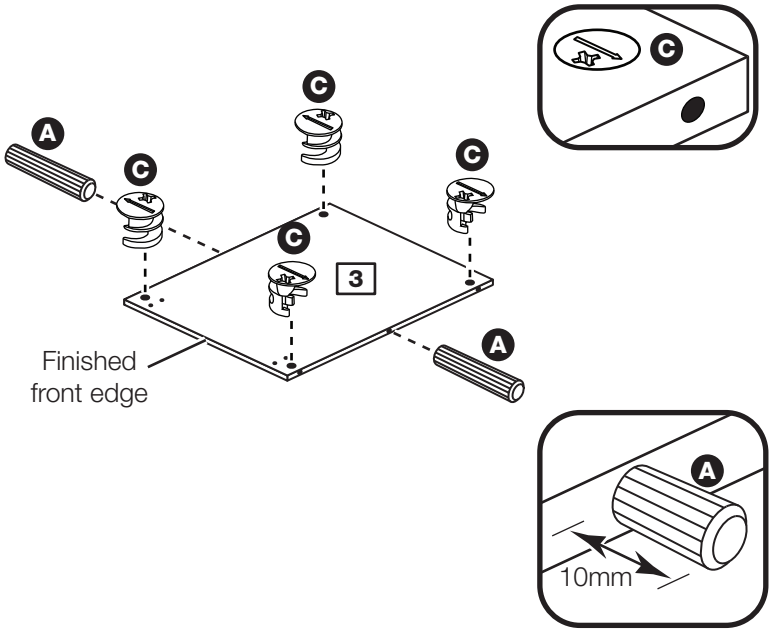


Step 7

Join the fixed shelf to the right side

Push the fixed shelf 3 onto the right side 1.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the fixed shelf 3.

Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

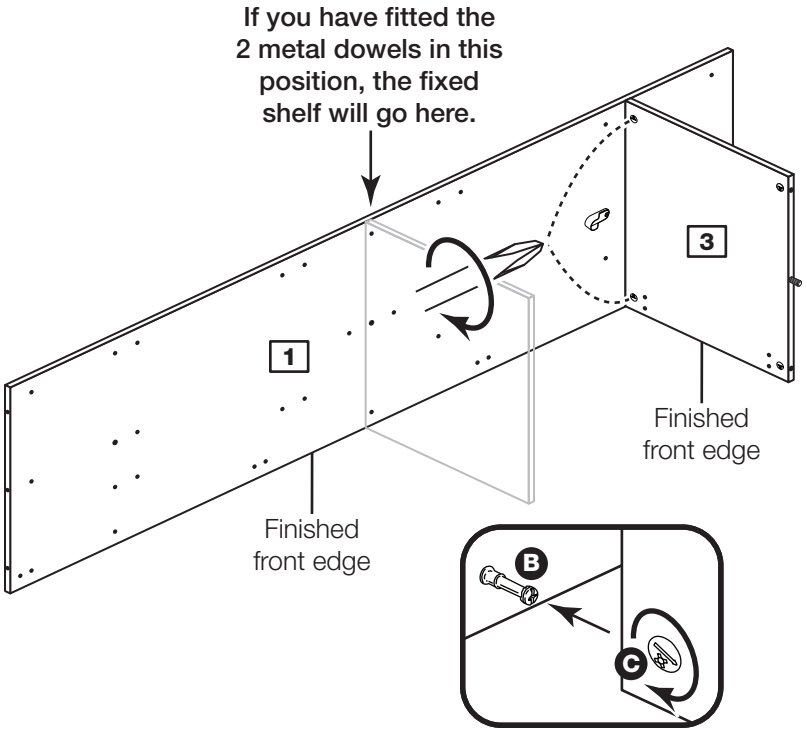


Step 8

Fit the left side

Push the left side 1 onto the fixed shelf 3.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the fixed shelf 3.

The following diagrams will show the fixed shelf at the top end of the unit. You may have fitted it in the middle of the unit.

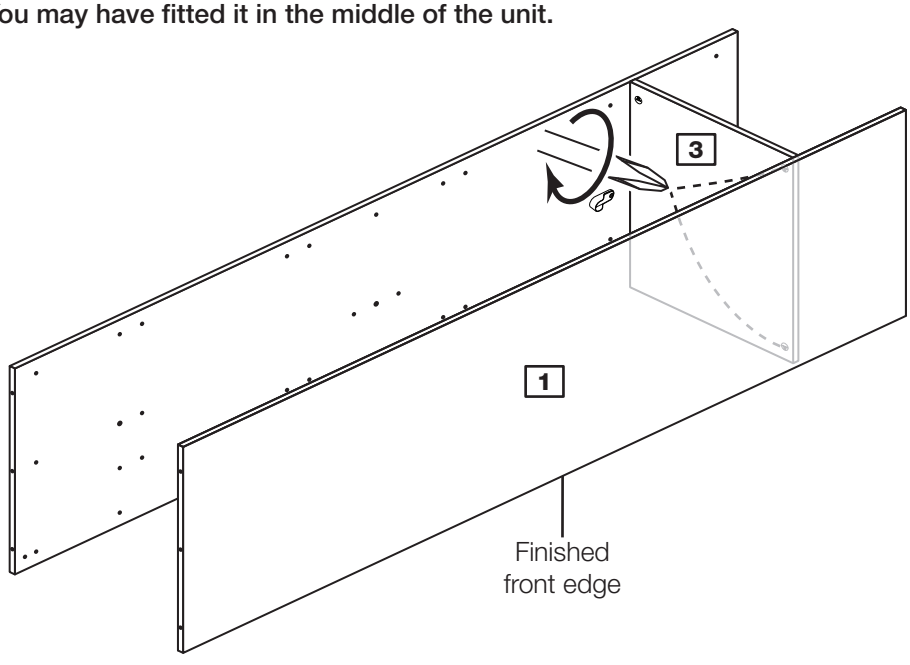


Assembly Instructions

Step 9

Prepare the base

Screw the 4 feet (M) into the shallow mark holes on the base [2] using screws (G).

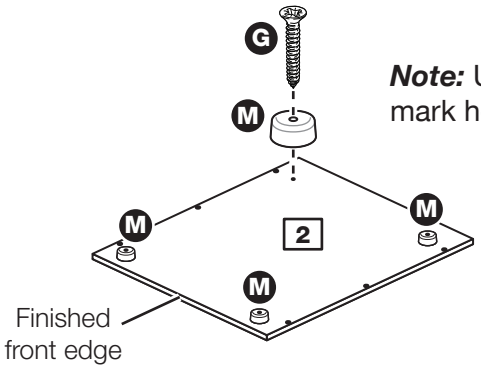


Note: Use the shallow mark holes to fit the feet.

Step 10

Fit the base


Attach the base [2] to the ends [1] using 6 screws (F) and tighten them using the allen key (E).

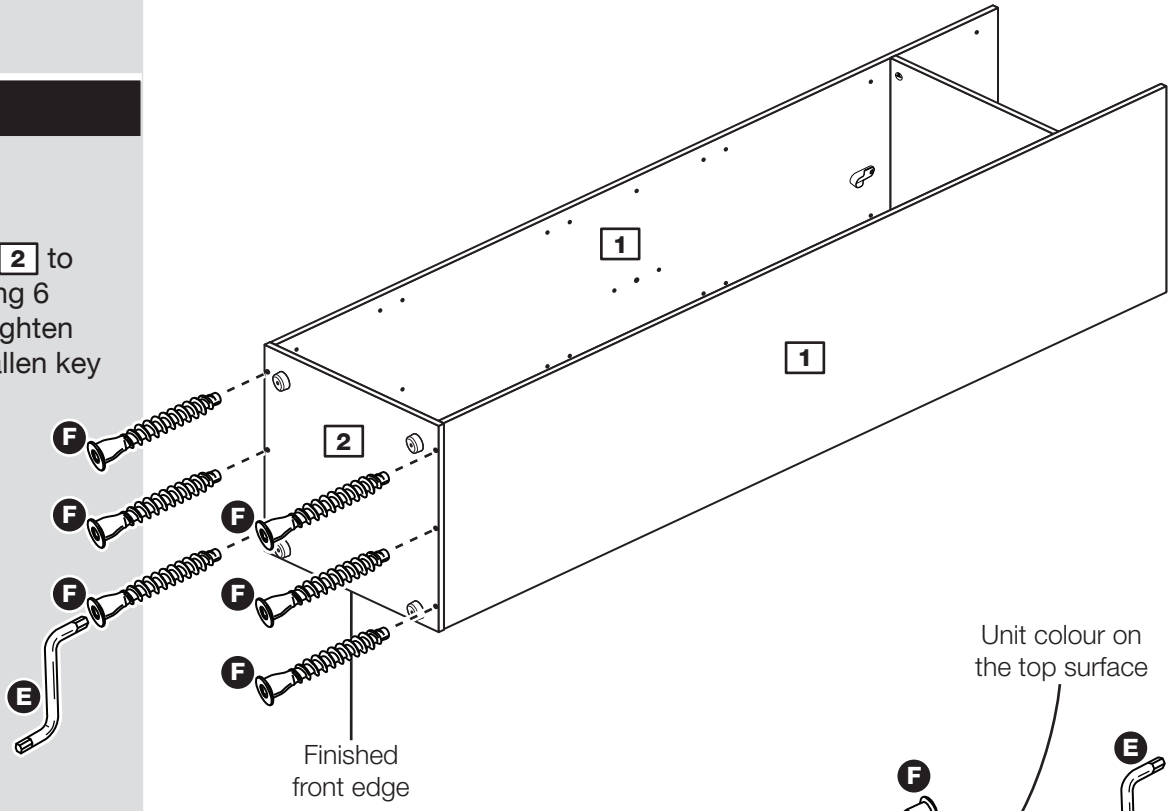

Step 11

Fit the top

Attach the top [2] to the ends [1] using 6 screws (F) and tighten them using the allen key (E).

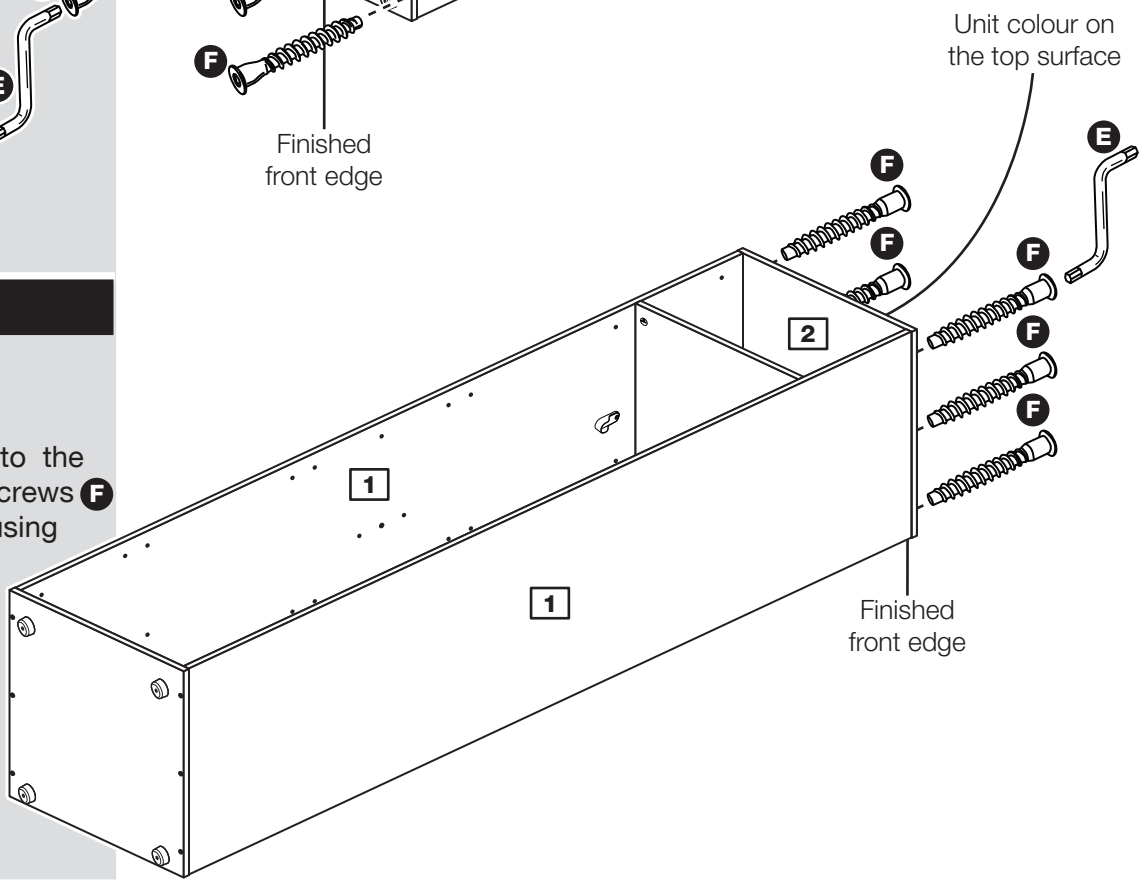

Step 12

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 5 onto the unit.


Nail D around the outside edges of the back 5.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.


a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

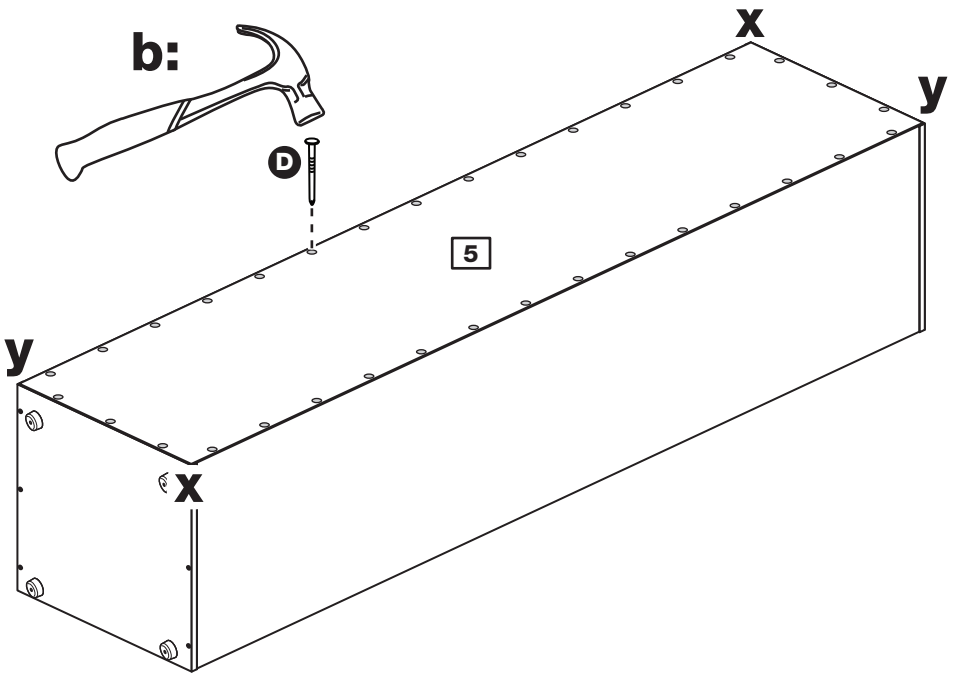


Step 13

Fit the hanging rail(s)

Push the hanging rail(s) 4 into the rail holders K fitted to the side panels.

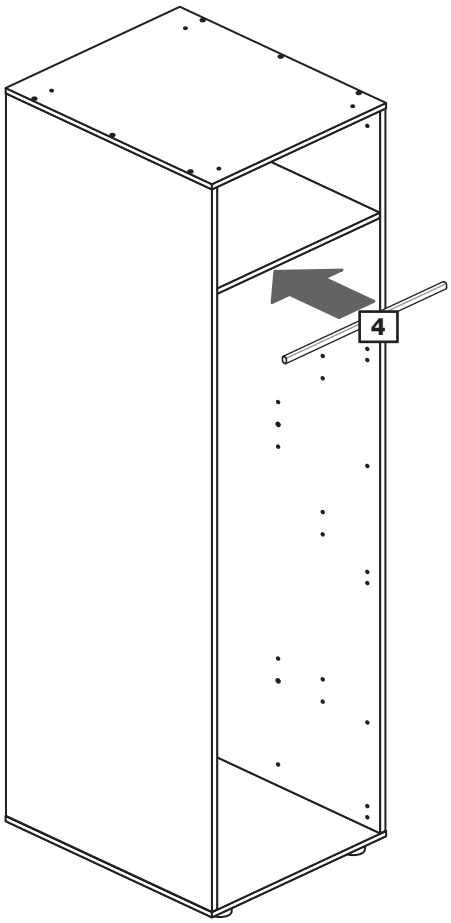

Note: Do not fit the hanging rail(s) if you are fitting the shelf pack.

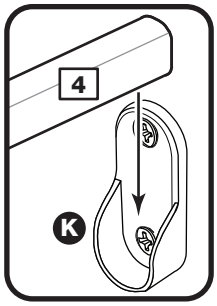

Step 14

Fit the bracket

To prevent possible overbalancing, we recommend that this unit is secured to a suitable wall by use of the bracket L fitted to the top of the unit.

Fixings are not supplied, as they will need to suit the wall type and the length of screw will depend on the distance from the back of the unit to the wall.

Fix the bracket L loosely onto the top of the unit using screw I and mark the wall for the wall fixing.

Swivel the bracket L away from the wall and drill a hole in the wall using a suitable drill bit and fit your wall fixing.


Swivel the bracket L back and fix the bracket to the wall, then tighten screw I.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

Warning: The unit is heavy. Lift with care.

IMPORTANT

The unit MUST be fixed to a wall using the bracket supplied. The unit must be level and square before fitting the bracket.

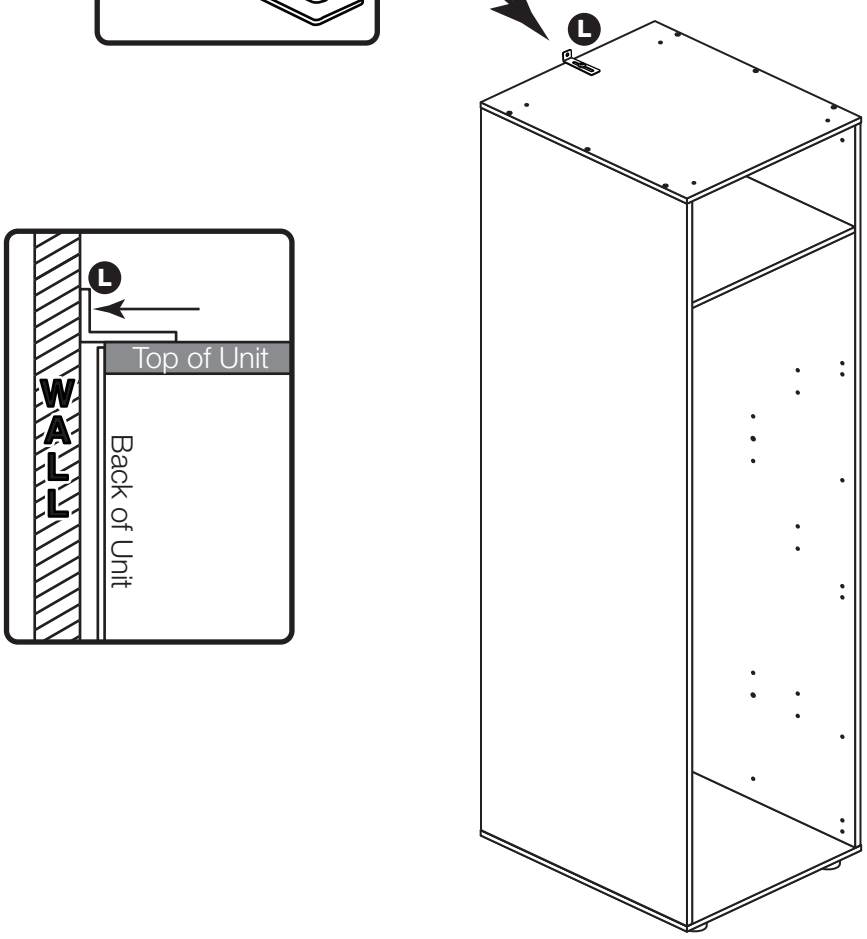



IMPORTANT
The unused fittings from this assembly are used to fit the door. Please refer to the instructions packed with the door.

Step 15

Fit the door and, if required, the shelf pack and internal chest

Please refer to the instructions packed with the door, shelf pack or chest.

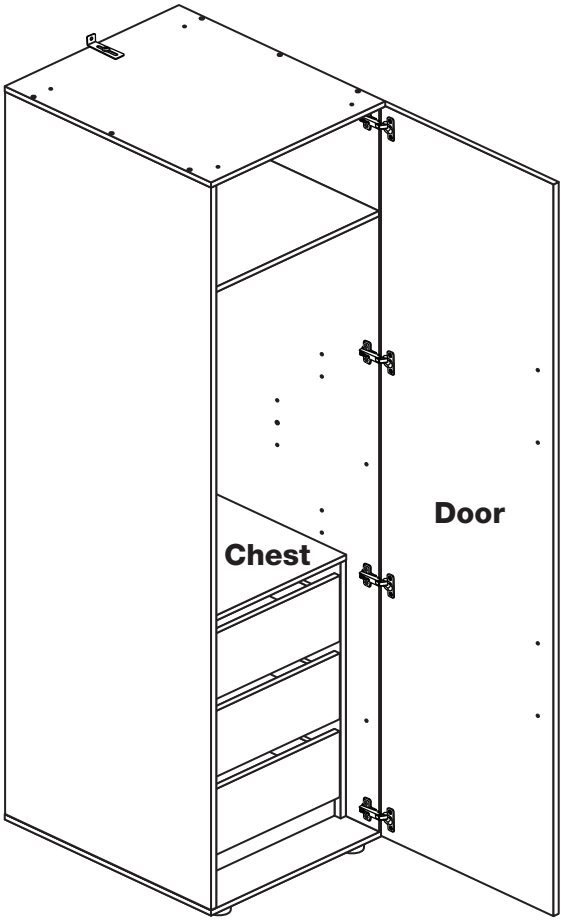

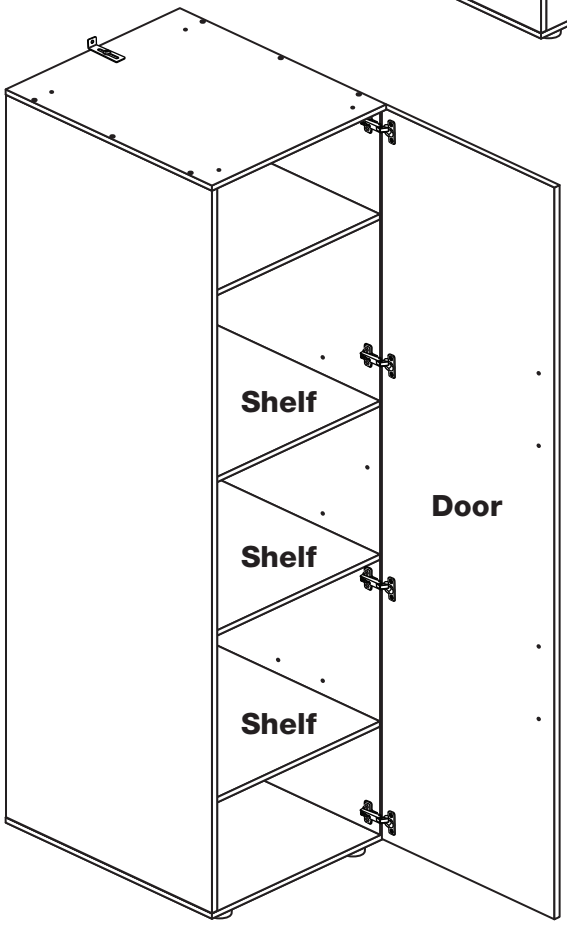

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW


Atlas - Single Robe Carcass

Assembly Instructions - Please keep for future reference

152/9432

157/2537

157/9107

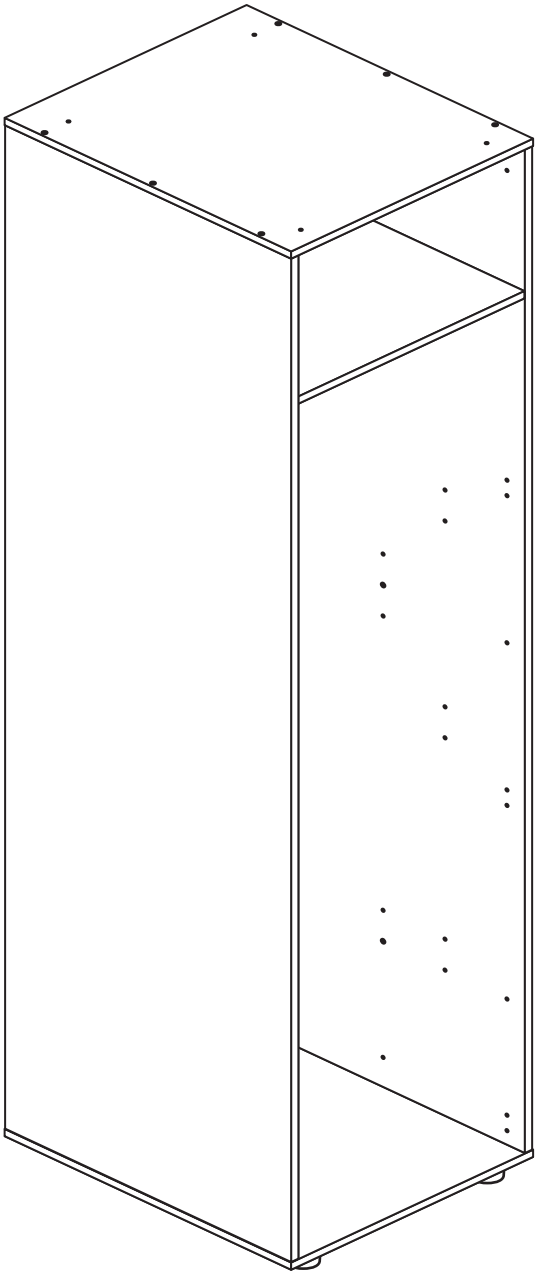

Dimensions
Width - 50cm
Depth - 59.5cm
Height - 212.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Issue 3 - 14/01/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 34kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the overbalance kit supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

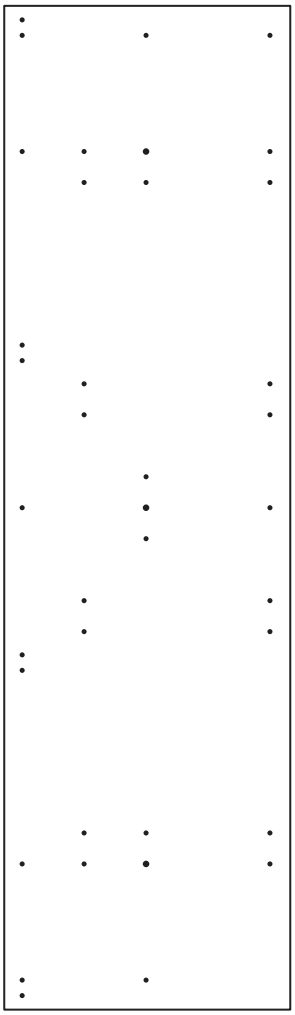

1 Universal End *(D2396A)*
(2074 x 591mm) x 2

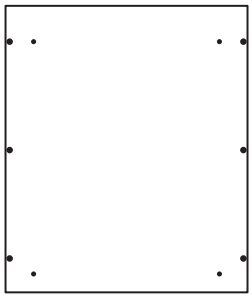


2 Top/Base *(D2399A)*
(500 x 592mm) x 2

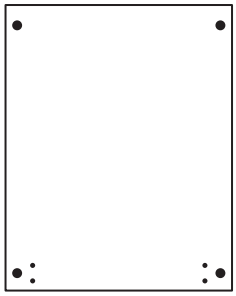

3 Fixed Shelf *(D2401A)*
(468 x 590mm)

4 Hanging Rail *(FHR460)*
(460mm long) x 2




5 Back *(X2100-494)*
(2100 x 494mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 


Wooden dowel *(F22)* x 2

B 

Metal dowel *(F901)* x 4

C 

Large locking nut *(F900)* x 4

D 

Nail *(F51)* x 33

E 

Allen Key *(F36)* x 1

F 

50mm Screw *(F49)* x 12


G 

25mm Screw (*F50)* x 4

H 

19mm Screw (*F461)* x 2

I Strap

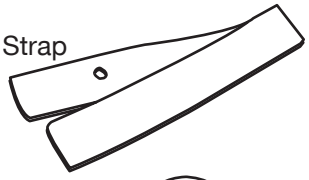



Screw




Washer x 2


Overbalance protector kit *(F269)* x 1

J 


13mm Screw *(F63)* x 16

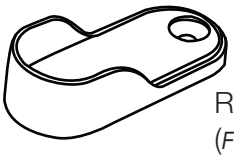K 


Rail Holder (*F891)* x 4

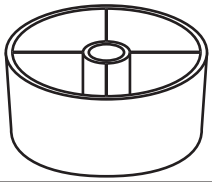L 

Feet *(F854)* x 4

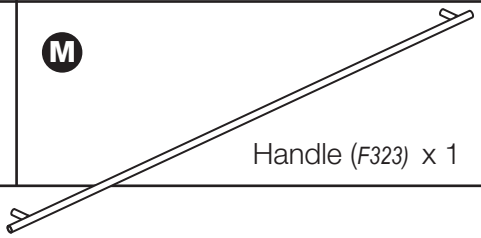
M 

Handle (*F323)* x 1

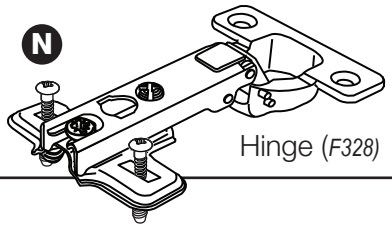
N 

Hinge (*F328)* x 4

Tools required

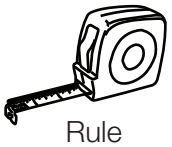


Rule



Spirit level




Eye protection (when using a hammer or drill)




Cross-head screwdriver



Electric drill (only use when drilling into walls)

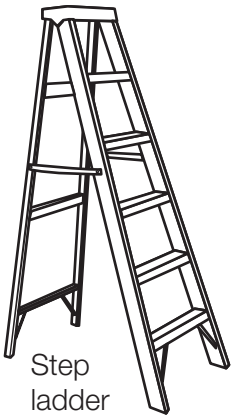

Step ladder




Square



Scissors




Hammer



Bradawl

Ruler - Use this ruler to help correctly identify the screws

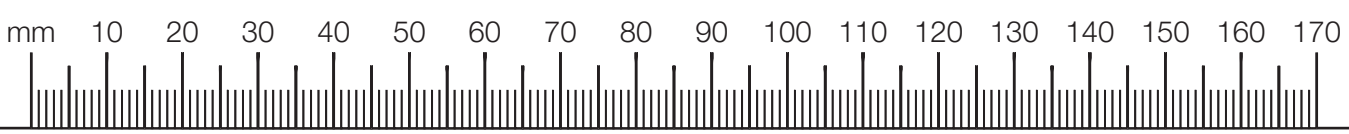


Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Step 1


Are you fitting 1 or 2 Hanging Rails or, an Internal Chest or, a Shelf Pack?

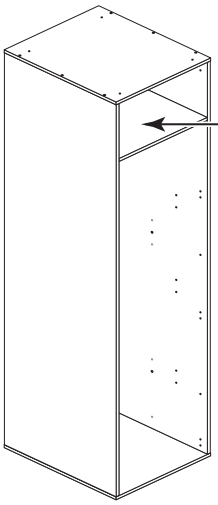

The fixed shelf will need to go here if you are fitting the following:-

Only 1 Hanging Rail
or
An Internal Chest
or
A Shelf Pack

Follow Steps 2 and 3.

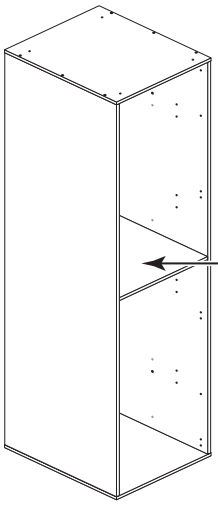

The fixed shelf will need to go here if you are fitting the following:-

2 Hanging Rails

Follow Steps 4 and 5.

Step 2

Only follow Steps 2 and 3 if you are only fitting 1 hanging rail or, an internal chest or, a shelf pack. If you are fitting 2 hanging rails, follow Step 4 and 5.


Prepare the left end


Refer to step 1 and, **if you have chosen to fit 1 hanging rail or, an internal chest or, a shelf pack**, screw 2 metal dowels (B) into the left end [1].


Note: Tighten the metal dowels up fully against the panels.

Note: If you have purchased a shelf pack, do not fit the rail holder.


To fit the rail holder (K), screw through its top hole with screw (J) and into the shallow mark hole drilled in the left end [1]. Make sure that it is fitted straight, in line with the panel edges and then fit another screw (J)

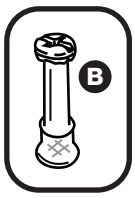

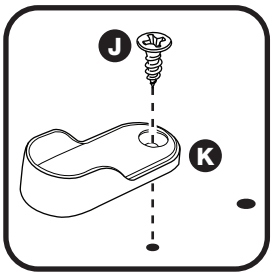

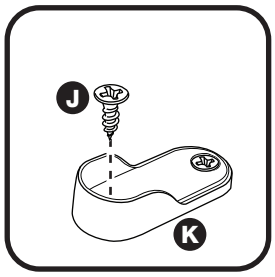

Note: If you have purchased a shelf pack, do not fit the rail holder.

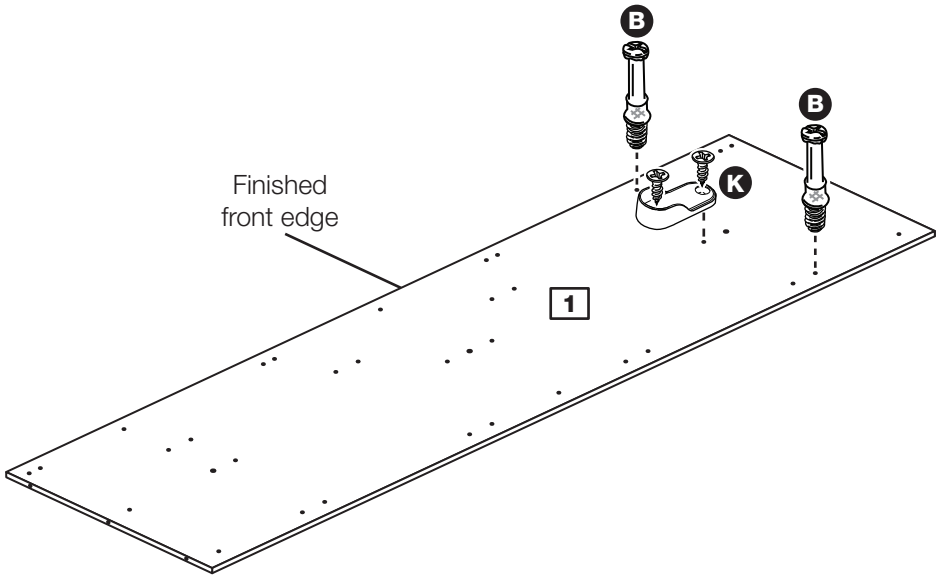

Assembly Instructions

Step 3

Prepare the right end


Refer to step 1 and, **if you have chosen to fit 1 hanging rail or, an internal chest or, a shelf pack**, screw 2 metal dowels (B) into the right end [1].

Note: Tighten the metal dowels up fully against the panels.

To fit the rail holder (K), screw through its top hole with screw (J) and into the shallow mark hole drilled in the right end [1]. Make sure that it is fitted straight, in line with the panel edges and then fit another screw (J) using the lower hole.

Only follow Steps 2 and 3 if you are only fitting 1 hanging rail or, an internal chest or, a shelf pack. If you are fitting 2 hanging rails, follow Step 4 and 5.

Note: If you have purchased a shelf pack, do not fit the rail holder.

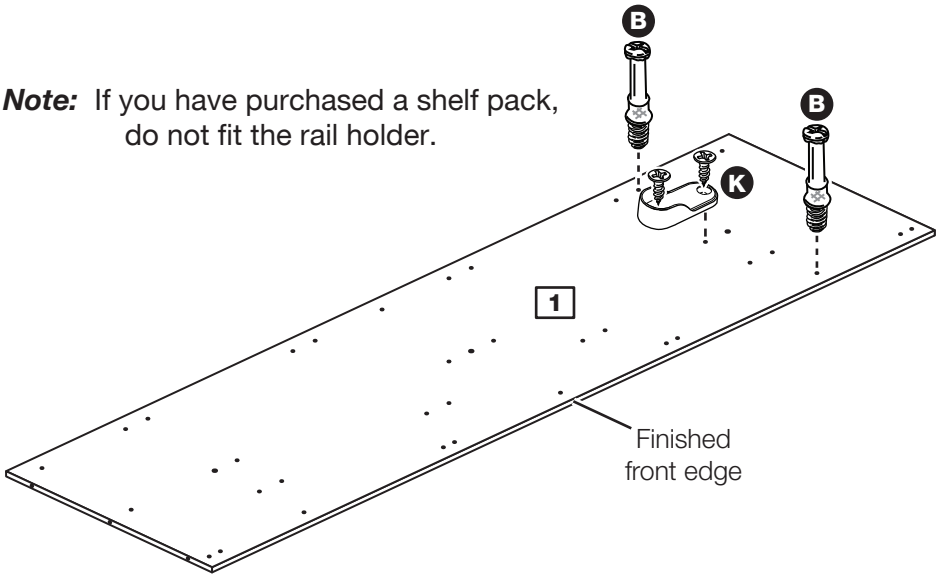

Step 4


Prepare the left end

Refer to step 1 and, **if you have chosen to fit 2 hanging rails**, screw 2 metal dowels (B) into the left end [1].

Note: Tighten the metal dowels up fully against the panels.

To fit the 2 rail holders (K) screw through the top hole with screw (J) and into the shallow mark hole drilled in the left end [1]. Make sure that they are fitted straight, in line with the panel edges and then fit another screw (J) using the lower hole.

Only follow Steps 4 and 5 if you are fitting 2 hanging rails. If you are just fitting 1 rail, follow Step 2 and 3.

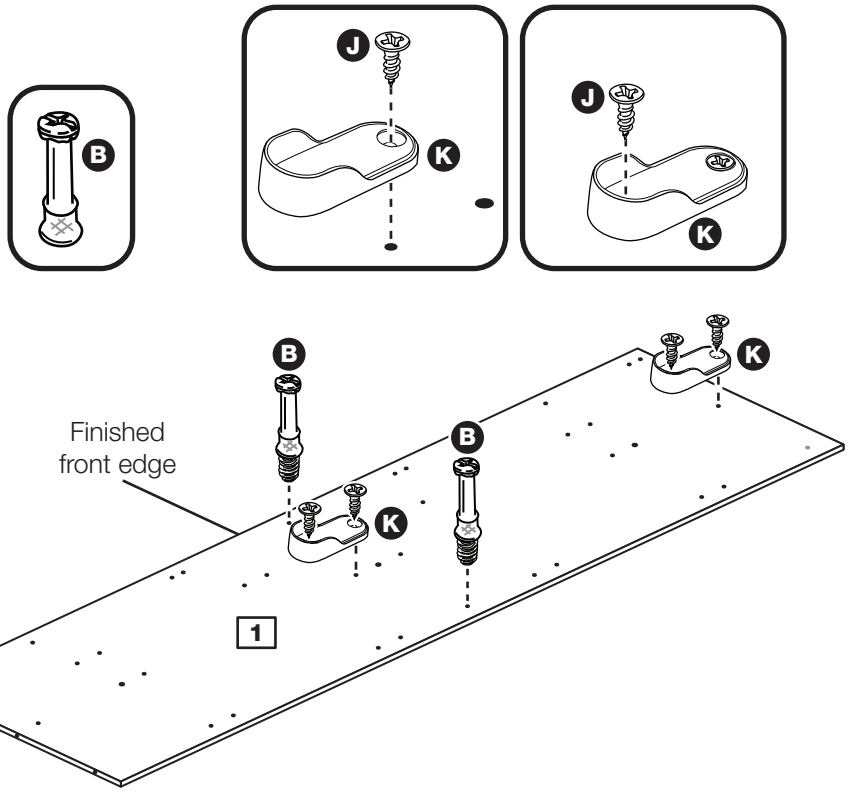

Step 5


Prepare the right end

Refer to step 1 and, **if you have chosen to fit 2 hanging rails**, screw 2 metal dowels B into the right end 1.

Note: Tighten the metal dowels up fully against the panels.

To fit the 2 rail holders K screw through the top hole with screw J and into the shallow mark hole drilled in the right end 1. Make sure that they are fitted straight, in line with the panel edges and then fit another screw J using the lower hole.

Only follow Steps 4 and 5 if you are fitting 2 hanging rails. If you are just fitting 1 rail, follow Step 2 and 3.

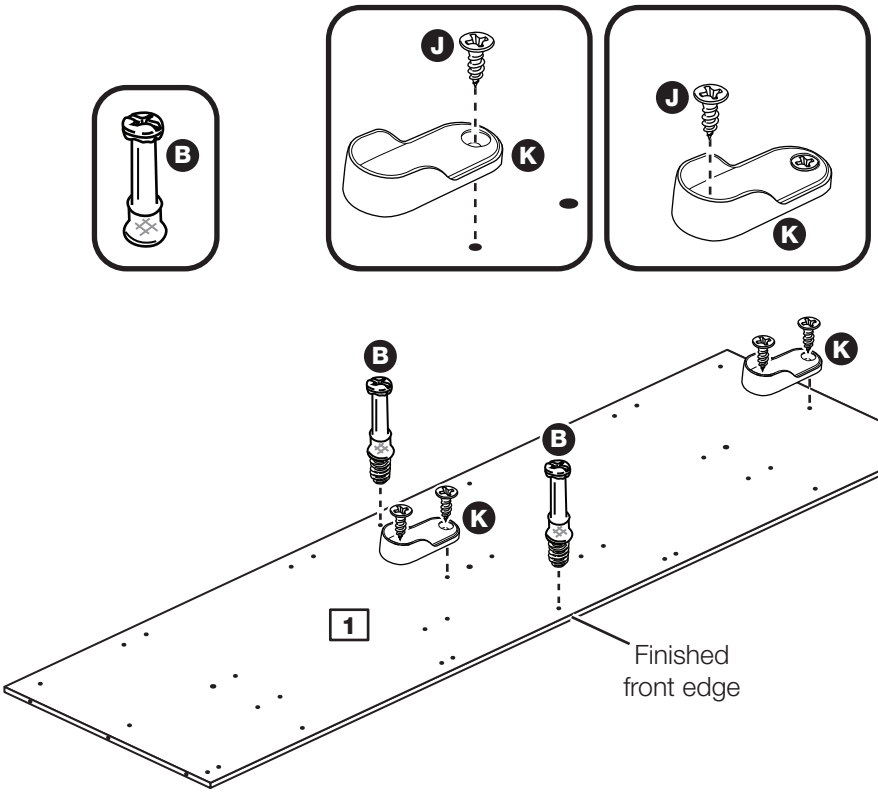

Step 6


Prepare the fixed shelf

Tap 2 wooden dowels A into the fixed shelf 3.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts C into the fixed shelf 3.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

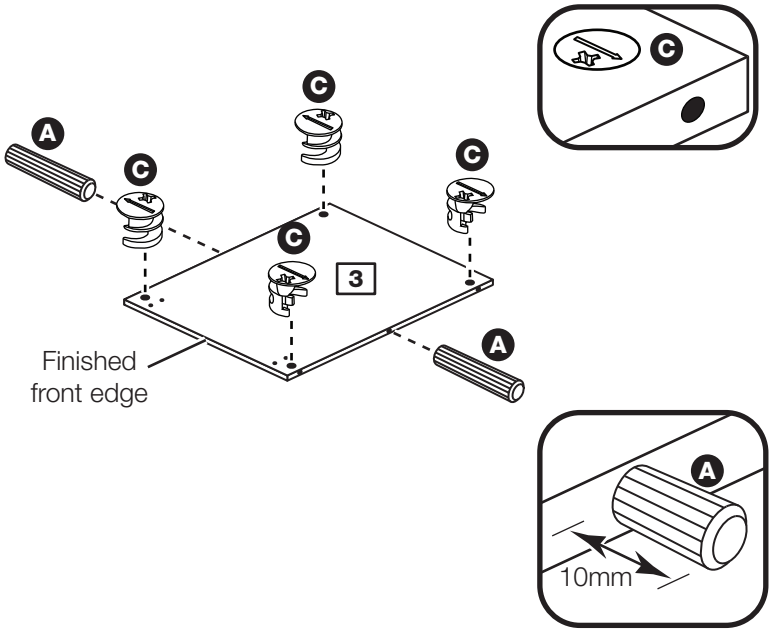


Step 7

Join the fixed shelf to the right side

Push the fixed shelf 3 onto the right side 1.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the fixed shelf 3.

Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

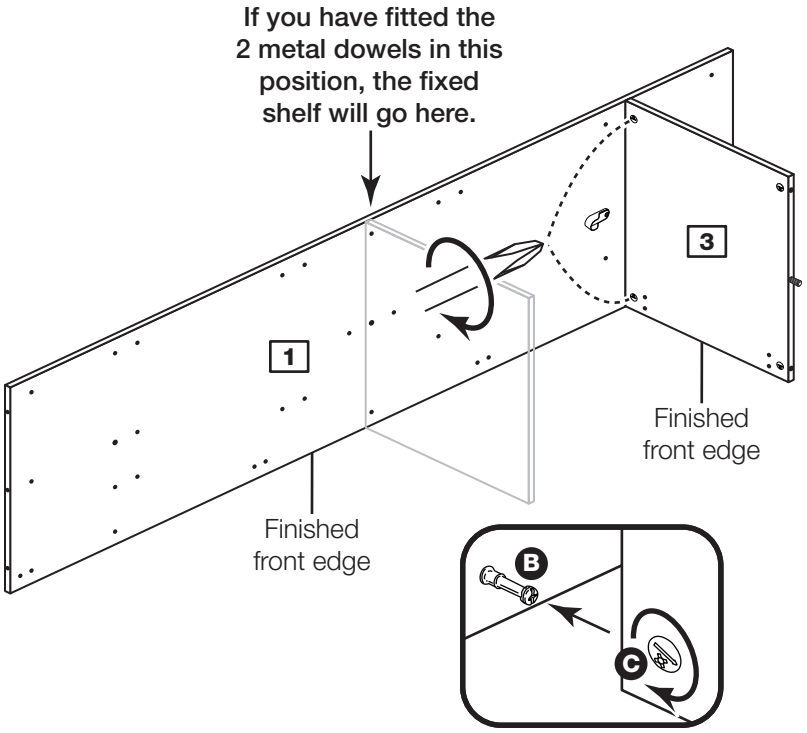


Step 8

Fit the left side

Push the left side 1 onto the fixed shelf 3.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the fixed shelf 3.

The following diagrams will show the fixed shelf at the top end of the unit. You may have fitted it in the middle of the unit.

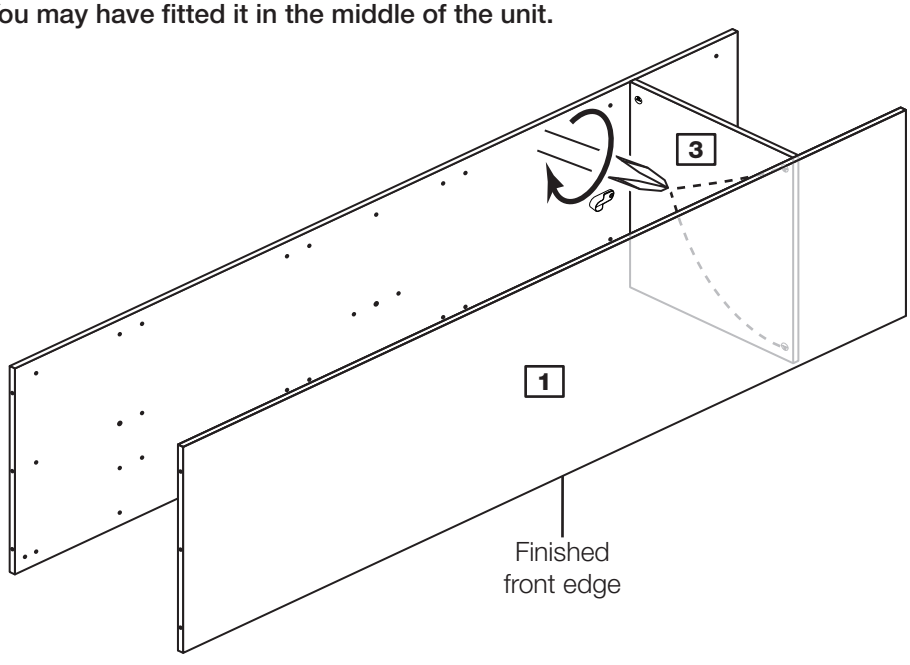


Assembly Instructions

Step 9

Prepare the base

Screw the 4 feet L into the shallow mark holes on the base 2 using screws G.

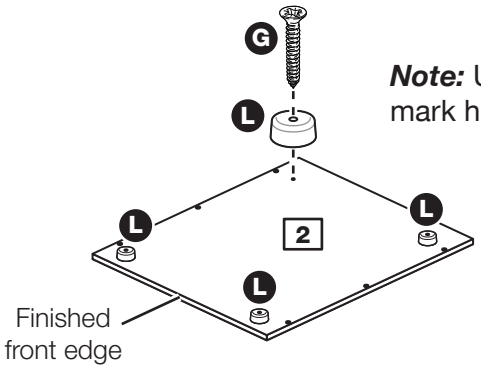


Note: Use the shallow mark holes to fit the feet.

Step 10

Fit the base


Attach the base 2 to the ends 1 using 6 screws F and tighten them using the allen key E.

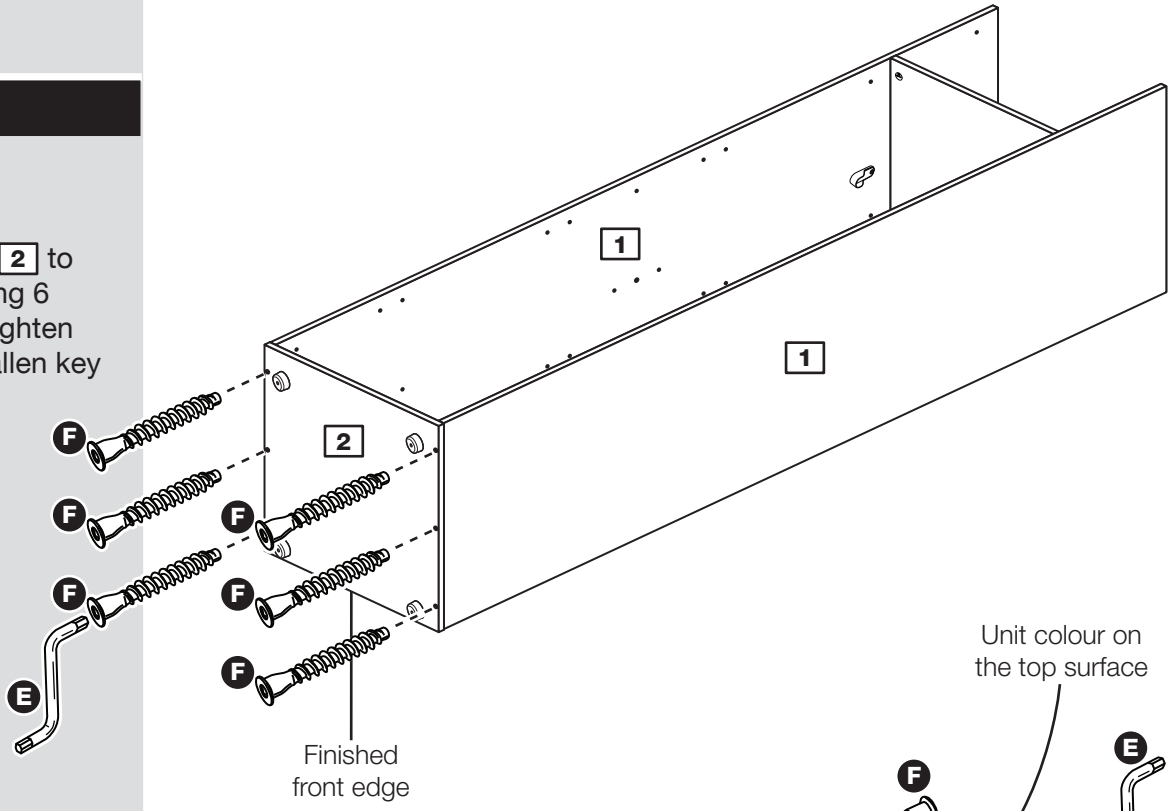

Step 11

Fit the top

Attach the top 2 to the ends 1 using 6 screws F and tighten them using the allen key E.

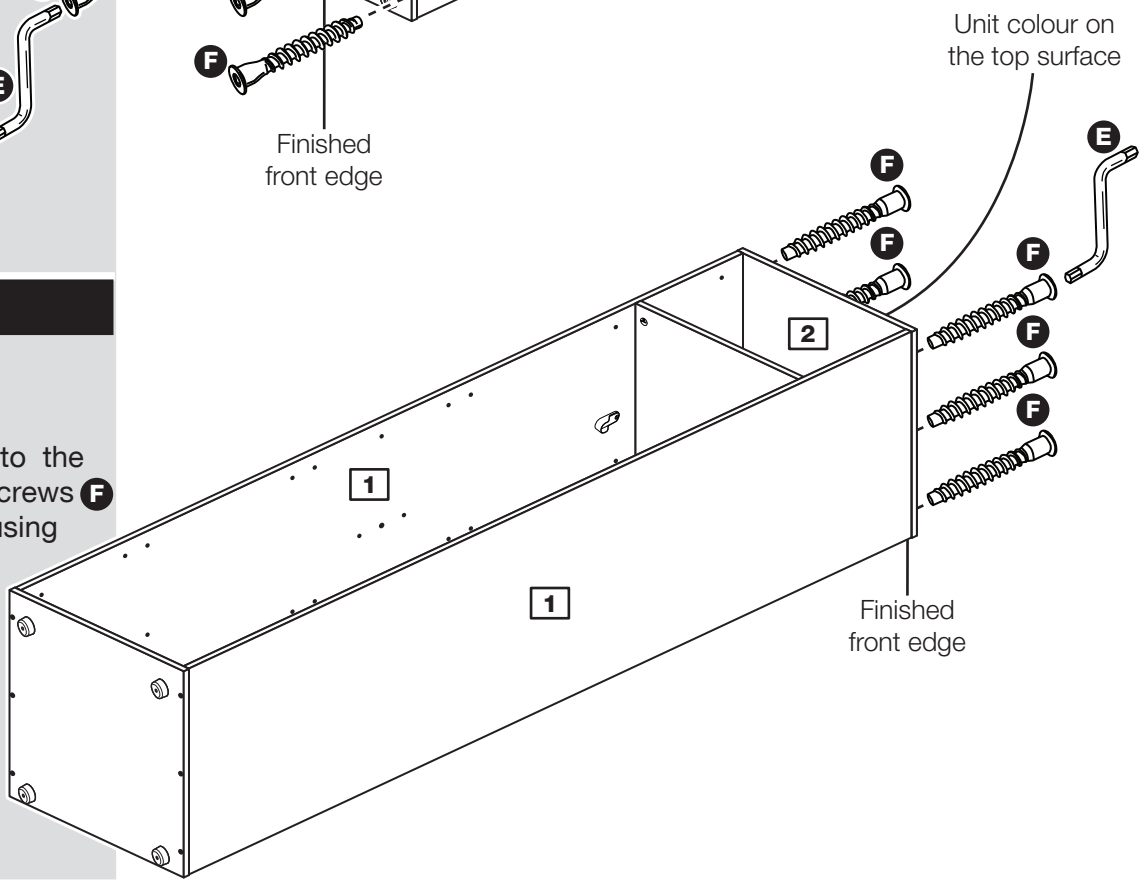

Step 12

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 5 onto the unit.


Nail D around the outside edges of the back 5.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.


a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

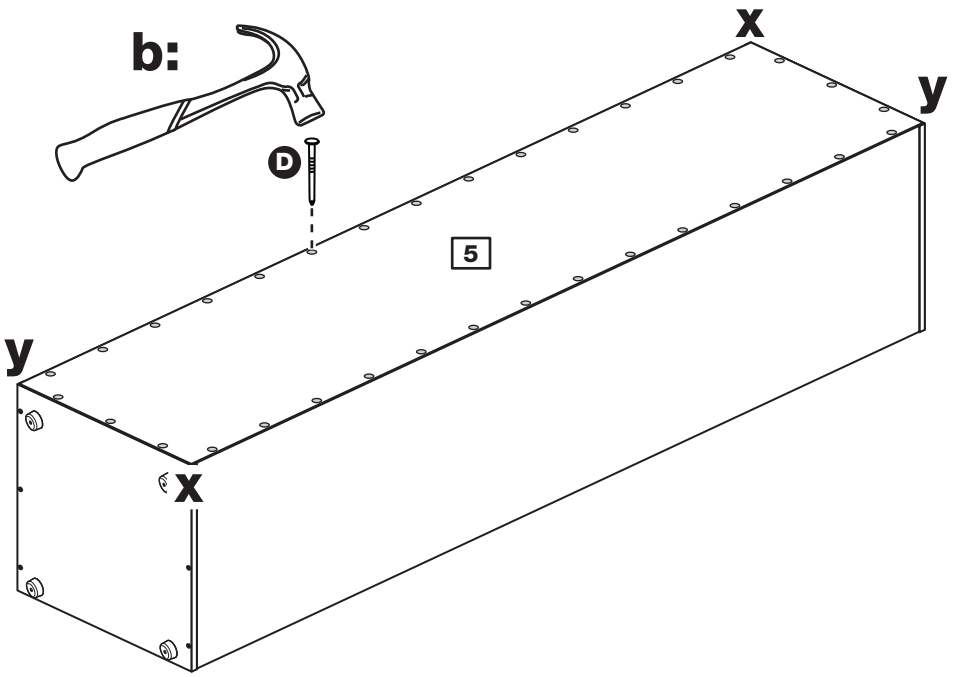


Step 13

Fit the hanging rail(s)

Push the hanging rail(s) 4 into the rail holders K fitted to the side panels.

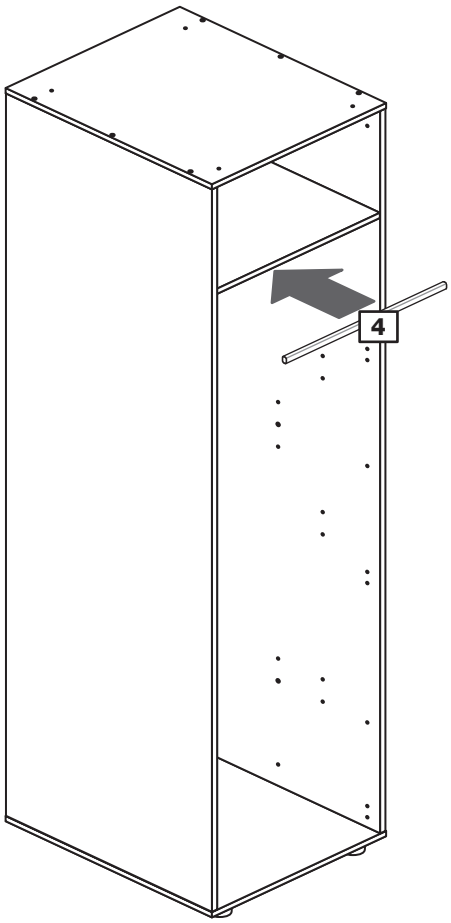

Note: Do not fit the hanging rail(s) if you are fitting the shelf pack.

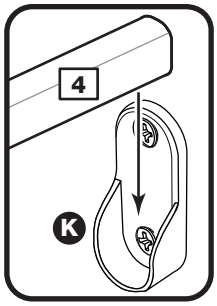

Step 14

Fit the overbalance protector kit

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit ❶ to the unit, or an alternative fixing method of your choice.


Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

Assembly is complete

IMPORTANT

The unit MUST be fixed to a wall using the overbalance kit supplied. The unit must be level and square before fitting the strap.

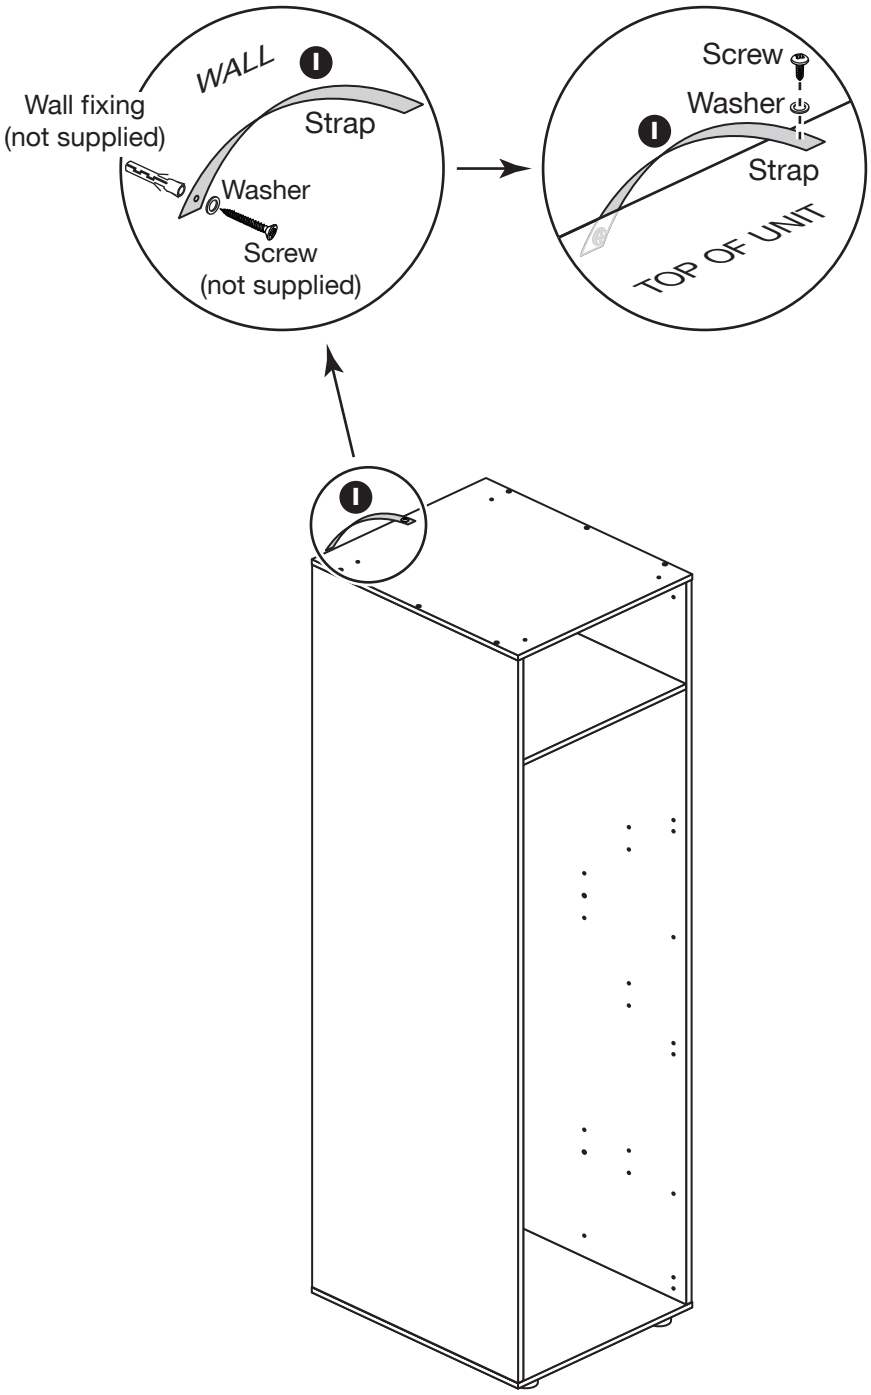



IMPORTANT
The unused fittings from this assembly are used to fit the door. Please refer to the instructions packed with the door.

Step 15

Fit the door and, if required, the shelf pack and internal chest

Please refer to the instructions packed with the door, shelf pack or chest.

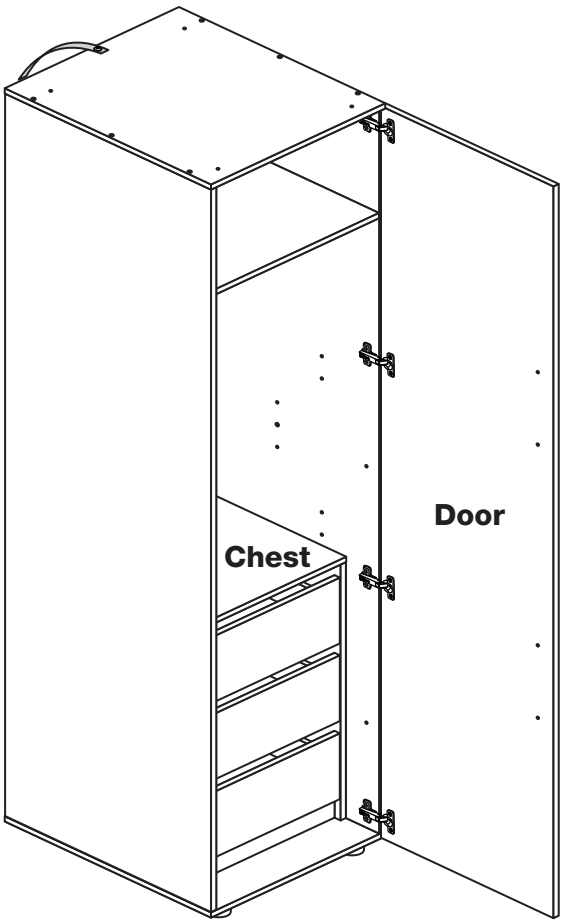

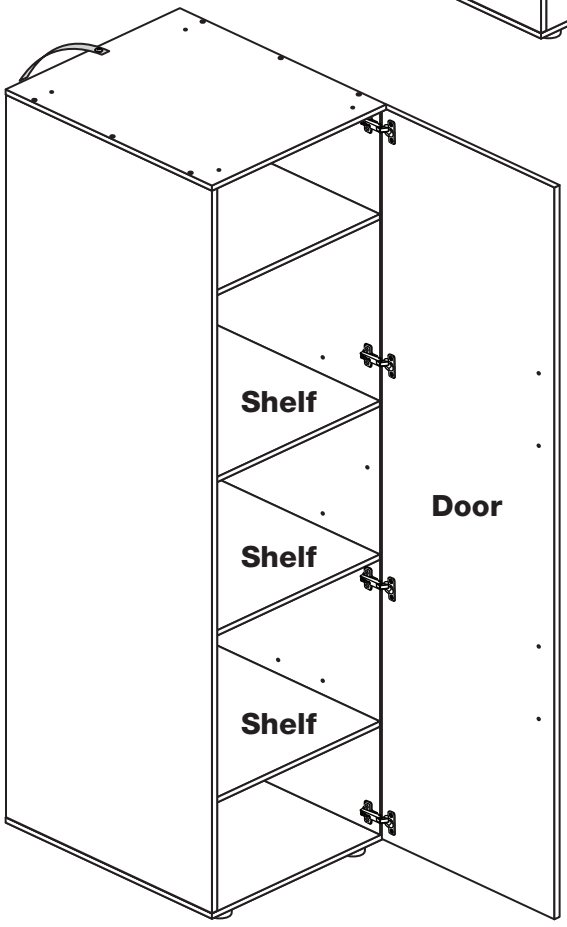

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW