
Darcy - Tower with 2 Doors

Assembly Instructions - Please keep for future reference | 413/4783

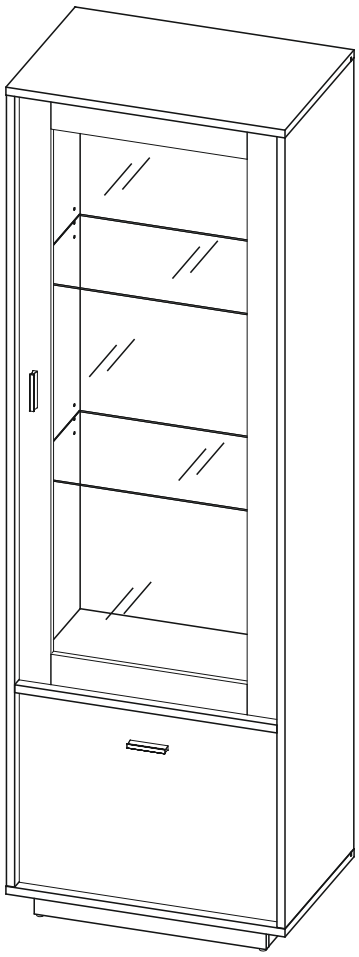

Dimensions

Width - 61.7 cm

Depth - 42 cm

Height - 190.5 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 6400 800**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the panels during assembly, this could cause damage.

• Assemble the unit as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• If using power tools, please follow the safety instructions supplied with the tools.



• We do not recommend the use of power drill/ drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

• ***Warning:*** The unit weighs approximately 47 kgs. **Please lift with care.**

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly .Keep this page with these instructions for future reference.


Component - Panels

If you have damaged or missing components call the **Customer Helpline: 0845 6400 800**


Please check you have all the panels listed below

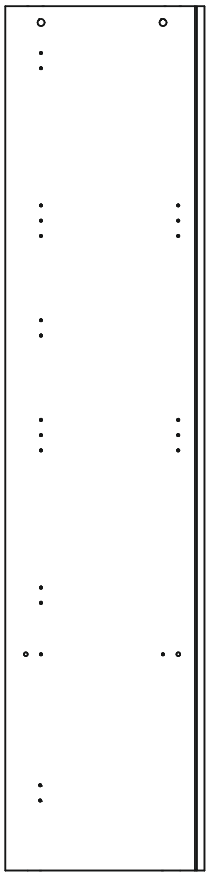


1 Left side
(181.4 x 41.8cm)

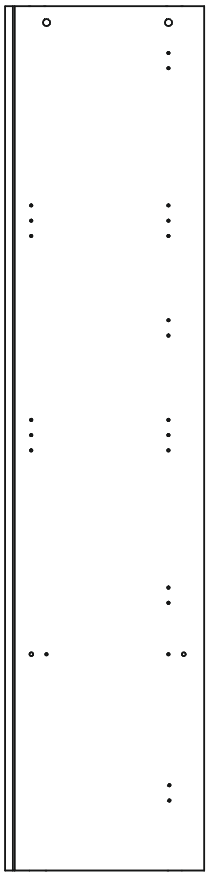


2 Right side
(181.4 x 41.8cm)

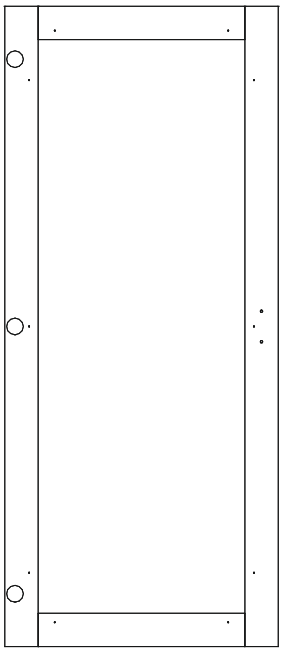


7 Door
(134.4 x 57.4cm)




10 Rear top
(136.5 x 59.3cm)

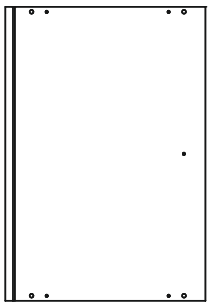


3 Top
(61.7 x 42cm)

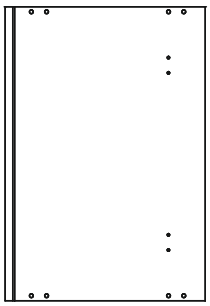


4 Bottom
(61.7 x 42cm)

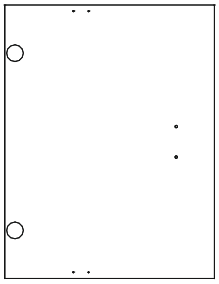


8 Flap
(57.4 x 44cm)

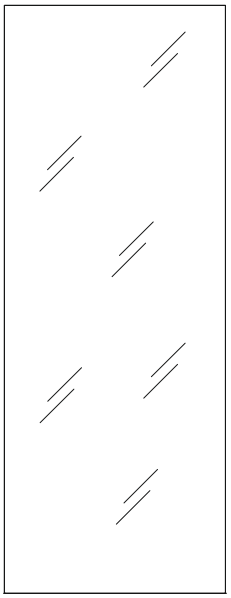


9 Front glass
(123.4 x 46.4cm)




11 Rear bottom
(46.2 x 59.3cm)




12 Long plinth x 2
(51.3 x 5cm)



13 Short plinth x 2
(33 x 5cm)

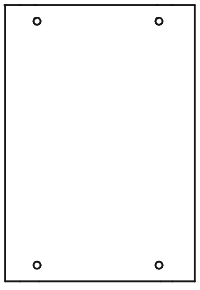












5 Horizontal partition
(58 x 39.8cm)

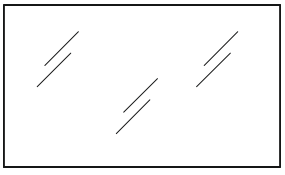


6 Shelf x 2
(57.9 x 34cm)


Components - Fittings

Please check you have all the fittings listed below

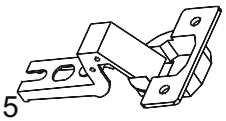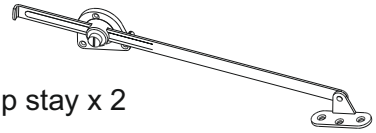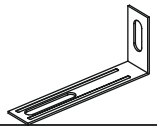
A Wooden dowel x 24 (8x35) 	**B** Hinge plate x 5 	**C** Door hinge x 5 			
D  4x13mm Screw x 10	**E**  (15x13) Locking nut x 8	**F**  Cap x 8			
G  Metal dowel x 8	**H**  (7x50) Hexagon bolt x 4	**I**  Cap x 4			
J  Handle x 2	**K**  4x16mm Screw x 1	**L**  3.5x27mm Screw x 4			
M  Allen key x 1	**N**  3x16mm Screw x 20	**O**  3,5x16mm Screw x 14			
P  Feet x 4	**Q**  Flap stay x 2	**R**  Wall Bracket x 1			
S  Stabilizer x 10	**T**  Mounting bracket x 4	**U**  Washer x 3			
V  Height adjuster x 1	**W**  Shelf support x 11	**X**  Glass clip x 10	**Y**  Plug plates x 6		


Tools required



Phillips screwdriver (medium & large)


Flatblade screwdriver (medium)


5 & 8mm Suitable drill bit (for use with wall plug)

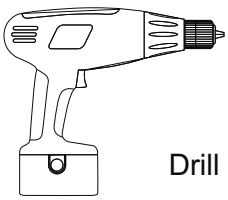
Drill


Punch


Small hammer


Ruler/tape measure


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

a: Inserting dowels and locking nuts

Insert locking nuts **E** into the left side panel **1**.


Insert wooden dowels **A** into the left side panel **1**.

Screw metal dowels **G**.

Insert shelf support **W** into the left side panel

WARNING! Please wear goggles or protective eyewear whilst hammering dowels in place.


a:

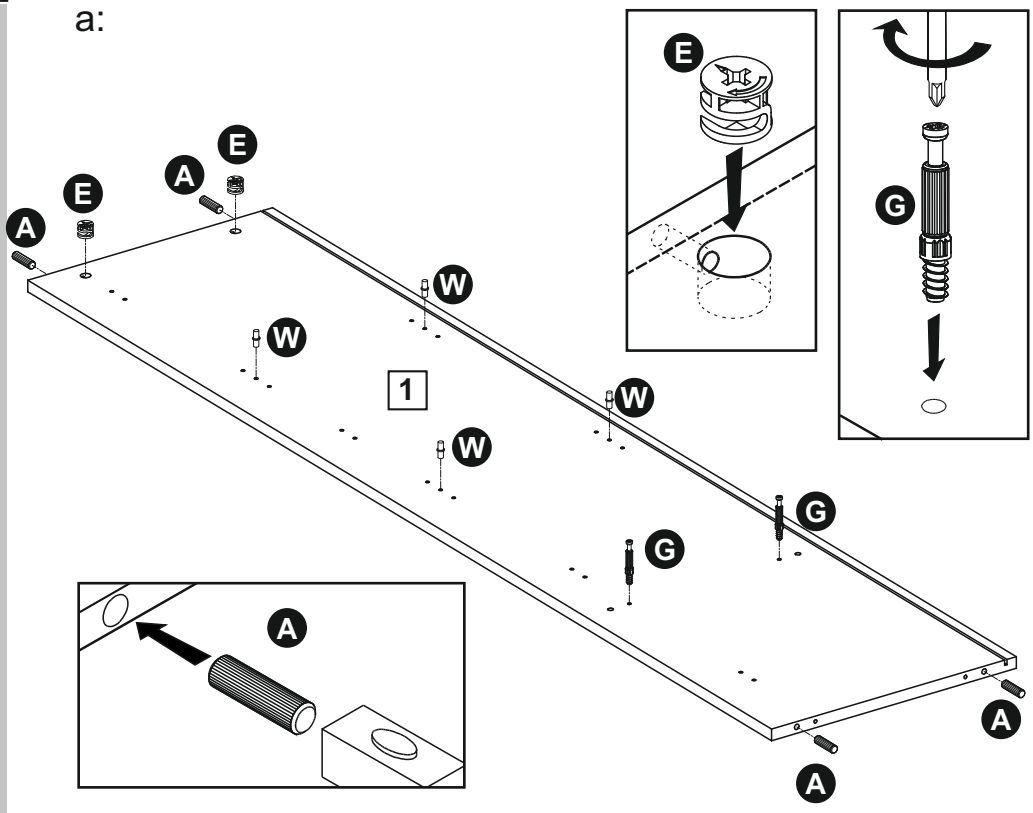

b: Attaching flap stay

Attach flap stay **Q** using screws **O**.

b:

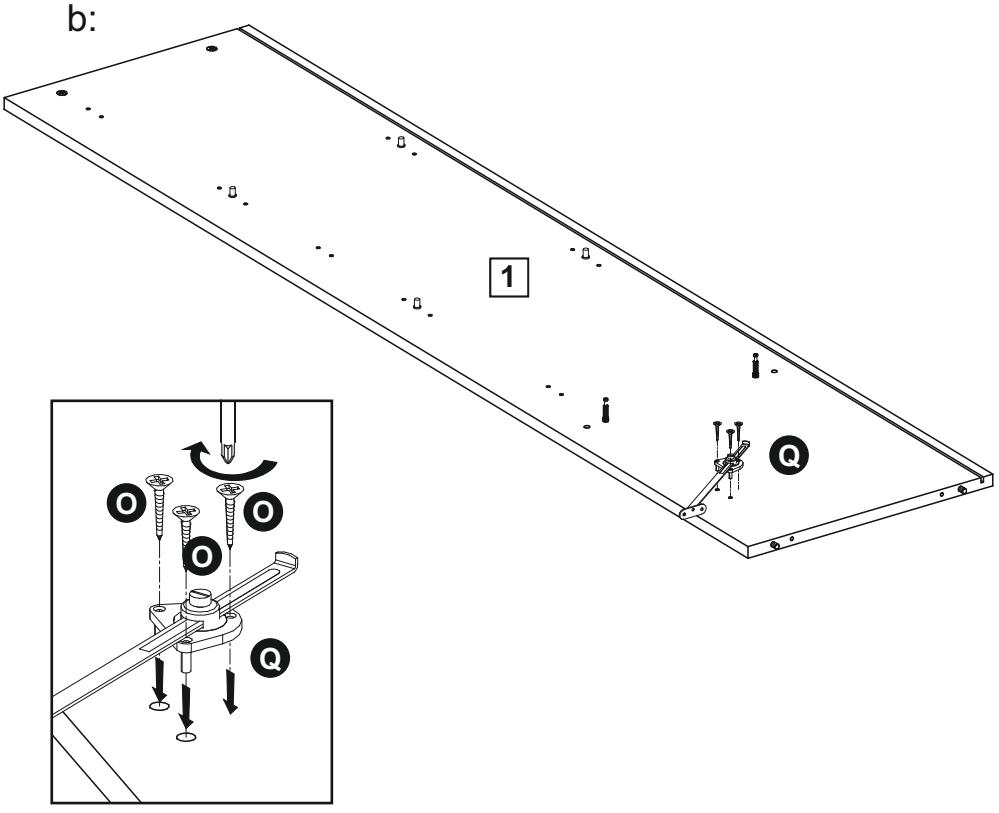

Assembly Instructions

Step 2

a: Inserting dowels and locking nuts

Insert locking nuts **E** into the right side panel **2** .


Insert wooden dowels **A** into the right side panel **2** .

Screw metal dowels **G** .

Insert shelf support **W** into the right side panel

WARNING!
Please wear goggles or protective eyewear whilst hammering dowels in place.


a:

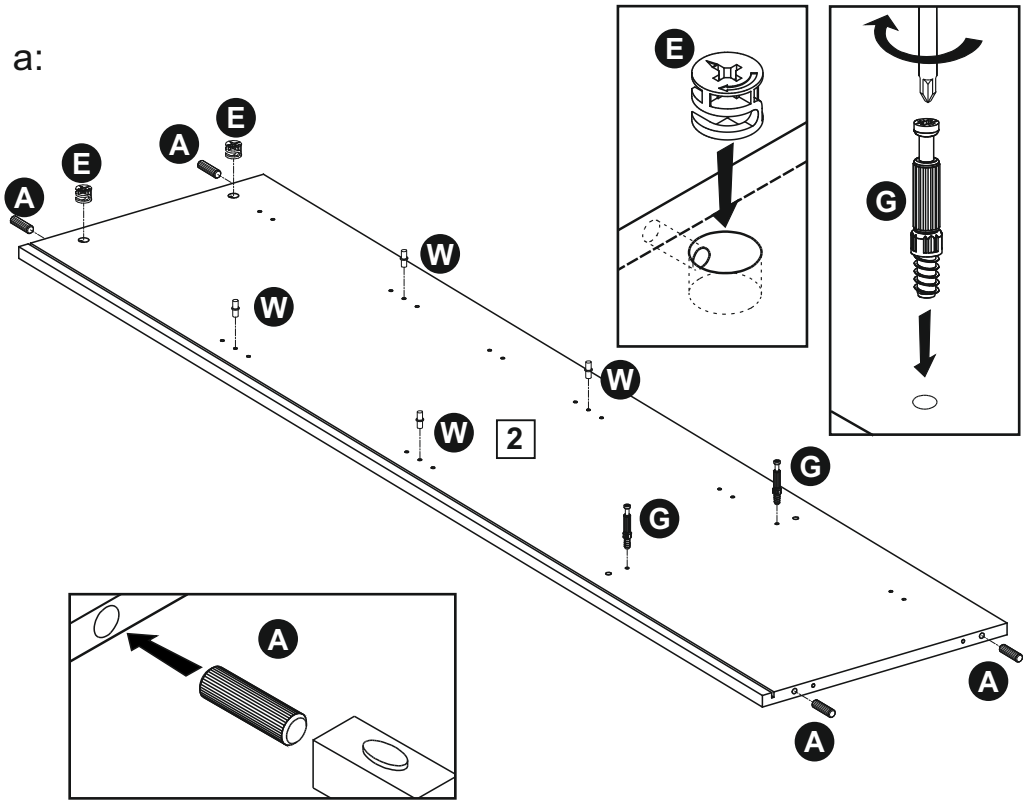

b: Attaching flap stay

Attach flap stay **Q** using screws **O** .

b:

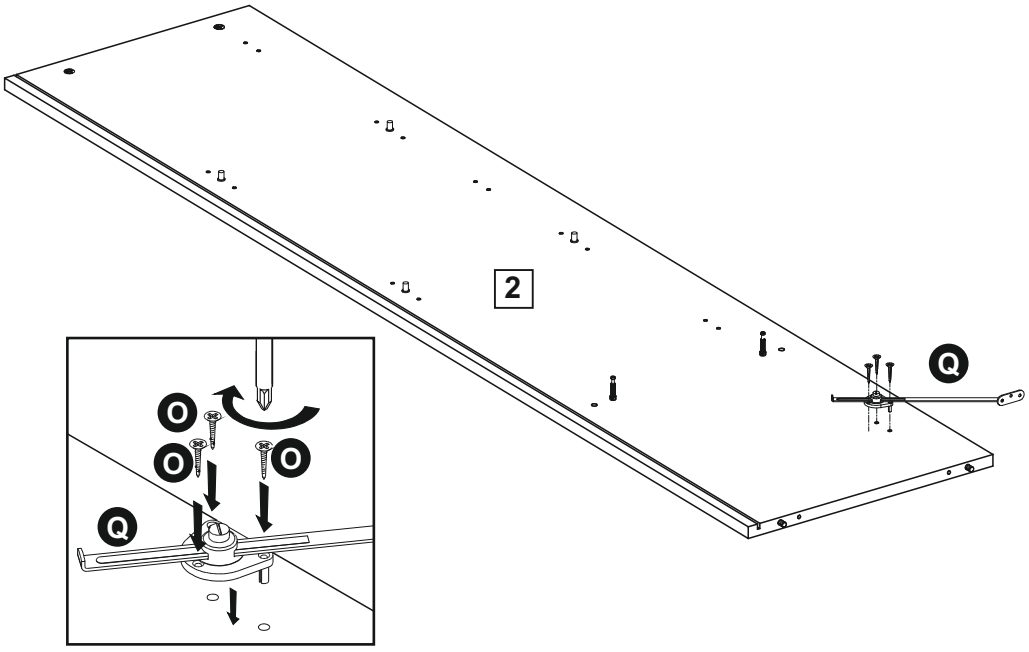


Assembly Instructions


Step 3

a: Inserting dowels and locking nuts

Screw metal dowels (G) into the top [3] .

Insert shelf support (W) into the top.

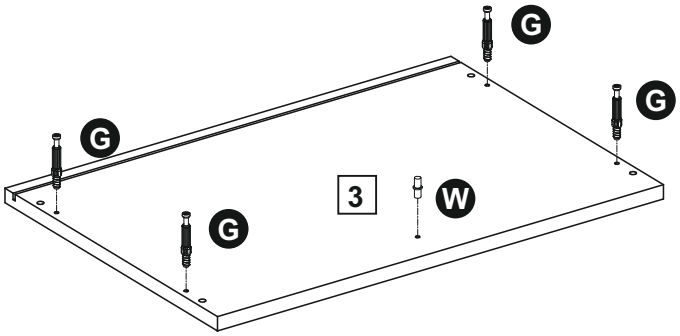

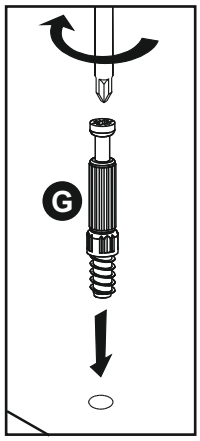



Insert locking nuts (E) into the horizontal partition [5].


Insert wooden dowels (A) into the horizontal partition [5].

Rotate horizontal partition.

Insert shelf support (W) into the horizontal partition.

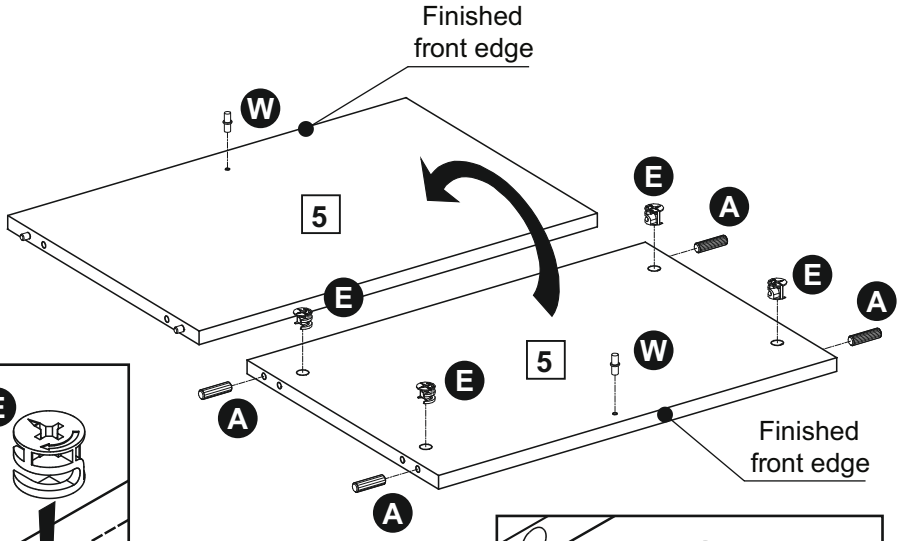


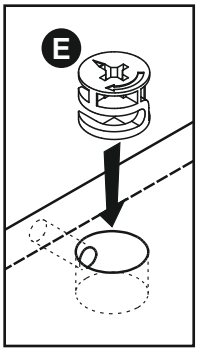


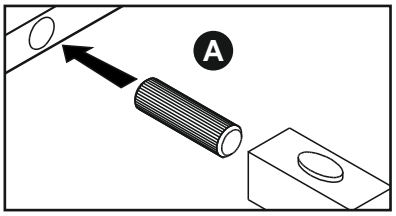

WARNING!
Please wear goggles or protective eyewear whilst hammering dowels in place.

Attach “hinge plates" (B) into the bottom [4] .

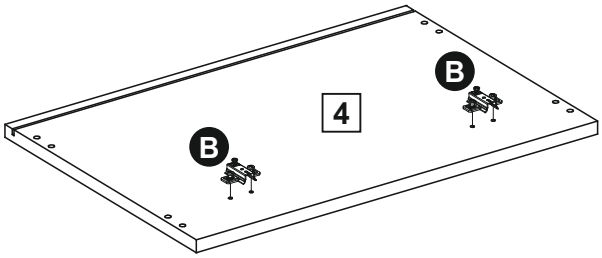

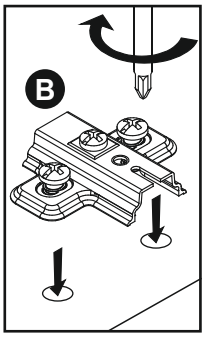

Assembly Instructions


Step 4


a: Inserting dowels

Insert wooden dowels **A**

into the long plinth **12**.

Repeat with short plinth **13**.

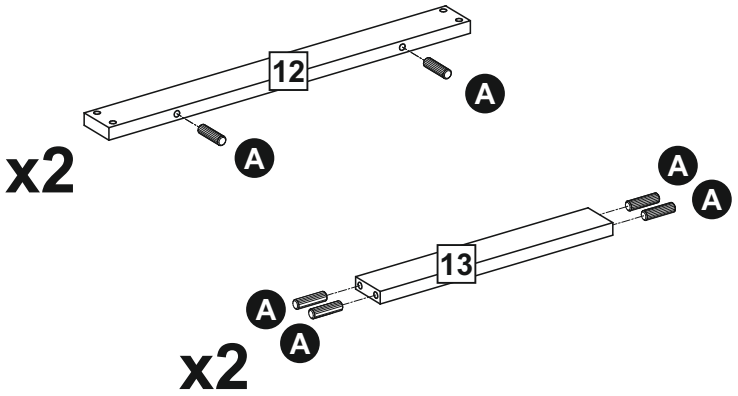

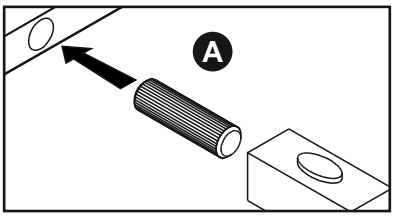


WARNING!
Please wear goggles or protective eyewear whilst hammering dowels in place.

Step 5

Fitting hinges to flap

Fix 2 hinges **C** to the flap **8** using screws **D**.

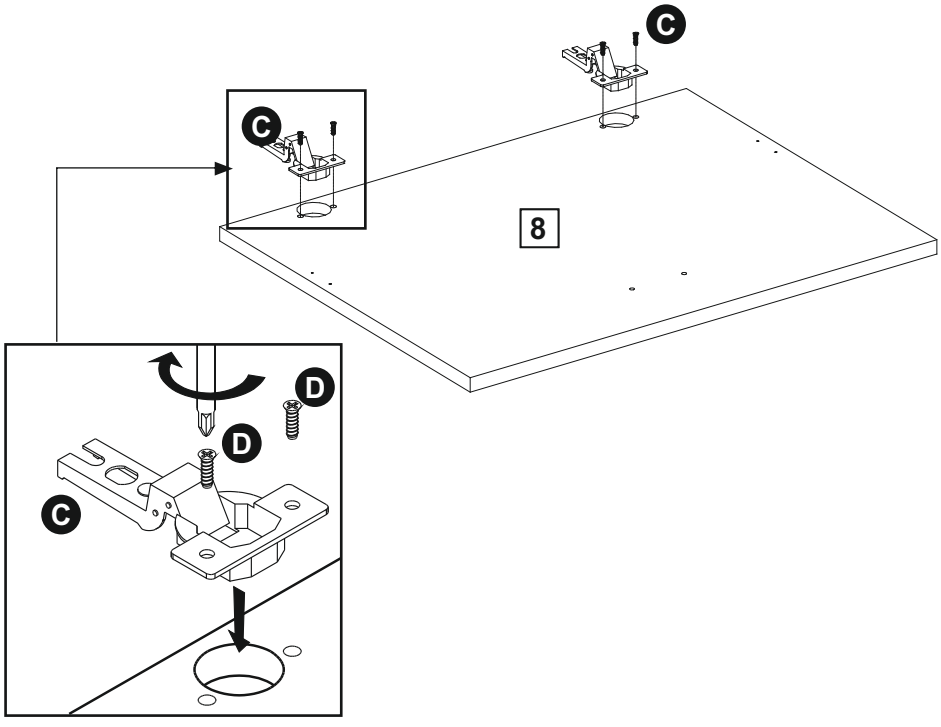

Assembly Instructions


Step 6


Attaching glass

Attach front glass 9.

into the door 7 using glass clamp X & screw N

WARNING!
We do not recommend the use of power drill/ drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

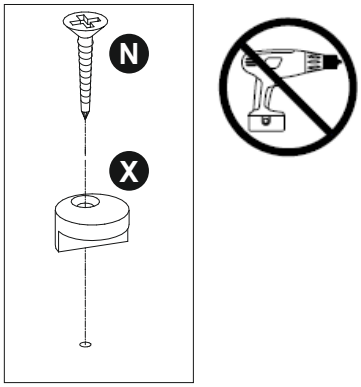


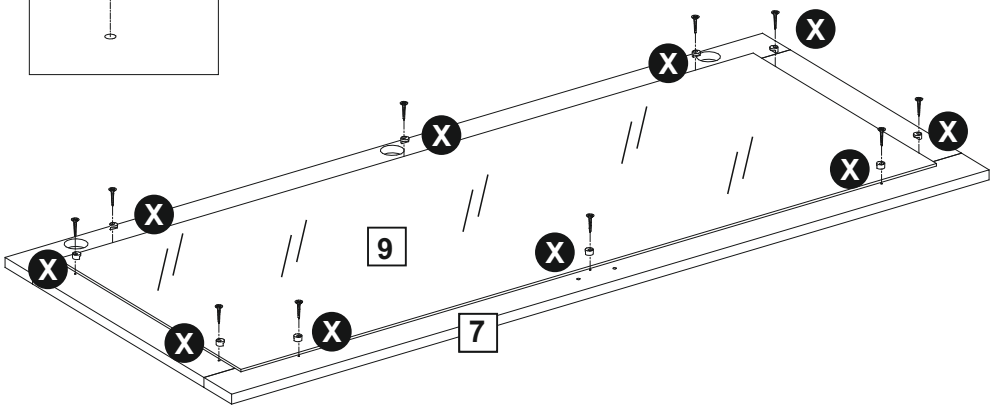


Step 7

Fitting hinges to door

Fix 3 hinges C to the door 7 using screws D.

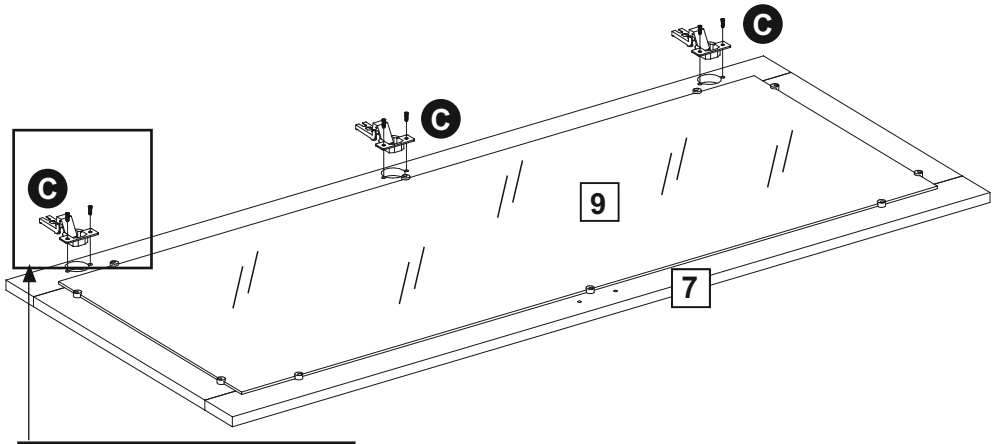

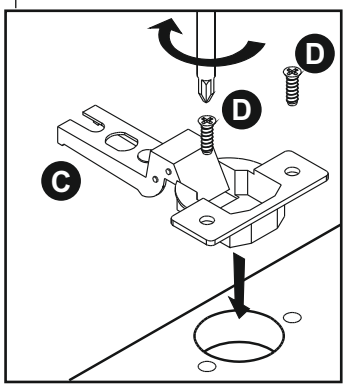

Assembly Instructions

Step 8

a: Attaching plinth

Attach feet P to the long plinth 12

Attach long plinth 12

to the short plinth 13 .

WARNING!
Please wear goggles or protective eyewear whilst hammering sliders in place.


b: Attaching plinth

Attach long plinth 12


& short plinth 13 to the

bottom 4 .

a:

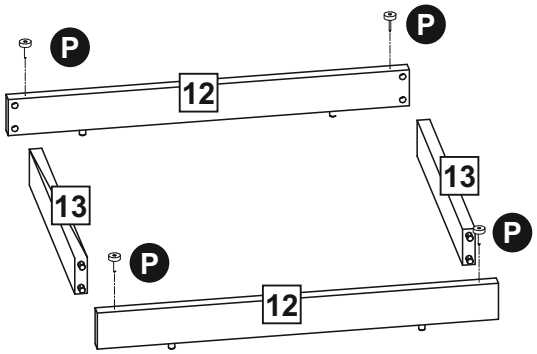


b:

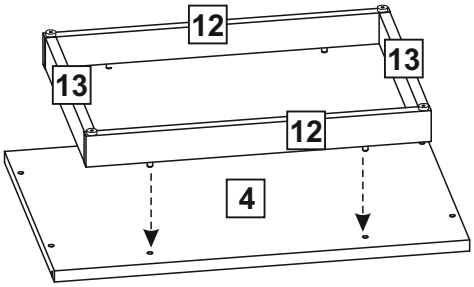


Step 9

Mounting bracket

Place mounting bracket T onto the assembly as shown. Mark holes with a punch and fix the bracket with screws O.

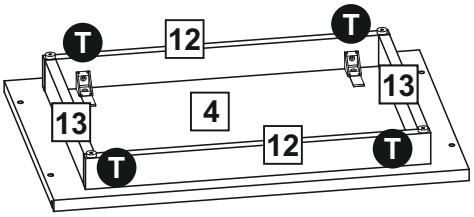

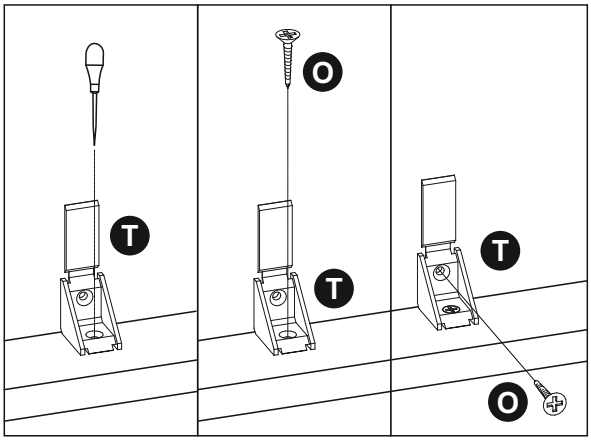

Assembly Instructions


Step 10


Attaching panels

Attach left side panel 1 to the horizontal partition 5

Attach right side panel 2 to the horizontal partition 5.

Use the allen key M to turn locking nuts E clockwise to lock. Cover locking nut with caps F.

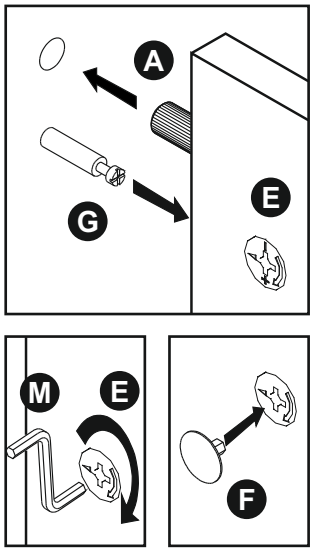

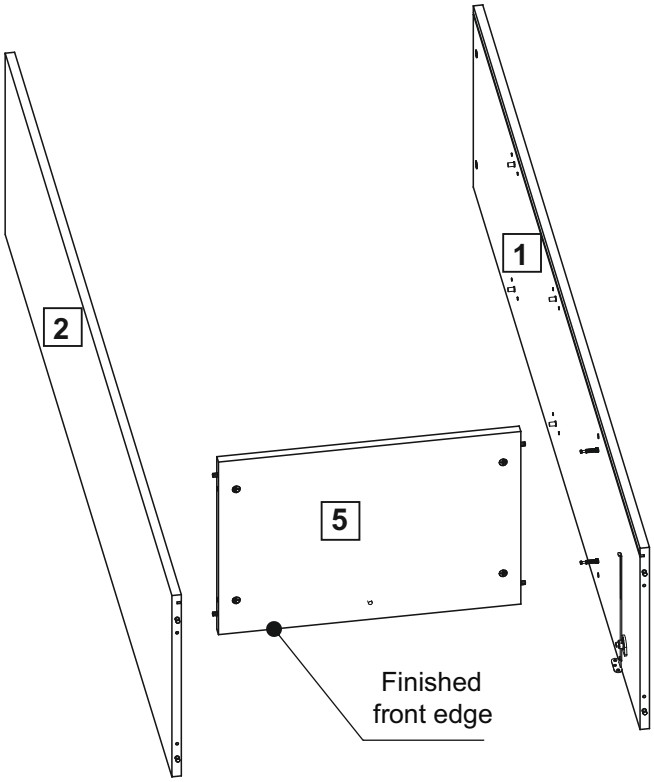


Step 11

Attaching top

Attach top 3 to the sides 1 and 2

Use the allen key M to turn locking nuts E clockwise to lock. Cover locking nut with caps F.

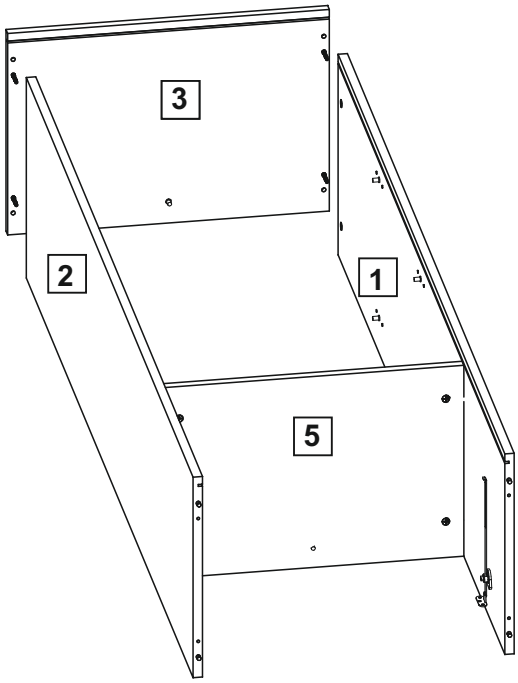


Assembly Instructions

Step 12

Inserting rear panel

Slide rear panels 10 and 11 into the grooves of sides 1 , 2 and top 3 .

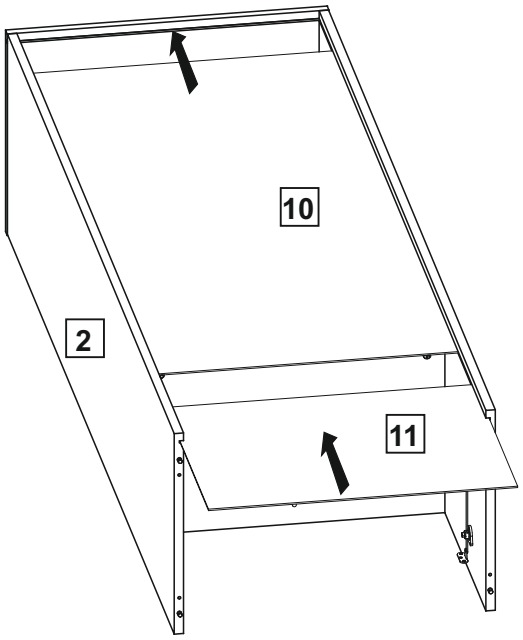



Step 13

Attaching bottom

Attach bottom 4 to the sides using hexagon bolt H & allen key M .

Cover bolts H with caps I .

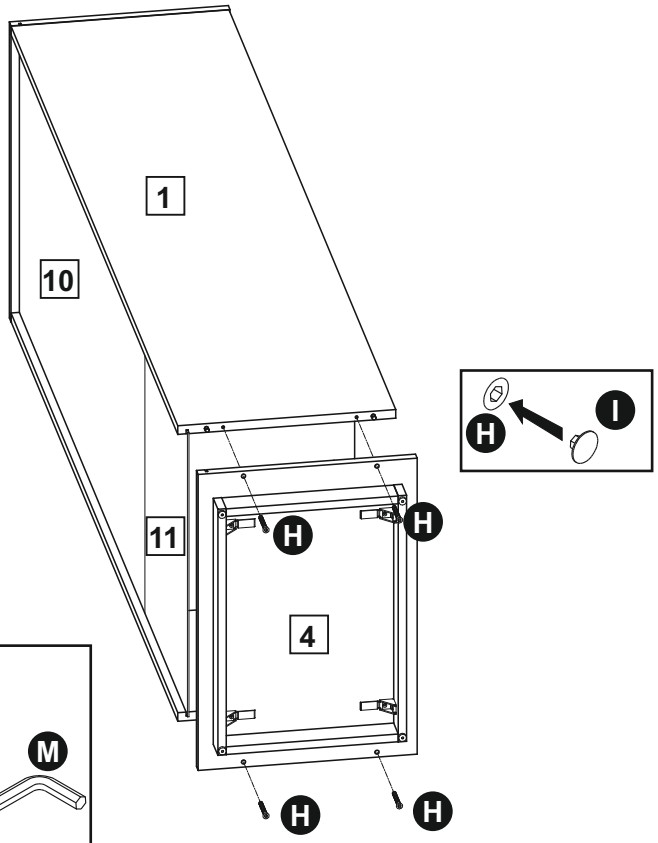

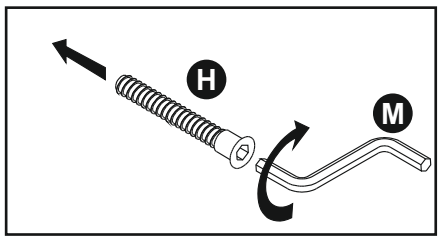

Assembly Instructions

Step 14


Fixing back panels

Fix rear panel to back of tower using stabilizer (S).

Attach washers (U) using screw (N).

IMPORTANT !
Cabinet MUST be “square” when rear panel is attached.

Place wall bracket (R) onto the assembly as shown.
Mark hole with a punch approximately in the middle of the slot in the bracket and fix the bracket with screw (K).

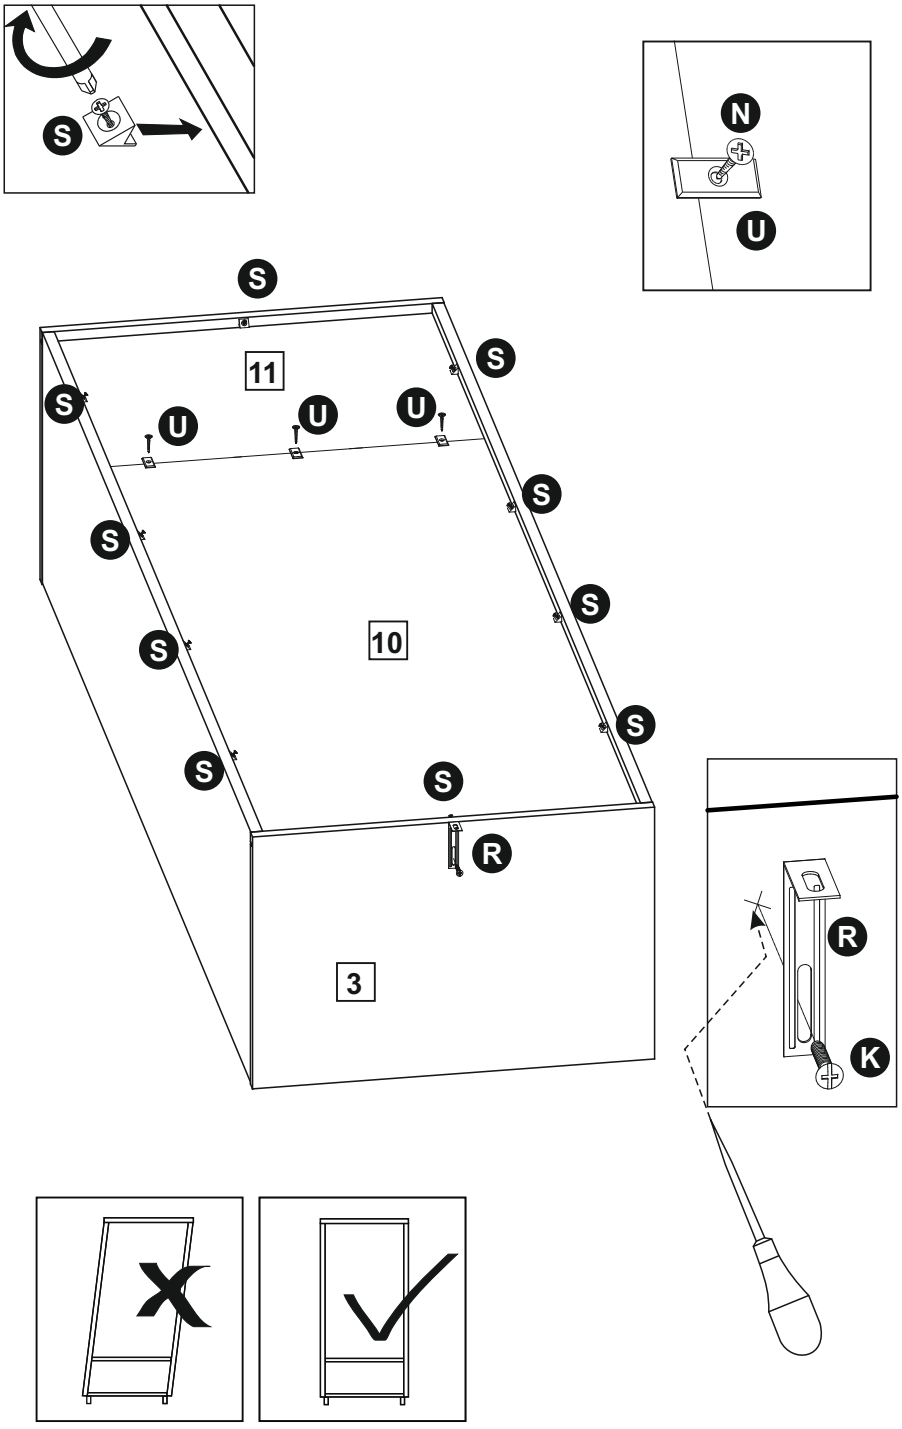

Assembly Instructions

Step 15

Fixing to wall


It is recommended that the tower is fixed to a wall.


With help, move tower into position. Mark fixing hole on wall and remove tower.

Drill a hole on the marking on the wall.

Reposition tower. Fix wall bracket R to wall.

Place a spirit level on bottom 4.
Where necessary, insert height adjuster V to make bottom 4 level.

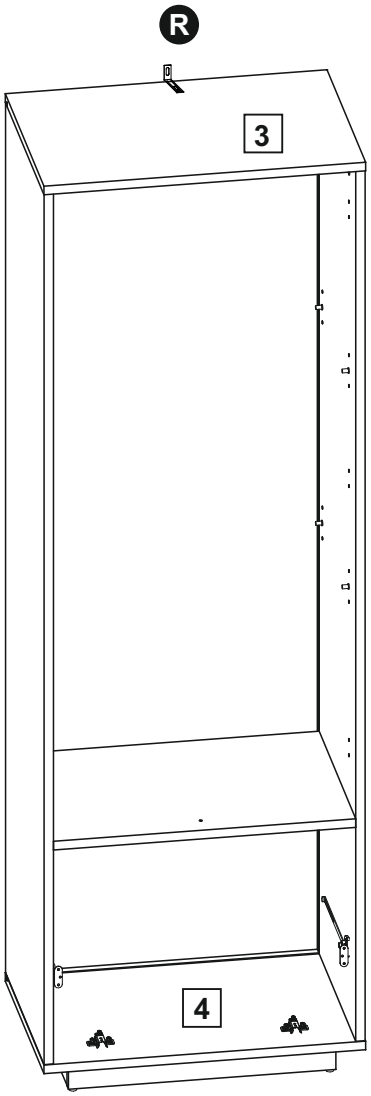

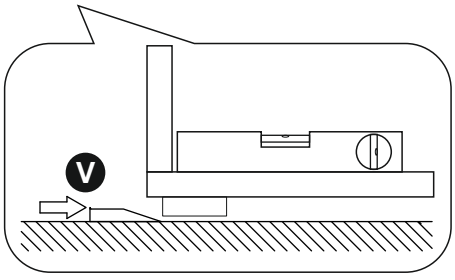


Assembly Instructions

Step 16

a:
For door to open from the left, attach hinge plates **B** on the right. Cover the mounting holes on the left with caps **Y** .

b:
For door to open from the right, attach hinge plates **B** on the left. Cover the mounting holes on the right with caps **Y** .

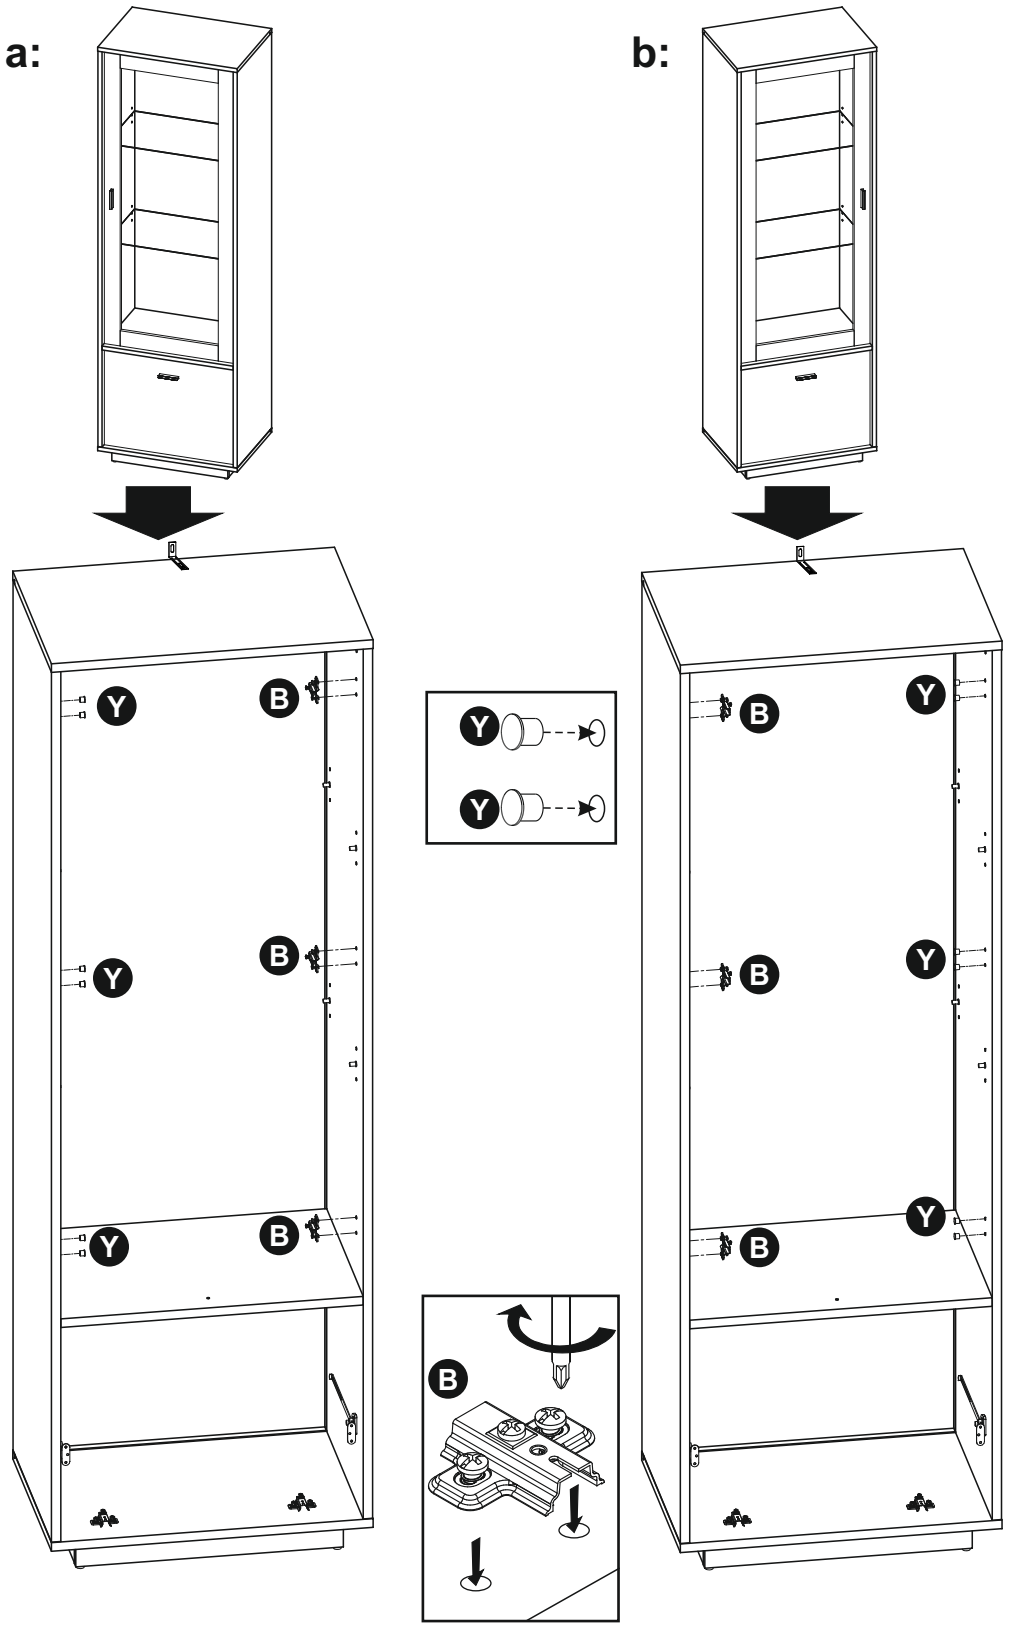

Assembly Instructions

Step 17

If door is set to open from right, please proceed to step 18.

Hanging door

a: slot door hinges C onto 'hinge plates'.

b: Tighten screw shown to lock hinges in position.


If necessary, adjust hinges, to adjust position of door.


Fix flap stay Q to the flap using screws N.

Insert shelf 6.


If necessary, adjust hinges, to adjust position of flap.

Attach handles J using screws L.

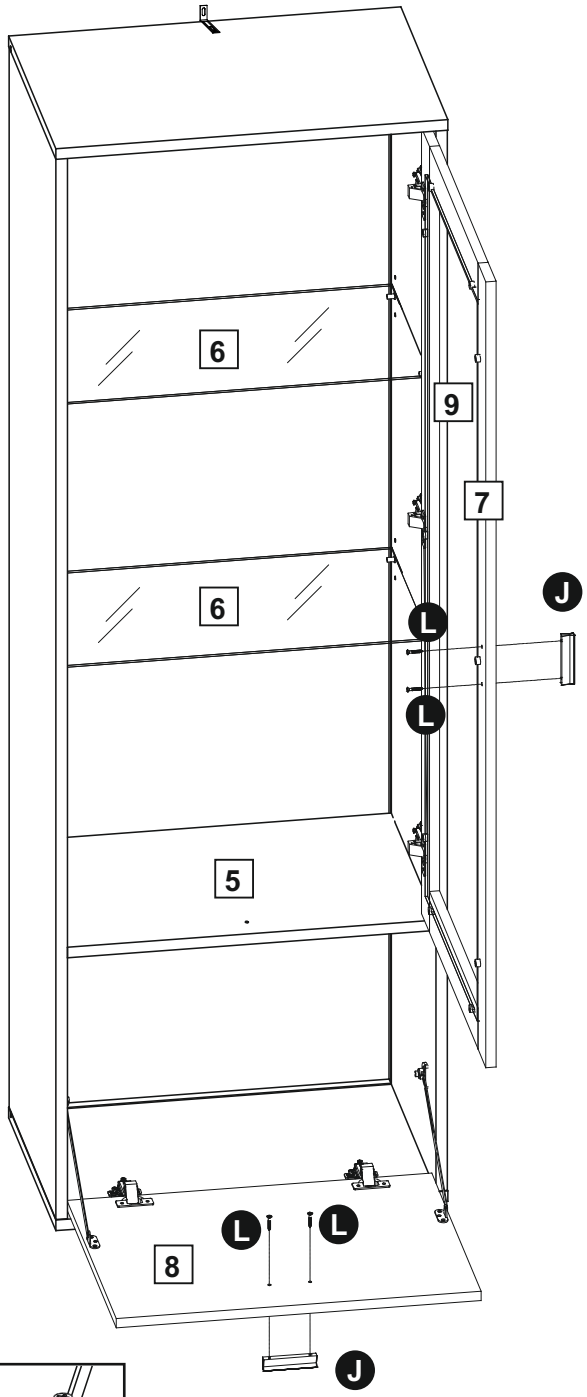

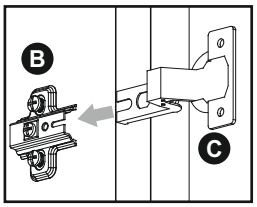



a:

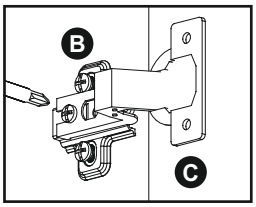



b:


Hinge adjustment

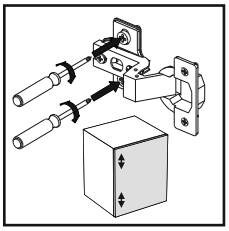

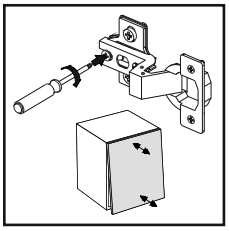

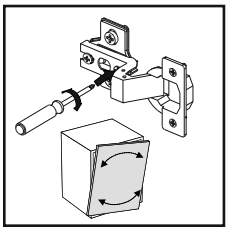

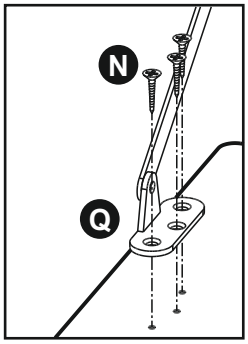

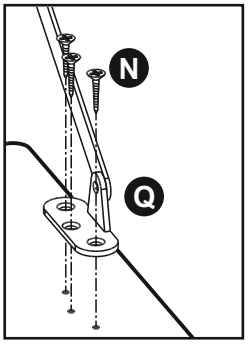

Assembly Instructions


Step 18

Hanging door


a: slot door hinges C onto 'hinge plates'.

b: Tighten screw shown to lock hinges in position.

If necessary, adjust hinges, to adjust position of door.

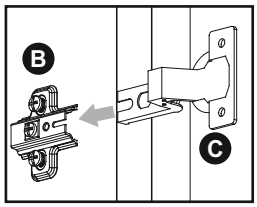



a:

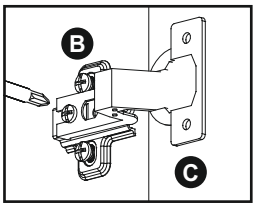


b:

Hinge adjustment

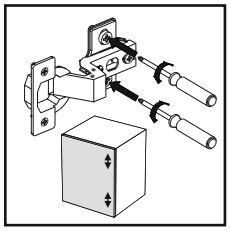

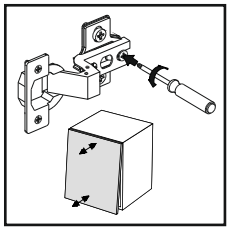

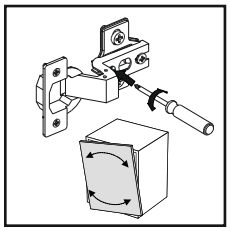



Fix flap stay Q to the flap using screws N.


Insert shelf 6.

If necessary, adjust hinges, to adjust position of flap.

Attach handles J using screws L.

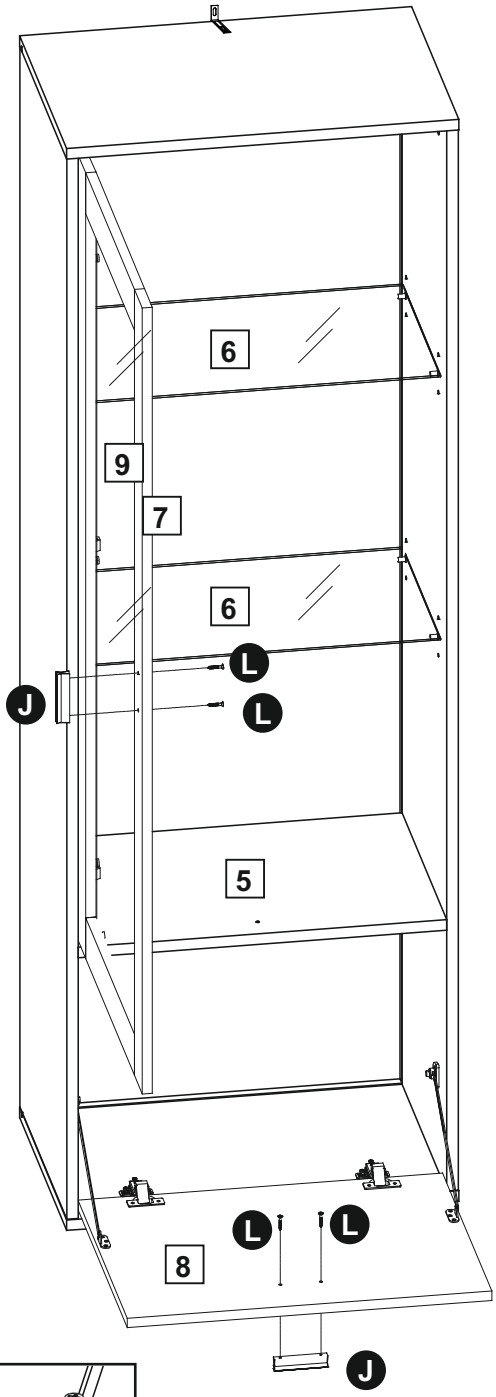

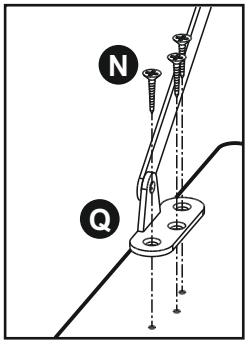

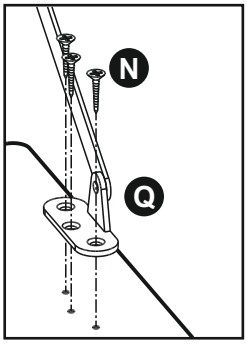


If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 6400 800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: **When drilling into walls always check that there are no hidden wires or pipes etc.**

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: ⚠ Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

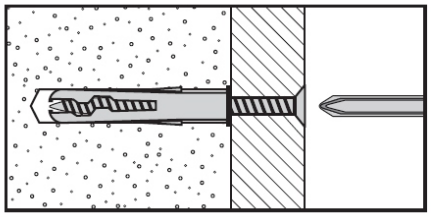


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

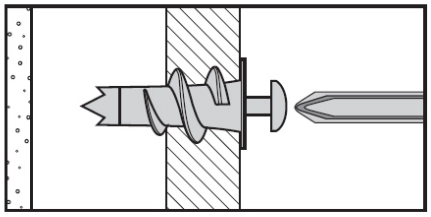


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

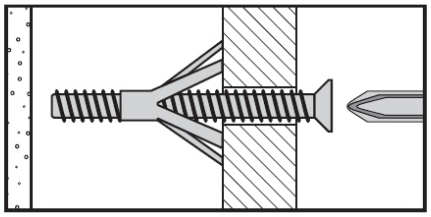


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

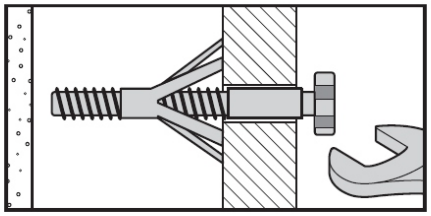


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

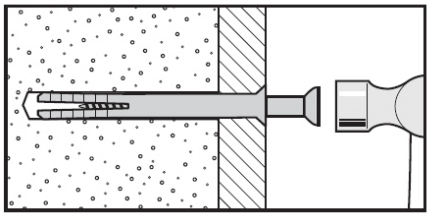

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

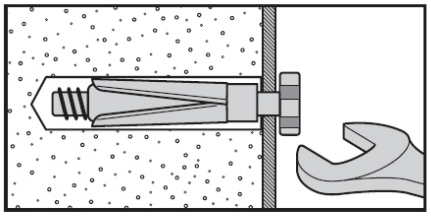

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.