


Components

Ⓐ 1xSeat Cushion

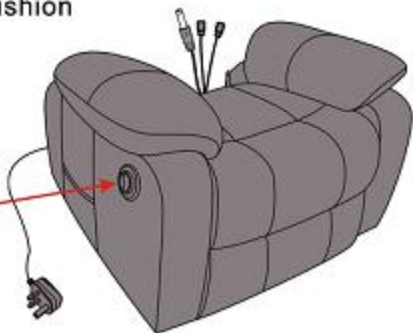


ⓓ 1xUp/Down Button

Ⓑ 1xBack Rest



Ⓒ 1xRemote Control

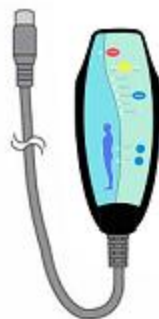

Power+Massage Leather Chair


Simple Assembly Instructions - Please keep for future reference

6893022
6893015
6893039



Fittings

Ⓐ 1xAdaptor

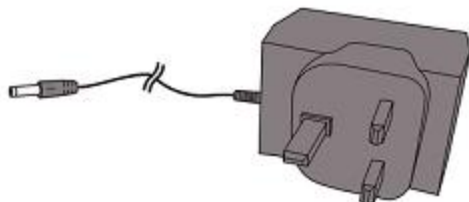

IMPORTANT

1. Read these instructions carefully and familiarise yourself with the procedure before assembling the unit.

3. Take all the fittings out of the plastic bag and separate them into their groups.

2. Check that you have all the component parts following the list on the back cover and familiarise yourself with each part before proceeding.

4. Ensure you have enough space to lay out all the parts before assembly.

5. To avoid scratching it is recommended that you assemble the unit on a soft level surface.

Assembly Instructions

Stage 1 - Fiting the unit



WARNING: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

NOTE: It would be useful to ask someone to help you at this stage.

1. Connect the cables from seat cushion **A** to the cables on back rest **B**, the adaptor **A** and remote control **C**.

See fig.1.

NOTE: After assembling plug the Adaptor into the mains socket.

2. Insert the back rest **B** onto the seat cushion **A**.

See fig.2.



NOTE: Carefully align the two side metal locks to ensure correct alignment.

3. Engage the metal locks and push fit. You should hear them lock into position.

NOTE: Ensure the cables are not trapped but pushed to the side.

4. Fit the velcro cover flap on the back rest **B** onto the velcro on the seat cushion **A**.

See fig.2.

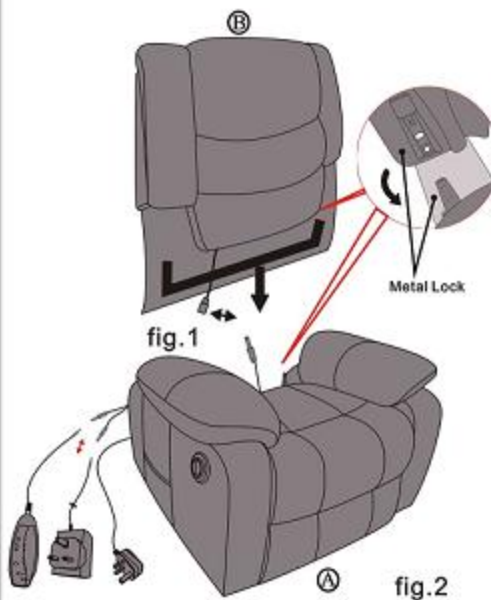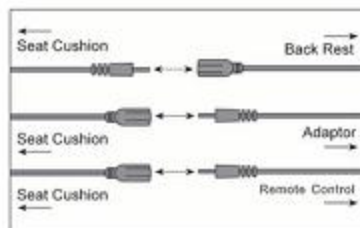

Assembly Instructions

Stage 2 - Adjusting the unit

NOTE: Connect the adaptor to the mains socket.

Back and Foot Rest Adjustment

This chair features a electronic reclining back rest and raised foot rest. You need to use the up/down button **D** to adjust it.


1. Push the up/down button **D** to "Down" Position. The chair will recline and the foot rest will automatically lift up.

See fig.3.

2. Push the up/down button **D** to "Up" Position. The back rest will move forward and the foot rest will lower.

See fig.3.

3. Adjust the recliner to your own requirements.

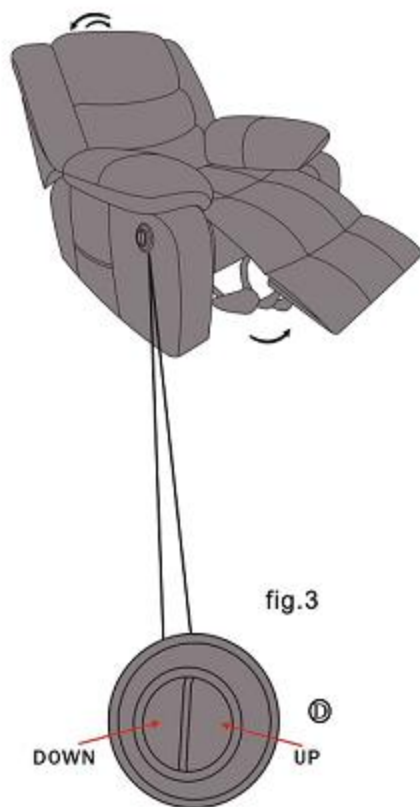

Assembly Instructions

Stage 3 - Operation

1. Press the power button to turn on the unit.

See fig.5.

2. Use the mode, zone and intensity buttons to control the massage settings to your requirements.

See fig.5.

3. Press the buttons to scroll through the levels.

See fig.5.

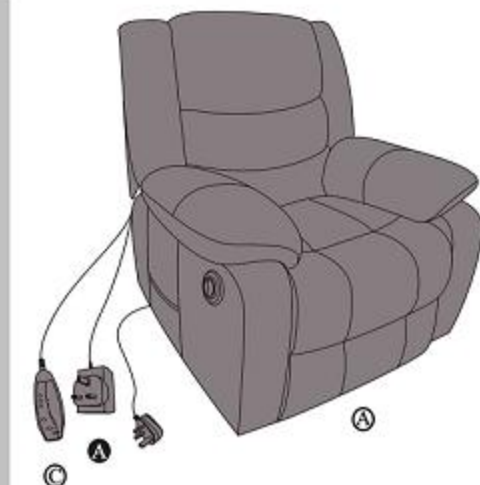


fig.4

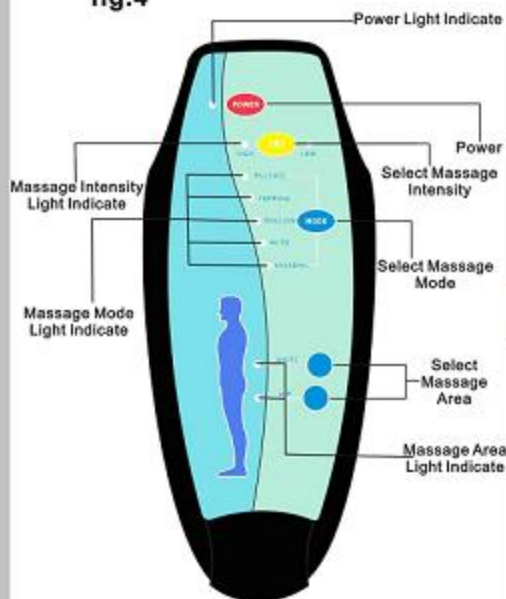


fig.5

Assembly Instructions

Stage 4 - Finishing the Unit



CAUTION:

- Beware of entrapment. Keep hands and fingers clear of mechanism when operating the controls.
- Ensure that children or pets are not playing or lying in the way when the mechanism is operated.
- Prevent children from playing on the furniture or with the controls.
- Ensure that the cable between the transformer and the plug is kept clear of the mechanism under the chair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

NOTE: It would be useful to ask someone to help you at this Stage.

1. Finally carefully place the unit in the desired location.

See fig.6.



fig.6

Care and Maintenance

Safety

To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.

Cleaning

As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products.

Fitting

From time to time please ensure there are no loose screws on the product.

CAUTION: As with all massage products always consult your doctor if you are not sure before use. Always unplug the adaptor after use.