Qualcast
1600W Electric Rotary Mower

2953258
(Model: M2EB1637M)

Instruction Manual



After Sales Support

UK/Ireland	0345 640 0800
Web	www.argosspares.co.uk

Important - Please read these instructions fully before starting assembly

These instructions contain important information that will help you get the best from your mower, ensuring it is assembled correctly and safely.
If you need help or have damaged or missing parts, call the Customer Helpline on 0345 640 0800.

Sep 2014

Contents

Safety Information 3

Warning Symbols 3

General Safety 5

Personal Safety 6

Operating and Maintenance Safety 11

In the Box 12

Parts 12

Assembly 13

Step 1 - Bottom Handle Support Assembly 13

Step 2 - Curved Handle Assembly 14

Step 3 - Grass Collector Assembly 15

Operating Instructions & Tips 16

Mounting / Removing the Grass Collector 16

Grass Full Indicator 17

Setting the Cutting Heights 18

ON/OFF Operation 20

Operation 21

Using as a Mulcher 22

Mowing Advice 23

Maintenance 24

Cleaning & Maintenance 24

Blade Maintenance 24

Maintenance and Storage 24

Troubleshooting 25

General Troubleshooting 25

Technical Data 26

Technical Data Table 26

Disposal 26

Disposal and Recycling 26

Getting Help 26

Safety Information

Important - Please read these instructions fully before starting assembly

Warnings Symbols

The following warning symbols appear throughout this manual and indicate the appropriate safety measures you should take when assembling and operating the mower.

Take extra care, beware of hazards.


Read instruction manual.


Wear eye and ear protection.


Do not use the machine in the rain or leave it outdoors when it is raining.


Pay attention that bystanders are not injured by objects thrown out from the machine.


Keep bystanders a safe distance away from the machine.


Sharp blade. Beware of injury to toes or fingers.


Disconnect from the mains supply before any maintenance work.


Warning. Beware of electric shocks.


Keep the mains supply cord away from the cutting blade.

Safety Information

Important - Please read these instructions fully before starting assembly

Warnings Symbols (continued)



Wait until all moving parts have stopped completely before touching them. The blade may continue to rotate after the machine is switched off, a rotating blade can cause injury.



Noise level specification Lwa in dB.



Protection class II



Do not dispose of electrical equipment in domestic waste.



Cutting width

Important! When using equipment, the following safety precautions must be followed to avoid injuries and damage.

- Read all operating instructions carefully and comply with them. It is important to understand these instructions and to acquaint yourself with the machine, its correct usage and all safety requirements.
- Keep this manual in a safe place so that the information is available at all times.
- If you give the equipment to any other person, give them these operating instructions as well.

⚠ Safety Information

Important - Please read these instructions fully before starting assembly

General Safety

We accept no liability for damage or accidents which result from non-compliance with these instructions.

Intended usage

This lawn mower if designed for use in private gardens. The machine is to be used for its prescribed purpose only. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of misuse.

Please note that this equipment has not been designed for use in commercial, trade or industrial applications. Your warranty will also be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

Assembly

The push handles and the grass collector must be fully assembled, undamaged and in correct working order before using the lawn mower.

Follow the operating instructions step-by-step and use the pictures provided as a visual guide to assemble these parts.

Power supply

Before you connect the equipment to the mains supply ensure that the data on the rating plate corresponds to your mains supply.

Safety Information

Important - Please read these instructions fully before starting assembly

Personal Safety

Note! Only supply power to the equipment through circuit protected by an RCD with a maximum trip current of 30 mA.

- Use only plugs or connectors approved for outdoor usage.
- Extension cables must comply to H07RN-F requirements as described in DIN 57 282/VDE 0282 and must have a minimum cross-section of 1.5 mm^2. The plug must have an earth and any connection must also be earthed and splashproof. Before use, check the cables for signs of damage and ageing. Never use the mower if the cables are not in perfect condition (this also applies to the supply cable on the mower). If the cable is damaged whilst the mower is working, disconnect the mains plug from the power supply immediately and then check the extent of the damage.
- Never allow children or others who are no familiar with the operating instructions to use the lawn mower. Local regulations may stipulate the minimum age of the user of this type of machinery.
- In areas where the mains supply is weak or bearing a high load, this mower may cause further voltage fluctuations as it starts. In extreme cases, this can cause damage to other equipment working from the same supply. In this case we recommend to temporarily switch off any unneeded equipment or connect it to a different circuit.
- This machine is not designed to be used by people (including children) with limited physical, sensory or mental capacities or those with no experience and/ or knowledge unless they are supervised by a person who is responsible for their safety or they have received instructions from such a person in how to use the

machine safely. Children must always be supervised in order to ensure that they do not play with the machine.

- Always check the mower for signs of damage before each usage.
- Always disconnect the mains lead from the electrical supply before carrying out any inspection, servicing or maintenance work.
- Ensure that all the guards are securely fitted and in good working order.
- Check the grass collector at regular intervals for signs of wear and to ensure that it is always in perfect working order.
- Before each use, inspect the mower to check the cutting blade, fastening bolts and the entire cutting unit for any signs of wear or damage. To prevent imbalance or vibration, worn or damaged cutting blades and fastening bolts must always be replaced in full.
- Damaged parts on the mower must be replaced by qualified personnel. Use only genuine spare parts.
- Repair work on the electrical parts of the lawn mower may only be carried out by a qualified electrician.
- Follow the instructions to fit or remove the blade and wear protective gloves.
- The user remains responsible for any injury to third parties within the working area of the lawn mower whilst the lawnmower is being used.
- Only work in good daylight or appropriate and adequate artificial light.
- Never use the mower when you are tired.

⚠ Safety Information

Important - Please read these instructions fully before starting assembly

Personal Safety (continued)

- Never run the mower in enclosed or poorly ventilated rooms or if there are inflammable or explosive fluids, vapours or gases nearby.
- Switch off the motor and disconnect the mains lead before clearing blockages in the grass ejection area and before you inspect it if the mower has struck a foreign body.
- Always use the lawn mower with the grass collector correctly fitted.
- Check the site on which you intend to use the lawn mower and remove all objects that may be caught or thrown up by the mower. Foreign bodies must be removed before you start mowing. Keep an eye of the power cable and keep it away from the cutting blade at all times.
- Ensure that you do not push the mower over areas that might damage or snare the power cable.
- Never lift the lawn mower when you start the motor.
- Before you lift the lawn mower to transport it, switch off the motor, disconnect the mains lead and wait until the blade has come to a complete standstill.
- When you start the motor, the lawn mower should not be tilted unless the grass is particularly long. In this case only tilt it up as far as is really necessary and only raise the side that is furthest away from the user.
- Never reach towards rotating parts with your hands or feet. Always keep away from the discharge chute.
- Before you attach or empty the grass collector, switch off the motor and wait until the blade has come to a complete standstill.

Safety Information

Important - Please read these instructions fully before starting assembly

Personal Safety (continued)

- Make sure you keep your feet at a safe distance from the mower blade at all times! Do not stand near the grass ejection chute if the grass collector is not fitted.
- The safety distance from the moving blade produced by the push handle must be maintained at all times.
- If you use the mower on a small incline, mow across the slope (not in an up and down direction). Always be sure of your footing on slopes.
- Be particularly careful when changing direction with the mower whilst working on a slope.
- Do not use the lawn mower on gradients of over 15 degrees.
- Ensure that you have safe footing at all times whilst working with the mower.
- Always wear strong, anti-slip footwear and long trousers when using the mower. Never mow in bare feet or in open-toed sandals.
- When the mower is running ensure that no person or pet, particularly children and animals, is in the immediate vicinity of the lawn mower. Ensure that you keep everybody at least 10meters away from the mower when it is working.
- Switch off the motor and disconnect the plug from the power supply if the mower strikes a foreign body. Check the mower for signs of damage and carry out all necessary repair work before you start the mower again.

⚠ Safety Information

Important - Please read these instructions fully before starting assembly

Personal Safety (continued)

- If the lawn mower begins to vibrate abnormally, switch it off immediately, disconnect the plug immediately and check it carefully. Ensure that all the nuts, bolts and screws are tight and that the mower is in a safe condition for use.
- Do not leave the mower out in the rain. The lawn must not be wet or very damp.
- Only push the mower at a normal walking pace.
- Be particularly careful when you change the direction of the mower or pull it towards you. Avoid pulling it towards you while the blade is moving.
- Switch off the mower if it has to be pushed over surfaces other than grass, and when moving the mower to and from the area you wish to mow.
- Carefully actuate the starter switch in accordance with the instructions. (See Operating Instructions)
- Do not switch the mower on and off frequently over a short period of time, and in particular do not play with the ON/OFF switch.
- Do not touch the cutting blade until the machine has been disconnected from the mains and the cutting blade has reached a complete standstill.
- Never lift or carry the mower whilst the motor is running.
- Switch off the motor and disconnect the plug whenever you leave the lawn mower.
- Keep the lawn mower in a dry place which is inaccessible to children at all times.
- Before you adjust or clean the mower or check whether the mains lead is kinked or damaged, switch off the mower and disconnect the plug from the power supply.

Safety Information

Important - Please read these instructions fully before starting assembly

Operating and Maintenance Safety

CAUTION! Read all safety requirements and instructions.

Any errors made in following the safety requirements and instruction may result in an electric shock, fire and serious injury.

Keep all safety regulations and instructions in a safe place for future use.

- Do not use the lawnmower if the cords are damaged or worn.
- Do not connect a damaged cord to the mains supply or touch a damaged cord before it is disconnected from the mains supply. A damaged cord could allow parts to become live and cause a risk of electrocution.
- Do not attempt to touch the blades before the machine is disconnected from the supply and the blades have come to a complete stop.
- Keep extension cords away from the blade. The blade can cause damage to cords and lead to contact with live parts.
- Disconnect from the mains supply (i.e. remove the plug from the mains socket)

  whenever leaving the machine unattended,

  before cleaning a blockage,

  after striking a foreign object,


  whenever the machine starts vibrating abnormally.

In the Box

Parts


1. Curved handle section
2. Start / Stop switch lever
3. Safety switch button
4. Switch box
5. Quick release levers
6. Grass box top
7. Grass collector
8. Back wheels
9. Front wheels
10. Cutting height adjuster
11. Bottom handle supports
12. Grass box handle
13. Deflector guard
14. Carrying handle
15. Motor housing

1

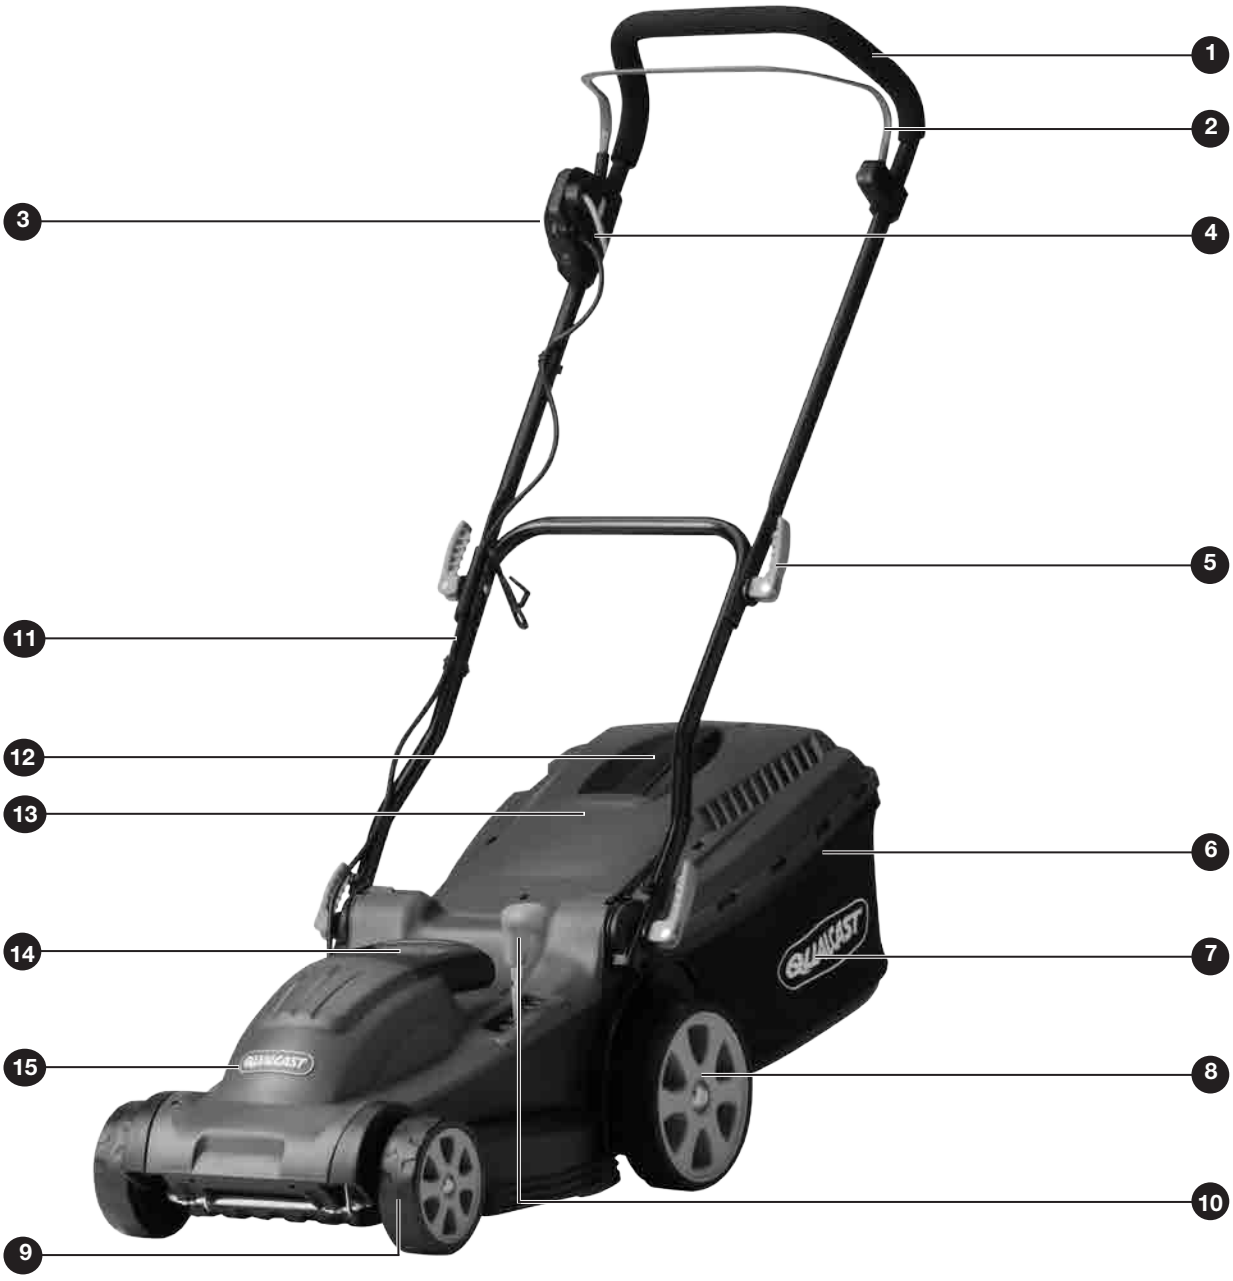

Assembly

Step 1 - Bottom Handle Support Assembly

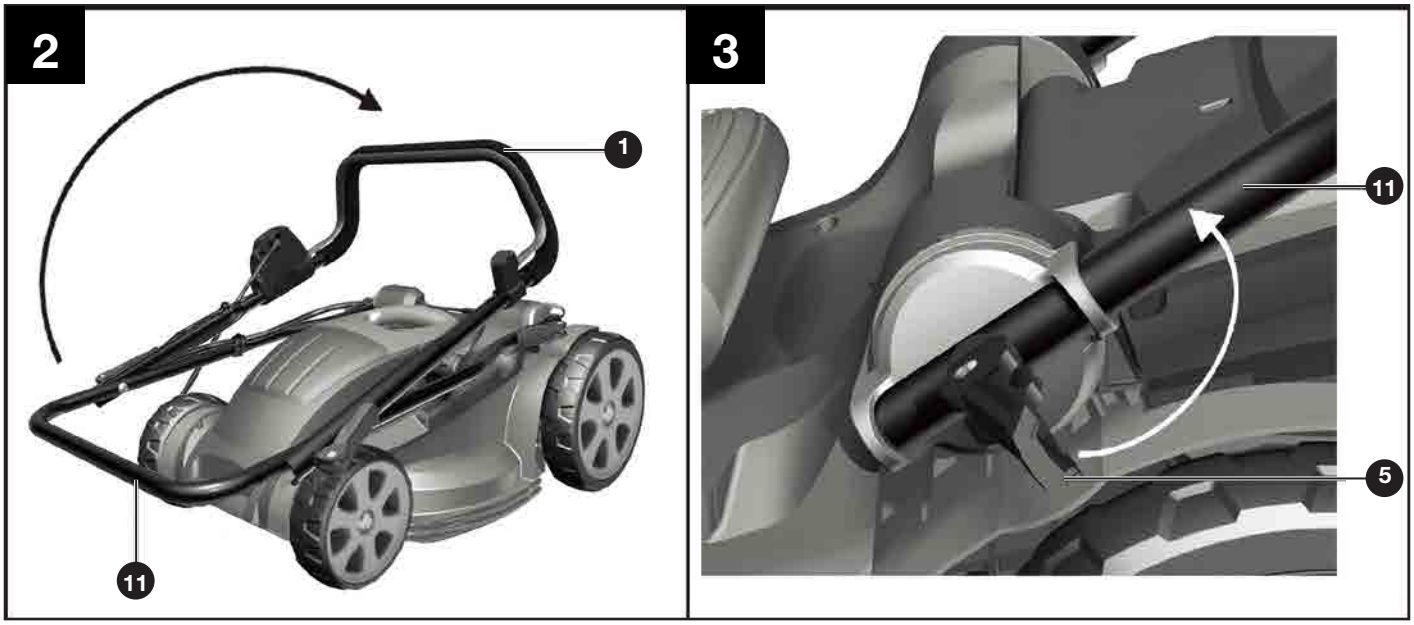


- The bottom handle support **11** is attached to the deck on either side using a bolt, washer and plastic quick release lever. If the handle is not pre-fitted in the box push the bolt (from the inside towards the outside) through the deck, handle, then washer, and fasten into the metal retainer in the plastic lever, in that order.
- Ensure all the plastic quick release levers are unfolded. Hold the bottom handle support in the desired position (fig 3) for operation. Fix the handle in this position by tightening the quick release levers **5** (clockwise) and then locking them into position by folding the levers snug against the handle **11**. These levers should be folded in towards the bar using moderate force to lock them in position. If they feel too tight when you fold them, turn them anti-clockwise to loosen them and then attempt to fold them again. Do not use excessive force.

To tighten - turn clockwise or to loosen- turn anticlockwise, before folding them.

Assembly

Step 2 - Curved Handle Assembly

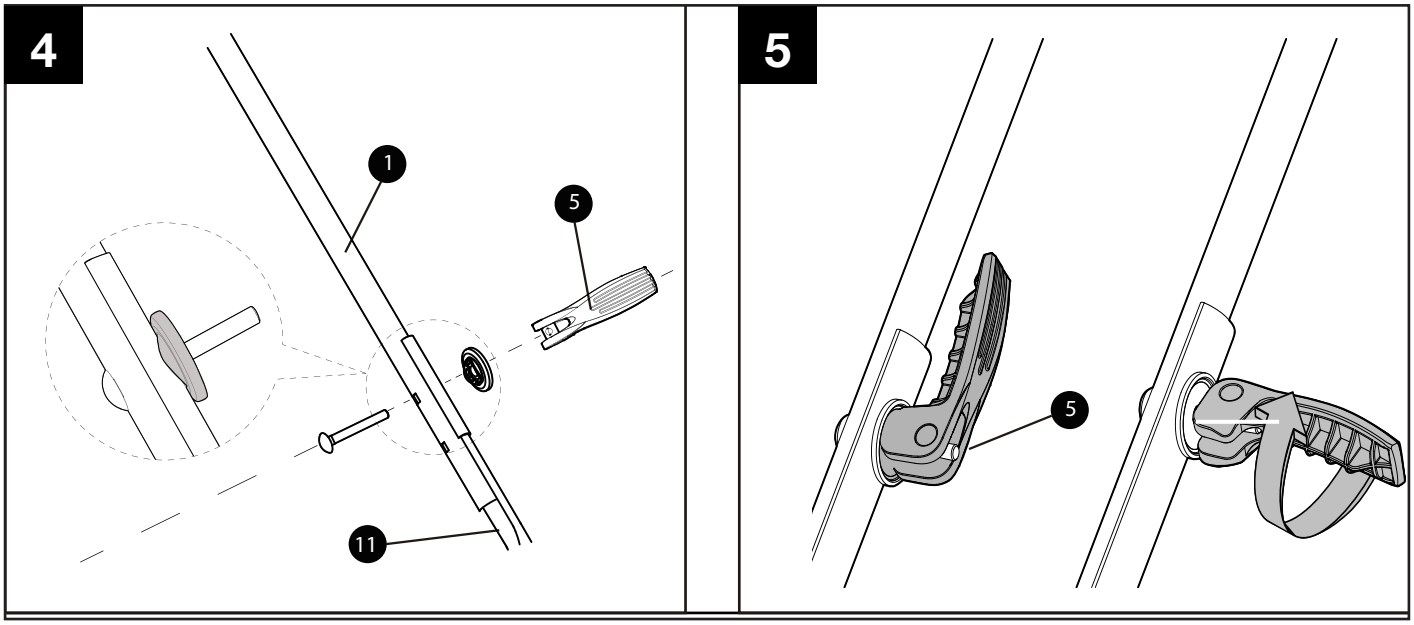

- The top, curved handle section **1** is assembled to the bottom handle support **11** using a bolt, washer and quick release lever **5** on either side. Adjust the height to suite the operator as necessary by inserting the bolt into the required holes on the handle (fig 4)
- The top, curved handle section **1** is assembled to the bottom handle supports **11** using a bolt, washer and quick release lever **5** on either side. Adjust the height to suite the operator as necessary by inserting the bolt into the required holes on the handle (fig 4).
- Hold the curved handle in the desired operating position (fig 4). Fix the handle in this position by tightening (clockwise) the quick release levers then fold them against the handle. These levers should be folded in towards the handle using moderate force to lock them in position. When locked there should be no play between the top and bottom handle assemblies.

  To tighten, unfold these lever, turn them clockwise, then fold them back (fig 5).


  To loosen, unfold these levers, turn anticlockwise, then fold them back in (fig 5).

Several adjustments may be needed to find the correct setting. Do not force.

Assembly

Step 3 - Grass Collector Assembly

3a

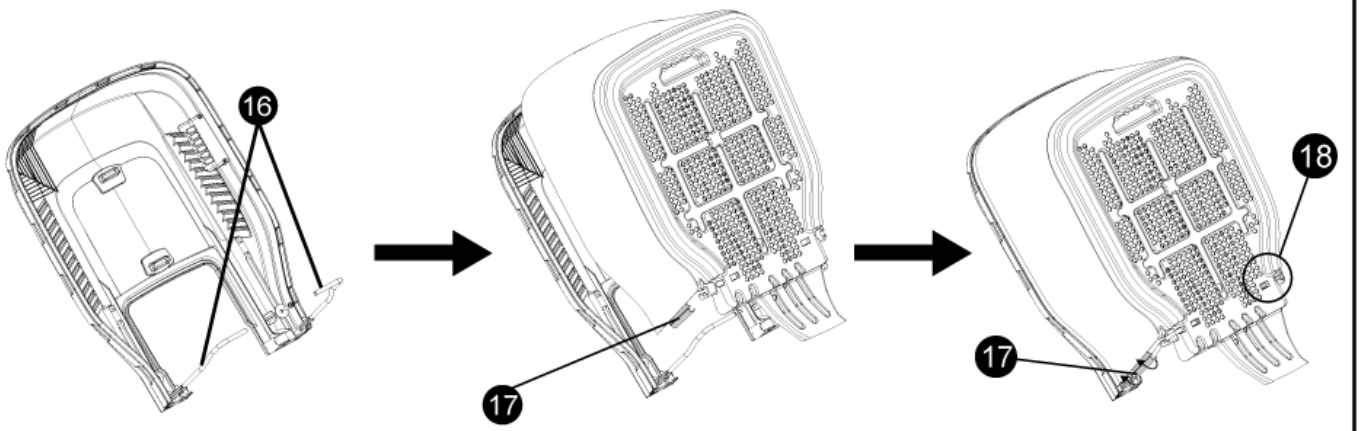

3b



3a. Clip the plastic retainers 17 two sides of the cloth grass collector onto the metal frame 16
Fully insert the rods of the metal frame 16 into the slots 18 on either side of the plastic base of the grass collector

3b. There is a hole 19 in the bottom of the grass collector to hang it up if required.

The grass collector is also designed to collapse into a compact size to reduce storage space when the lawnmower is not in use.

To do this reverse stage 3a.
Remove the metal frame 16 from the slots 18 on either side of the plastic base of the grass collector.
Unclip the plastic retainers of the cloth grass collector from the metal frame. Fold grass collector.

Operating Instructions & Tips

Mounting / Removing the Grass Collector

7



- Lift the deflector guard **13**
- Place the grass collector on the mounting bracket **20** provided at the back of the lawn mower.
- Lower the deflector guard **13** onto the grass collector - it will keep it in place.
- To remove the grass collector, lift the deflector guard **13** and unhook the grass collector from the mounting bracket. Ensure the deflector returns to its original position.

Operating Instructions & Tips

Grass Full Indicator



- Your mower may be fitted with a grass full indicator. This is a small red flap on the top side of the grass collector.
- When this flap remains open as you work, it means that the grass collector is not full (air flowing freely through the grass collector).
- When this flap remains closed it means that the grass collector is full and needs to be emptied (no airflow through the grass collector)

Operating Instructions & Tips

Setting the Cutting Heights



Operating Instructions & Tips

Setting the Cutting Heights (continued)

IMPORTANT! Ensure the power cord is disconnected from the mains supply before adjusting the cutting height.

To adjust the cutting height, gently pull the height adjustment lever towards you to disengage it from its existing position and move it to the desired cutting height position. Ensure it clicks back firmly into position.

Before you begin to mow, check to ensure that the blade is not blunt or damaged and that none of the fasteners are lose. To prevent any imbalance, replace blunt and/or damaged blades. Always ensure the blade is at a standstill and the motor disconnected from the mains before checking the blade.


Position	**Cutting height**
1	20 mm
2	30 mm
3	40 mm
4	50 mm
5	60 mm
6	70 mm

A higher cut height should generally be selected for the first cut of the season. When cutting longer grass, cut the grass in 2 or more passes by lowering the cutting height gradually at each pass. These techniques will help to a avoid over-stressing your grass.

Operating Instructions & Tips

ON/OFF Operation

10

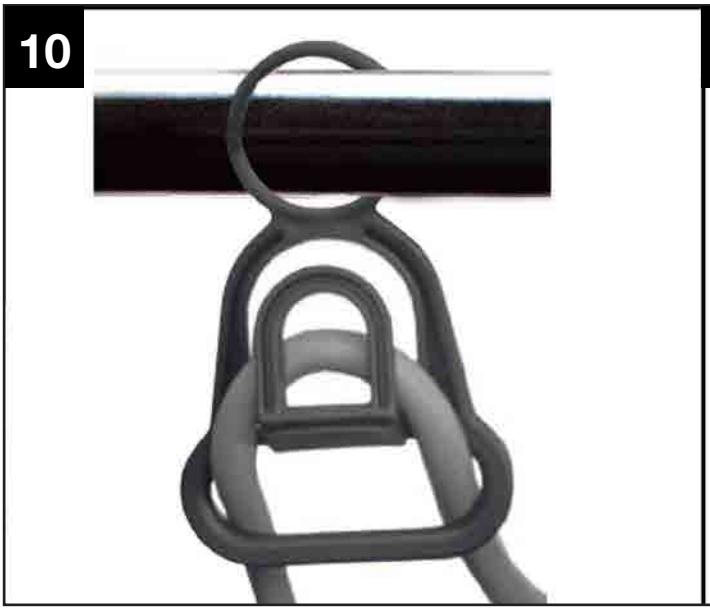

11



Make a loop at the end of the cable and hang the loop onto the strain relief on the cross bar.

- Connect the mower to your power supply socket.
- Before switching on, ensure that the mower is not in contact with any foreign objects.
- To switch on, press the safety lock-off button **3** on the handle, then activate the start/stop switch lever **2**. Release the lock-off button **3**.
- To switch off, release the start/stop switch lever **2**.

After switching off the equipment, the blade may continue to turn for several seconds. Do not touch the moving blade. There is a risk of serious injury.

Operating Instructions & Tips

Operation

Before you connect the equipment to the mains supply make sure that the data on the rating plate corresponds to your mains supply.



IMPORTANT! Always ensure the on/off switch is working correctly. Do not use if you suspect a fault. Before you perform any repair or maintenance work on the machine, ensure that the blade is not rotating and that the power supply is disconnected.



IMPORTANT! Never open the deflector flap to empty the grass collector if the motor is still running. The rotating blade can cause serious injuries and throw objects out at high speed.

Always ensure grass deflector and grass collector fit securely. Always switch off the motor before you remove these items.

A safe distance between the blade deck and the user is provided by the length of the handle. This distance must be maintained at all times. Take special care when mowing and changing direction on embankments and slopes. Ensure that you have a secure surface to stand on, wear shoes with anti-slip soles that offer good grip, and long trousers. Always mow across the slope (not in up or down direction).


Do not use the mower on gradients exceeding 15° for safety reasons.

Take special care when moving backwards and pulling the lawn mower. Never pull the mower backwards when the motor is running.


Operating Instructions & Tips

Using as a Mulcher

12

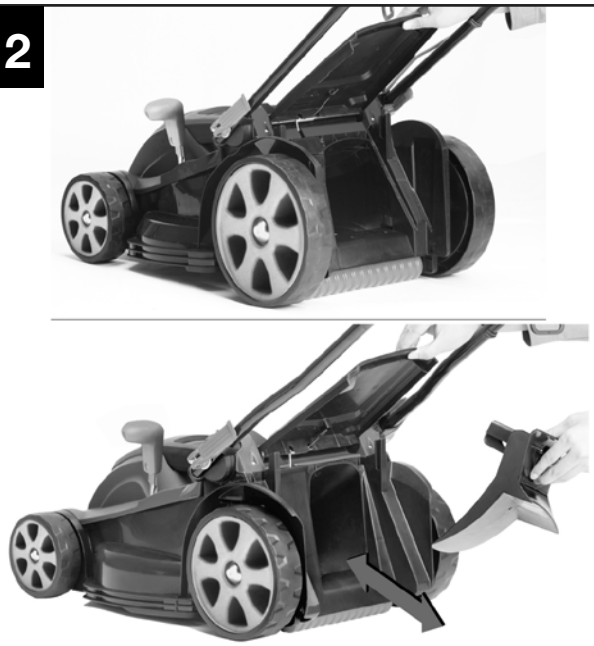

13

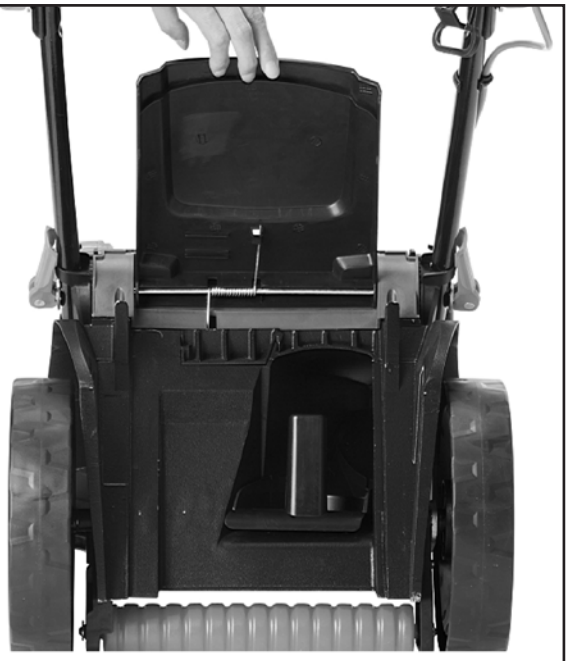

14



- Your lawnmower is supplied with a mulching plug.
- Before fitting the mulching plug,disconnect the lawnmower from the mains supply.
- Lift the deflector guard and insert the mulching plug into rear discharge chute (fig 12), ensuring it is correctly fitted (fig 13).
- The mulching plug retains the cut grass inside the deck and cuts this grass several more times into very small particles before it is deposited back onto the lawn. This finely cut grass acts as a nutrient for the lawn.
- The rear roller (fig 14) leaves a stripe finish on the lawn and helps to prevent scalping on borders and edges.

Operating Instructions & Tips

Mowing Advice

We recommend that you mow in overlapping lines. Only mow with a sharp blade so that the blades of grass do not fray. This can cause grass to turn yellow. To achieve a good cut, guide the lawn mower in lines that are as straight as possible. These lines should always overlap by a few centimeters so that you do not leave any uncut strips.

How often you need to mow your lawn depends on how fast the grass is growing. During the main growth period mow more frequently. If the grass is longer than usual, cut it in 2 or more stages. This will cause less stress to both the mower and the grass. Never cut the grass by more than half its height.

Keep the under side of the mower casing clean and remove all grass deposits from it. Deposits make it more difficult to start the mower and also adversely affect the mowing quality and the grass collection. Switch off the motor before you carry out any inspections of the blade. Remember that the blade will continue to turn for a few seconds after the motor has been switched off. Never attempt to stop the blade.

Check regularly that the blade is correctly secured, in good condition and sharp. If not, sharpen or replace the blade.

If the moving blade strikes an object, stop the mower and wait until the blade has come to a complete standstill. Then check the condition of the blade and the blade mounting. If they are damaged, they must be replaced.

Place the mains lead in loops on the ground near the wall socket. Mow away from the socket and cable and ensure that the mains lead is always on the section of lawn that you have already mowed so that you do not run over the mains lead with the mower.

If you you see mown grass on the lawn whilst you are mowing it means the grass collector is full and needs to be emptied immediately.



IMPORTANT! Before you remove the grass collector, switch off the motor and wait until the blade reaches a complete standstill.

To remove the grass collector, raise the deflector guard with one hand and remove the grass collector holding its handle with your other hand.To maintain safety, the deflector guard will close when you remove the grass collector to seal the rear discharge opening. If any grass drops onto the ground you need push the mower away from the area to make it easier to re-start the motor.

Do not remove grass cuttings in the mower casing or on the cutter by hand or with your feet. Instead use suitable tools such as a brush or broom. To ensure efficient grass collection the grass collector should be cleaned after use. This will ensure the air is able to flow freely through it for best grass collection performance.

Only fit the grass collector when the motor is switched off and the blade is not moving. Raise the deflector guard with one hand and, holding the grass collector by its handle in your other hand, position it squarely onto its support. Ensure it fits snug against the body of the mower before starting.

Maintenance

Cleaning & Maintenance

WARNING: Always switch the product off, disconnect it from power supply and let the product cool down before performing inspection, maintenance and cleaning work!

Cleaning

- Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible. Wipe the equipment with a soft brush or blow it with compressed air at low pressure after usage.
- Clean the mower regularly with a moist cloth and some soft soap. Do not use cleaning agents or solvents; these may damage plastic components.
- Ensure that no water can seep into the device.

Blade Maintenance

If the blade is blunt, it can be sharpened in a specialised workshop. If the blade is damaged or showing signs of imbalance, it must be replaced.

Carry out the following steps to change the blade:

- Turn the mower over and rest it carefully on its side .
- Use sturdy gloves and hold the blade firmly. Turn the blade bolt anticlockwise to remove the blade .
- Install the new blade in the reverse order. Ensure that the blade is positioned correctly and the screw tightened firmly. The blade's wings should be angled upwards (towards the mower).
- Tighten the fastening bolt. The tightening torque should be approx. 25 Nm.



IMPORTANT! Always wear work gloves when engaging in any maintenance work.

Only replace the blade with a genuine replacement blade as this will ensure top performance and safety under all conditions.

Maintenance and Storage

- There are no parts inside the mower which require additional maintenance.
- Store in a dry place, out of reach of children.

Troubleshooting

General Troubleshooting

The following table provides solutions to common problems encountered with the mower.

Fault	Possible Cause	Solution
Mower does not start	No power at mains socket	Check the fuse, switch, socket, cable, wire and have any repairs carried out by a qualified electrician
	Defective on/off switch	Repair by a qualified technician required
	Worn carbon brushes	
	Defective motor	
	Grass too long	Set at a higher cut setting. Lift the front wheels slightly by pressing down on the handle bar.
Motor stops	Blade is blocked	Disconnect from mains and remove blockage
Untidy finish, motor labours	Cut height too low	Set a higher cut height
	Blade blunt	Sharpen or replace the blade
	Blade area blocked	Remove blockage
	Blade assembled incorrectly	Install the blade correctly
Blade fails to turn	Blade blocked by grass	Remove blockage
	Blade bolt loose	Tighten the blade bolt
Strange noises, rattling or vibrations	Blade bolt loose	Tighten the blade bolt
	Blade damaged	Replace the blade

Technical Data

Technical Data Table

Specification	Value
Voltage	220-240 V ~ 50 Hz
Power input	1600W
Motor speed	3250min^{-1}
Cutting width	37cm
Cutting height adjustment	20, 30, 40, 50, 60, 70mm; 6 levels
Volume of grass collector	40 liters
Wheel size	140/200mm
LpA sound pressure level	93.7 dB(A) K=2.16 dB(A)
LWA sound power level	96 dB(A)
Vibration at the handlebars ahv	< 2.5m/s^2
Protection class	⧈ II

Disposal

Disposal and Recycling



Do not dispose with household waste.

Recycle products and components according to local legal requirements.

Getting Help

After sales helpline number: 0345 640 0800

Spare parts purchases: www.argosspares.co.uk