

Cheval - 3 Door Robe


Assembly Instructions - Please keep for future reference

147/9489

152/5326

147/7807

141/2219

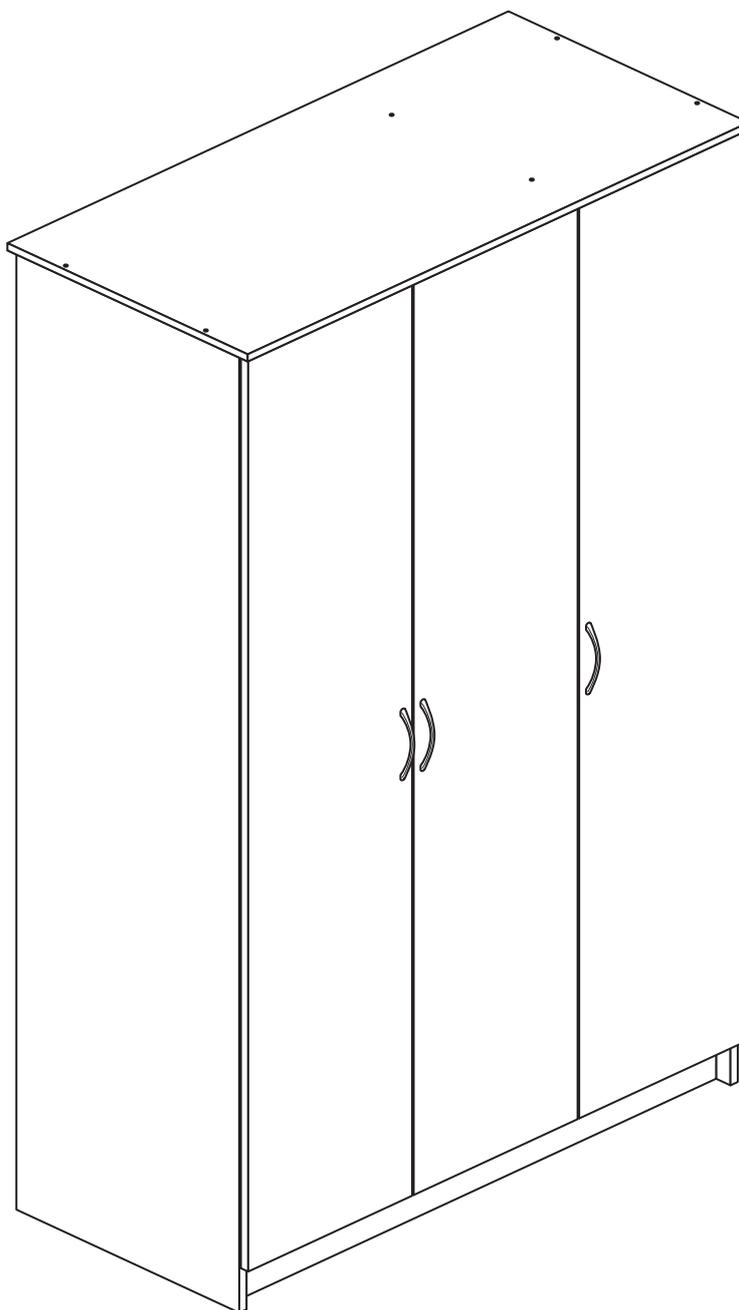

Dimensions

Width - 103cm

Depth - 49.5cm

Height - 200cm



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 67kgs. Please lift with care.
- Check you have all the components and tools listed on pages 1, 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.






- **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

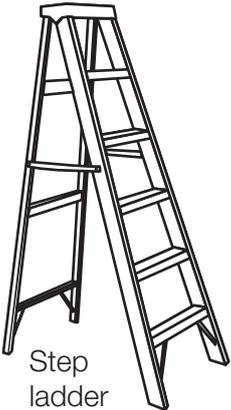
 Rule	 Spirit level	 Eye protection (when using a hammer or drill)	 Cross-head screwdriver	 Electric drill (only use when drilling into walls)	 Step ladder
 Square	 Scissors	 Hammer	 Bradawl		

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** quoting the reference numbers below


Please check you have all the panels listed below

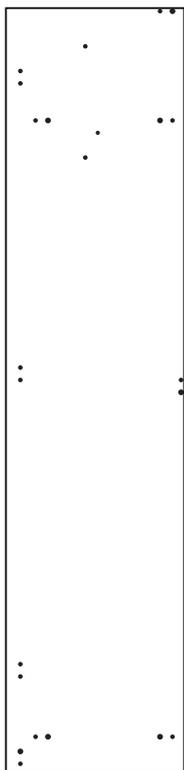


1 Left Side (D2720A)
(1981 x 458mm)

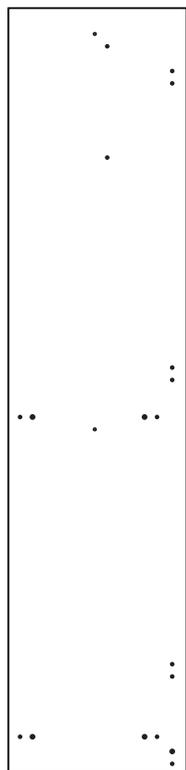


2 Right Side (D2726A)
(1981 x 458mm)

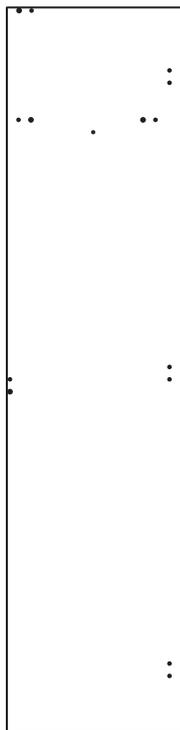

3 Upright (D2731A)
(1879 x 455mm)

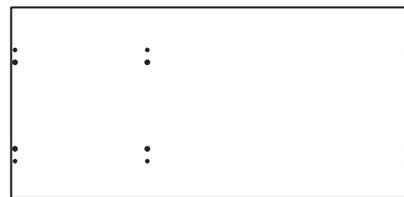

4 Top (D2727A)
(1030 x 494mm)

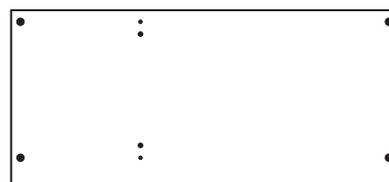

5 Base (D2733A)
(995 x 456mm)



6 Plinth (D2729A)
(995 x 86mm)




7 Rail (D2724A)
(654 x 86mm) x 2



8 Small Hanging Rail (FHR317)
(317mm long) x 2




9 Large Hanging Rail (FHR646)
(646mm long)

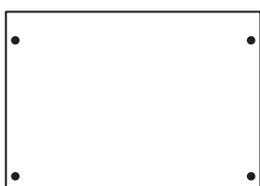

10 Large Horizontal (D2722A)
(654 x 456mm)




11 Small Horizontal (D2732A)
(325 x 456mm)

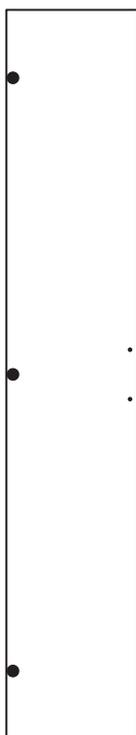

12 Door (D2725A)
(1888 x 337mm) x 3



13 Small Back (X1890-345)
(1890 x 345mm)

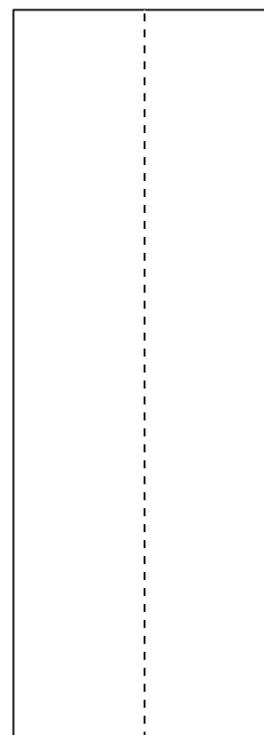

14 Large Back (X1890-674)
(1890 x 674mm)









Components - Fittings


If you have damaged or missing components, call the
Customer Helpline: 08456 400800 quoting the reference
 numbers below

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
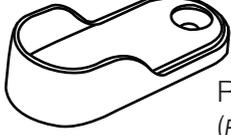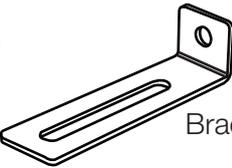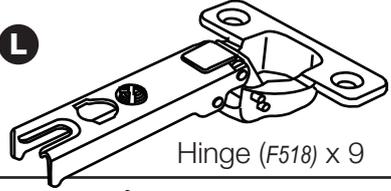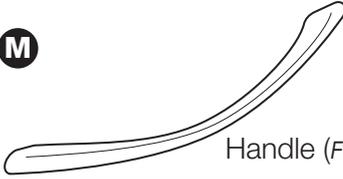
<p>A </p> <p>Wooden dowel (F22) x 26</p>	<p>B </p> <p>Metal dowel (F901) x 18</p>	<p>C </p> <p>Large locking nut (F900) x 18</p>
<p>D </p> <p>Nail (F51) x 39</p>	<p>E </p> <p>40mm Screw (F910) x 8</p>	<p>F </p> <p>19mm Screw (F461) x 6</p>
<p>G </p> <p>13mm Screw (F79) x 1</p>	<p>H </p> <p>13mm Screw (F63) x 30</p>	<p>I </p> <p>Rail Holder (F891) x 6</p>
<p>J </p> <p>Bracket (F327) x 1</p>	<p>K </p> <p>Hinge plate (F523) x 9</p>	<p>L </p> <p>Hinge (F518) x 9</p>
<p>M </p> <p>Handle (F274) x 3</p>	<p>N </p> <p>Nail screw (F277) x 5</p>	<p>O </p> <p>Back holder (F276) x 5 *These can also be round</p>
<p>P </p> <p>Plastic Nail (F91) x 4</p>		

Ruler - Use this ruler to help correctly identify the screws

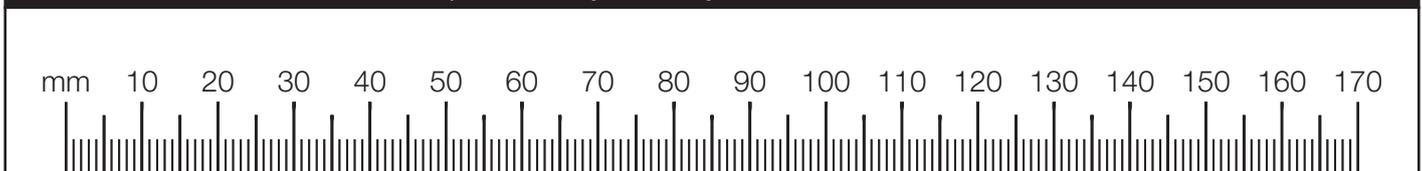

Assembly Instructions

If you have damaged or missing components, call the Customer Helpline: 08456 400800 quoting the reference numbers below

Step 1

Prepare the upright

a: Tap 4 wooden dowels **A** into the upright **3**.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Screw 2 metal dowels **B** into the upright **3**.

Note: Tighten the metal dowels up fully against the panels.

Fit 2 rail holders **I** to the upright **3** using 2 screws **H** in each.



Turn the upright over

b: Screw 4 metal dowels **B** into the upright **3**.


Fit 3 hinge plates **K** onto the upright **3**, making sure that the slot is facing towards the finished front edge.

Fit a rail holder **I** to the upright **3** using 2 screws **H**.

To fit the rail holder, screw through its top hole and into the shallow mark hole drilled in the panel. Make sure that it is fitted straight, in line with the panel edges and then fit another screw using the lower hole.

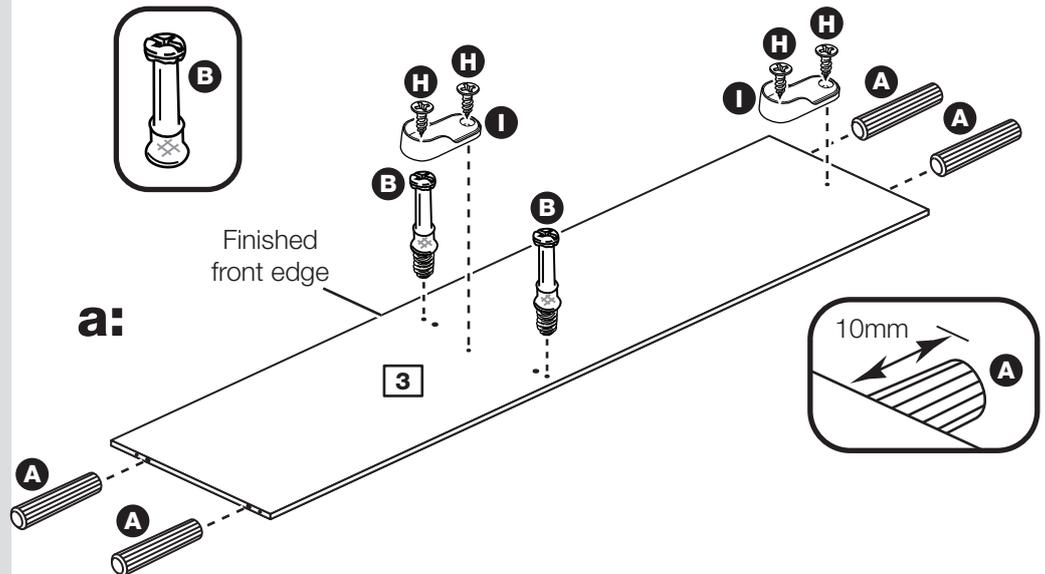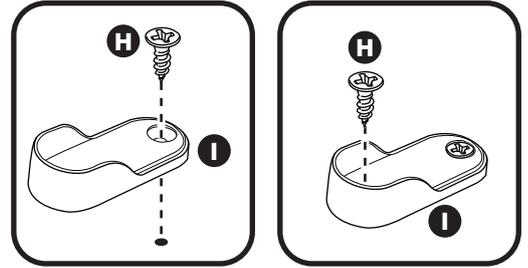

Turn the upright over

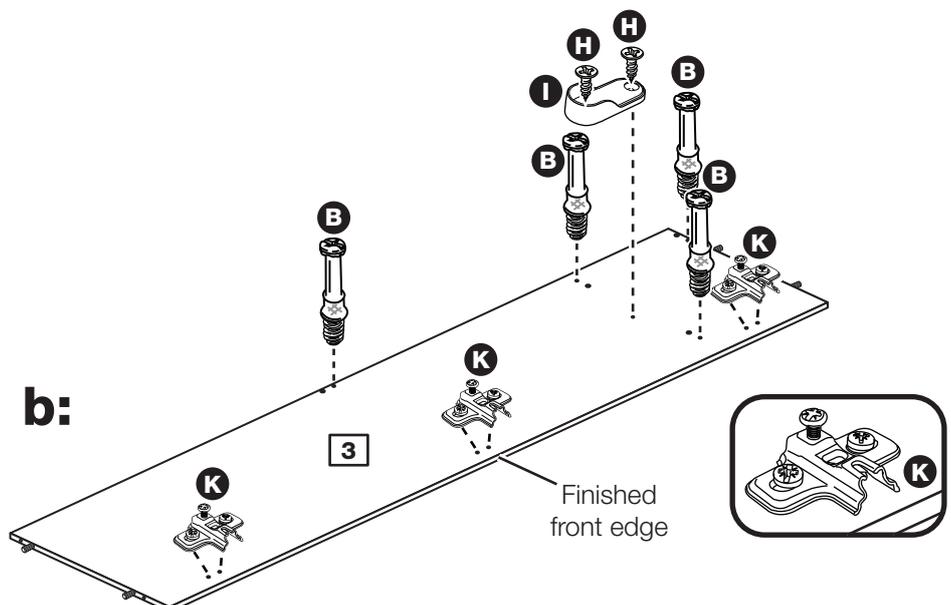

Assembly Instructions


Step 2

Prepare the large horizontal

Tap 4 wooden dowels **A** into the large horizontal **10**.

Insert 4 large locking nuts **C** into the large horizontal **10**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

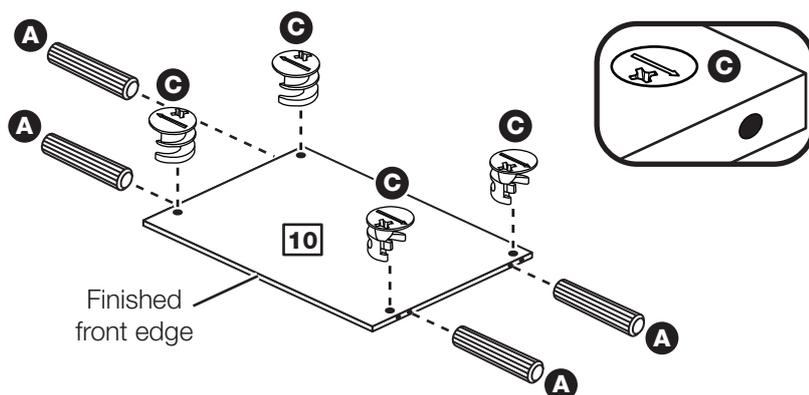


Step 3

Fit the large horizontal to the upright

Push the large horizontal **10** onto the upright **3**.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the large horizontal **10**.

Note: Turn the large locking nuts **C** as far as they will go - more than 1/2 a turn.

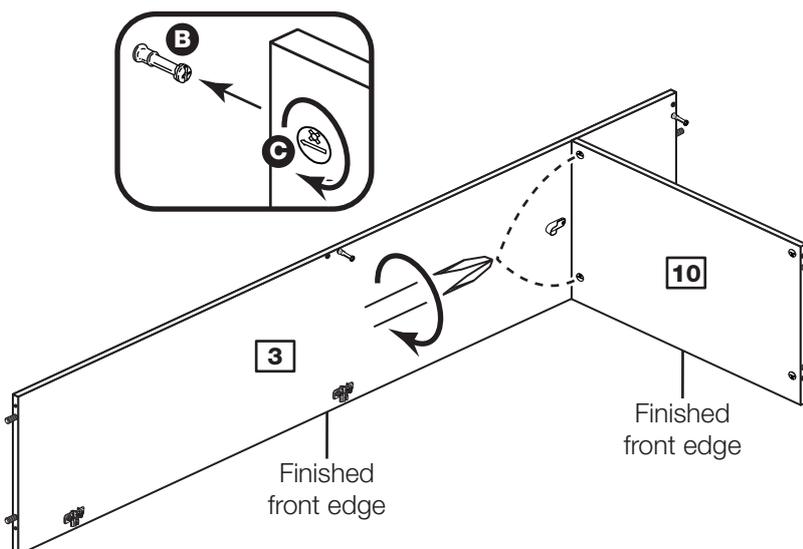


Step 4

Prepare the small horizontal

Tap 4 wooden dowels **A** into the small horizontal **11**.

Insert 4 large locking nuts **C** into the small horizontal **11**.

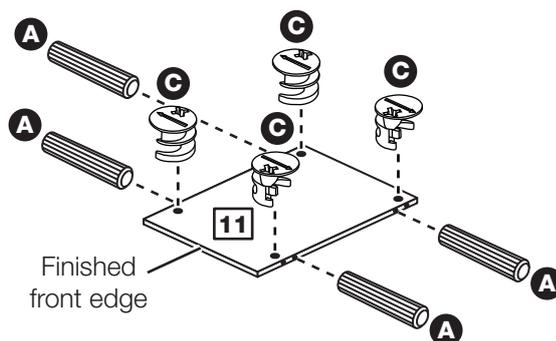


Assembly Instructions

Step 5

Fit the small horizontal to the upright

Push the small horizontal **11** onto the upright **3**.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the small horizontal **11**.

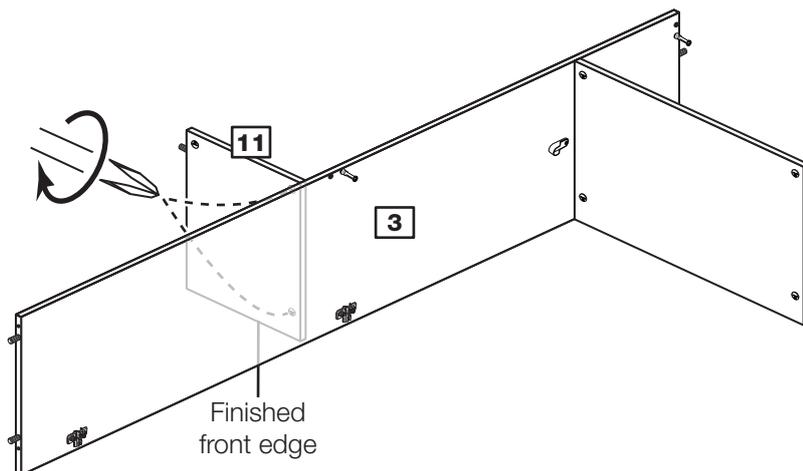


Step 6

Prepare the base

Tap 4 wooden dowels **A** into the base **5**.

Insert 4 large locking nuts **C** into the base **5**.


Note: The base can have a plain chipboard surface.

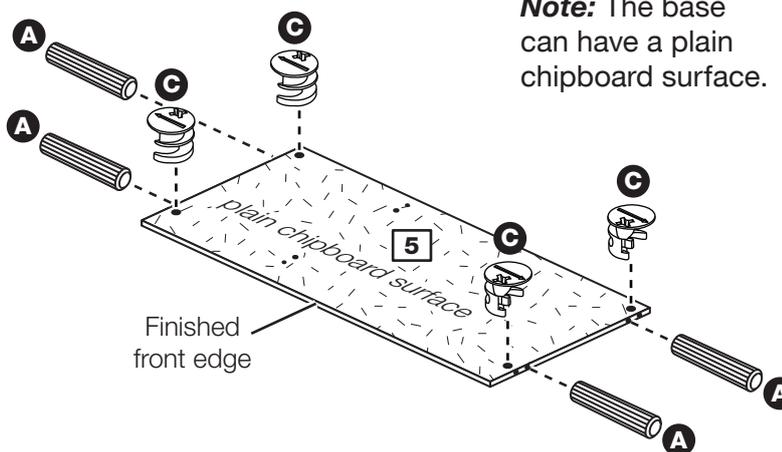

Step 7

Fit the base

Push the base **5** onto the upright **3** and secure with 2 screws **E**.

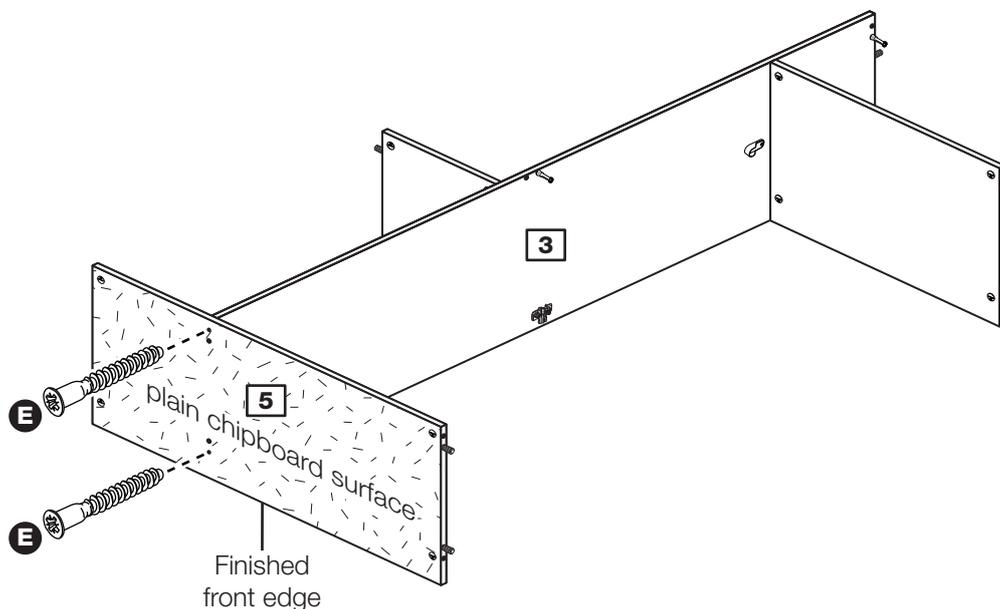

Assembly Instructions

Step 8

Prepare the right side


Tap 2 wooden dowels **A** into the right side **2**.

Screw 5 metal dowels **B** into the right side **2**.

Fit 3 hinge plates **K** onto the right side **2**, making sure that the slot is facing towards the finished front edge.

Fit 2 rail holders **I** to the right side **2** using 2 screws **H**.

Note: Use the shallow mark holes to fit the top screw in the rail holders (refer back to Step 1).

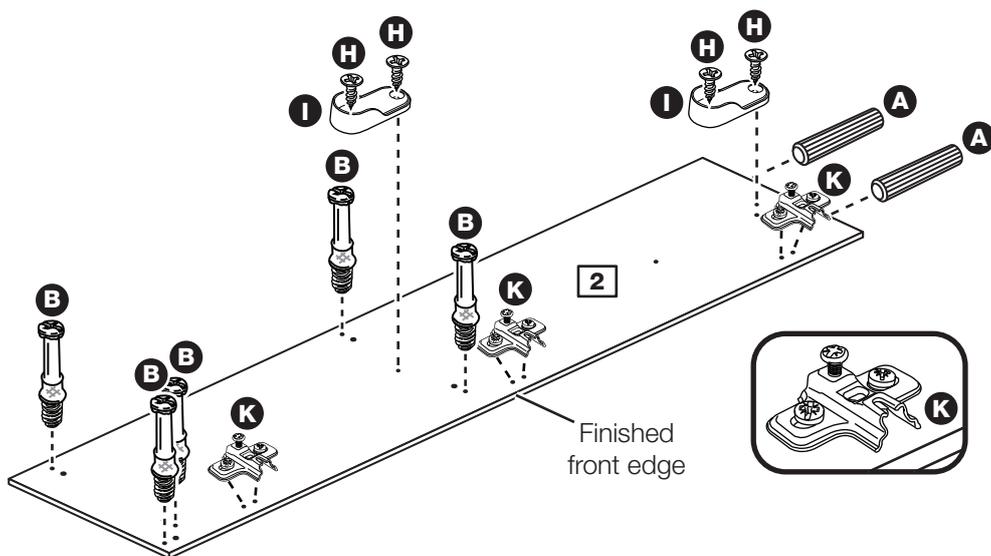


Step 9

Fit the right side

Push the right side **2** onto the base **5** and small horizontal **11**.

Use a screwdriver to tighten the 4 large locking nuts **C** fitted to the small horizontal **11** and the base **5**.

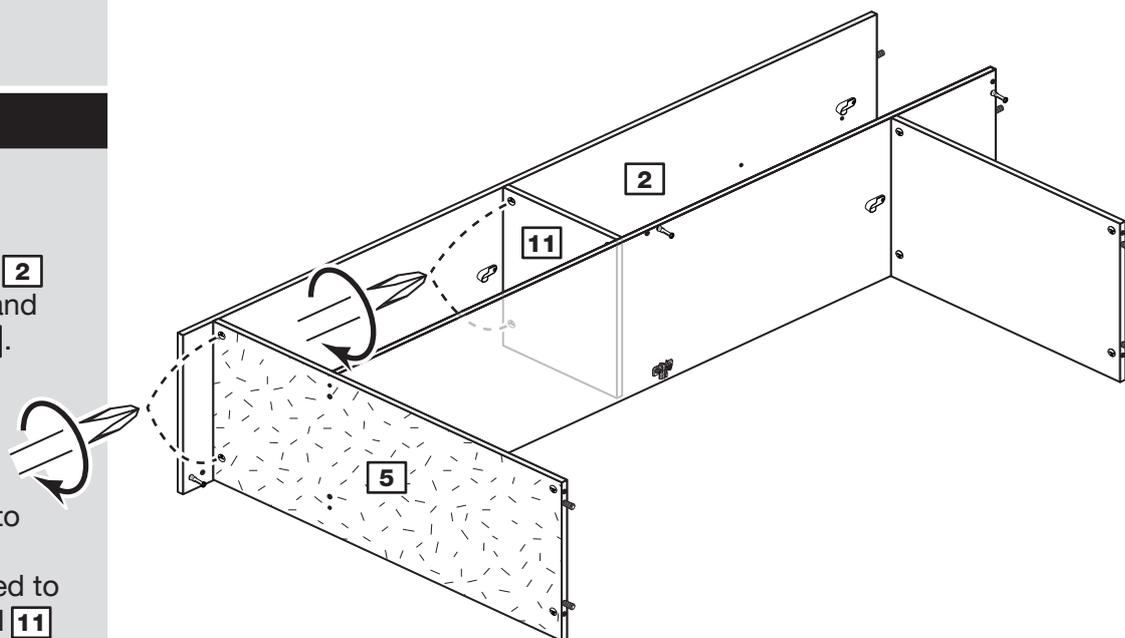

Assembly Instructions

Step 10


Prepare the left side

Tap 2 wooden dowels **A** into the left side **1**.

Screw 7 metal dowels **B** into the left side **1**.

Fit 3 hinge plates **K** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

Fit a rail holder **I** to the left side **1** using 2 screws **H**.

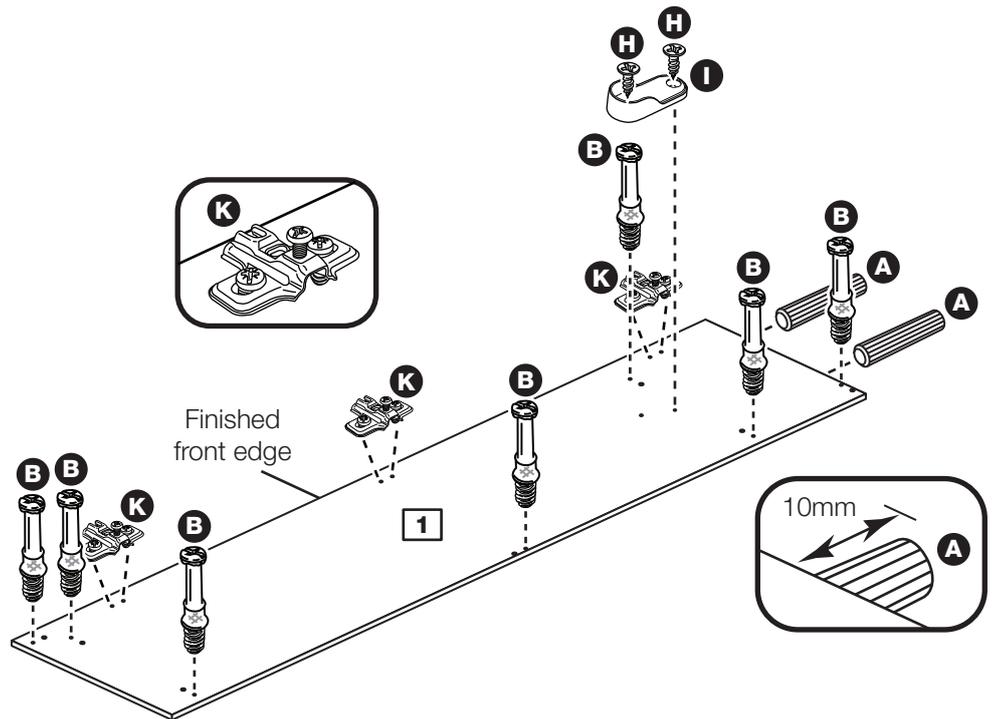


Step 11

Prepare the plinth

Tap 2 wooden dowels **A** into the plinth **6**.

Insert 2 large locking nuts **C** into the plinth **6**.

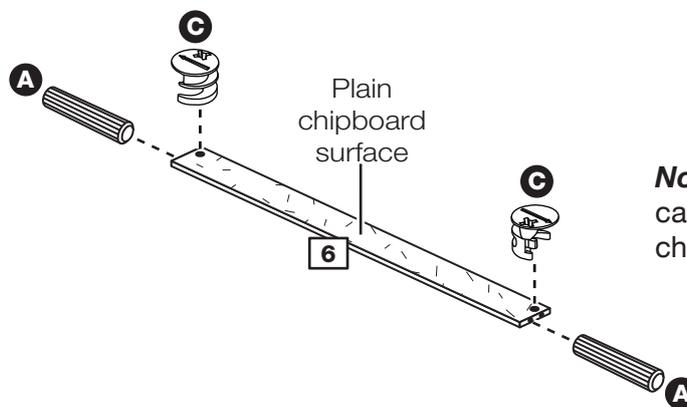


Note: The plinth can have a plain chipboard surface.

Step 12

Prepare the 2 rails

Tap 2 wooden dowels **A** into each of the rails **7**.

Insert 2 large locking nuts **C** into each of the rails **7**.

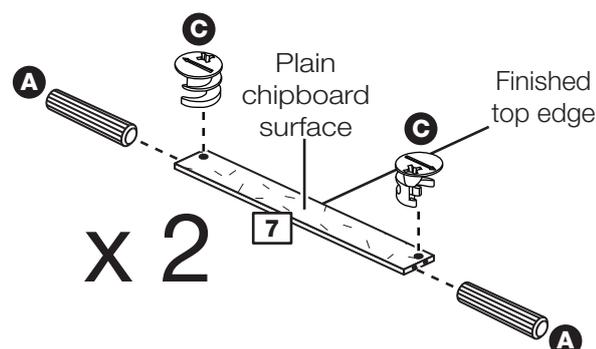

Note: The 2 rails can have a plain chipboard surface.

Assembly Instructions

Step 13


Fit the plinth and rails

Push the plinth **6** onto the right side **2**.

Use a screwdriver to tighten the large locking nut **C** fitted to the plinth **6**.

Push the rails **7** onto the upright **3**.

Use a screwdriver to tighten the large locking nut **C** fitted to the 2 rails **7**.

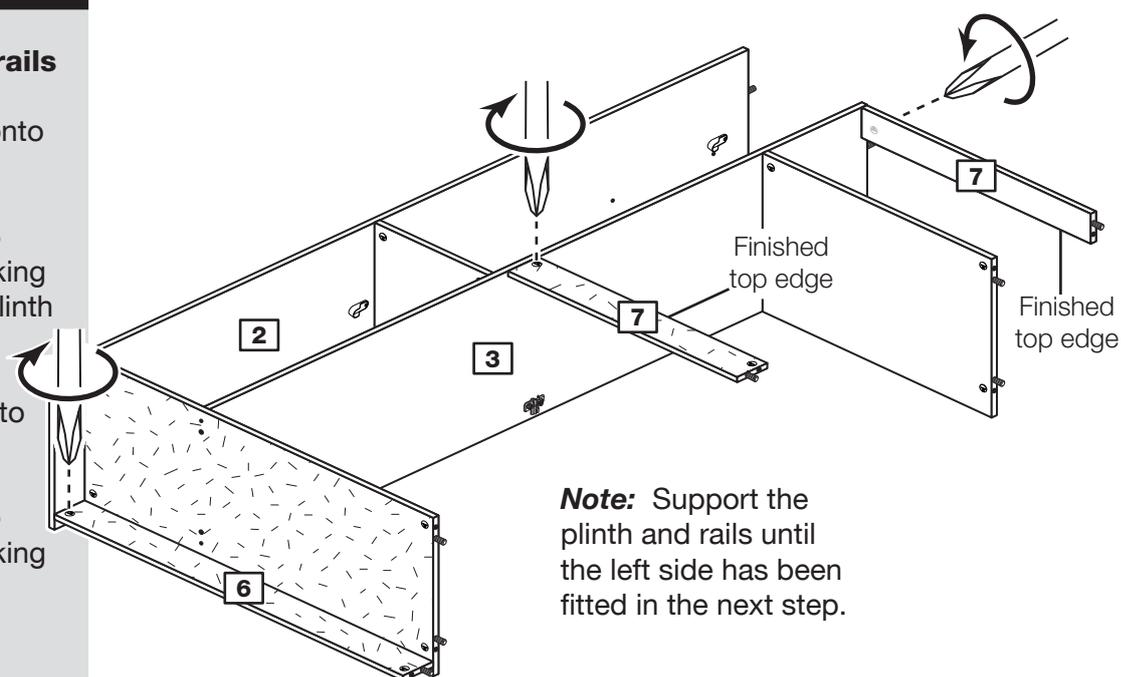


Step 14

Fit the left side

Push the left side **1** onto the assembly.

Use a screwdriver to tighten the 6 large locking nuts **C** fitted to the base **5**, plinth **6**, 2 rails **7** and large horizontal **10**.

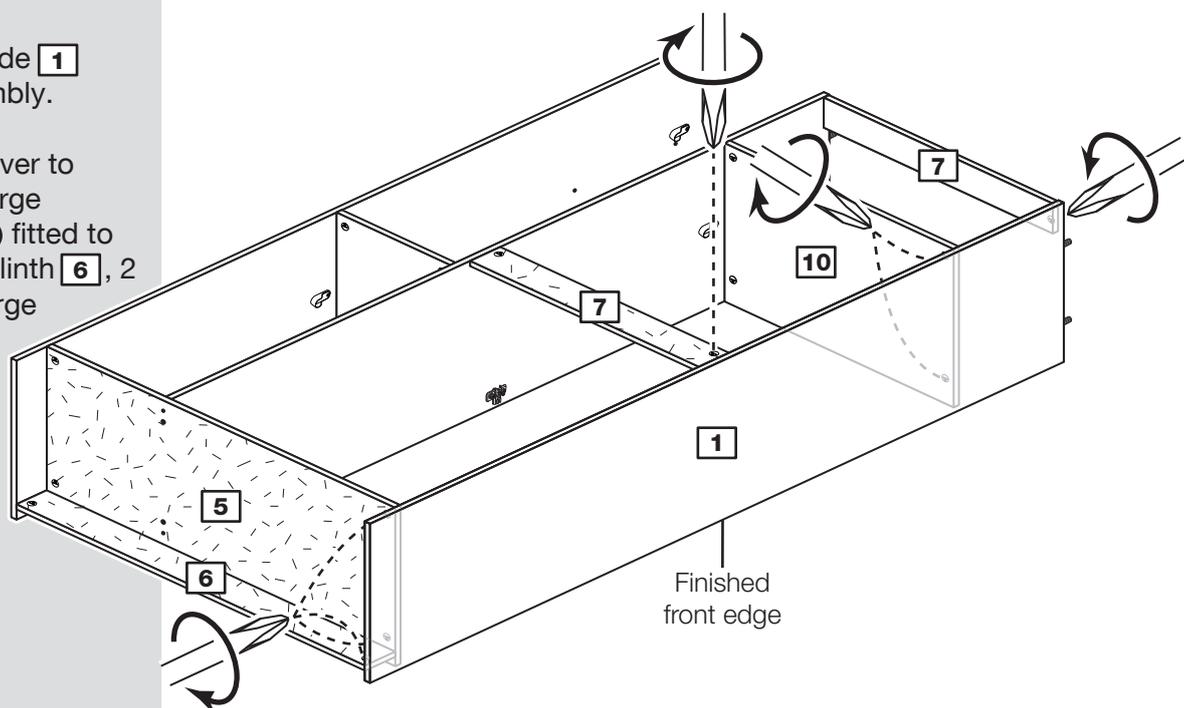


Assembly Instructions

Step 15

Fit the top

Push the top **4** onto the assembly and secure it to the left side **1**, right side **2** and upright **3** and using 6 screws **E**.

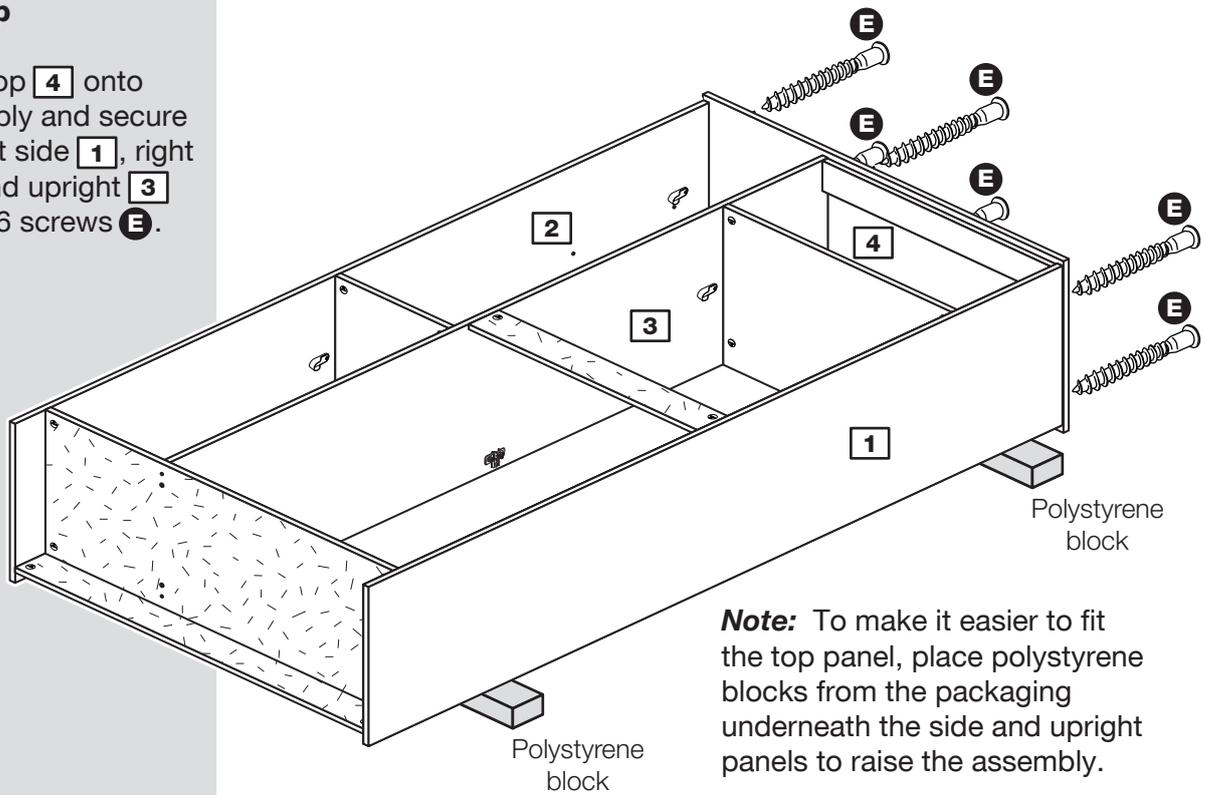


Note: To make it easier to fit the top panel, place polystyrene blocks from the packaging underneath the side and upright panels to raise the assembly.

Step 16

Fit the plastic nails

Tap 2 plastic nails **P** into the bottom edge of each of the sides **1** and **2** as shown.

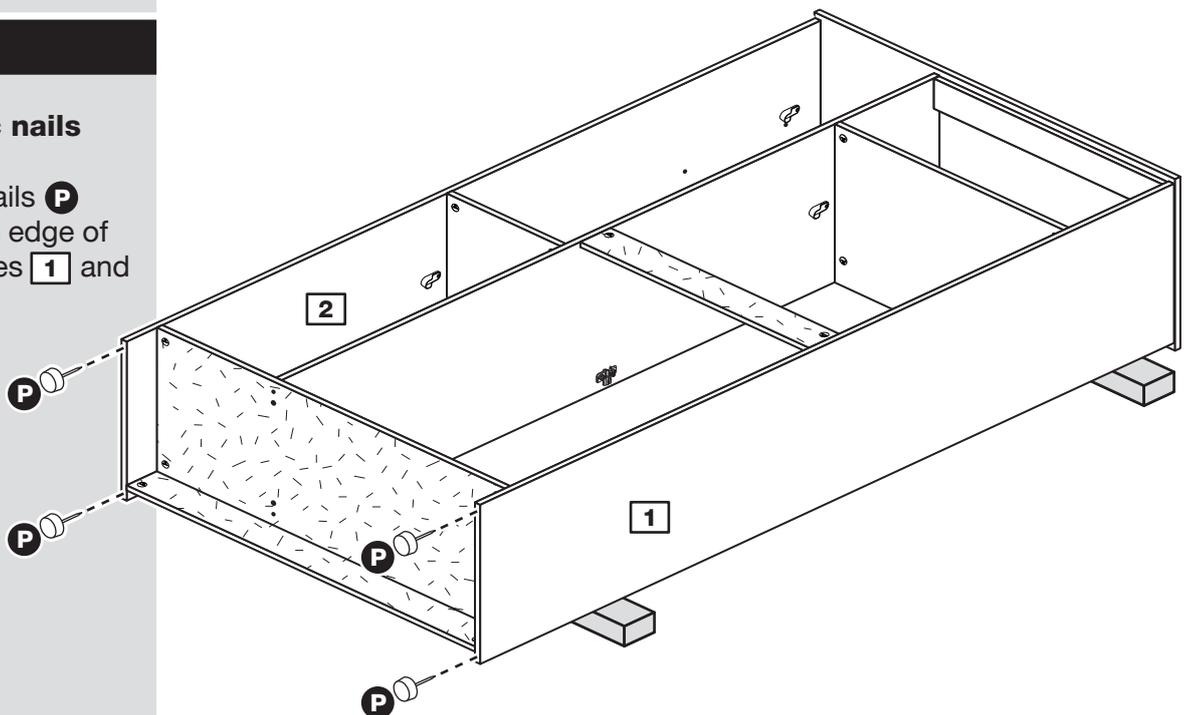

Assembly Instructions

Step 17


Fit the 2 backs

a: Square up the unit by making sure that the measurement **x:x equals y:y**.

Place the small back **13** and large back **14** onto the unit as shown.

Make sure that the 2 backs are pushed up tight against each other and that they meet in the centre of the divider's back edge.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

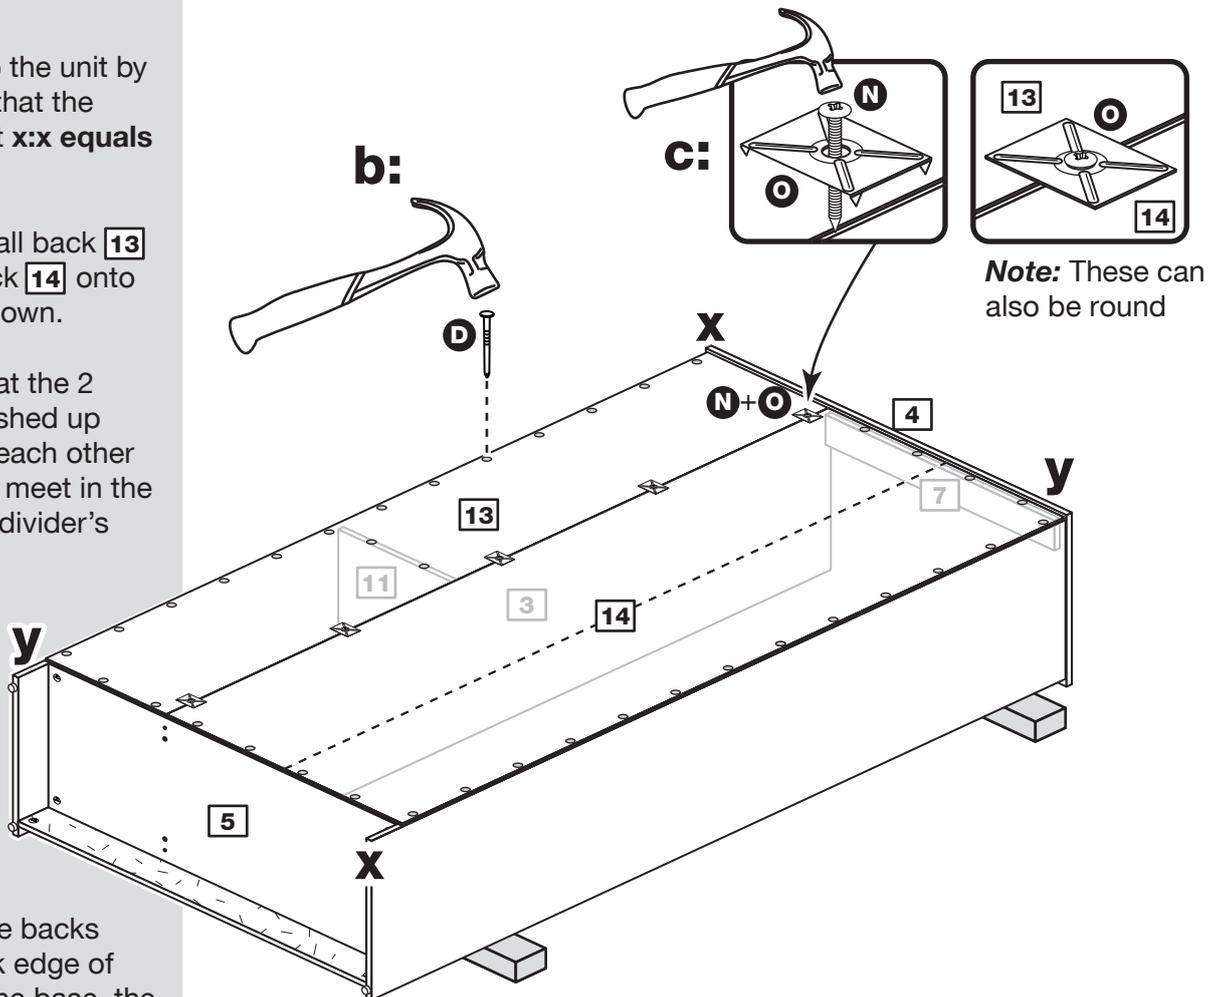


b: Nail **D** the backs onto the back edge of the 2 sides, the base, the small horizontal and the rail at the top.

Note: DO NOT nail where the 2 backs meet and along the top of the small back.

c: Push the nail screws **N** through the back holders **O** and tap them down between the small back **13** and large back **14** and into the back edge of the upright **3**.

Keep tapping the nail screws **N** in until the back holders **O** dig into the small and large back.

Note: If ever you need to take the backs off to dismantle the unit, the nail screws can be taken out using a screwdriver.

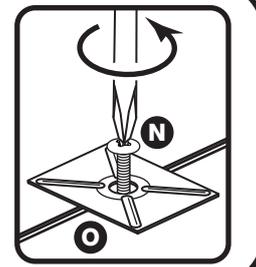

Stand the unit up for the next step.




Warning: The unit is heavy. Lift with care.

Assembly Instructions

Step 18

Fit the hanging rail

Push the 2 small hanging rails **8** and the large hanging rail **9** into the rail holders **1** fitted to the panels.

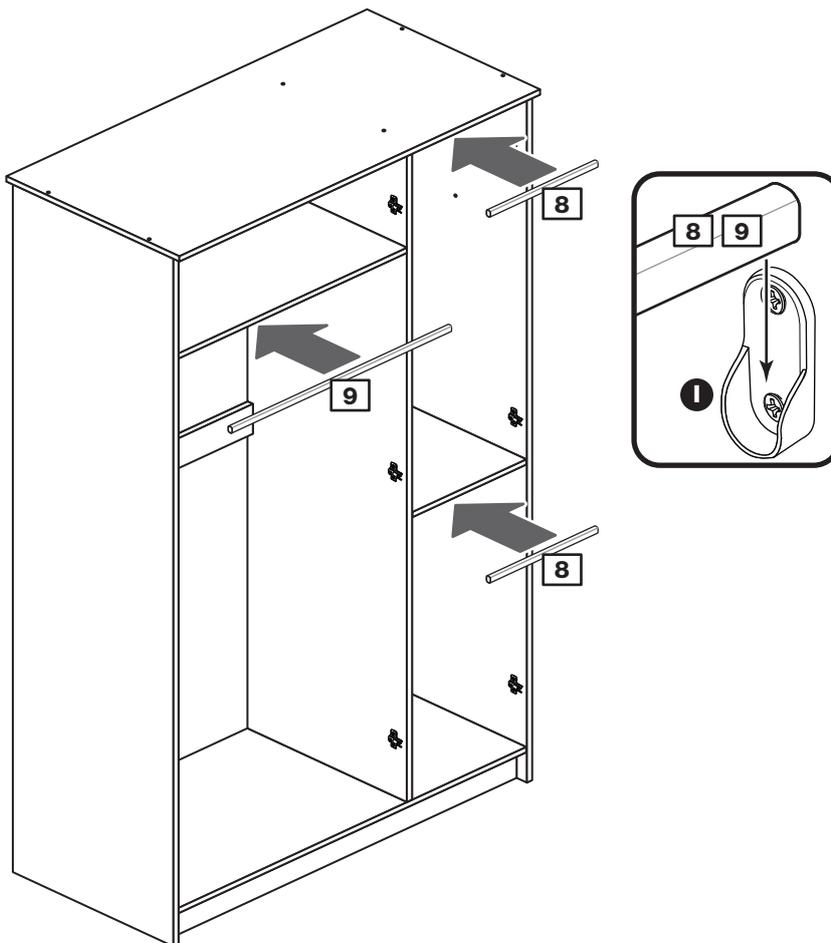


Step 19

Prepare the 3 doors

Push fit 3 hinges **L** into each of the doors **12**.

Secure each hinge with 2 screws **H**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

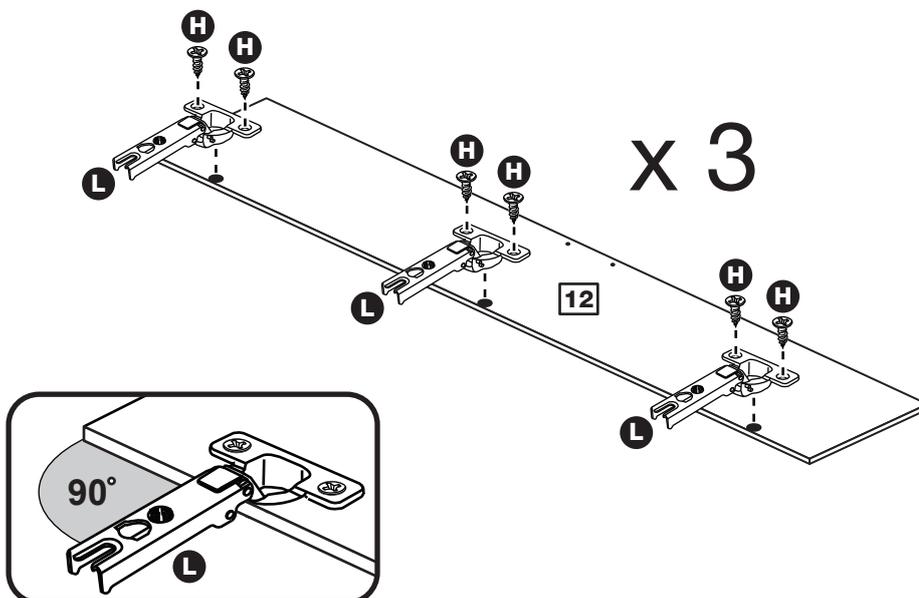

Assembly Instructions

Step 20

Fit doors and handles

Note: The easiest way to attach each door **12** is to fit the top hinge first, then align and fit the other hinges.



a: Push the hinge **L** onto the front part of the hinge plate **K**. The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **L** FLAT against the hinge plate **K** as you slide it across as far as it will go. Tighten screw A.

c: The hinge **L** must be flat against the hinge plate **K** prior to any adjustment.

d: The hinge **L** must NOT be AT AN ANGLE to the hinge plate **K** when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **M** to each door **12** using 2 screws **F**.

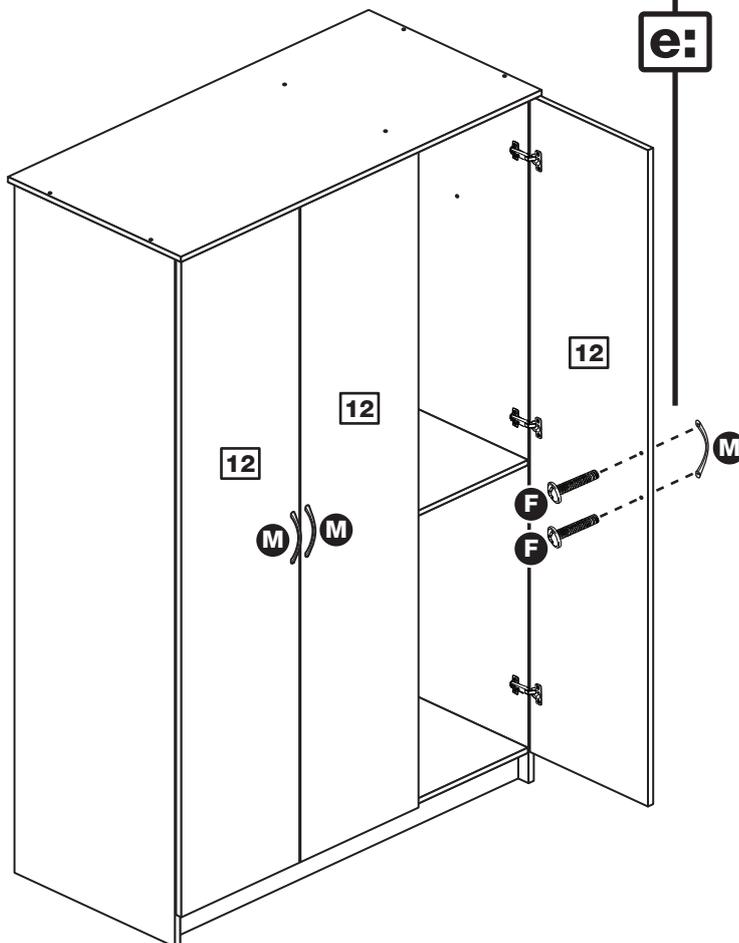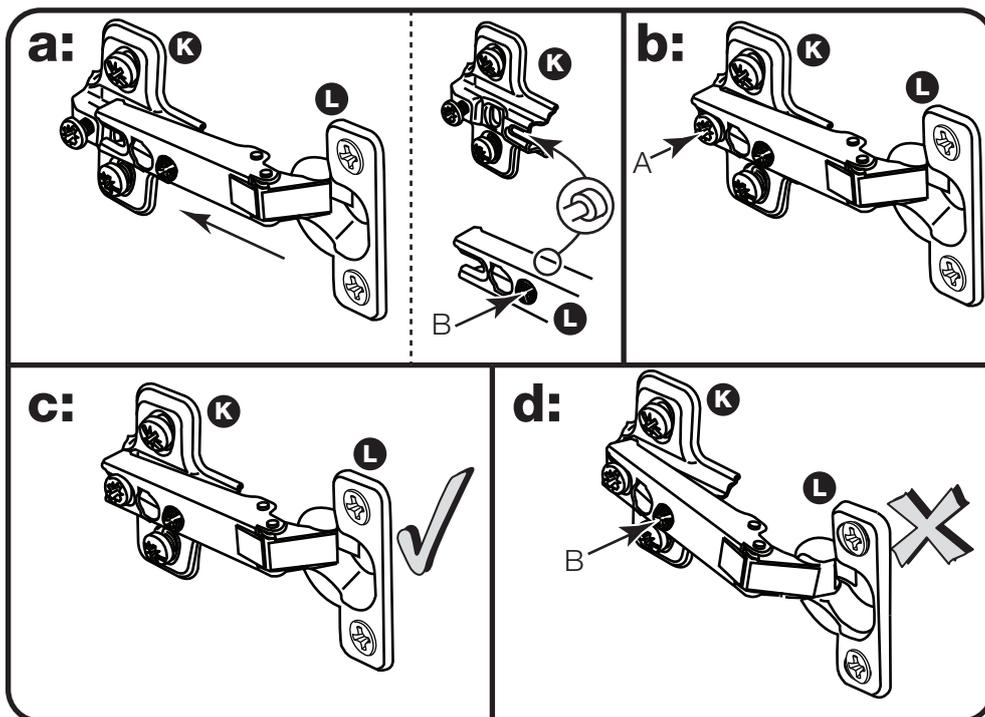

Assembly Instructions

Step 21

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

c: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.

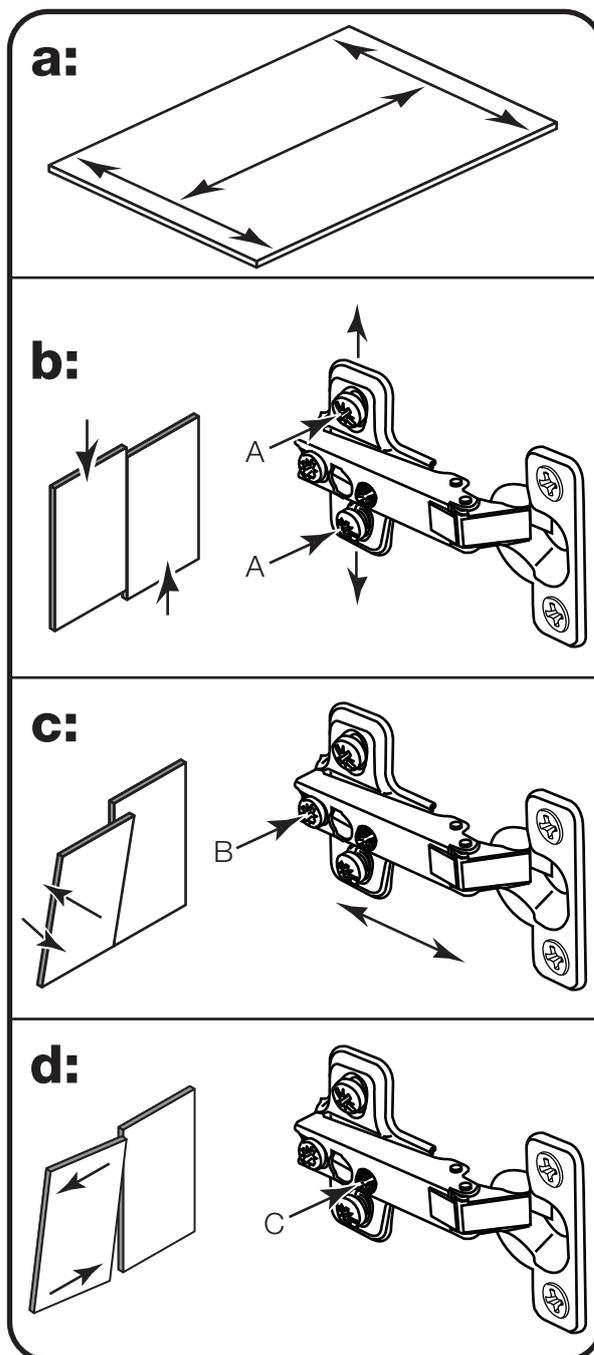

Assembly Instructions

Step 22

Fit the bracket

To prevent possible overbalancing, we recommend that this unit is secured to a suitable wall by use of the bracket **J** fitted to the top of the unit.

Fixings are not supplied, as they will need to suit the wall type and the length of screw will depend on the distance from the back of the unit to the wall.

Fix the bracket **J** loosely onto the top of the unit using screw **G** and mark the wall for the wall fixing.

Swivel the bracket **J** away from the wall and drill a hole in the wall using a suitable drill bit and fit your wall fixing.

Swivel the bracket **J** back and fix the bracket to the wall, then tighten screw **G**.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.






Warning: The unit is heavy. Lift with care.

Assembly is complete

IMPORTANT

If you have purchased the Cheval Overbed Cupboards, you will need to fix them to the wall **BEFORE** you fix the Robe to the wall.

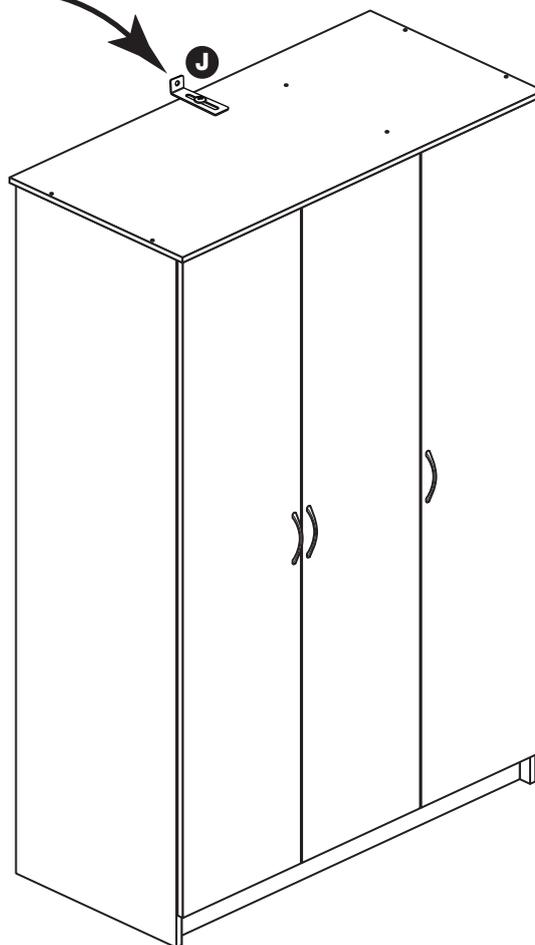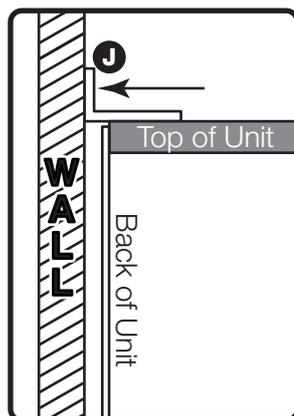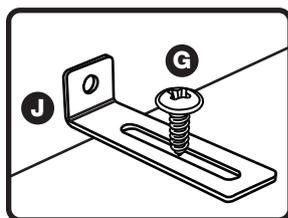

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800 and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW