
Eden - Low Sideboard TV Unit

Assembly Instructions - Please keep for future reference

413/1267

392/8330

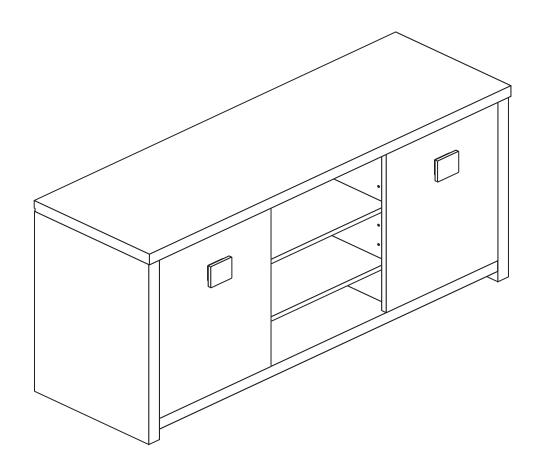

Dimensions

Width - 119.5cm

Depth - 38.1cm

Height - 63.1cm



Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Warning: This unit weighs approximately 25kgs.
 Please lift with care.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

- Safety note: If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.


For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below

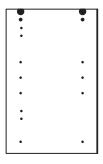

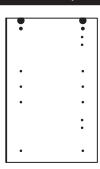

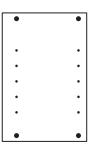

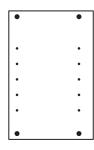

- Left Side (DF3286) (59.6 x 37.8cm)
- **2** Right Side (*DF3283*) (59.6 x 37.8cm)
- **3** Left Divider (*DF3285*) (53.1 x 34.9cm)
- **4** Right Divider (*DF3281*) (53.1 x 34.9cm)





5 Top (*DF3099*) (119.5 x 38.1cm)

6 Base (DF4002) (111.9 x 37.2cm)










- 7 Small Shelf (DF3288) (32 x 34.8cm) x 2
- Middle Shelf (DF3287) (44.4 x 34.8cm) x 2
- **9** Left Door (*DF3284*) (52.6 x 36.9cm)
- Right Door (DF3986) (52.6 x 36.9cm)

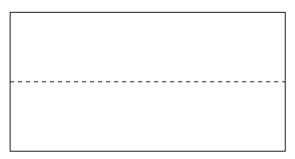






Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** quoting the reference numbers below

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

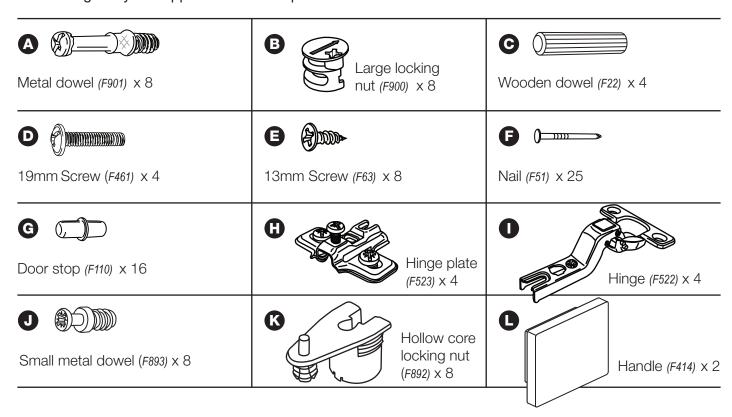

Tools required

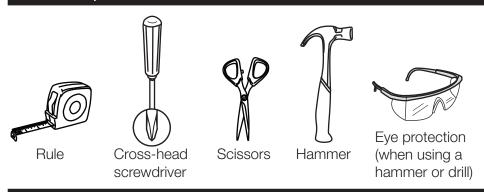

Ruler - Use this ruler to help correctly identify the screws mm 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170


Step 1

Prepare the top

Screw 4 metal dowels **A** into the top **5**.

Screw 4 small metal dowels **1** into the top **5**.

Note: Tighten both lots of metal dowels up fully against the panels.

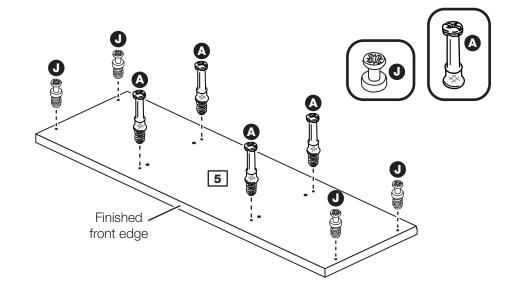

Step 2


Prepare the left divider

Insert 4 large locking nuts **B** into the left divider **3**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Tap 2 wooden dowels **©** into the left divider **3**.

Note: Wooden dowels must not stick out from the edge by more than 10mm or they may damage other panels.

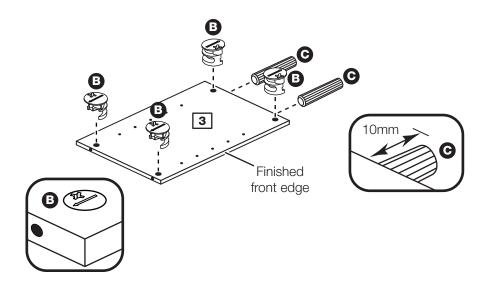


Step 3

Fit the left divider to the top

Push the left divider 3 onto the top 5.

Use a screwdriver to tighten the 2 large locking nuts **B** fitted to the left divider **3**.

Note: Turn the large locking nuts **3** as far as they will go - more than 1/2 a turn.

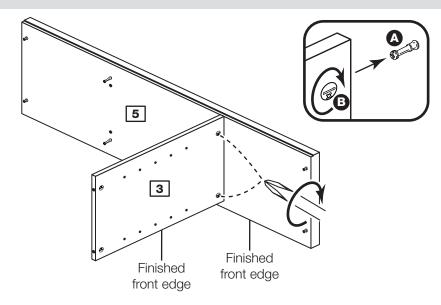


Step 4

Prepare the right divider

Insert 4 large locking nuts **B** into the right divider **4**.

Tap 2 wooden dowels **6** into the right divider **4**.

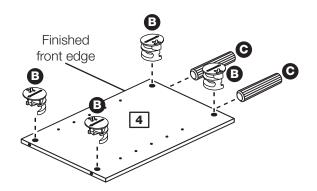


Step 5

Fit the right divider

Push the right divider 4 onto the top 5.

Use a screwdriver to tighten the 2 large locking nuts **3** fitted to the right divider **4**.

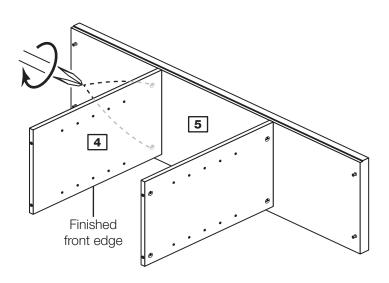

Step 6

Prepare the base


Push 4 hollow core locking nuts (into the base 6), making sure that they are flush against the panel's surface.

Using a hammer, tap in the pin on the hollow core locking nut **(K)**.

Note: The pin should be tapped in flush with the top surface of the hollow core locking nut **(K)**.

Turn the base over

Screw 4 metal dowels **A** into the base **6**.

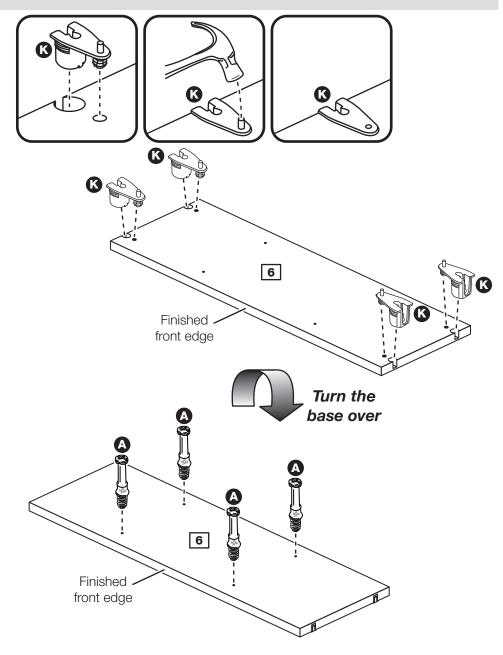


Step 7

Fit the base

Push the base 6 onto the left divider 3 and right divider 4.

Use a screwdriver to tighten the 4 large locking nuts **B** fitted to the left divider **3** and right divider **4**.

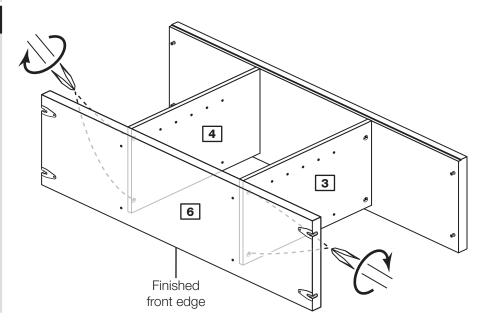

Step 8


Prepare the left side

Push 2 hollow core locking nuts (c) into the left side (1), making sure that they are flush against the panel's surface.

Using a hammer, tap in the pin on the hollow core locking nut **K**.

Screw 2 small metal dowels **J** into the left side **1**.

Fit 2 hinge plates **H** onto the left end **1**, making sure that the slot is facing towards the finished front edge.

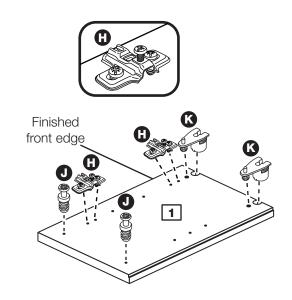

Step 9


Prepare the right side

Push 2 hollow core locking nuts (into the right side 2, making sure that they are flush against the panel's surface.

Using a hammer, tap in the pin on the hollow core locking nut **K**.

Screw 2 small metal dowels **1** into the right side **2**.

Fit 2 hinge plates **(H)** onto the right end **(2)**, making sure that the slot is facing towards the finished front edge.

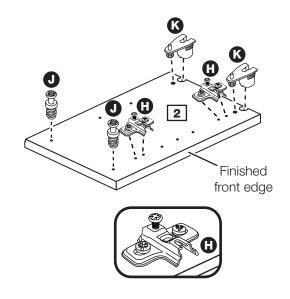


Step 10

Fit the right side

Push the right side 2 onto the top 5 and base 6.

The 2 small metal dowels of fitted to the right side 2 must slide into the 2 hollow core locking nuts (6) fitted to the base 6 and the 2 small metal dowels of fitted to the top 5 must slide into the 2 hollow core locking nuts (6) fitted to the right side 2.

Insert a screwdriver into the 4 hollow core locking nuts (and turn the nuts inside as far as they will go.

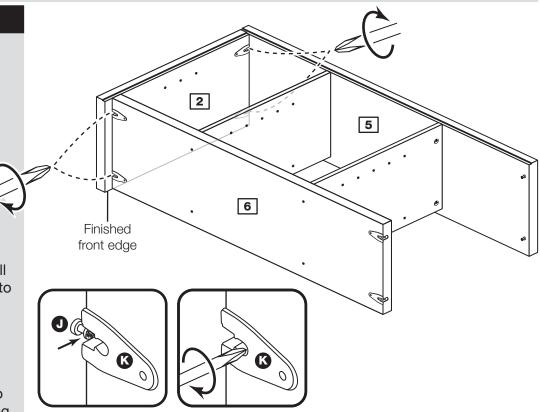

Step 11

Fit the left side


Push the left side 1 onto the top 5 and base 6.

The 2 small metal dowels

fitted to the left side 1
must slide into the 2
hollow core locking nuts

fitted to the base 6
and the 2 small metal
dowels 1 fitted to the
top 5 must slide into
the 2 hollow core locking
nuts 6 fitted to the left
side 1.

Insert a screwdriver into the 4 hollow core locking nuts **K** and turn the nuts inside as far as they will go.

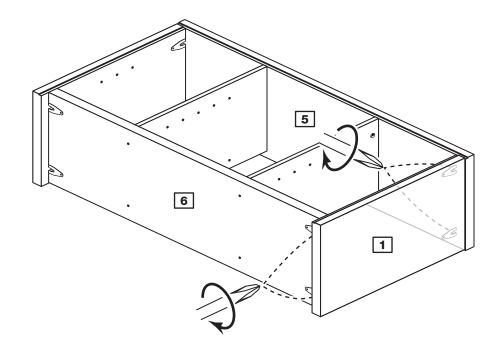

Step 12

Fit the back

a: Square up the unit by making sure that measurement **x** to **x** equals **y** to **y**.

b: Place the back 11 onto the unit.

Nail **f** around the outside edges of the back **11**.


Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.



Warning: The unit is heavy. Lift with care.

The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

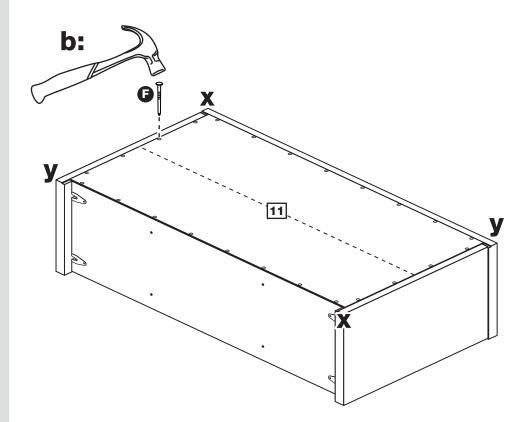


Step 13

Fit the middle shelves

Insert 4 shelf studs **(G)** for each of the 2 middle shelves **(8)** at the required height.

Lower the 2 middle shelves 8 down onto the shelf studs **G**.

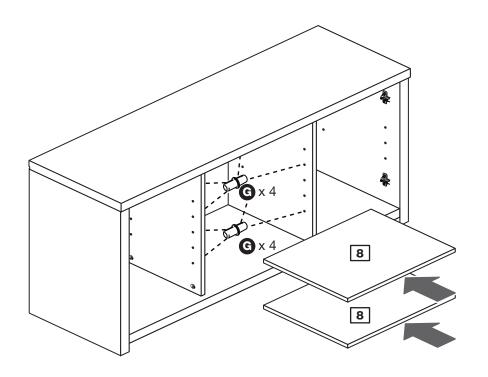


Step 14

Fit the small shelves

Insert 4 shelf studs **(G)** for each of the 2 small shelves **(7)** at the required height.

Lower the 2 small shelves 7 down onto the shelf studs **G**.

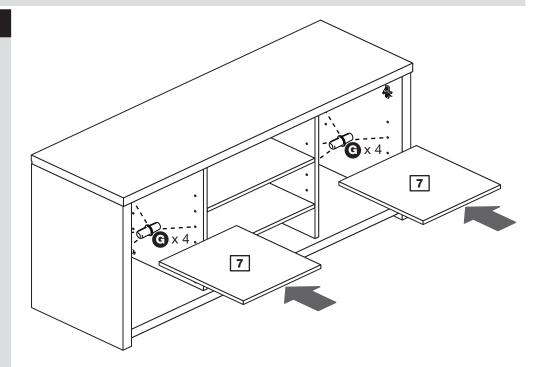


Step 15


Prepare the 2 doors

Push fit 2 hinges 1 into each of the 2 doors 9 and 10.

Secure each hinge with 2 screws **(E)**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

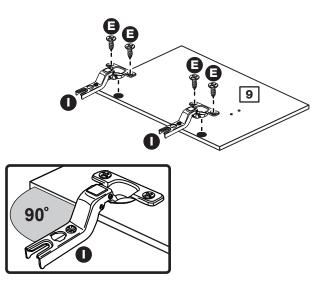

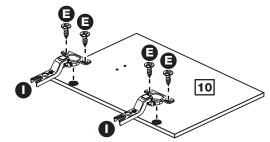

Step 16

Fit doors and handles

Note: The easiest way to attach each door **9** and **10** is to fit the top hinge first, then align and fit the bottom hinge.


a: Push the hinge **①** onto the front part of the hinge plate **①**.

b: Keep the hinge **1** FLAT against the hinge plate **1** as you slide it across as far as it will go. Tighten screw A.

C: The hinge must be flat against the hinge plate prior to any adjustment.

d: The hinge I must NOT be AT AN ANGLE to the hinge plate H when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **1** to each of the 2 doors **9** and **10** using screws **D**.

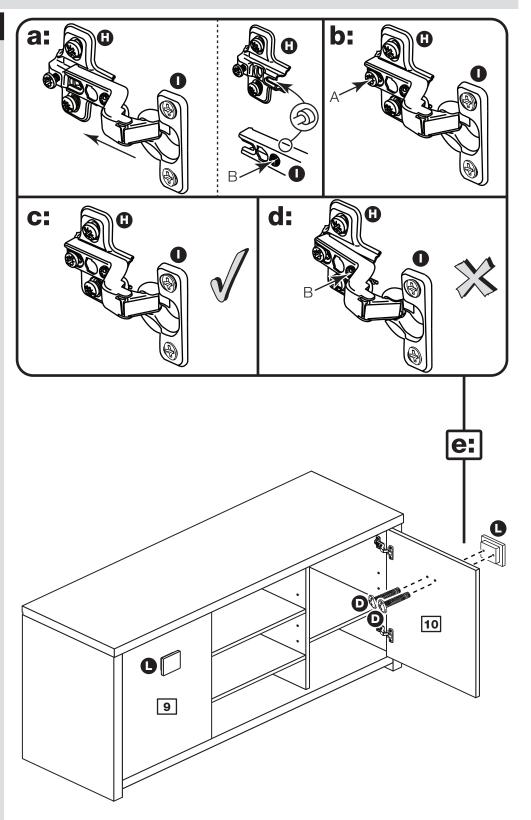

Step 17

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.

Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

C: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.


d: Sideways adjustment.

To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

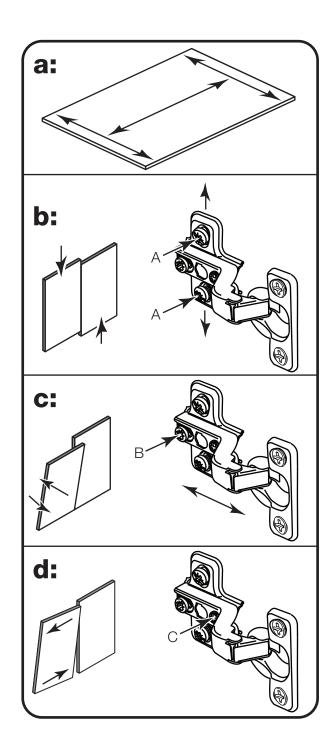

Step 18

Assembly is complete

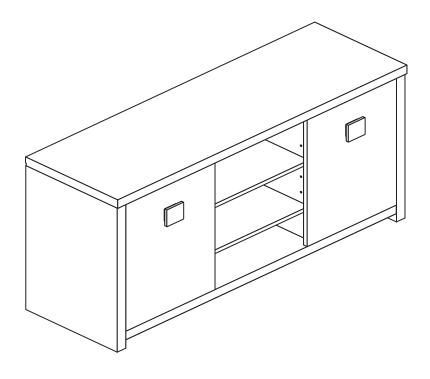

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020