Malibu - 2 Door Robe

Assembly Instructions - Please keep for future reference


428/3445

412/3402

414/7756

424/3973

424/7302

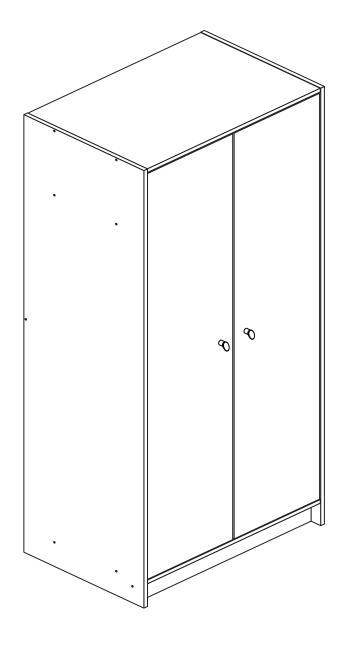

Dimensions

Width - 75cm

Depth - 49.5cm

Height - 181cm



Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- *Warning:* This unit weighs approximately 49kgs. Please lift with care.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

- Safety note: It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the Customer Helpline: 03456 400800 quoting the reference numbers below

Please check you have all the panels listed below

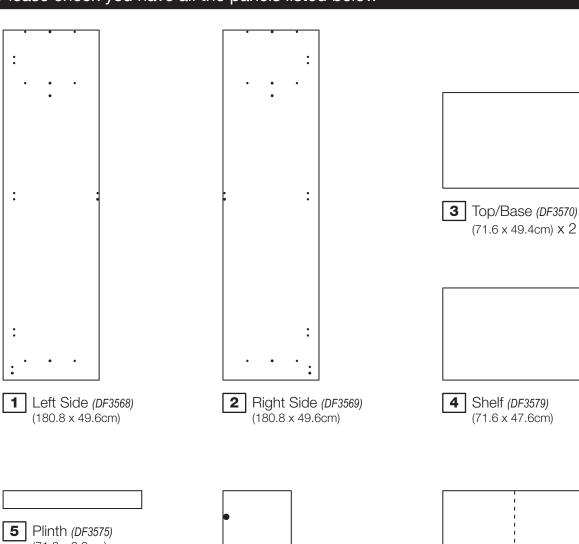


(71.6 x 9.2cm)

6 Back Rail (*DF3576*) (71.6 x 9.2cm)

7 Hanging Rail (FHR704) (70.4cm long)



8 Door (*DF*3573) (167.7 x 35.3cm) x 2

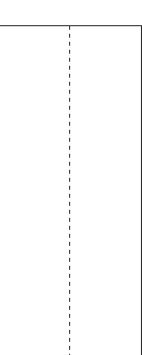

9 Back (X1711-742) (171.1 x 74.2cm)





Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** quoting the reference numbers below

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

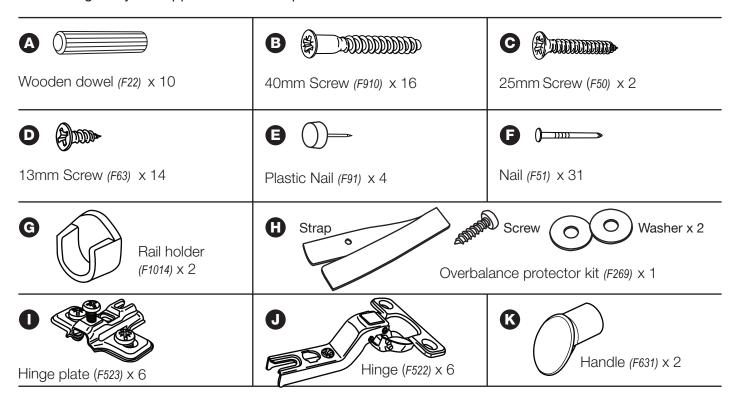

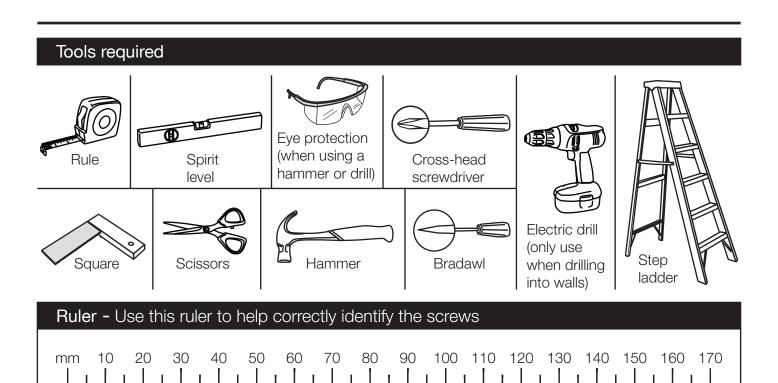


If you have damaged or missing components, call the Assembly Instructions Customer Helpline: 03456 400800 quoting the reference numbers below

Step 1

Prepare the left side

Fit 3 hinge plates
onto the left side 1 making sure that the slot is facing towards the finished front edge.

Push a rail holder **G** into the left side 1. Make sure that it is fitted straight, in line with the panel edges and then secure with screw **D**.

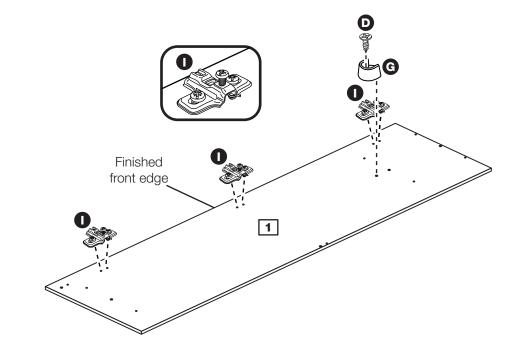


Step 2

Prepare the right side

Push a rail holder G into the right side 2. Make sure that it is fitted straight, in line with the panel edges and then secure with screw **D**.

Fit 3 hinge plates
onto the right side 2, making sure that the slot is facing towards the finished front edge.

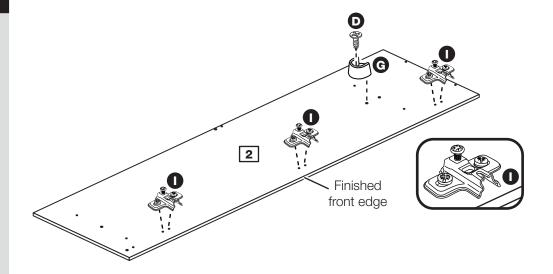



Step 3

Prepare the 2 top/base panels

Tap 2 wooden dowels A into each of the 2 top/base panels 3.

Note: Wooden dowels must not stick out from the edge by more than 10mm or they may damage other panels.

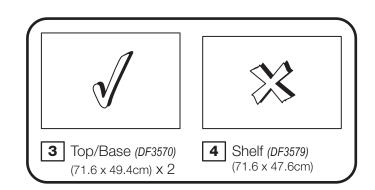


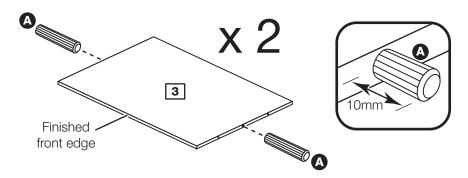

Step 4

Fit the top and base panels to the right side


Push the top and base 3 onto the right side 2 and secure them with screws B.

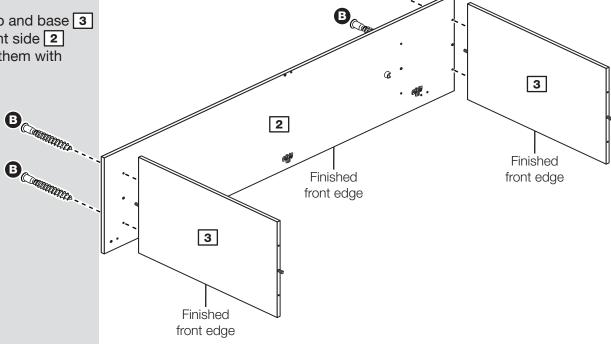

Step 5

Prepare the shelf


Tap 2 wooden dowels **A** into the shelf **4**.

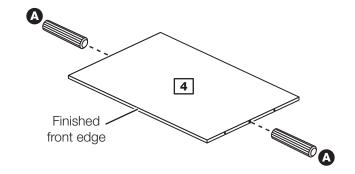

Step 6

Fit the shelf

Push the shelf 4 onto the right side 2 and secure it with screws **B**.

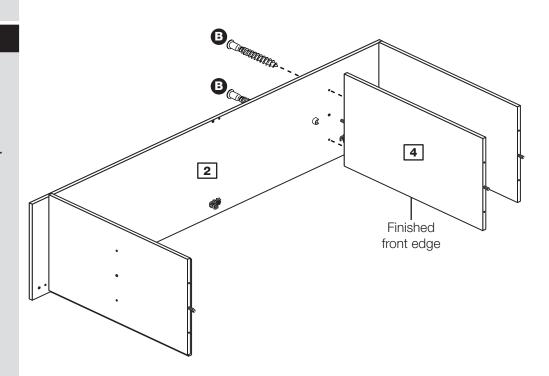


Step 7


Prepare the plinth and back rail

Tap 2 wooden dowels **A** into the plinth **5**.


Tap 2 wooden dowels (A) into the back rail [6].

Note: The back rail has a finished top edge.

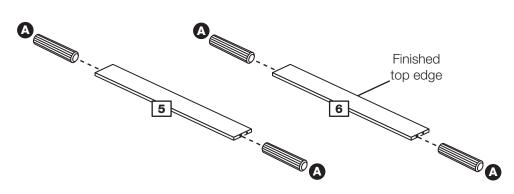

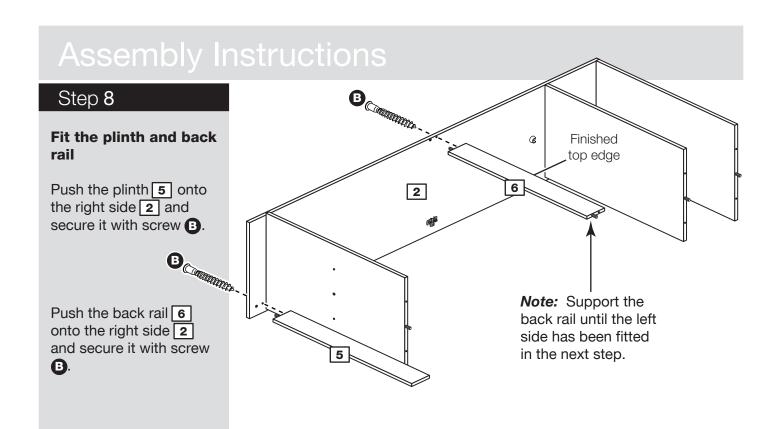

Step 9

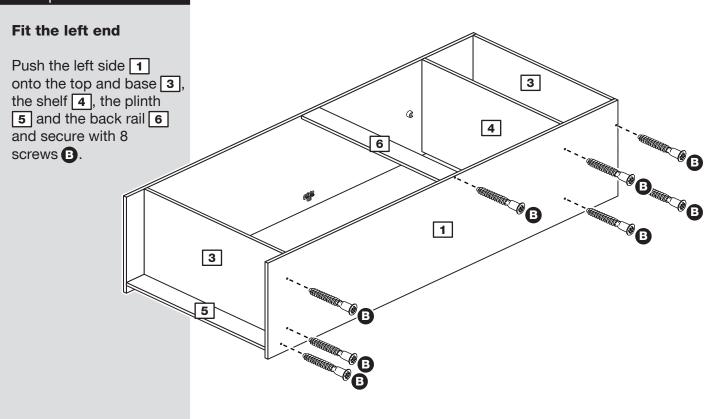

Step 10

Fit the back


a: Square up the unit by making sure that measurement **x** to **x** equals **y** to **y**.

b: Place the back 9 onto the unit.

Nail **f** around the outside edges of the back **9**.

Note: Nails should be spaced about 150mm apart.

The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

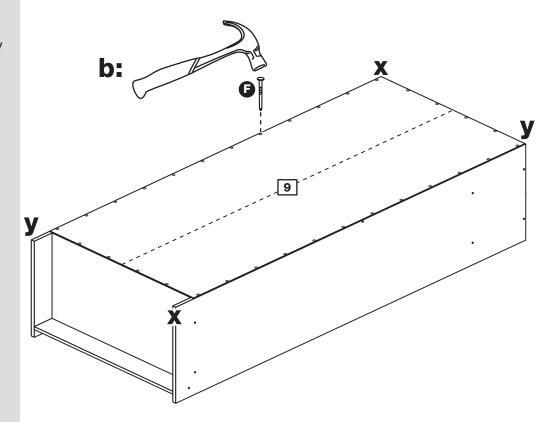

Step 11

Fit the plastic nails

Tap 2 plastic nails (a) into the bottom edge of each of the sides (1) and


2.

a

Carefully stand the unit up for the next step.




Warning: The unit is heavy. Lift with care.

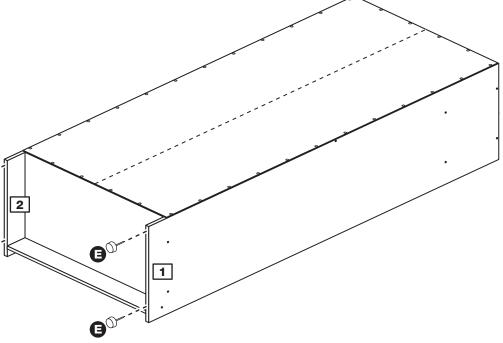


Step 12

Fit the hanging rail

Push the hanging rail 7 into the rail holders **G**.

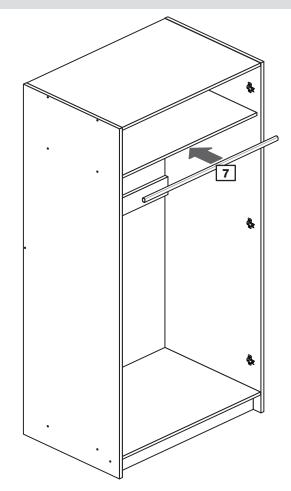

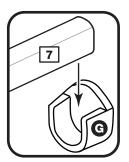


Step 13

Prepare the 2 doors

Push fit 3 hinges **1** into each of the 2 doors **8**.

Secure each hinge with 2 screws **D**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

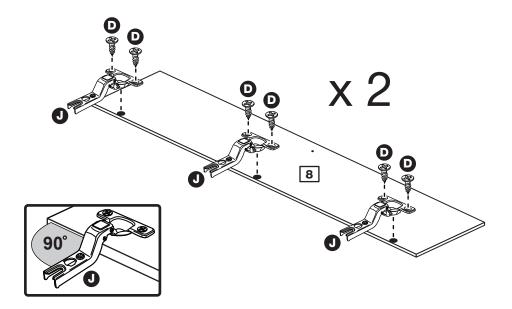

Step 14

Fit doors and handles

Note: The easiest way to attach each door **8** is to fit the top hinge first, then align and fit the other hinges.

onto the front part of the hinge plate ①.


The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **J** FLAT against the hinge plate **①** as you slide it across as far as it will go. Tighten screw A.

C: The hinge ① must be flat against the hinge plate ① prior to any adjustment.

d: The hinge must NOT be AT AN ANGLE to the hinge plate when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **(** to each door **(8)** using screws **(9)**.

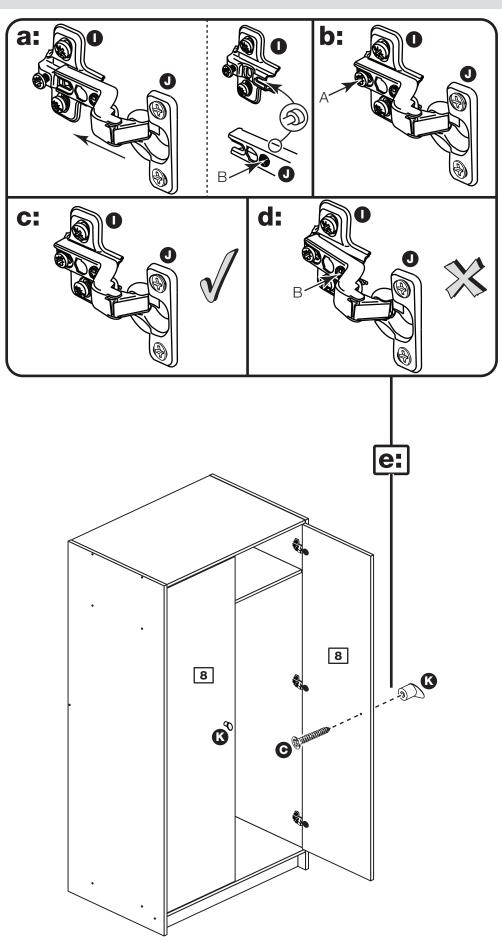

Step 15

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.

Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

C: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

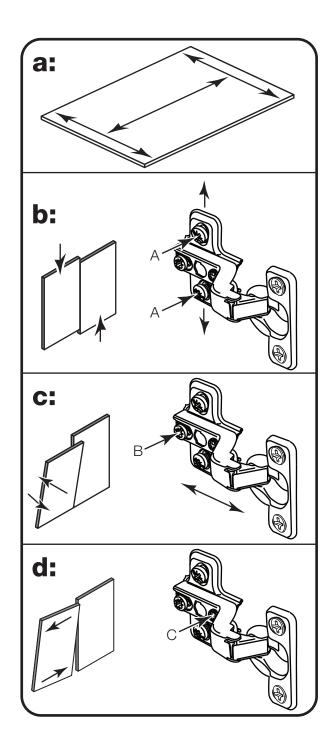

Step 16


Fit the overbalance protector

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

Assembly is complete

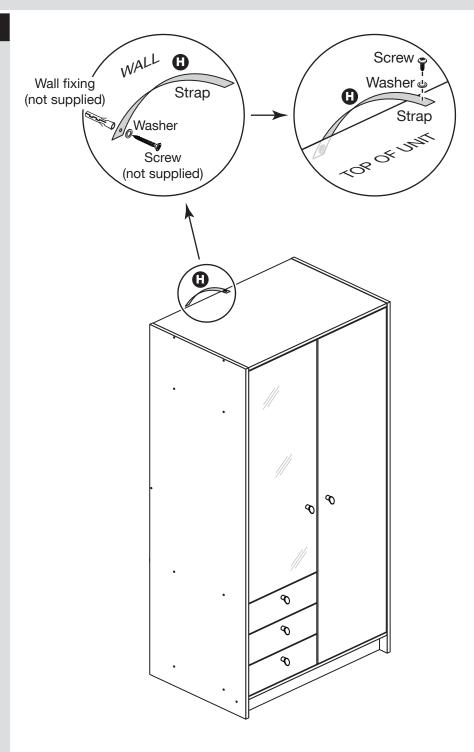

If you need help or have damaged or missing parts, call the **Customer Helpline:** 03456 400800 and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW