


# BUNK BED DETACHABLE

habitat 

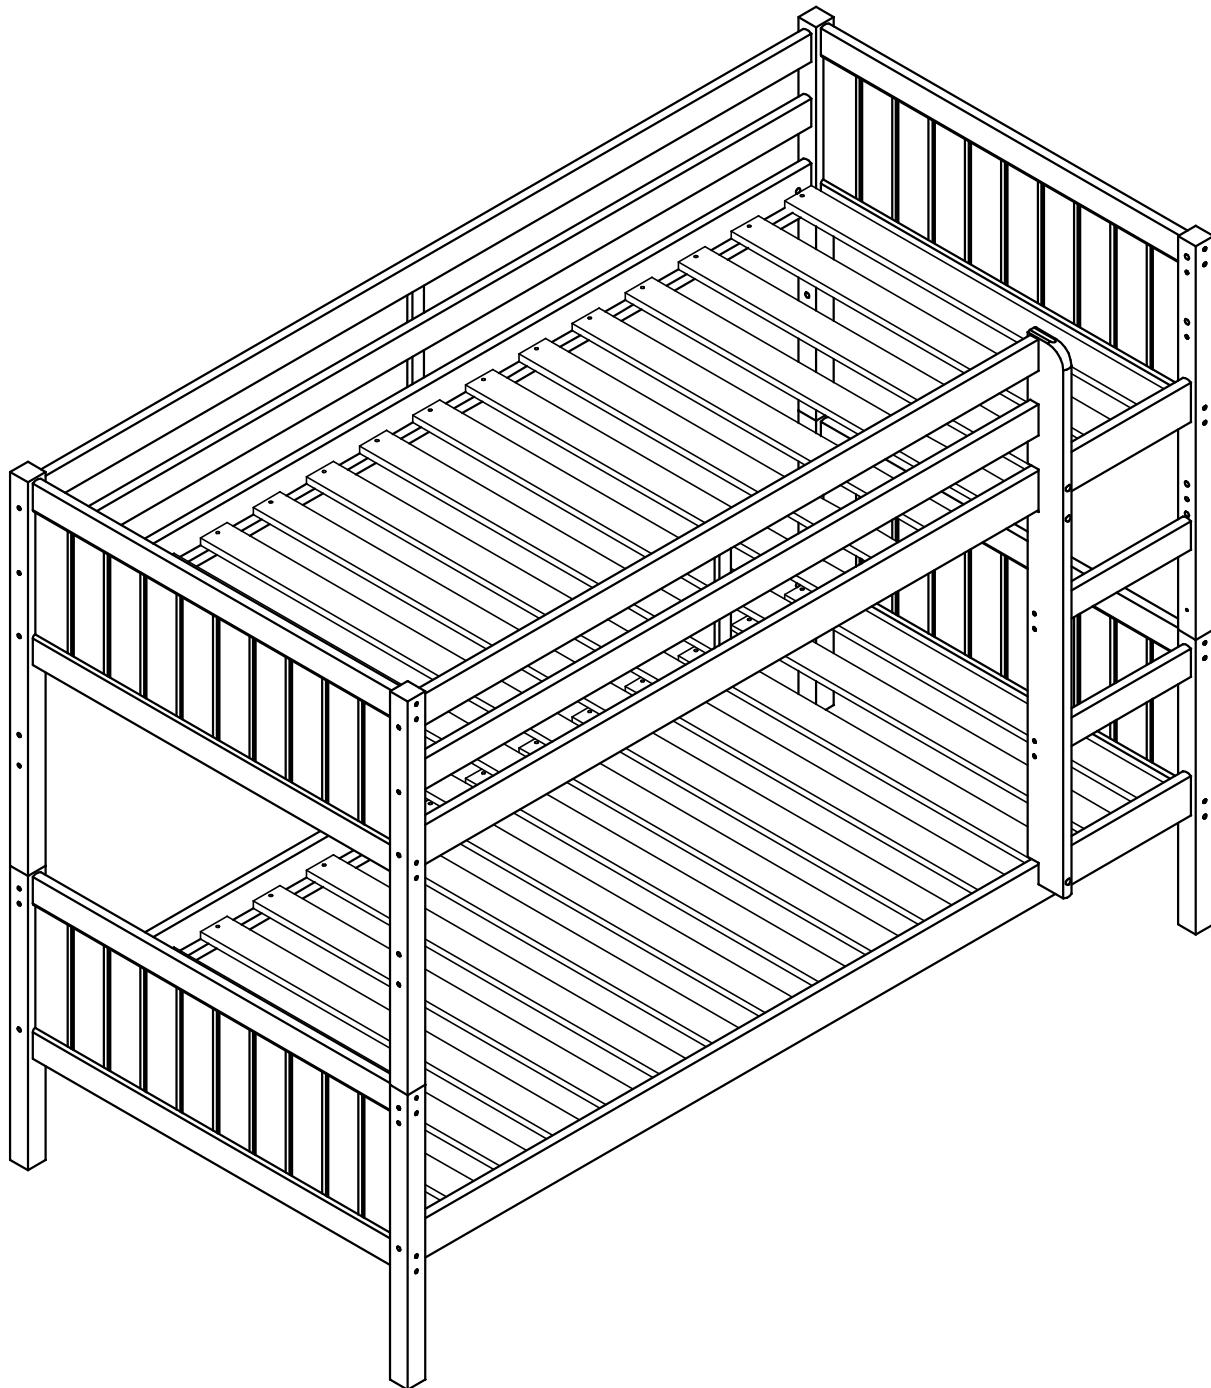

## Spare Parts

-  [www.argos-support.co.uk](http://www.argos-support.co.uk)
-  [Help@ClickSpares.co.uk](mailto:Help@ClickSpares.co.uk)
-  0370 112 1928

## Customer Support

-  [claims-argos@thuka.com](mailto:claims-argos@thuka.com)
-  00372 555 88 518

# ⚠ Safety and Care Advice


## Product Details

White 806/1560  
Grey 798/5290

## IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area. Small parts could choke if swallowed. Plastic bags can be dangerous to young children.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Assembly to be carried out by a competent adult only.
- Do not use this item if any components are missing or damaged

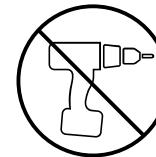

- We do not recommend the use of power drill drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Only clean using a damp cloth and mild detergent. Do no use bleach or abrasive cleaners.
- Use a dry cloth to clean the product, furniture polish is not recommended.

From time to time check that there are no loose screws, nuts or bolts. If there are please retighten.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## IMPORTANT - READ CAREFULLY - RETAIN FOR FUTURE REFERENCE

### **ASSEMBLY:**

Always follow the instruction. Current legislation requires that the high bed / bunk bed must be fitted with 4 safety-rails and a ladder or platform for the upper bunk. The high bed / bunk bed meets the European EN 747:2012 A1:2015 standards for security and durability.

### **MATTRESS:**

This bed is designed to use a mattress size 190 cm long and 90 cm wide. The total thickness must not exceed 16,1 cm. The mattress top must not pass the marking on the ladder / the post for the safety-rail.

### **WARNING:**

High beds and the upper bed of bunk beds are not suitable for children under six years due to the risk of injury from falls. Bunk beds and high beds can present a serious risk of injury from strangulation if not used correctly. Never attach or hang items to any part of the bunk bed that are not designed to be used with the bed, for example, but not limited to ropes, strings, cords, hooks, belts and bags. Children can become trapped between the bed and the wall, a roof pitch, the ceiling, adjoining pieces of furniture (e.g. cupboards) and the like. To avoid risk of serious injury the distance between the top safety barrier and the adjoining structure shall not exceed 75 mm or shall be more than 230 mm.

Do not use the high bed / bunk bed if any structural part is broken or missing.

The bed must not be used unless secured to a backing structure.

### **MAINTENANCE INSTRUCTIONS:**


Check regularly that all assembly fastenings are properly tightened. Ventilation of the room is necessary in order to keep the humidity low and to prevent mould in and around the bed. Any additional or replacement parts should be obtained from the manufacturer or distributor.

## **WARNING**


**YOUR CHILDREN'S SAFETY  
IS YOUR RESPONSIBILITY**

# Tools required


---




Phillips screwdriver  
(small & medium)

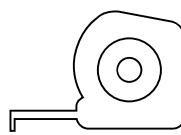

Ruler/tape  
measure




Flatblade screwdriver  
(small & medium)

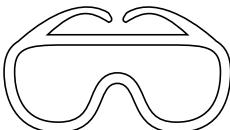

Eye protection  
(when using a  
hammer or glue)





Small hammer

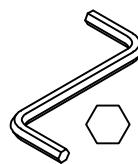



Allen key 4mm  
(included)  
No. 4033-004


# Components

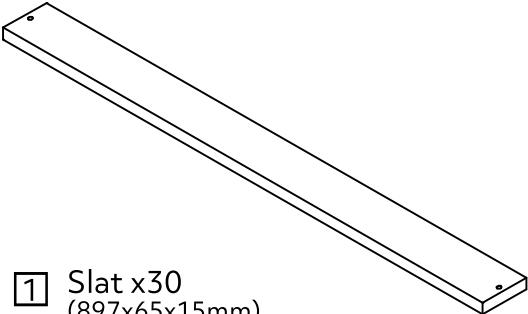
- 


**1** Slat x30  
(897x65x15mm)  
No. 12-01508971
- 

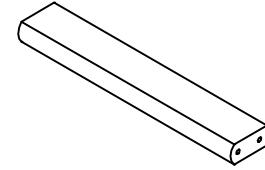
**2** List f. safety x2  
(318x28x12mm)  
No. 12-01203181-20 White  
No. 12-01203181-65 Grey
- 

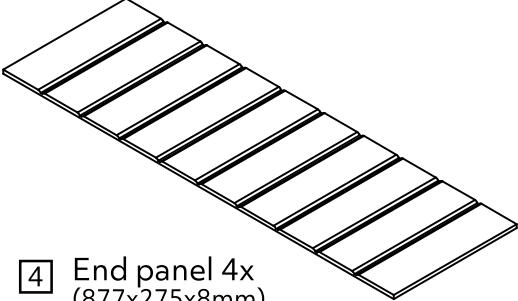
**3** Tread (w/ 4 holes) x1  
(350x65x20mm)  
No. 12-02003503-20 White  
No. 12-02003503-65 Grey
- 

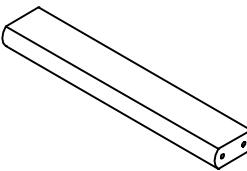
**4** End panel 4x  
(877x275x8mm)  
No. 4301-0808771-20 White  
No. 4301-0808771-65 Grey
- 

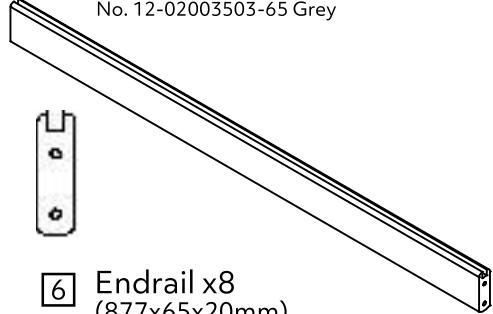
**5** Tread (w/ 3 holes) x1  
(350x65x20mm)  
No. 12-02003504-20 White  
No. 12-02003504-65 Grey
- 

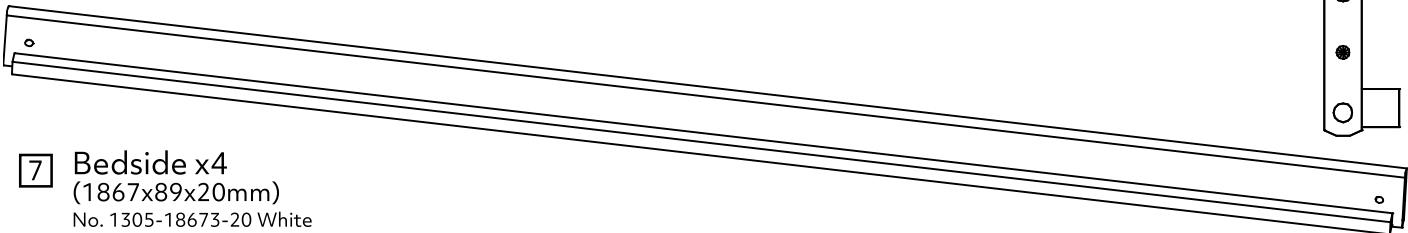
**6** Endrail x8  
(877x65x20mm)  
No. 12-02008772-20 White  
No. 12-02008772-65 Grey
- 

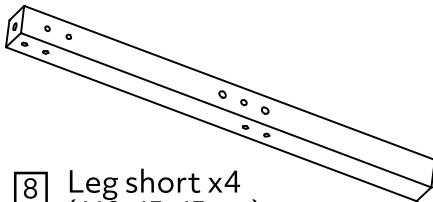**7** Bedside x4  
(1867x89x20mm)  
No. 1305-18673-20 White  
No. 1305-18673-65 Grey
- 

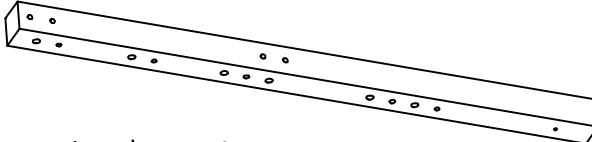**8** Leg short x4  
(618x43x43mm)  
No. 12-04306181-20 White  
No. 12-04306181-65 Grey
- 

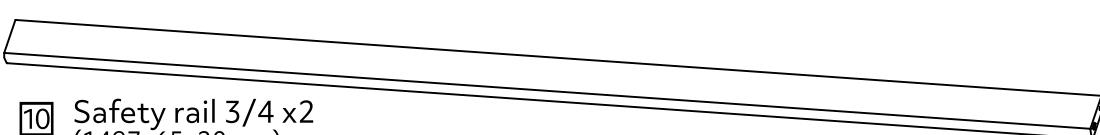**9** Leg long x4  
(826x43x43mm)  
No. 12-04308262-20 White  
No. 12-04308262-65 Grey
- 

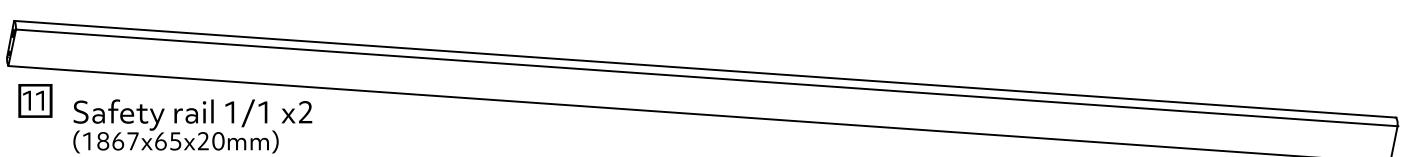
**10** Safety rail 3/4 x2  
(1497x65x20mm)  
No. 12-02014971-20 White  
No. 12-02014971-65 Grey
- 

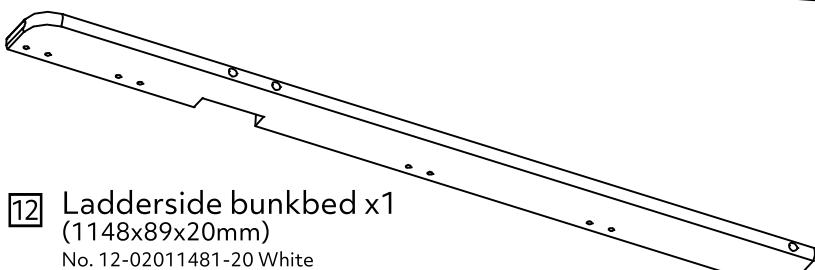**11** Safety rail 1/1 x2  
(1867x65x20mm)  
No. 12-02018673-20 White  
No. 12-02018673-65 Grey
- 


**12** Ladderside bunkbed x1  
(1148x89x20mm)  
No. 12-02011481-20 White  
No. 12-02011481-65 Grey

# Fittings (Shown to scale)


## Bag 1

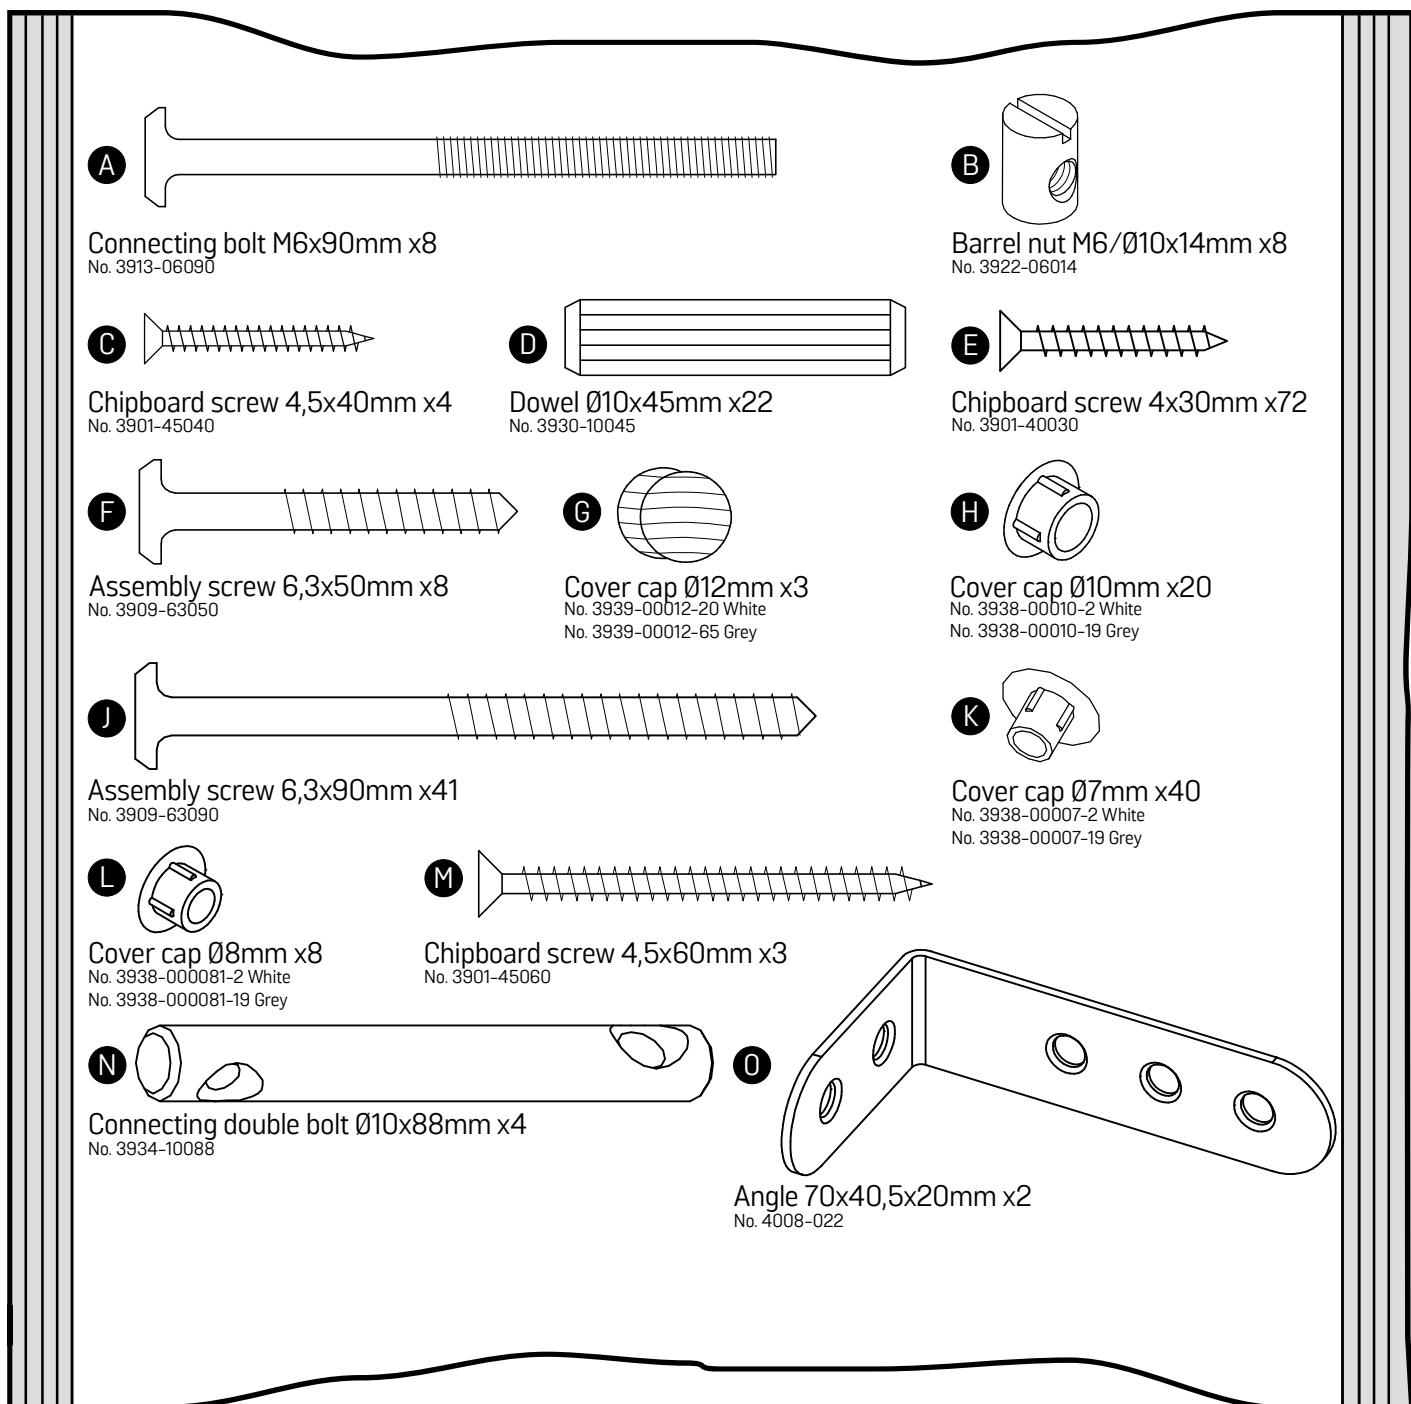


# 1

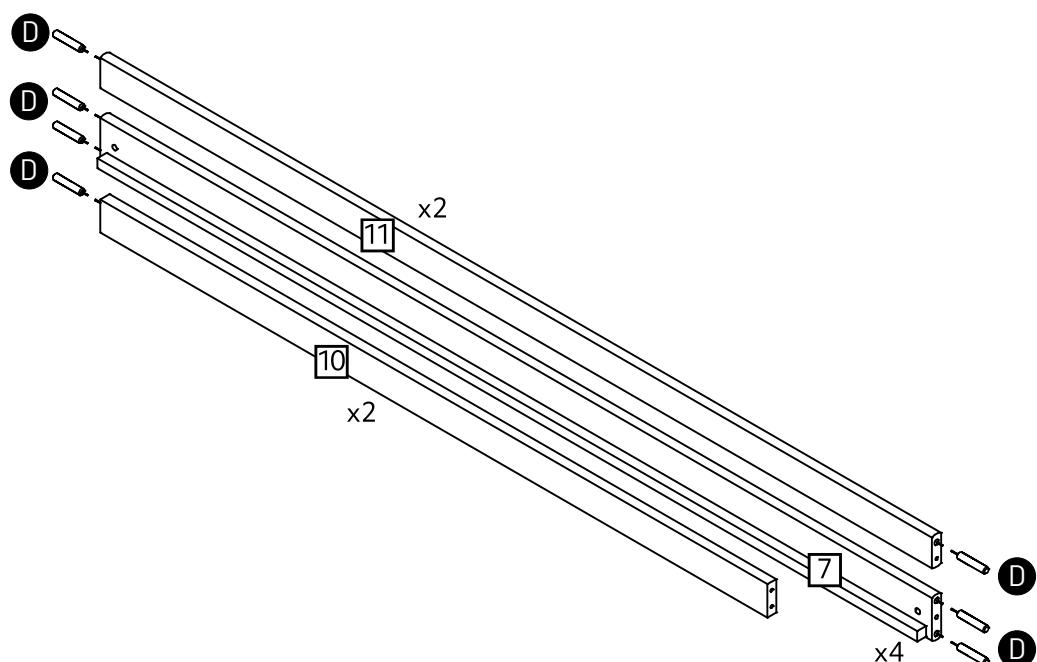

# 2

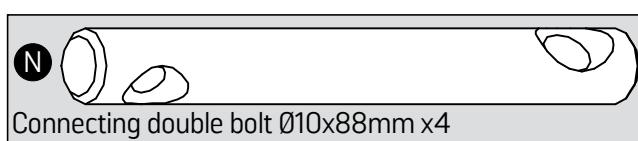


Twist/turn the bolt to follow the Ø6,8 mm hole. Countersunk Ø5 mm hole should face same direction as bedside rail drilling.

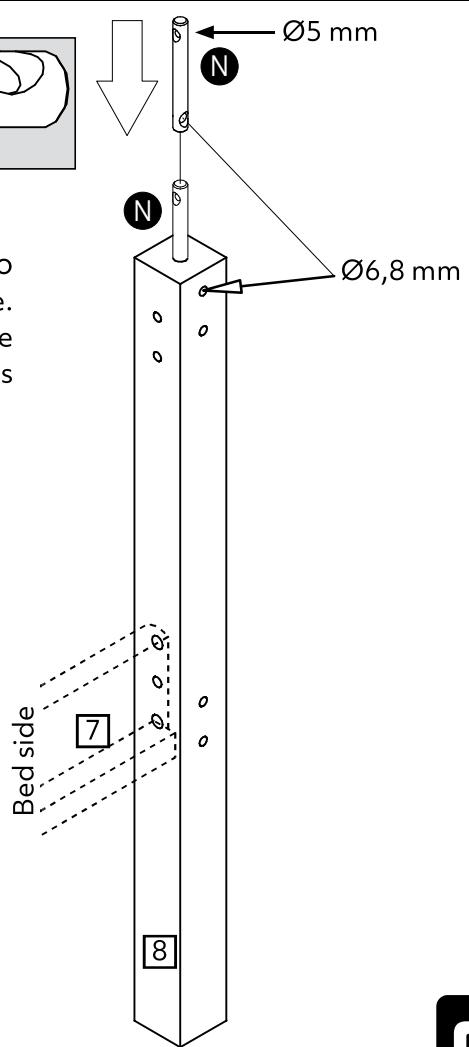


Repeat x4

# 3

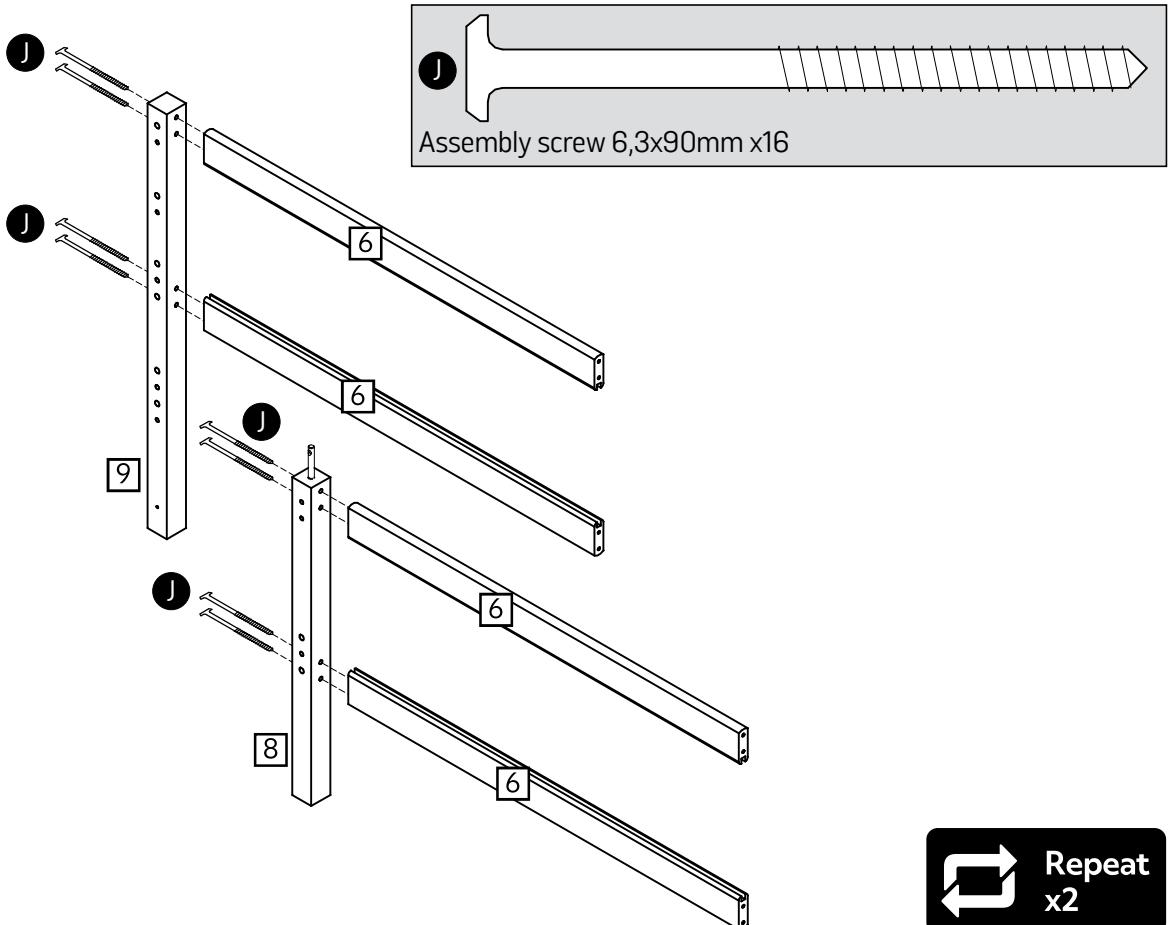





**Repeat x2**

# 4



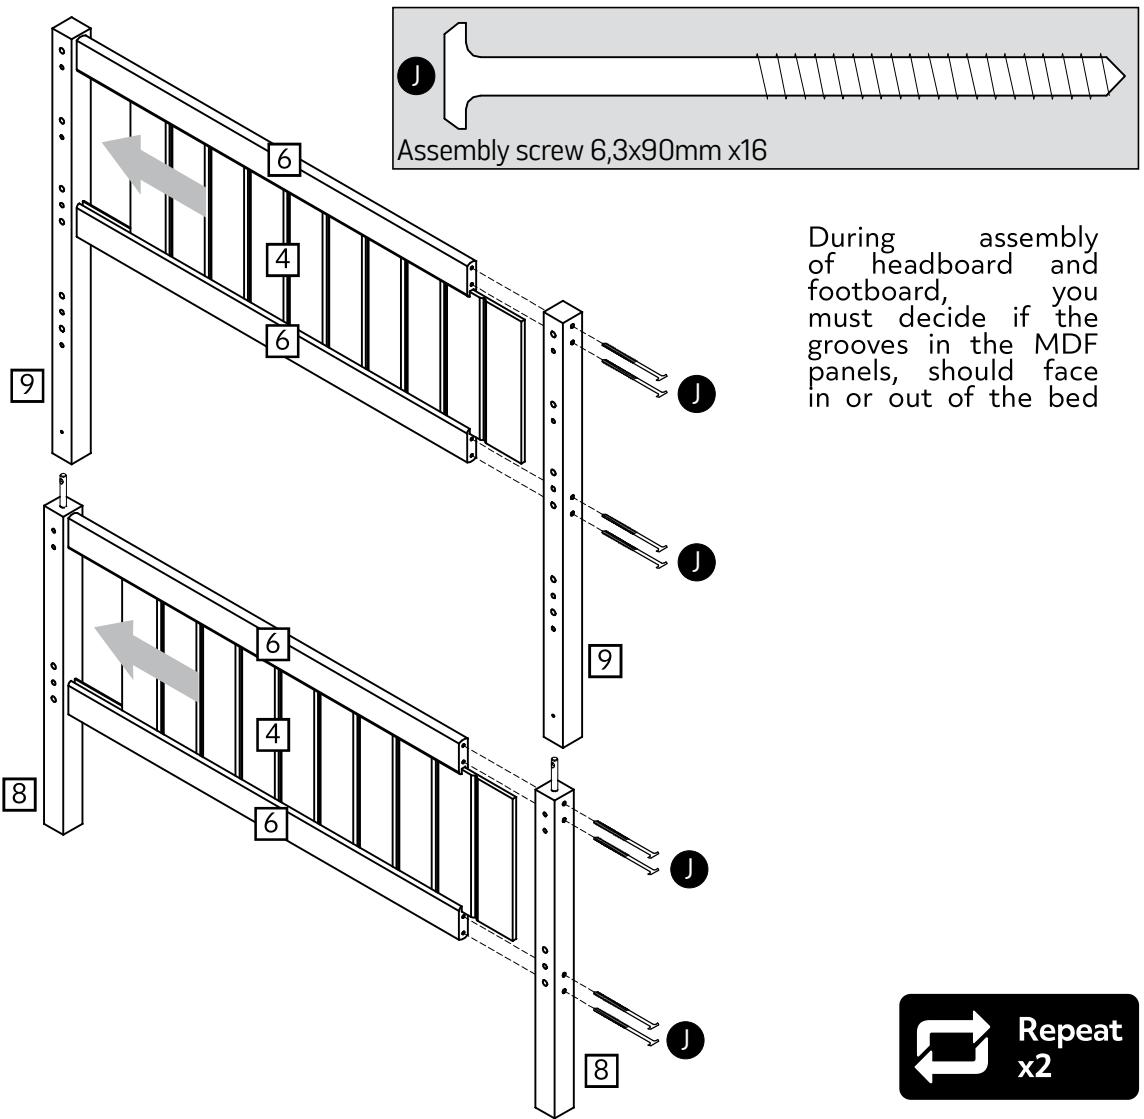


**Repeat x2**



# 5

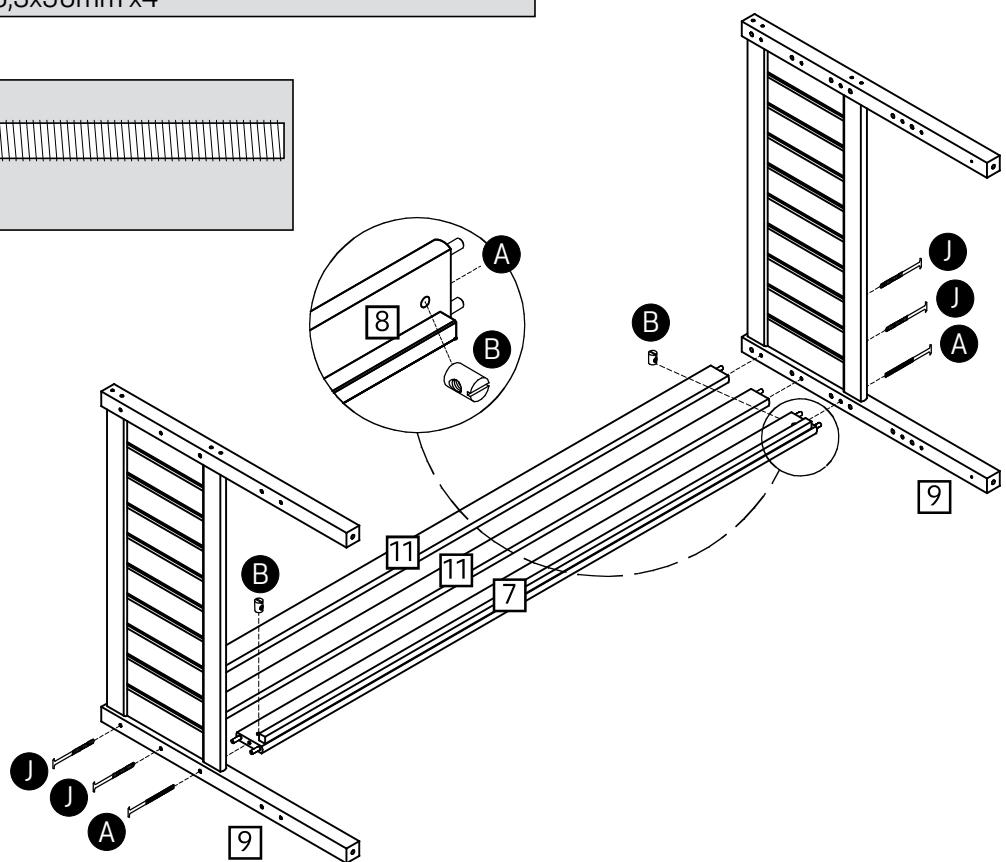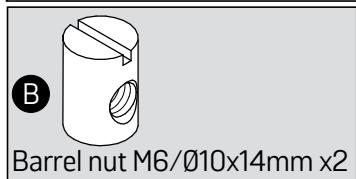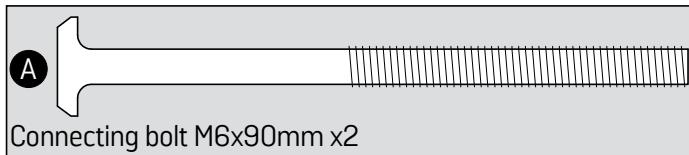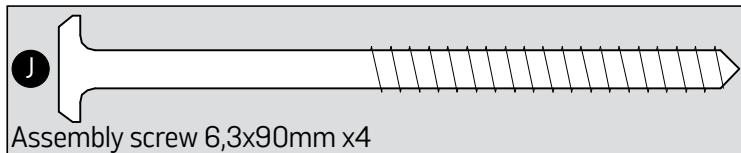



# 6

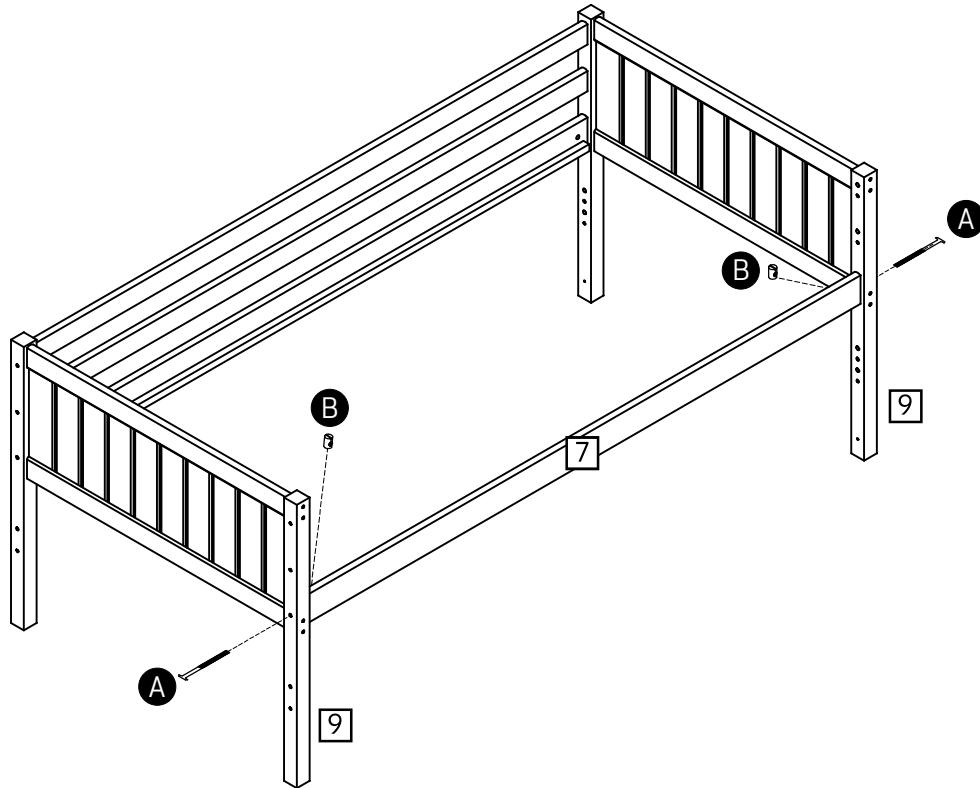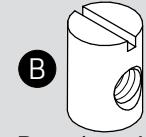


# 7

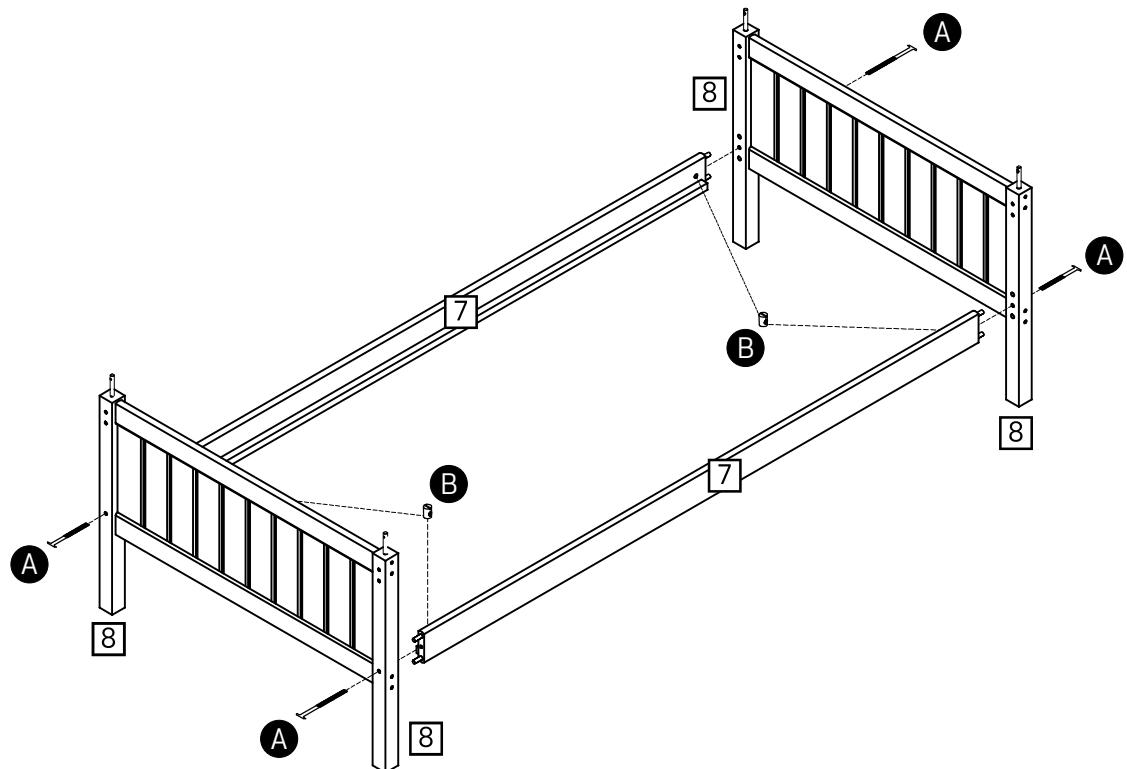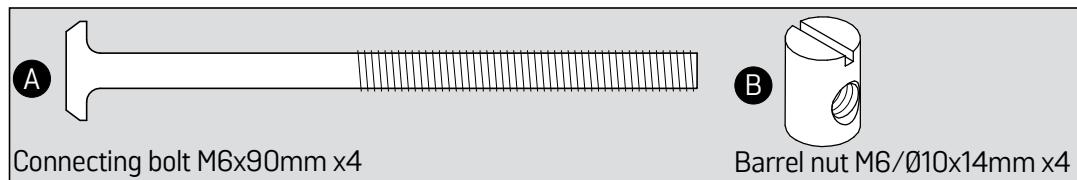


# 8

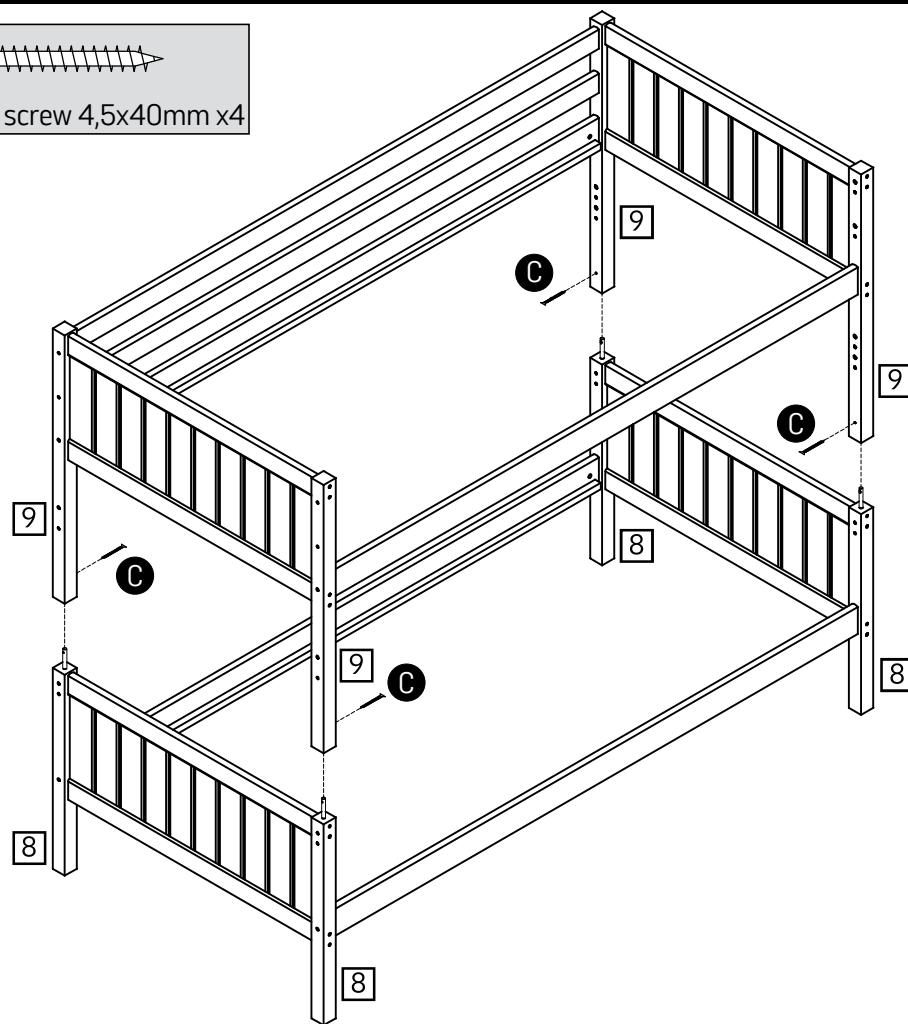



# 9

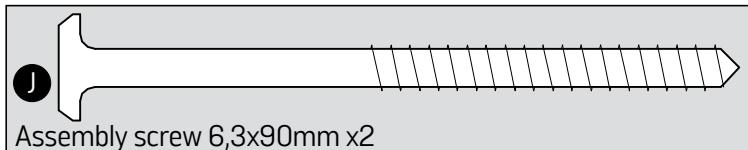


Ladder can be positioned left or right!!

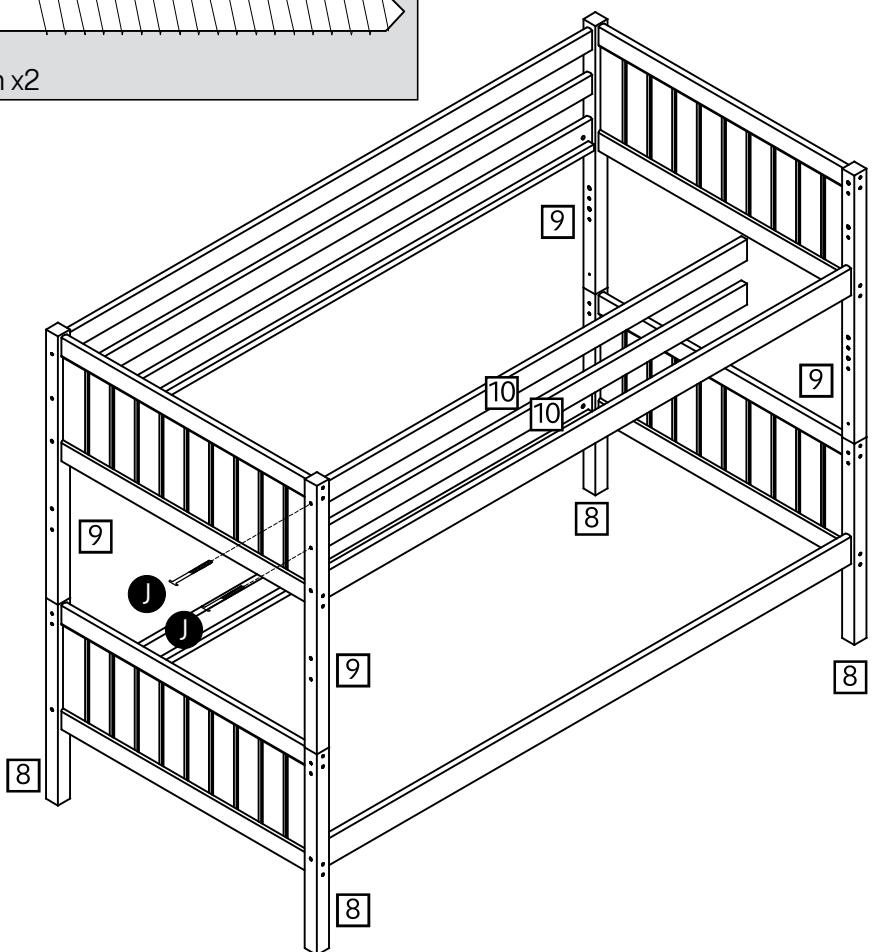


# 10

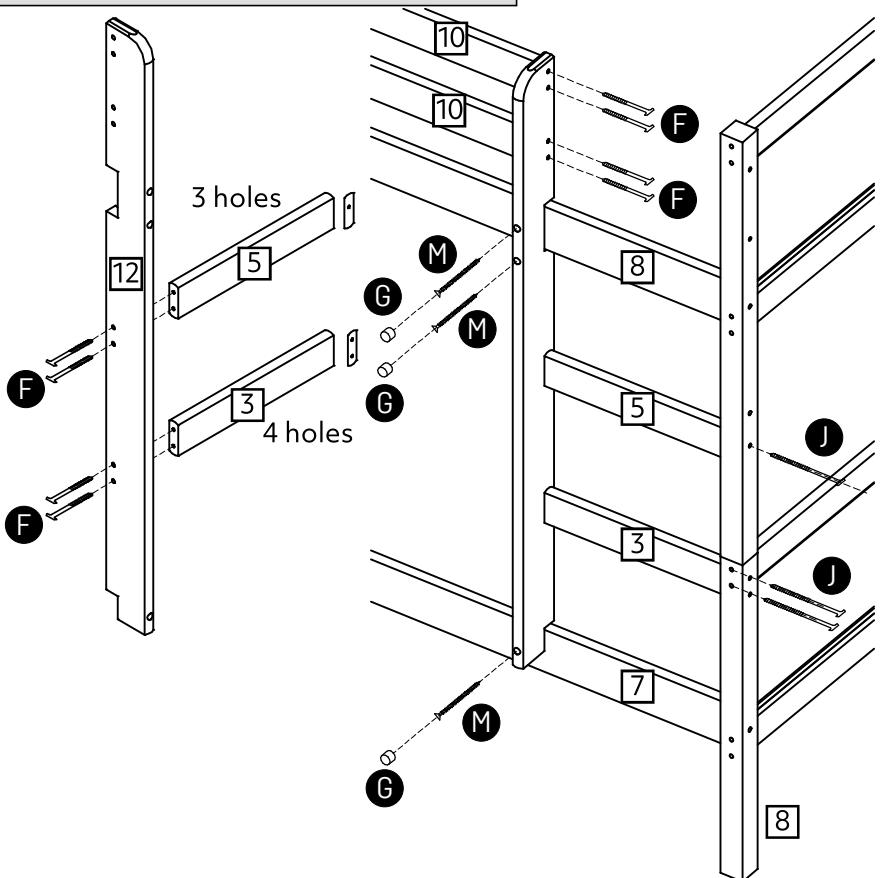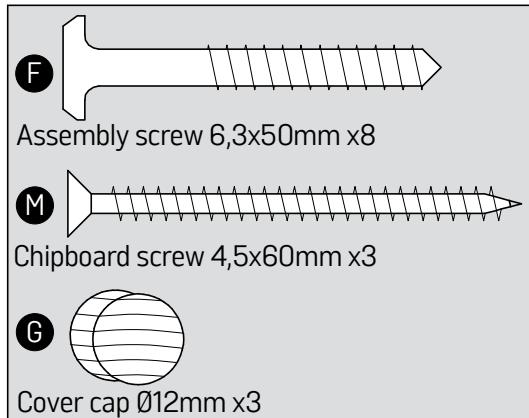

# 11a




**PUSH**

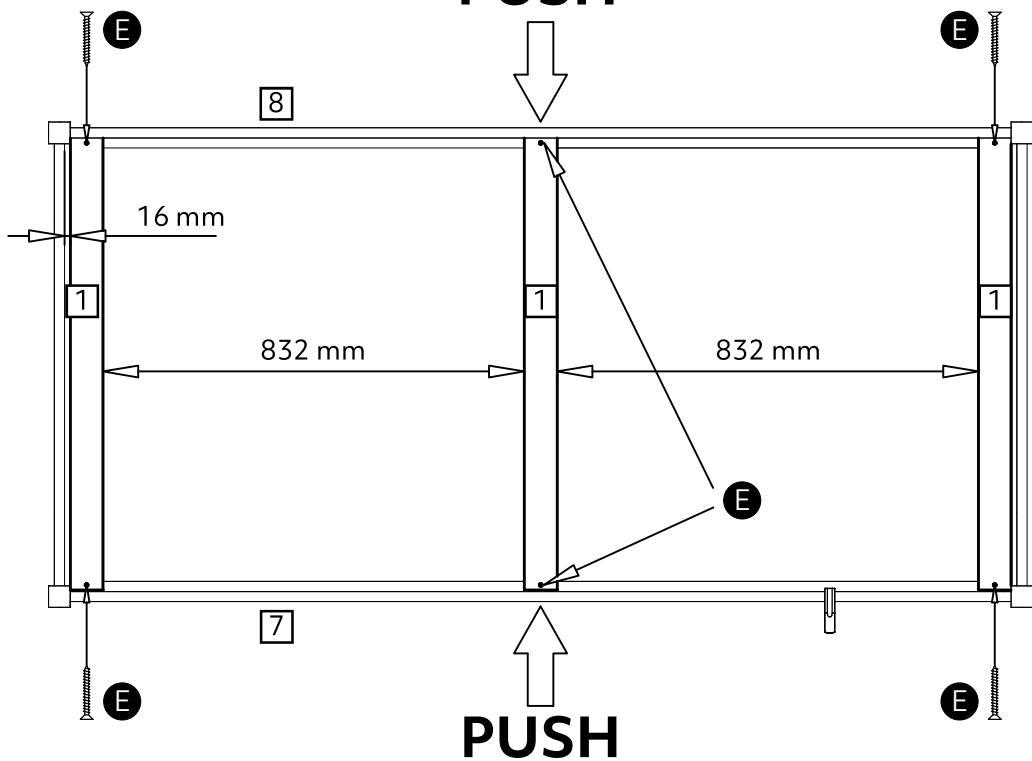


**Repeat  
x2**

# 11b





63 mm

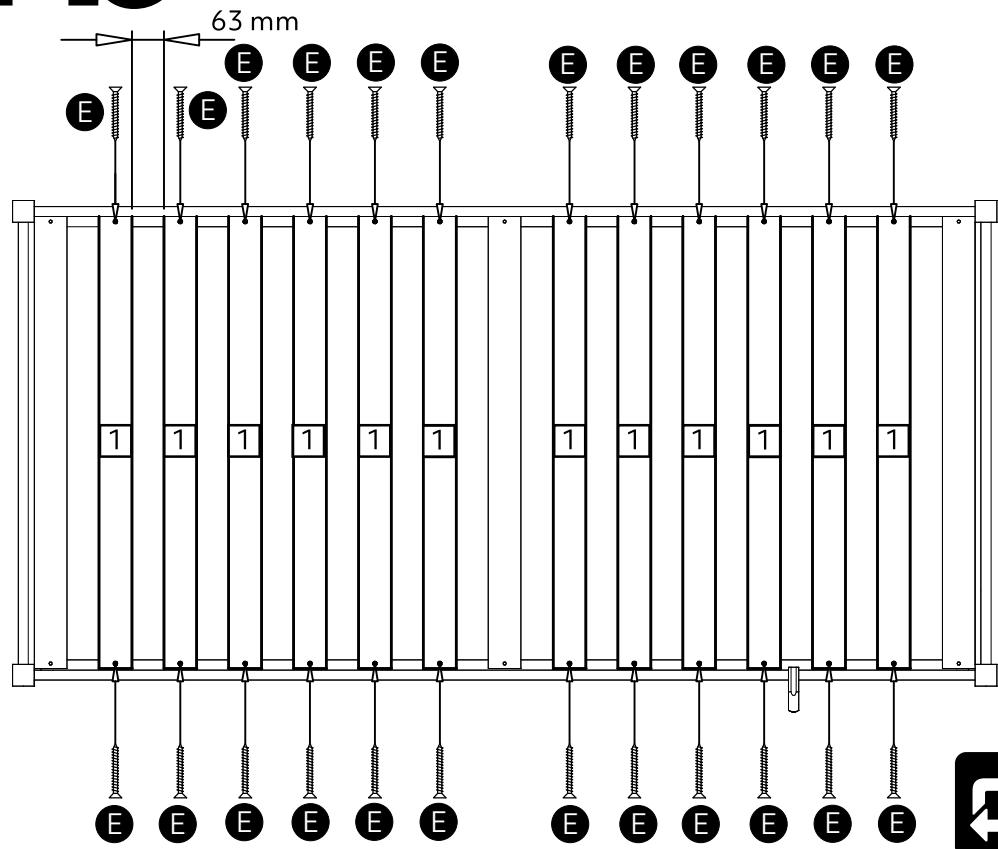

**Repeat  
x2**



# 12

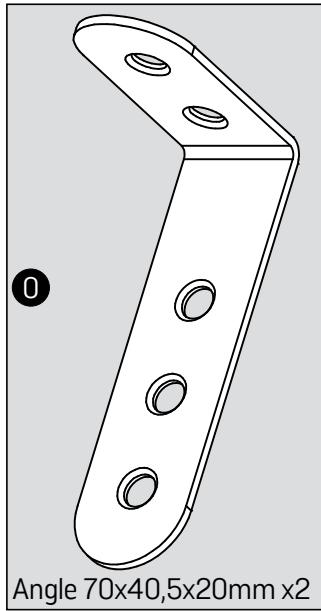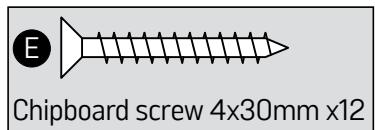


Angle 70x40,5x20mm x2



Max mattress height!

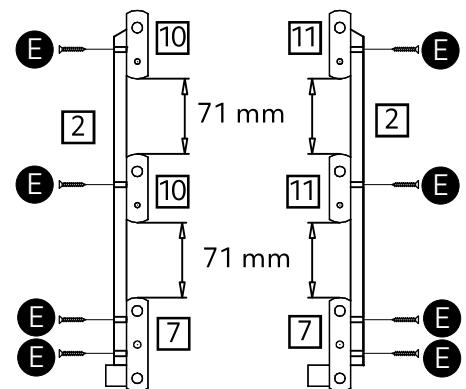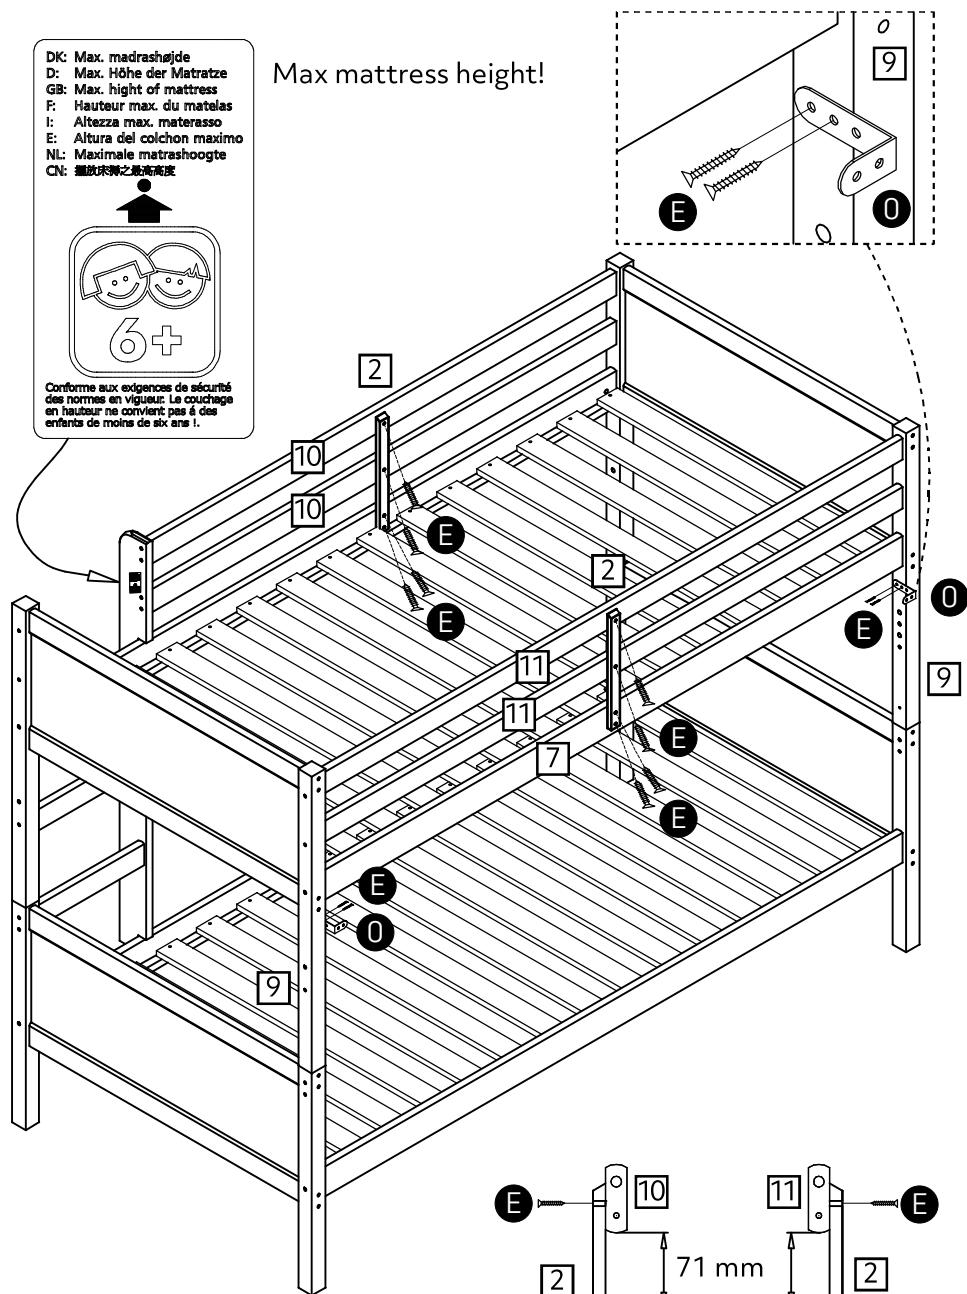

Bunkbed as 2 single beds

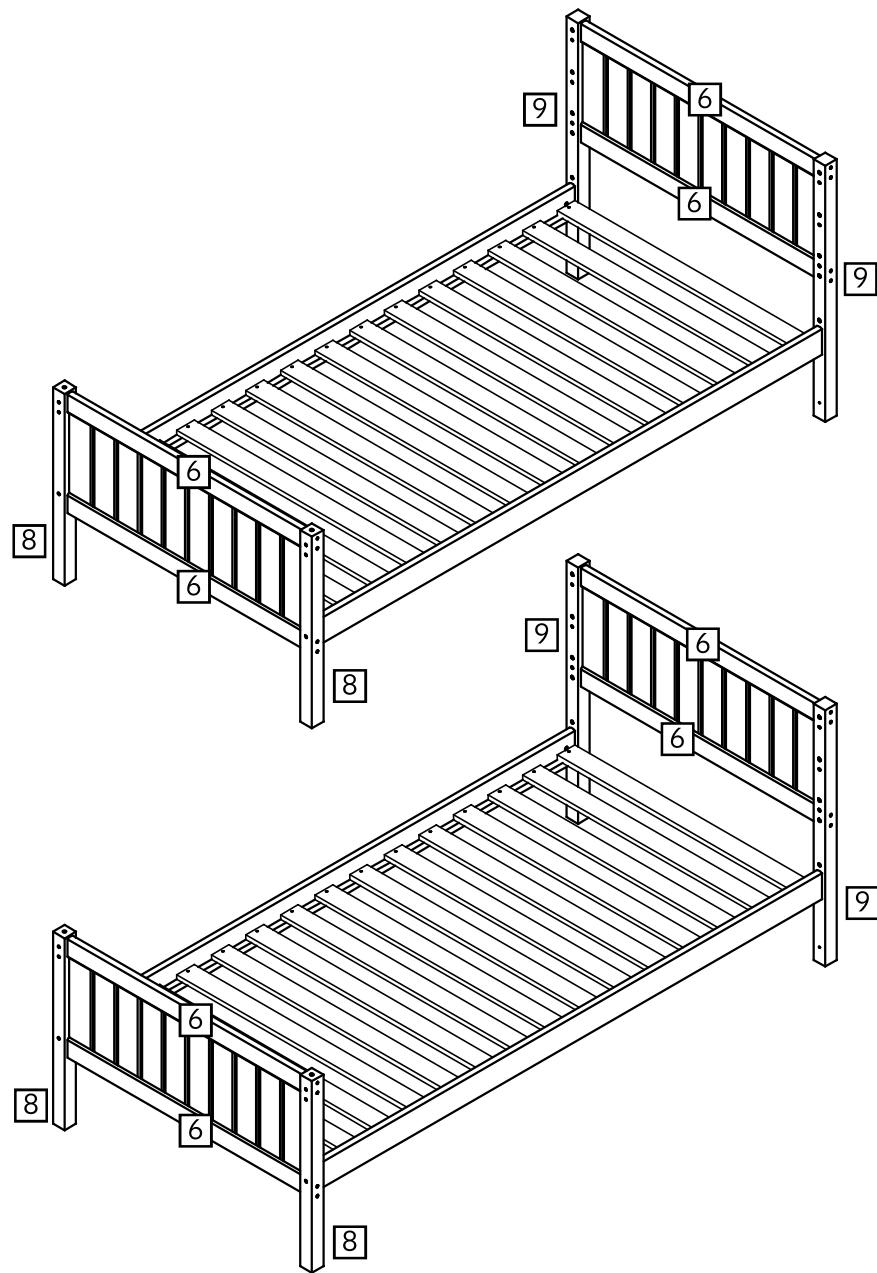

Note: To achieve the single bed look shown above, one of the upper bunk bed long head boards should be swapped over with the lower bunk bed short head boards.