# BUSH

# Customer Service Manual

Fridge - Freezer

BUSH RETROEFF CREAM BUSH RETROEFF BLACK





# **Customer service manual**

### Combi Fridge-Freezer RETROEFF

# Contents

| 1  | Precautions                     | Page 2  |
|----|---------------------------------|---------|
| 2  | Glass Shelf Change              | Page 4  |
| 3  | Foldable Glass Shelf Change     | Page 5  |
| 4  | Flap Cover Change               | Page 6  |
| 5  | Door Shelf Change               | Page 7  |
| 6  | Adjustable Door Shelf Change    | Page 8  |
| 7  | Basket, Chiller, Crisper Change | Page 9  |
| 8  | Maxifresh Change                | Page 10 |
| 9  | Door Gasket Change              | Page 11 |
| 10 | Additional Support              | Page 12 |

#### **Precautions**:

Always follow safety advice.

Always switch off and unplug the appliance before attempting to remove any part.

Always wear appropriate protective equipment when carrying out any work.

Always use the correct tools for carrying out any work.

Some repairs may not be suitable for unqualified users to carry out. If in doubt seek the advice of a profession repairer.

#### SAFETY PRECAUTIONS



Read all instructions before repairing the product.

Before any disassembly make sure appliance is unplugged.

There is electrical shock risk.

Use rated control equipment.

DO NOT attempt a product repair if you have any doubts as to your ability to complete the repair in a safe and satisfactory manner.

Make sure to check out Model name, Rated voltage, Rated current, Operation Temp, etc.

When you replace the parts, please use authentic parts to replace defective parts.

Before starting the dismantling, wear protective equipment.

Do not use multiple receptacles or extension cord.

Do not plug in damaged, torn or old plugs.

Do not allow children to play with the appliance or let them hang off the door.

Do not plug-in or out the plug from the receptacle with wet hands to prevent electrocution.

Do not place glass bottles or beverage cans in the freezer department. Bottles or cans may explode.

When taking ice made in the freezer department, do not touch it, ice may cause ice burns and/or cuts.

Do not cover the body or top of fridge with lace. This affects the performance of your fridge.


Fix the accessories in the fridge during transportation to prevent damage to accessories.

Leave to stand for at least before switching on to allow compressor oil to settle if transported horizontally.

Do not damage the refrigerant circuit.

Care must be taken while cleaning/carrying the appliance not to touch the bottom of the condenser metal wires at the back of the appliance, as this could cause injury to fingers and hands.


|           |                     | Applicable models |    |
|-----------|---------------------|-------------------|----|
| REF       | PLACEMENT PROCEDURE | General           | EN |
| Part name | Glass Shelf Change  |                   |    |

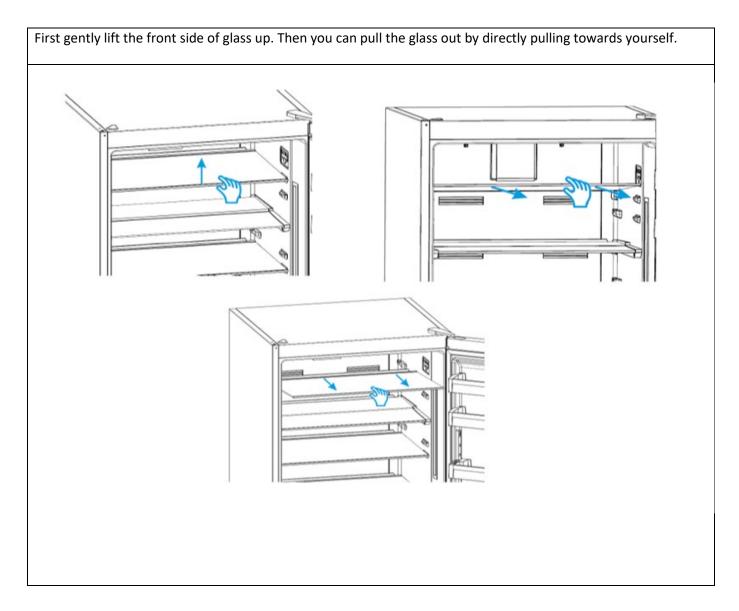


|                       |                             | Applicable models |    |
|-----------------------|-----------------------------|-------------------|----|
| REPLACEMENT PROCEDURE |                             | General           | EN |
| Part name             | Foldable Glass Shelf Change |                   |    |

First push the glass in front to all the way back. Then gently lift both glasses up together. Now you can pull glasses out by directly pulling towards yourself.

|           |                   | Applicable models |    |
|-----------|-------------------|-------------------|----|
| REPLA     | CEMENT PROCEDURE  | General           | EN |
| Part name | Flap Cover Change |                   |    |

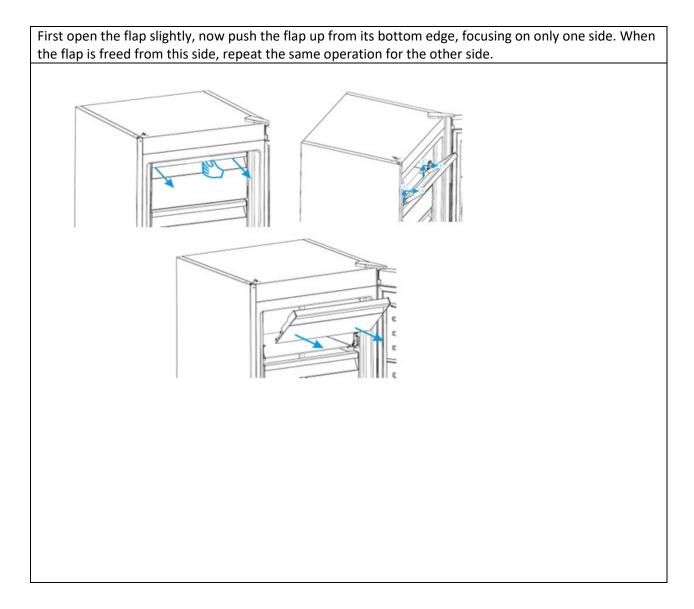


|           |                   | Applicable models |    |
|-----------|-------------------|-------------------|----|
| REPLA     | CEMENT PROCEDURE  | General           | EN |
| Part name | Door Shelf Change |                   |    |

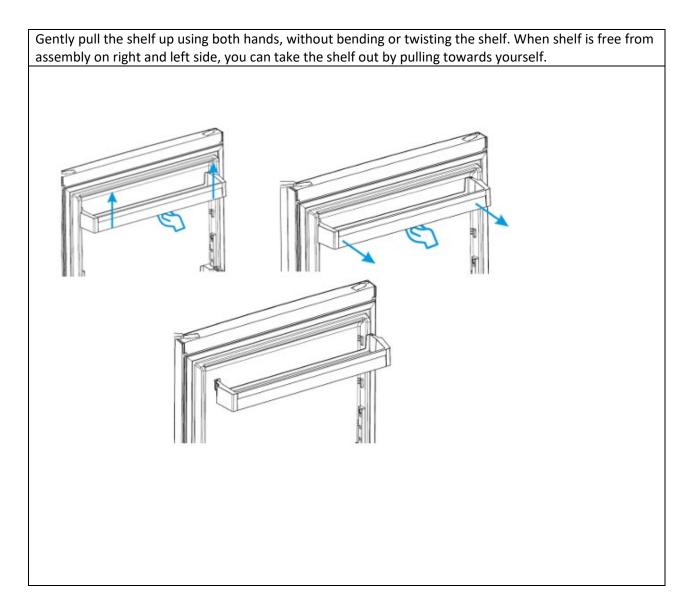


| REPLACEMENT PROCEDURE |                              | Applicable models |    |
|-----------------------|------------------------------|-------------------|----|
|                       |                              | General           | EN |
| Part name             | Adjustable Door Shelf Change |                   |    |

First grip the door shelf by both hands, at the same time using your thumbs, pull latches on sides towards yourself. This will unlock the mechanism, so you can lift the shelf all the way up and free the shelf from its guides on the door. .


|                       |                                 | Applicable models |    |
|-----------------------|---------------------------------|-------------------|----|
| REPLACEMENT PROCEDURE |                                 | General           | EN |
| Part name             | Basket, Chiller, Crisper Change |                   |    |

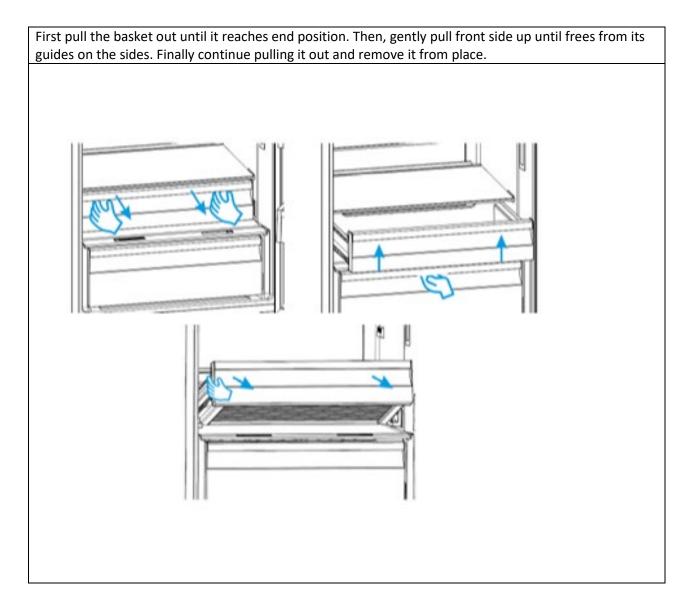

|           |                  | Applicable models |    |
|-----------|------------------|-------------------|----|
| REPLA     | CEMENT PROCEDURE | General           | EN |
| Part name | Maxifresh Change |                   |    |

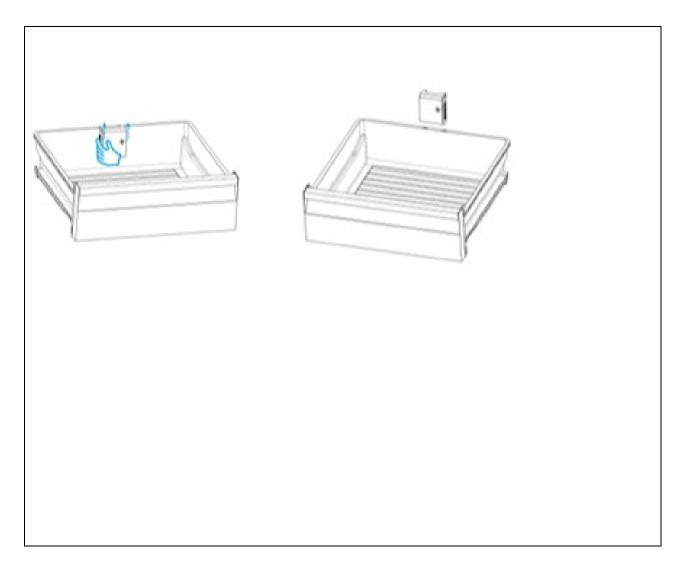

|                       |                    | Applicable models |    |
|-----------------------|--------------------|-------------------|----|
| REPLACEMENT PROCEDURE |                    | General           | EN |
| Part name             | Door Gasket Change |                   |    |

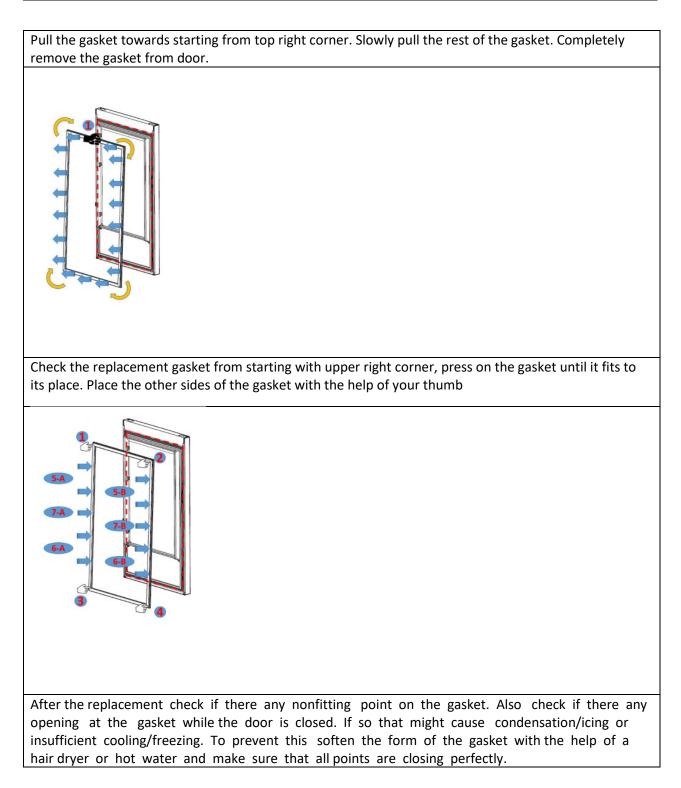

|                    | Applicable models |    |
|--------------------|-------------------|----|
| ADDITIONAL SUPPORT | General           | EN |

The following parts are available for the customer to undertake repairs at their own risk. Please carefully follow the guidance given in this manual including all safety measures.

- Door Handles
- Door Hinges
- Trays
- Baskets
- Door Gaskets

Parts can be obtained by calling the support service listed in this section. All repairs in this manual can be achieved using commonly available tools.

If you are in any doubt of your ability to carry out a repair, please use a professional repairer, also available through the support service.

Damage sustained to the appliance or future faults arising from poorly carried out repairs <u>will not be</u> <u>covered under warranty</u>.

#### Help and assistance

If you require any technical guidance or find that your fridge-freezer is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at

#### www.bush-support.com

If you still require further assistance, call one of our experts on **0345 257 7271\***. To help us give you a fast and efficient service please have the following information ready.

| Model Ref.       | You can find these on<br>the rating plate - a small<br>information panel (usually |  |
|------------------|---|--|
| Serial number    | a sticker or metal plate) on<br>the rear of your appliance                        |  |
| Date of purchase | This will be shown on<br>your receipt   |  |

Local call rates apply\*

#### Lines open 8am-7pm Monday to Saturday an 10am-4pm Sunday.

\*Calls to Bush enquiry lines may attract a charge and set up fee residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details

For security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges

#### Notes on disposal :



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.