

2 year guarantee

Gator Let's get started

12)

H86-GA Series

vax.co.uk

Let's talk safety



Basic safety precautions

This handheld is intended for household use only and NOT for commercial or industrial use.

- This handheld is for indoor use only.
- For dry debris use, not to be used on wet surfaces.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the handheld.
- Only Vax recommend charger, tools and accessories should be used with this handheld.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Please keep instructions for further use.

Don'ts

- X Don't charge the handheld outdoors
- Don't use this handheld if it has been dropped, damaged, immersed in water or left outdoors.
- ✗ Don't run over the charger cord or use handheld if the Charger cord or plug is damaged. Please contact our Customer Care Line on: 0844 4128 455 (Mon-Fri 8.30am to 6.30pm, Sat 9.00am to 5.00pm).
- Don't handle the plug or use the handheld with wet hands.
- Don't throw the handheld into fire or expose to high temperatures, as the handheld contains a rechargeable nickel cadmium battery which may cause damage or burst.

- Don't pull or carry this handheld by the charger cord. Don't use the charger cord as a handle, pull the charger cord around corners or sharp edges or close a door over the charger cord. Don't unplug handheld by pulling on the charger cord.
- ✗ Don't attempt to remove blockages with sharp objects as this may cause damage to your handheld.
- Don't use the handheld charger with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
- Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).

Do's

- ✓ Always make sure filter and dirt container are fitted correctly before using your handheld.
- Always turn off the Gator handheld vacuum and disconnect the charger before carrying out any maintenance.
- Turn off all controls on the handheld before disconnecting or connecting the charger.
- ✓ Take extra care when cleaning on the stairs.
- ✓ Always replace the fuse in the plug with a 13amp fuse.

- Always protect the charger cable from heated surfaces or near open flames.
- Use only CE approved 13amp extension cords, nonapproved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Always carry the handheld by the handle.
- ✓ Store your handheld in a cool, dry area.

Please keep instructions for further use.

Thank you for buying this Gator.

Taking care of small cleaning tasks

The Gator range is designed to make cleaning as quick and convenient as possible and this user guide will help you get the most out of your machine.

The Gator range is perfect for small cleaning tasks on surfaces and upholstery.

Taking care of your Gator

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you need to tackle those small jobs.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call: (UK) 0844 412 8455 (ROI) 1-800 928 308

Monday-Friday 8.30am to 6.30pm, Saturday 9.00am to 5.00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the handheld before calling.

Alternatively, you can write to us at: Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 OQH, UK

Let us know what you think @VaxUK

Vax

You're home"

Contents



Gator Series

Included with your machine





Charger

+ Gator Car



+ Gator Pet



Turbohead

Getting to know your machine



Technical Specification


| Name | Gator | Gator Car | Gator Pet |
|------------------|---------|-----------|-----------|
| Voltage | 10.8V | 12V | 18V |
| Weight | 1.24kg | 1.5kg | 1.8kg |
| Capacity | 0.3L | 0.3L | 0.3L |
| Cleaning | | | |
| Time | 12 mins | 15 mins | 18 mins |
| Charging Time | 12 hrs | 12 hrs | 12 hrs |

Accessories & Consumables*


Gator Pet Gator Gator Car Charger Charger Charger 1-5-132794-00 Pre-motor Car adapter Pre-motor Filter (Type 67) 1-7-131574-00 Filter (Type 67) 1-7-131574-00 1-5-133792-00 Pre-motor Filter (Type 67) Motorised Turbohead 1-7-131574-00 1-2-132797-00

Subject to technical change without notice.


PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE

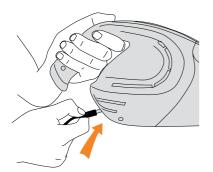


Plug charger into the mains and insert lead into back of machine. Initial charging time is 24 hours.

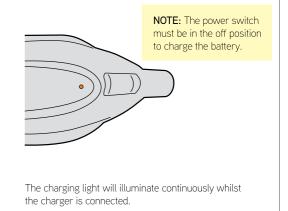



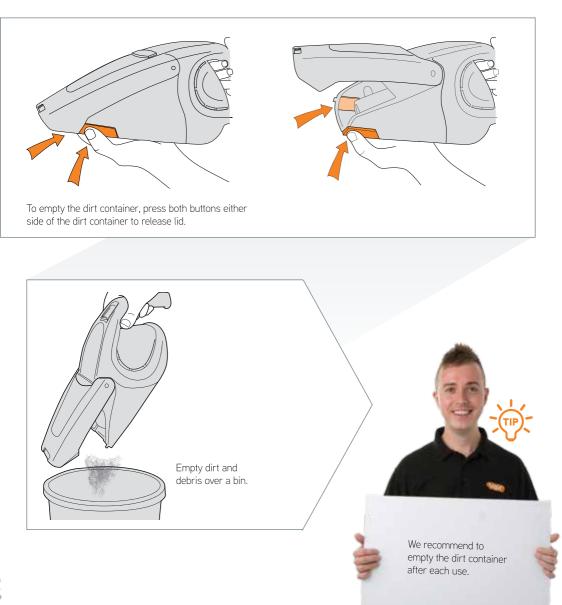

Taking care of your machine

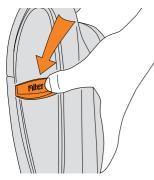

Press the filter removal button and pull dirt container from machine.




Whilst holding the dirt container over a bin, grasp the filter gently and pull out.




Taking care of your machine



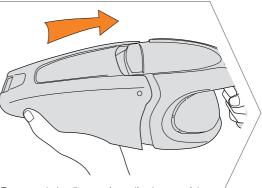

To re-attach the dirt container, align bottom of the dirt container and push until it locks into place.

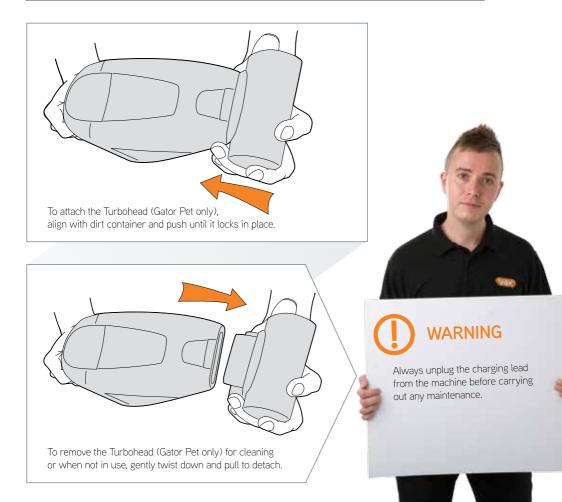

What to do if it goes wrong

Problem

Solution

Why does my handheld have no power? • Battery may not be fully charged. If using the handheld for the first time the initial charge should be 24 hours. The charging light will illuminate continuously when charger is connected.

Why won't the handheld pick up?

The nozzle or crevice tool may be blocked, check and clear any blockage. The filter may be clogged, clean the filter.
Go to 'Taking care of your machine' page*. The battery is getting weak, let the battery run until it stops and recharge.
The dirt container may be full, empty the dirt container.
Go to 'Using your machine'.

Why won't the battery recharge?

• The charger may not be inserted correctly. Check the fuse in the plug, if this needs replacing always replace with a 13amp fuse.

Getting in touch

It's quick and easy to register for your FREE guarantee

Online at: vax.co.uk/guarantees

we're here if you need us

Online vax.co.uk/support Call: (LK) 0844 412 8455 (ROI) 1-800 928 308 Monday-Friday 8.30am to 6.30pm, Saturday 9.00am to 5.00pm *

Alternatively, you can write to us at

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 OQH, UK

* Calls are charged at the UK local rate. Please make a note of the serial number and model number of the handheld before calling,





Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK email: info@vax.co.uk website: vax.co.uk

Version 1.0



EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the H86-GA series is manufactured in compliance with the following Directives: Safety: 2006/95/EC Low Voltage Directive. EMC: 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.