



Please retain for future reference



VOLT 120 ELECTRIC SCOOTER QUICK START GUIDE



info@hy-pro.co.uk
Hy-Pro Customer care line
Tel: 0800 731 0006
Made in China

BATTERY INFORMATION

Batteries have a capacity memory which is why the initial charge is very important for this product.

The initial charge will be memorised, therefore ZINC would like to remind you:

PLEASE CHARGE YOUR SCOOTER for a minimum of 12hrs before first use

To prolong the life of the battery in this scooter, please ensure you charge your scooter every two weeks even if it has not been used.

Before assembly:

1. Ensure you have all the required tools:

a. 1 x 8mm/10mm Spanner




b. 1 x 5mm Hex Wrench 1 x 2.5mm Hex Wrench




STEP 1

Ensure the power **switch is turned off** and the scooter **unplugged** before assembly.

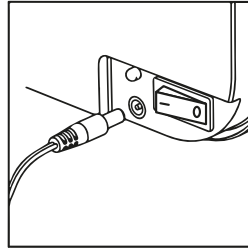


STEP 2

Depress the push button (a) located on the rear of the fork stem and insert the handlebar stem until the bottom locks securely into place.

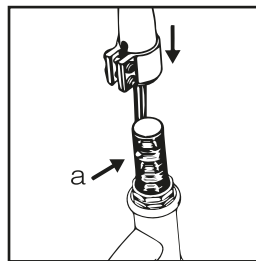

STEP 3

Tighten the bolts with the 5mm **hex wrench** and 10mm spanner. Tighten bolts evenly and securely, **alternately** tightening between each bolts.

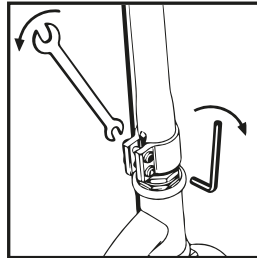

STEP 4


Handlebar/Stem Assembly

Align handlebars on top of the stem tube using the marked lines indicated and place the top bracket into position.

(a) Install handlebar clamp.

(b & c) and tighten evenly and securely with the 5mm **hex wrench** and 10mm spanner.


(d) Ensure the accelerator grip is securely tightened.

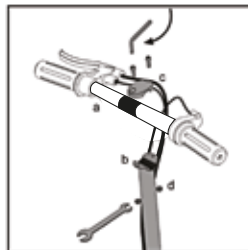

STEP 5 (only if required)

Replacing/tightening the accelerator grip


1. Unscrew and slide out the handle grip.
2. Replace the metal ring.
3. Insert the handle grip and align the holes.
4. Insert and tighten the screw.

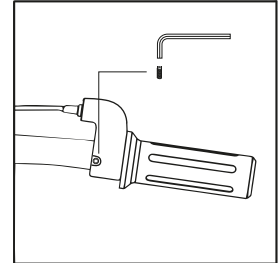

STEP 6

Charging the battery

1. Make sure **power switch is in the OFF position** before plugging in the charger. Insert charger into charging port on the right side of the battery box.

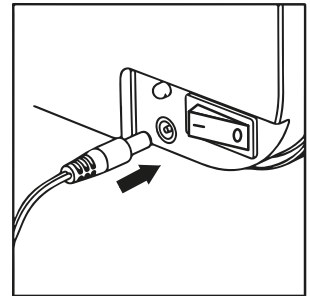

2. Plug charger into **wall power outlet**. The light on the charger housing should illuminate. Red LED light indicates the battery is charging and green LED light indicates battery is fully charged.

The scooter MUST ALWAYS be switched OFF while being charged.

Your electric scooter will not have a fully charged battery.

Initial battery charge time: minimum of 12 hours/ overnight.

Runtime: up to 60 minutes of continuous ride time.

Recharge time: at least 5 hours after the initial 12 hours charge time.

The reset button will automatically shut off the power if the motor is overloaded.

