


AVR BLACK GAS LIFT CHAIR

Assembly Instructions - Please keep for future reference

617/1799

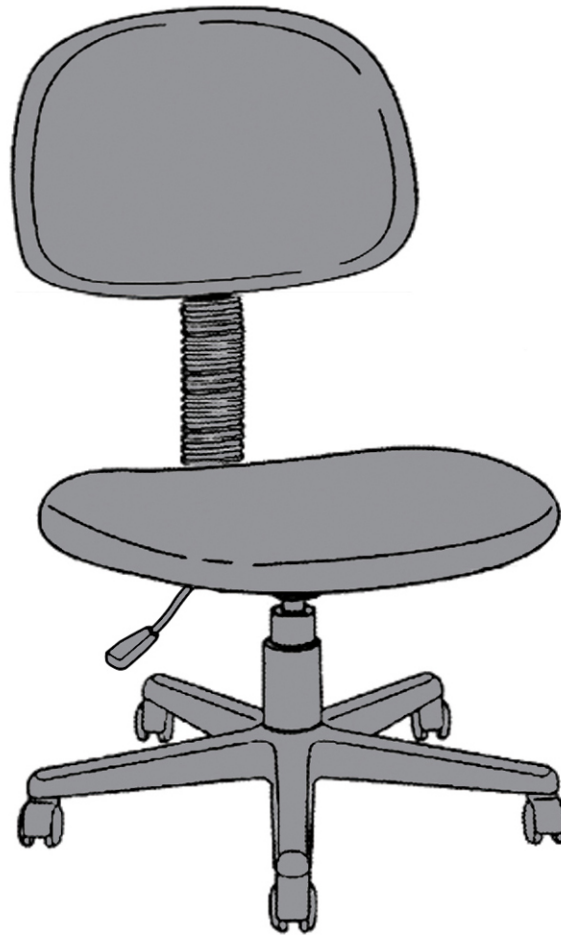

Dimensions

Width - 43.5 cm

Depth - 51 cm

Height - 77.5~89.5 cm



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.


Components

Please check you have all the components listed below


Ⓐ 5 x Castor



Ⓑ 1 x Base




Ⓒ 1 x Gas Lift



Ⓓ 1 x Cover




Ⓔ 1 x Seat Support

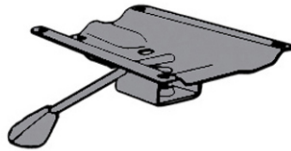

Ⓕ 1 x Seat Cushion



Ⓖ 1 x Backrest

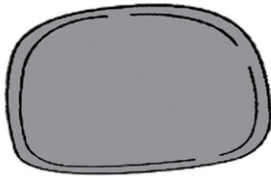

Ⓗ 1 x Back Support



Ⓖ 1 x Cover Plate



Ⓙ 1 x Metal Plate



Components - Fittings

If you have damaged or missing components, call the Customer Helpline: 0870 600 8990

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

Ⓐ 4 x Screw



M6X16MM

Ⓑ 2 x Screw



M6X25MM

Ⓒ 1x Knob




Tools required

1x Tool



Ruler - Use this ruler to help correctly identify the screws

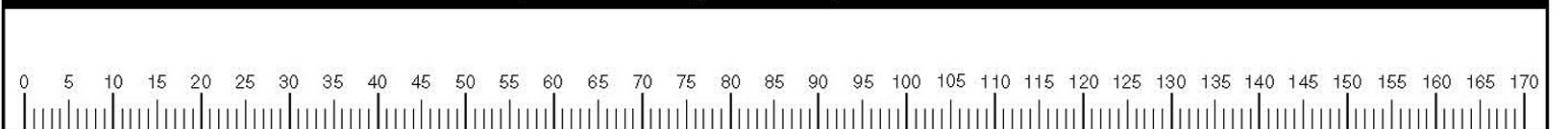

Assembly Instructions

Step 1-Fitting the Base

1. Push all the five castors (A) into the underside of the Base (B).

NOTE: Ensure all the castors are fully inserted.

2. Insert the Gas Lift (C) into the base.
NOTE: Ensure the Gas Lift is fully inserted and well fitted.

3. Slide the Cover (D) over the top.

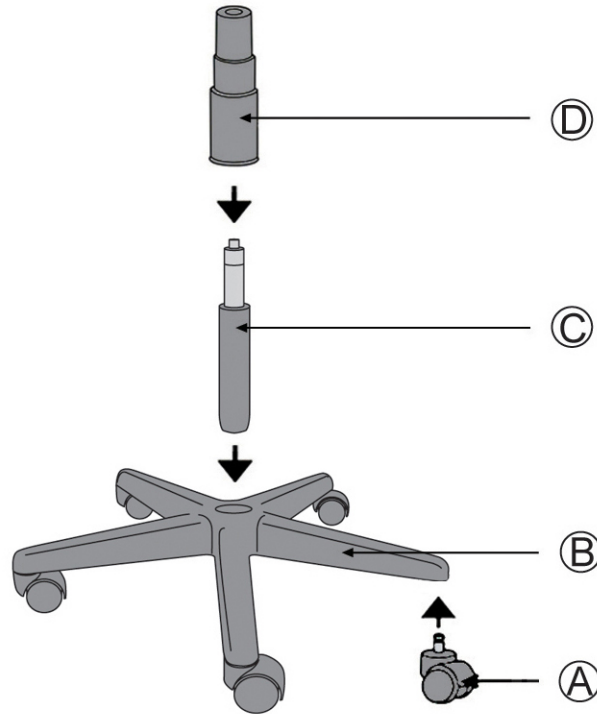


fig. 1

Step 2-Fitting the base Plate

NOTE: It would be useful to ask someone to help you at this stage.

Use screws (A) to fix the Seat Support (E) onto the Seat Cushion (F). Ensure the Seat Support is firmly fitted onto the seat cushion.

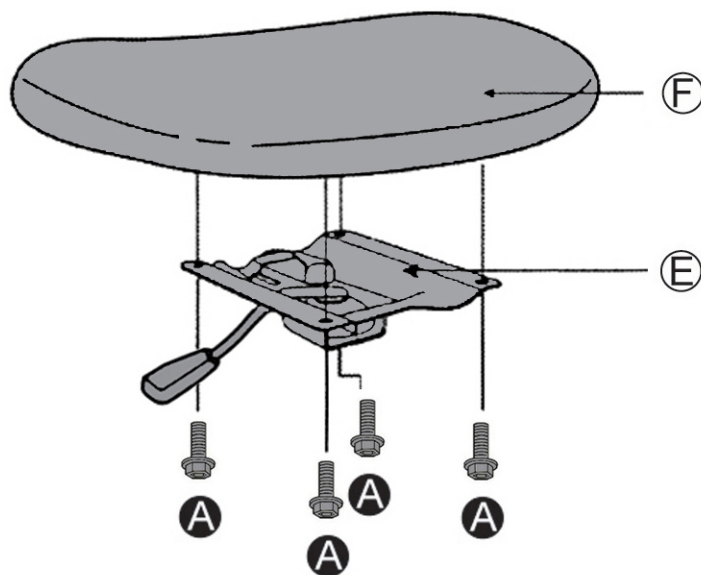


fig. 2

Assembly Instructions

Step 3-Fitting the back rest

1. Carefully attach the metal plate **J** onto the top of the back support **H**, then use screw **B** to fix the cover plate **I** onto the backrest **G**.

2. Use knob **C** to fix the back support **H** onto the seat support **F**.

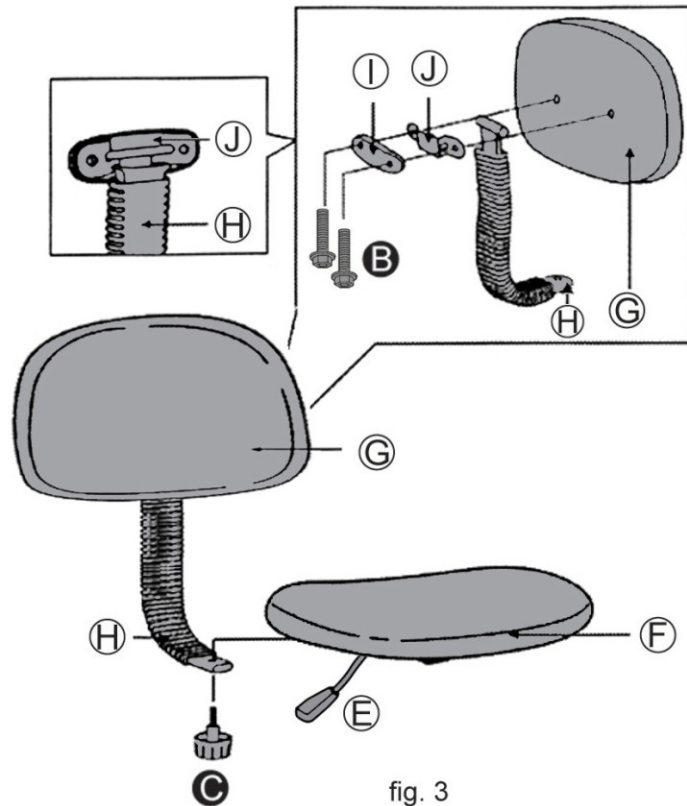


fig. 3

Step 4-Finishing the Unit

NOTE: It would be useful to ask someone to help you at this stage.

1. Carefully locate the Seat Unit **E** onto the base.
2. Carefully place the unit in the desired location.

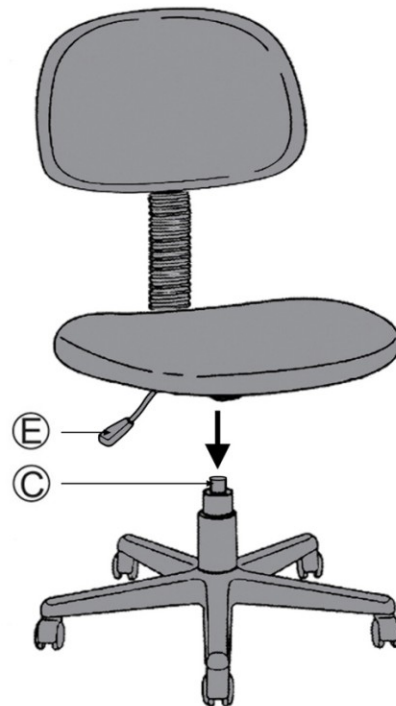


fig. 4

office chair inspection check points

1. check the function of gas lift(whether the gas lift can be lifted up and down smoothly and whether the base plate can detach the gas lift easily)
2. arm - whether the arm can pass the following test

Test requirement	Test property	Test result
Arm downwards static load test	The arm is applied an downwards force of 800N initially and hold the weight for 30s then continually increase the force until the arm is damaged at the points along one arm most likely to cause failure.	the test passed 800N is accepted, the test result to damage the sample is just for reference(remark the result in the inspection report)
Arm horizontal static load test	Apply a outward force of 100LB to each arm at the point along the arms where most likely to cause failure and hold the weight for 1 min then continuity increase the force until the arm is damaged	the test passed 100lb is accepted, the test result to damage the sample is just for reference(remark the test result in the inspection report)

3. star base - Static loading test on the center of the base : 1120kgs for 2 minutes
4. loading test on the chair - 100kgs on the seat for at least 1 hour
5. for the chair backrest fixed by plastic bracket and metal support - the plastic bracket must be strong enough so that no broken occur on the bracket when pressing the top of the backrest.
It's better to ask factory to provide the electric screw driver to assemble it, which will help find whether the bracket is strong enough
6. star base cover(if it is available for the chair) - check if the cover is soft so that it can endure the squeeze among the components in the carton box
7. leather/PVC/PU - make sure the colors match with the approved samples
8. check if any componetns are missed in the carton box
9. the componetns used in production must be same as the stated in the component list
10. for wooden star base - the color must keep consistent and no crack on the wooden legs
11. check the quality of carton box whether is strong enough
12. whether caster can be inserted into the star base properly(too loose will be rejected)
13. check the ID marking and date dial on the plastic components

Hot Pink/Blue/Black Gas Lift Office Chair

Assembly Instructions - Please keep for future reference


617/1232

617/1957

617/1799

145/1751

166/9622

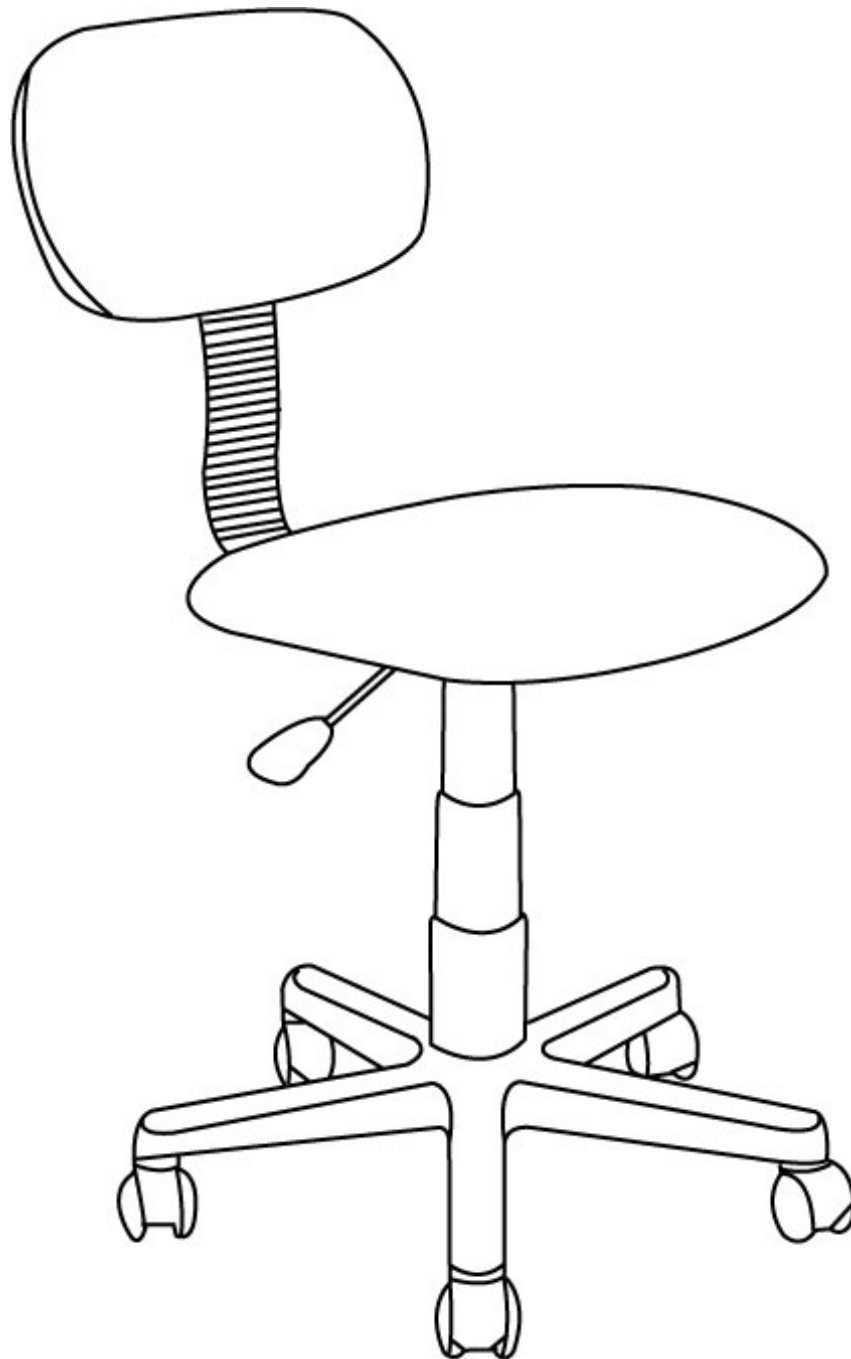

Dimensions

Width - 43cm

Depth - 49cm

Height - 78.5-90.5cm

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and fittings listed on pages 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

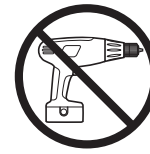

- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Safety during use

- Do not stand on this chair. Do not use this chair as a step ladder.
- Use this product only for seating one person at a time.
- Do not use this chair unless all bolts, screws and knobs are firmly secured.
- At least every 4 months, check all bolts, screws and knobs, to be sure they are tight.
- If parts are missing, broken or damaged or worn, stop use of this product until repairs are made & using factory authorized parts.
- Failure to follow these warnings could result in serious injury.

Component - Parts


Please check you have all the components listed below

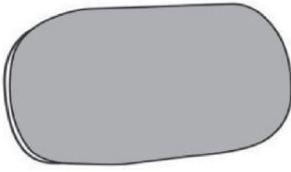


1 Backrest (38x 22cm)



2 Seat Cushion (42 x 39cm)




3 Connector

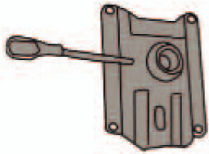

4 Seat Support (KD057-1)



5 Base (270mm)

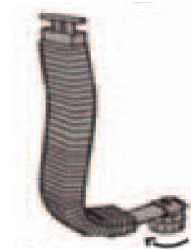

6 Back support



7 Castor (R50mm)



8 Cover






9 Gas lift (120mm)/400NT

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
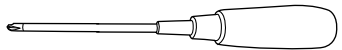
<p>A</p>  <p>28.6mm Screw x 2</p>	<p>B</p>  <p>15.9mm Screw X 4</p>	 <p>Tools required</p>
---	---	---

Ruler- Use this ruler to help correctly identify the screws



Assembly Instructions

NOTE: It would be useful to ask someone to help you assemble the chair.

Step 1



Fitting the base

a: Push all the five castors **7** onto the base **5**.

NOTE: Ensure all the castors are firmly located on the base.

b: Insert the gas lift **9** into the base, then slide the cover **8** over the top.


NOTE: Ensure the gas lift is fully inserted and well fitted.

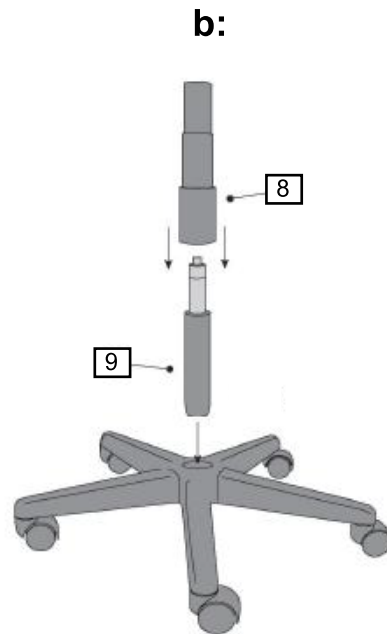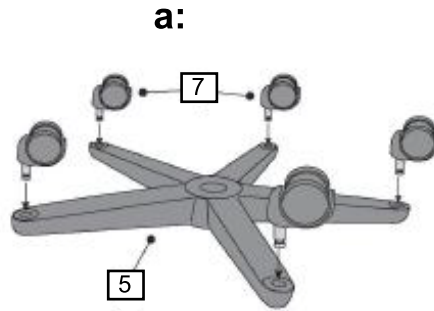

Step 2

Fitting the seat cushion

Use screw **B** to fix seat support **4** onto the seat cushion **2**, ensure the support is fitted to the seat cushion with correct orientation.

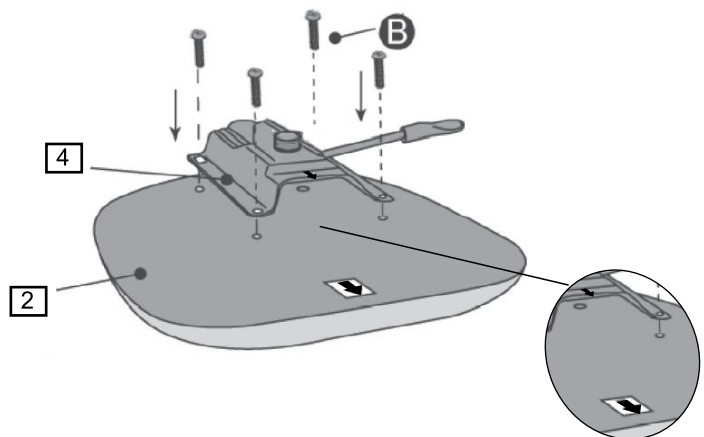


Assembly Instructions

Step 3

Fitting the unit

Carefully locate the seat cushion **2** onto the base unit.


NOTE: Take care during assembly as the parts can not be disassembled after fitting.

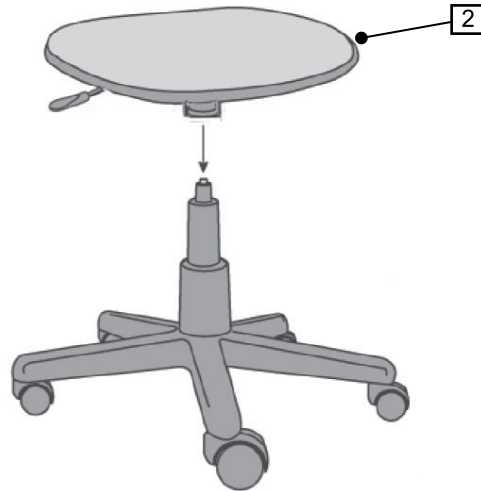

Step 4

Fitting the backrest

Use screw **A** to fix the back support **6** and connector **3** onto backrest **1**.

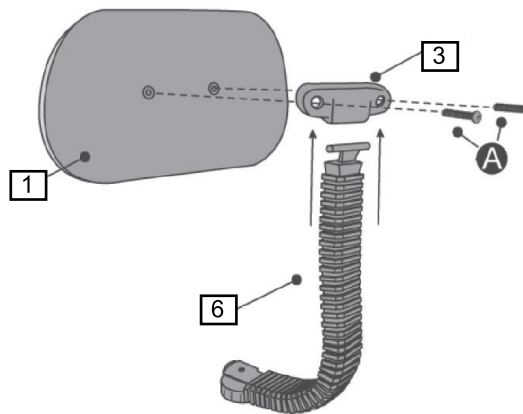


Step 5

Finishing the unit

Release the locking Screw from back support **6**, then fit the back support **6** onto the base unit and tighten the locking screw.

NOTE: Make sure all the screws are tightly fitted.

Assembly is complete.

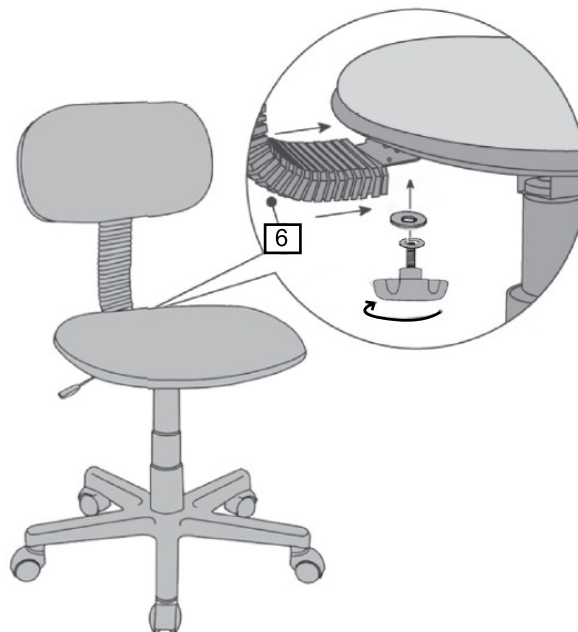


If you need help or have damaged or missing parts, call the **Customer Helpline:0845 640 0800**
489-499 Avebury Boulevard Milton Keynes MK9 2NW Argos Limited

Black Gas Lift Chair

Assembly Instructions - Please keep for future reference

617/1799

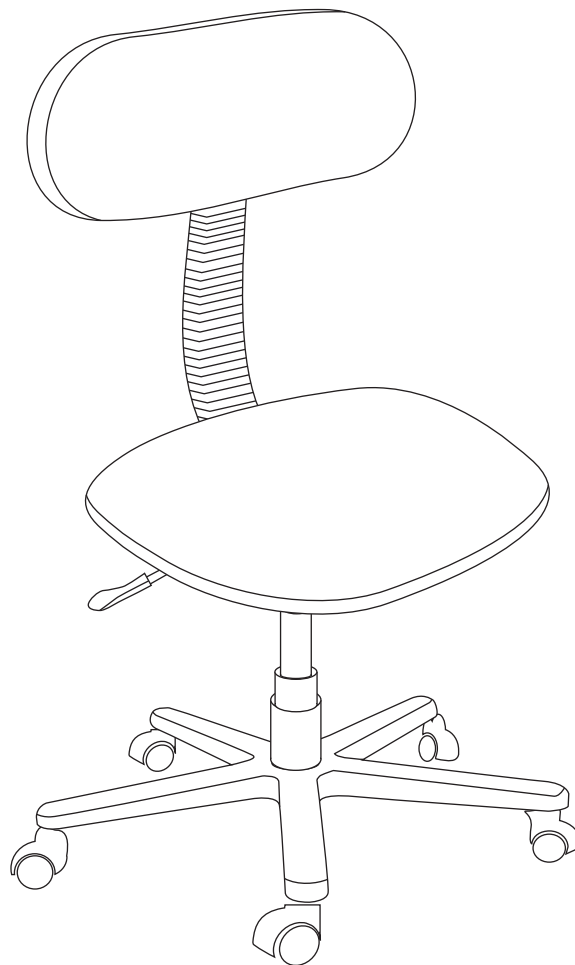

Dimensions

Width-42cm
Depth-48cm
Height-77-89cm

Important - Please read these instruction fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.


- Retain these instructions for future reference

- Do not stand or put weight on the product during assembly, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.

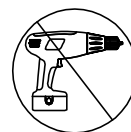

- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.

- Do not use this item if any components are missing or damaged

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Safety during use

- Do not stand on chair. Do not use this chair as a step ladder.

- At least every 4 months, check all bolts, screws and knobs, to be sure they are tight.

- Use this product only for seating one person at a time

- If parts are missing, broken, damaged or worn, stop using this product until repairs are made. Use only factory authorised parts.


- Do not use this chair unless all bolts, screws and knobs are firmly secured.

- Failure to follow these warnings could result in serious injury.

Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0845 6400800**

Please check you have all the parts listed below

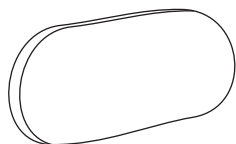

1 Backrest
(385x210x45mm)




2 Plastic cap
(135x45mm)




3 Metal bracket
(130x30mm)




4 Backrest stem
(520x65mm)

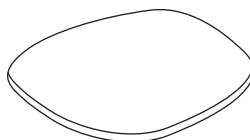

5 Seat
(420x385x45mm)

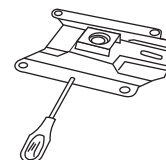


6 Mechanism
(185x135mm)




7 Telescoping cover
(Φ 75x320mm)




8 Gas lift
(Φ 50x210mm)

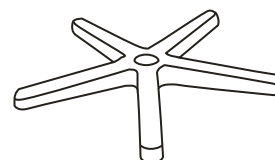

9 Star base
(R270mm)

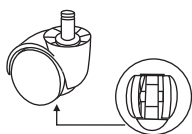

10 Normal castor x3
(Φ 50mm)

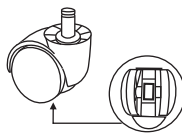

11 Brake castor x2
(Φ 50mm)




Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A



M6x18mm bolt x2

B



M6x14mm bolt x4

C



5mm Allen key x1

Tools required



Ruler/tape
measure



Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Assembly Instructions


Step 1

Attaching castors


a: Insert castors **10** and **11** into star base **9**, Making sure they are in alternate positions on the base.

b: Turn star base **9** over and place it on the floor. Insert gas lift **8** into the center hole of star base **9**; Place telescoping cover **7** over the gas lift **8**.

a:

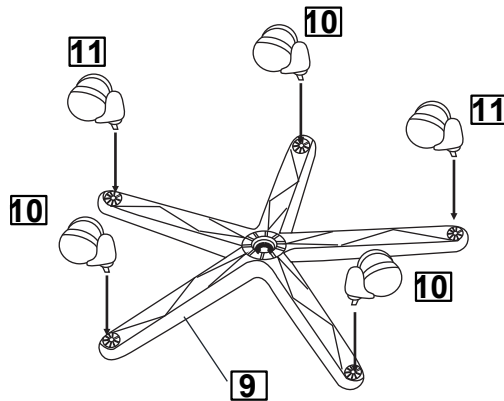


b:

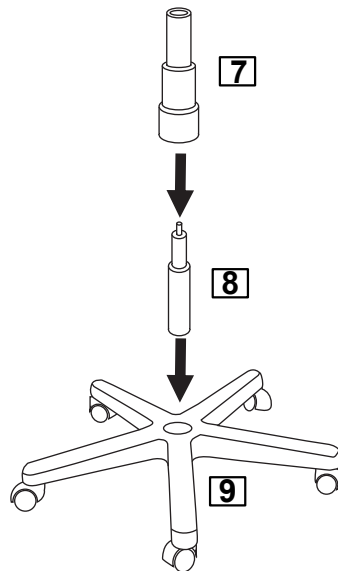

Step 2

Attaching back rest

Attach the backrest stem **4** to the back rest **1** with metal bracket **3** and plastic cap **2** by using bolts **A**

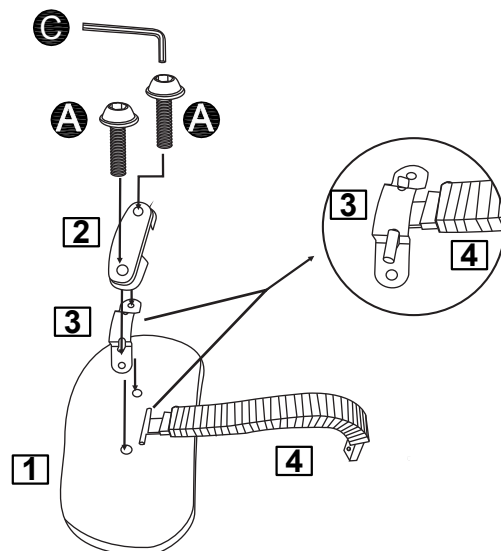

Assembly Instructions


Step 3

Attaching mechanism


a: Loosen the knob **4-3** and washers **4-1** and **4-2** from the backrest stem **4**.

b: Attach the backrest stem to the mechanism **6** with knob **4-3**, washers **4-2** and **4-1**.

a:

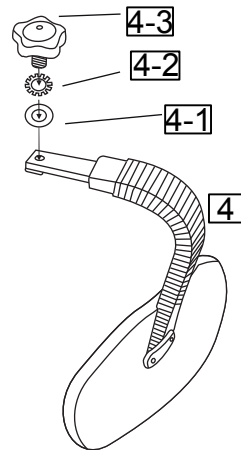


b:

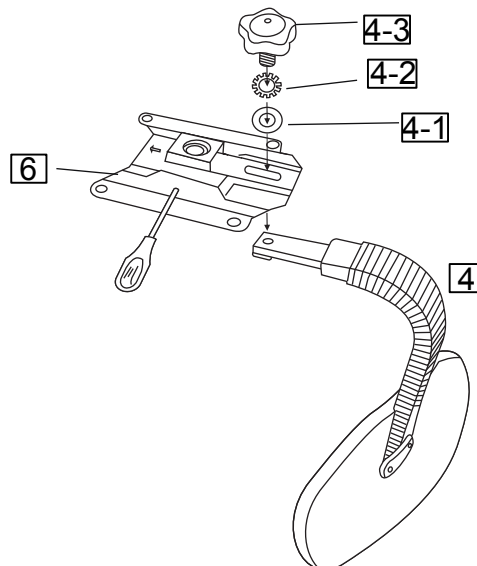

Step 4

Assembling the seat cushion

Attach the mechanism **6** to the seat **5** by bolts **B**.

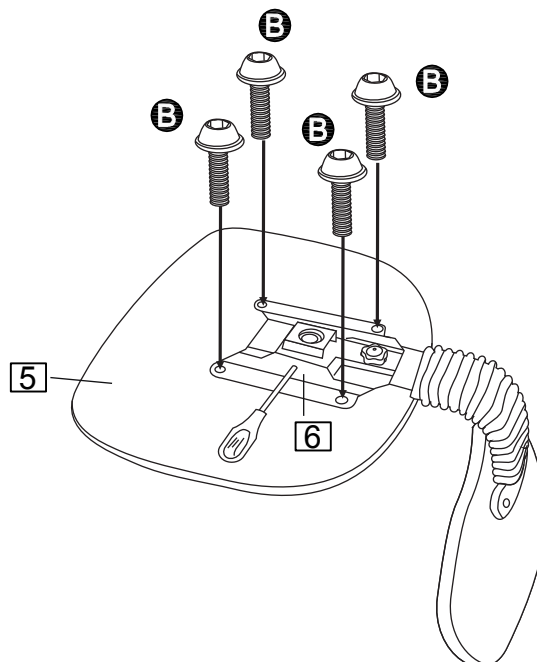


Assembly Instructions

Step 5


Assembling unit

Place the seat unit onto the top of gas lift **8**.

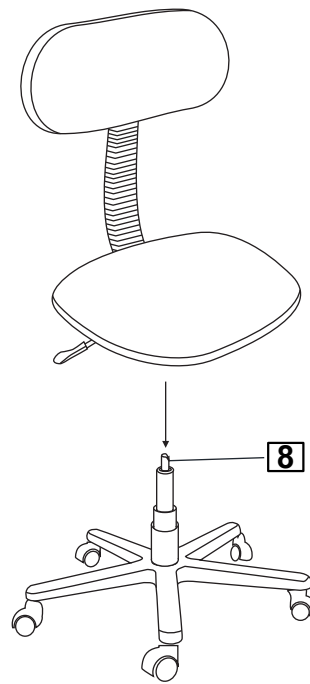

Step 6

Assembly is complete.

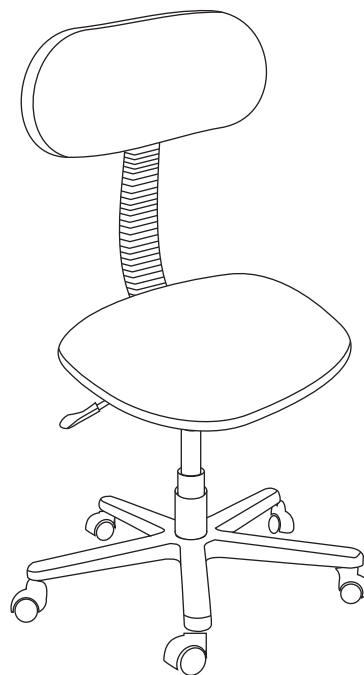

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**