New Pagnell 3 Dr 4 Drw Wardrobe
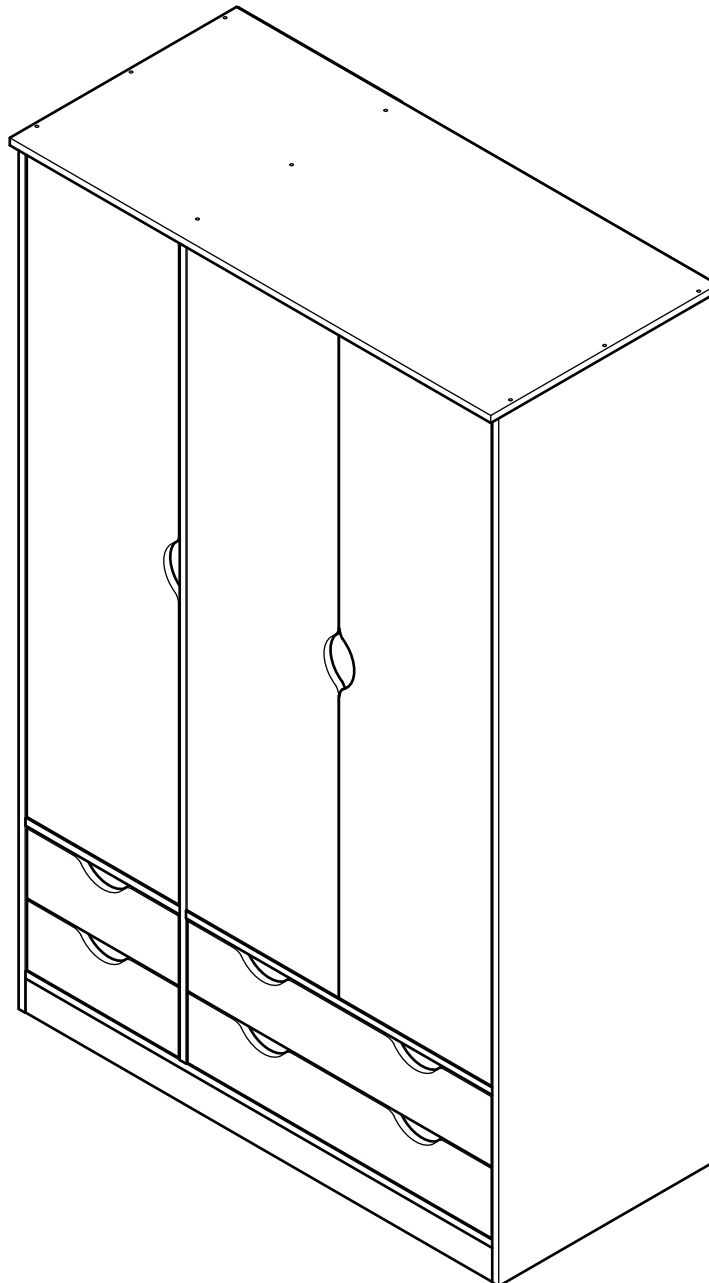
605/8788

617/6127

607/9884

HOME
BY ARGOS

Dimensions

Width - 114.5cm

Depth - 54.5cm

Height - 180.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800

⚠ Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not use this item if any components are missing or damaged.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• During assembly children should be kept away from the product due to possible risk of injury.

• Parts of the assembly will be easier with 2 people.

• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure that all bolts and fittings are tightend properly.

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

• Argos Ltd. MK9 2 NW.

• This product is intended for children in the age 6 or above.

• Maximum load:
50 kgs (inside of wardrobe).

• Assembly of this product must be carried out by a competent adult.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.
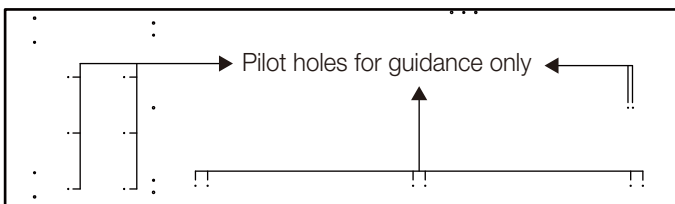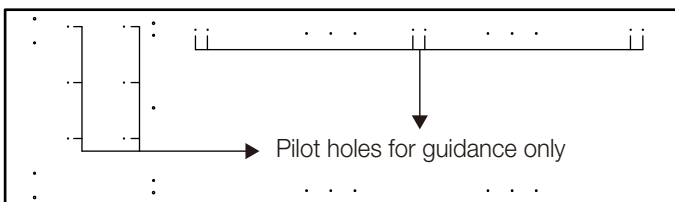
Please check you have all the panels listed below

1 Top panel (114.6 x 54cm)

2 Right side panel (179 x 52cm)

Pilot holes for guidance only

3 Left side panel (179 x 52cm)

Pilot holes for guidance only
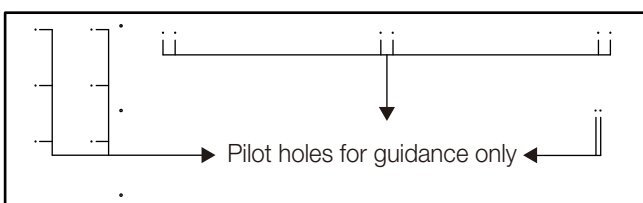
4 Center panel (170.4 x 51.9cm)

Pilot holes for guidance only
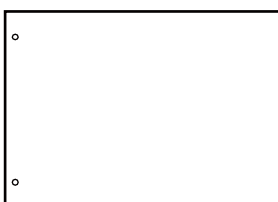
5 Right middle panel (73 x 51.9cm)
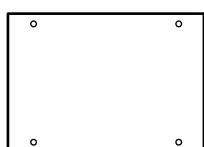
6 Left middle panel (51.9 x 36.7cm)
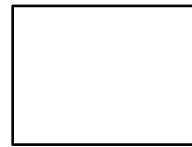
7 Shelf x 2 (49.8 x 36.7cm)

Finished front edge
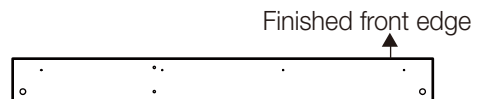
8 Front bottom panel (111.2 x 11cm)

9 Back bottom panel (111.2 x 11cm)

Finished front surface

10 Front panel (111.2 x 7cm)

11 Bottom support (111.2 x 7cm)

12 Back support (73 x 11cm)

Pilot holes for guidance only
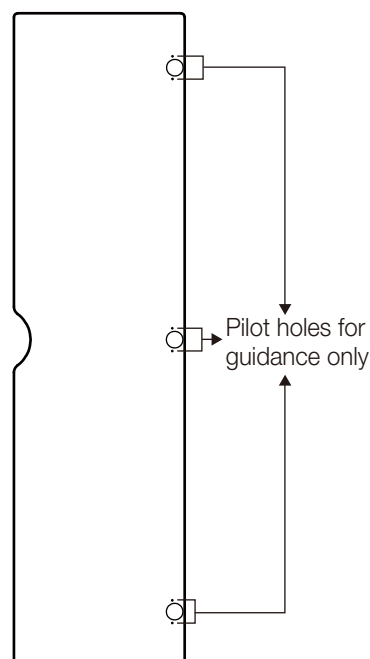
13 Door x 3 (138.1 x 36.1cm)

Please check you have all the panels listed below
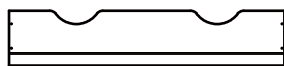
14 Large drawer front panel x 2
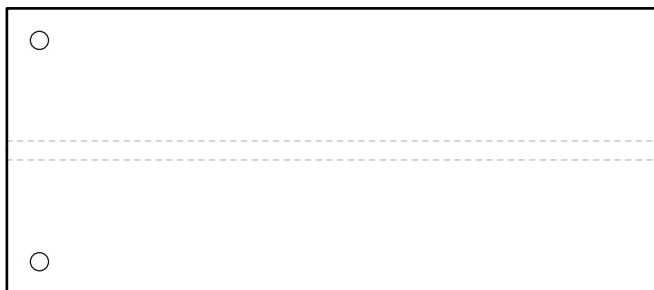(72.4 x 14.5cm)

15 Large drawer back panel x 2
(69.8 x 11.5cm)

16 Drawer front panel x 2
(36.1 x 14.5cm)

17 Drawer back panel x 2
(33.5 x 11.5cm)

18 Drawer right side panel x 4
(34 x 11.5cm)
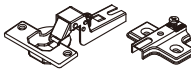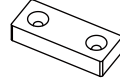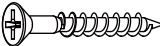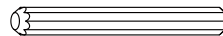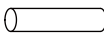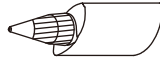
19 Drawer left side panel x 4
(34 x 11.5cm)

20 Large drawer bottom panel x 2
(70.7 x 33.6cm)

21 Drawer bottom panel x 2
(34.4 x 33.6cm)

22 Large back panel (173.2 x 75.2cm)

23 Small back panel (173.2 x 38.8cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A Runner x 8	**B** 12mm Screw x 24 (This screw is included in the bag of runner)	**C** Door hinge x 9
D 15mm Screw x 36 (This screw is included in the door hinge bag)	**E** Rail Support x 2	**F** 39mm Locking pin x 27
G 30mm Dowel x 12	**H** Door Stop x 2	**I** 20mm Screw x 4
J Plastic support x 8	**K** 14mm Screw x 18	**L** 15mm Locking nut x 11
M 50mm Screw x 17	**N** Nail x 54	**O** 12mm Locking nut x 16
P 30mm Screw x 16	**Q** Clothes rail x 1	**R** 12mm Screw x 8
S Door pad x 6	**T** 50mm Long dowel x 1	**U** Shelf support x 8
V 15mm Screw x 4	**W** Wall strap x 2 (This screw is included in the wall strap bag) x 2	**X** Wall plug x 2
Y Glue x 1	**Z** Ventilation holes cover x 4	

Tools required

Phillips screwdriver (medium & large)

Flatblade screwdriver (medium)

7mm Suitable drill bit (for use with wall plug)

Drill

Small hammer

Ruler/tape measure

Eye protection (when using a hammer or glue)
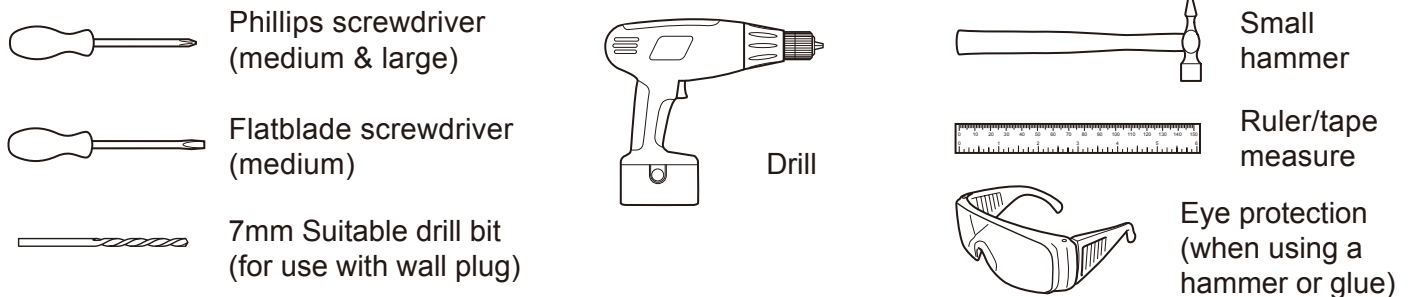
Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

The screws length is measured from the head to the point (30mm screw shown).

4

Assembly Instructions

Attaching runners and hinges

a: Position Runners **A** in front edge of the Right side panel **2**.

Slide top of the Runners **A** back.

Use Screws **B** to fix the Runners **A** on the Right side panel **2**.

Note: The front part of the runner should be approximately 1.7cm from the front edge of the panel.

Use Screws **D** to fix the Door hinges **C** 'back plates' onto the Right side panel **2**.

Use Screws **V** to fix the Rail support **E** on the Right side panel **2**.

b: Slide top of Runners **A** forward and fix as shown using Screws **B**.

a:

Middle hole **B**

A

1.7cm

V

E **D**

C

2

D **C**

D **C**

A

A

B

B

Finished front edge

Pilot holes for guidance only

D

C

b:

B Middle hole

A

B

2

B

B **B**

B

A

A

Assembly Instructions

c: Position Runners **A** in front edge of the Left side panel **3**.

Slide top of the Runner **A** back.

Use Screws **B** to fix the Runners **A** on the Left side panel **3**.

Note: The front part of the runner should be approximately 1.7cm from the front edge of the panel.

Use Screws **D** to fix the Door hinges **C** 'back plates' onto the Left side panel **3**.

c:

Middle hole

1.7cm

Unfinished back edge

Pilot holes for guidance only

d: Slide top of Runners **A** forward and fix as shown using Screws **B**.

d:

Middle hole

6

Assembly Instructions

Step 1 - continued

e: Position Runners **A** in front edge of the Center panel **4**.

Slide top of the Runners **A** back.

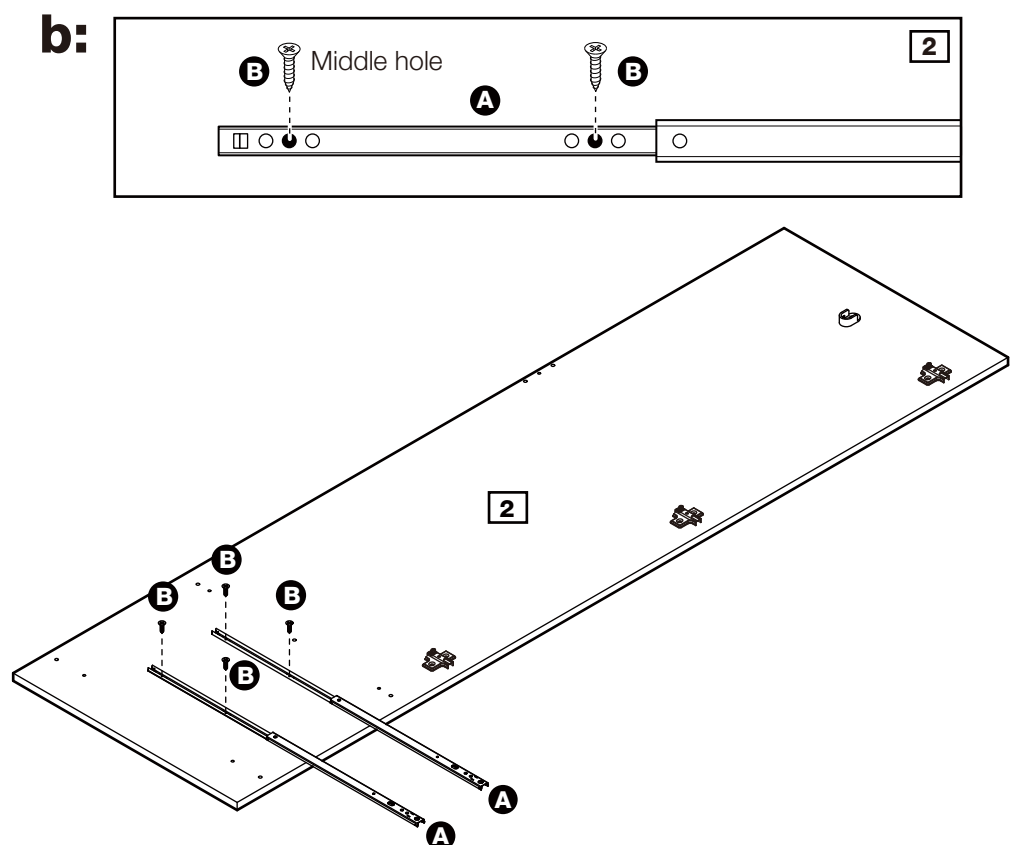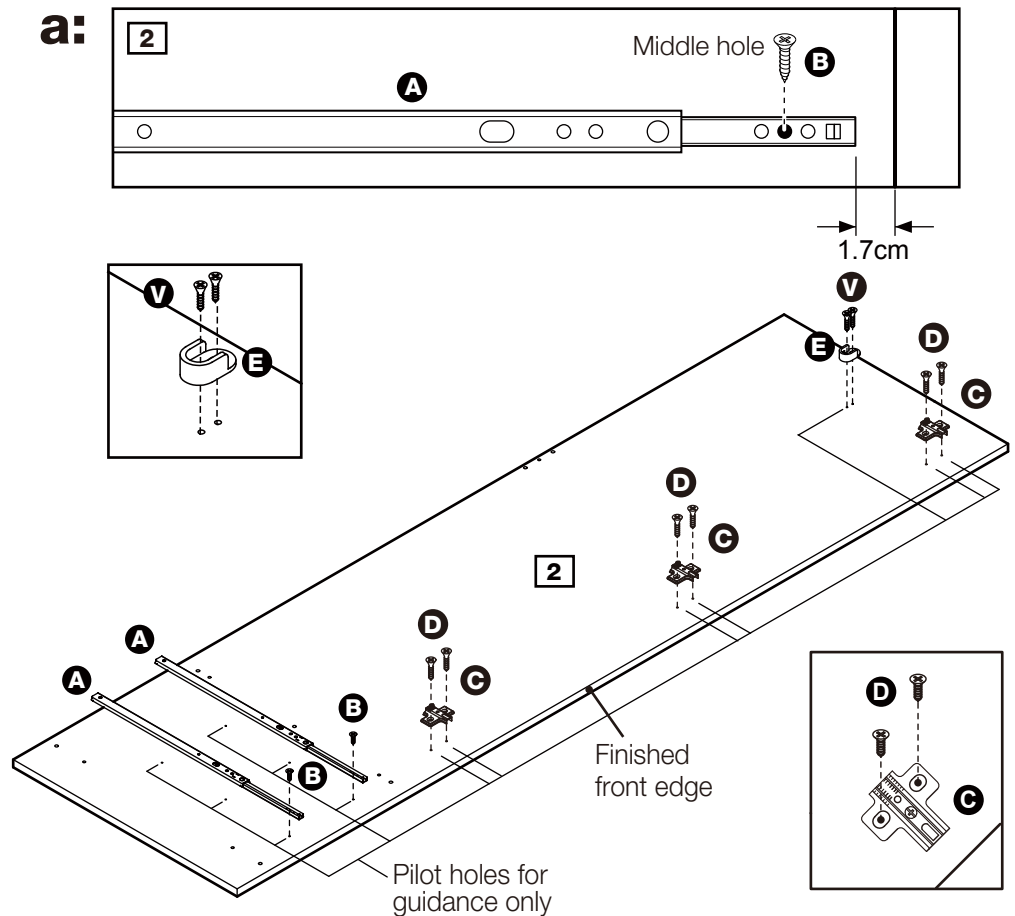Use Screws **B** to fix the Runners **A** on the Center panel **4**.

Note: The front part of the runner should be approximately 1.7cm from the front edge of the panel.

Use Screws **D** to fix the Door hinges **C** 'back plates' onto the Center panel **4**.

Use Screws **V** to fix the Rail support **E** on the Center panel **4**.

f: Slide top of Runners **A** forward and fix as shown using Screws **B**.

e:

Middle hole

1.7cm

Unfinished back edge

Pilot holes for guidance only
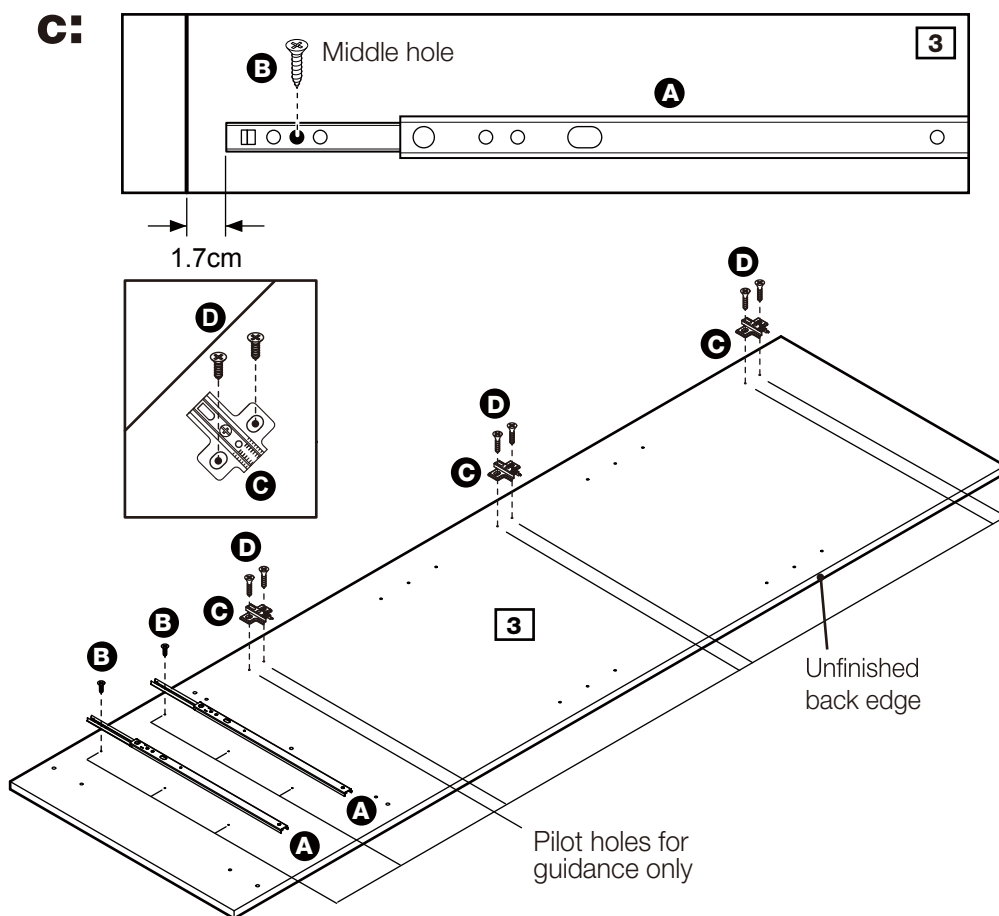
f:

Middle hole

Assembly Instructions

g: Position Runners **A** in front edge of the Center panel **4** .

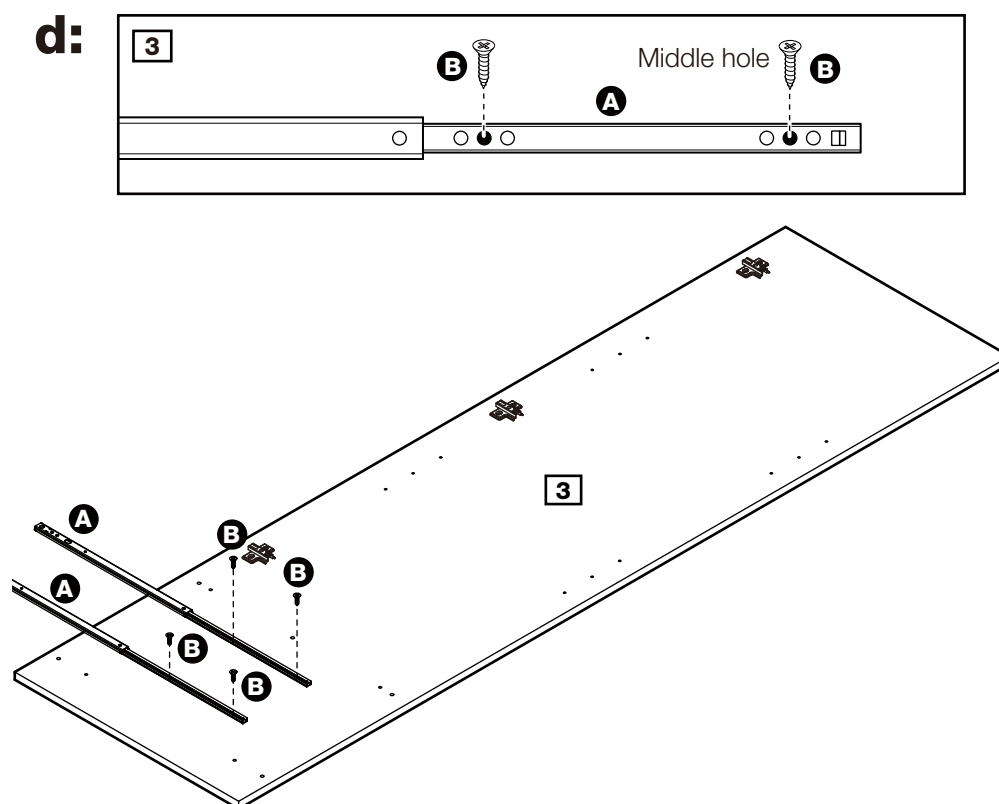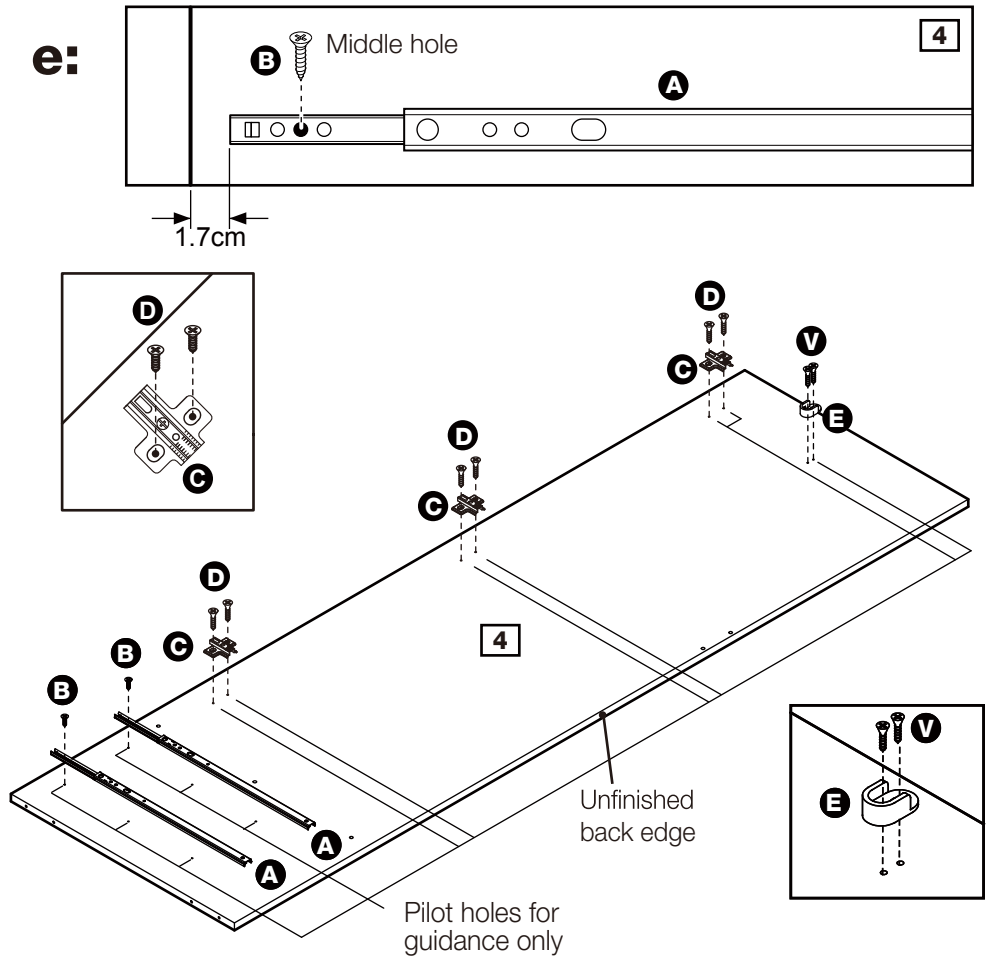Slide top of the Runners **A** back.

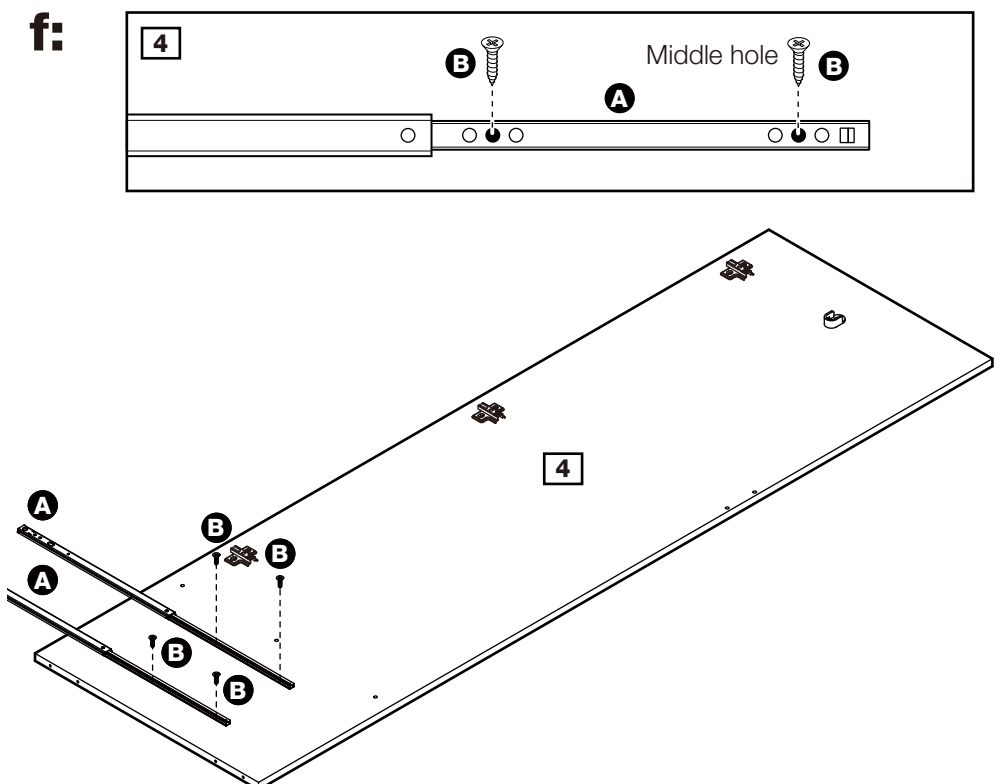Use Screws **B** to fix the Runners **A** onto the Center panel **4** .

Note: The front part of the runner should be approximately 1.7cm from the front edge of the panel.

g:

4

Middle hole **B**

A

1.7cm

4

A
A

B

B

Finished front edge

Pilot holes for runner position
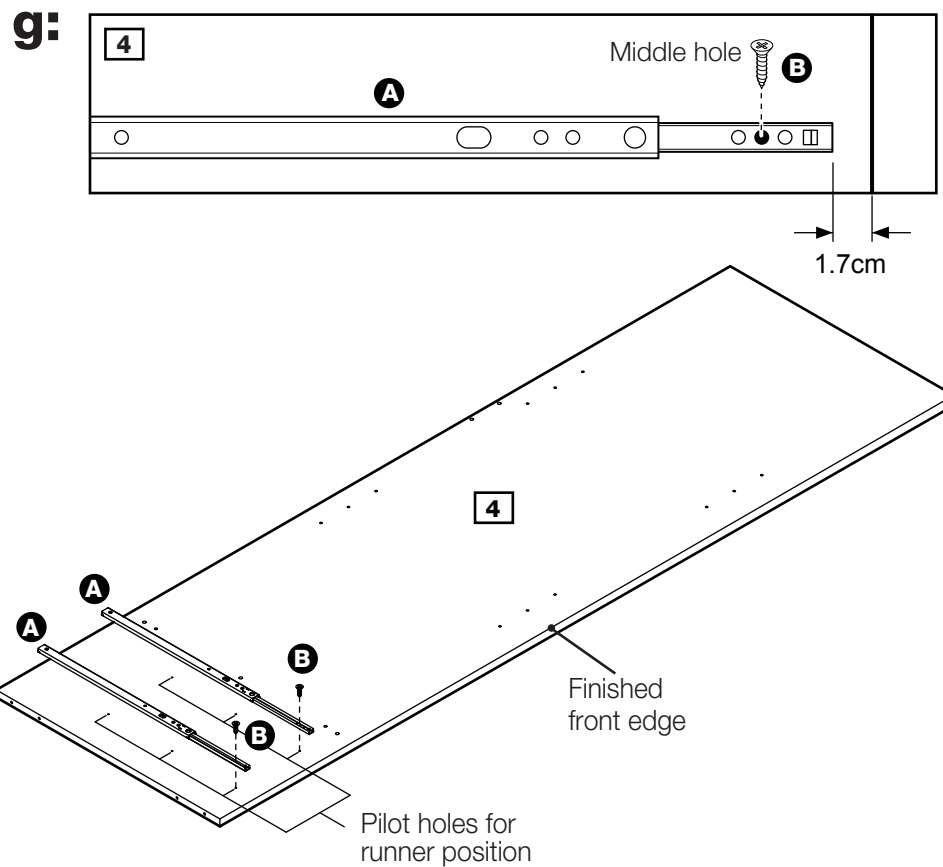
h: Slide top of Runners **A** forward and fix as shown using Screws **B** .

h:

B Middle hole **B**

A

4

4

B
B
B
B

A
A

8
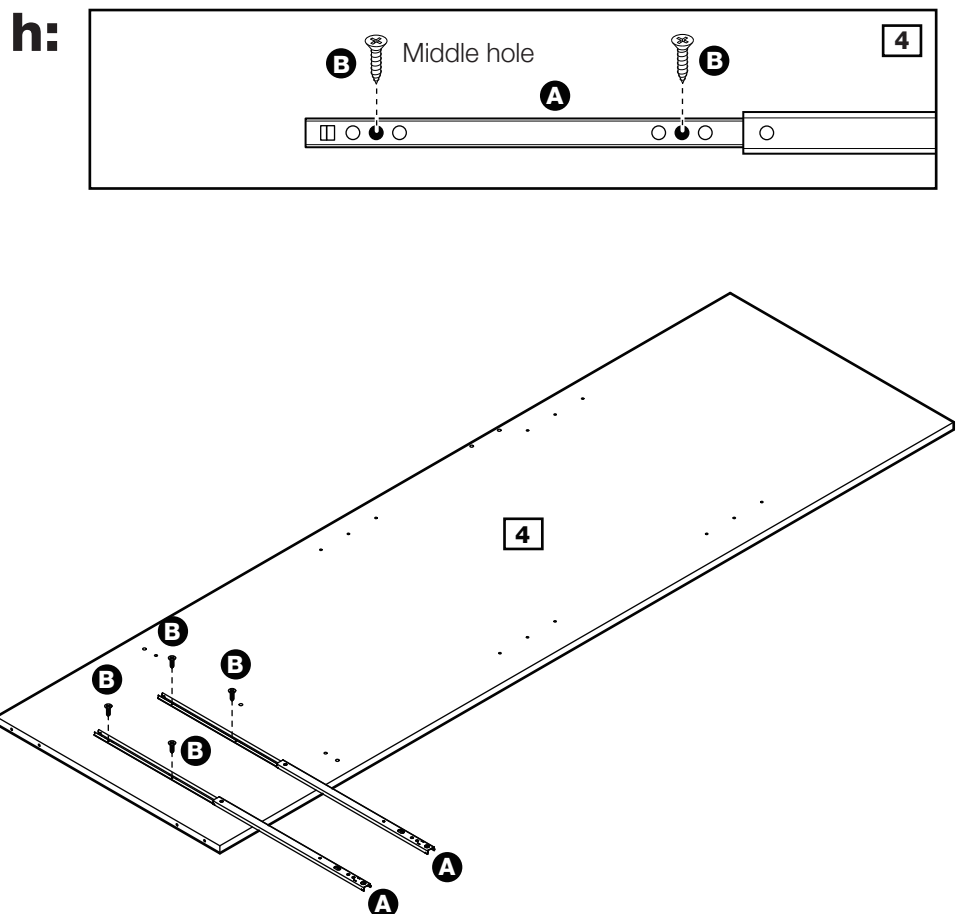
Assembly Instructions

Fitting locking pins

Screw Locking pins **F** into the Right side panel **2**, Left side panel **3** and Center panel **4**.

Note: Insert locking pins as far as shown.
Do not over tighten.

Assembly Instructions

Step 3
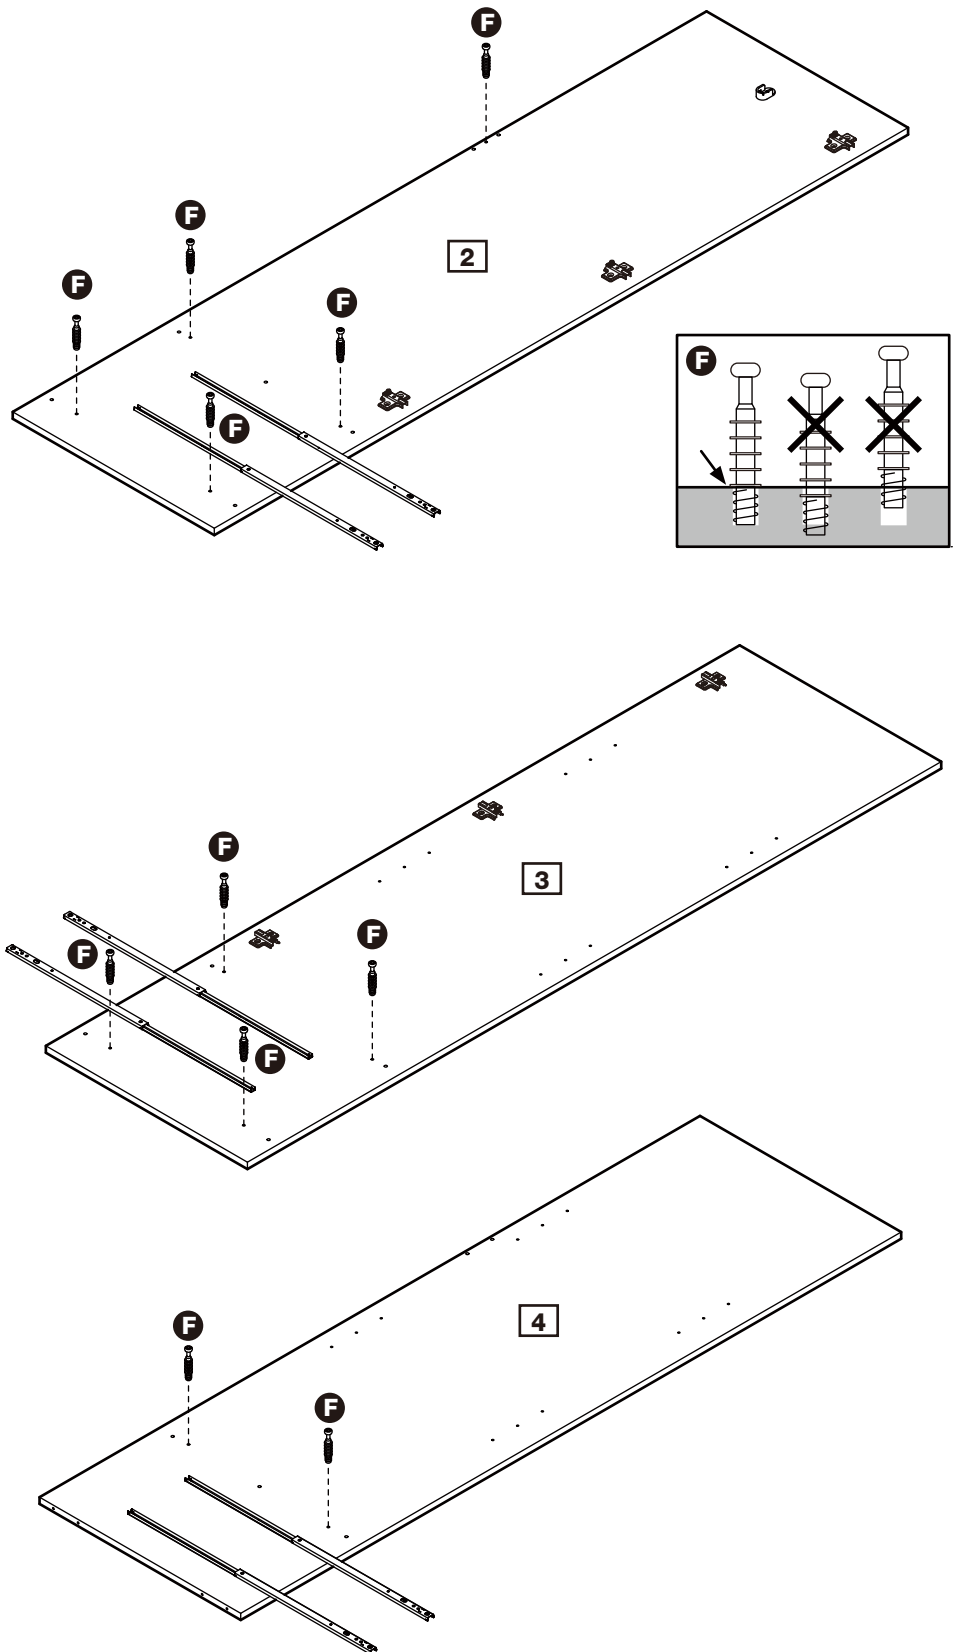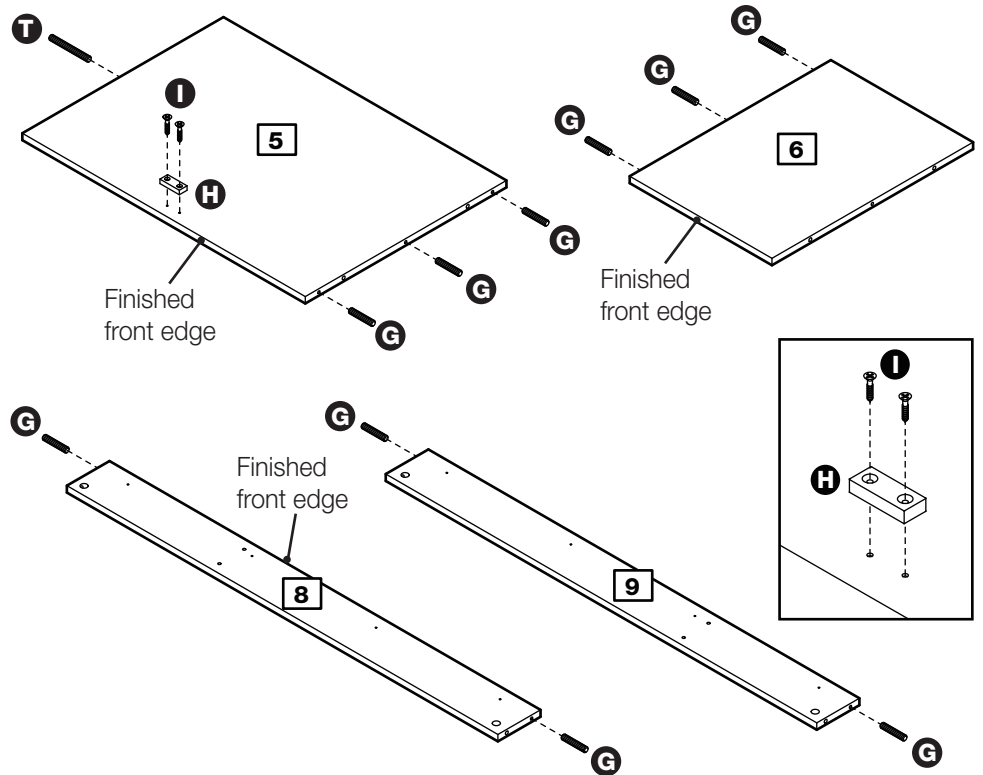
Fitting dowels

Insert Dowels **G** and Long dowel **T** into Right middle panel **5** ,Left middle panel **6** ,Front bottom panel **8** and Back bottom panel **9** .

Use Screws **I** to fix Door Stop **H** onto the Right middle panel **5** .

Finished front edge

5

Finished front edge

6

Finished front edge

8

9

Step 4

Attaching plastic supports

a: Use Screws **K** to fix Plastic supports **J** onto the Front panel **10** and Bottom support **11** .

a:

10

11

Finished front surface

b: Use Screws **K** to fix Front panel **10** onto the Front bottom panel **8** .

Use Screws **K** to fix Bottom support **11** onto the Back bottom panel **9** .
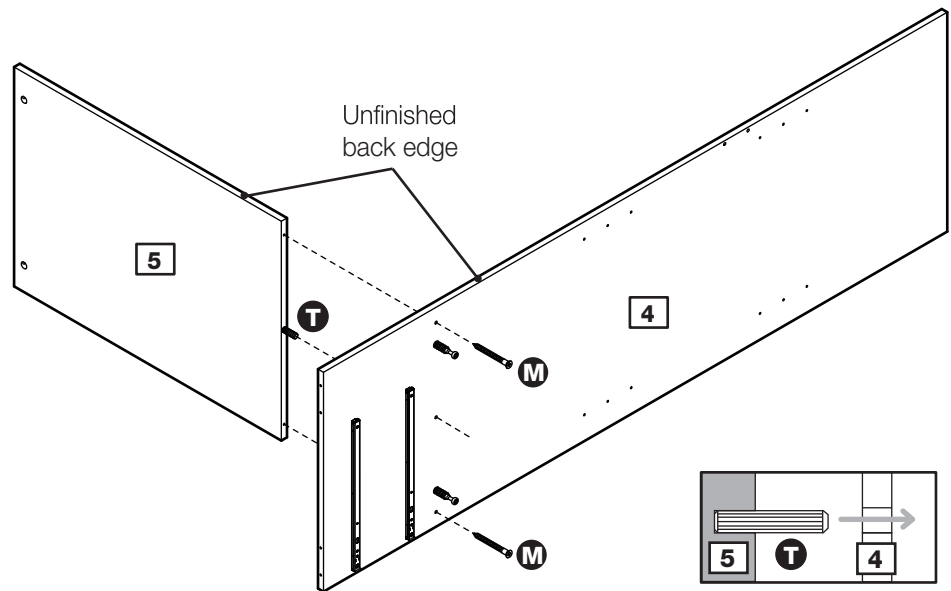
b:

Unfinished back surface

10

11

8

9
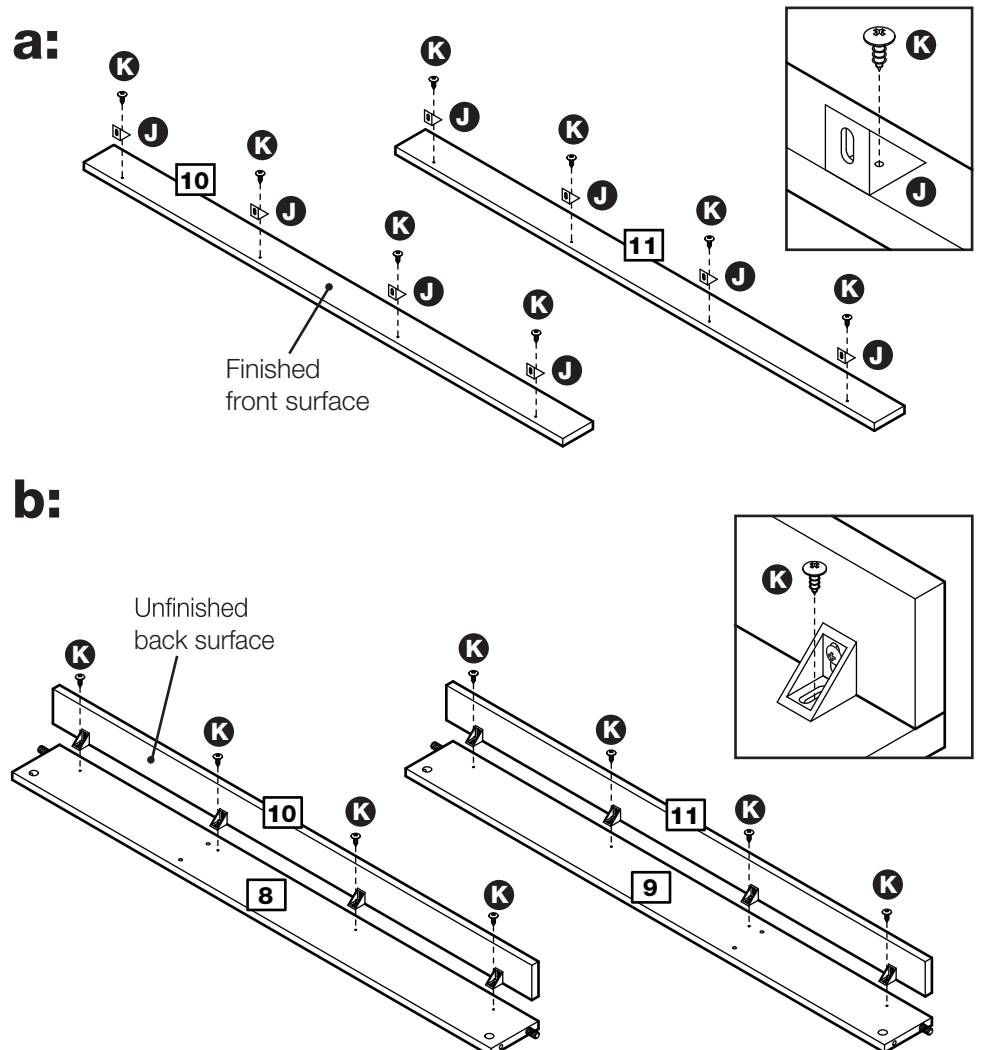
Assembly Instructions

Step 5

Attaching right middle panel

Note: 2 people are need at this stage.

Use Screws Ⓜ to fix Right middle panel `5` onto the Center panel `4`.

Unfinished back edge

Step 6

Attaching front bottom panel

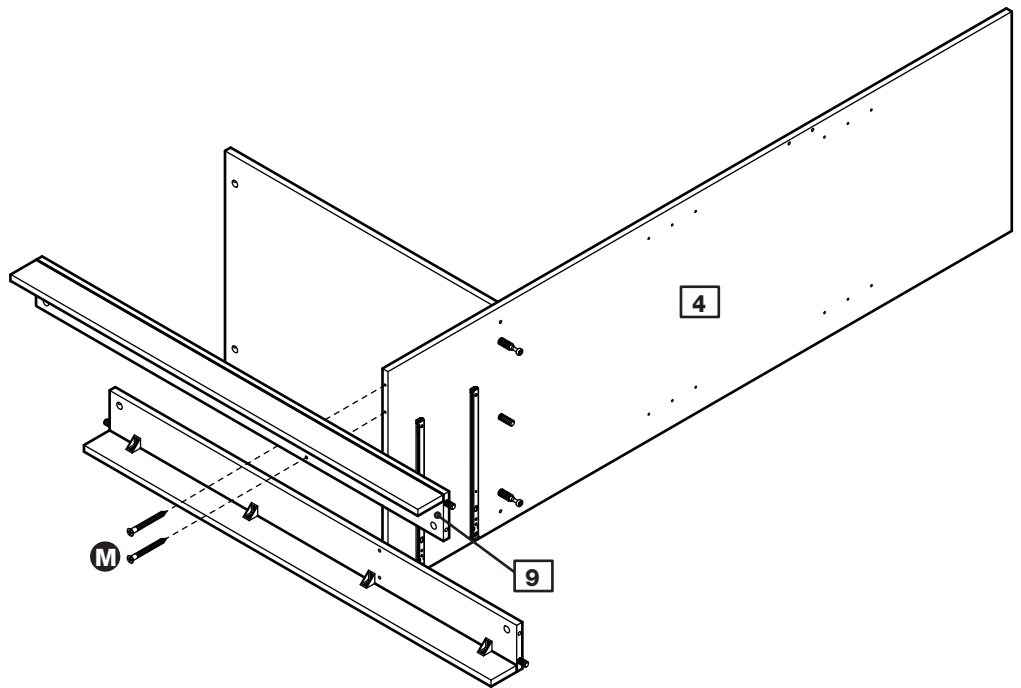Use Screws Ⓜ to fix Front bottom panel `8` onto the Center panel `4`.
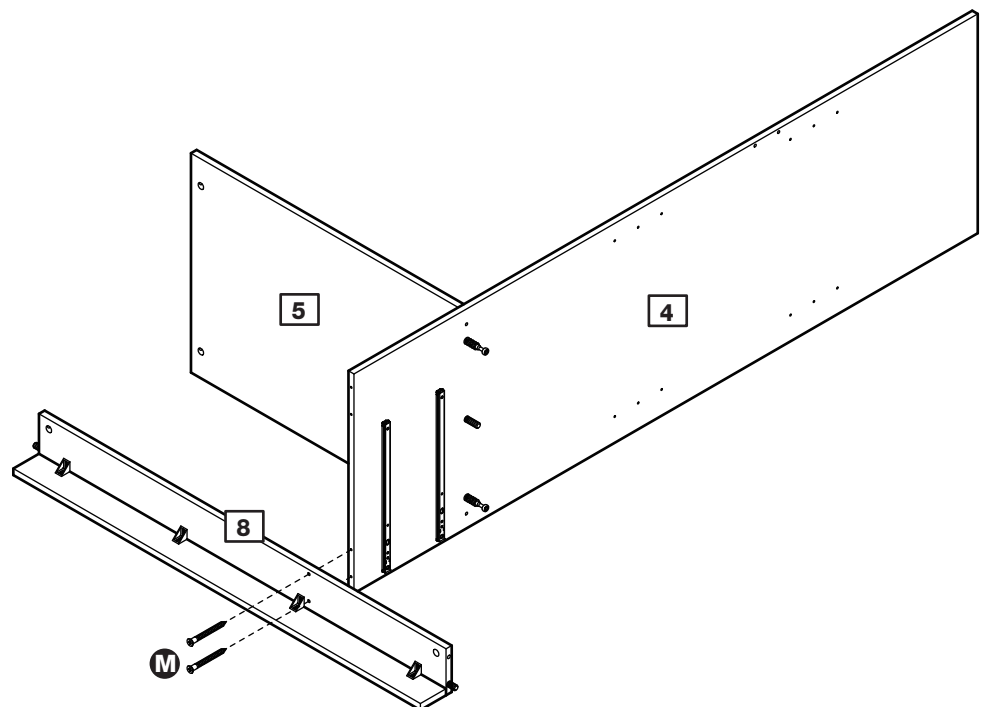
Assembly Instructions

Step 7

Attaching back bottom panel

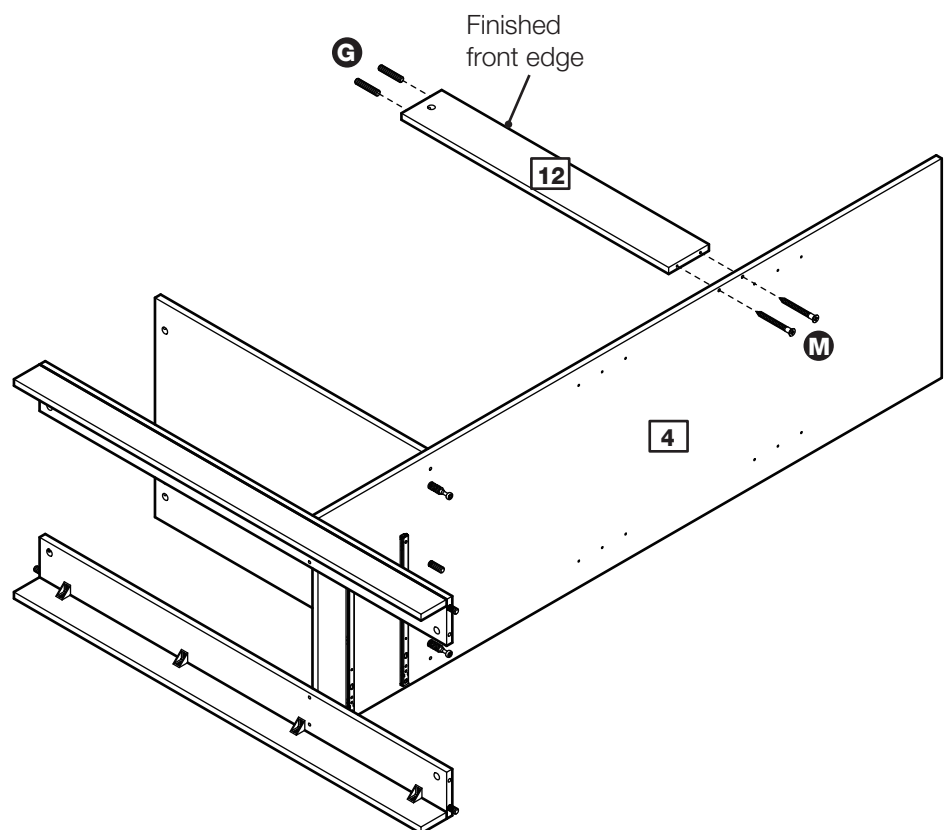Use Screws **M** to fix Back bottom panel `9` onto the Center panel `4`.

Step 8

Attaching back support

Insert Dowels **G** into the Back support `12`.

Use Screws **M** to fix Back support `12` onto the Center panel `4`.
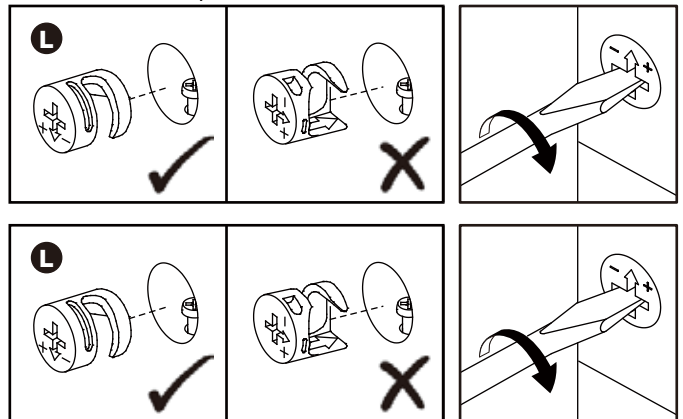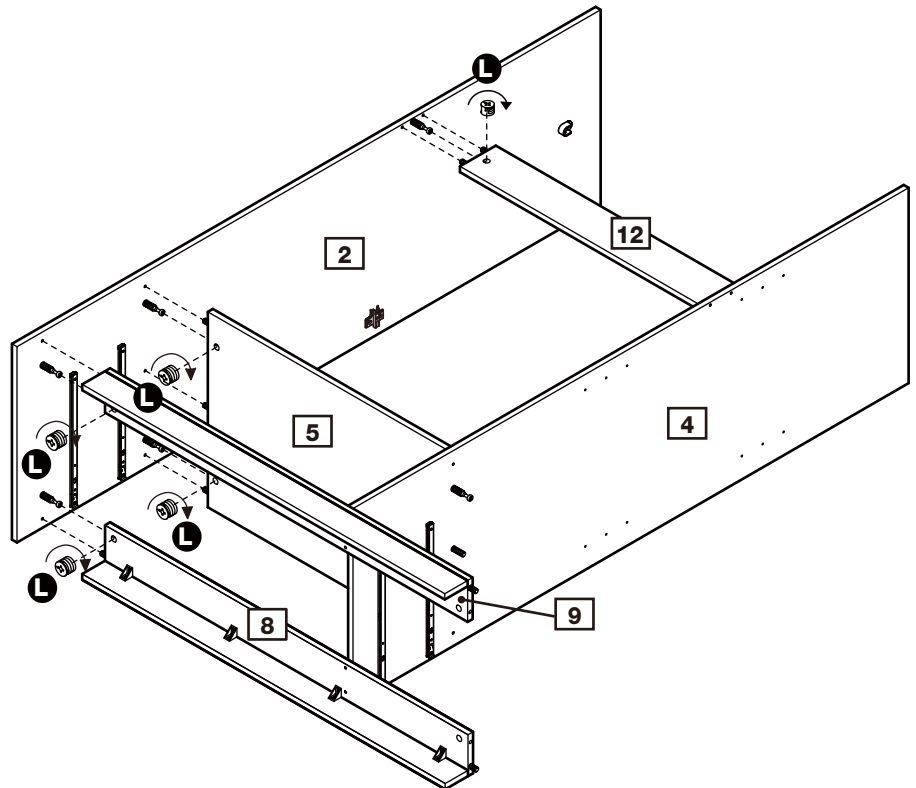
Finished front edge

Assembly Instructions

Step 9

Attaching right side panel

Position Right side panel 2 onto the unit.

Insert 5 Locking nuts **L** in the Back support 12, Right middle panel 5, Back bottom panel 9 and Front bottom panel 8.

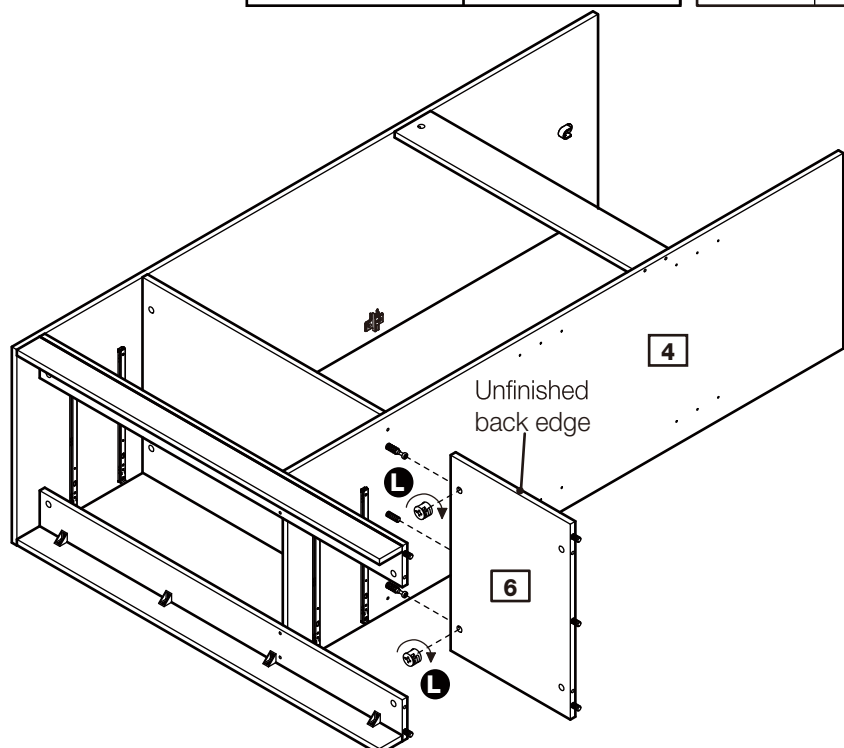Use a screwdriver to turn Locking nuts **L** clockwise to lock.

Step 10

Attaching left middle panel

Position Left middle panel 6 onto the unit.

Insert 2 Locking nuts **L** into the Left middle panel 6.

Use a screwdriver to turn Locking nuts **L** clockwise to lock.

Unfinished back edge

Assembly Instructions
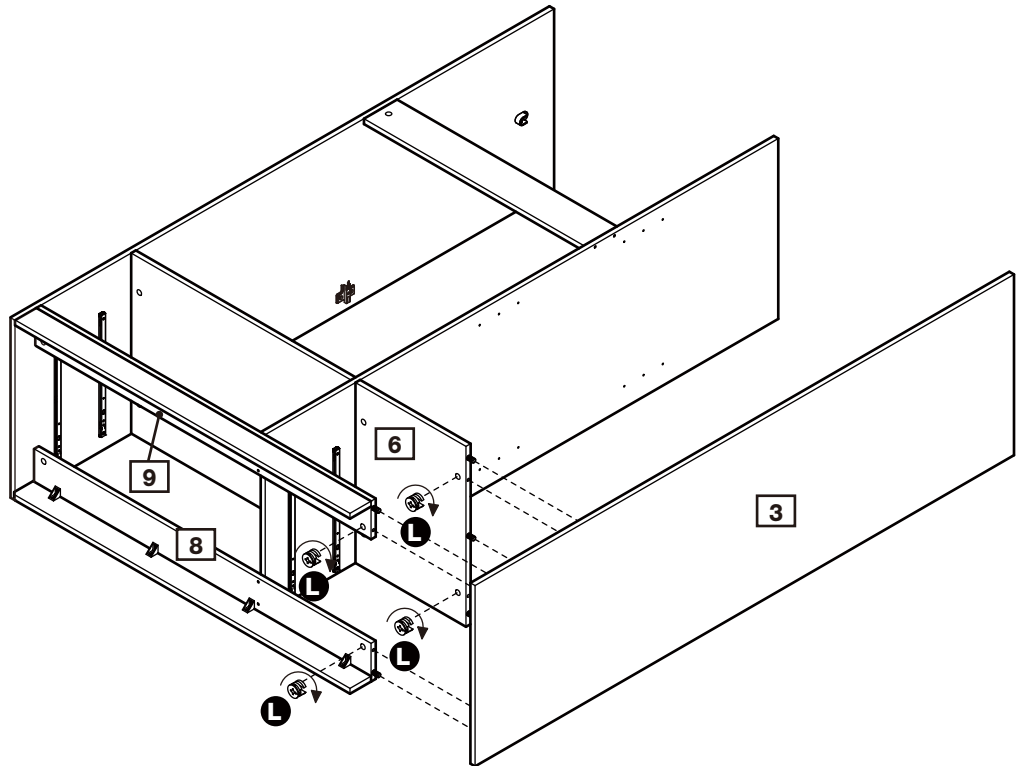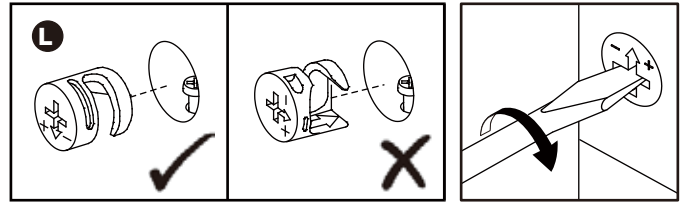
Attaching left side panel

Position Left side panel `3` onto the unit.

Insert 4 Locking nuts **L** into the unit.

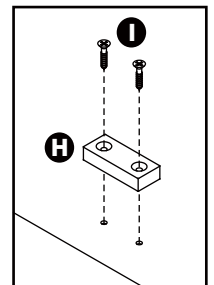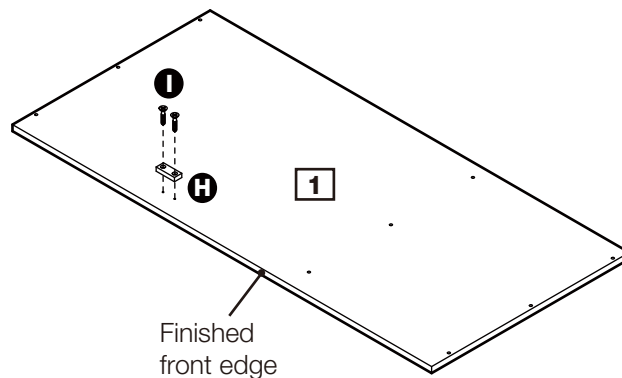Use a screwdriver to turn Locking nuts **L** clockwise to lock.

Attaching top panel

a: Use Screws **I** to fix Door Stop **H** onto the Top panel `1` .

a:

Finished front edge

Continued on next page.

14

Step 12 - continued

b: Use Screws **M** to fix Top panel **1** onto the unit.

b:

Unfinished back edge

Step 13

Fixing back panels

a: Apart the Ventilation holes covers **z** first. Attach Ventilation holes covers **z** onto Large back panel **22** and Small back panel **23**, comebine the covers.
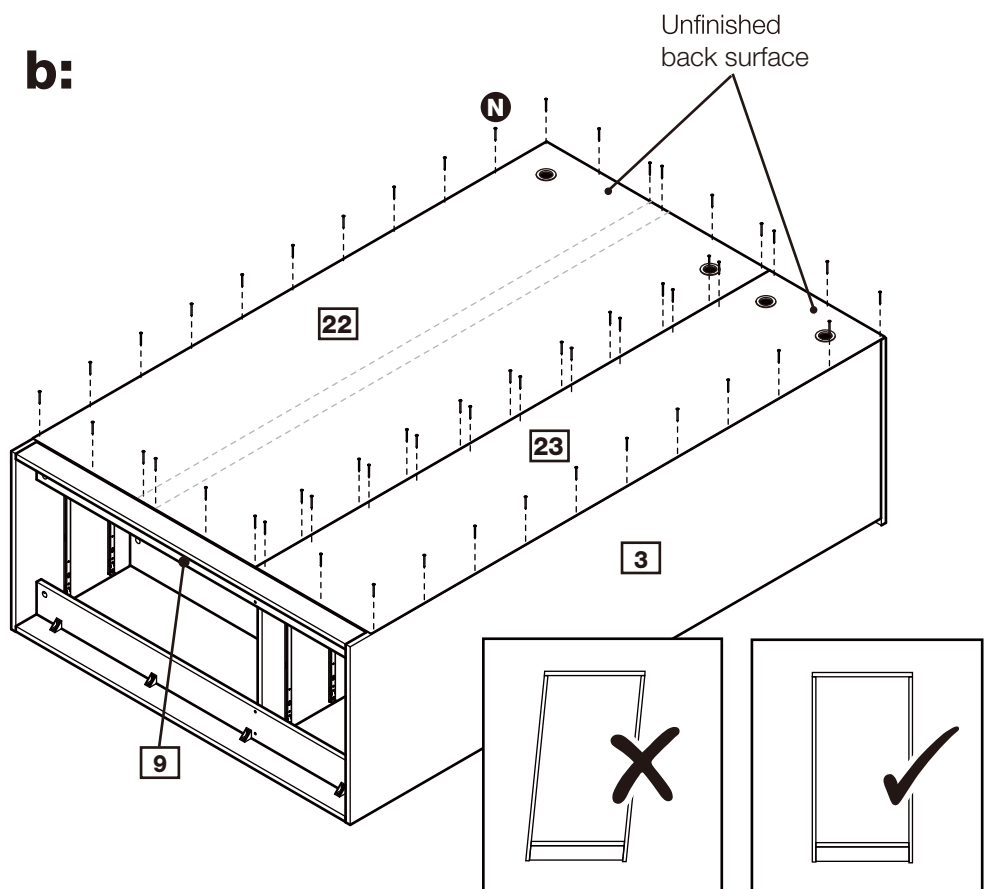
a:

Assembly Instructions

Step 13 - continued

b: Attach Large back panel **22** and Small back panel **23** onto the unit using Nails **N**.

⚠️ *Important:*
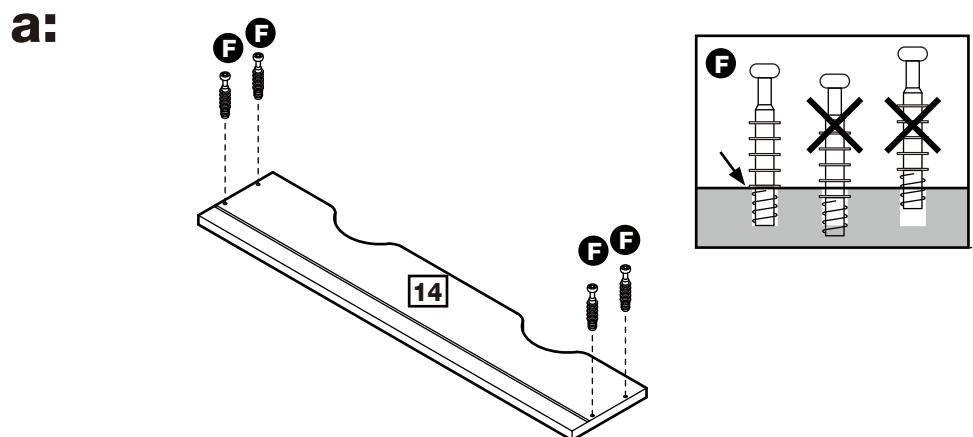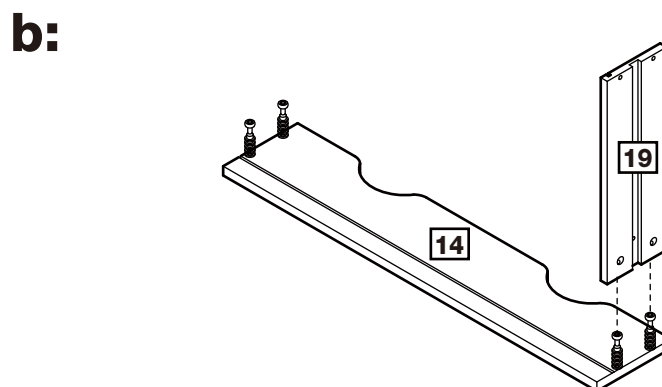The unit **MUST** be 'square' when back is attached.

b:

Unfinished back surface

N

22

23

3

9

Step 14

Large drawers assembly

a: Screw Locking pins **F** into 4 holes shown on back of the Large drawer front panel **14**.

Note: Insert Locking pins as far as shown.
Do not over tighten.

a:

F **F**

F **F**

14

F

b: Fix Drawer left side panel **19** onto the Large drawer front panel **14**.
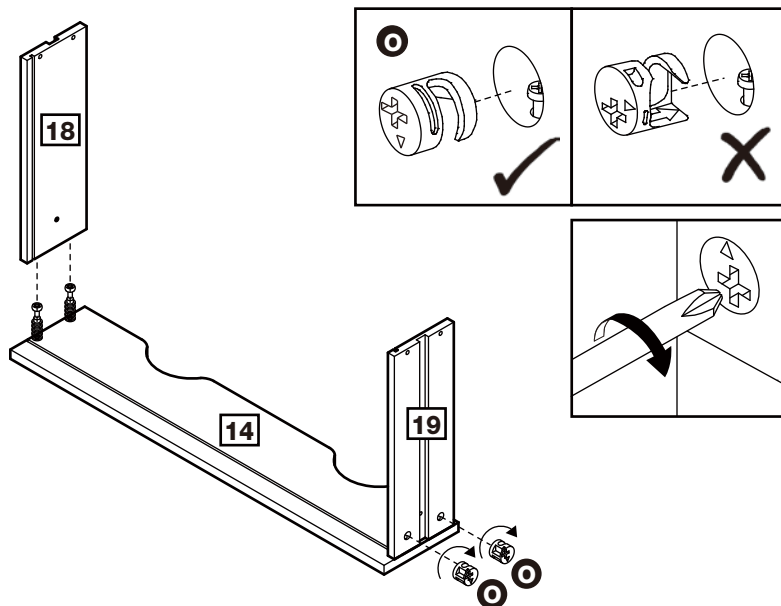
b:

19

14

Continued on next page.

Step 14 - continued

c: Fix Drawer right side panel 18 onto the Large drawer front panel 14 .

Insert 2 Locking nuts O into the holes (they will only insert one way).

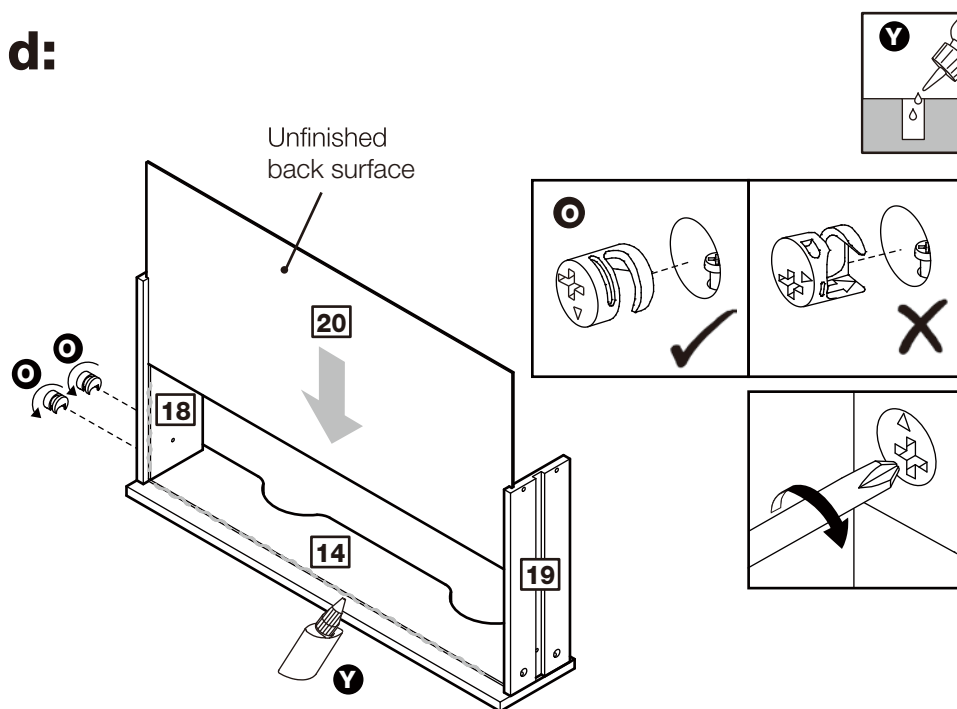Use a screwdriver to turn Locking nuts O clockwise to lock.

c:

d: Insert 2 Locking nuts O into the holes (they will only insert one way).

Use a screwdriver to turn Locking nuts O clockwise to lock.

Place a small amount of Glue Y into the grooves.

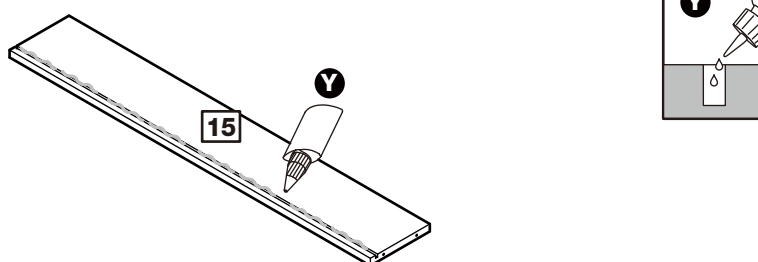Carefully slide the Large drawer bottom panel 20 into the grooves.

d:

Unfinished back surface

e: Place a small amount of Glue Y into the groove on the Large drawer back panel 15 .
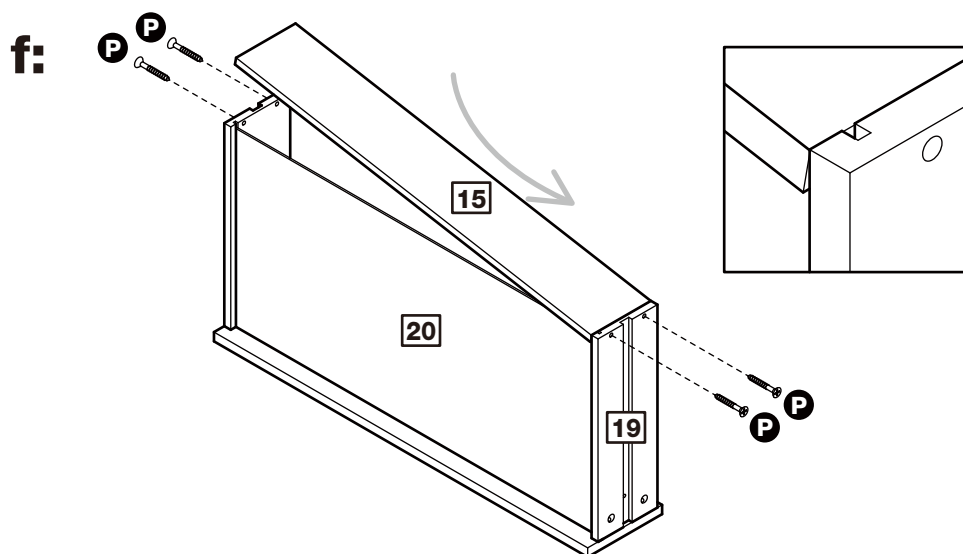
e:

Continued on next page.

Assembly Instructions

Step 14 - continued

f: Position Large drawer back panel **15** onto the unit using Screws **P**.

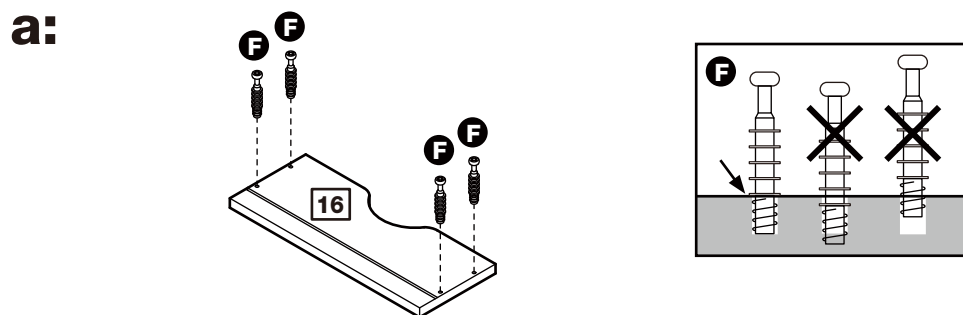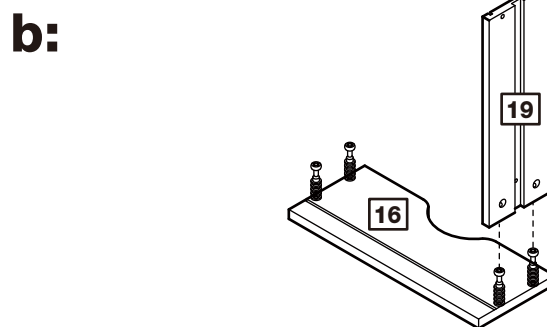**Repeat with remaining 1 large drawer.**

f:

Step 15

Drawer assembly

a: Screw Locking pins **F** into 4 holes shown on back of the Drawer front panel **16**.

Note: Insert Locking pins as far as shown.
Do not over tighten.

a:

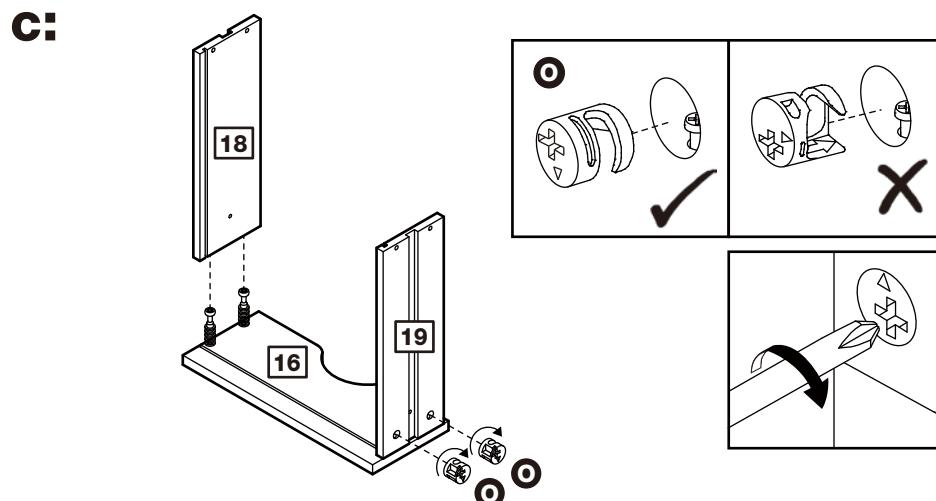**b:** Fix Drawer left side panel **19** onto the Drawer front panel **16**.

b:

c: Fix Drawer right side panel **18** onto the Drawer front panel **16**.

Insert 2 Locking nuts **O** into the holes (they will only insert one way).

Use a screwdriver to turn Locking nuts **O** clockwise to lock.
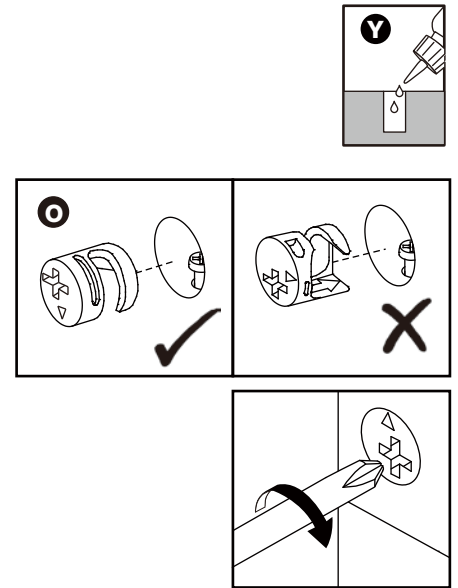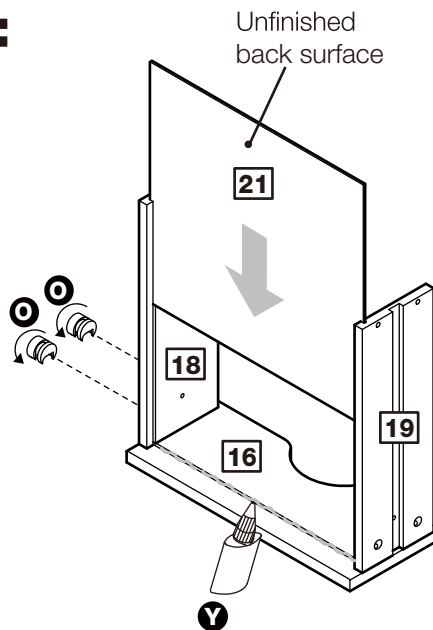
c:

Assembly Instructions

d: Insert 2 Locking nuts **O** into the hole (they will only insert one way).

Use a screwdriver to turn Locking nuts **O** clockwise to lock.
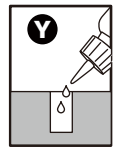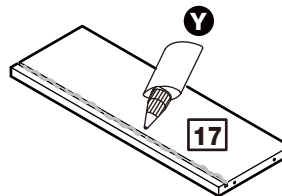
Place a small amount of Glue **Y** into the grooves.

Carefully slide the Drawer bottom panel **21** into the grooves.
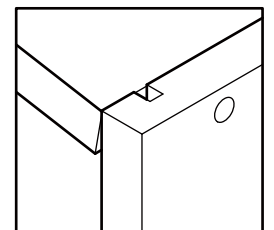
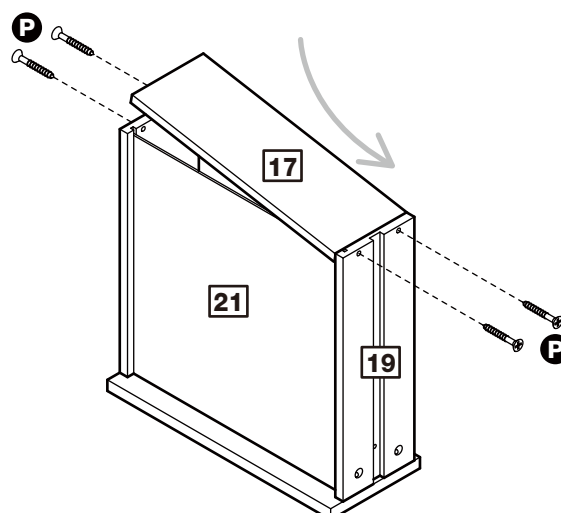**d:**

Unfinished back surface

e: Place a small amount of Glue **Y** into the groove on the Drawer back panel **17** .

e:

f: Position the Drawer back panel **17** and fix to the unit using Screws **P** .

f:

Repeat with remaining 1 drawer.

Assembly Instructions

Step 16

Fixing to wall

⚠️ **Warning:**
In order to prevent overturning, this product must be used with the wall attachment device provided.

Use Screws(2 pcs)**K** to fix Wall straps(2 pcs)**W** onto the unit.

With help, move this product into position.

⚠️ **Warning:**
This product is heavy.
Lift with care.

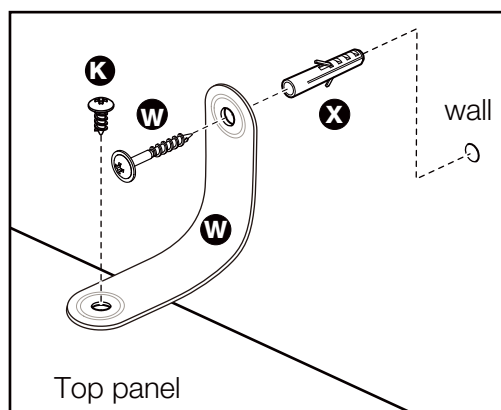Mark fixing holes on wall and remove this product .

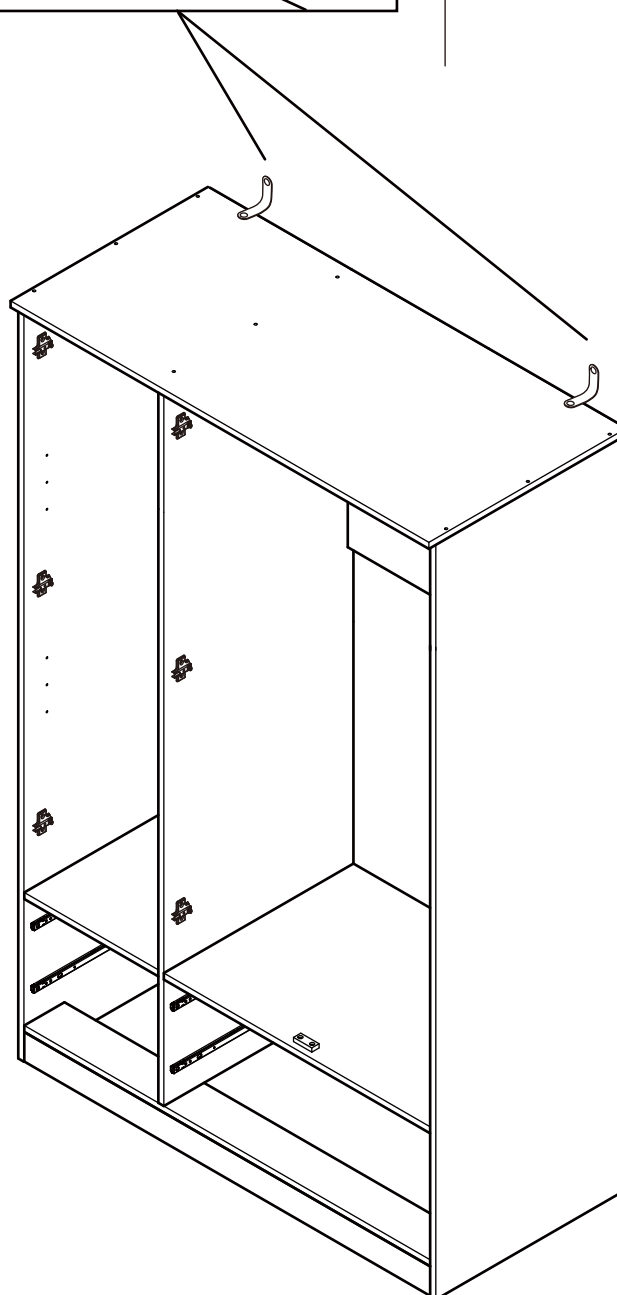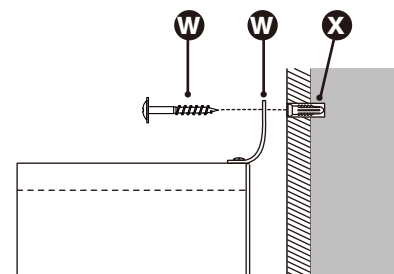Drill 2 holes and insert Wall plugs(2 pcs)**X**.

⚠️ **Warning:**
Before drilling, check wall for hidden pipes and and cables.

Reposition this product and fix wall straps using Screws(2 pcs)**W**.

Note: Wall plugs supplied are for solid wall only.
The correct type of fixing must be used for your wall, seek professional advice if in doubt

K **W** **X**

wall

Top panel

W **W** **X**

Assembly Instructions

Inserting drawers

a: Slide the drawers fully onto the runners so the runners butt up against the back of the drawer front.

b: Fix through drawer sides into the runners using Screws **R**.

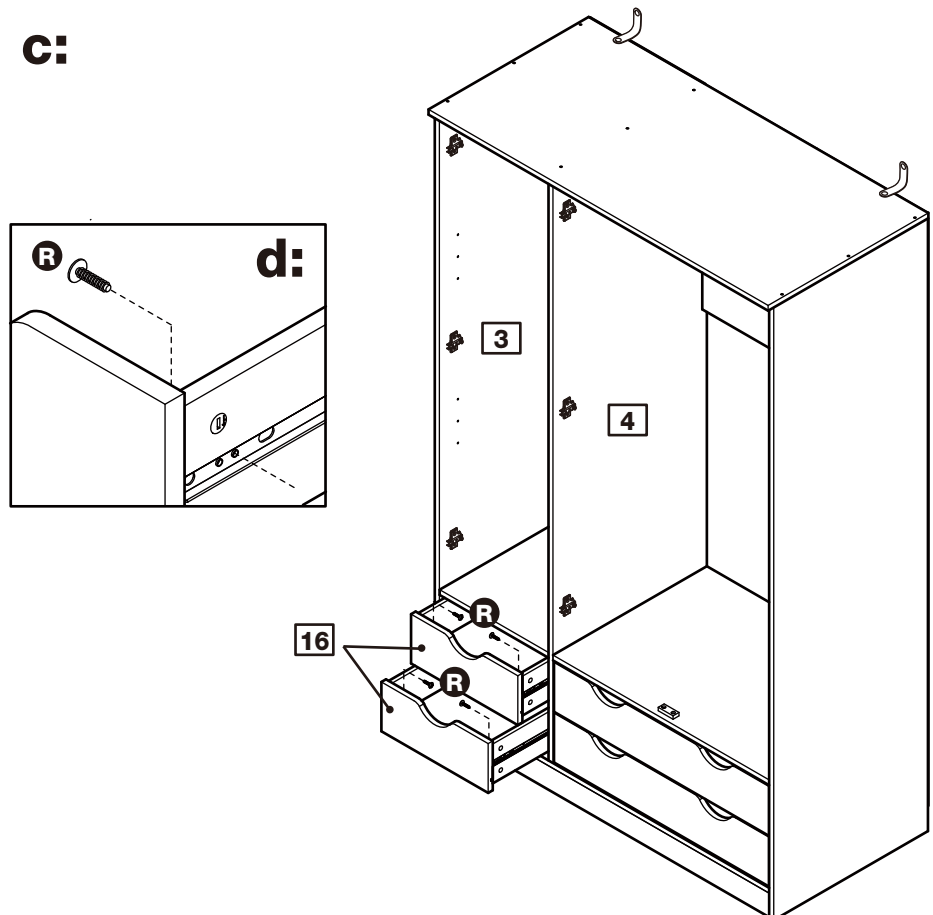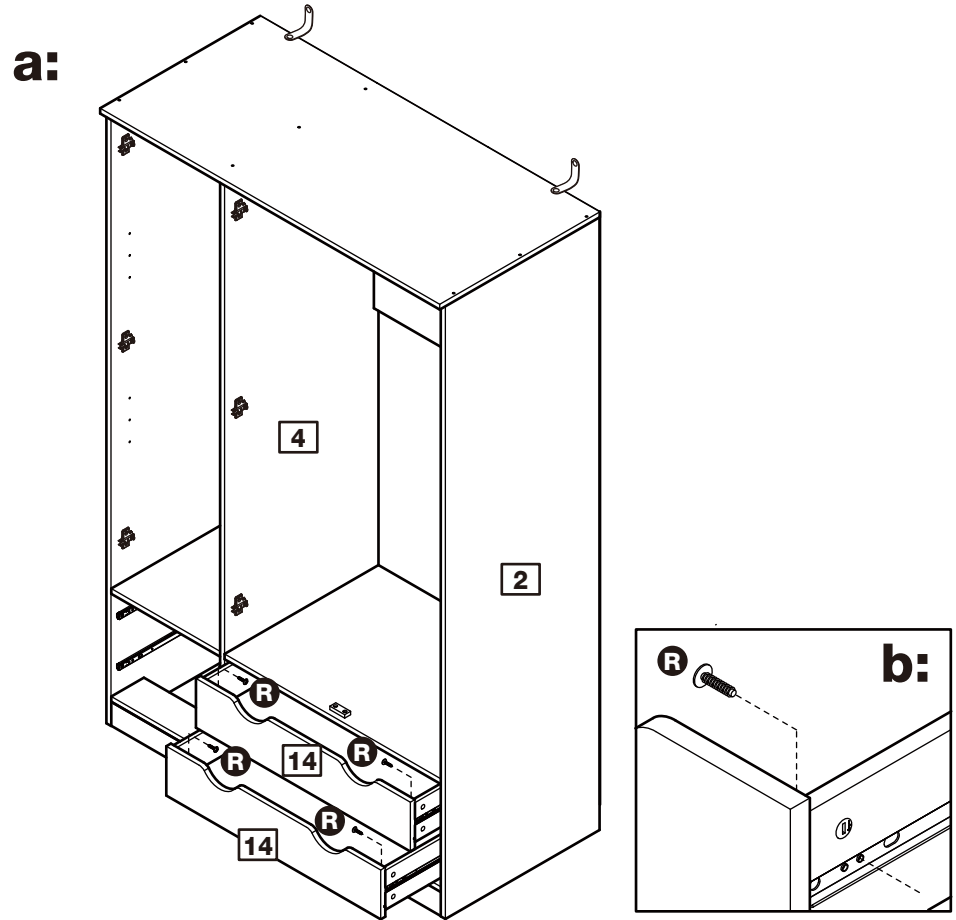**c:** Slide the drawers fully onto the runners so the runners butt up against the back of the drawer front.

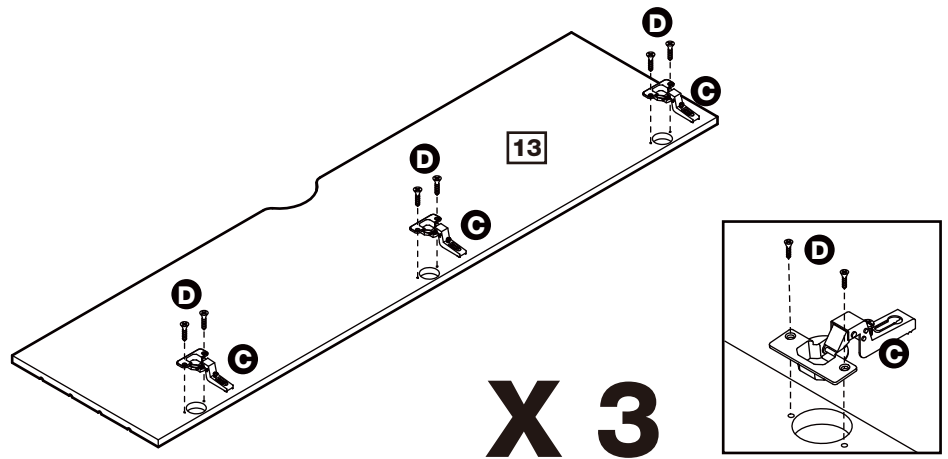**d:** Fix through drawer sides into the runners using Screws **R**.

a:

b:

c:

d:

Assembly Instructions

Step 18

Attaching hinges to doors

Fix 3 Door hinges **C** onto the Doors **13** using Screws **D** .

X 3

Step 19

Hanging doors

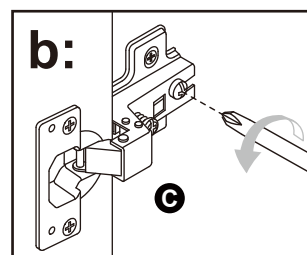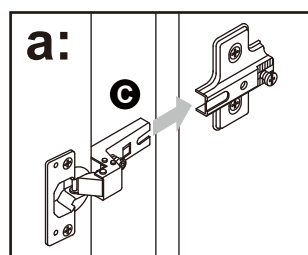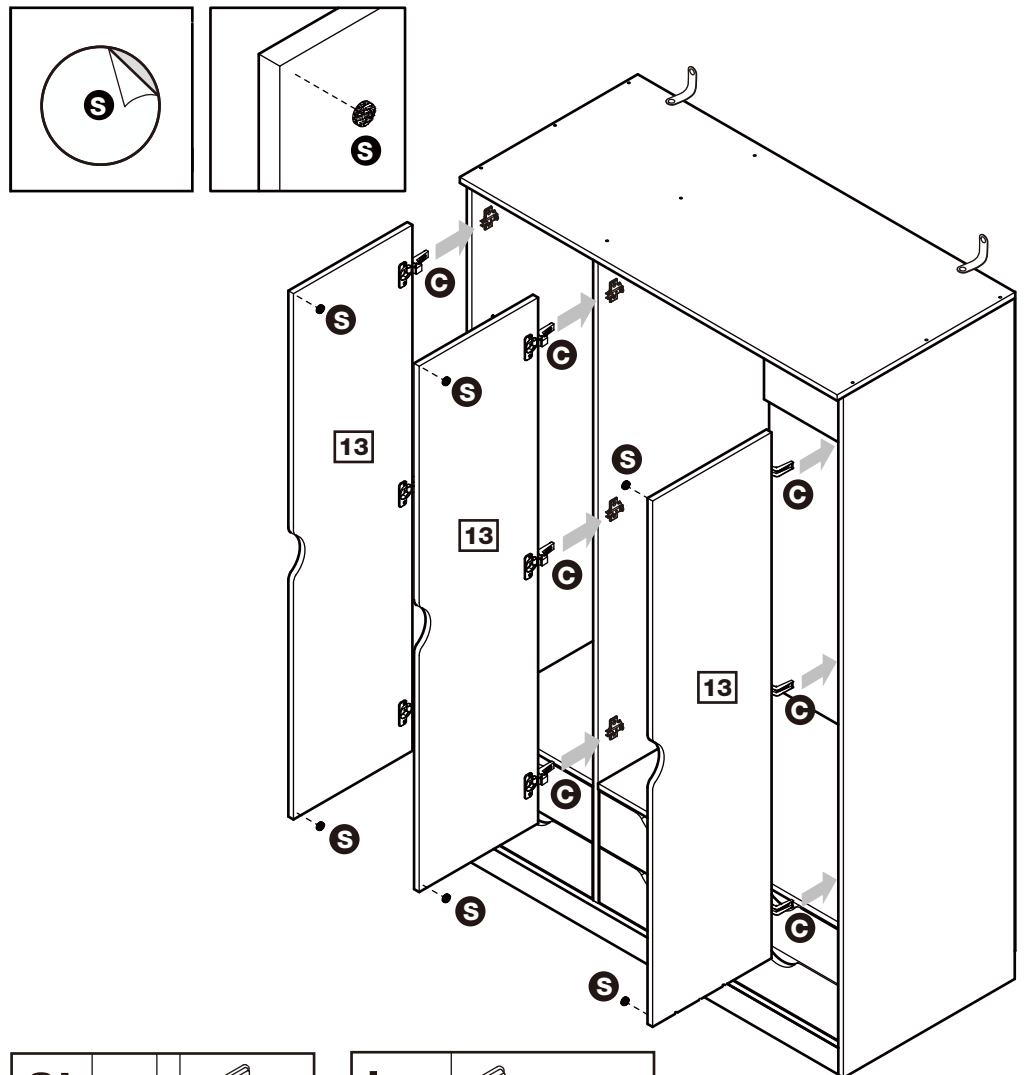**a:** With help, slot Door hinges **C** onto 'hinge plates'.

b: Tighten screw shown to lock hinges in position.

Repeat **a** and **b** for opposite door.

See '**Hinge adjustment**' in step 20 if the doors need adjusting.

Tear off the protective backing from the Door pads **S** .
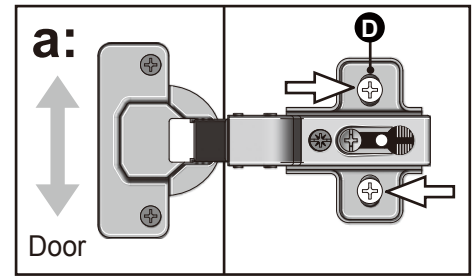
Stick the Door pads **S** onto the Doors **13** .
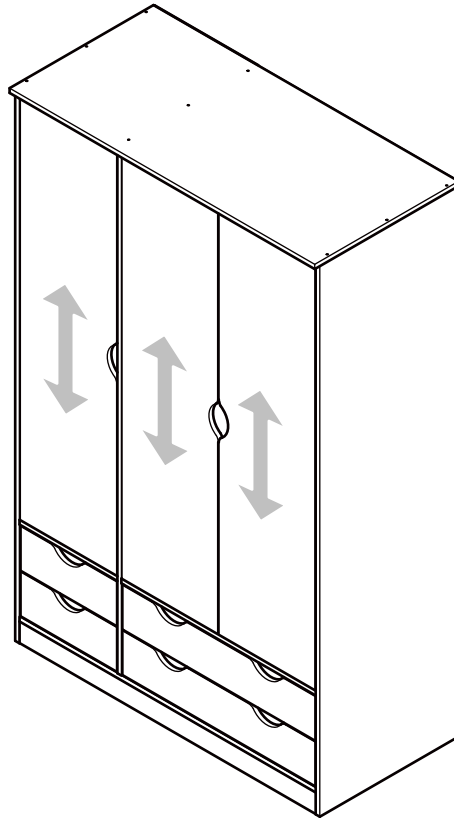
a:

b:

Assembly Instructions

Hinge adjustment

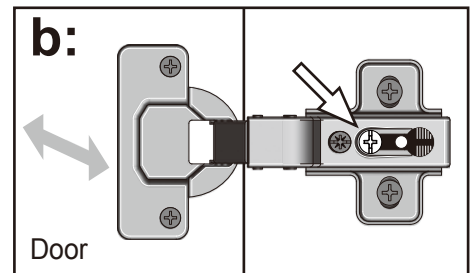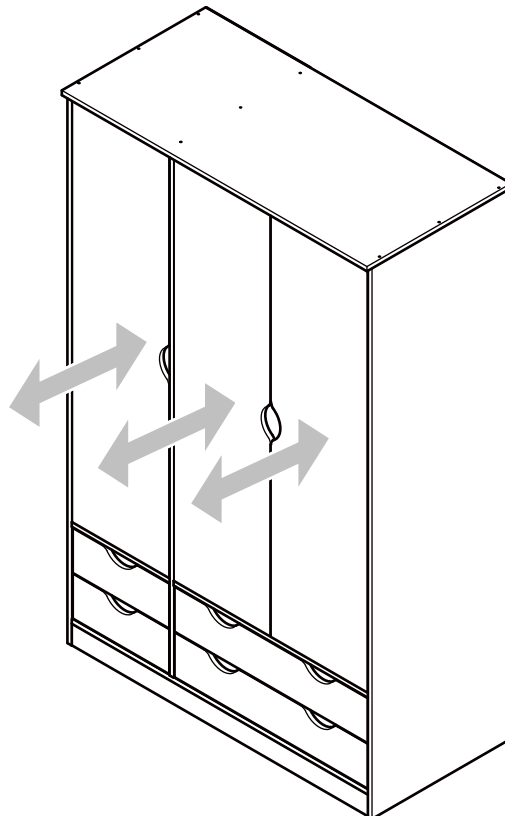**a:** To move doors up or down: loosen screws shown and move doors to suit.

Once doors are aligned, re-tighten Screws **D**.

a:
Door

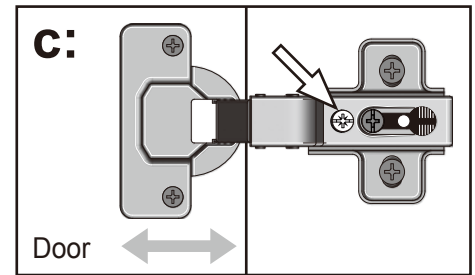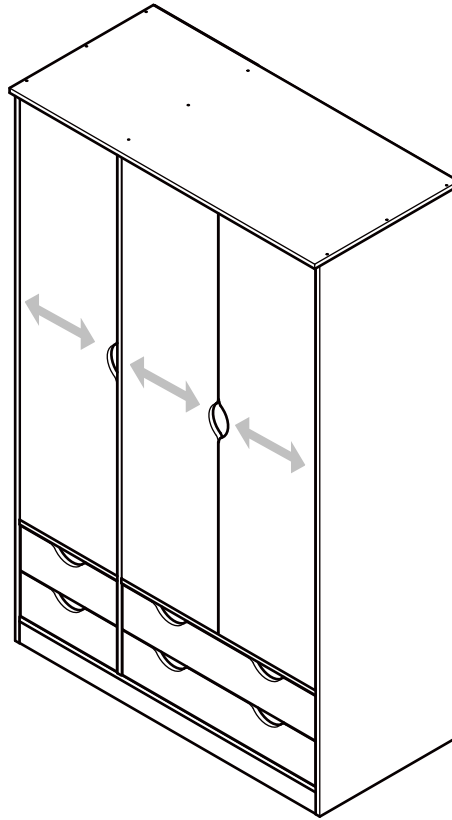**b:** To move doors in or out: loosen screw shown and move doors to suit.

Re-tighten screws.

b:
Door

Assembly Instructions

c: To move doors left or right: loosen screw shown and move doors to suit.

Re-tighten screws.

C:
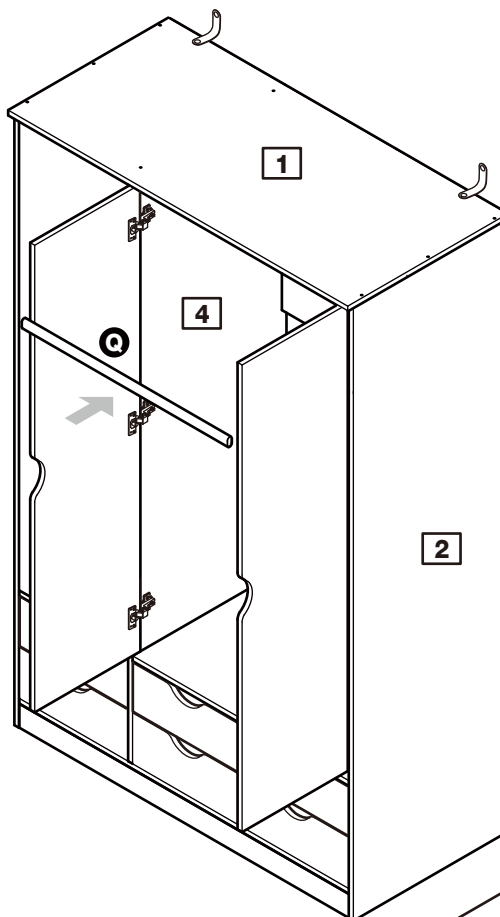
Door

Assembly Instructions

Step 21

Attaching the shelves

a: Place Clothes rail **Q** onto Rail supports **E** .

a:

b: Insert Shelf supports **U** into the unit. Ensure they are wall fitted before inserting the Shelves.

Note: Set the shelf supports to the desired height.

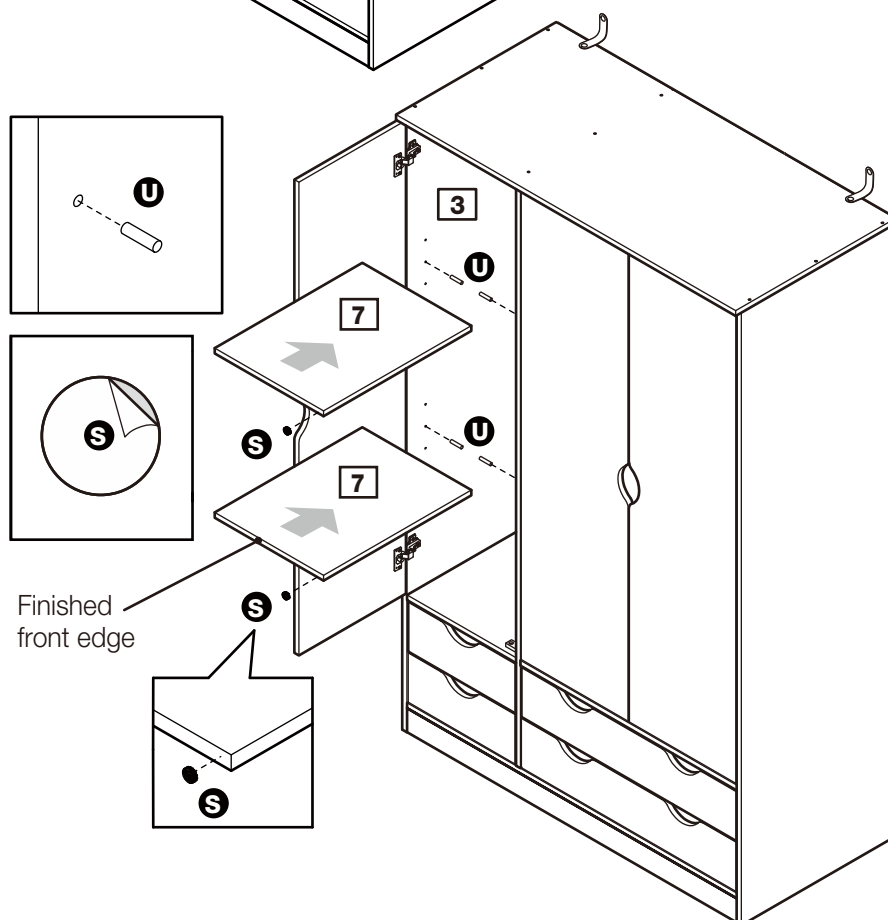Slide the Shelves **7** onto the unit.

Tear off the protective backing from the Door pads **S** .

Stick the Door pads **S** onto the front edge of Shelves **7** .

Note: Before use allow the glue to dry for 24 hours and make sure the unit is secure.

Assembly is complete.

b:

Finished front edge

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 6400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:

- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

⚠ Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: ⚠ Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.

4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.
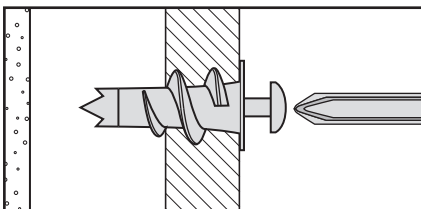
Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.
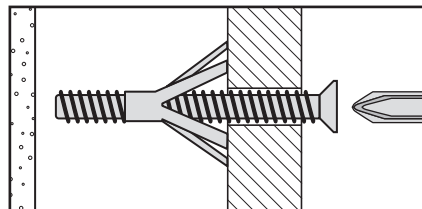
No.1 "General Purpose" wall plug
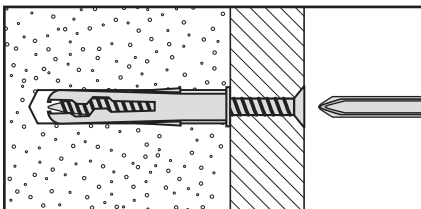
Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.
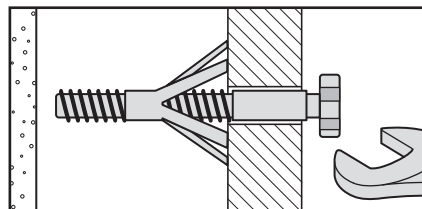
No.2 "Plasterboard" wall plug

For use when attaching light loads on to plasterboard partitions.

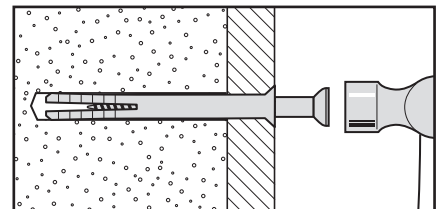### No.3 "Cavity Fixing" wall plug

For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads
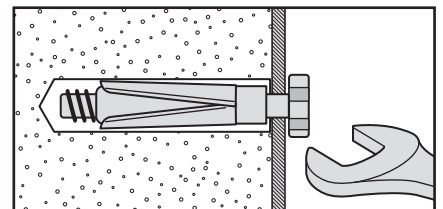
For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

⚠ Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Revision 2 - 7/10/09