
Retro Pedestal - Tall Unit

Assembly Instructions - Please keep for future reference

309/1951

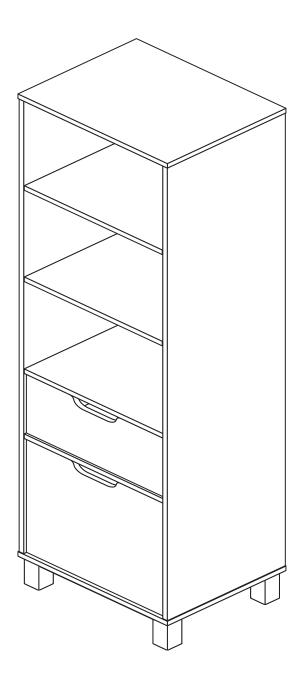

Dimensions

Width - 49.5cm

Depth - 39.5cm

Height - 152cm



Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- *Warning:* This unit weighs approximately 30kgs. Please lift with care.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

- Safety note: It is recommended that this unit is secured to a wall using the overbalance kit supplied.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the panels listed below

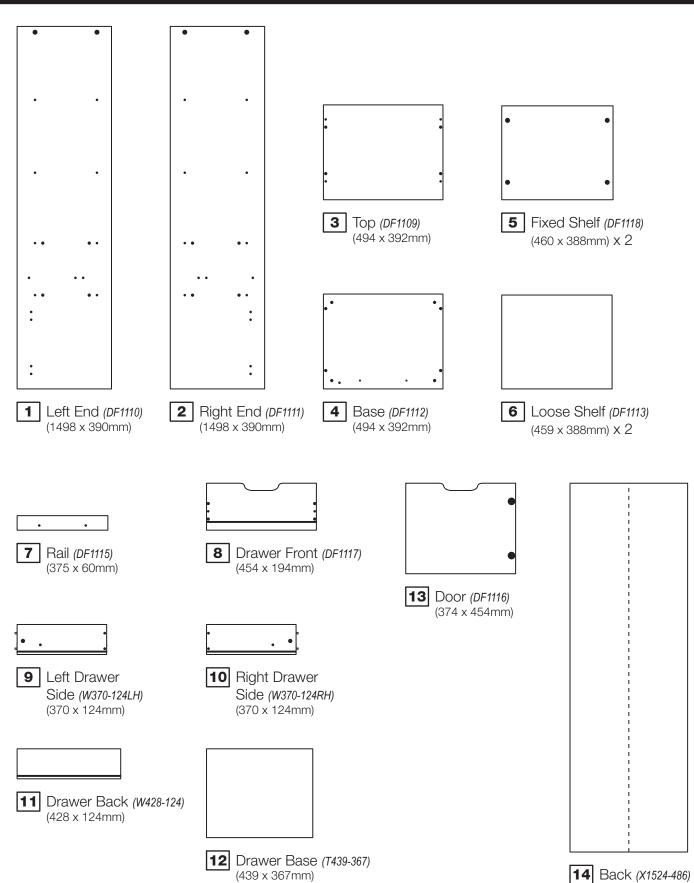




(1524 x 486mm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** quoting the reference numbers below

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

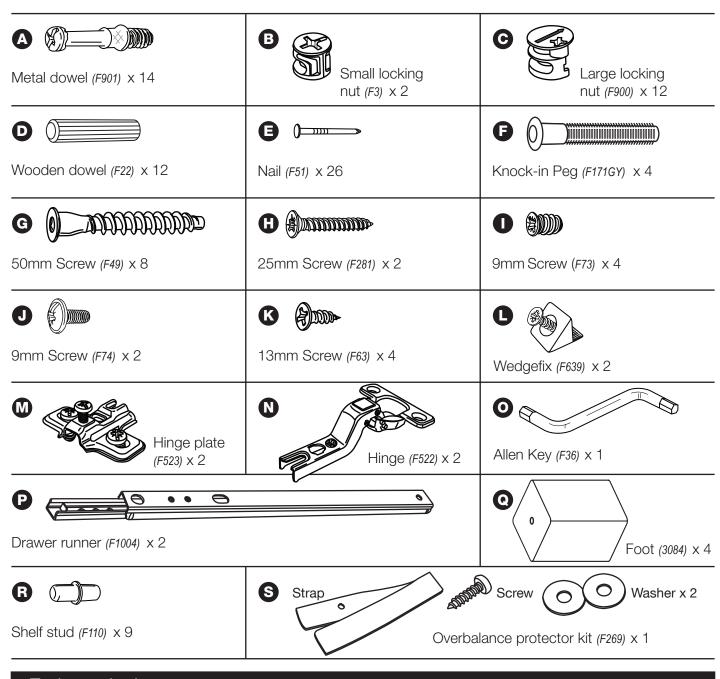

Tools required

Rule Cross-head Scissors Hammer Eye protection Electric drill screwdriver (when using a (do not use for hammer or drill) fitting screws)

Ruler - Use this ruler to help correctly identify the screws mm 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170

If you have damaged or missing components, call the Assembly Instructions Customer Helpline: 08456 400800 quoting the reference numbers below


Step 1

Prepare the drawer front

Screw 2 metal dowels A into the drawer front 8.

Note: Tighten the metal dowels up fully against the panels.



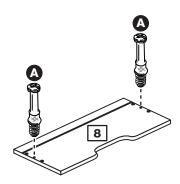



Step 2


Prepare the drawer sides

Insert a small locking nut **B** into the hole shown on the left drawer side 9 and the right drawer side 10.

Note: The arrow on the locking nut must point towards the hole in the edge of the panel.

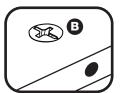

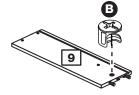

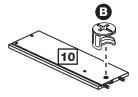


Step 3


Attach the drawer sides to the drawer front

Push the left drawer sides 9 and right drawer sides 10 onto the back of the drawer fronts 8.

Turn the small locking nuts **B** on the left drawer side 9 and right drawer side 10.

Note: Turn the locking nuts B clockwise to secure panels - more than 1/2 a turn.

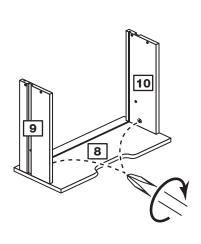


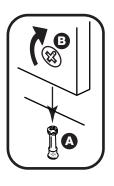

Step 4

Fit the drawer base

Slide the drawer base 12 down the grooves in the drawer sides 9 and 10 and down into the groove in the drawer front 8.

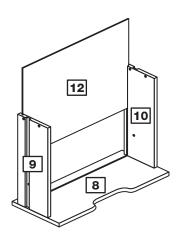


Step 5

Fit the drawer back

Fit the drawer back 11 between the drawer sides 9 and 10.

Make sure that the drawer base 12 fits into the groove in the drawer back 11.


Hold the drawer back 11 in position and tap the knock-in pegs (5) through the holes in the drawer sides (9) and (10).

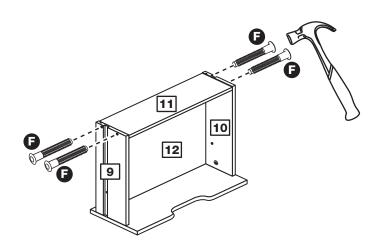

Step 6

Fit the wedgefixes

Turn the drawer assembly over and slide 2 wedgefixes into the front and back grooves, as shown, and tighten up the screws.

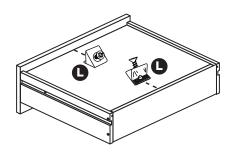



Step 7

Prepare the left side

a: Tap 2 wooden dowels **D** into the left side **1**.

Note: Wooden dowels must not stick out from the edge by more than 10mm or they may damage other panels.

Place a runner P on the left side 1 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw 1.


b: Slide the runner P back the other way and fit the 2nd screw into the corresponding hole in the left side 1.

Insert 2 large locking nuts **©** into the left side **1**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

C: Screw 4 metal dowels A into the left side 1.

Fit 2 hinge plates **M** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

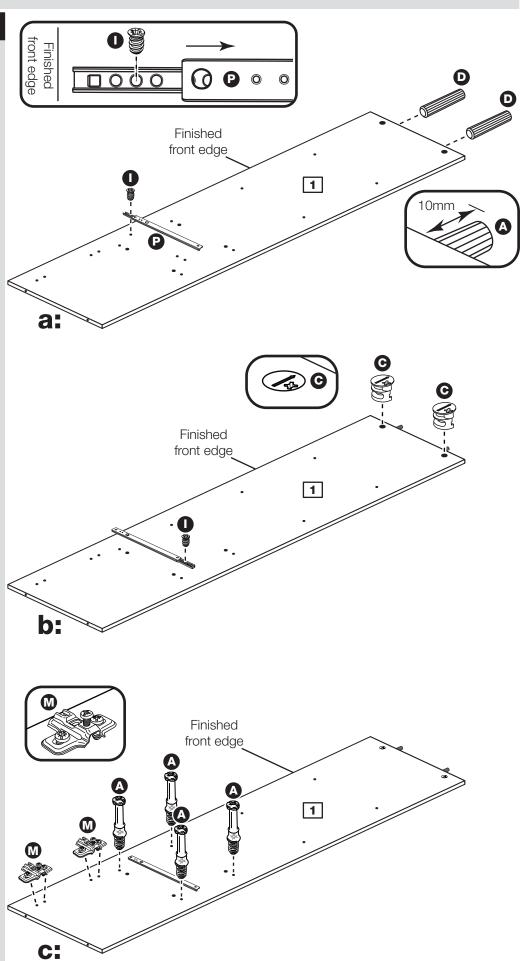

Step 8

Prepare the right side


a: Tap 2 wooden dowels **D** into the right side **2**.

Place a runner P on the right side 2 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw 1.

b: Slide the runner P back the other way and fit the 2nd screw into the corresponding hole in the right side 2.

Insert 2 large locking nuts **©** into the right side **2**.

C: Screw 4 metal dowels **A** into the right side **2**.

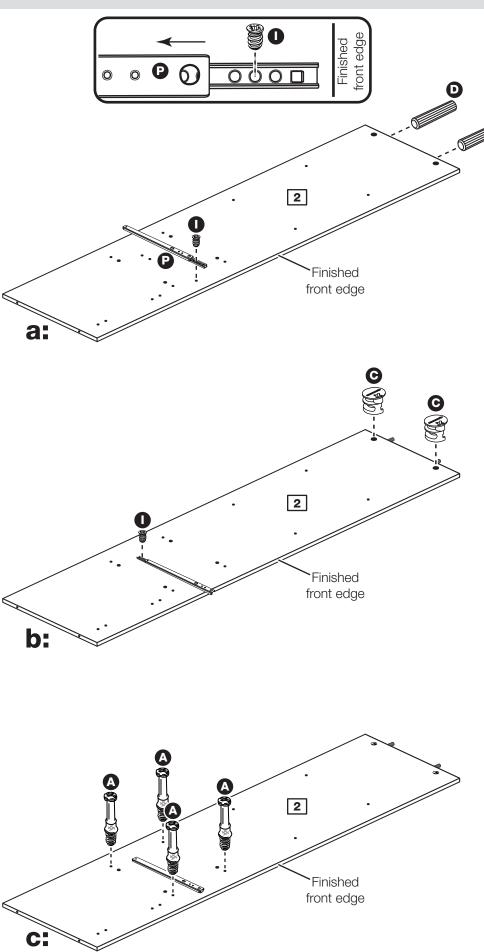


Step 9

Prepare the 2 fixed shelves

Tap 4 wooden dowels **A** into each of the 2 fixed shelves **5**.

Insert 4 large locking nuts **©** into each of the 2 fixed shelves **5**.

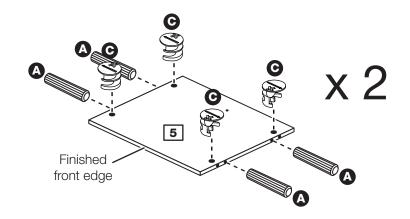


Step 10

Fit a fixed shelf to the right side

Push a fixed shelf 5 onto the right side 2.

Use a screwdriver to tighten the 2 large locking nuts • fitted to the fixed shelf • 5.

Note: Turn the large locking nuts **©** as far as they will go - more than 1/2 a turn.

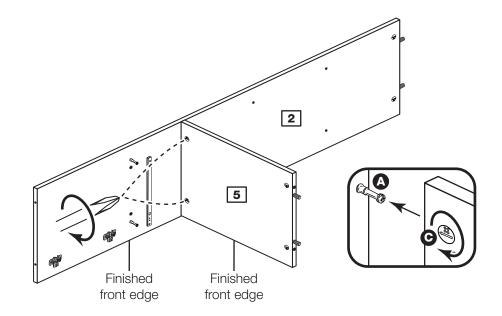


Step 11

Fit the other fixed shelf

Push a fixed shelf 5 onto the right side 2.

Use a screwdriver to tighten the 2 large locking nuts **©** fitted to the fixed shelf **5**.

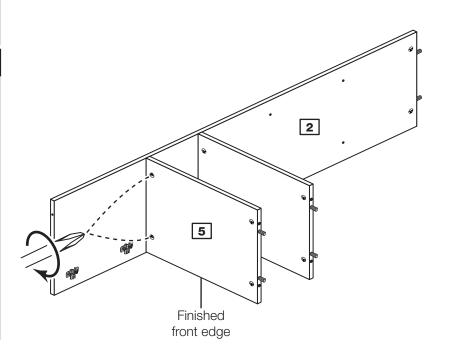


Step 12

Fit the left side

Push the left side 1 onto the fixed shelves 5.

Use a screwdriver to tighten the 2 large locking nuts **©** fitted to each of the fixed shelves **5**.

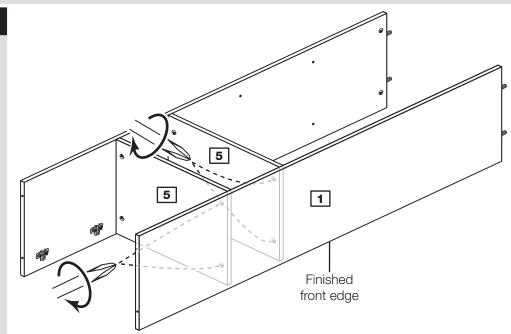



Step 13

Fit the base

Attach the base 4 to the left side 1 and the right side 2 using 4 screws 6 and tighten them using the allen key 0.



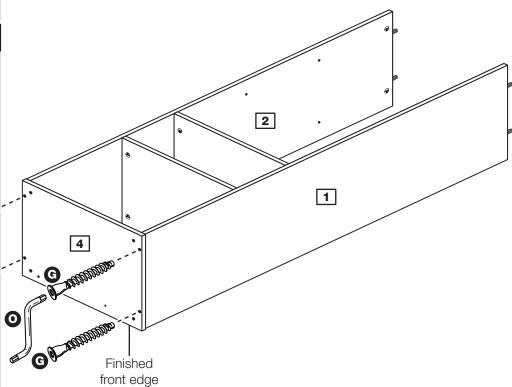

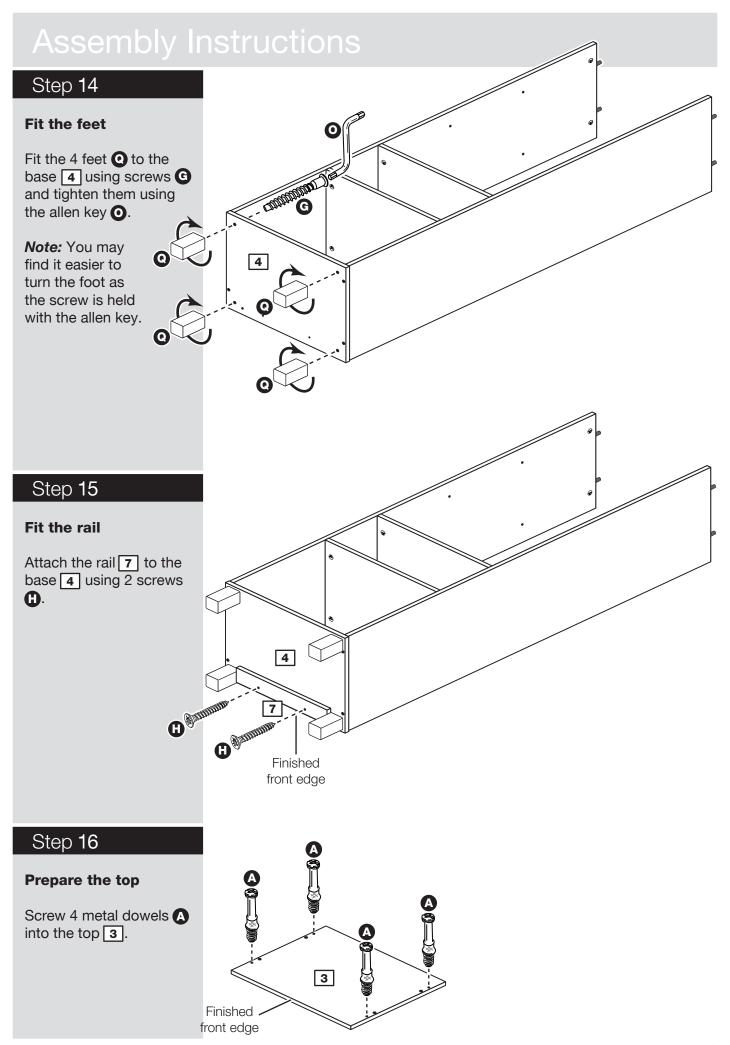


Step 17

Fit the top

Push the top 3 onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts **©** fitted the left side **1** and the right side **2**.

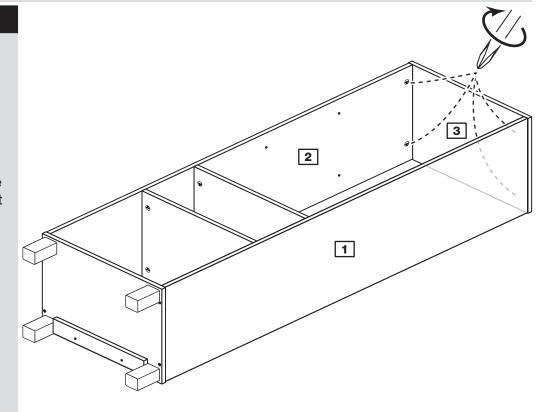

Step 18

Fit the back

a: Square up the unit by making sure that measurement **x** to **x** equals **y** to **y**.

b: Place the back 14 onto the unit.

Nail **around the** outside edges of the back **14**.


Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.



Warning: The unit is heavy. Lift with care.

The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

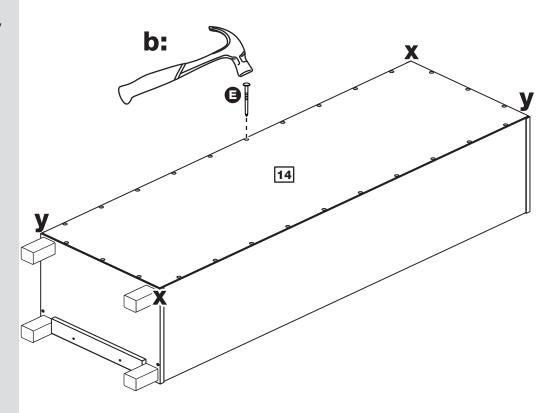

Step 19

Fit the loose shelves and the drawer


For each of the 2 loose shelves 6 insert 4 shelf studs **(R)**, as shown.

Lower the 2 loose shelves 6 down onto the shelf studs **R**.

Slide both the runners P forward and locate the drawer sides 9 and 10 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners P.

Working from the inside of the drawer, insert 2 screws • through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws **①**. If they catch on the runner you may need to loosen them slightly.

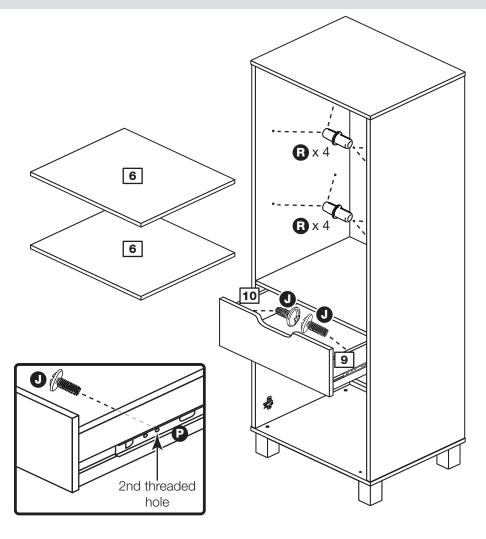


Step 20

Prepare the door

Push fit 2 hinges (1) into door 13.

Secure each hinge with 2 screws **(K)**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

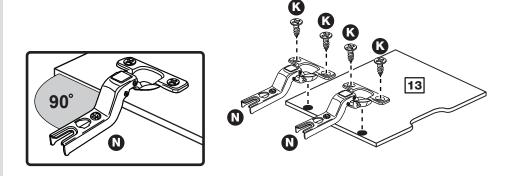

Step 21

Fit the door and door stop

Note: The easiest way to attach the door 13 is to fit the top hinge first, then align and fit the other hinge.


onto the front part of the hinge plate M.
The recess at the bottom of screw B goes into the slot in the hinge plate.


b: Keep the hinge N FLAT against the hinge plate M as you slide it across as far as it will go. Tighten screw A.

C: The hinge **N** must be flat against the hinge plate **M** prior to any adjustment.

d: The hinge N must NOT be AT AN ANGLE to the hinge plate M when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Push the remaining shelf stud **()** down into the hole in the base **(4)** to act as a door stop.

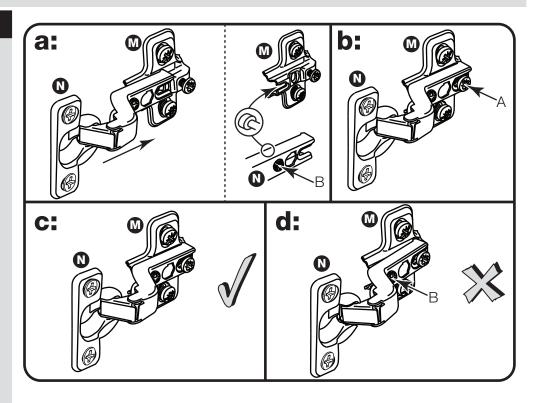

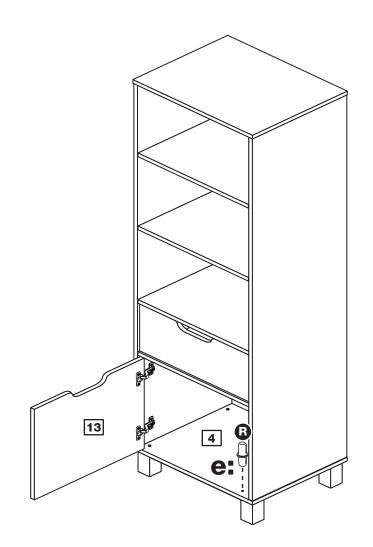

Step 22

Adjust the door if needed

a: Before adjusting the door, use a spirit level to check the top (or base) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

C: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

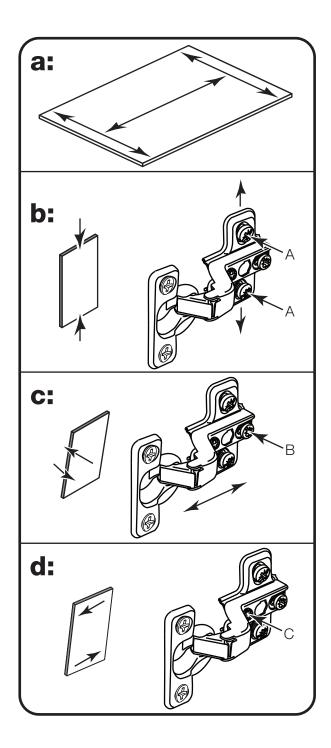

Step 23


Fit the overbalance protector


To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by use of the overbalance protector kit fitted to the unit or, an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

Assembly is complete

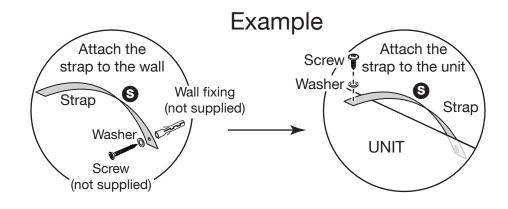

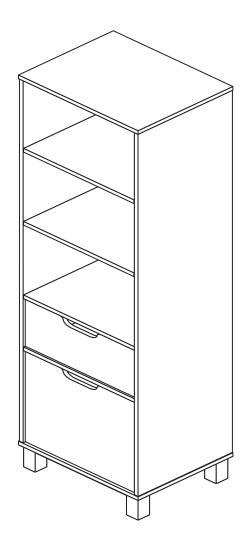

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800** and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

15 ALR3118